


(1) Press a **608 Bearing** into **YMountL**




(2) Press a 12x175mm Linear Shaft into YMountL

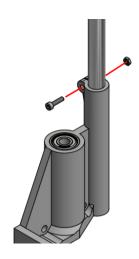


(3) Lock the 12x175mm


Linear Shaft in place by tightening a M3x12 SHCS through the cross-pin location to an M3 Hex Nut in the opposing recess (using a 2.5mm Driver)

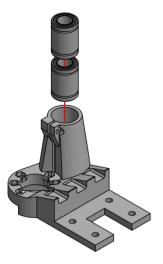


(4) Press Qty. 2 LM12UU Linear Bearings into TableMountL

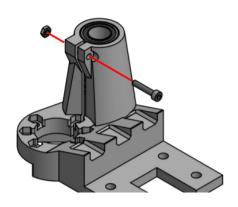

(5) Lock the LM12UU in place by tightening an M3x15 SHCS through the crosspin location to an M3 Hex Nut in the opposing recess (using a 2.5mm driver)

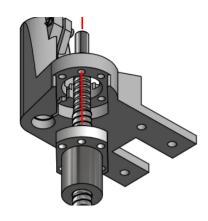


(6) Press a **SFU1204-150mm** into **TableMountL** from the underside

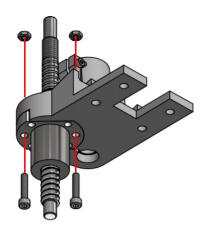


(7) Secure the SFU1204150mm in place tightening
Qty. 2 M4x20 SHCS
through the bushing and
mount to Qty. 2 M4 Hex
Nut in the opposing
recesses (using a 3mm
driver)
(Optionally you may install


(<u>Optionally</u> you may install Qty. 6 of each fastener at the provided points to ensure additional strength and rigidity)

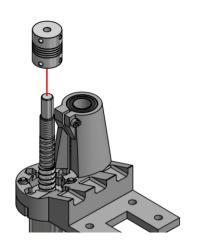

(8) Loosely place a 5x8mm Shaft Coupling on the upper end of the SFU1204-150mm. Do not tighten.

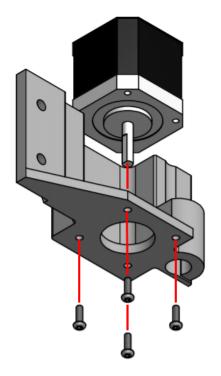

(9) Fasten a NEMA17
Stepper Motor to
MotorMountL using Qty. 4
M3x10 BHCS (using a
2mm driver)

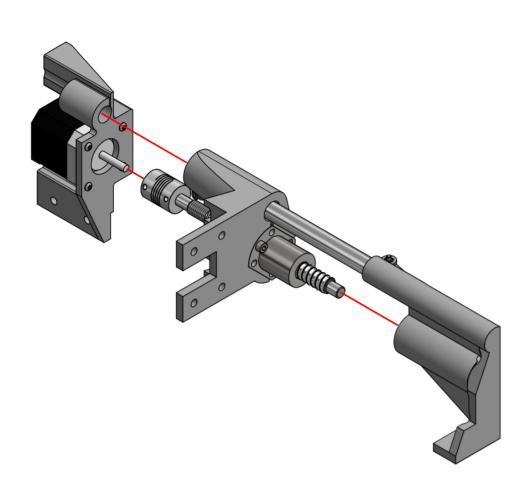



Attach the three subassemblies together by guiding the 12x175mm Linear Shaft through the bearings mounted in TableMountL and into the shaft retention on MotorMountL. As you are fitting the parts together, make sure that the the idle end of the SFU1204-**150mm** fits the **608** Bearing installed in YMountL and the 5x8mm Shaft Coupling on the driven end fits the **NEMA17 Stepper Motor's** shaft. Leave all parts loose enough to be adjusted when they are fit to the frame and set aside.