

Instruction Set Architecture V1.0

### **Summary**

The EC16 is a microprocessor core written in VHDL with the following features

- 64K \* 16-bit external memory space for code, data and I/O
- 256 \* 16-bit internal ram for registers, pointers, stack and scratchpad
- 50 instructions
  - o instruction length: 46x one word, 4x two words
  - o speed: 18 one-cycle, 15 two-cycle, 9 three-cycle, 8 one/two-cycle (branch)
- 4 maskable prioritized interrupts

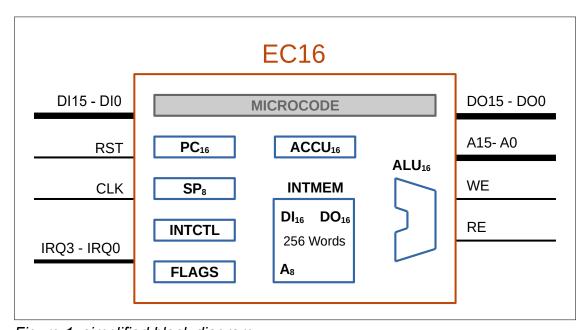


Figure 1: simplified block diagram

### **Memory Model**

The EC16 has two completely separate memory spaces, the external memory space (EXTMEM) and a small but faster accessible internal memory (INTMEM).

While the EXTMEM space can be populated as required with ram, rom and I/O devices, the INTMEM space is always fully populated with an EBRam organized as 256 x 16 bit.

The INTMEM cells can be used as registers, pointers to INTMEM or EXTMEM locations, scratchpad ram or stack space. The stack pointer is a separate register that is initialized to 0xFF at reset and grows towards 0x00. The usual caution has to be exercised to avoid a conflict between the growing stack and the other variables.

Internal Memory (INTMEM) 256 x 16 bit								
Registers 0xFF Stackpointer								
Pointers	Û							
Sratchpad 0x00								

External Memory (EXTMEM) 64K x 16 bit						
0xFFFF Code, Data, I/O						
0x0020	IRQ3					
0x0018	IRQ2					
0x0010	IRQ1					
0x0008	IRQ0					
0x0000	Reset					

The EXTMEM must be populated with at least a small amount of ROM (pre-initialized RAM) beginning at address 0 since the reset and interrupt vectors are located there. The rest of the address space can be used as required.

The EC16 has a reduced instruction set architecture that is strongly focussed on the use of the faster INTMEM. Each of the 256 INTMEM locations can be used as a register or a pointer and its 8-bit address is encoded in the lower half of the opcode which speeds up fetch- and execution time. Read and write access to the EXTMEM space is handled by

only two instructions (MOVXI A INTMEM / MOVXI INTMEM A), both of which use an INTMEM cell to provide the address (indirect addressing via pointer). Nevertheless block operations can be very efficiently implemented with only three registers (source, destination and counter), in combination with the INC/DEC- and branch instructions.

### **Interrupts**

The EC16 has four interrupt inputs: IRQ0 – IRQ3. IRQ0 has the highest, IRQ3 the lowest priority. All four interrupts are triggered by a rising edge. Prioritization and execution are handled via the INTCTL block. This block contains i.a. three registers: IRR (Interrupt Request Register), IMASK and IIP (Interrupt In Progress).

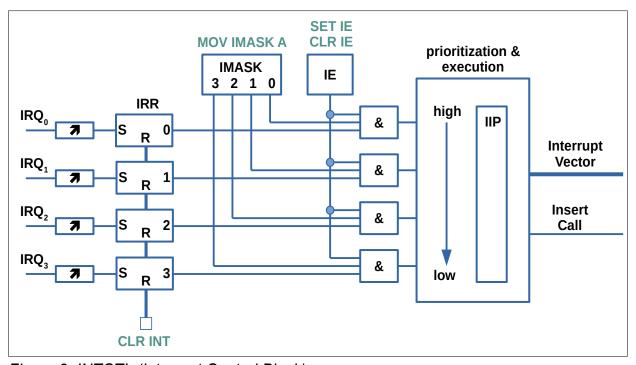


Figure 2: INTCTL (Interrupt Control Block)

A rising edge on IRQ<sub>n</sub> is always registered in IRR<sub>n</sub> regardless of the state of IMASK<sub>n</sub> and IE. If, however, the rising edge occurs in the same clock cycle as a CLR INT instruction (which resets all IRR flags at once), the clear instruction takes precedence.

IMASK<sub>n</sub> enables (1) or disables (0) IRQ<sub>n</sub>. IMASK can be written with a MOV IMASK A instruction, which transfers the four least significant bits of the AKKU to IMASK<sub>3-0</sub>.

The flag IE enables (1) or disables (0) all interrupts simultaneously. IE can be set/reset with the SET IE, CLR IE and the MOV FLAGS A instructions.

Unless it is cleared by a CLR INT instruction, the IRR $_n$  flag remains set until its interrupt is executed. Interrupt execution happens as soon as IRR $_n$ , IMASK $_n$  and IE are all set and no interrupt with higher priority is in progress.

The current instruction is finished, IRR<sub>n</sub> is cleared and IIP<sub>n</sub> is set instead, blocking all lower level interrupts. Then the address of the next instruction is pushed onto the stack and a call to the corresponding interrupt vector is executed. IIP<sub>n</sub> stays set until the interrupt service routine is finished with a RETI instruction. RETI clears IIP<sub>n</sub>, pops the return address from the stack and resumes executing from where it left of.

Notice that as soon as  $IRR_n$  is cleared, it will register the next rising edge on  $IRQ_n$ , even if the current ISR (Interrupt Service Routine) is still in progress.

Notice furthermore that at least one instruction of the interrupted program context is executed before the next interrupt is taken.

An IRQ with higher priority will interrupt the current ISR. This can be avoided if necessary by temporarily clearing the IE flag. Typical examples are atomic operations like a read-modify-write access to a peripheral or the handling of semaphores. Only the crucial instructions should be framed by a pair of CLR IE and SET IE.

Each interrupt level needs one word of stack space for the return address. No variables, registers or flags are saved automatically. It is up to the user to take care of it.

#### **Instruction Set**

The EC16 opcodes consist of three fields



■ Bit 15:14 - CYC1:0 : number of clock cycles

CYC1:0	Number of clock cycles
00	1
01	2
10	3
11	2/1 (branch/no branch)

- Bit 13:8 INST5:0 : instruction index
- Bit 7:0 IA7:0 : depending on instruction :
  - <u>INTMEM address</u> (8 bit unsigned)
  - Branch offset (8 bit signed)
  - 0 if none of the above applies

Only the instructions **JMPD U16**, **CALLD U16**, **LOAD A U16** and **LOAD INTMEM U16** are two-word instructions, i.e. the opcode is followed by a 16 bit constant. In case of JMPD and CALLD this is the target address, in case of LOAD the value is loaded into the Accu respectively the INTMEM cell.

Instructions sorted by Function							
Mnemonic	OPCode	Cycles	Words				
MITERIORIC	Orcode	Cycles	Arith	metic			
ADD A INTMEM	43u8	2	1	A ← A + INTMEM			
ADDC A INTMEM	41u8	2	<u>'</u> 1	A ← A + INTMEM + CARRY			
CMP A INTMEM	44u8	2	1	Compare A and INTMEM			
DEC INTMEM	46u8	2	1	Decrement INTMEM			
INC INTMEM	47u8	2	<u></u>	Increment INTMEM			
SUB A INTMEM	42u8	2	1	A ← A - INTMEM			
SUBB A INTMEM	40u8	2	<u>'</u> 1	A ← A - INTMEM - CARRY			
SODD A INTIVILIVI	4000		•				
AND A INTMEM	4Cu8	2	1	A ← A AND INTMEM			
NOT A	2F00	1	1	A ← ~A			
OR A INTMEM	4Du8	2	1	A ← A OR INTMEM			
ROL A	2800	1	<u>'</u> 1	$C \leftarrow A(15 \leftarrow 14 \leftarrow \dots \leftarrow 2 \leftarrow 1 \leftarrow 0) \leftarrow C$			
ROR A	2900	1	1	$C \rightarrow A(15 \rightarrow 14 \rightarrow \dots \rightarrow 2 \rightarrow 1 \rightarrow 0) \rightarrow C$			
SHL A	2A00	1	<u>'</u> 1	$C \leftarrow A(15 \leftarrow 14 \leftarrow \dots \leftarrow 2 \leftarrow 1 \leftarrow 0) \leftarrow 0'$			
SHR A	2B00	1	1	$0 \leftarrow A(15 \leftarrow 14 \leftarrow \dots \leftarrow 2 \leftarrow 1 \leftarrow 0) \leftarrow 0$ $0 \rightarrow A(15 \rightarrow 14 \rightarrow \dots \rightarrow 2 \rightarrow 1 \rightarrow 0) \rightarrow C$			
SWAP A	2500	1	1	$A \leftarrow A(158)  A(70)$			
XOR A INTMEM	4Eu8	2	<u>'</u> 1	A ← A XOR INTMEM			
AONA INTIVILIVI	4Lu0			nipulation			
CLR C	1000	1	1 lag ivial 1	Clear CARRY flag			
CLR IE	0200	1	<u>'</u> 1	Clear Interrupt Enable flag			
CLR INT	0400	1	<u>'</u> 1	Clear all pending interrupts			
SET C	1100	1	1	Set CARRY flag			
SET IE	0300	1	1	Set Interrupt Enable flag			
OLI IL	0000			low Control			
BRCC S8	C0s8	2/1	1 1	Branch if CARRY flag is '0'			
BRCS S8	C4s8	2/1	1	Branch if CARRY flag is '1'			
BRNC S8	C2s8	2/1	<u>'</u> 1	Branch if NEG flag is '0'			
BRNS S8	C6s8	2/1	<u>'</u> 1	Branch if NEG flag is '1'			
BROC S8	C1s8	2/1	1	Branch if OV flag is '0'			
BROS S8	C5s8	2/1	1	Branch if OV flag is '1'			
BRZC S8	C3s8	2/1	1	Branch if ZERO flag is '0'			
BRZS S8	C7s8	2/1	1	Branch if ZERO flag is '0'			
CALLD U16	A100	3	2	Call subroutine, Direct 16-bit EXTMEM address			
CALLI INTMEM	A3u8	3	1	Call subroutine, Indirect via pointer in INTMEM			
JMPD U16	A000	3	2	Jump to Direct 16-bit EXTMEM address			
JMPI INTMEM	A2u8	3	<u>Z</u>	Jump Indirect via pointer in INTMEM			
RETI	8500	3	<u>1</u> 1	Return from Interrupt			
RETS	8400	3	<u></u>	Return from Subroutine			
INL 13	0400	J	-				
LOAD A LI16	6000	2		ansport			
LOAD A U16	6000	2	2	Load 16-bit value into A			
LOAD INTMEM U16	61u8	2	2	Load 16-bit value into INTMEM			

			1				
MOV A INTMEM	50u8	2	1	Move INTMEM to A			
MOV A STATUS	1400	1	1	Move SP, IE and Flags to A			
MOV FLAGS A	1200	1	1	Move A to Flags			
MOV IMASK A	0500	1	1	Move A to Interrupt Mask			
MOV INTMEM A	16u8	1	1	Move A to INTMEM			
MOV SP A	1300	1	1	Move A to SP			
MOVI A INTMEM	80u8	3	1	Move Indirect INTMEM to A. (See below)			
MOVI INTMEM A	52u8	2	1	Move A to Indirect INTMEM. (See below)			
MOVXI A INTMEM	83u8	3	1	Move EXTMEM (via pointer in INTMEM) to A			
MOVXI INTMEM A	82u8	3	1	Move A (via pointer in INTMEM) to EXTMEM			
POP A	5100	2	1	Pop value from Stack to A			
PUSH A	1500	1	1	Push value in A to Stack			
			Miscell	aneous			
NOP	0000	1	1	No operation			

Instructions sorted by Mnemonic								
Mnemonic	OPCode	Cycles	Words	Action				
ADD A INTMEM	43u8	2	1	A ← A + INTMEM				
ADDC A INTMEM	41u8	2	1	A ← A + INTMEM + CARRY				
AND A INTMEM	4Cu8	2	1	A ← A AND INTMEM				
BRCC S8	C0s8	2/1	1	Branch if CARRY flag is '0'				
BRCS S8	C4s8	2/1	1	Branch if CARRY flag is '1'				
BRNC S8	C2s8	2/1	1	Branch if NEG flag is '0'				
BRNS S8	C6s8	2/1	1	Branch if NEG flag is '1'				
BROC S8	C1s8	2/1	1	Branch if OV flag is '0'				
BROS S8	C5s8	2/1	1	Branch if OV flag is '1'				
BRZC S8	C3s8	2/1	1	Branch if ZERO flag is '0'				
BRZS S8	C7s8	2/1	1	Branch if ZERO flag is '0'				
CALLD U16	A100	3	2	Call subroutine, Direct 16-bit EXTMEM address				
CALLI INTMEM	A3u8	3	1	Call subroutine, Indirect via pointer in INTMEM				
CLR C	1000	1	1	Clear CARRY flag				
CLR IE	0200	1	1	Clear Interrupt Enable flag				
CLR INT	0400	1	1	Clear all pending interrupts				
CMP A INTMEM	44u8	2	1	Compare A and INTMEM				
DEC INTMEM	46u8	2	1	Decrement INTMEM				
INC INTMEM	47u8	2	1	Increment INTMEM				
JMPD U16	A000	3	2	Jump to Direct 16-bit EXTMEM address				
JMPI INTMEM	A2u8	3	1	Jump Indirect via pointer in INTMEM				
LOAD A U16	6000	2	2	Load 16-bit value into A				
LOAD INTMEM U16	61u8	2	2	Load 16-bit value into INTMEM				
MOV A INTMEM	50u8	2	1	Move INTMEM to A				
MOV A STATUS	1400	1	1	Move SP, IE and Flags to A				
MOV FLAGS A	1200	1	1	Move A to Flags				
MOV IMASK A	0500	1	1	Move A to Interrupt Mask				
MOV INTMEM A	16u8	1	1	Move A to INTMEM				
MOV SP A	1300	1	1	Move A to SP				

MOVI A INTMEM	80u8	3	1	Move Indirect INTMEM to A. (See below)
MOVI INTMEM A	52u8	2	1	Move A to Indirect INTMEM. (See below)
MOVXI A INTMEM	83u8	3	1	Move EXTMEM (via pointer in INTMEM) to A
MOVXI INTMEM A	82u8	3	1	Move A (via pointer in INTMEM) to EXTMEM
NOP	0000	1	1	No operation
NOT A	2F00	1	1	A ← ~A
OR A INTMEM	4Du8	2	1	$A \leftarrow A$ OR INTMEM
POP A	5100	2	1	Pop value from Stack to A
PUSH A	1500	1	1	Push value in A to Stack
RETI	8500	3	1	Return from Interrupt
RETS	8400	3	1	Return from Subroutine
ROL A	2800	1	1	$C \leftarrow A(15 \leftarrow 14 \leftarrow \dots \leftarrow 2 \leftarrow 1 \leftarrow 0) \leftarrow C$
ROR A	2900	1	1	$C \rightarrow A(15 \rightarrow 14 \rightarrow \rightarrow 2 \rightarrow 1 \rightarrow 0) \rightarrow C$
SET C	1100	1	1	Set CARRY flag
SET IE	0300	1	1	Set Interrupt Enable flag
SHL A	2A00	1	1	$C \leftarrow A(15 \leftarrow 14 \leftarrow \dots \leftarrow 2 \leftarrow 1 \leftarrow 0) \leftarrow '0'$
SHR A	2B00	1	1	$0' \rightarrow A(15 \rightarrow 14 \rightarrow \rightarrow 2 \rightarrow 1 \rightarrow 0) \rightarrow C$
SUB A INTMEM	42u8	2	1	$A \leftarrow A - INTMEM$
SUBB A INTMEM	40u8	2	1	A ← A - INTMEM - CARRY
SWAP A	2500	1	1	$A \leftarrow A(158) \Leftrightarrow A(70)$
XOR A INTMEM	4Eu8	2	1	$A \leftarrow A XOR INTMEM$

Instructions sorted by OPCode							
Mnemonic	OPCode	Cycles	Words				
NOP	0000	1	1	No operation			
CLR IE	0200	1	1	Clear Interrupt Enable flag			
SET IE	0300	1	1	Set Interrupt Enable flag			
CLR INT	0400	1	1	Clear all pending interrupts			
MOV IMASK A	0500	1	1	Move A to Interrupt Mask			
CLR C	1000	1	1	Clear CARRY flag			
SET C	1100	1	1	Set CARRY flag			
MOV FLAGS A	1200	1	1	Move A to Flags			
MOV SP A	1300	1	1	Move A to SP			
MOV A STATUS	1400	1	1	Move SP, IE and Flags to A			
PUSH A	1500	1	1	Push value in A to Stack			
MOV INTMEM A	16u8	1	1	Move A to INTMEM			
SWAP A	2500	1	1	$A \leftarrow A(158) \Leftrightarrow A(70)$			
ROL A	2800	1	1	$C \leftarrow A(15 \leftarrow 14 \leftarrow \dots \leftarrow 2 \leftarrow 1 \leftarrow 0) \leftarrow C$			
ROR A	2900	1	1	$C \rightarrow A(15 \rightarrow 14 \rightarrow \rightarrow 2 \rightarrow 1 \rightarrow 0) \rightarrow C$			
SHL A	2A00	1	1	$C \leftarrow A(15 \leftarrow 14 \leftarrow \dots \leftarrow 2 \leftarrow 1 \leftarrow 0) \leftarrow '0'$			
SHR A	2B00	1	1	$'0' \rightarrow A(15 \rightarrow 14 \rightarrow \rightarrow 2 \rightarrow 1 \rightarrow 0) \rightarrow C$			
NOT A	2F00	1	1	A ← ~A			
SUBB A INTMEM	40u8	2	1	A ← A - INTMEM - CARRY			
ADDC A INTMEM	41u8	2	1	A ← A + INTMEM + CARRY			
SUB A INTMEM	42u8	2	1	A ← A - INTMEM			
ADD A INTMEM	43u8	2	11	A ← A + INTMEM			

CMP A INTMEM	44u8	2	1	Compare A and INTMEM
DEC INTMEM	46u8	2	1	Decrement INTMEM
INC INTMEM	47u8	2	1	Increment INTMEM
			•	
AND A INTMEM	4Cu8	2	1	A ← A AND INTMEM
OR A INTMEM	4Du8	2	1	A ← A OR INTMEM
XOR A INTMEM	4Eu8	2	1	A ← A XOR INTMEM
MOV A INTMEM	50u8	2	1	Move A to INTMEM
POP A	5100	2	1	Pop value from Stack to A
MOVI INTMEM A	52u8	2	1	Move A to Indirect INTMEM. (See below)
LOAD A U16	6000	2	2	Load 16-bit value into A
LOAD INTMEM U16	61u8	2	2	Load 16-bit value into INTMEM
MOVI A INTMEM	80u8	3	1	Move Indirect INTMEM to A. (See below)
MOVXI INTMEM A	82u8	3	1	Move A (via pointer in INTMEM) to EXTMEM
MOVXI A INTMEM	83u8	3	1	Move EXTMEM (via pointer in INTMEM) to A
RETS	8400	3	1	Return from Subroutine
RETI	8500	3	1	Return from Interrupt
JMPD U16	A000	3	2	Jump to Direct 16-bit EXTMEM address
CALLD U16	A100	3	2	Call subroutine, Direct 16-bit EXTMEM address
JMPI INTMEM	A2u8	3	1	Jump Indirect via pointer in INTMEM
CALLI INTMEM	A3u8	3	1	Call subroutine, Indirect via pointer in INTMEM
BRCC S8	C0s8	2/1	1	Branch if CARRY flag is '0'
BROC S8	C1s8	2/1	1	Branch if OV flag is '0'
BRNC S8	C2s8	2/1	1	Branch if NEG flag is '0'
BRZC S8	C3s8	2/1	1	Branch if ZERO flag is '0'
BRCS S8	C4s8	2/1	1	Branch if CARRY flag is '1'
BROS S8	C5s8	2/1	1	Branch if OV flag is '1'
BRNS S8	C6s8	2/1	1	Branch if NEG flag is '1'
BRZS S8	C7s8	2/1	1	Branch if ZERO flag is '0'

# ADD A INTMEM OP-Code Arg Words Cycles 43u8 1 2

#### **Function:**

 $ACCU \leftarrow ACCU + INTMEM(u8);$ 

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

#### **Description:**

Add ACCU and INTMEM.

The contents of ACCU and INTMEM (addressed by the lower 8 bits of the OP-Code) are added and the result is stored into the ACCU.

The flags are affected as follows:

ZERO set when the result is zero, otherwise cleared

NEG set when d15 of result is one, otherwise cleared

OVER set when sign overflows, otherwise cleared

CARRY set when result is bigger than 16 bits, otherwise cleared

#### Remarks:

This instruction does **not** add the current CARRY to the two summands. It can be used for a 16-bit addition or to add the lowest two words in a higher precision (e.g. 64-bit) addition.

# ADDC A INTMEM

OP-Code	Arg	Words	Cycles
41 <i>u</i> 8	-	1	2

#### **Function:**

ACCU ← ACCU + INTMEM(u8) + CARRY;

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

#### **Description:**

ADD CARRY, ACCU and INTMEM.

The contents of ACCU, INTMEM (addressed by the lower 8 bits of the OP-Code) and CARRY flag are added and the result is stored into ACCU.

The flags are affected as follows:

ZERO set when the result is zero, otherwise cleared

NEG set when d15 of result is one, otherwise cleared

OVER set when sign overflows, otherwise cleared

• CARRY set when result is bigger than 16 bits, otherwise cleared

#### Remarks:

ADDC is normally used in higher precision (e.g. 64-bit) additions. At first the lowest two words are added with the ADD instruction. Then the higher words are added with the ADDC instruction, taking the carries into account.

# AND A INTMEM OP-Code Arg Words Cycles 4Cu8 1 2

#### **Function:**

ACCU ← ACCU **AND** INTMEM(u8)

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER

#### **Description:**

And ACCU and INTMEM.

The contents of ACCU and INTMEM (addressed by the lower 8 bits of the OP-Code) are ANDed bit-wise and the result is stored into the ACCU.

The flags are affected as follows:

- ZERO set when the result is zero, otherwise cleared
- NEG set when d15 of result is one, otherwise cleared
- OVER set to zero

#### Remarks:

BRxx	OP-Code	Arg	Words	Cycles
DRXX	Cxs8	-	1	2/1

#### **Function:**

Conditional branch

If condition is false then PC  $\leftarrow$  PC + 1

If condition is true then PC ← PC + s8 (branch)

#### **Description:**

Branch on (flag) clear / set.

If the condition is not met, the program simply continues with the next instruction. This takes one cycle.

If the condition is met, the offset (sign extended lower half of the OP-Code) is added to the program counter (PC). At this moment the PC is already pointing to the instruction following the branch instruction. So an offset of 0 will act as if no branch was taken. An offset of -1 will set the PC back to the branch instruction itself, thus creating an infinite loop. A branch reaches from -127 to +128 of its own address and takes two cycles.

x = branch taken

FLAG		CARRY		NEG		OVER		ZERO	
Mnemonio	c (Opcode)	0	1	0	1	0	1	0	1
BRCC	(C0s8)	х							
BRCS	(C4s8)		х						
BRNC	(C2s8)			Х					
BRNS	(C6s8)				х				
BROC	(C1s8)					х			
BROS	(C5s8)						X		
BRZC	(C3s8)							Х	
BRZS	(C7s8)								х

Remarks: none

CALLD U16	OP-Code	Arg	Words	Cycles
CALLD 016	A100	#U16	2	3

#### **Function:**

 $INTMEM(SP) \leftarrow PC$ 

PC ← #U16

Affected Flags: none

#### **Description:**

Call direct address.

The call address is the argument, i.e. the word following the opcode. First the return address, which is the address of the instruction following the argument, is pushed onto the stack. Then the PC is loaded with the call address and execution continues there.

#### Remarks:

One word of stack space must be available

CALLI INTMEM	OP-Code	Arg	Words	Cycles
CALLI INTIVICIVI	A3 <i>u</i> 8	-	1	3

#### **Function:**

INTMEM(SP) ← PC+1

 $PC \leftarrow INTMEM(u8)$ 

Affected Flags: none

#### **Description:**

Call indirect via pointer in INTMEM.

The call address is in INTMEM (which is addressed by the lower 8 bits of the OP-Code). First the return address, which is the address of the instruction following the CALL, is pushed onto the stack. Then the PC is loaded with the call address and execution continues there.

#### Remarks:

One word of stack space must be available

CLR C	OP-Code	Arg	Words	Cycles
CLRC	1000	-	1	1

#### **Function:**

 $CARRY \leftarrow 0$ 

PC ← PC + 1

Affected Flags: Carry

#### **Description:**

Clear CARRY.

The CARRY flag is set to zero. This can be used to prepare shift and rotate instructions.

#### Remarks:

CLR IE	OP-Code	Arg	Words	Cycles
CLRIE	0200	-	1	1

#### **Function:**

 $IE \leftarrow 0$ 

PC ← PC + 1

Affected Flags: IE

#### **Description:**

Clear Interrupt Enable flag.

The Interrupt Enable flag is set to zero. Interrupts already in progress will not be affected.

Pending interrupts will stay pending but will not be taken until IE is set to one.

#### Remarks:

CLR INT	OP-Code	Arg	Words	Cycles
CLRINI	0400	-	1	1

#### **Function:**

 $IRRx \leftarrow 0$ 

PC ← PC + 1

Affected Flags: none

#### **Description:**

Clear Interrupts.

All Interrupt Request Registers that hold pending interrupts are cleared to zero thus cancelling the requests.

#### Remarks:

# CMP A INTMEM

OP-Code	Arg	Words	Cycles
4A <i>u</i> 8	-	1	2

#### **Function:**

(Discarded) ← ACCU - INTMEM(u8);

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

#### **Description:**

Compare ACCU and INTMEM.

The content of INTMEM (addressed by the lower 8 bits of the OP-Code) is subtracted from the ACCU. The result is discarded (not written to the ACCU) but the flags are set like in a normal SUB instruction. The flags are affected as follows:

ZERO: set when the result is zero, otherwise cleared

NEG: set when d15 of result is one, otherwise cleared

OVER: set when result overflows into d15, otherwise cleared

CARRY: (=borrow) set when result is less then zero, otherwise cleared

The ZERO and the CARRY flag show the result of the comparison

ZERO	CARRY	Comparison result
1	х	A = INTMEM(u8)
0	Х	A ‡ INTMEM(u8)
0	0	A > INTMEM(u8)
0	1	A < INTMEM(u8)

#### Remarks:

#### 

#### **Function:**

 $INTMEM(u8) \leftarrow INTMEM(u8) - 1;$ 

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

#### **Description:**

Decrement INTMEM.

The content of INTMEM (addressed by the lower 8 bits of the OP-Code) is decremented by one and stored back to the same location.

The flags are affected as follows:

ZERO: set when the result is zero, otherwise cleared

NEG: set when d15 of result is one, otherwise cleared

OVER: set to zero

CARRY: (=borrow) set when result is less then zero, otherwise cleared

#### Remarks:

This can be used for block transfers where the INTMEM serves as address pointer or as a loop counter.

INC INTMEM	OP-Code	Arg	Words	Cycles
INC INTIVICIVI	47u8	-	1	2

#### **Function:**

 $INTMEM(u8) \leftarrow INTMEM(u8) + 1;$ 

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

#### **Description:**

Increment INTMEM.

The content of INTMEM (addressed by the lower 8 bits of the OP-Code) is incremented by one and stored back to the same location.

The flags are affected as follows:

ZERO: set when the result is zero, otherwise cleared

NEG: set when d15 of result is one, otherwise cleared

OVER: set to zero

CARRY: set when result is bigger than 16 bits, otherwise cleared

#### Remarks:

This can be used for block transfers where the INTMEM serves as address pointer or as a loop counter.

JMPD U16	OP-Code	Arg	Words	Cycles
	A000	U16	2	3

#### **Function:**

PC ← #U16

Affected Flags: none

#### **Description:**

Jump directly to address.

The jump address is the argument, i.e. the word following the opcode. The PC is loaded with the jump address and execution continues there.

#### Remarks:

JMPI INTMEM	OP-Code	Arg	Words	Cycles
	A2u8	-	1	3

#### **Function:**

 $PC \leftarrow INTMEM(u8)$ 

Affected Flags: none

#### **Description:**

Jump indirect via pointer in INTMEM.

The jump address is in INTMEM (which is addressed by the lower 8 bits of the OP-Code).

The jump address is loaded into the PC and execution continues there.

#### Remarks:

# MOV INTMEM A

OP-Code	Arg	Words	Cycles
16 <i>u8</i>	-	1	1

#### **Function:**

 $INTMEM(u8) \leftarrow A$ 

PC ← PC + 1

Affected Flags: none

#### **Description:**

Move ACCU to INTMEM.

Copy ACCU to INTMEM (which is addressed by the lower 8 bits of the OP-Code)

#### Remarks:

# MOV A INTMEM

OP-Code	Arg	Words	Cycles
50 <i>u</i> 8	-	1	2

#### **Function:**

 $A \leftarrow INTMEM(u8)$ 

 $PC \leftarrow PC + 1$ 

Affected Flags: none

#### **Description:**

Move INTMEM to ACCU.

Copy INTMEM (addressed by the lower 8 bits of the OP-Code) to ACCU.

#### Remarks:

# MOV A STATUS

OP-Code	Arg	Words	Cycles
1400	-	1	1

#### **Function:**

A ← STATUS

 $PC \leftarrow PC + 1$ 

Affected Flags: none

#### **Description:**

Move STATUS to ACCU.

The STATUS register reflects the stack pointer and the flags

d15 - d8	d7 - d5	d4	d3	d2	d1	d0
STACK POINTER	000	IE	ZERO	NEG	OVER	CARRY

#### Remarks:

# MOV FLAGS A

OP-Code	Arg	Words	Cycles
1200	-	1	1

#### **Function:**

FLAGS ← A

PC ← PC + 1

#### **Description:**

Move ACCU to FLAGS.

Copy the 5 least significant bits of ACCU to the flag bits.

With this instruction all flags can be initialized to a specific value.

d15 - d5	d4	d3	d2	d1	d0
	IE	ZERO	NEG	OVER	CARRY

#### Remarks:

Flags IE and CARRY can also be set and cleared with their dedicated instructions.

The stack pointer can only be loaded with its dedicated instruction (MOV SP A)

# MOV IMASK A OP-Code | Arg | Words | Cycles | 0500 - 1 1 1

#### **Function:**

 $IMASK \leftarrow A$ 

PC ← PC + 1

Affected Flags: none

#### **Description:**

Move ACCU to IMASK.

The number of bits in the IMASK register depends on the interrupt hardware but they always start at d0 and are arranged gapless. If there are e.g. four interrupt lines, the mask bits are d0 - d3 with d0 (IRQ0) having the highest and d3 (IRQ3) the lowest priority. For an interrupt to be enabled its corresponding IMASK bit must be set to one.

#### Remarks:

The IMASK register is write only

MOV SP A	OP-Code	Arg	Words	Cycles
MOV SP A	1300	-	1	1

#### **Function:**

SP ← A

PC ← PC + 1

Affected Flags: none

#### **Description:**

Move ACCU to SP.

Copy lower 8 bits of ACCU to stack pointer

#### Remarks:

To read back the content of register SP use the instructions MOV A STATUS and SWAP ACCU.

# LOAD INTMEM U16

OP-Code	Arg	Words	Cycles
61 <i>u</i> 8	U16	2	2

#### **Function:**

INTMEM(u8) ← #U16

 $PC \leftarrow PC + 2$ 

Affected Flags: none

#### **Description:**

Load 16-bit value into INTMEM.

INTMEM is addressed by the lower 8 bits of the OP-Code

#### Remarks:

# LOAD A U16

OP-Code	Arg	Words	Cycles
6000	U16	2	2

#### **Function:**

A ← #U16

PC ← PC + 2

Affected Flags: none

### **Description:**

Load 16-bit value into ACCU.

#### Remarks:

# MOVI INTMEM A

OP-Code	Arg	Words	Cycles
52u8	-	1	2

#### **Function:**

INTMEM ( (low) INTMEM (u8) )  $\leftarrow$  A

PC ← PC + 1

Affected Flags: none

#### **Description:**

Move indirect ACCU to INTMEM.

The INTMEM argument is not the target address itself but a pointer to it. At first this pointer is fetched from INTMEM. Its lower 8 bits then address the actual INTMEM target location where the content of ACCU is copied to. The pointers upper 8 bits are ignored. This addressing mode is useful for moving and/or manipulating blocks of INTMEM in a loop by simply incrementing or decrementing the pointer.

#### Remarks:

# MOVI A INTMEM

OP-Code	Arg	Words	Cycles
80 <i>u8</i>	-	1	3

#### **Function:**

A ← INTMEM ( (low) INTMEM (u8) )

PC ← PC + 1

Affected Flags: none

#### **Description:**

Move indirect INTMEM to ACCU.

The INTMEM argument is not the source address itself but a pointer to it. At first this pointer is fetched from INTMEM. Its lower 8 bits then address the actual INTMEM source location whose content is copied to the ACCU. The pointers upper 8 bits are ignored. This addressing mode is useful for moving and/or manipulating blocks of INTMEM in a loop by simply incrementing or decrementing the pointer.

#### Remarks:

# MOVXI INTMEM A

OP-Code	Arg	Words	Cycles
82u8	-	1	3

#### **Function:**

EXTMEM (INTMEM (u8))  $\leftarrow$  A

PC ← PC + 1

Affected Flags: none

#### **Description:**

Move ACCU to EXTMEM addressed by pointer in INTMEM.

At first the INTMEM is addressed by the lower 8 bits of the OP-Code. This memory location serves as a pointer. It points to the actual EXTMEM target address where the content of ACCU is copied to. The indirect addressing can be used to move and/or manipulate blocks of EXTMEM in a loop by incrementing or decrementing the pointer.

#### Remarks:

# MOVXI A INTMEM

OP-Code	Arg	Words	Cycles
83 <i>u</i> 8	-	1	3

#### **Function:**

A ← EXTMEM (INTMEM (u8))

PC ← PC + 1

Affected Flags: none

#### **Description:**

Move EXTMEM addressed by INTMEM to ACCU.

At first the INTMEM is addressed by the lower 8 bits of the OP-Code. This memory location serves as a pointer. It points to the actual EXTMEM location whose content is copied to ACCU. The indirect addressing can be used to move and/or manipulate blocks of EXTMEM in a loop by incrementing or decrementing the pointer.

#### Remarks:

NOP	OP-Code	Arg	Words	Cycles
NOP	0000	-	1	1

#### **Function:**

PC ← PC + 1

Affected Flags: none

#### **Description:**

No operation.

Only the PC is incremented by one. This instruction can be used for short delays or to fill unused memory.

#### Remarks:

NOT A	OP-Code	Arg	Words	Cycles
NOT A	2F00	-	1	1

### **Function:**

ACCU ← **NOT** ACCU

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER

## **Description:**

Negate ACCU.

All bits of ACCU are negated and the result is stored into ACCU.

The flags are affected as follows:

• ZERO set when the result is zero, otherwise cleared

NEG set when d15 of result is one, otherwise cleared

OVER set to zero

#### Remarks:

Two consecutive NOT A leave the ACCU unchanged but set / clear the flags ZERO and NEG. This can be used to test if the ACCU contains zero or a negative value.

# OR A INTMEM OP-Code Arg Words Cycles 4Du8 1 2

### **Function:**

ACCU ← ACCU **OR** INTMEM(u8)

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER

## **Description:**

Or ACCU with INTMEM.

The contents of ACCU and INTMEM (addressed by the lower 8 bits of the OP-Code) are ORed bit-wise and the result is stored into the ACCU.

The flags are affected as follows:

- ZERO set when the result is zero, otherwise cleared
- NEG set when d15 of result is one, otherwise cleared
- OVER set to zero

### Remarks:

POP A	OP-Code	Arg	Words	Cycles
	5100	-	1	2

### **Function:**

 $SP \leftarrow SP + 1$ 

ACCU ← INTMEM(SP)

PC ← PC + 1

Affected Flags: none

# **Description:**

Pop ACCU.

At first the stack pointer is incremented by one. Next the content of INTMEM (addressed by the stack pointer) is copied into ACCU.

#### Remarks:

PUSH A	OP-Code	Arg	Words	Cycles
	1500	1	1	1

## **Function:**

INTMEM(SP) ← ACCU

 $SP \leftarrow SP - 1$ 

PC ← PC + 1

Affected Flags: none

# **Description:**

Push ACCU.

At first the content of ACCU is copied into INTMEM (addressed by the stack pointer). Next the stack pointer is decremented by one.

#### Remarks:

RETI	OP-Code	Arg	Words	Cycles
KEII	8500	-	1	3

#### **Function:**

 $SP \leftarrow SP + 1$ 

IIPx  $\leftarrow$  0

 $PC \leftarrow INTMEM(SP)$ 

Affected Flags: none

## **Description:**

Return from interrupt.

At first the stack pointer is incremented by one and the execution of the current interrupt is ended by clearing the correspondent IIPx-Flag (Interrupt In Progress). Next the content of INTMEM (addressed by the stack pointer) is copied into PC and execution continues from there.

#### Remarks:

A valid return address must be on the stack from an interrupt call

RETS	OP-Code	Arg	Words	Cycles
	8400	1	1	3

### **Function:**

SP ← SP + 1

 $PC \leftarrow INTMEM(SP)$ 

Affected Flags: none

# **Description:**

Return from subroutine.

At first the stack pointer is incremented by one. Next the content of INTMEM (addressed by the stack pointer) is copied into PC and execution continues from there.

### Remarks:

A valid return address must be on the stack from a previous CALL instruction

ROL A	OP-Code	Arg	Words	Cycles
ROL A	2800	-	1	1

#### **Function:**

 $\mathsf{CARRY} \leftarrow \mathsf{ACCU}(15 \leftarrow 14 \leftarrow \ldots \leftarrow 2 \leftarrow 1 \leftarrow 0) \leftarrow \mathsf{CARRY}$ 

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

## **Description:**

Rotate Left Accumulator through CARRY.

The ACCU is shiftet left one bit position. Its lowest bit receives the content of the CARRY. Its highest bit in turn goes into the CARRY.

The other flags are affected as follows:

ZERO set when the result is zero, otherwise cleared

NEG set when d15 of result is one, otherwise cleared

OVER set to zero

#### Remarks:

The CARRY can be set or cleared beforehand to insert a one or a zero.

ROR A	OP-Code	Arg	Words	Cycles
	2900	1	1	1

### **Function:**

CARRY  $\rightarrow$  ACCU(15  $\rightarrow$  14  $\rightarrow$  ...  $\rightarrow$  2  $\rightarrow$  1  $\rightarrow$  0)  $\rightarrow$  CARRY

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

# **Description:**

Rotate Right Accumulator through CARRY.

The ACCU is shiftet right one bit position. Its highest bit receives the content of the CARRY. Its lowest bit in turn goes into the CARRY.

The other flags are affected as follows:

ZERO set when the result is zero, otherwise cleared

NEG set when d15 of result is one, otherwise cleared

OVER set to zero

#### Remarks:

The CARRY can be set or cleared beforehand.

SET C	OP-Code	Arg	Words	Cycles
SEIC	1100	-	1	1

## **Function:**

CARRY ← 1

PC ← PC + 1

Affected Flags: CARRY

# **Description:**

Set CARRY flag.

This can be used to prepare shift and rotate instructions.

### Remarks:

SET IE	OP-Code	Arg	Words	Cycles
SETTE	0300	-	1	1

## **Function:**

IE ← 1

PC ← PC + 1

Affected Flags: IE

# **Description:**

Set Interrupt Enable flag.

All pending and enabled interrupts will be accepted in the order of their priority. (INT0 = highest priority)

### Remarks:

SHL A	OP-Code	Arg	Words	Cycles
	2A00	-	1	1

## **Function:**

CARRY  $\leftarrow$  ACCU(15  $\leftarrow$  14  $\leftarrow$  ...  $\leftarrow$  2  $\leftarrow$  1  $\leftarrow$  0)  $\leftarrow$  0

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

## **Description:**

Shift Left Accumulator into CARRY.

The ACCU is shiftet left one bit position. Its lowest bit receives a zero. Its highest bit in turn goes into the CARRY.

The other flags are affected as follows:

ZERO set when the result is zero, otherwise cleared

NEG set when d15 of result is one, otherwise cleared

OVER set to zero

### Remarks:

SHL A is equivalent to multiply by 2

SHR A	OP-Code	Arg	Words	Cycles
	2B00	-	1	1

### **Function:**

 $0 \rightarrow \mathsf{ACCU}(15 \rightarrow 14 \rightarrow \dots \rightarrow 2 \rightarrow 1 \rightarrow 0) \ \rightarrow \mathsf{CARRY}$ 

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

## **Description:**

Shift Right Accumulator into CARRY.

The ACCU is shiftet right one bit position. Its highest bit receives a zero. Its lowest bit in turn goes into the CARRY.

The other flags are affected as follows:

- ZERO set when the result is zero, otherwise cleared
- NEG set when d15 of result is one, otherwise cleared
- OVER set to zero

#### Remarks:

SHR A is equivalent to division by 2

# SUB A INTMEM OP-Code Arg Words Cycles 42u8 - 1 2

#### **Function:**

ACCU ← ACCU - INTMEM(u8);

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

# **Description:**

The content of INTMEM (addressed by the lower 8 bits of the OP-Code) is subtracted from ACCU and the result is stored into ACCU.

The flags are affected as follows:

ZERO set when the result is zero, otherwise cleared

NEG set when d15 of result is one, otherwise cleared

OVER set when sign overflows, otherwise cleared

• CARRY (=borrow) set when result is less then zero, otherwise cleared

#### Remarks:

This instruction does **not** subtract the current CARRY. It can be used for a 16-bit subtraction or to subtract the lowest two words in a higher precision (e.g. 64-bit) subtraction.

# SUBB A INTMEM OP-Code Arg Words Cycles 40u8 - 1 2

#### **Function:**

ACCU ← ACCU - INTMEM(u8) - CARRY;

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER, CARRY

# **Description:**

Subtract with borrow.

The content of INTMEM (addressed by the lower 8 bits of the OP-Code) and CARRY are subtracted from ACCU and the result is stored into ACCU.

The flags are affected as follows:

ZERO set when the result is zero, otherwise cleared

NEG set when d15 of result is one, otherwise cleared

OVER set when sign overflows, otherwise cleared

CARRY (=borrow) set when result is less then zero, otherwise cleared

#### Remarks:

SUBB is normally used in higher precision (e.g. 64-bit) subtractions. The lowest two words are subtracted with the SUB instruction. Then the higher words are subtracted with the SUBB instruction, taking the carries (borrows) into account.

SWAP A	OP-Code	Arg	Words	Cycles	
SVVAP A	2500	-	1	1	

### **Function:**

 $ACCU(15...8) \leftarrow ACCU(7...0), ACCU(7...0) \leftarrow ACCU(15...8)$ 

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER

# **Description:**

**SWAP ACCU** 

Swap the high and low bytes of ACCU.

The flags are affected as follows:

ZERO set when the result is zero, otherwise cleared

NEG set when d15 of result is one, otherwise cleared

OVER set to zero

### Remarks:

# XOR A INTMEM OP-Code Arg Words Cycles 4Eu8 1 2

### **Function:**

ACCU ← ACCU **XOR** INTMEM(u8)

PC ← PC + 1

Affected Flags: ZERO, NEG, OVER

## **Description:**

The contents of ACCU and INTMEM (addressed by the lower 8 bits of the OP-Code) are XORed bit-wise and the result is stored into the ACCU.

The flags are affected as follows:

- ZERO set when the result is zero, otherwise cleared
- NEG set when d15 of result is one, otherwise cleared
- OVER set to zero

#### Remarks: