

Assignment Project Exam ~~Wireless LAN~~ Help I

<https://eduassistpro.github.io> Basics

Add WeChat edu\_assist\_pro

# Overview


1. IEEE 802.11 vs. WiFi
2. IEEE Standards Numbering System
3. Key features of 802.11  
**Assignment Project Exam Help**
4. 802.11 Bands a
5. Hidden Node P <https://eduassistpro.github.io/S/CTS>
6. 802.11 MAC (inter-frame spacing F)  
**Add WeChat edu\_assist\_pro**
7. 802.11 Architecture and Addr
8. 802.11 Frame Format
9. 802.11 Power Management

# IEEE 802.11 vs. WiFi

- IEEE 802.11 is a standard
- WiFi = “Wireless Fidelity” is a trademark
- Fidelity = Compatibility between wireless equipment from different ~~Assignment Project Exam Help~~
- WiFi Alliance is <https://eduassistpro.github.io/> organization that does the compatibility testing ~~Add WeChat (W) edu\_assist\_pro~~
- 802.11 has many options and it is possible for two equipment based on 802.11 to be *incompatible*.
- All equipment with “WiFi” logo have selected options such that they will **interoperate**.

# IEEE Standards Numbering System

- IEEE 802.\* and IEEE 802.1\* standards (e.g., IEEE 802.1Q-2011) apply to all IEEE 802 technologies:
  - IEEE 802.3 Ethernet
  - IEEE 802.11 WiFi
  - IEEE 802.16 WiMAX

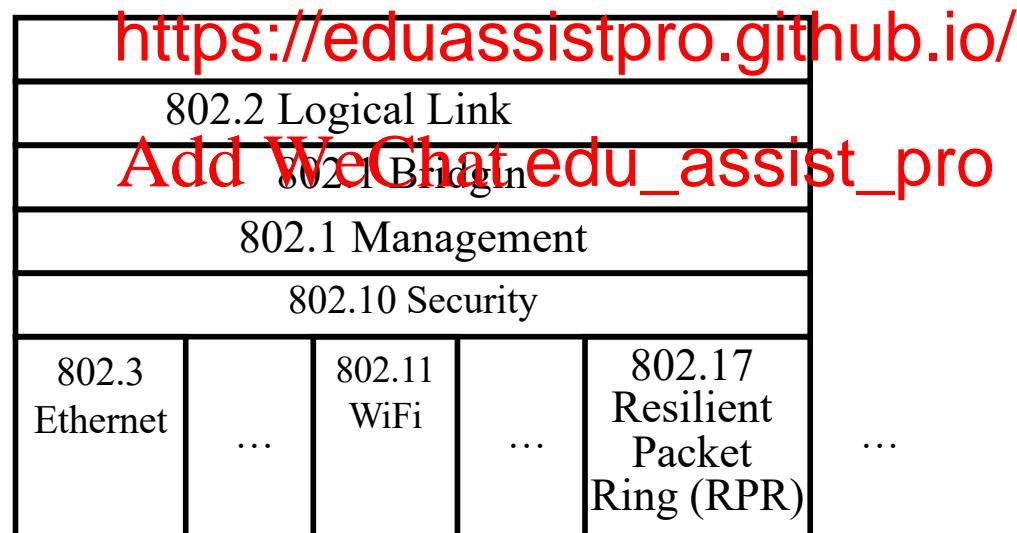

# Lettered vs. Numerical Versions

- IEEE 802.11 uses *letters* to name the versions
  - E.g., 802.11a/b (1999), 802.11g (2003), 802.11n (2009), 802.11ac (2013), and so on
- WiFi Alliance [https://eduassistpro.github.io/  
mplify](https://eduassistpro.github.io/mplify)
  - E.g., WiFi 4 (802.11n), WiFi 5 (802.11ac), WiFi 6 (802.11ax) ...

# IEEE 802.11 Features

- Data rate (a.k.a. *speed*)
  - Original IEEE 802.11-1997 was at 1 and 2 Mbps.
  - Newer versions at 11 Mbps, 54 Mbps, 108 Mbps, 1.2 Gbps, ...
- Spectrum licensing
  - All versions use unlicensed spectrum
- PHYs:
  - Spread spectrum (in old versions)
  - OFDM (in new versions)
- Supports multiple priorities (time-critical and data traffic)
- Power management allows a node to 'doze off'
  - Longer battery life

# IEEE 802.11 Physical Layers

- Issued in several stages
- First version in 1997: Legacy IEEE 802.11 (no longer used)
  - 3 physical layer specifications (2 in 2.4-GHz, 1 in infrared)
  - All operating at 1 and 2 Mbps
- Amendments in 1999:
  - IEEE 802.11a-19 MHz, OFDM
  - IEEE 802.11b-19 2 MHz (spread spectrum)
- Amendment in 2003: Add WeChat edu\_assist\_pro
  - IEEE 802.11g-2003 : 2.4 GHz band MHz, OFDM

# ISM Bands

- Industrial, Scientific, and Medical bands. License exempt

From	To	Bandwidth	Availability
6.765 MHz	6.795 MHz	30 kHz	
13.553 MHz	14.567 MHz	14 kHz	Worldwide
26.957 MHz	27.283 MHz	326 kHz	Worldwide
40.660 MHz	40.700		
433.050 MHz	434.790		Ica, Middle east, Union nland
902.000 MHz	928.000 MHz	26 MHz	
<b>2.400 GHz</b>	<b>2.500 GHz</b>	<b>100 MHz</b>	<b>Worldwide</b>
<b>5.725 GHz</b>	<b>5.875 GHz</b>	<b>150 MHz</b>	<b>Worldwide</b>
24.000 GHz	24.250 GHz	250 MHz	Worldwide
61.000 GHz	61.500 GHz	500 MHz	
122.000 GHz	123.000 GHz	1 GHz	
244 GHz	246 GHz	2 GHz	

# WLAN/WiFi Bands

WLAN/WiFi Standard	Frequency Band
802.11b/g/n	2.4 GHz
802.11a/n/ac/ax	5 GHz
802.11be	(firmed yet)
802.11p (car-to-car)	902-928 MHz (unused band)
802.11ah (IoT)	90
802.11af (Rural)	700 MHz (unused TV channels)
802.11ad/ay (Multi Gbps wireless applications: e.g., cable replacement, VR, ...)	60 GHz

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat edu\_assist\_pro

# WiFi Channels

- The entire *band* is divided into several individual *channels*
- An AP operates over a **single channel** at any given time
- Different nearby APs can operate over different channels of the same band **Assignment Project Exam Help**
  - Avoid congestion <https://eduassistpro.github.io/>
- Each channel is used
- With newer WiFi versions, it is possible to combine two or more channels to get a wider channel
  - More bandwidth for higher data rates

## 2.4 GHz WiFi Channel Frequencies

- A total of 14 channels (not all channels available in all countries)
- Centre frequencies are 5 MHz apart (except channel 14)
- Each channel is 22 MHz wide

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat edu\_assist\_pro

From <http://www.radio-electronics.com/info/wireless/wi-fi/80211-channels-number-frequencies-bandwidth.php>

## 2.4 GHz Channel Overlaps

- ❑ Most channels in 2.4 GHz band overlap
- ❑ Maximum of three non-overlapping channels are possible
- ❑ 1-6-11 are most widely used non-overlapping channels (6 is usually default)
  - E.g., if there are three nearby APs in an enterprise, they are usually set to 1-6-11

**Assignment Project Exam Help**

<https://eduassistpro.github.io/>

Add WeChat edu\_assist\_pro

From <http://boundless.aerohive.com/experts/WLAN-Channels-Explained.html>

# Channels in 5 GHz Band

- 20 MHz channels (c.f. 22 MHz in 2.4 GHz band)
- Non-overlapping (c.f., mostly overlapping in 2.4 GHz)  
**Assignment Project Exam Help**
- Two types of cha
  - Always availa <https://eduassistpro.github.io/>
  - Channels used [Add Radar](#) ([Add WiFi Channel](#))
- Dynamic Frequency Selection (DFS): WiFi AP monitors radar channels and vacate them (switch to another channel) if radar is detected
  - May cause connection drop for clients

# 5GHz Channel Structure


Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat edu\_assist\_pro


Source: <https://www.ekahau.com/blog/channel-planning-best-practices-for-better-wi-fi/>  
(accessed 15 June 2020): this structure is probably for the US; radar channels may vary with countries

# Hidden Node Problem

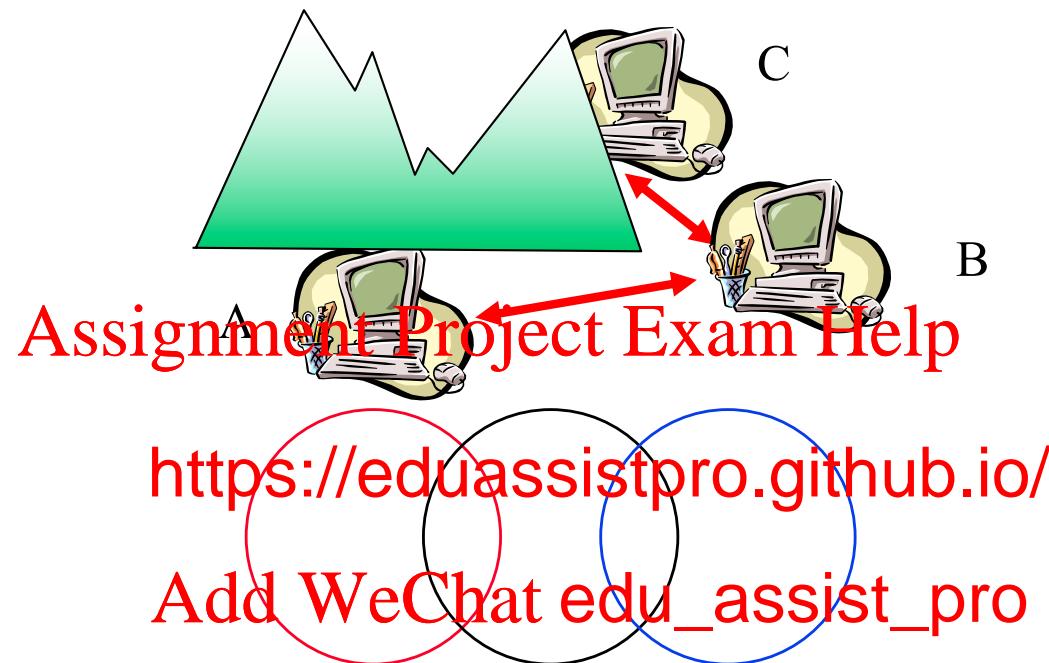

- ❑ A can hear B, B can hear C, but C cannot hear A (C and A are *hidden* from each other)
- ❑ C may start transmitting while A is also transmitting → collision at B!
  - A and C (wireless transmitters) can't detect collision (why?).
- ❑ CSMA/CD is not possible (CD = collision detection; CD used in Ethernet)  
→ in WLAN, only the receiver can help *avoid* collisions
- ❑ **4-way handshake** needed to implement CA (*collision avoidance*) in WLAN


# 4-Way Handshake

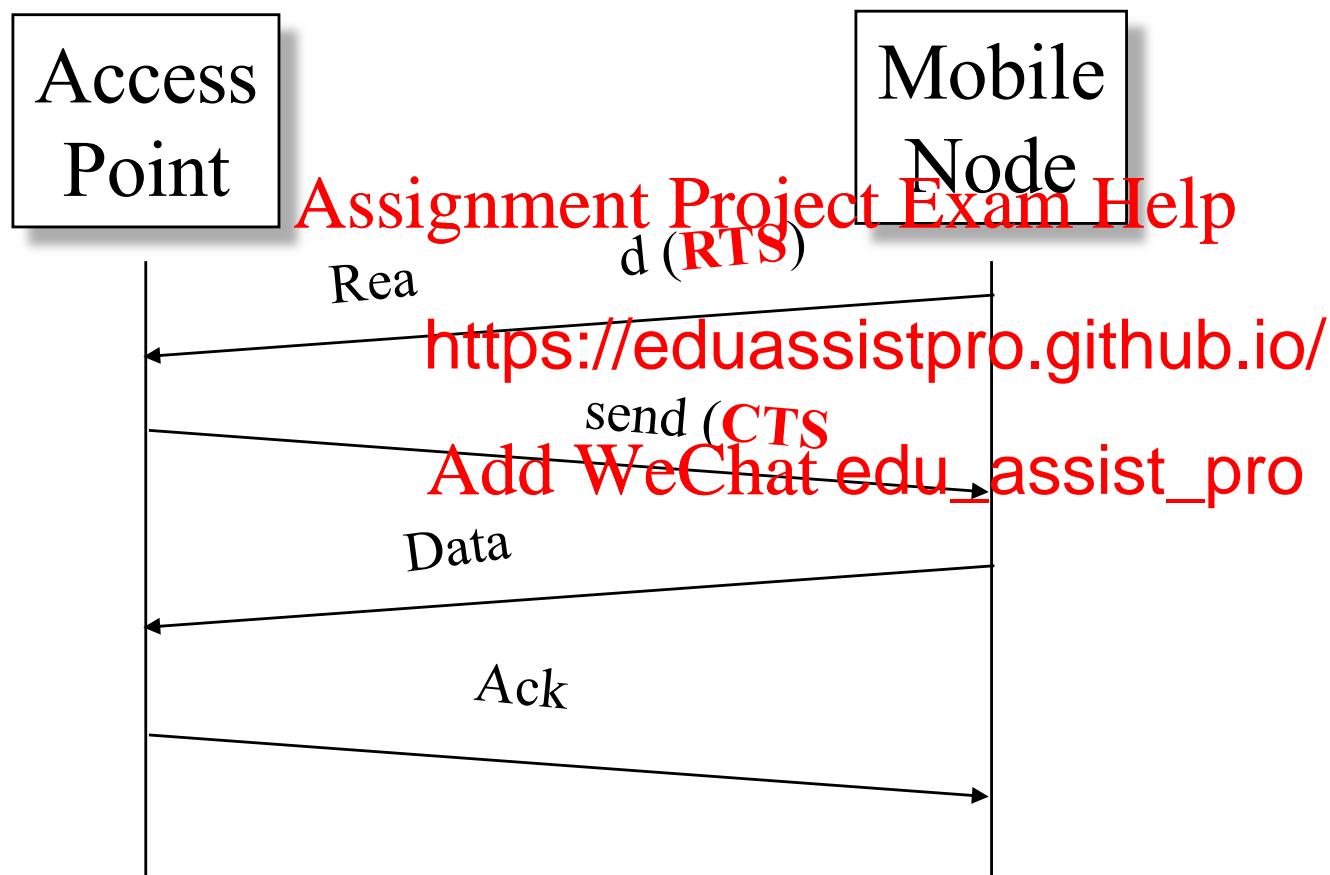

# IEEE 802.11 MAC

- Carrier Sense Multiple Access with Collision Avoidance (**CSMA/CA**)
- Listen before you talk. If the medium is busy, the transmitter backs off for a random period.
- Avoids collision by sending a short message:  
Ready to send (**R**) <https://eduassistpro.github.io/>  
RTS contains des \_\_\_\_\_ f message.  
Tells everyone to backoff for the **Add WeChat edu\_assist\_pro**
- Destination sends: Clear to send (**CTS**)  
Other stations set their network allocation vector (**NAV**) and wait for that duration
- Cannot detect collision, hence each packet is acked.
- MAC-level retransmission if not acked.


# IEEE 802.11 Priorities with Inter-frame space

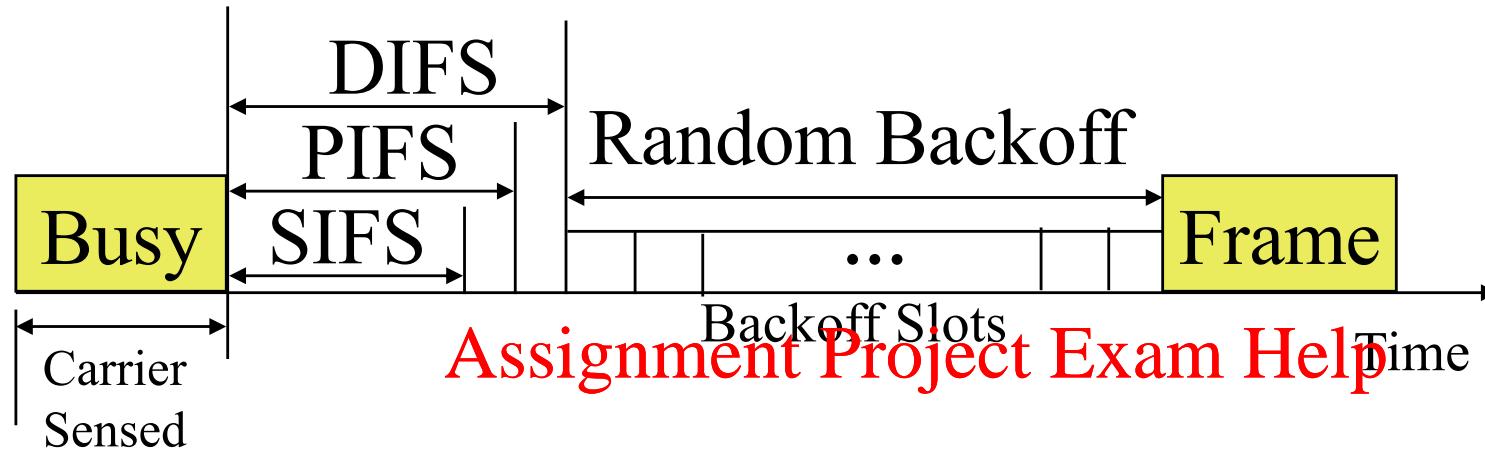

<https://eduassistpro.github.io/>

- 802.11 has different time-critical packets
- Achieve priorities by using different inter-frame space (IFS)
- Highest priority frames, e.g., Acks, use short IFS (**SIFS**)
- Medium priority time-critical frames use “Point Coordination Function IFS” (**PIFS**)
- Asynchronous data frames use “Distributed coordination function IFS” (**DIFS**)

# Time Critical Services

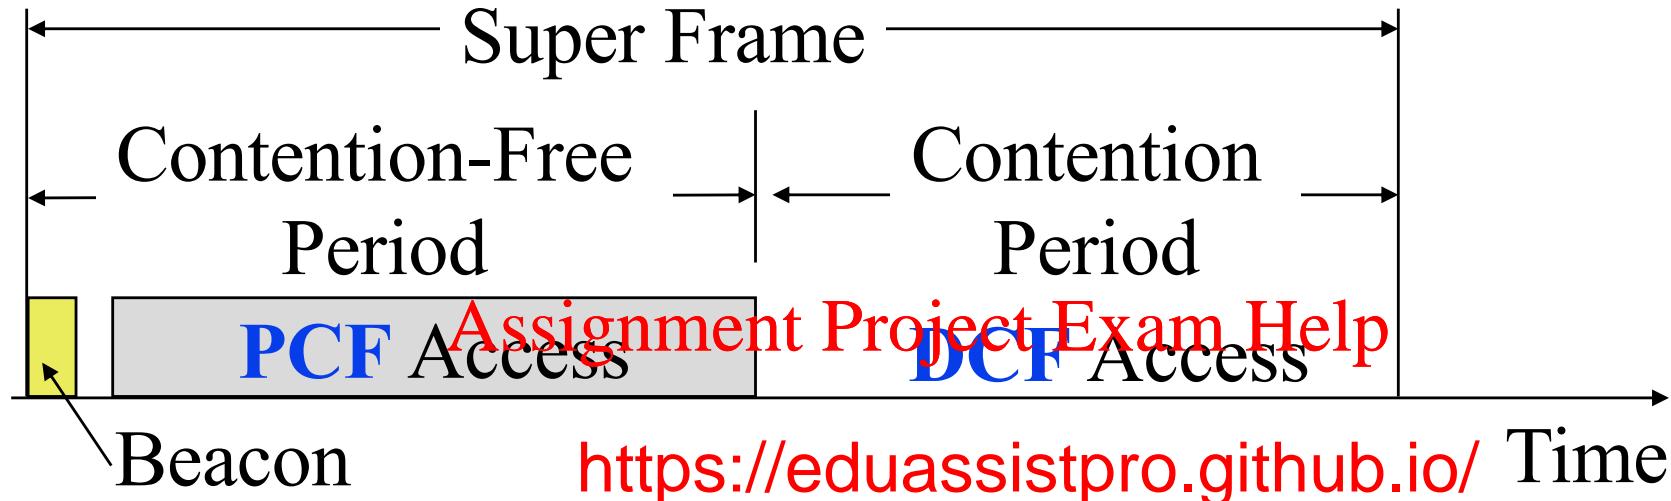

- Timer critical services use Point Function
- The point coordinator allows only one station to access
- Coordinator sends a beacon frame to all stations. Then uses a polling frame to allow a particular station to have contention-free access
- Contention Free Period (CFP) varies with the load.

# IEEE 802.11 DCF Backoff

- MAC works with a single FIFO Queue
  - Focuses on transmitting the packet at the head of the queue
- Three variables:
  - Contention Window ( $CW$ )
  - Backoff count ( $B$ )
  - Network Allocation Function (NAV) <https://eduassistpro.github.io/>
- If a frame (RTS, CTS, Data, Ack) is sent, it is held until the duration indicated by the frame. Stations sense the media after the duration indicated by the frame.
- If the medium is idle for DIFS, and backoff (BO) is not already active, the station draws a random BO in  $[0, CW]$  and sets the backoff timer.
  - CW is in units of *slot time* (slot time varies with 802.11 standards)
- If the medium becomes busy during backoff, the timer is paused and a new NAV is set. After NAV, back off continues.

# IEEE 802.11 DCF Backoff (Cont)

- $BO = \text{random}(0, \text{CW})$
- Initially and after each successful transmission:  
*Assignment Project Exam Help*

<https://eduassistpro.github.io/>

- After each *unsuccessful* attempt  
*Add WeChat edu\_assist\_pro*  
$$\text{CW} = \min \left\{ 2\text{CW}_{\text{max}} \right\}$$

# Example

- Assume that we have CWmin=3 and CWmax=127 configured for a given WLAN. What would be the values of CW if there were 8 successive unsuccessful attempts after initializing the network?

Assignment Project Exam Help

After initialization,

<https://eduassistpro.github.io/>

After 1<sup>st</sup> unsuccessful attempt, CW = min(15, 127) = 15

After 2<sup>nd</sup> unsuccessful attempt, CW = min(15, 127) = 15

Then on, 31, 63, 127, 127, 127, ...

## Parameter Values: interframe space and contention window

WLAN	Slot-time ( $\mu$ s)	SIFS ( $\mu$ s)	CWmin	CWmax
11a	9	16	15	1023
11b	20	10	31	1023
11g	9 or 20	10	15 or 31	1023
11n (2.4 GHz)	9 or 20	https://eduassistpro.github.io/	5	1023
11n (5 GHz)	9	Add WeChat edu_assist_pro	1	1023
11ac	9	1		1023

- PIFS = SIFS + 1 slot time
- DIFS = SIFS + 2 slot times = PIFS + 1 slot time

**Slot time: basic unit of backoff algorithm**

# Example

- What is the duration of PIFS and DIFS for IEEE 802.11b?

Slot time = 20  $\mu$ s      Assignment Project Exam Help  
SIFS = 10  $\mu$ s      <https://eduassistpro.github.io/>

PIFS = SIFS + slot time = 10 + 20 = 30  $\mu$ s  
Add WeChat edu\_assist\_pro

DIFS = SIFS + 2 x slot time = 10 + 40 = 50  $\mu$ s

# Virtual Carrier Sense

- Every frame has a “Duration ID” which indicates how long the medium will be busy.
  - RTS has duration of RTS + SIF + CTS + SIF + Frame + SIF + Ack
  - CTS has duration of CTS + SIF + Frame + SIF + Ack
  - Frame has a dura
  - ACK has a durati <https://eduassistpro.github.io/>
  - A station has to estimate the duratio <sup>S/ACK</sup> Add WeChat [edu\\_assist\\_pro](#)
- All stations keep a “**Network AI** <sup>S/ACK</sup> **ector (NAV)**” timer in which they record the duration of each frame they hear.
- Stations do not need to sense the channel until NAV becomes zero (conserve power)

# Example

- Consider an 802.11b WLAN. A station estimates the transmission times of RTS, CTS, and ACK as 10  $\mu$ s, 10  $\mu$ s, and 25  $\mu$ s, respectively. What would be the value of the Duration field in the RTS header if the station wants to send a 250  $\mu$ s long data frame ?

<https://eduassistpro.github.io/>

802.11b has a SIFS duration of 10  $\mu$ s.

Add WeChat edu\_assist\_pro  
Duration field in RTS = RTS\_time + CTS\_time + data\_time +  
3xSIFS

$$= 10 + 10 + 25 + 250 + 3 \times 10 = 325 \mu\text{s}$$

# 802.11 with RTS/CTS

When a node is sensing the channel, it must be free for DIFS period. SIFS is used as the wait time between the RTS, CTS, DATA and ACK frames. SIFS < DIFS means that another node cannot incorrectly determine that the channel is idle during the 4-way handshake between two other nodes.

<https://eduassistpro.github.io/>


Add WeChat edu\_assist\_pro

# DCF Example

- Example: Slot Time = 1, CWmin = 5, DIFS=3, PIFS=2, SIFS=1
- T=1 Station 2 wants to transmit but the media is busy
- T=2 Stations 3 and 4 want to transmit but the media is busy
- T=3 Station 1 finishes transmission.
- T=4 Station 1 receives ack for its transmission (SIFS=1)  
Stations 2, 3, 4 set their NAV to 1.
- T=5 Medium becomes free
- T=8 DIFS expires. Station 2 transmits. NAV counts between 0 and 5.


Assignment Project Exam Help

The counts are 3, <https://eduassistpro.github.io/>

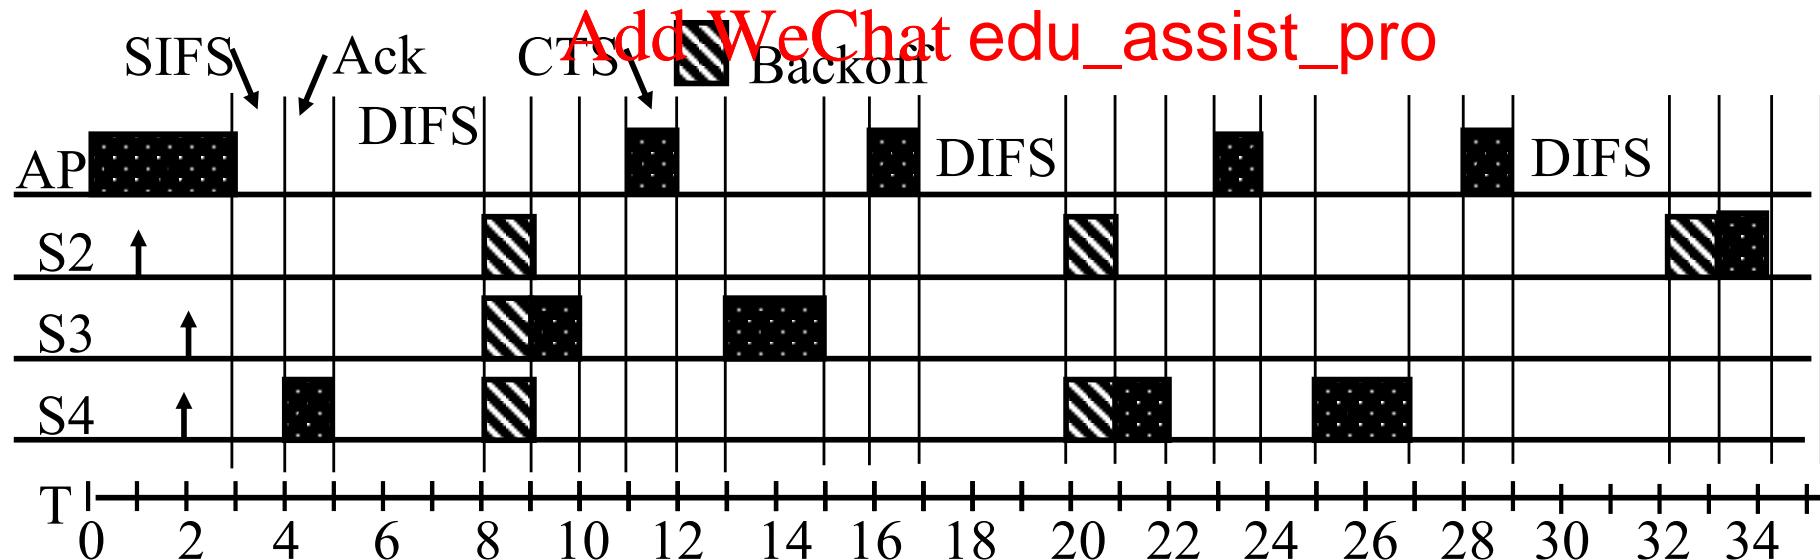


# DCF Example (Cont)

- T=9 Station 3 starts transmitting. Announces a duration of 8 (RTS + SIFS + CTS + SIFS + DATA + SIFS + ACK). Station 2 and 4 pause backoff counter at 2 and 1 resp. and wait till T=17
- T=15 Station 3 finishes data transmission
- T=16 Station 3 receives Ack.
- T=17 Medium becomes free
- T=20 DIFS expires. Station 2 and 4 notice that there was no transmission for DIFS. Stations 2 and 4 start their backoff counter from 2 and 1, respectively.
- T=21 Station 4 starts tr <https://eduassistpro.github.io/>

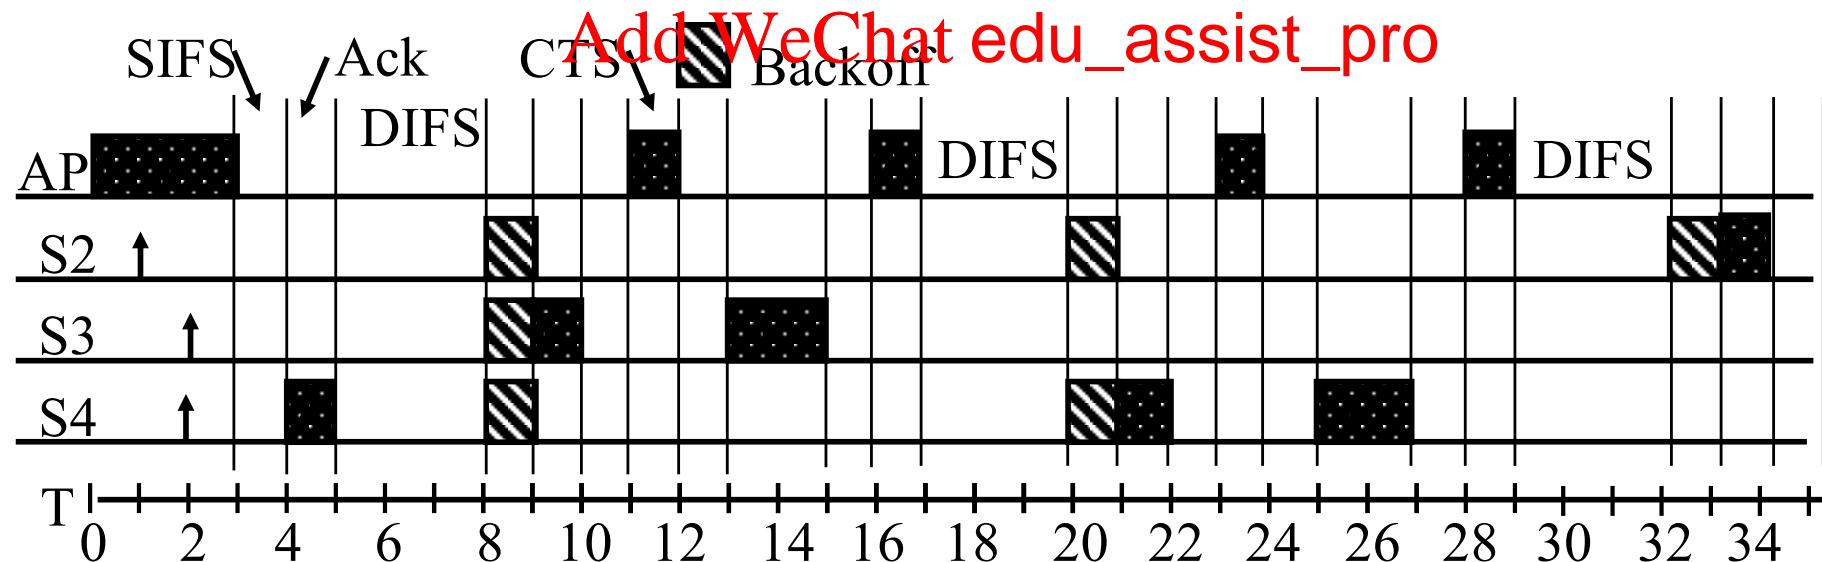


# IEEE 802.11 Architecture

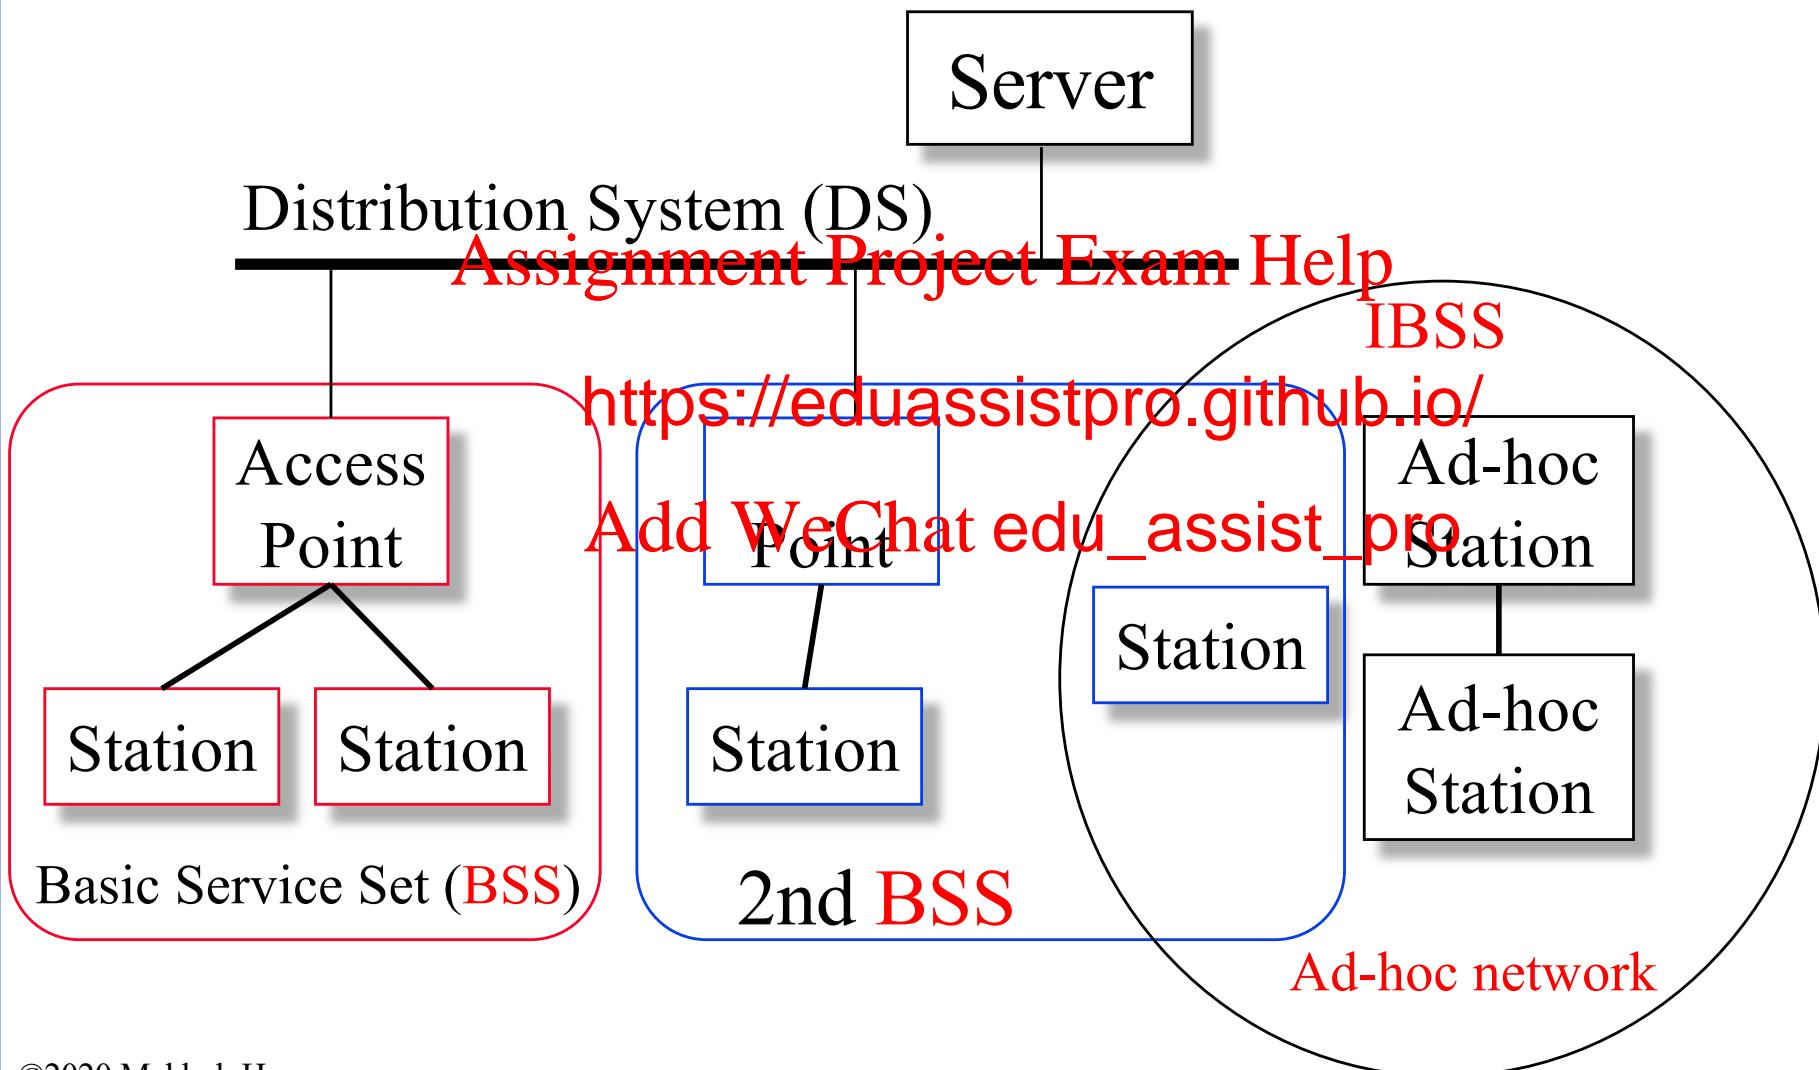

# IEEE 802.11 Architecture (Cont)

- **Basic Service Set (BSS)**  
= Set of stations associated with **one AP**
- **Distribution System (DS)** - wired backbone
- **Independent Basic Service Set (IBSS)**: Set of computers in **ad-hoc mode**. M  
**Assignment Project Exam Help** red backbone.
- Ad-hoc networks <https://eduassistpro.github.io/> infrastructure-based networks
- BSSID: 48-bit MAC address of the access point
- IBSSID: randomly generated address
  - 2 bits are fixed, 46 bits are generated randomly
- All-1s BSSID/IBSSID is used for broadcast

# Frame Format

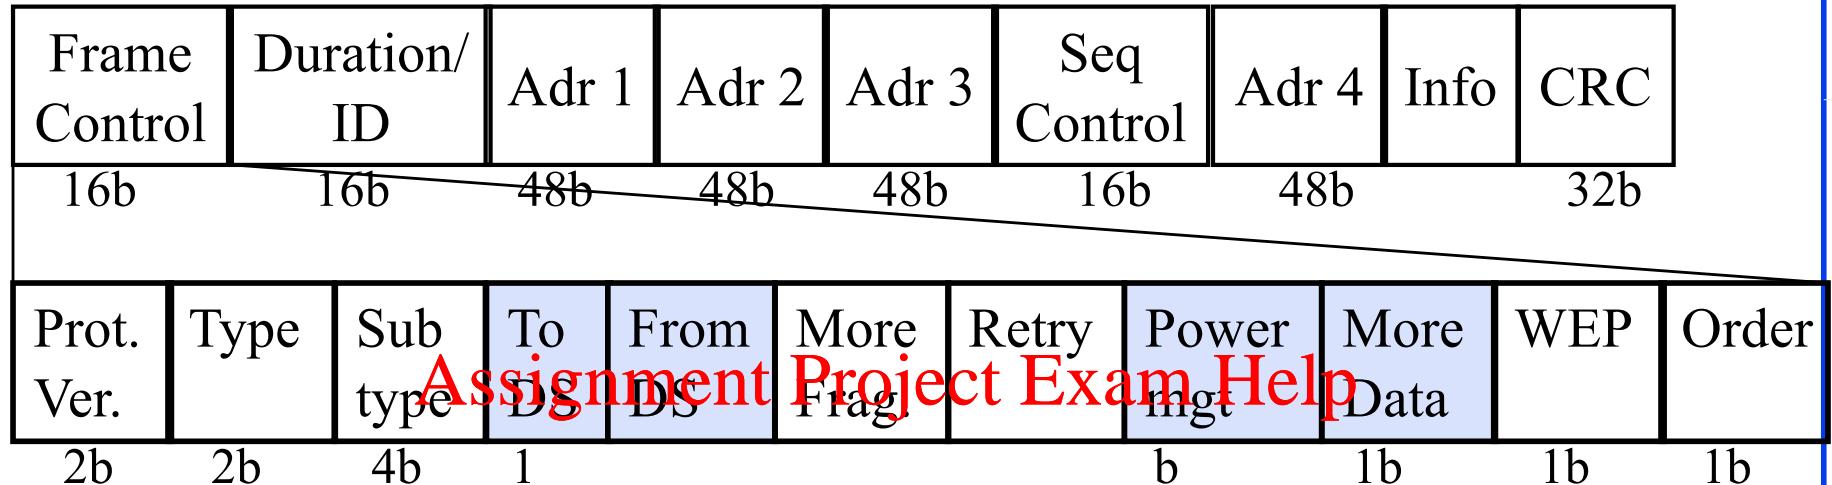

- Type: Control, man
- Sub-Type: Association, disassociation, authentication, de-authentication, CT POLL) ...
- Retry/retransmission
- Power mgt: Going to Power Save mode
- More Data: More buffered data at AP for a station in power save mode
- WEP: Wireless Equivalent Privacy (Security) info in this frame
- Order: Strict ordering

# MAC Frame Fields

## □ Duration/Connection ID:

- If used as duration field, indicates time (in  $\mu\text{s}$ ) channel will be allocated for successful transmission of MAC frame.

Includes time until the end of ACK

- In some contration or connection identifier <https://eduassistpro.github.io/>


## □ Sequence Control

Add WeChat edu\_assist\_pro

- 4-bit fragment number subfield
  - For fragmentation and reassembly
- 12-bit sequence number
- Number frames between given transmitter and receiver

## 802.11 Frame Address Fields – data frames

- **Source/Destination:** ultimate network devices that prepare and decode the frame for network layer
- **Transmitter(Tx)/Receiver(Rx):** Could be the source/destination, or intermediate radio devices, e.g., access point (AP)
- 4 address fields; defined by 2 DS bits

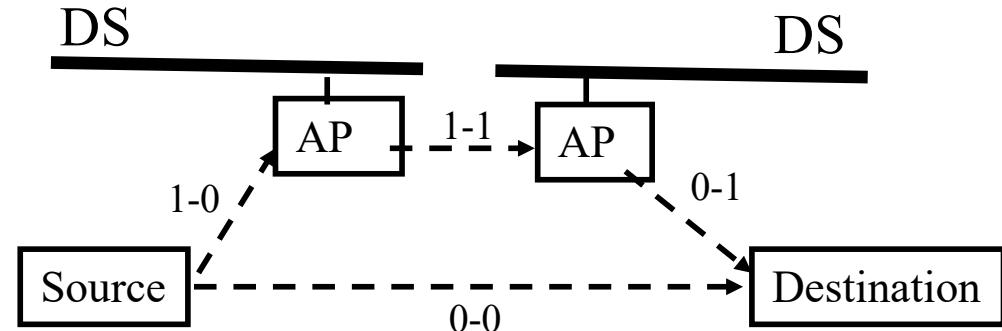

Assignment Project Exam Help

Purpose	ToDS	DA	(Tx)	ADR3	ADR4
IBSS	0	0	Add WeChat edu_assist_pro	IBSSID	N/A
From AP (from infra.)	0	1	DA	BSSID	SA
To AP (to infra.)	1	0	BSSID	SA	DA
AP-to-AP (W'less Brdg)	1	1	RxA	TxA	DA
					SA

## **Example 802.11 Addressing: Wireless Client to Server**

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat edu\_assist\_pro

**Addresses in frames transmitted by the client radio**

**ADR1: AP MAC address (BSSID)**

**ADR2: Client MAC address (source address)**

**ADR3: Server MAC address (destination address)**

**ADR4: Not applicable**

## **Example 802.11 Addressing: Server to Wireless Client**

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat edu\_assist\_pro

**Addresses in frames transmitted by the AP radio**

**ADR1: Client MAC address (destination address)**


**ADR2: AP MAC address (BSSID)**

**ADR3: Server MAC address (source address)**

**ADR4: Not applicable**

- Consider the example WLAN in the figure where two BSSs are connected via a distribution system. What is the content of the Address 3 field when Station A wants to send a packet to Station B via AP 1?

## Example 802.11 addressing

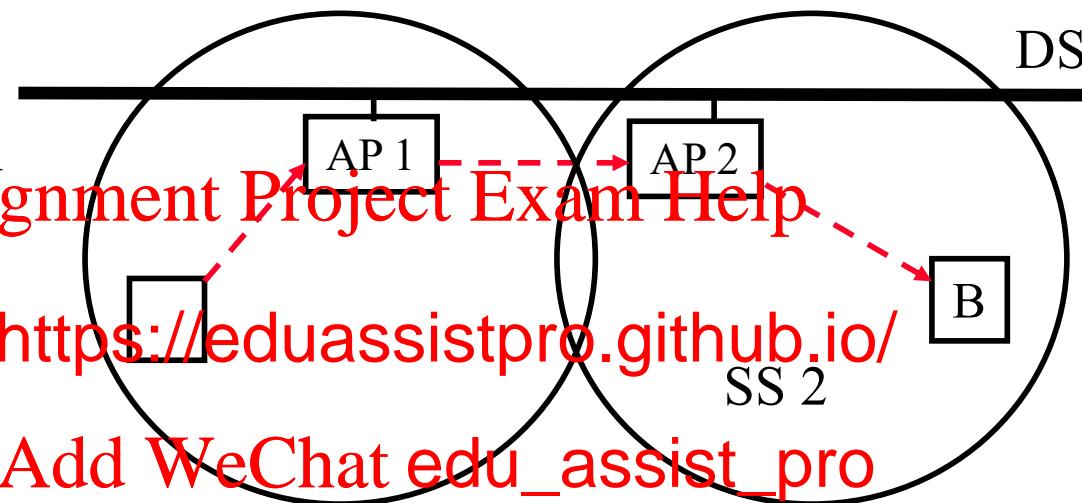


- In this case (To DS=1, From DS=0), Address 3 field should contain the address of the destination station. Therefore, it should be the address of B.

# Power Saving

- ❑ Extending the battery life of portable devices is one of the main challenges of wireless networks.
- ❑ Mechanisms must be devised to let the device sleep as much as possible and wake up only when it needs to transmit or receive.
- ❑ If there are no packets, the device should go to sleep and save battery power.
- ❑ To facilitate this kind of power saving, <https://eduassistpro.github.io/> has a [power management function](#).

# 802.11 Power Management

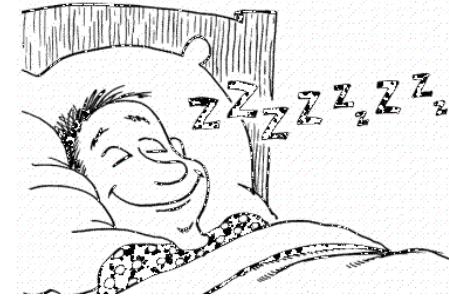

- Station tells the base station its mode:  
Power saving (PS) or active
  - Mode changed by ~~Assignment Project Exam Help~~ In the frame control header.
- All packets destined ~~Assignment Project Exam Help~~ ffered (at AP)
- AP broadcasts list of ~~Assignment Project Exam Help~~ ts in its beacon frames:  
Traffic Indication Map (TIM)
- When a station wakes up, it waits for ~~Assignment Project Exam Help~~ ds a PS-Poll message to AP if its bit is turned on in TIM; AP then sends one frame with buffered data and sets the **More Data bit** in the header if more data in the buffer (station does not go back to sleep after receiving one frame if **More** is set).

# Traffic Indication Map (TIM)

- ❑ A bit map inside a beacon
  - ❑ 2008 bits; each bit represents an Association ID (one associated client)
  - ❑ If packets are b a given Association ID, <https://eduassistpro.github.io/> is set to ‘1’, ‘0’ otherwise

# Summary

1. 802.11 PHYs: Spread spectrum in earlier versions, but OFDM in new versions
2. 2.4 GHz channels (22 MHz) are mostly overlapped, but 5 GHz channels (20 MHz) are non-overlapped, but some are shared with the radar service
3. High speed app <https://eduassistpro.github.io/> combining multiple adjacent channels with higher bandwidth **Add WeChat edu\_assist\_pro**
4. 802.11 uses SIFS, PIFS, DIFS for priority
5. WLAN frames have *four* address fields
6. 802.11 supports power saving mode

# Acronyms

❑ Ack	Acknowledgement
❑ AP	Access Point
❑ APSD	Automatic Power Save Delivery
❑ BO	Backoff
❑ BSA	Basic Service Area
❑ BSS	Basic Service Set
❑ BSSID	Basic <a href="https://eduassistpro.github.io/">https://eduassistpro.github.io/</a>
❑ CA	Collision
❑ CD	Collision Detection
❑ CDMA	Code Division Multiple
❑ CFP	Contention Free Period
❑ CRC	Cyclic Redundancy Check
❑ CSMA	Carrier Sense Multiple Access
❑ CTS	Clear to Send
❑ CW	Congestion Window
❑ CWmax	Maximum Congestion Window

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat edu\_assist\_pro

# Acronyms (Cont)

- ❑ CWmin            Minimum Congestion Window
- ❑ DA              Destination Address
- ❑ DCF             Distributed Coordination Function
- ❑ DIFS            DCF Inter-frame Spacing
- ❑ DS              Direct Sequence
- ❑ ESA             Extended Service Area
- ❑ ESS             Extend
- ❑ FH              Freque
- ❑ FIFO            First In First Out
- ❑ GHz             Giga Hertz
- ❑ IBSS            Independent Basic Service Set
- ❑ ID              Identifier
- ❑ IEEE            Institution of Electrical and Electronics Engineers
- ❑ IFS             Inter-frame spacing
- ❑ ISM            Instrumentation, Scientific and Medical
- ❑ LAN             Local Area Network

**Assignment Project Exam Help**

<https://eduassistpro.github.io/>

Add WeChat **edu\_assist\_pro**

# Acronyms (Cont)

- MAC Media Access Control
- MHz Mega Hertz
- MIMO Multiple Input Multiple Output
- NAV Network Allocation Vector
- OFDM Orthogonal Frequency Division Multiplexing
- PCF Point Coordination Function
- PHY Physic <https://eduassistpro.github.io/>
- PIFS PCF in
- PS Power saving [Add WeChat edu\\_assist\\_pro](#)
- QoS Quality of Service
- RA Receiver Address
- RTS Ready to Send
- SA Source Address
- SIFS Short Inter-frame Spacing

# Acronyms (Cont)

- SS                      Subscriber Station
- TA                      Transmitter's Address
- TIM                      Traffic Indication Map
- WiFi                      Wireless Fidelity
- WLAN                      Wireless Local Area Network

**Assignment Project Exam Help**

<https://eduassistpro.github.io/>

Add WeChat edu\_assist\_pro