Software Requirements Specification (SRS) Project TJA3

Authors: Abhinay Devapatla, Gram Boyle, Muxing Dai, Eric Gabbard, Matthew

Crandall

Customer: William Milam

Instructor: Dr. Betty Cheng

1 Introduction

The Traffic Jam Assist (TJA) system is based on the Adaptive Cruise Control (ACC) system and expands on the ACC system to reduce the number of driver errors in traffic due to fatigue. This Software Requirements Specification (SRS) document outlines the requirements and functionality of the TJA system in depth.

1.1 Purpose

The purpose of an SRS document is to allow the customer to see the team's interpretation of the product and their approach to developing the desired product. This SRS document provides many diagrams that illustrate how the TJA system is intended to work. Specifically, this SRS document contains a domain model, use case diagram, sequence diagram, and a state diagram to allow the reader to become immersed in understanding the TJA system. This document is intended for stakeholders, such as the customer and developers, to understand all the components of the TJA system.

1.2 Scope

The TJA system allows the vehicle to perform autonomous operations on limited access highways with slow and stopped traffic. This system expands on the existing features of the ACC system with modifications for limited access highways. When the TJA system is active, it will adjust to the traffic flow by following the vehicle in front of the driver at a set distance, which the driver has three options to select from, and continuously calculated closing rate. The TJA system is intended to be a forward moving system that helps drivers navigate traffic on highways. The purpose of the TJA system is to reduce driver errors due to fatigue since the driver will no longer have to go between the accelerator and the brakes in traffic. The more often a driver does this, the more often they will make a mistake.

1.3 Definitions, acronyms, and abbreviations

- **SRS**: Software Requirements Specification, a document that describes the expected behavior of a software system.
- TJA: Traffic Jam Assist, the system this SRS document focuses on.
- ACC: Adaptive Cruise Control, the system the TJA system is based on.
- GNSS: Global Navigation Satellite System, a satellite system that provides positioning.
- **GPS**: Global Positioning System, communicates with GNSS to receive information about positioning.
- **Slip Condition**: The wheels are not moving at the same speed.

1.4 Organization

The rest of the document is organized in a way to allow optimal understanding of the TJA system. Section 2 will describe and provide all the appropriate details related to the system. Section 3 will enumerate all the requirements and global invariants. Section 4 illustrates multiple diagrams to effectively model the system. Section 5 includes a proof of concept to show a visual demonstration of how the system will behave.

2 Overall Description

The following sections will give an overview of the TJA system. Section 2.1 will give more context to the TJA system and describe any constraints. Section 2.2 will establish the major goals and objectives of the software. Section 2.3 will discuss what traits a user must possess to use this system. Section 2.4 will mention all the safety-critical properties and their associated constraints. Section 2.5 will go over all the assumptions and dependencies of the system. Section 2.6 will explain functionality that is outside the scope of this system at this time.

2.1 Product Perspective

The TJA system is a specialized system that works exclusively on highways with traffic. The TJA system adds additional features to the existing ACC system. The system interfaces directly into the vehicle's dashboard, allowing the driver to know when the TJA system is active. The driver can interact with the system via the "resume" and "cancel" buttons located on the steering wheel. Otherwise, the TJA system will activate on limited access highways with traffic and deactivate once the highway no longer has traffic, or if the vehicle is no longer on the highway. The hardware required includes a forward-looking radar and a forward-looking camera system. The software will be added onto the existing ACC system code and only be engaged when the criteria described above are met. Additionally, the TJA system is only a forward moving system. The TJA system will not be active during operations such as lane changing or reversing.

2.2 Product Functions

The TJA system will activate once the GPS system has determined that the vehicle is on a limited access highway with slow moving traffic. The system will proceed to use the forward-looking radar to identify a target vehicle directly in front of the driver's vehicle. Once the target vehicle has been identified, the TJA system will maintain a set distance, which the driver has three options to select from, and will control the closing rate to the target vehicle. If the target vehicle starts coming to a stop, the TJA system will slow down the driver's vehicle and bring it to a stop as well. When the target vehicle starts moving again, the TJA system will start moving the driver's vehicle while maintaining a set distance and controlling the closing rate. The TJA system has a forward-looking camera that enables lane following, keeping the driver's vehicle in the center of its lane. The driver can completely turn off the TJA system via the "cancel" button or allow the TJA system to re-activate via the "resume" button. Once the GPS system determines there is no longer any traffic or the vehicle is no longer on a limited access highway, the TJA system will shut down and the driver will get an alert on the dashboard.

2.3 User Characteristics

The driver is expected to have legally obtained a driver's license and be considered fit to drive. The driver is expected to be attentively watching the road as the TJA system is active. The TJA system is a partial autonomous system, not a full autonomous system, so the driver is expected to react to behaviors outside of the scope of the system, such as the target vehicle reversing. Additionally, the driver must be able to process and comprehend dashboard messages, know how to turn the system on and off, and know how to override the system if needed. The driver must have knowledge of how the ACC system works and how to operate the additional features of the TJA system.

2.4 Constraints

As mentioned above, the TJA system is a forward moving system so the system is constrained to only forward moving operations. Operations such as lane changing fall outside the scope of this system and become the user's duty to perform. A safety-critical property of the system is having a functional forward-looking radar and forward-looking camera. The radar is crucial in detecting a target vehicle, distance to the target vehicle, and the speed of the target vehicle, making it a vital component of the TJA system. If the radar becomes blocked or is faulty, the TJA system will disengage and give control back to the user. Another safety-critical property is the actuators in the vehicle controlling the autonomous operations. If the actuators are faulty or not working as intended, the TJA system must disengage and give control back to the user. The system constantly checks the tires, and if a slip condition is noticed, the system will entirely shut down. If the driver taps the brakes, the TJA system will disengage, and control is given to the user. It becomes the driver's duty from that moment onwards to perform the necessary operations. Lastly, if the driver taps the accelerator, the TJA system will disengage until the driver takes their foot off the gas.

2.5 Assumptions and Dependencies

A major underlying assumption is that the TJA system will be equipped to a car with a state-of-the-art ACC system. The TJA system is based off the ACC system; therefore, it can only be used in vehicles that already have an ACC system. Additionally, it is assumed that the ACC system comes with a forward-looking radar and a forward-looking camera. It is assumed that the TJA system will only activate on limited access highways with traffic. Lastly, it is assumed that the TJA system only engages if all the components, radars, and cameras are functioning as intended.

2.6 Approportioning of Requirements

The TJA system will not take weather into consideration when determining what speed to set for the driver's vehicle. For example, if the roads are covered in sleet and ice, the TJA system will not reduce the vehicle speed by half to adjust for this. The TJA system will base its speed off the target vehicle and only adjust its speed to the actions of the target vehicle. Additionally, lane changing is out of the scope of the TJA system. If the user decides to merge lanes, the TJA system will disengage and reengage once the lane changing has been complete.

3 Specific Requirements

This section provides a hierarchical enumeration of the requirements of the system. These requirements include software, hardware, and safety requirements of the system.

- 1. The Traffic Jam Assist (TJA) system must be based on the Adaptive Cruise Control (ACC) system.
 - 1.1. The TJA system uses a forward-looking radar to identify a target vehicle and to determine the closing rate to the target vehicle, which ideally should be zero.
 - 1.1.1. If the closing rate is zero, the distance between the driver's vehicle and the target vehicle is not changing, and no action is needed.
 - 1.1.2. If the closing rate is positive, it means that the closing distance between the driver's vehicle and target vehicle is growing, and no action is needed.
 - 1.1.3. If the closing rate is negative, it means that the closing distance between the driver's vehicle and target vehicle is decreasing, and the driver's vehicle needs to slow down and maintain a set distance.
 - 1.1.3.1. The driver must have 3 selections for the set distance: 1 car length distance (default), 2 car length distance, or 3 car length distance.
 - 1.2. The TJA system uses a forward-looking camera to allow lane following that keeps the vehicle in the middle of the lane it is in.
 - 1.3. The TJA system's lane following feature will resist, but not to the point of not allowing it, the driver's attempt to change lanes without signaling to an extent.
 - 1.3.1. The turn signal will disable the lane following system to allow the driver to successfully merge into another lane.
- 2. The TJA system will add autonomous operations to adjust to traffic flow by following or stopping behind a target vehicle in the case of slow and stopped traffic on limited access highways.
 - 2.1. If the target vehicle is not moving, the TJA system will stop the driver's vehicle a set distance behind the target vehicle. Specifically, the driver's vehicle must slow down and maintain a reasonable distance that allows the driver to see the rear tires of the target vehicle (default is 1 car length).
 - 2.2. If the target vehicle is moving, the TJA system will start the driver's vehicle and follow the target vehicle at a set distance and control the closing rate.

 Specifically, the vehicle must follow at a set distance (default is 1 car length) and continuously recalculate the closing rate.
- 3. The TJA system will only be activated when the GPS tracking device indicates that the vehicle is on a limited access highway and that there is traffic on the highway.
 - 3.1. The GPS tracking device must be able to communicate with the Global Navigation Satellite System (GNSS) network [1, pp. 2] to retrieve information from the GNSS network about the traffic on the road and the vehicle's current position, which is checked against the vehicle's internal database of highways.
 - 3.2. The TJA system will ensure end-to-end encryption when the GPS communicates with the GNSS and when the GPS communicates with the internal database.

- 4. The TJA system will alert the driver of warnings when the closing distance is negative, the vehicle speed is too high, or the vehicle is not lane following.
 - 4.1. The TJA system will display warnings on the dashboard.
 - 4.2. The TJA system will have an auditory warning system consisting of beeps.
- 5. The TJA system is purely a forward moving system.
 - 5.1. The TJA system will not be active during lane changing.
 - 5.1.1. After lane changing, the TJA system will resume at that set speed if there are no new target vehicles.
 - 5.1.2. After lane changing, the TJA system will recalculate the set speed and closing distance after identifying a new target vehicle.
 - 5.2. If the target vehicle starts reversing, it falls outside the scope of the TJA system and becomes the driver's duty to make the appropriate action. In other words, the TJA system will disengage if the target vehicle shifts into reverse.
 - 5.3. If there are inclement weather conditions, it falls outside the scope of the TJA system and becomes the driver's duty to make the appropriate action.
- 6. The TJA system will make sure the driver is attentively paying attention to the road.
 - 6.1.1. Tactile feedback will send vibrations to the steering wheel to determine if the driver's hands are on the wheel.
 - 6.1.2. A driver-facing infrared camera will determine if the driver is looking at the road.
- 7. If the TJA system needs to disengage, it will inform the driver on the dashboard and deactivate.
 - 7.1. The TJA system will disengage if the radar sensor is faulty or blocked.
 - 7.2. The TJA system will disengage if the system detects a slip condition.
 - 7.3. The TJA system will disengage if the forward-looking camera is faulty.
 - 7.4. The TJA system will disengage if the driver is not paying attention to the road.
- 8. The driver will have control over the TJA system.
 - 8.1. If the driver taps the brakes, the ACC system will disable, and as such, the TJA system.
 - 8.2. If the driver accelerates, the TJA system will allow them to, but after they take their foot off the accelerator, the system returns to the set speed.
- 9. The buttons "resume" and "cancel" will be installed to the steering wheel to resume/cancel the TJA system.
 - 9.1. The resume button will bring the vehicle back to its previous set speed.
 - 9.2. The cancel button will turn the system off, including the ability to resume.

Global Invariants of the TJA system

- **1.** The vehicle shall not exceed 10 mph if a target vehicle is detected within 15 feet.
- 2. The vehicle shall maintain a distance of at least 1 car length to the target vehicle.
- **3.** The vehicle shall never surpass 80 mph when the TJA system is active.
- **4.** The driver shall be able to select a set distance.
- **5.** The TJA system is only a forward moving system.

4 Modeling Requirements

This section contains models that help to better illustrate and describe the TJA system. This section included a use-case diagram, domain model, sequences diagrams, and state diagrams.

4.1 Use Case Diagram

The use case diagram in **Figure 1** below illustrates all the use cases of the TJA system. The system boundary is represented by the rectangle, the actors are represented by the stick figures, the use cases are represented by circles, and associations between actors and use cases are represented by lines. Some use cases have a unique relationship indicated by "<include>" or "<extend>". When use cases have a piece of behavior that is similar across them, the use cases include this common use case. When use cases are similar to other use cases, but have additional functionality, the use cases extend for the similar use case. The system boundary for this use case diagram is the TJA system.

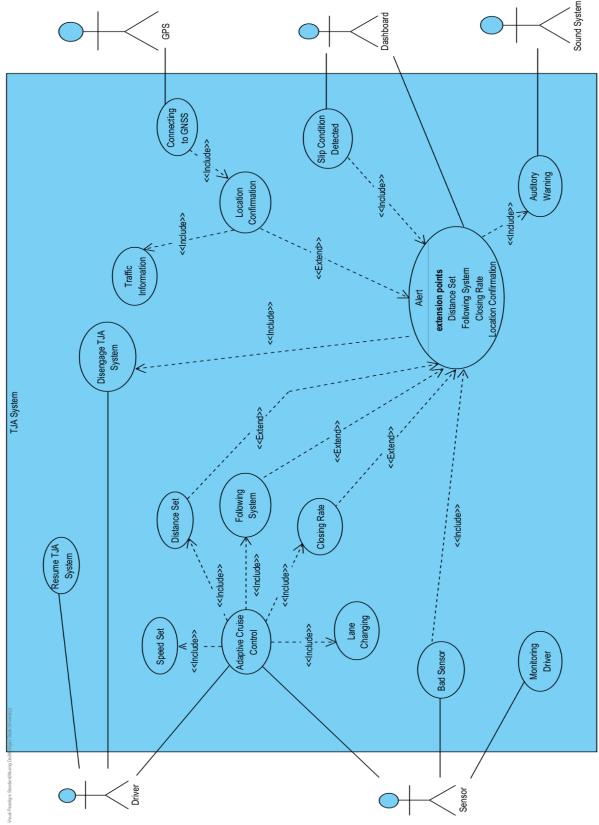


Figure 1: Use Case Diagram for TJA system

The tables provided below go further into detail about the use cases.

Use Case:	Resume TJA System
Actors:	Driver
Description:	The TJA system cannot restore itself, and the driver can restore it manually
	through the buttons on the steering wheel.
Type:	Primary and essential
Include:	None
Extend:	None
Cross-refs:	5.3, 9, 9.1
Use cases:	None

 Table 1: Resume TJA System

Use Case:	Disengage TJA System
Actors:	Driver and System
Description:	TJA will issue a warning and then self-disable in many situations, such as
	invalid highway, bad sensor, slip condition detected, etc. Drivers can also
	disable TJA by decelerating or manual button.
Т	TO 1 1 1 1 1
Type:	Primary and essential
Include:	None Primary and essential
	·
Include:	None

 Table 2: Disengage TJA System

Use Case:	Adaptive Cruise Control
Actors:	Driver, Sensor, System
Description:	TJA is a higher-level system based on ACC, with completed ACC
	functions.
Type:	Primary and essential
Include:	Speed Set, Distance Set, Following System, Closing Rate, Lane Changing
Extend:	None
Cross-refs:	1
Use cases:	Speed Set, Distance Set, Following System, Closing Rate, Lane Changing

 Table 3: Adaptive Cruise Control

Use Case:	Speed Set
Actors:	Driver, Sensor, System
Description:	Driver can set a default speed for TJA, which should be less than 80 mph.
Type:	Primary and essential
Include:	None
Extend:	None
Cross-refs:	8.2
Use cases:	None

Table 4: Speed Set

Use Case:	Distance Set
Actors:	Driver, Sensor, System
Description:	Driver can set the distance between vehicle and front car. There are 3
	options, one car length(default), two car length, three car length. When
	distance is too close there will be an alert.
Type:	Primary and essential
Include:	None
Extend:	Alert
Cross-refs:	1.1.3.1
Use cases:	Alert

 Table 5: Distance Set

Use Case:	Following System
Actors:	Driver, Sensor, System
Description:	The TJA system will add autonomous operations to adjust to traffic flow by following or stopping behind a target vehicle in the case of slow and stopped traffic on limited access highways. If the target vehicle starts reversing, it falls outside the scope of the TJA system and becomes the driver's duty to make the appropriate action.
Type:	Primary and essential
Include:	None
Extend:	Alert
Cross-refs:	1.2, 1.3, 2, 2.1, 2.2, 5.2,
Use cases:	Alert

 Table 6: Following System

Use Case:	Closing Rate
Actors:	Driver, Sensor, System
Description:	The TJA system uses a forward-looking radar to identify a target vehicle and to determine the closing rate to the target vehicle, which ideally should be zero. If the closing rate is negative, it means that the closing distance between the driver's vehicle and target vehicle is decreasing, and the driver's vehicle needs to slow down and maintain a set distance.
Type:	Primary and essential
Include:	None
Extend:	Alert
Cross-refs:	1.1, 1.1.1, 1.1.2, 1.1.3, 4
Use cases:	Alert

 Table 7: Closing Rate

Use Case:	Lane Changing
Actors:	Driver, Sensor, System
Description:	The TJA system will not be active during lane changing. If the user
	decides to merge lanes, the TJA system will disengage and reengage once
	the lane changing has been complete.
Type:	Primary and essential
Include:	None
Extend:	None
Cross-refs:	1.3.1, 5.1, 5.1.1, 5.1.2
Use cases:	None

 Table 8: Lane Changing

Use Case:	Bad Sensor
Actors:	Sensor
Description:	The TJA system will disengage if the radar sensor is faulty or blocked.
	There will be an alert to warn driver.
Type:	Primary and essential
Include:	Alert
Extend:	None
Cross-refs:	7.1, 7.3
Use cases:	Alert

Table 9: Bad Sensor

Use Case:	Monitoring Driver
Actors:	Sensor
Description:	A driver-facing infrared camera will determine if the driver is looking at
	the road.
Type:	Primary and essential
Include:	None
Extend:	None
Cross-refs:	6, 6.1.1, 6.1.2, 7.4
Use cases:	None

 Table 10: Monitoring Driver

Use Case:	Alert
Actors:	Dashboard, Sound System, GPS, Sensor
Description:	The alarm is the precursor to disabling TJA. There are many possible
	reasons for the alarm, and most of them are the same as the reason for
	disengaging TJA.
Type:	Primary and essential
Include:	Auditory Warning, Disengage TJA System
Extend:	None
Cross-refs:	4.1, 7
Use cases:	Auditory Warning, Disengage TJA System

Table 11: Alert

Use Case:	Auditory Warning
Actors:	Sound System
Description:	The car's own sound system can make a beep sound to remind the driver
	when alert.
Type:	Primary
Include:	None
Extend:	None
Cross-refs:	4.2
Use cases:	None

Table 12: Auditory Warning

Use Case:	Slip Condition Detected
Actors:	Dashboard
Description:	When slip occurs due to conditions such as severe weather, the dashboard will display and issue an alert while disabling TJA.
Type:	Primary and essential
Include:	Alert
Extend:	None
Cross-refs:	7.2
Use cases:	Alert

Table 13: Slip Condition Detected

Use Case:	Connecting to GNSS
Actors:	GPS
Description:	The TJA system will connect to GNSS via GPS to get the latest road and
	traffic conditions.
Type:	Primary and essential
Include:	Location Confirmation
Extend:	None
Cross-refs:	3.1, 3.2
Use cases:	Location Confirmation

Table 14: Connecting to GNSS

Use Case:	Location Confirmation
Actors:	GPS
Description:	By connecting to GPS, you can easily position yourself. If the highway
	you are on is not available, TJA will sound an alert and disengage itself.
Type:	Primary and essential
Include:	Traffic Information
Extend:	Alert
Cross-refs:	3
Use cases:	Traffic Information, Alert

Table 15: Location Confirmation

Use Case:	Traffic Information
Actors:	GPS
Description:	If the highway you are on is available, TJA will provide you with traffic
	information through GPS to better assist driving.
Type:	Primary
Include:	None
Extend:	None
Cross-refs:	3.1, 3.2
Use cases:	None

 Table 16: Traffic Information

4.2 Domain Model

The domain model, in **Figure 2** below, illustrates all of the relationships of the TJA system. The domain model was developed using UML class diagram notation. The classes are represented by blue boxes. The top rectangle of the class is the name of the class, and the bottom rectangle contains attributes and functions. There are many types of relationships between the classes. The line between classes is an association. If there is an empty diamond on one side of the association, it is composition. If there is a filled diamond on one side of the association, it is aggregation. Finally, the association has multiple on each side, indicating a quantifiable relationship.

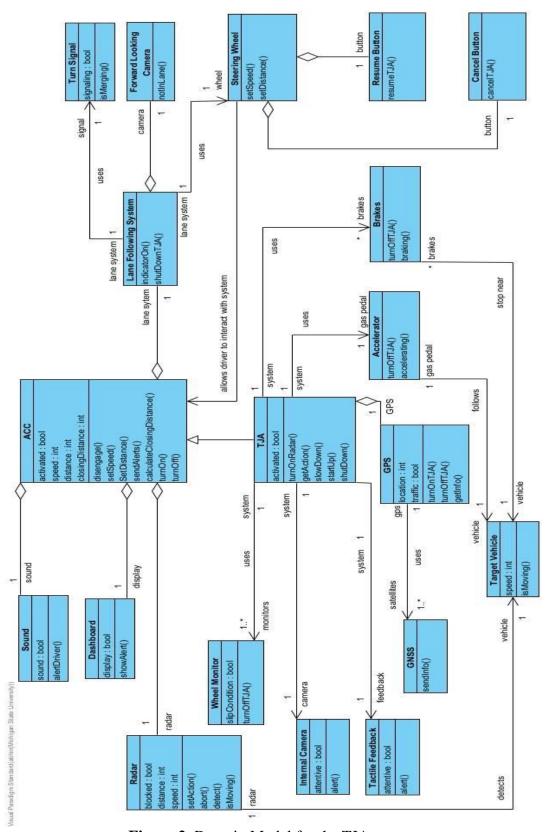


Figure 2: Domain Model for the TJA system

The data dictionary provided below goes further into detail about the domain model.

Element Name	Description
Brakes	Pressed by the operator to take control of the
	system. Brakes turn off the TJA system. TJA
	systems uses the brakes when closing speed
	is negative.
Attributes	None
Operations	turnOffTJA()
	braking()
Relationships	None
	TJA. TJA uses the brakes to stop/slow the
	vehicle if the closing speed is negative. The
	Brake pedal also disengages the TJA if the
	driver uses it
UML Extensions	None

Table 17: Brakes

Element Name	Description
Accelerator	Pressed by the operator if they want to
	accelerate. Stops the TJA system
	momentarily but it resumes once accelerator
	is released. TJA system uses the accelerator
	if target car is further away than the set
	distance.
Attributes	None
Operations	turnOffTJA()
	accelerating()
Relationships	None
	TJA. TJA uses the accelerator to speed up
	the vehicle if the target vehicle is more than
	the set distance away. Also, the accelerator
	pedal is pushed by the operate to disengage
	and resume the TJA.
UML Extensions	None

Table 18: Accelerator

Element Name	Description
ACC	This system that the TJA is derived from. The
	user sets a speed and distance using the
	dashboard and steering. Then using radars,
	the ACC will keep the car within that set
	distance from the target car.
Attributes	activated: bool
	speed: int
	distance:int
	closingDistance: int
Operations	disengage()
	setSpeed()
	setDistance()
	sendAlerts()
	calculateClosingDistance()
	turnOn()
	turnoff()
Relationships	Dashboard. Aggregation. Uses the dashboard
	to send alerts to the driver.
	Rader. Aggregation. Radar lets the ACC
	know whether to break or accelerate based off
	target vehicle.
	Lane Following System. Aggregation. The
	ACC uses the Lane Following system to stay
	within the lanes.
	Brakes Usage. Uses the brakes to maintain
	the set following distance
	Accelerator. Usage. Uses the accelerator to
	keep set following distance.
	None
UML Extensions	None

Table 19: ACC

Element Name	Description
Dashboard	The dashboard is the screen located behind
	the steering wheel and it is used to deliver
	alerts and messages to the driver.
Attributes	display: bool
Operations	showAlert()
Relationships	ACC. Aggregation. The ACC sends alerts to
	the dashboard to be displayed to the driver
UML Extensions	None

Table 20: Dashboard

Element Name	Description
Sound	The sound is used to alert the driver. This
	sound is activated when the TJA system is
	disengaged.
Attributes	sound: bool
Operations	alertDriver()
Relationships	ACC. Aggregation. The ACC system alerts
	the driver with sounds when something goes
	wrong. For example, if a camera is covered,
	the driver will be alerted with a sound.
UML Extensions	None

Table 21: Sound

Element Name	Description
Radar	The radar is used to detect vehicles and
	objects in front of the driver's vehicle. If the
	radar is blocked, the ACC system should turn
	off
Attributes	blocked: bool
	speed: int
	distance: int
Operations	setAction()
	abort()
	detect()
	isMoving()
Relationships	ACC. Aggregation. ACC uses the radar to
	spot objects up ahead. If a radar is blocked,
	the ACC should turn off.
	Target Vehicle. Usage. Uses the target
	vehicle to calculate the target's location.
UML Extensions	None

Table 22: Radar

Element Name	Description
Wheel Monitor	Used to check the wheels for slippage. The
	TJA system will turn off if slippage is
	detected.
Attributes	slipCondition: bool
Operations	turnoffTJA()
Relationships	TJA. Usage. Alerts the TJA if a slip
	condition is present and turns the TJA off.
UML Extensions	None

Table 23: Wheel Monitor

Element Name	Description
Internal Camera	Checks the driver to see where his eyes are
	looking. Determines if the driver is active
	and paying attention to the road. If the driver
	is not, it should send a notification to the
	system.
Attributes	attentive: bool
Operations	alert()
Relationships	TJA. Usage. Alerts the TJA if the driver is
	not actively looking at the road.
UML Extensions	None

Table 24: Internal Camera

Element Name	Description
Tactile Feedback	Determines if the driver is active and
	attentive based off the pressure on the
	steering wheel. The TJA should be alerted if
	the driver does not have his hands on the
	wheel for an extended period.
Attributes	attentive: bool
Operations	alert()
Relationships	TJA. Usage. Alerts the TJA if the driver is
	not actively using the steering wheel.
UML Extensions	None

 Table 25: Tactile Feedback

Element Name	Description
Lane Following System	The lane following system uses cameras and
	the steering wheel to keep the car in the lane.
	If the cameras notice that the car is going
	outside marked lanes and a turn signal is not
	being used, the wheel will steer the car back
	into the lane
Attributes	None
Operations	indicatorOn()
	shutDownTJA()
Relationships	Steering Wheel. Usage. Turns the steering
	wheel to stay in lane.
	Turn Signal. Usage. Lane following system
	only uses the wheel if the turn signal is not
	active.
	Camera. Aggregation. Uses the camera to
	check if the vehicle is within the lanes.
UML Extensions	None

 Table 26: Lane Following System

Element Name	Description
Forward-Looking Camera	This is the camera that is used to check the
	lane marking position relative to the car.
Attributes	None
Operations	notInLane()
Relationships	Lane Following System. The camera notifies
	the Lane Following System if the car strays
	from the lane markers.
UML Extensions	None

Table 27: Camera

Element Name	Description
Turn Signal	The turn signal is used by the driver to warn
	other drivers that they are turning or
	changing lanes. The turn signal is also used
	to alert the lane following system that the car
	is turning intentionally, and it should not
	override the steering wheel.
Attributes	signaling: bool
Operations	isMerging()
Relationships	Lane Following System. Usage. The turn
	signal is used to alert the lane following
	system that the car is turning intentionally,
	and it should not override the steering wheel
UML Extensions	None

Table 28: Turn Signal

Element Name	Description
Steering Wheel	Used by the driver to direct the car. The lane
	following system can also override the
	steering wheel if the car is leaving the lane.
Attributes	None
Operations	setSpeed()
	setDistance()
Relationships	Lane Following System. Usage. If it is
	determined by the Lane Following System
	that the vehicle is unintentionally leaving its
	lane, the lane following system will override
	the steering wheel to reposition the car.
	ACC. Usage. Allows the user to interact with
	the ACC. The driver sets the speed and
	following distance using the steering wheel
	Resume Button. Aggregation. The resume
	button is used to resume the ACC through
	the steering wheel.
	Cancel Button. Aggregation. The cancel
	button is used to cancel the ACC through the
	steering wheel.
UML Extensions	None

 Table 29: Steering Wheel

Element Name	Description
Resume Button	Used by the driver to reactivate the
	ACC/TJA. Located on the steering wheel
Attributes	None
Operations	resumeTJA()
Relationships	Steering Wheel. Aggregation. The resume
	button is used to resume the ACC through
	the steering wheel.
UML Extensions	
Element Name	Description
Cancel Button	Used by the driver to cancel the ACC/TJA.
	Located on the steering wheel
Attributes	None
Operations	cancelTJA()
Relationships	Aggregation. The resume button is used to
	cancel the ACC through the steering wheel.
UML Extensions	None

Table 30: Resume and Cancel Button

Element Name	Description
TJA	The primary system that deviated from the
	ACC. Intended to help drivers in stop and go
	traffic. Should automatically activate when
	on a highway with traffic.
Attributes	activated: bool
Operations	turnOnRadar()
	getAction()
	slowDown()
	startUp()
	shutDown()
Relationships	GPS. Aggregation. The GPS will
	automatically turn on the TJA system if it
	determined that the vehicle is on a highway
	with traffic.
	Wheel Monitors. Usage. The wheel monitors
	will automatically turn off the TJA if a slip
	condition is identified.
	Brakes Usage. The system will override the
	brakes if it is determined that there is a
	negative closing distance. Brakes also turn
	system off if they are activated by the user.
	Accelerator. Usage. The system will override
	the accelerator if it is determined that there is
	a positive closing distance. Accelerators also
	temporarily turn the system off if they are
	activated by the user.
UML Extensions	None

Table 31: TJA

Element Name	Description
GPS	The GPS is used to find the vehicle's
	position as well as determine if the vehicle is
	on a highway with traffic. If the vehicle is on
	a highway with traffic, the TJA will be
	activated
Attributes	location: int
	traffic: bool
Operations	turnOnTJA()
	turnOffTJA()
	getInfo()
Relationships	TJA. Aggregation. The GPS determines if
	the vehicle is on a limited access highway
	and will turn on TJA if that is the case. It will
	also turn off the TJA when the car exits a
	traffic situation.
	GNSS. Communication. Communicates with
	the GNSS to determine the vehicle's location
	and if the vehicle is on a limited access
	highway.
UML Extensions	
Element Name	Description
GNSS	The Global Navigation Satellite System.
	Sends vehicle location and traffic
	information to the GPS system.
Attributes	None
Operations	sendInfo()
Relationships	GPS. Communication. Sends vehicle location
	and traffic information to the GPS system.
UML Extensions	None

Table 32: GPS and GNSS

Element Name	Description
Target Vehicle	The target vehicle determines the actions of
	the TJA and the user's car.
Attributes	speed: int
Operations	isMoving()
Relationships	Radar. The radar locates the target vehicle
	and sends this information to the TJA
	Brakes. The brakes are activated based off
	the speed of the target vehicle
	Accelerator. The accelerator is activated
	based off the speed and location of the target
	vehicle.
UML Extensions	None

Table 33: Target Vehicle

4.3 Sequence Diagram

In this section, six sequence diagrams are illustrated to further elaborate on how specific scenarios are handled in the TJA system. The lifeline is indicated by the blue box with a line going out of it. The messages between objects are indicated by the arrow between the dotted lines. The messages are ordered in the order they occur.

Figure 3, below, shows the scenario of activating the TJA system. The GPS system lets the TJA system know its current location and traffic at that location, dictating when the TJA system should activate. After activation, the TJA system turns on the forward-looking radar and determines the target vehicle in front of the driver's vehicle.

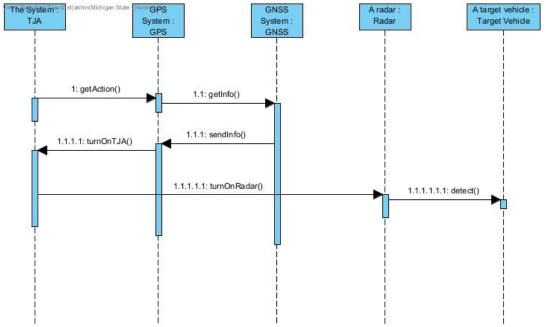


Figure 3: Scenario 1

Figure 4, below, shows the scenario of the TJA system slowing down the driver's vehicle. The radar determines if the target vehicle is moving or not. After the radar lets the TJA system know that the target vehicle is not moving, the TJA system engages the brakes to slow down and come to a stop.

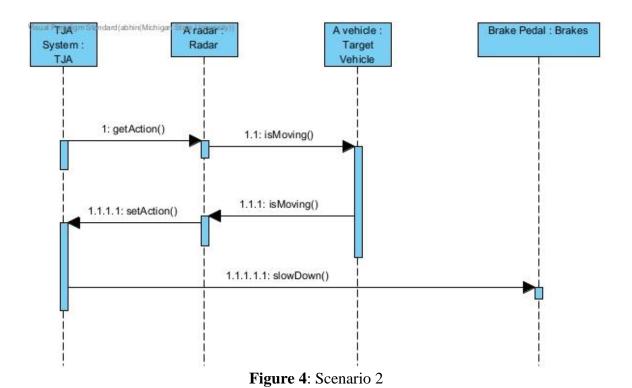


Figure 5, below, shows the scenario of the TJA system starting up the driver's vehicle. The radar determines if the target vehicle is moving or not. After the radar lets the TJA system know that the target vehicle is moving, the TJA system engages the accelerator to speed up and maintain a set distance to the target vehicle.

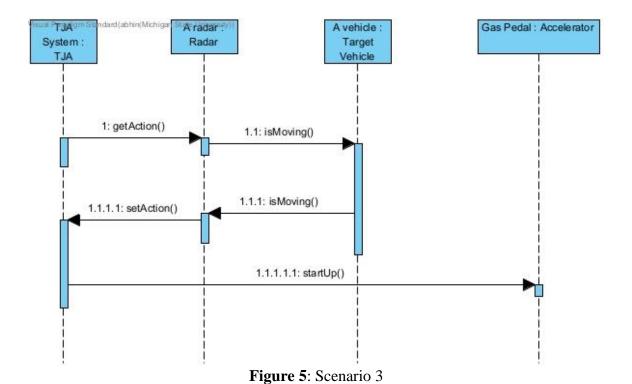


Figure 6, below, shows the scenario of the TJA system deactivating when the driver wants to merge lanes. The lane following system will try to steer the vehicle back into the lane if the indicator is not applied. Once the indicator is applied, the lane following system will cause the TJA system to shut down because the vehicle is about to merge.

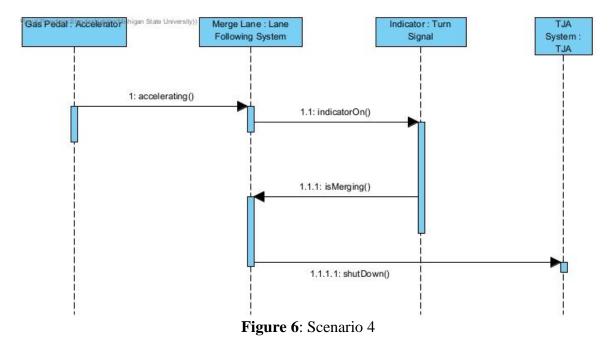


Figure 7, below, shows the scenario of the TJA system shutting down due to a radar issue. The radar determines if the target vehicle is moving or not. If the radar is giving

faulty information or is being blocked by inclement weather conditions, the TJA system will shut down.

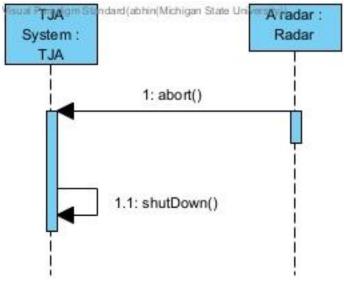


Figure 7: Scenario 5

Figure 8, below, shows the scenario of deactivating the TJA system. The GPS system lets the TJA system know its current location and traffic at that location, dictating when the TJA system should activate. If the GPS indicates that the vehicle is no longer on a limited access highway with traffic, the TJA will turn itself off.

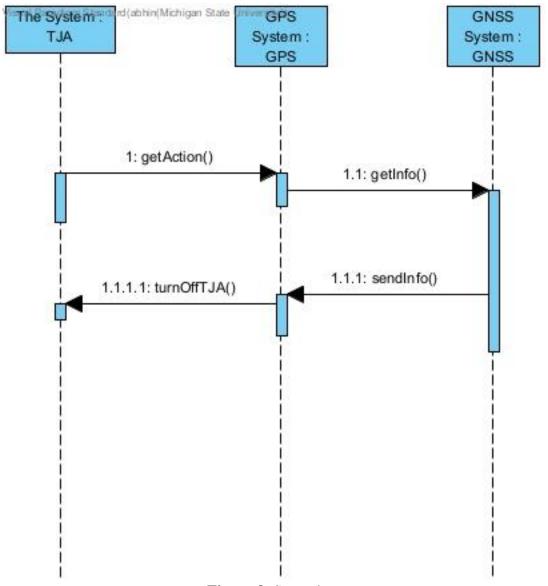


Figure 8: Scenario 6

4.4 State Diagram

In this section, state machines are illustrated to show how states change between the different components. State machines are, in fact, another method to understand scenarios.

Figure 9, below, the TJA system turns on only on limited access highways with traffic and turns off when it is no longer on highways with traffic. Additionally, the TJA system will turn off if there are any issues with the radar. This state diagram references scenarios 1, 5, and 6.

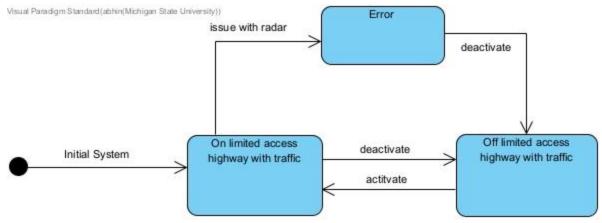


Figure 9: State Diagram of on/off

Figure 10, below, the TJA system initially adjusts to the traffic flow by stopping behind the idle target vehicle. Once the target vehicle starts moving, the driver's vehicle also starts following at a user set distance. Once the target vehicle starts coming to a stop, the driver's vehicle also starts coming to a stop. This state diagram references scenarios 2 and 3.

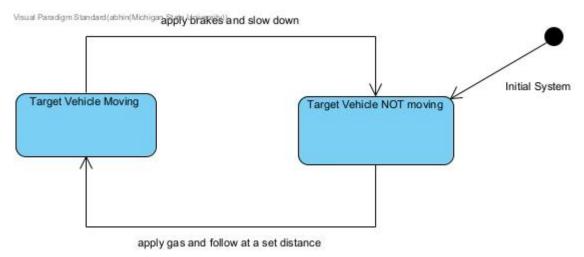


Figure 10: State Diagram of accelerator and brakes

Figure 11, below, the TJA system is initially already active. When the user decides to merge lanes by signaling, the TJA system will deactivate. When the vehicle is back in the center of its lane, the TJA system will activate. This state diagram references scenario 4.




Figure 11: State Diagram of Lane Following

5 Prototype

This prototype will show how the TJA system performs in the scenarios mentioned above. The prototype will allow the reader of this document to have a visual reference to all the components of the TJA system and have a deeper understanding of the system.

5.1 How to Run Prototype

To access the prototype, go to https://www.cse.msu.edu/~gabbard3/Prototype/index.html. By clicking the link, the prototype will run in your browser. The prototype will work on all operating systems. However, it may take longer to load the prototype in some browsers. For example, the prototype may take upward of 3 minutes to run on Safari.

5.2 Sample Scenarios

Figure 12, below, is the scenario of activating the TJA system. The GPS system lets the TJA system know its current location and traffic at that location, dictating when the TJA system should activate. After activation, the TJA system turns on the forward-looking radar and determines the target vehicle in front of the driver's vehicle.



Figure 12: Scenario 1

Figure 13, below, shows the scenario of the TJA system slowing down the driver's vehicle and the scenario of the TJA system starting up the driver's vehicle. The radar determines if the target vehicle is moving or not. If the radar lets the TJA system know that the target vehicle is not moving, the TJA system engages the brakes to slow down and come to a stop. If the radar lets the TJA system know that the target vehicle is

moving, the TJA system engages the accelerator to speed up and maintain a set distance to the target vehicle.



Figure 13: Scenario 2 and 3

Figure 14, below, shows the scenario of the TJA system deactivating when the driver wants to merge lanes. The lane following system will try to steer the vehicle back into the lane if the indicator is not applied. Once the indicator is applied, the lane following system will cause the TJA system to shut down because the vehicle is about to merge.

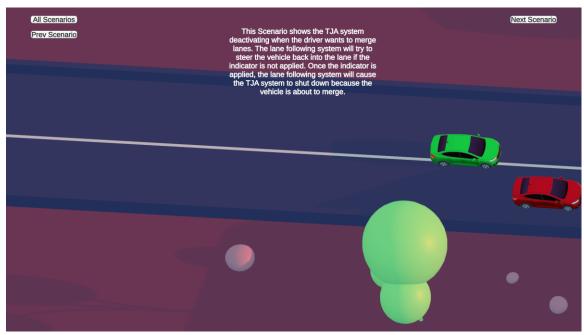


Figure 14: Scenario 4

Figure 15, below, shows the scenario of the TJA system shutting down due to a radar issue. The radar determines if the target vehicle is moving or not. If the radar is giving faulty information or is being blocked by inclement weather conditions, the TJA system will shut down.



Figure 15: Scenario 5

Figure 16, below, shows the scenario of deactivating the TJA system. If the GPS indicates that the vehicle is no longer on a limited access highway with traffic, the TJA will turn itself off.

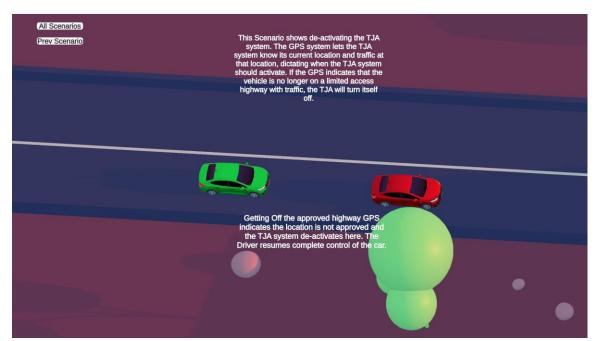


Figure 16: Scenario 6

6 References

[1] "What is GPS tracking and how does it work?", mixtelematics.com. [Online]. Available: https://www.mixtelematics.com/us/resources/blog/what-is-gps-tracking-and-how-does-it-work#:~:text=GPS%20Tracking%20System%20Basics,of%20the%20vehicle%20being%20tracked. [Accessed Oct. 28, 2022].

7 Point of Contact

For further information regarding this document and project, please contact **Prof. Betty H.C. Cheng** at Michigan State University (chengb at msu.edu). All materials in this document have been sanitized for proprietary data. The students and the instructor gratefully acknowledge the participation of our industrial collaborators.