

SmartMotion® Platform Introduction Training

TDK InvenSense Development Tool for Motion Sensors

March 2018

InvenSense

MEMS Sensor Business Group Sensor System Business Company [4/12/2018]



- SmartMotion Platform
 - ¬ 6 Axis, 7-Axis, 9-Axis, and 1-Axis development kits
 - DK-20602, DK-20648, DK-20680A, DK-20789, DK-20948, DK-10100
- SmartMotion Hardware Overview
 - Sensor specifications
 - Board layout and Connectors
 - Bring up the board
 - Purchasing the SmartMotion Platform
- SmartMotion Software
 - MotionLink
 - Embedded Motion Drivers (eMD)
 - External Sensor Connection
 - eMD Porting Guidelines



The SmartMotion Platform

March 2018

InvenSense



What is a Good development platform?

- Accelerates development of end products for faster market deployment
- "Out of the box" experience for quick set-up
 - Single board design, simple connection
 - Software included, easy to use collateral
 - No support required to bring up the platform
- Affordable; buy several platforms for parallel development
- Debugging features to assist in code development
- System prototyping and demonstration vehicle
- Ability to develop applications without actual hardware to expedite product delivery



TDK InvenSense SmartMotion® Platform



User Friendly Development Platform for TDK InvenSense 6-Axis, 7-Axis 9-Axis, and 1-Axis Motion Sensor

https://www.invensense.com/smartmotion-platform/

Contents	Description
Protective Packaging	The SmartMotion Platform come in a sturdy easy to carry box with protective foam. Please reference MEMS Handling Guide on how to prevent damage to MEMS sensors.
SmartMotion Platform	The SmartMotion board comes with the latest MotionLink software tool pre- flashed on the MCU. The board is configured with default jumper settings.
QuickStart Guide	Instructions to for platform bring up with links to software downloads




SmartMotion® Platform

- Single Board "Out of the Box" experience
 - Microchip G55 MCU + TDK InvenSense Motion Sensor
- On-board embedded debugger
 - Saves \$100-\$150 for external debugger
 - Simpler set up/no cables for debugger
 - Program and debug the MCU
- Affordable \$99 ASP
 - Customers can buy multiple platforms to speed up development
- Scalable design
 - Supports legacy and future motion sensors
 - WiFi/BLE support with external modules from Microchip
- Less than 15 minutes to set-up



Version B - 6 Axis Sensors

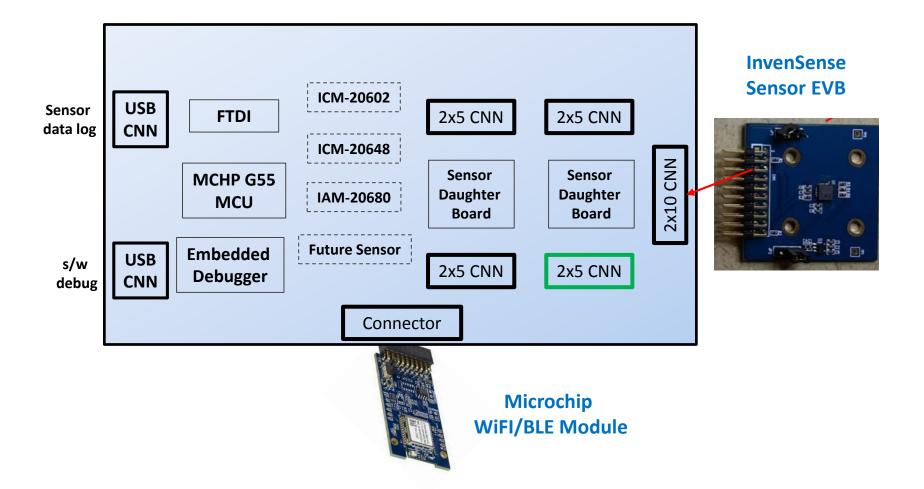

SmartMotion® 6-axis Platforms


Attracting Tomorrow



DK-20602

DK-20648


DK-20680A

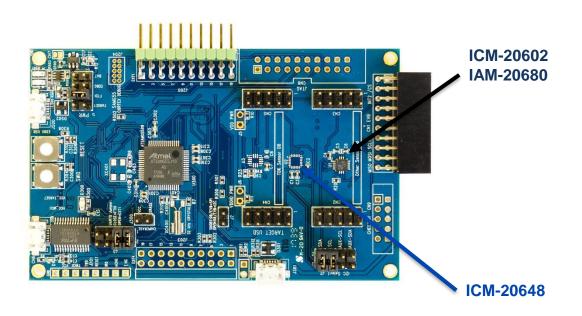





Version C - 1, 7 and 9 axis Sensors

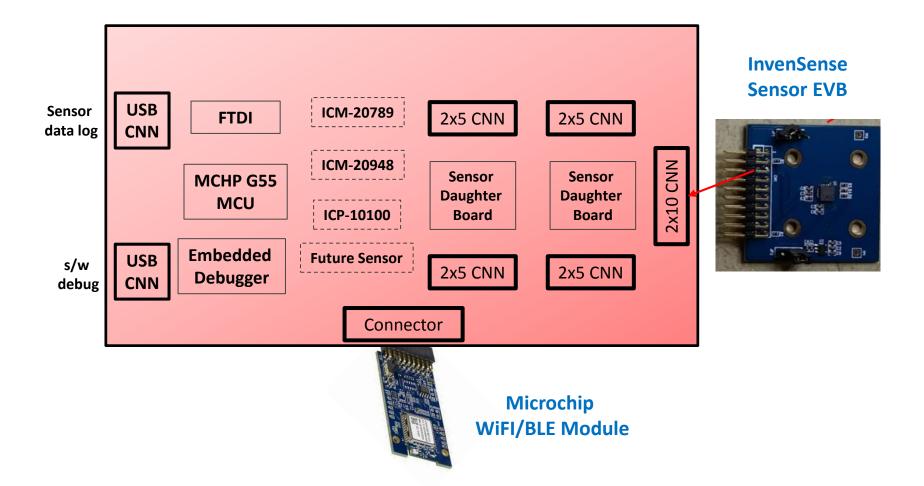




SmartMotion® 7, 9, 1-axis Platforms

DK-20789

DK-20948

DK-10100

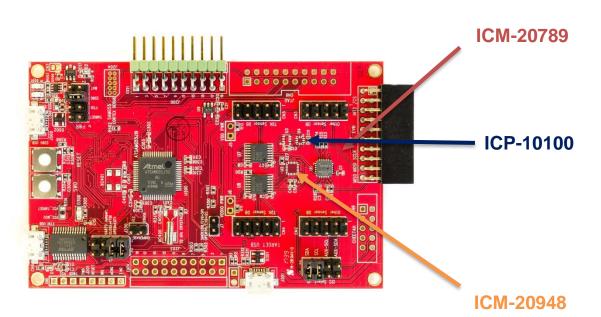





SmartMotion: Hardware and Selection

March 2018

InvenSense




SmartMotion[™] Platform – 6 Axis

DK-20602

DK-20648

DK-20680A

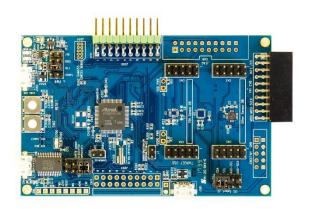


SmartMotion [™] Platform – 7, 9, and 1 Axis

DK-20789

DK-20948

DK-10100

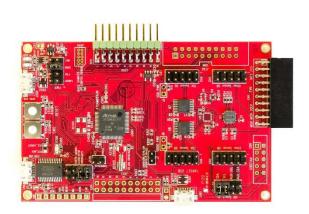



SmartMotion: 6 Axis Platforms

March 2018

InvenSense

DK-20602 Motion Sensor





ICM-20602

World's Best 6-axis Solution

Specifications

High Performance Gyro

■ Gyro Sensitivity Error: ±1%

■ Gyroscope Noise: ±4mdps/√Hz

High Performance Accel

Accel Noise: ±100µg/√Hz

■ Accel Sensitivity: ± 1%

Low Power Solution

Full Power: 2.79mALP Gyro/Accel Mode: 1.33mA

Gyroscope Full-Scale Range: ±250/500/1000/2000 deg/sec

Accelerometer Full-Scale Range: ±2/4/8/16g

Package Size: 3x3x0.75mm 16-Pin LGA

Software Available: Yes

Datasheet: ICM-20602 DataSheet

Applications

IoTAugmented Reality

Drone

Virtual Reality


Accelerometer



Samples: Now Production: Now

Solution Benefits

- Device includes 1K-byte FIFO to reduce traffic on serial bus interface
- Reduce power consumption by allowing the system processor to burst read sensor data and then go to LP mode
- Includes on chip, 16-bit ADC's, programmable digital filters, an embedded temp sensor, and programmable interrupts.

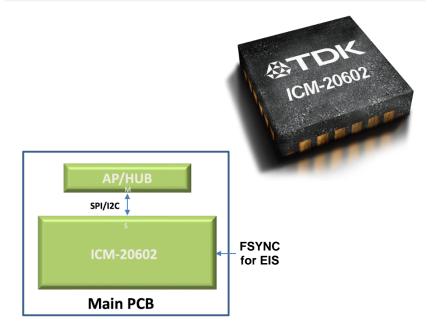

DK-20648 Motion Sensor





ICM-20648

6-Axis DMP Enabled Solution

Specifications

Digital Motion Processor (DMP) for autonomous operation

Programmable interrupts, filters, and 4k-byte FIFO

Gyroscope Full-Scale Range: ±250/500/1000/2000 deg/sec

Accelerometer Full-Scale Range: $\pm 2/4/8/16g$

Runtime Calibration

Operating Temperature Range: -40°C to 85°C

Operating Voltage Range:

VDD 1.71V - 3.6VADDIO. 1.71V - 3.6V

Host Interface: SPI 7MHz, I²C up to 400kHz

Package Size: 3x3x0.9mm 24-Pin QFN

Software Available: Yes

Datasheet: ICM-20648 DataSheet

Applications

IoT Wearables

EIS






Samples: Now **Production: Now**

Solution Benefits

- Provides Step Count, Activity Classifier, and B2S (Bring-to-See) Gestures tuned for wrist worn wearable applications.
- DMP offloads computation of motion processing algorithms from the host processor, improving system power performance
- Enhanced FSYNC functionality to improve timing for applications like EIS

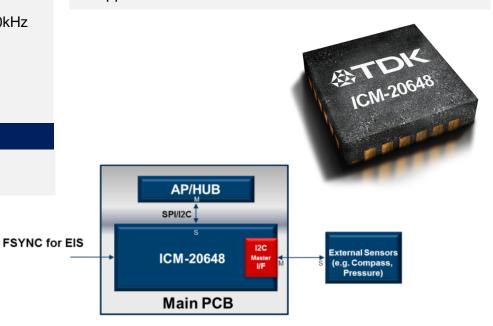

DK-20680A Motion Sensor





IAM-20680

6-Axis Automotive IMU Solution

Specifications

AEC-Q100 GRADE 3

High Performance and Accuracy

Gyroscope Full-Scale Range:

Accelerometer Full-Scale Range:

Accelerometer Full-Scale Range:

Low Noise

Gyro

Accel

Operating Temperature Range:

Operating Voltage Range:

VDD

VDDIO:

Host Interface:

Package Size:

0.005 dps/√Hz 135 ug/√Hz -40°C to 85°C

 $\pm 2/4/8/16g$

1.71V - 3.6V1.71V - 3.6V

SPI 8MHz, I²C up to 400kHz 3x3x0.75mm 16-Pin LGA

 $\pm 250/500/1000/2000 \text{ deg/sec}$

Datasheet: <u>IAM-20608 DataSheet</u>


Applications


Lift Gate Motion Detect

Navigation

- Image Stabilization
- Vehicle Tracking




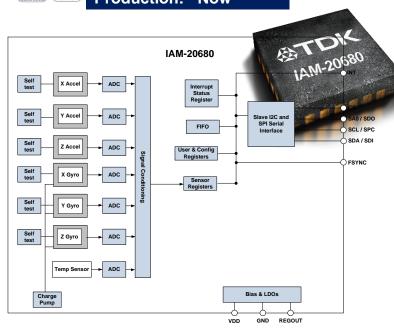

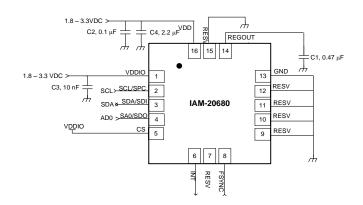


SmartMotion Platform – 6 Axis



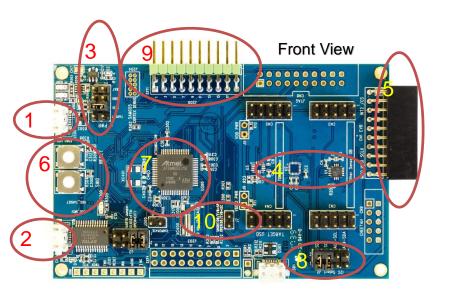

Back View

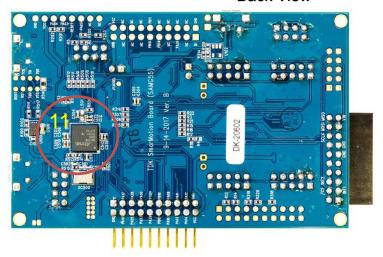

Main Hardware Features

- 1. EDBG USB Embedded Debugger USB output and/or power input
- 2. FTDI USB Main UART output for software. Default power input for SmartMotion board
- 3. PWR Source Select Can be configure to select power from different sources. By default it is set for FTDI input (5+6)
- 4. On-Board Motion Sensor U1 footprint for ICM-20602 and IAM-20680. U2 for ICM-20648
- 5. TDK Sensor EVB Connector Connector to attached other TDK-InvenSense Sensor EVB boards. Can only support 2.5V and above!
- 6. Reset and User Button Reset used for SAMG55 MCU, User Button optional for software use
- 7. ATMEL SAMG55 MCU ARM Cortex-M4 MCU, http://www.microchip.com/wwwproducts/en/ATSAMG55
- 8. Sensor I2C Selection selects sensor I2C slave source from primary I2C or AUX I2C. Default is primary (1+2, 3+4)
- 9. Extension Header for future support of other components such as BLE. Same header as Microchip's Xplained-Pro Board.
- 10. External EVB interface jumper to select I2C (open) or SPI (closed) interface to the external EVB if attached
- 11. Embedded Debugger for flashing main MCU and code tracing. No external JTAG needed!



SmartMotion: 9, 7, and 1 Axis Platforms

March 2018

InvenSense

DK-20948 Motion Sensor





ICM-20948

World's Best 9-axis Integrated Solution

Specifications

Digital Motion Processor (DMP) for autonomous operation

Gyroscope Full-Scale Range: ±250/500/1000/2000 deg/sec

Accelerometer Full-Scale Range: $\pm 2/4/8/16q$

Operating Voltage Range:

VDD 1.71V - 3.6VVDDIO: 1.71V - 1.95V

Host Interface: SPI 7MHz, I2C up to 400kHz

Software Available: Yes 2.5mW Low Power Mode: Compass FSR: $\pm 4900 \mu T$

Package Size: 3x3x.1mm 24-Pin QFN

Software Available: Yes

Datasheet: ICM-20948 DataSheet

Applications

IoT Wearable

Drone








Samples: **Production: Now**

Now

Solution Benefits

- Lowest power 9-axis solution in the world
- P2P compatible with the MPU-9250
 - 1/3 less power then previous solution
- Supports FSYNC for EIS

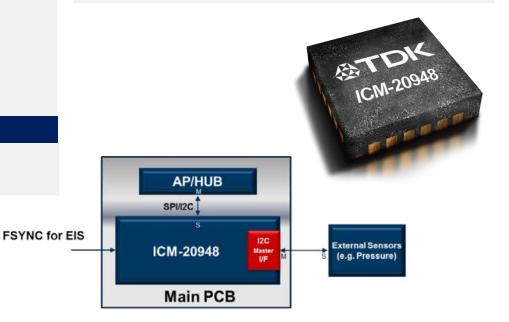

DK-20789 Motion Sensor





ICM-20789

World's Only 7-axis Integrated Solution

Specifications

Programmable interrupts, filters, and 4k-byte FIFO

■ Gyroscope Full-Scale Range: ±250/500/1000/2000 deg/sec

Accelerometer Full-Scale Range: ±2/4/8/16g

Pressure Operating Range: 300hPa – 1100hPa

Relative Pressure Accuracy: ±1Pa (10hPa change,700-1000hPa)

Absolute Pressure Accuracy: ±1hPa(300hPa-1100hPa,0°C-65°C)

Temperature Sensor Accuracy: ±0.4°C

Operating Temperature Range: -40°C to 85°C

Operating Voltage Range:

■ VDD 1.7V – 3.45V

■ VDDIO: 1.8V

Host Interface: SPI 8MHz, I²C up to 400kHz
 Packages: 4 x 4 x 1.365mm 24-pin LGA

Datasheet: ICM-20789 DataSheet

Applications

Drones
 Virtual Reality Headsets/Controllers

Motion-based controllers
 Toys

Mobile Phones






Samples: Now Production: Now

Solution Benefits

- Integrated & calibrated Accel+Gryo+Pressure+Temp sensor provides quick time-to-market in small footprint
- Allow host to sleep/save power while monitoring motion
- Detect Z-height of 8cm for accurate motion measurements: navigation, dead-reckoning, floor detection, fitness recognition
- Lower power consumption extends battery life
- Easy migration from 6-Axis motion sensor to 6-Axis+Pressure

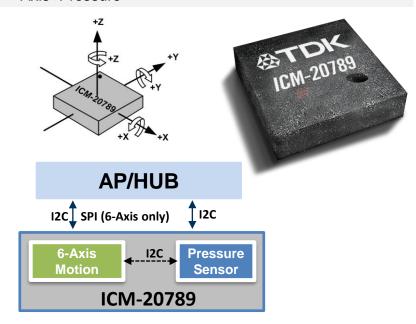

DK-10100 Pressure Sensor





ICP-101XX

Barometric Pressure and Temperature Sensor

Specifications

Pressure Operating Range: 300hPa – 1100hPa

Relative Pressure Accuracy: ±1Pa (10hPa change,700-

1000hPa)

Pressure Noise RMS and Current Consumption:

Low-Power Mode:
 Low-Noise Mode:
 Ultra Low-Noise Mode:
 3.2Pa at 1.3µA
 0.8Pa at 5.2µA
 0.4Pa at 10.4µA

Absolute Pressure Accuracy: ±1hPa (300hPa-1100hPa,0°C-

65°C)

Pressure Sensor Tempco: ±0.5Pa/°C (25°C-45°C, 100kPa)

:	Temp Opera		3-HOLE IPX8: 1.5m WATERPROOF	1-HOLE	5%
•	Host I	2x2x0.72mm 10L LGA	ICP-10100	ICP-10101	
		2x2.5x0.92mm 8L LGA	ICP-10110	ICP-10111	

Applications

Drones
 Elderly Fall Detection

Fitness Bands/TrackersSecurity Systems

Mobile Phones
 Hard Drives and Servers


Virtual Reality Headsets/Controllers



Samples: Now Production: Now


Solution Benefits

- Completely integrated & calibrated pressure and temp sensor IC provides quick time-to-market
- Detect Z-height of 8cm for accurate motion measurements: navigation, dead-reckoning, floor detection, fitness recognition
- Lower power consumption extends battery life or improved accuracy at same power consumption
- Three-0.025mm holes reduce liquid intrusion




Waterproof to 1.5m Depth

Single Hole Package





SmartMotion Platform: 9, 7, and 1 Axis

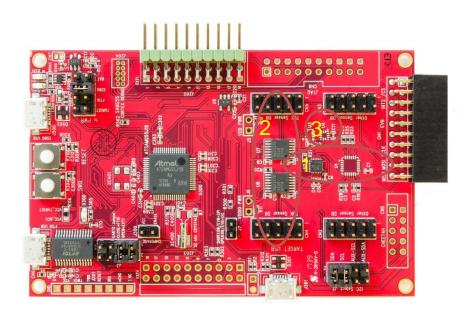

Main Hardware Features

Similar to 6 Axis Board except for the following

- 1. On-Board Motion Sensor U2 footprint for ICM-20948, U1 footprint for ICM-20789
- 2. Level Shifter change power level to 1.8V for the onboard sensor only. This is primary for ICM-20948 and ICM-20789 which requires this voltage.
- 3. On-Board Pressure Sensor U4 footprint for ICP-101XX



Purchasing a SmartMotion Platform

March 2018

InvenSense

SmartMotion Platform





The various SmartMotions are all easily purchasable on the following TDK authorized distributors for \$99 USD

Distribution	URL
DigiKey	https://www.digikey.com/products/en?keywords=DK-20602 https://www.digikey.com/products/en?keywords=DK-20648 https://www.digikey.com/products/en?keywords=DK-20789 https://www.digikey.com/products/en?keywords=DK-20948 https://www.digikey.com/products/en?keywords=DK-10100 https://www.digikey.com/products/en?keywords=DK-20680
Mouser	https://www.mouser.com/ProductDetail/TDK-InvenSense/DK-20602?qs=%2fha2pyFaduhNZMmO%252bgq7FleGYJzex0r%2fXwReFInHvmk%3d https://www.mouser.com/ProductDetail/TDK-InvenSense/DK-20648?qs=%2fha2pyFadujJjmbA7nNUZGTxFsSxqDf07Rnbb25ExHA%3d https://www.mouser.com/ProductDetail/TDK-InvenSense/DK-20789?qs=%2fha2pyFaduh%252bABQAIYPdnnCfE2STOIgdsUm5Ct8QAvw%3d https://www.mouser.com/ProductDetail/TDK-InvenSense/DK-20948?qs=%2fha2pyFadug3KcmzGqLOw0XYmkmY4huP93wgo4wbMu4%3d https://www.mouser.com/ProductDetail/TDK-InvenSense/DK-10100?qs=%2fha2pyFadug2wovlZ9W1sso9ACtfr0gYV9R7Uoj3ADM%3d
AVNET	https://www.avnet.com/shop/us/p/kits-and-tools/development-kits/invensense/dk-20602-3074457345633881672/ https://www.avnet.com/shop/us/p/kits-and-tools/development-kits/invensense/dk-20648-3074457345633881671/ https://www.avnet.com/shop/us/p/kits-and-tools/development-kits/invensense/dk-20789-3074457345633881673/ https://www.avnet.com/shop/us/p/kits-and-tools/development-kits/invensense/dk-20948-3074457345633881674/ https://www.avnet.com/shop/us/products/invensense/dk-10100-3074457345634215080/ https://www.avnet.com/shop/us/products/invensense/dk-20680a-3074457345634646277/
CDI	https://www.cdiweb.com/ProductDetail/DK20602-TDK-InvenSense/613431/https://www.cdiweb.com/ProductDetail/DK20648-TDK-InvenSense/613432/https://www.cdiweb.com/ProductDetail/DK20789-TDK-InvenSense/613975/https://www.cdiweb.com/ProductDetail/DK20948-TDK-InvenSense/613433/https://www.cdiweb.com/ProductDetail/DK10100-TDK-InvenSense/614610/

Individual TDK-InvenSense Motion EVBs are also widely available at same distributors



Each purchased SmartMotion comes with the following



Contents	Description
Protective Packaging	The SmartMotion Platform come in a sturdy easy to carry box with protective foam. Please reference MEMS Handling Guide on how to prevent damage to MEMS sensors.
SmartMotion Platform	The SmartMotion board comes with the default jumper settings. It also comes with the latest MotionLink Software Tool pre-flashed into the MCU.
QuickStart Guide	Short description on SmartMotion overview and how to quickly get started along with links to downloadable software.




Connecting the SmartMotion Platform

March 2018

InvenSense



- Connecting the Boards
 - PC/Laptop preferably running Win 7
 - Micro-USB cables
 - FTDI USB Connector (CN6) to PC Required for default power and most data output
 - EDGB USB Connector (J500) to PC Optional, only needed if customers planning to flash or trace code. For eMD can be used this output for debug message outputs.

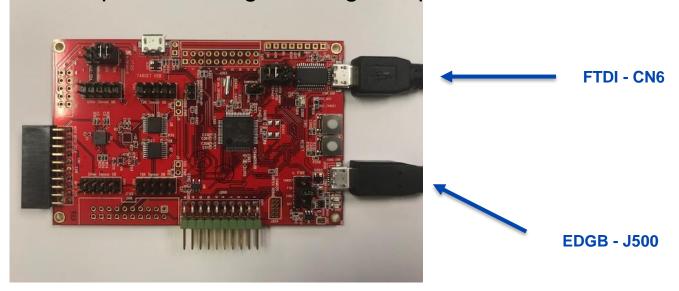



SmartMotion: Software Tools

March 2018

InvenSense





2 Software Packages

- SmartMotion Installer with MotionLink
- Embedded Motion Drivers (eMDs)
- Both tools available for free download at the TDK-InvenSense Developer's Corner (requires registration)


https://www.invensense.com/developers/software-downloads/


Attracting Tomorrow



The MotionLink - Hardware Evaluation Tool

- PC Based Software with following features
 - Read Register Map Values
 - Simple I2C read and writes
 - Display raw sensor data up to 1Khz sample rate
 - Log Data to text file
 - Display graphical sensor data

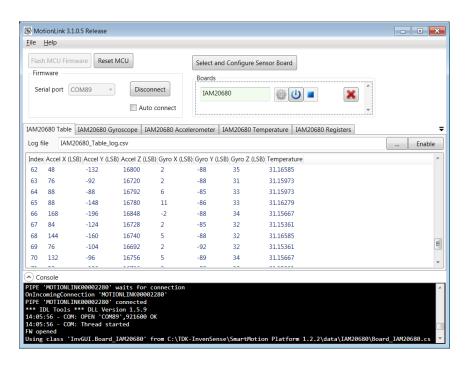

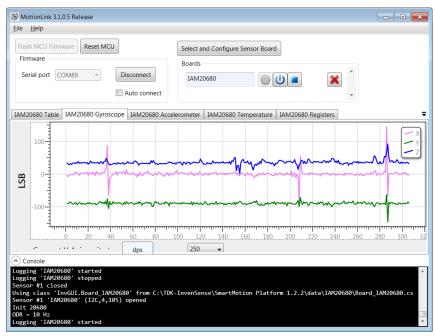

- Why MotionLink?
 - Evaluate and log raw gyro, accel, and other sensor data
 - Will support all channel motion parts





MotionLink supports the latest TDK-InvenSense Motion Hardware including

TDK Part Number	URL
MPU-6000	https://www.invensense.com/products/motion-tracking/6-axis/mpu-6050/
ICP-10100	https://www.invensense.com/products/icp-10100/
ICM-20601	https://www.invensense.com/products/motion-tracking/6-axis/icm-20601/
ICM-20602	https://www.invensense.com/products/motion-tracking/6-axis/icm-20602/
ICM-20608-G	https://www.invensense.com/products/motion-tracking/6-axis/icm-20608-2/
ICM-20648	https://www.invensense.com/products/motion-tracking/6-axis/icm-20648/
ICM-20649	https://www.invensense.com/products/motion-tracking/6-axis/icm-20649/
ICM-20789	https://www.invensense.com/products/motion-tracking/7-axis/
ICM-20948	https://www.invensense.com/products/motion-tracking/9-axis/icm-20948/
IAM-20680	https://www.invensense.com/products/motion-tracking/6-axis/iam-20680/
ICG-20660L	https://www.invensense.com/products/motion-tracking/6-axis/icm-20660/





The Embedded Motion Driver (eMD) for SmartMotion Platforms

- Motion Software (dependent on product) can include these features...
 - Initialization and configuration
 - Raw Sensor Data streaming
 - Sensor Fusion output
 - Gesture Tracking
 - DMP Image (if applicable)
 - Factory Test and Calibration
 - In-Use Calibration
 - Wake-On-Motion
- Currently supported SmartMotion eMDs
 - ¬ ICM20602
 - ¬ ICM20648
 - ¬ ICM20948
 - ¬ ICM20789
 - ¬ ICP-10100
 - ¬ IAM-20680







ICM-20948 eMD Features Example -

- Sensor Data -
 - ¬ Raw Accelerometer
 - Raw Gyroscope
 - Raw Magnetometer
 - **Dynamically Calibrated Accelerometer**
 - Dynamically Calibrated Gyroscope
 - **Dynamically Calibrated Magnetometer**
- Sensor Fusion -
 - Game Rotation Vector Accel and Gyro based RV
 - Rotation Vector Accel, Gyro, and Mag based RV
 - Geomagnetic Rotation Vector Accel and Mag based RV
 - Heading
 - **Euler Angles**
 - Quaternion generation
 - Gravity
 - Linear acceleration
 - Orientation

- Gesture Detection -
 - SMD (Significant Motion Detection)
 - PickUp Detection
 - Tilt Detection
 - B2S (Bring to See) Detection
 - BAC (Basic Activity Classifier) Android-based activity detection of Walking, Standing, Running, Biking, and Transport
 - **Step Detector**
 - Step Counter (Pedometer)





MotionLink: Getting Started

March 2018

InvenSense

Installing the PC Software





3rd Party Software Drivers –


- ATMEL Studios free Atmel IDE for all Microchip/Atmel MCUs
 - Required to flash and trace code
 - As of release MotionLink and eMD developed using Atmel Studio v. 7.0.1417
 - https://www.microchip.com/avr-support/atmel-studio-7
- FTDI Driver http://www.ftdichip.com/Drivers/VCP.htm
 - MotionLink install will include the driver and prompt user for installation

Install SmartMotion Installer with MotionLink-

- Download and Install from InvenSense Developer's Corner
 - https://www.invensense.com/developers/software-downloads/

Connect SmartMotion platform and open MotionLink at Launcher!



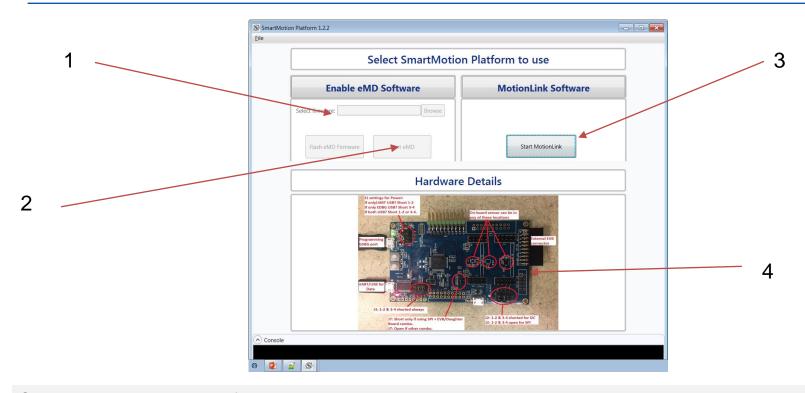


SmartMotion Hardware is pre-flashed with MotionLink!

SmartMotion Launcher page – select between using eMD or MotionLink

- 1. eMD Software flash Atmel G55 MCU with a released version of eMD
 - SmartMotion Installer will have a version of the eMD release
 - Allow customers to browse for MCU images to flash
- 2. 'Start eMD' Will open up the 'sensor-cli' command window usually used for eMD interface
- 3. MotionLink Software will start up the MotionLink GUI
- 4. Hardware Details Description of DK board jumpers and settings



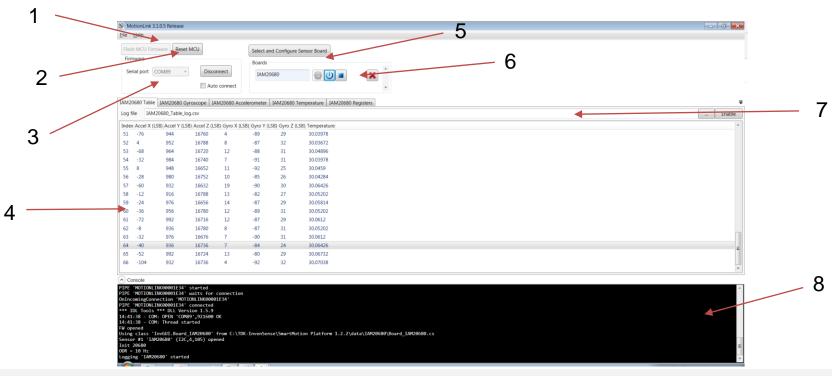


- 1. Flash Firmware flash G55 MCU with MotionLink firmware or base eMD. Requires Atmel Studios!
- 2. Reset MCU erases the firmware on the MCU
- 3. FTDI COM port connection connect to the FTDI COM output. (not the EDGB COM port)
- 4. Data Output Console displays requested data through the tab windows, registers, sensor data, and graphical data
- Sensor Board Configuration Adds target sensors to be evaluated
- 6. Sensor Board Control Initialize and capture data control
- 7. Log File Output can specify text log file for the sensor data if requested
- 8. Message Console Output outputs error and status messages

MotionLink Features





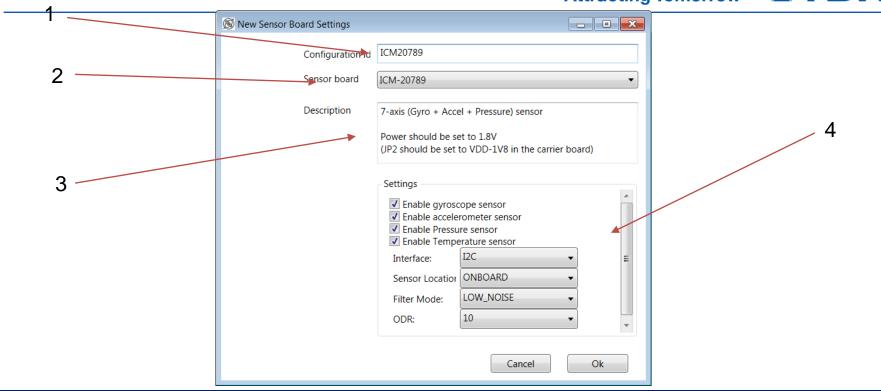

Adding New Sensor Board Configurations

- Configuration ID Customer customizable ID for that particular sensor board configuration to be added
- Sensor Board drop down list on the full motion parts to be selected
- Description short description on the selected parts
- 4. Sensor Settings -
 - Customer can specify on which hardware sensor to stream
 - Specify I2C or SPI interface
 - Sensor Location if on board or attached external sensor EVB (on-board I2C address is always 0x69 while external I2C address is always 0x68)
 - Filter Mode to either Low_Noise (high power) or Low_Power (higher noise)
 - ODR selectable up to 1Khz



Embedded Motion Driver (eMD): Getting Started

March 2018

InvenSense

Installing the PC Software



3rd Party Software Drivers for Hardware –

- ATMEL Studios free Atmel IDE for all Microchip/Atmel MCUs
 - Required to flash and trace code
 - As of release MotionLink and eMD developed using Atmel Studio v. 7.0.1417
 - https://www.microchip.com/avr-support/atmel-studio-7
- FTDI Driver http://www.ftdichip.com/Drivers/VCP.htm
 - Included with MotionLink install

Install TDK-InvenSense eMD – 2 Options


- Option 1 Download 'SmartMotion Installer'. SmartMotion Installer will have a base eMD that can be downloaded to the MCU
- Option 2 Download latest 'eMD for SmartMotion' Atmel Studio project to be compiled and download to the MCU

https://www.invensense.com/developers/software-downloads/

Connect SmartMotion platform and to PC


Using SmartMotion Installer for eMD Attracting Tomorrow



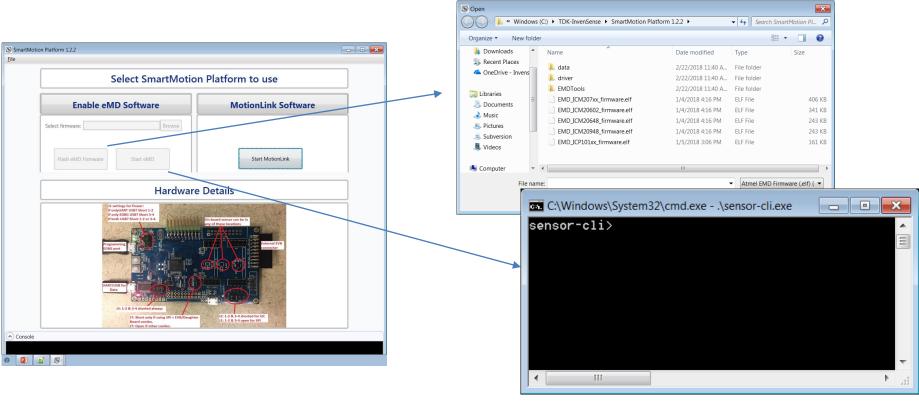

- SmartMotion Installer comes with feature to flash and use the eMD firmware
 - Requires Atmel Studio
 - Release eMD image but possibly an earlier version
 - MotionLink feature will not be able to function if using eMD
- In SmartMotion Launcher page click "eMD Software" to start the process
- Selecting "Browse" for will bring up a directory with pre-installed eMD images (.elf files)
- Selecting "Start eMD" will bring up a sensor-cli window
 - DK-20680A does not use the sensor-cli but outputs through the serial port (J500 connector)




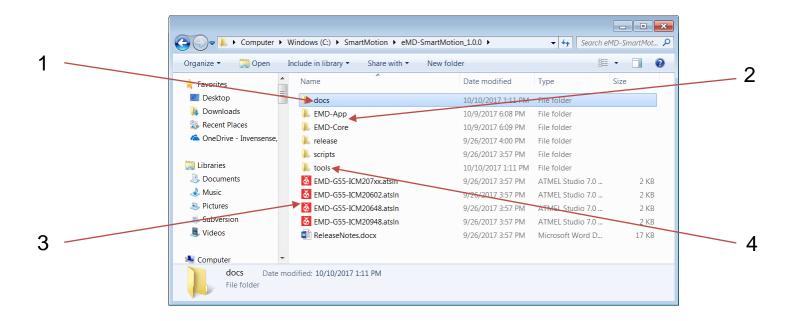

eMD Release Package

- 1. Docs directory: contains detailed SW User Guides and other documentations
- 2. EMD-App and EMD-Core: contains main driver code. 'App' has the main.c as well as board specific files. 'Core' has the libraries as well as the sensor driver files.
- 3. Atmel Studio Project Files: A specific main project for each SmartMotion platform to be opened in Atmel Studios
- 4. Tools directory: Contains 'sensorcli.exe' the command line tool to interface with the eMD



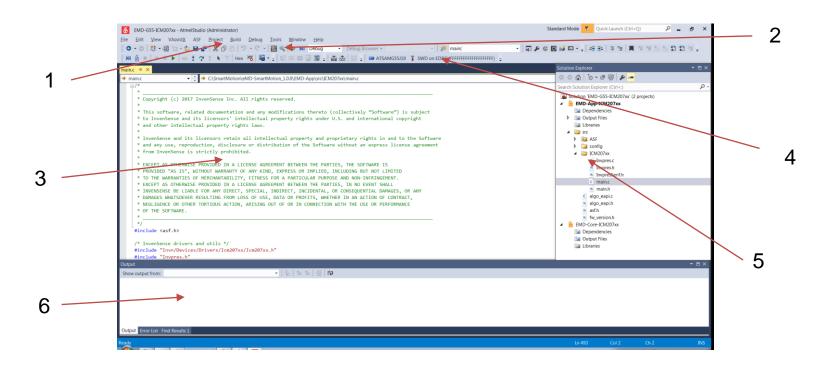


Quick Overview - Atmel Studio IDE

- Control Tabs Pull down tabs to build and compile project
- Debug Controls Used for code tracing
- Main Code Console display selected code
- Target targeted MCU and also debugger, make sure it is specify to 'ATSAMG55J19' and 'SWD on EDGB'
- Project Tree directory of all project files
- Debugging and Message console misc messages from IDE



SmartMotion eMD – using sensor-cli.exe

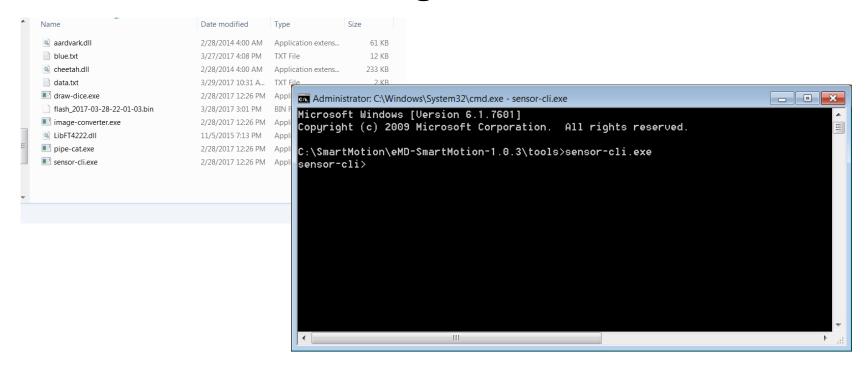

- 'Sensor-cli' is the command line tool which interfaces with the eMD and the SmartMotion board
 - ¬ Open 'tools' directory in release package, you should see the sensor-cli.exe along with other drivers
 - Open Command Prompt at the directory location and execute the sensor-cli.exe by running command
 - If only 1 SmartMotion hardware is connected to PC
 - 'sensor-cli.exe'
 - Multiple SmartMotion 'sensor-cli --target=emdwrapicm20x48,port=\\.\COM66 --adapter=dummy'
 - Target argument will be specific to the SmartMotion platform, see SW User Guide for target
 - Port will be the FTDI COM port, can be found in PC Device Manager
 - If successful you will see a 'sensor-cli>' prompt on the command window



SmartMotion eMD – common sensor-cli.exe commands

- sensor-cli.exe has full range of commands to interface with the eMD specifies in SW User Guide
- **Useful Commands**
 - 'help' displays set of commands and input arguments. You can also 'help <command>'

```
MacManinistrator: C:\Windows\System32\cmd.exe - sensor-cli --target=emdwrapicm20x48,port=\\... 🗖 📃
C:\SmartMotion\eMD-SmartMotion_1.0.0\tools>sensor-cli --target=emdwrapicm20x4
sensor-cli> help
alias -- register an alias
batch -- change sensor batch timeout
cube -- display orientation data with a rotating cube
 decode -- configure how sensor events data are decoded
dis -- stop a sensor
 disp -- enable or disable display of sensor event to sdtout or pipe
 dumpflash -- dump or compare flash memory
 en -- start a sensor
 exit -- alias of 'quit'
```

'ping' – displays all sensors available and their IDs

```
Madministrator: C:\Windows\System32\cmd.exe - sensor-cli --target=emdwrapicm20x48,port=\\... 🗖 🗓 🔀
sensor-cli> ping
Ping OK - SENSOR_ACCELEROMETER (id: 1)
Ping OK - SENSOR_MAGNETOMETER (id: 2)
Ping OK - SENSOR_GYROSCOPE (id: 4)
Ping OK - SENSOR_GRAUITY (id: 9)
Ping OK - SENSOR_LINEAR_ACCELERATION (id: 10)
Ping OK - SENSOR_ROTATION_UECTOR (id: 11)
Ping OK - SENSOR_UNCAL_MAGNETOMETER (id: 14)
Ping OK - SENSOR_GAME_ROTATION_UECTOR (id: 15)
Ping OK - SENSOR_UNCAL_GYROSCOPE (id: 16)
Ping OK - SENSOR_GEOMAG_ROTATION_VECTOR (id: 20)
Ping OK - SENSOR_RAW_ACCELEROMETER (id: 32)
Ping OK - SENSOR_RAW_GYROSCOPE (id: 33)
sensor-cli>
```



SmartMotion eMD – common sensor-cli.exe commands

- Useful Commands continued...
 - ¬ 'en <sensorid>' streams the sensor data to console.

```
## Administrator: C:\Windows\System32\cmd.exe - sensor-cli --target=emdwrapicm20x48,port=\\\COM66 --adapter=dummy

sensor-cli> en 4

sensor-cli> EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 573655000 us: 0 data: -0.937500 0.500000 0.437500 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 573853000 us: 0 data: -0.812500 0.187500 0.562500 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 574052000 us: 0 data: -0.375000 0.062500 0.625000 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 574250000 us: 0 data: 0.062500 0.062500 0.625000 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 574448000 us: 0 data: 0.062500 0.887500 0.437500 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 574847000 us: 0 data: -0.312500 0.562500 0.7500000 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575044000 us: 0 data: -0.500000 0.625000 0.625000 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575044000 us: 0 data: 0.500000 0.625000 0.625000 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575242000 us: 0 data: 0.500000 0.687500 -0.187500 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575440000 us: 0 data: 1.562500 0.250000 0.687500 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575440000 us: 0 data: 0.3937500 0.312500 0.562500 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575639000 us: 0 data: 0.037500 0.312500 0.562500 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575837000 us: 0 data: 0.000000 -0.187500 -0.125000 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575837000 us: 0 data: 0.000000 -0.187500 -0.125000 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575837000 us: 0 data: 0.0000000 -0.187500 -0.125000 0

EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575837000 us: 0 data: 0.0000000 -0.187500 -0.125000 0


EUENT D SENSOR_GYROSCOPE id: 0x000000004 t: 575639000 us: 0 data: 0.0000000 -0.187500 -0.125000 0
```

'dis all' will stop all data streaming



SmartMotion eMD – common sensor-cli.exe commands

- Useful Commands continued
 - Displaying the cube
 - 'cube on <sensorid>' the cube window will appear but will not move until you enable the sensor. Best results are to use fusion sensors like Rotational Vectors ('rv' or 'grv')
 - 'en <sensorid>' the sensor will start streaming to console, you will see the cube move based on the sensor data.

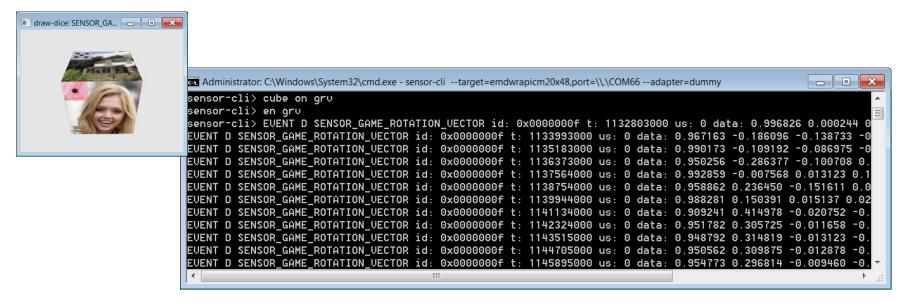

- Other commands
 - selftest, setting ODRs, bias configurations, logging, etc....




External Sensors

March 2018

InvenSense




Connecting TDK-InvenSense Motion EVBs

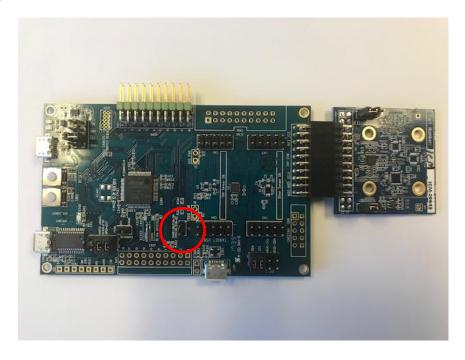


- TDK-InvenSense motion EVBs are sold separately and can be connected to the SmartMotion Platform
- MotionLink and eMDs can interface with the EVB if supported
 - Motion parts which requires 1.8V VDDIO cannot be supported (ICM-20789 and ICM-20948)
 - External EVB requires eMDs to change to I2C address 0x68
 - Jumper J7 interface to external EVB
 - o I2C Open
 - SPI Closed
 - ICM-20602, ICM-20648, ICM20948 eMD are default SPI
 - ICM-20789 eMD are default I2C



MotionLink and eMD— External EVB Connection

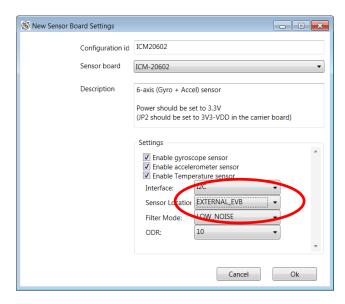

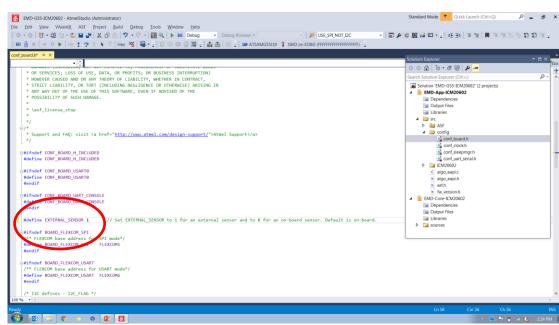

MotionLink – Select EXTERNAL EVB as the location when adding new sensors

eMD - conf_board.h, set EXTERNAL SENSOR flag to '1'



eMD Porting Guidelines

March 2018

InvenSense

eMD Porting Guidelines





- MCU requirements
 - Atmel G55
 - Cortex M4 wth FPU
 - 120Mhz CPU Speed
 - 512Kb flash, 176Kb SRAM
 - o I2C, SPI, UARTS
 - ¬ eMD v 1.0.4 Current Memory
 - 120Kb to 140Kb flash
 - o 20Kb SRAM
 - SPI or I2C support
- Sensor Fusion
 - DK-20648 and DK-20948 on board DMP
 - ¬ DK-20789 and DK-20602 MCU sensor fusion library
 - DK-20789 does have DMP fusion version available
 - ¬ DK-20680A and DK-10100 streams raw sensor data only
- Tool Chains -
 - Atmel Studio GCC compiler





Take Aways

March 2018

InvenSense



SmartMotion: Accelerate Product deployment

- SmartMotion provides everything to evaluate and develop applications with TDK-InvenSense motion sensors
 - Simple to set up, easy to use
 - Software toolchains are free
 - No external debugger required saves \$\$\$
- Affordable: \$99 ASP
 - Widely available at TDK Distributors (DigiKey, Mouser, CDI, Avnet) at \$99
- MotionLink enables easy evaluation of the sensor hardware
- eMD includes sensor fusion and motion algorithms



TDK-InvenSense SmartMotion Support

- TDK-InvenSense SmartMotion Website
 - https://www.invensense.com/smartmotion-platform/
- **General Tech Support** <u>techsupport_NorthAmerica@invensense.com</u>
- General Sales Support sales.us@invensense.com



www.invensense.com