


PLsi v0

Hardware Manual

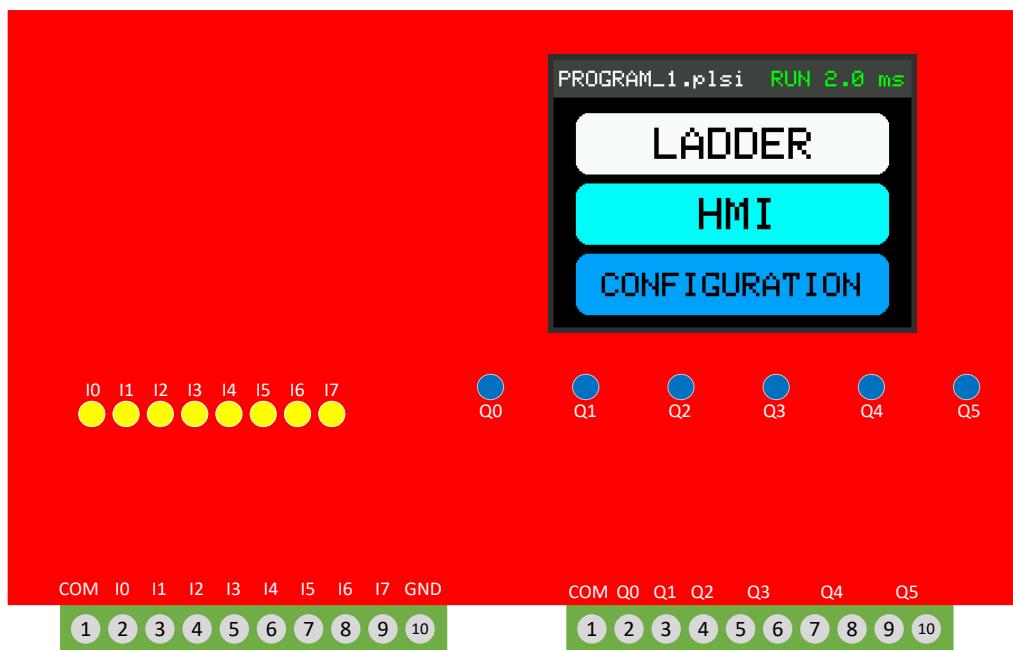

Project page:

<https://github.com/EIPercha/PLsi>



Purpose of this document

This PLsi manual provides you with information to build a PLsi v0 unit, it comprises the board assembly, firmware download and a series of tests to validate the main functionalities. For wiring, configuration and programming information, refer to "PLsi v0 User Manual".

Please, create an issue in the [PLsi repository](#) if you see that this manual is not clear enough or has opportunities to improve.

Document information

Manual Name: [PLsi_v0_Hardware_Manual](#)

Revision: A

Date: December 27, 2021

Revision history

Revision	Date	Description
A	December 27, 2021	First Revision

License

The complete PLsi Project is under GPL v3.0 license.

This includes Hardware, Software, Documentation and all related contributions:



ElPercha/PLsi is licensed under the
GNU General Public License v3.0

Permissions of this strong copyleft license are conditioned on making available complete source code of licensed works and modifications, which include larger works using a licensed work, under the same license. Copyright and license notices must be preserved. Contributors provide an express grant of patent rights.

Permissions	Limitations	Conditions
✓ Commercial use	✗ Liability	ⓘ License and copyright notice
✓ Modification	✗ Warranty	ⓘ State changes
✓ Distribution		ⓘ Disclose source
✓ Patent use		ⓘ Same license
✓ Private use		

A full copy of the License is included on the Master branch of the project for reference:

<https://github.com/ElPercha/PLsi/blob/master/LICENSE>

Original copy with useful FAQ:

<https://www.gnu.org/licenses/gpl-3.0.html>

Disclaimer

Copyright (c) 2019 Prieto Lucas. All rights reserved.
This file is part of the PLsi project.

PLsi is free software and hardware: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

PLsi is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program. If not, see <<https://www.gnu.org/licenses/>>.

Safety Guidelines

All applicable local and national codes that regulate the installation and operation of your equipment shall be followed in order to minimize the risk of potential safety issues.

PLSi is not fault-tolerant and must not be used to control equipment in hazardous environments where the failure of the system could lead to death, people injury, or severe environmental damage. Refers to the Disclaimer notice for more information.

This manual contains 3 levels of hints:



WARNING:

Death, serious harm to health or equipment damage can result if the stated measures are not followed !



CAUTION:

Harm to health or equipment damage can result if the stated measures are not followed



TIP:

Important information that requires your special attention

Table of Contents

Purpose of this document.....	2
Document information.....	2
Revision history.....	2
License.....	3
Disclaimer.....	4
Safety Guidelines.....	5
1. Introduction.....	7
1.1 Project documentation.....	8
1.2 Minimum system.....	9
1.3 Drawing.....	13
1.4 Connections and Isolation.....	16
1.4.1 Digital version.....	16
1.4.2 Analog version.....	18
2. Board Assembly.....	20
2.2 Digital version.....	22
2.2.1 Component list.....	22
2.2.2 Assembly.....	23
2.3 Analog version.....	30
2.3.1 Component list.....	31
2.3.2 Assembly.....	32
3. Firmware Download.....	41
3.1 Required files.....	42
3.2 Espressif download tool.....	43
3.2 Downloading the Firmware.....	47
4. Hardware Validation.....	53
4.1 Digital Inputs validation.....	53
4.2 Digital Outputs validation.....	53
4.3 Analog Inputs validation.....	53
4.4 Analog Outputs validation.....	53
5. Housing.....	55
5.1 Printing parts.....	55
5.2 Assembly.....	55

1. Introduction

The objective of the PLsi project is to create a PLC & HMI with the following main characteristics:

- To not require external systems such us Laptops or Cellphones to be programmed
- To be used on Classroom for educational purposes, IOT applications or industrial low risk applications
- Software and Hardware with Industrial performance and features
- Open Source and Open Hardware
- Focus on Low Cost

The hardware version 0 of PLsi system is designed to be cheap and easy to build. It does not have SMD components, what makes the building process easy, fast and feasible using basic tools. The components selection was oriented to use easy to get and cheap elements.

The PLsi v0 is mainly composed by:

- Main board
- ESP32 module
- TFT 2.8" SPI Display module with touchscreen
- Terminal blocks and common electronic components

The PLsi v0 board is designed to support different input output configurations. This manual will cover the 2 main suggested configurations. For that reason, before to start, you have to select which version are you going to build, these are the 2 main options:

1. Digital version:
 - 8 digital inputs (5 to 26VDC)
 - 6 relay outputs (10A max per PLsi, external fuse required)
2. Analog version:
 - 6 digital inputs (5 to 26VDC)
 - 4 relay outputs (10A max per PLsi, external fuse required)
 - 2 Analog Inputs (0-5V)
 - 2 Analog Outputs (0-5V)

This definition will modify your component list. The details of which component is required on each version is covered on the following chapters.

1.1 Project documentation

The PLsi project is hosted on GitHub:

<https://github.com/EIPercha/PLsi>

The tree structure is divided in 3 main folders:

1. **doc**: Contains project documentation and auxiliary tools
2. **firm**: Contains the Firmware, it is designed using PlatformIO + Visual Studio
3. **hard**: Contains the Hardware documentation, mainly:
 - Circuit schematic
 - Component list
 - Board fabrication details
 - 3D Printed housing fabrication details
 - 3D Printed Din Rail support fabrication details

The most updated information is located on the master branch (link provided above), but it also might contain nightly builds of the firmware, hardware or any document. For this reason, it is recommended to use the “releases”, they are a more trustworthy information source.

Each release contains a snapshot of the full project site by the moment of his creation, plus the required binaries to flash the ESP32 module.

By the time this document was created, the latest revision available is the “v0.00.03”.

It is recommended to use the latest available release to build your PLsi unit.

<https://github.com/EIPercha/PLsi/releases>

The details on how to use the binary files to flash your PLsi are going to be covered during the next chapters.


1.2 Minimum system

The easiest way to build a PLsi v0 is using the board designed for it, but for PLsi CPU testing purposes (with no Inputs Outputs) a limited system can be easily built.

It consist of:

- ESP32 WROOM module
 - 38 pins version
 - They typically have yellow pin terminals
 - For test purposes you can use another ESP32 module as long as it has dual core, but the described model is required if you use the PLsi v0 board.
- 2.8" 320x240 SPI TFT Display – [LcdWiki info](#)
 - Driver ILI 9341
 - Touchscreen driver XPT2046
 - For test purposes you can use another display, as long as it has the same interface, resolution and drivers, but the described model is required if you use the PLsi v0 board.
- 9 Jumper cables for the ESP32 ← → Display connections.
- Micro USB cable and adapter with 1A capacity (recommended 2A)
 - This fed the ESP32 module and it is the main incoming supply voltage of the PLsi v0


Required ESP32 $\leftarrow \rightarrow$ Display connections for minimal system:

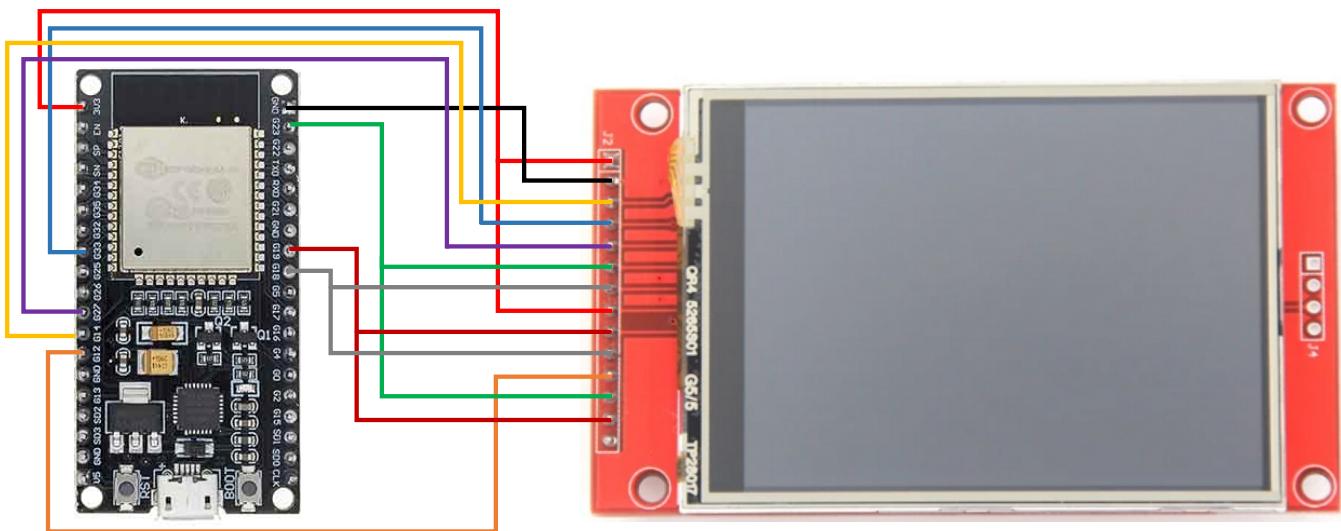


In the above sketch the minimal connections are shown.

The only pending activity to have a functional CPU will be the ESP32 Firmware download. This procedure is detailed in the Firmware Download chapter.


Required ESP32 Module

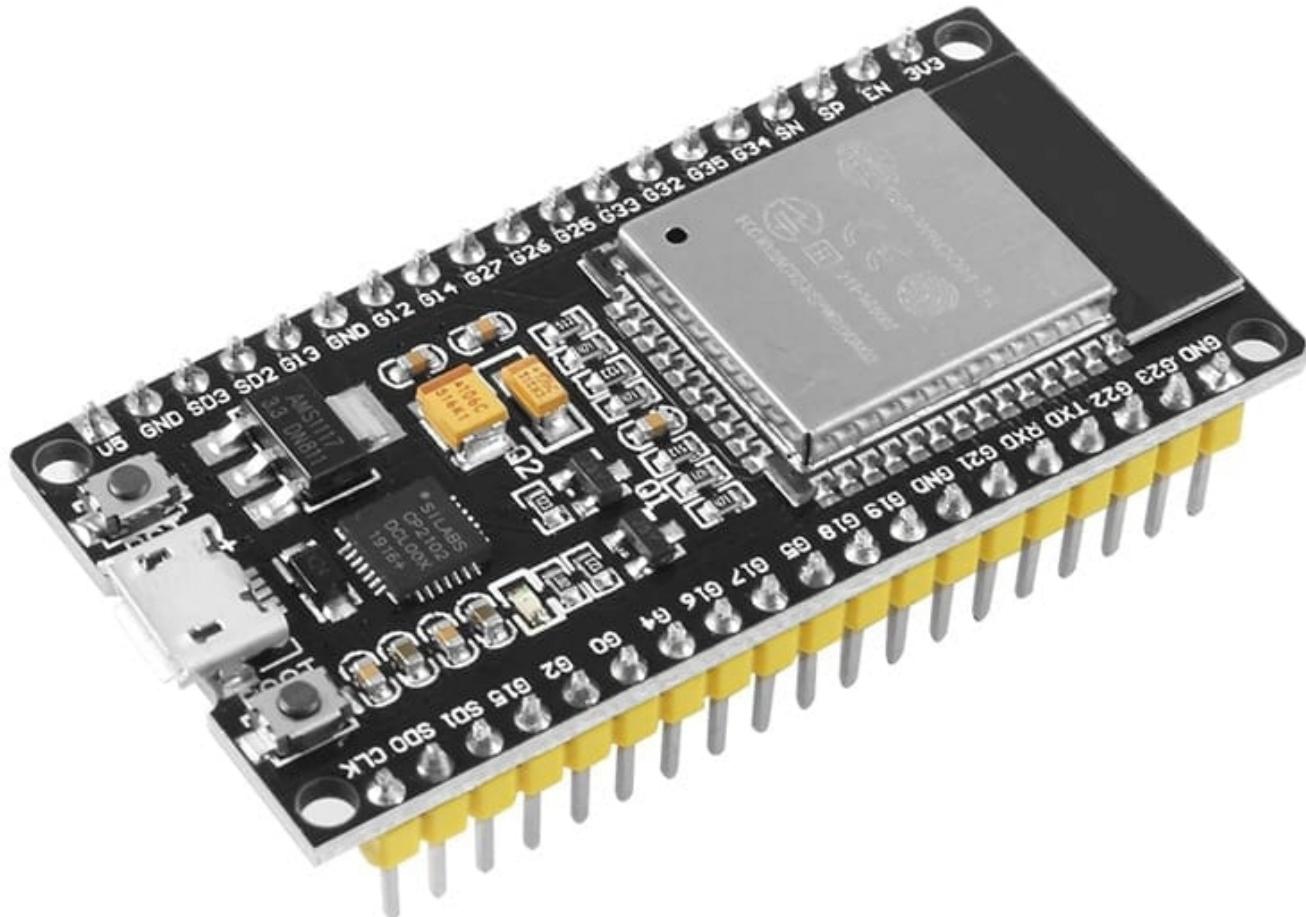

Dimensions:

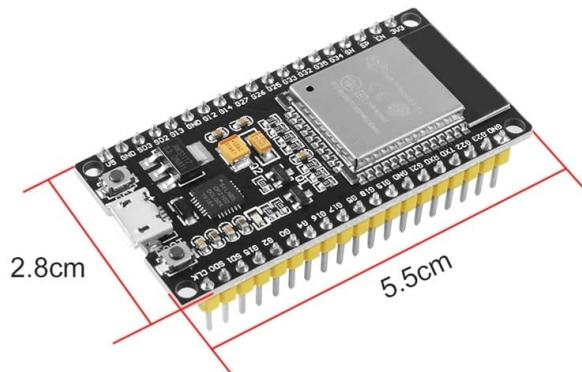

Required display:

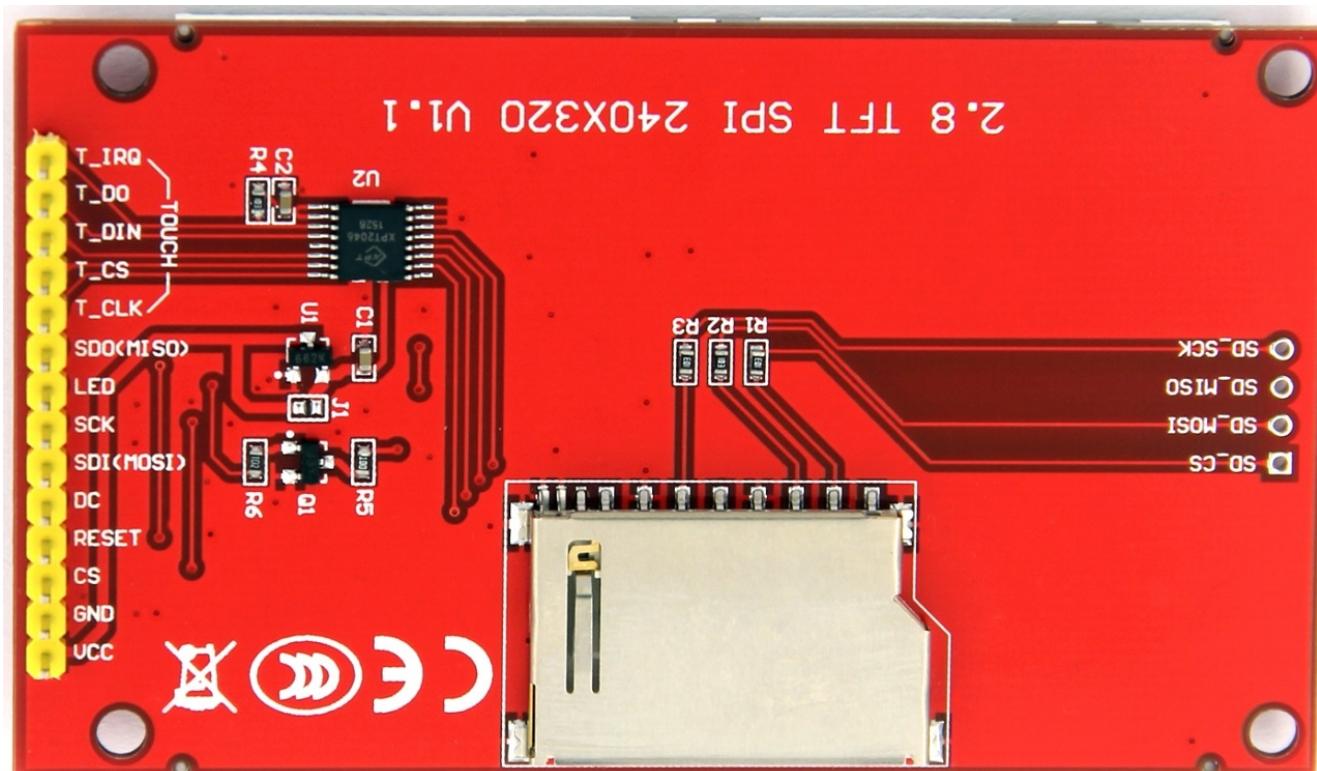

1.3 Drawing


The drawing was created using the free editor [EasyEDA](#).

You can access the project following this [link](#).

The schematic is also stored on GitHub, in the folder [hard/CPU/v0/schematic](#)


The drawing is composed by 3 pages:

- CPU & HMI
 - Inputs
 - Outputs

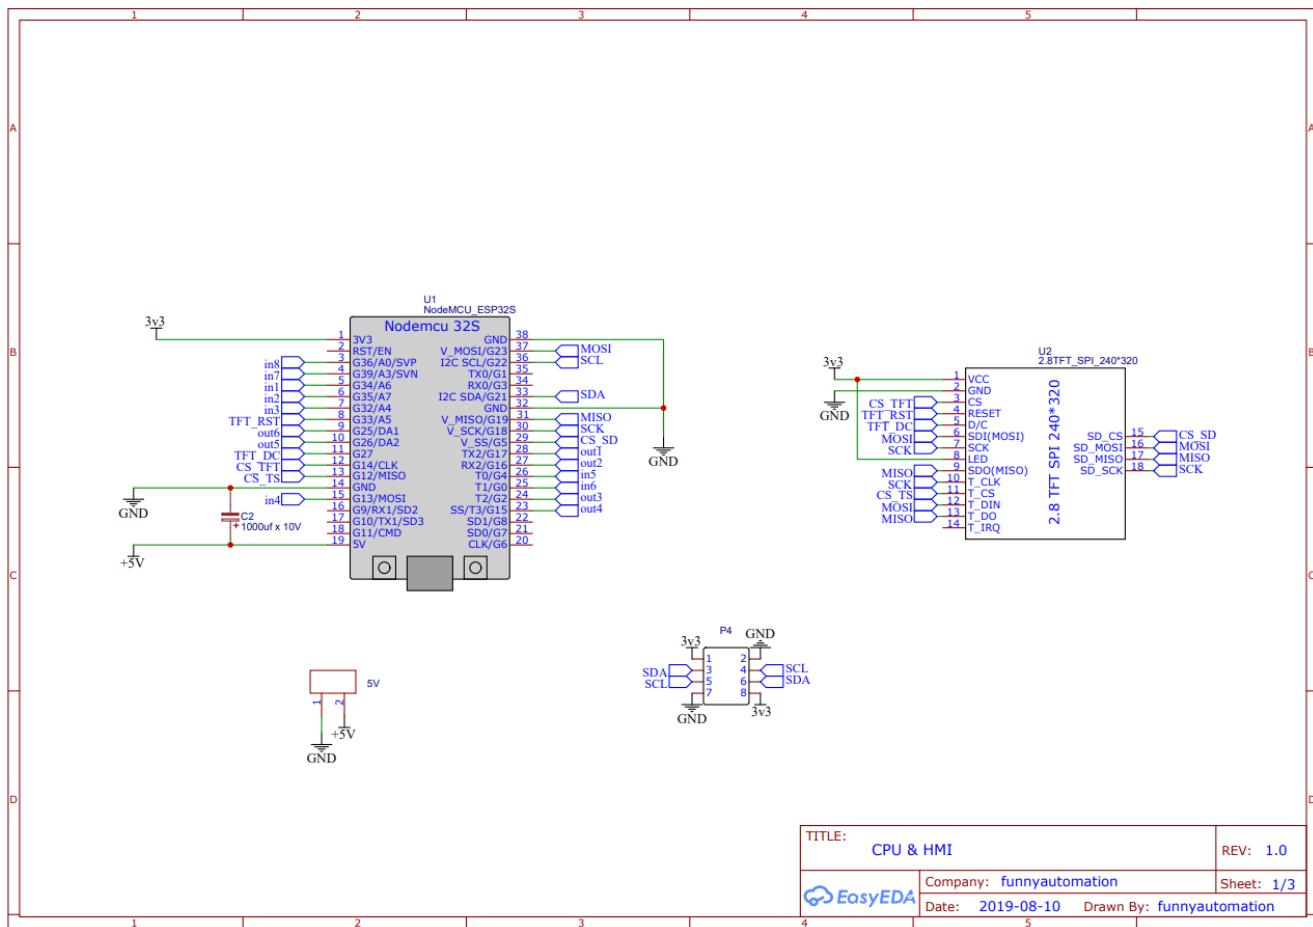


All the components shown in the above schematic are required for any PLSi v0 version, analog or digital.

Digital & Analog inputs schematic:

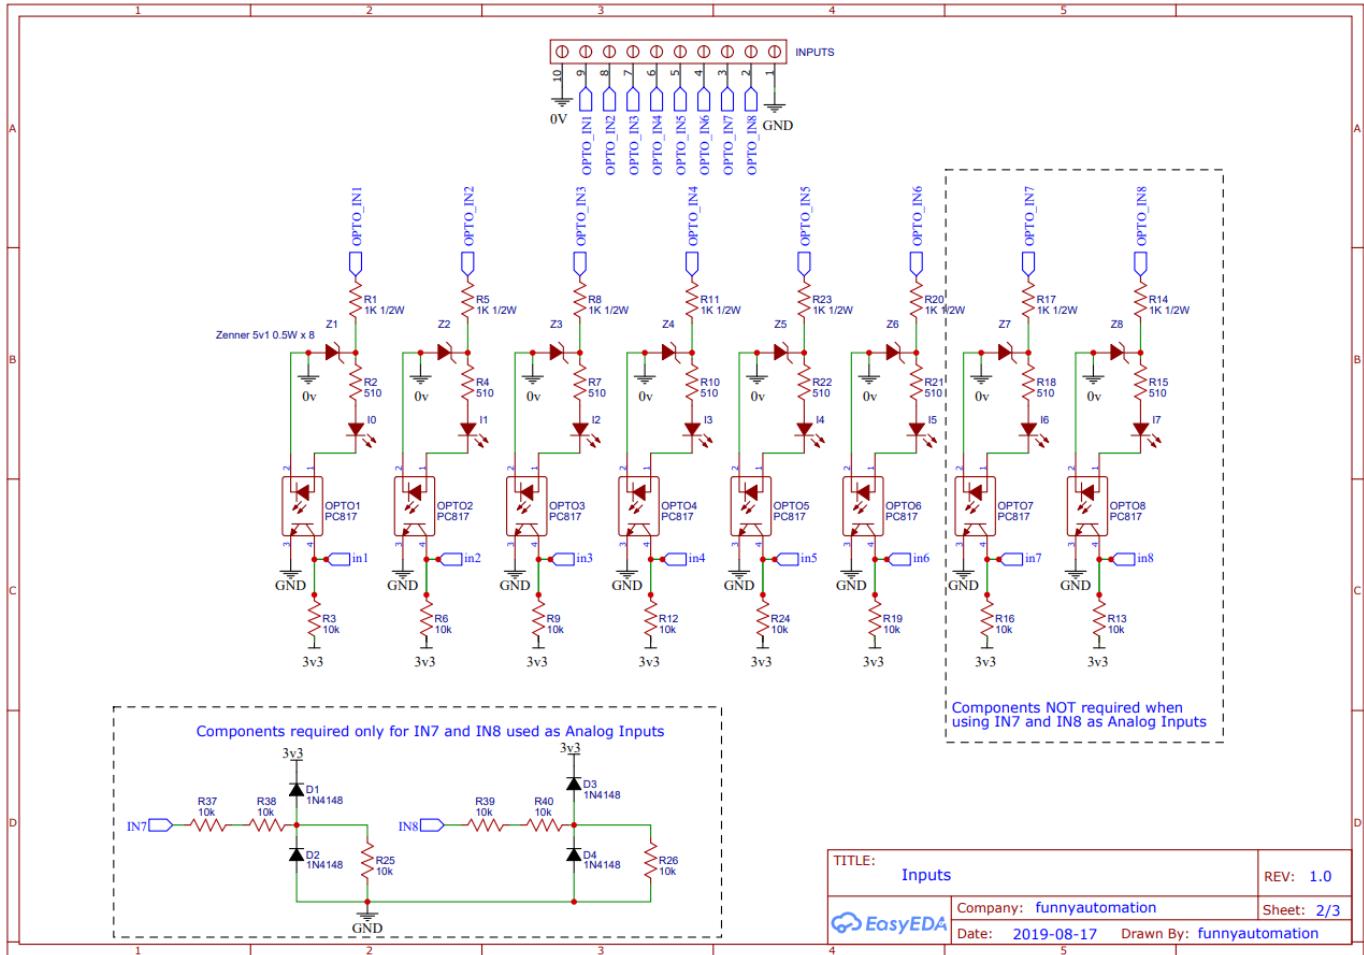

**Note that not all components are required.
The components list for Analog or Digital version is detailed over
the next chapters**

Digital & Analog outputs schematic:

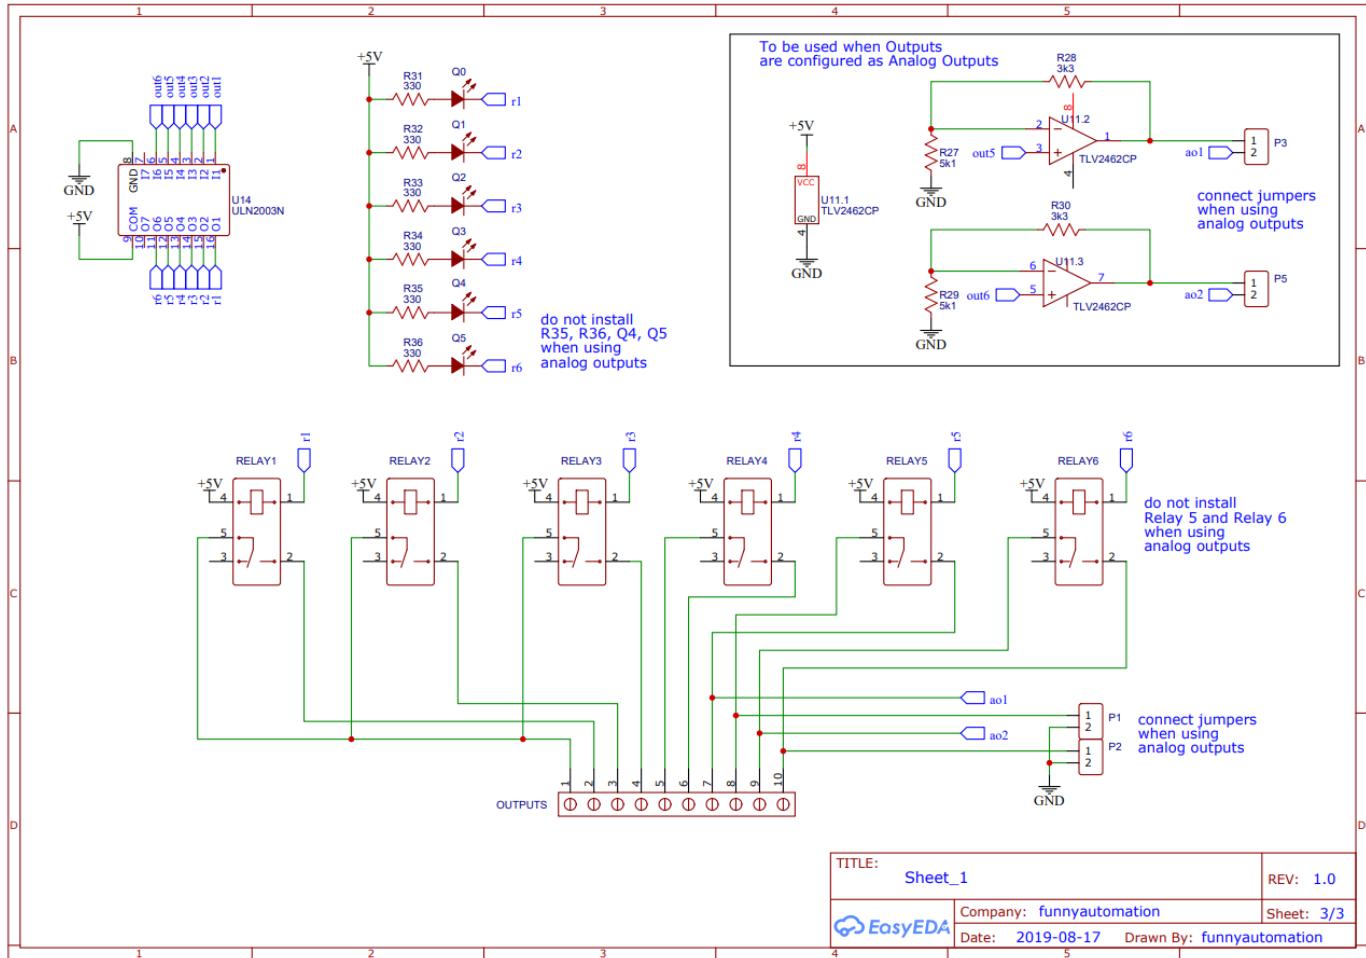

**Note that not all components are required.
The components list for Analog or Digital version is detailed over
the next chapters**


1.4 Connections and Isolation

The following sections provide in advance information about the connection and PLsi v0 isolation.

For more information about wiring and setup, refer to the "User Manual".

1.4.1 Digital version

The following diagram shows the main connections required for your PLSi v0 Digital version. USB main feeder, I2C expansion and SD card connectors are shown

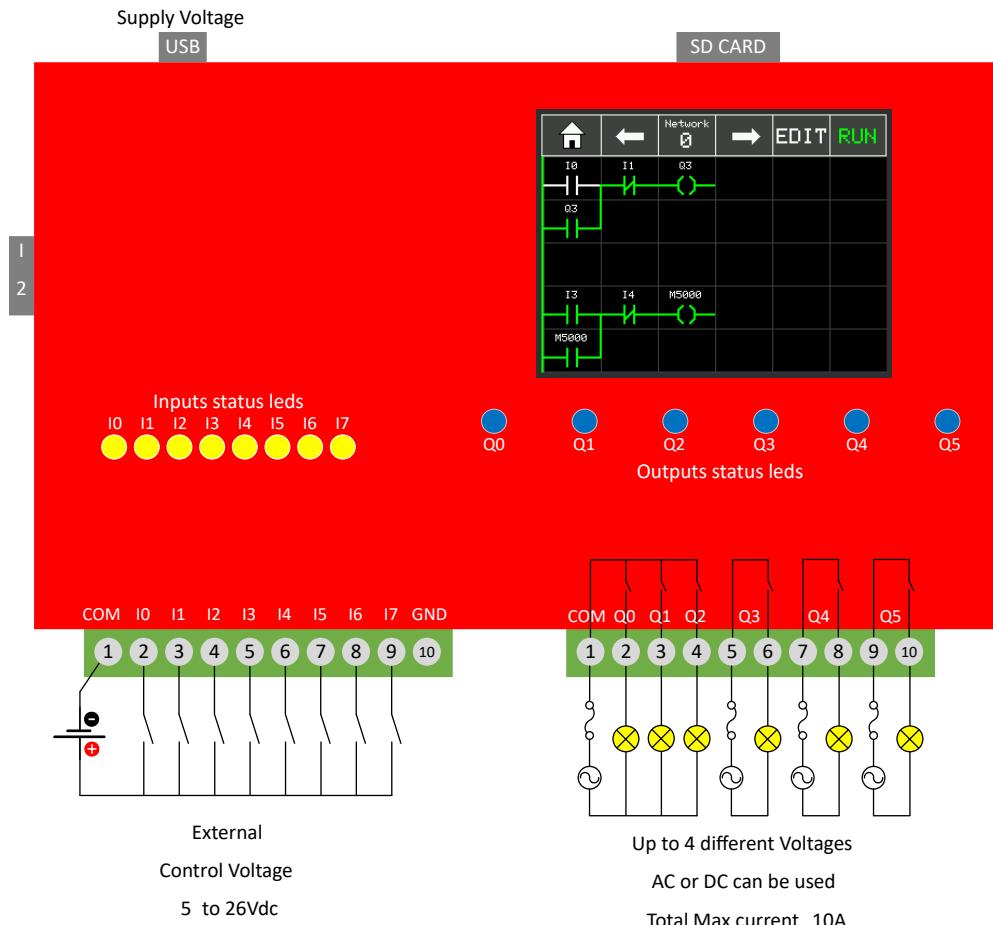


I0 to I7 share the same common connection supporting a voltage range of 5Vdc to 26Vdc.

Q0, Q1 and Q2 share the same common connection at terminal 1

Q3, Q4 and Q5 have their own common connection

Install external Fuses as indicated on the diagram for a total max capacity of 10 Amps

For example 4 fuses of 2 Amps.

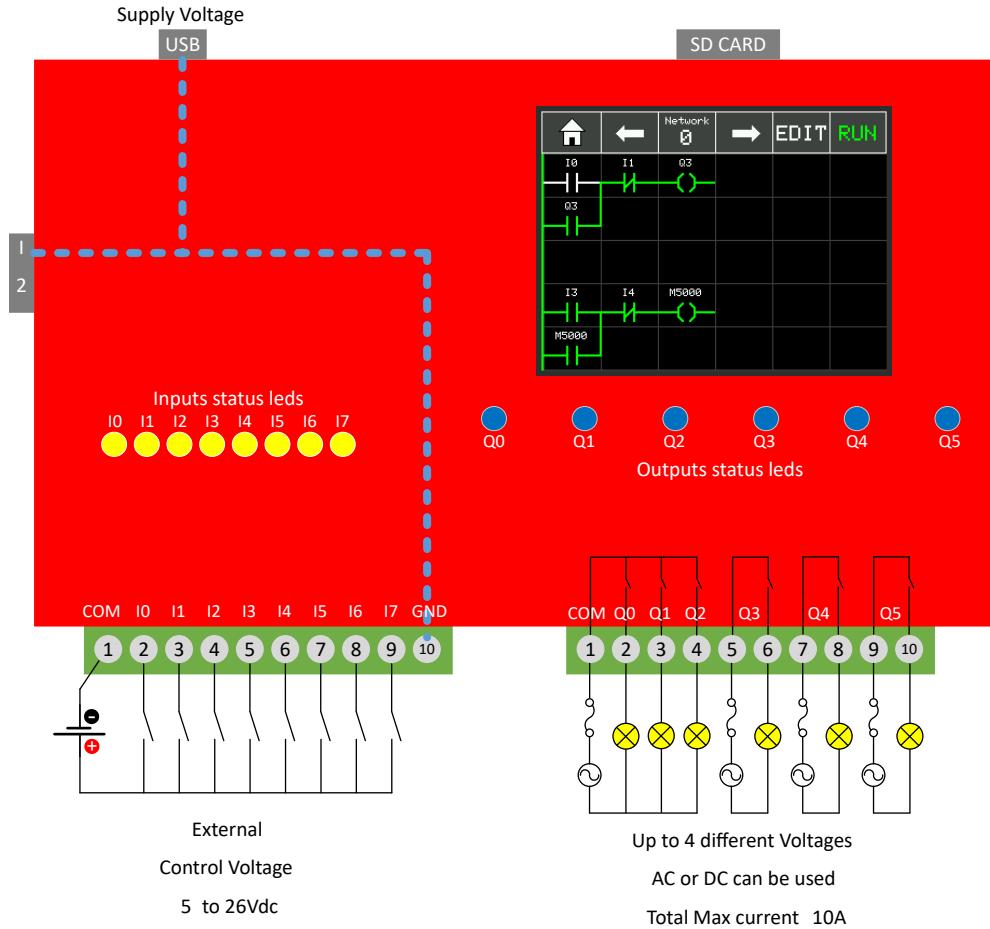


The above diagram shows how the 0V reference of the CPU is fully isolated from I/O connections.

Do not connect terminal GND to an external power supply.

1.4.2 Analog version

The following diagram shows the main connections required for your PLsi v0 Analog version. USB main feeder, I2C expansion and SD card connectors are shown

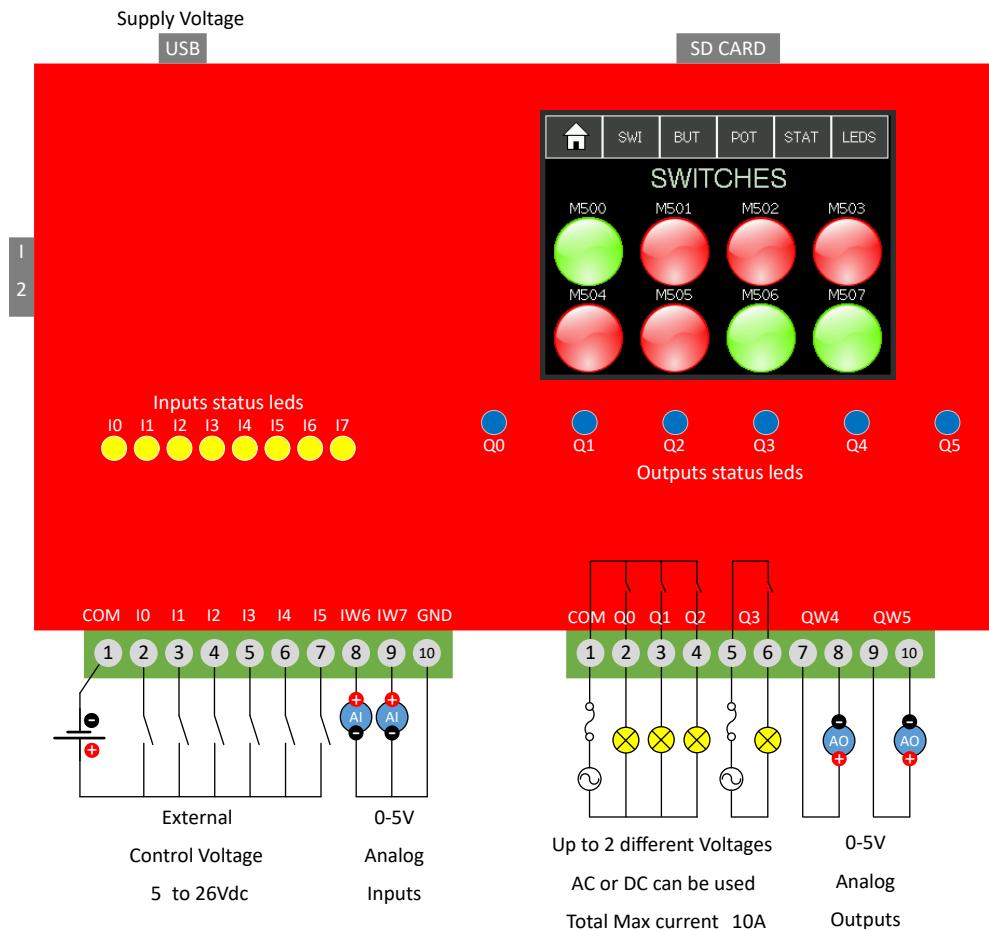


Q0, Q1 and Q2 share the same common connection at terminal 1

Q3 has his own common connection

Install external Fuses as indicated on the diagram for a total max capacity of 6 Amps

For example 2 fuses of 2 Amps.

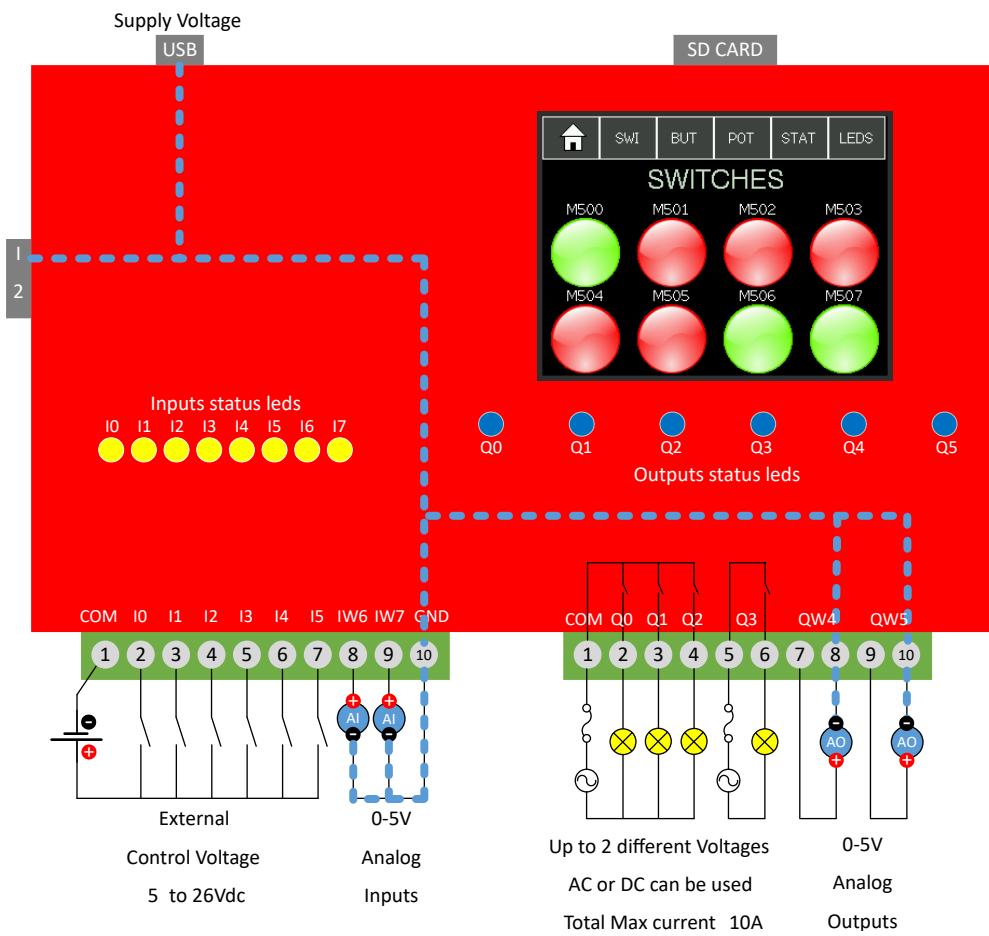

The Analog Inputs and Outputs for PLSi v0 are not isolated, for this reason the 0V reference is now shared between the CPU and the Analog I/O as shown in the above diagram.

2. Board Assembly

The recommended way to build your PLsi is using the board designed for it.
All the required files to build the board are stored on Github. Each PLsi hardware version has his own folder.

PLsi v0 board [link](#).


Folder content:

- Gerber Files
- EasyEDA source
- Altium source (it is a beta export option of the EasyEDA platform, not tested)
- Schematic
- BOM

The EasyEDA project is also public, you can directly clone the project, download or open the files from [here](#).

The Boards used to prototype the PLsi v0 were ordered to:

<https://jlpcb.com/>

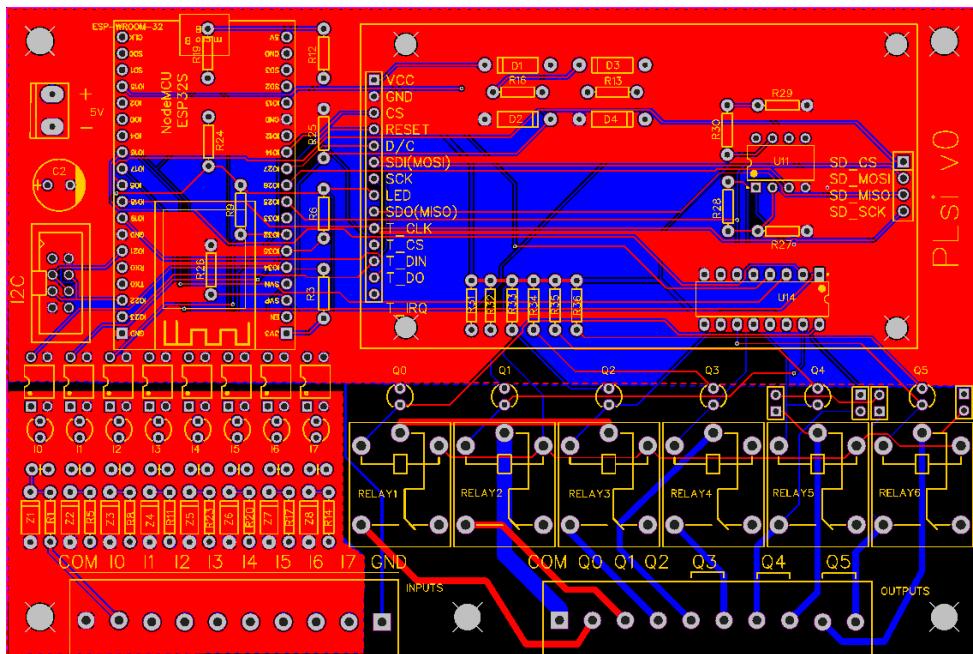

Select the desired PLsi v0 version to build:

1. Digital version:


- 8 digital inputs (5 to 26VDC)
- 6 relay outputs (10A max per PLsi, external fuse required)

Continue to Chapter 2.2

2. Analog version:

- 6 digital inputs (5 to 26VDC)
- 4 relay outputs (10A max per PLsi, external fuse required)
- 2 Analog Inputs (0-5V)
- 2 Analog Outputs (0-5V)

Continue to [Chapter 2.3](#)

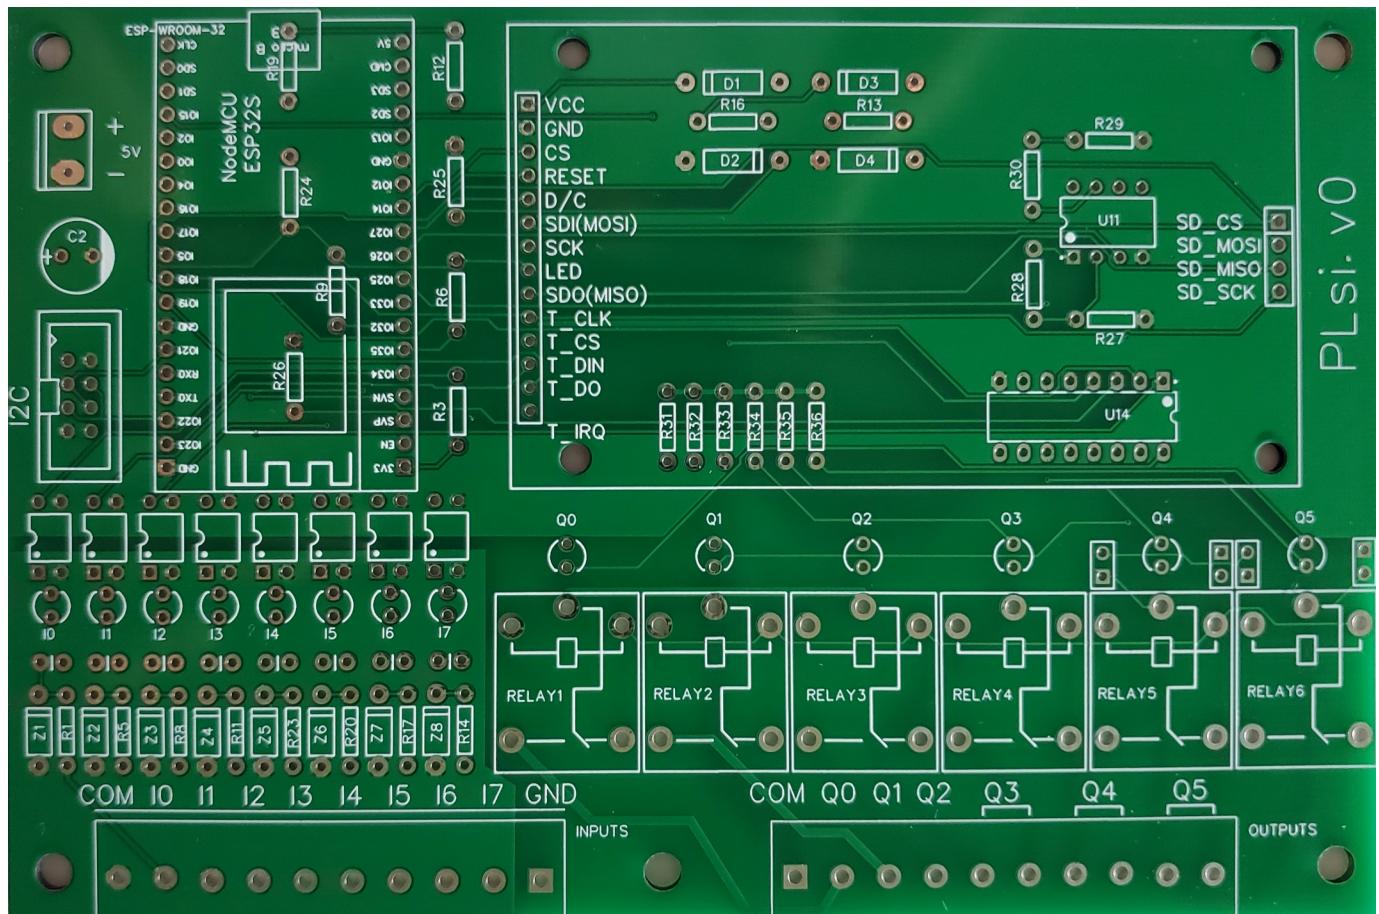

2.2 Digital version

The Digital version of PLsi hardware v0 will have:

- 8 digital inputs (5 to 26VDC)
- 6 relay outputs (10A max per PLsi, external fuse required)

2.2.1 Component list

The following table has the list of components required to build your Digital PLsi v0:


Item	Component TAG	Description	Quantity
1	U1	NodeMCU_ESP32S	1
2	U2	Touch Screen Display	1
3	U14	ULN2003N	1
4	INPUTS, OUTPUTS	5.08 x 10 Terminal block	2
5	U2 – SD Card connection pins	Dupont 2.54mm Male strip	4 pins
6	U1 and U2 - Socket	Dupont 2.54mm Female strip	2 x 40 pins
7	5V (Optional)	Dupont 3 pins male	3 pins
8	P4 (Optional)	HDR-IDC-2.54-2X4P	1
9	C2	Capacitor 1000uF 9V	1
10	OPTO1, OPTO2, OPTO3, OPTO4, OPTO5, OPTO6, OPTO7, OPTO8	Optocoupler PC817	8
11	Z1, Z2, Z3, Z4, Z5, Z6, Z7, Z8	Diode 5v1 – Zenner 1w	8
12	I0, I1, I2, I3, I4, I5, I6, I7	Leds 3mm Color 1	8
13	Q0, Q1, Q2, Q3, Q4, Q5	Leds 3mm Color 2	6
14	R3, R6, R9, R12, R13, R16, R19, R24	Resistor 10k	8
15	R1, R5, R8, R11, R14, R17, R20, R23	Resistor 1K x 1/2W	8
16	R2, R4, R7, R10, R15, R18, R21, R22	Resistor 510 ohms	8
17	R31, R32, R33, R34, R35, R36	Resistor 330 ohms	6
18	RELAY1, RELAY2, RELAY3, RELAY4, RELAY5, RELAY6	SRD-05VDC-SL-C	6

The latest version of the BOM (Bill of Materials) file, is stored in this [Folder](#).

2.2.2 Assembly

This section will recommended a step by step sequence to facilitate the assembly process using the PLsi v0 board. It basically starts with the smaller components and finishes with the bigger ones, adding tips to minimize mistakes.

For each step, the indicated Item number can be found on the previous table (Section 2.2.1) to get more information about the component.

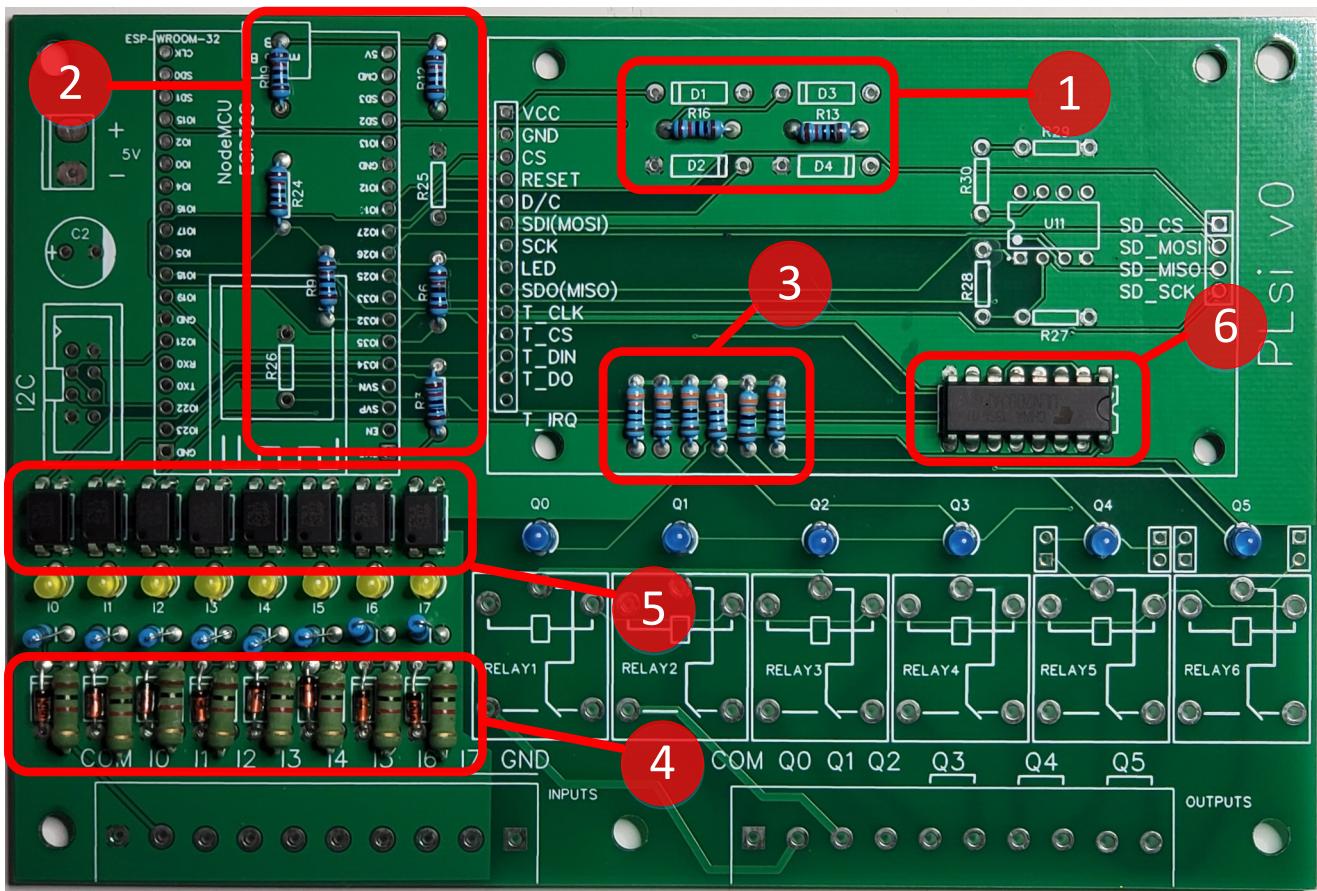

Step 1 - Weld quantity 2 x 10K Resistors – Item 14

Step 2 - Weld quantity 6 x 10K Resistors – Item 14

Step 3 - Weld quantity 6 x 330 ohm Resistors – Item 17




Measure the Resistors value before to weld them

Step 4 - Weld quantity 8 x 1K x 1/2W Resistors – Item 15

Weld the 8 x Zener Diodes 5.1V x 1W – Item 11


Pay special attention to the Zenner diodes polarity:

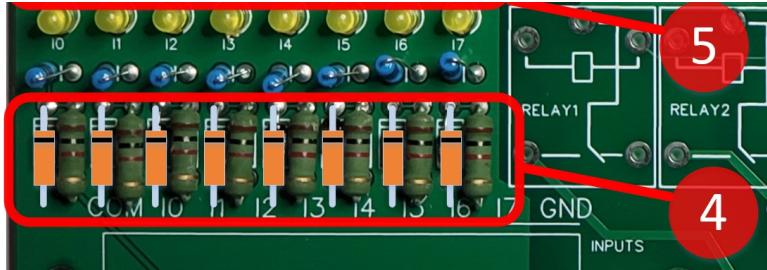

**Do not use components with less power of what is suggested.
1/2W for Resistors and 1W for Zenner Diodes**


Step 5 - Weld quantity 8 x PC817 Optocouplers – Item 10


Pay special attention to the orientation mark on the Chip

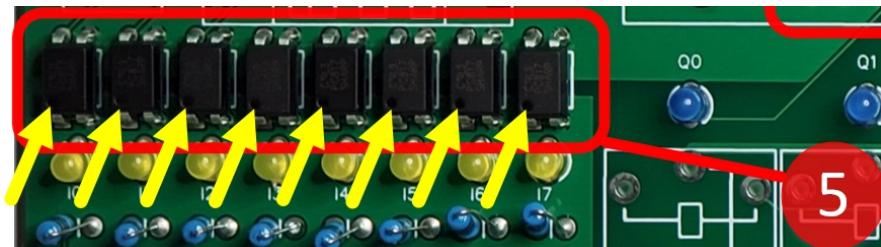

Step 6 - Weld quantity 1 x UNL2003N driver – Item 3

Pay special attention to the orientation mark on the Chip

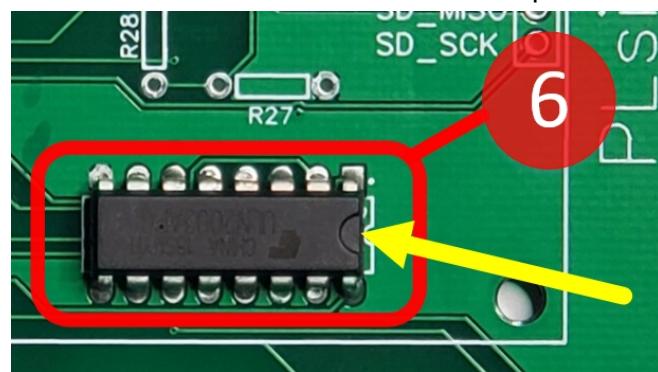

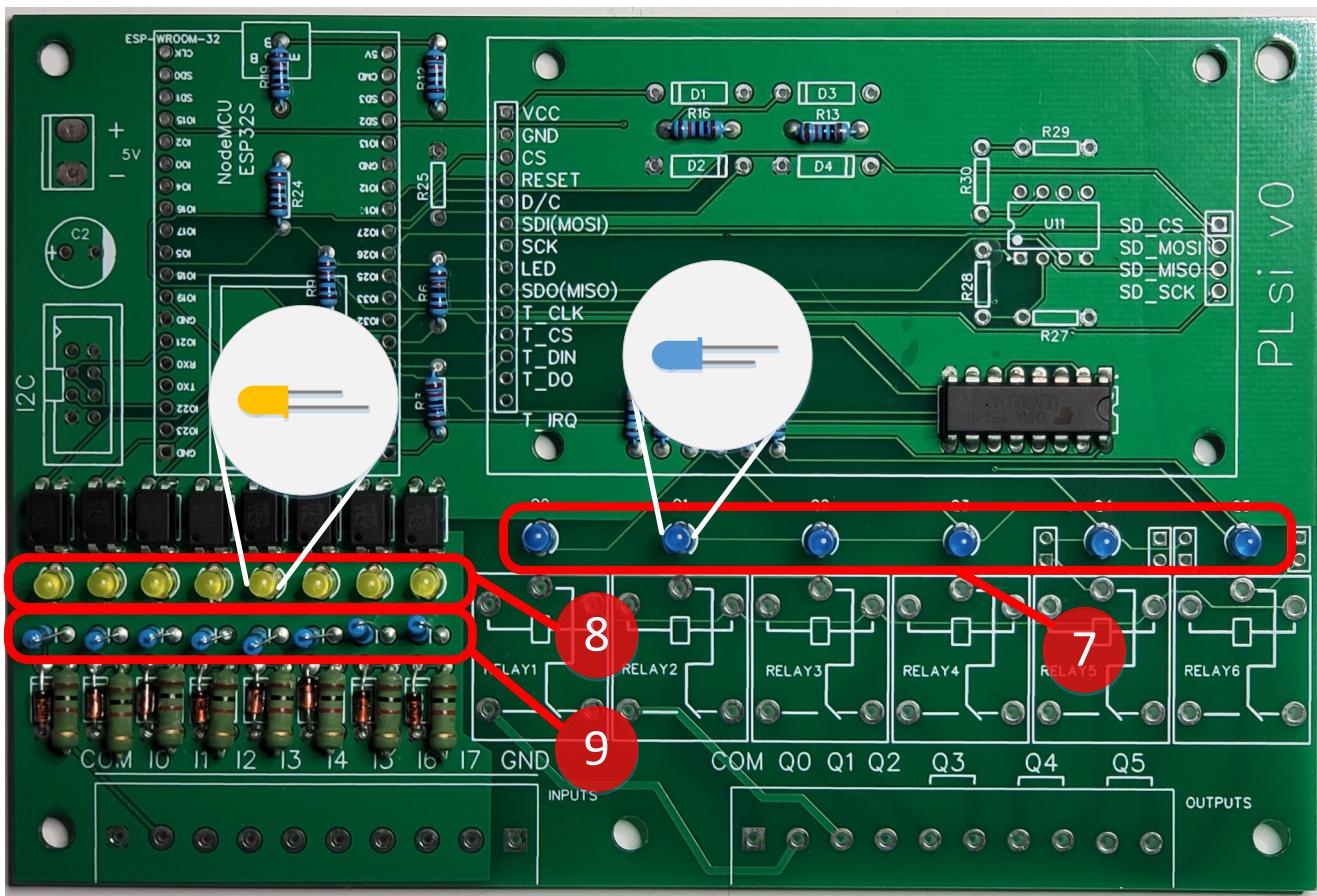

Step 7 - Weld quantity 6 x 3mm Leds of your favorite color – Item 13

It is recommended to avoid using red and green since they are typically used to indicate failures and OK statuses respectively.

Pay special attention to the polarity (Long leg/Short leg)

Recommended color: Blue


Step 8 – Weld quantity 8 x 3mm Leds of your favorite color – Item 12

It is recommended to avoid using red and green since they are typically used to indicate failures and OK statuses respectively.

Pay special attention to the polarity (Long leg/Short leg)

Recommended color: Yellow

Step 9 - Weld vertically quantity 8 x 510 ohms Resistors – Item 16


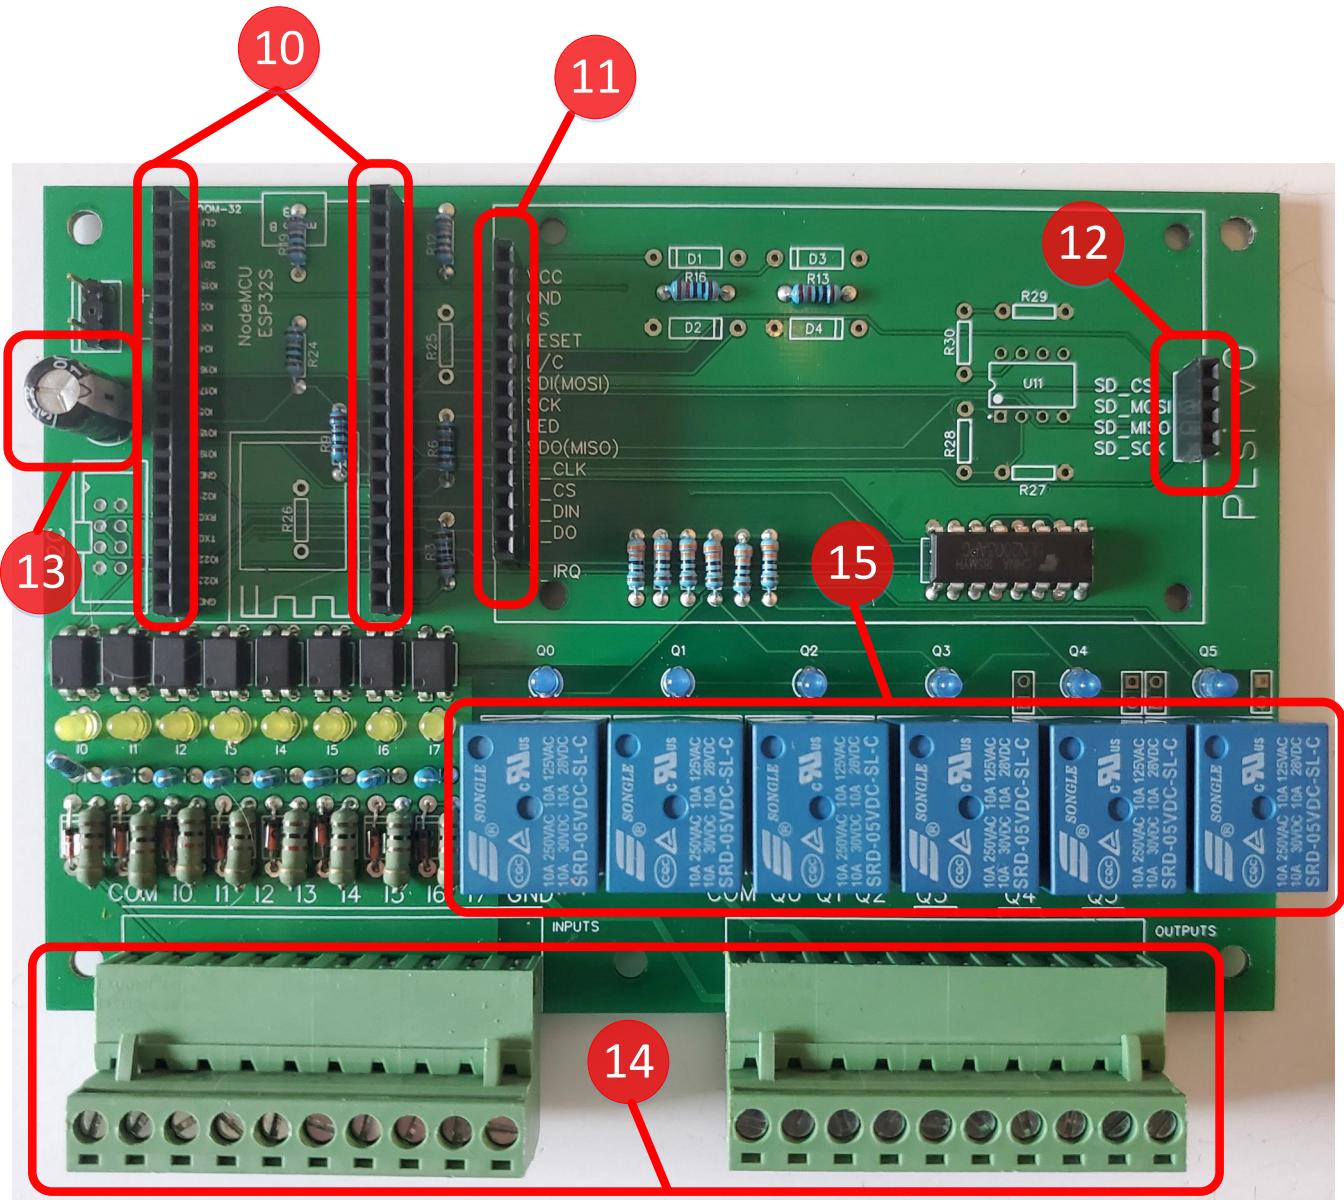


Step 10 – Weld quantity 2 x 18 pins Female Dupont headers (2.54mm) – Item 6

Step 11 - Weld quantity 1 x 14 pins Female Dupont header (2.54mm) – Item 6


Step 12 - Weld quantity 1 x 4 pins Female Dupont header (2.54mm) – Item 6

Cut the Dupont headers to the required dimension using a small cutter

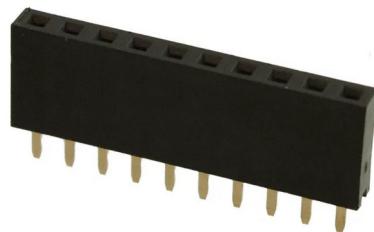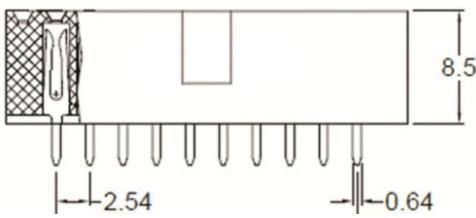

Step 13 - Weld quantity 1 x Capacitor 1000uF 9V – Item 9

Observe the Polarity detail:

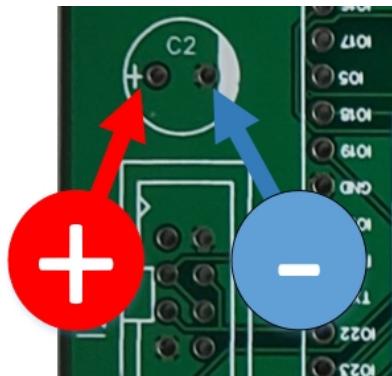


Step 14 - Weld quantity 2 x Header 10 pins 5.08mm – Item 4

Step 15 - Weld quantity 6 x Relay 10Amps Coil 5vdc – Item 18


Step 16 – Optional

Weld the "5V Aux Output Header" – Item 7


Weld the "I2C Expansion Header" – Item 8

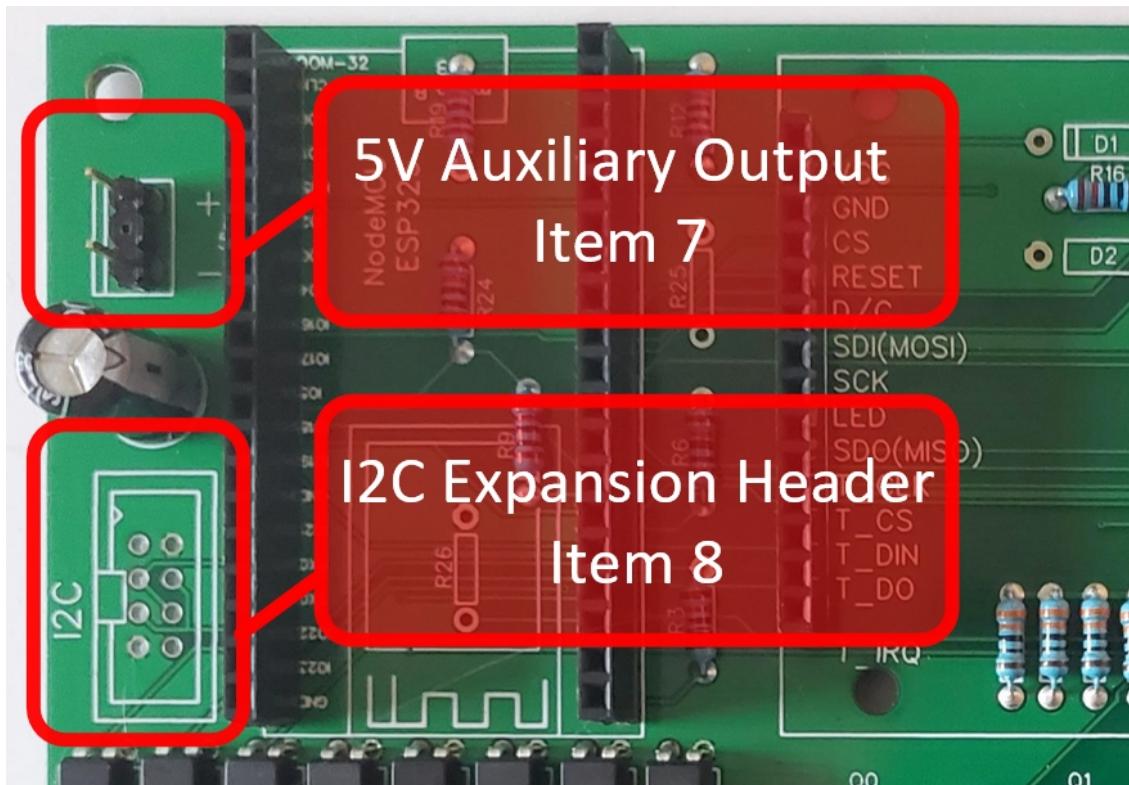

Step 17 – Weld the 4 pin Dupont male header – Item 5 – into the right side of the Display, as indicated in the following picture:

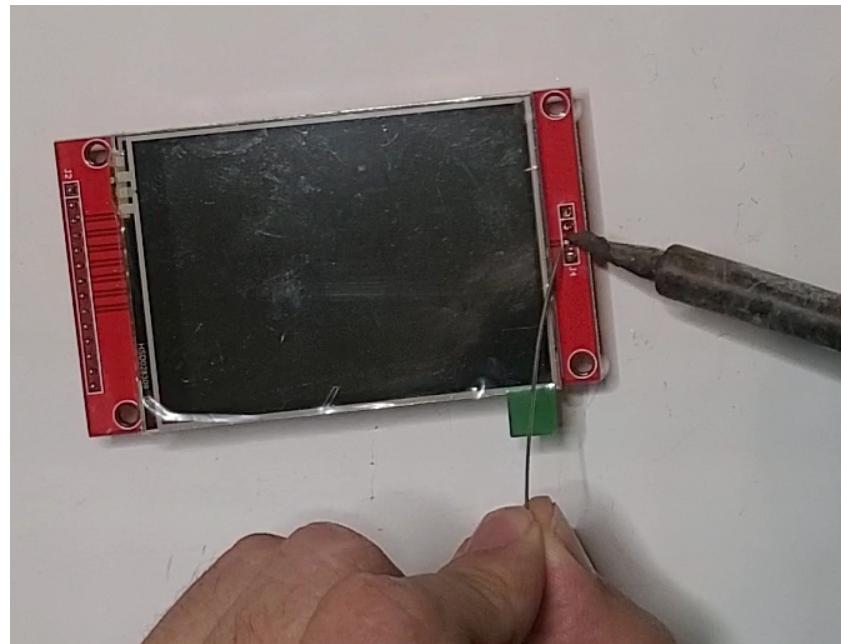

Step 18 – Insert ESP32 Module (Item 1) and Display (Item 2)

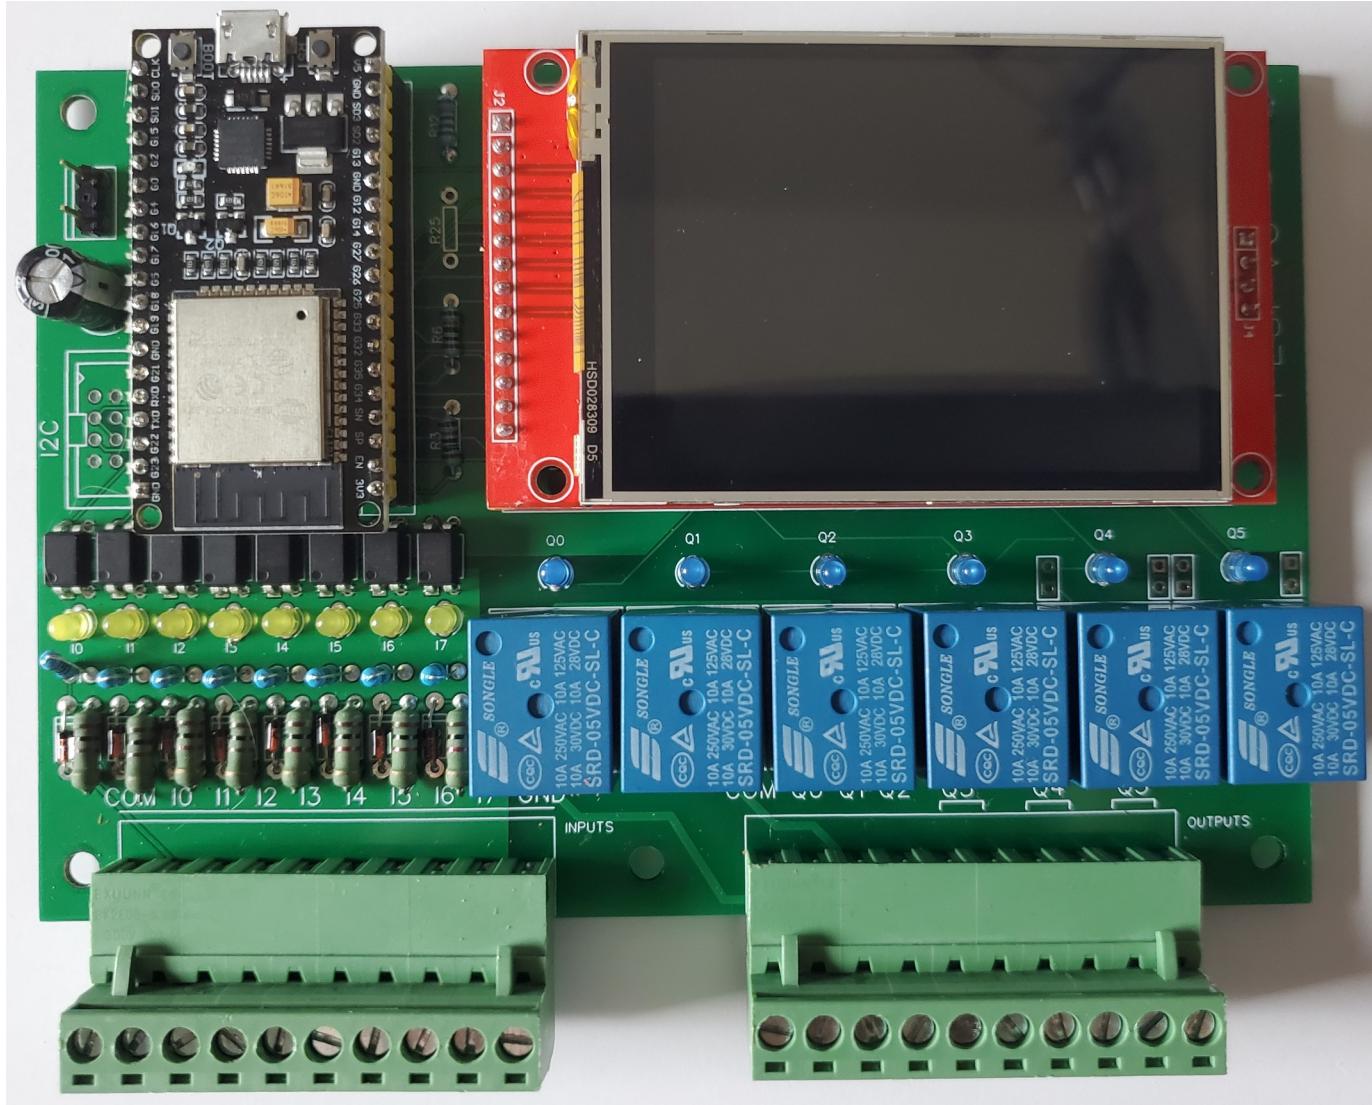


You have now completed the PLSi v0 - Digital Version - hardware assembly.
Jump to Chapter 3 to proceed with the Firmware Download procedure.

2.3 Analog version

The Analog version of PLsi hardware v0 will have:

- 6 digital inputs (5 to 26VDC)
- 4 relay outputs (10A max per PLsi, external fuse required)
- 2 Analog inputs 0-5VDC range (non isolated)
- 2 Analog outputs 0-5VDC range (non isolated)

The analog inputs in the ESP32 doesn't have a good linear response and they have a considerable zero drift. The firmware implement a couple of corrections to improve the linear response of the ADC. The ADC is configured at -6dB:

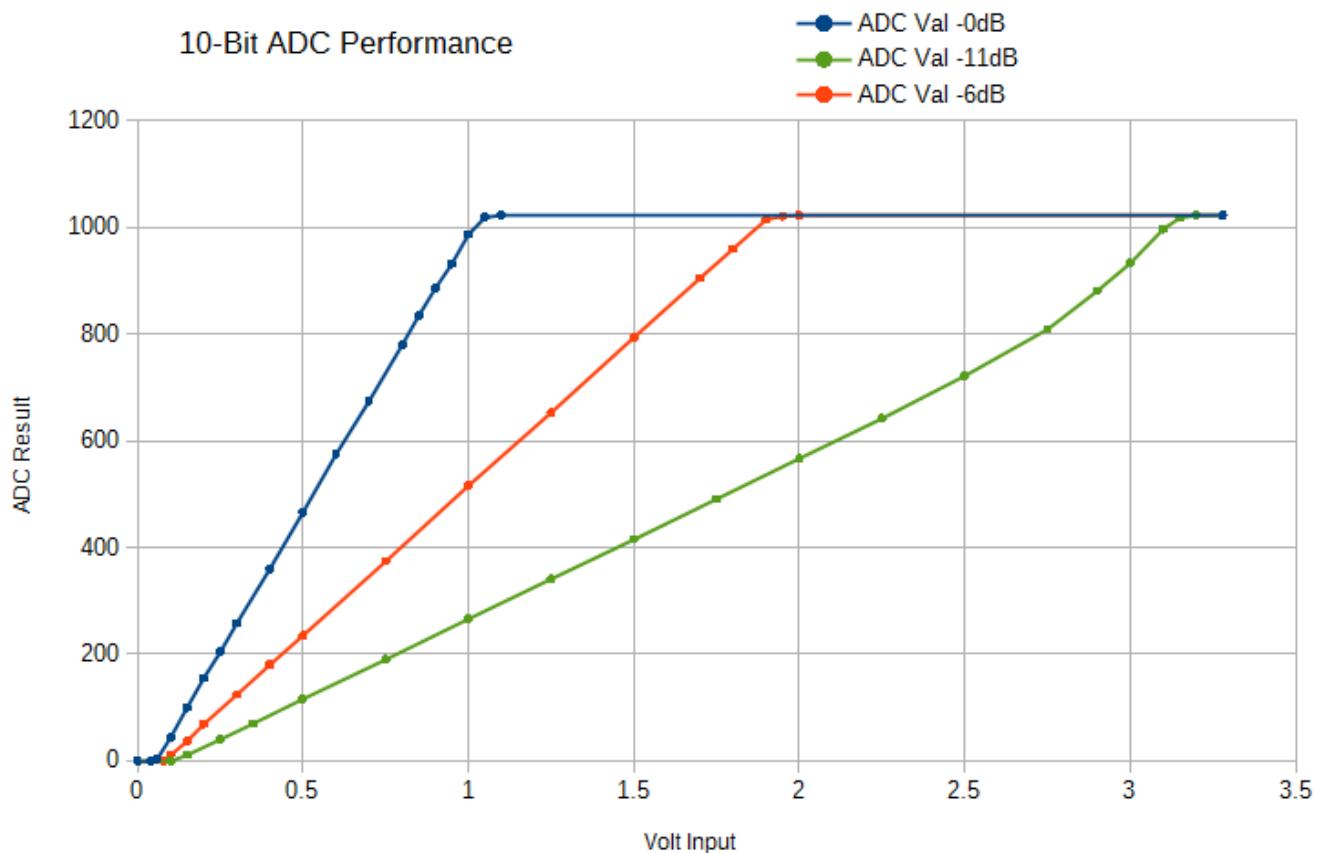

If high precision analog readings are required
an external I2C or Wi-Fi expansion is suggested.

2.3.1 Component list

The following table has the list of components required to build your Analog PLsi v0:


Item	Component TAG	Description	Quantity
1	U1	NodeMCU_ESP32S	1
2	U2	Touch Screen Display	1
3	U14	ULN2003N	1
4	INPUTS, OUTPUTS	5.08 x 10 Terminal block	2
5	U2 – SD Card connection pins	Dupont 2.54mm Male strip	4 pins
6	U1 and U2 - Socket	Dupont 2.54mm Female strip	2 x 40 pins
7	5V (Optional)	Dupont 3 pins male	3 pins
8	P4 (Optional)	HDR-IDC-2.54-2X4P	1
9	C2	Capacitor 1000uF 9V	1
10	OPTO1, OPTO2, OPTO3, OPTO4, OPTO5, OPTO6	Optocoupler PC817	6
11	Z1, Z2, Z3, Z4, Z5, Z6	Diode 5v1 – Zenner 1w	6
12	I0, I1, I2, I3, I4, I5	Leds 3mm Color 1	6
13	Q0, Q1, Q2, Q3	Leds 3mm Color 2	4
14	R3, R6, R9, R12, R19, R24	Resistor 10k	6
15	R1, R5, R8, R11, R20, R23	Resistor 1K x 1/2W	6
16	R2, R4, R7, R10, R21, R22	Resistor 510 ohms	6
17	R31, R32, R33, R34	Resistor 330 ohms	4
18	RELAY1, RELAY2, RELAY3, RELAY4	SRD-05VDC-SL-C	4
19	D1, D2, D3, D4	Diode 1N4148	4
20	R25, R26, R37, R38, R39, R40	Resistor 10k 1%	6
21	R27,R29	Resistor 5k1 1%	2
22	R28,R30	Resistor 3k3 1%	2
23	U11	TLV2462CP	1

The latest version of the BOM (Bill of Materials) file, is stored in this [Folder](#).

2.3.2 Assembly


This section will recommended a step by step sequence to facilitate the assembly process using the PLsi v0 board. It basically starts with the smaller components and finishes with the bigger ones, adding tips to minimize mistakes.

For each step, the indicated Item number can be found on the previous table (Section 2.2.1) to get more information about the component.

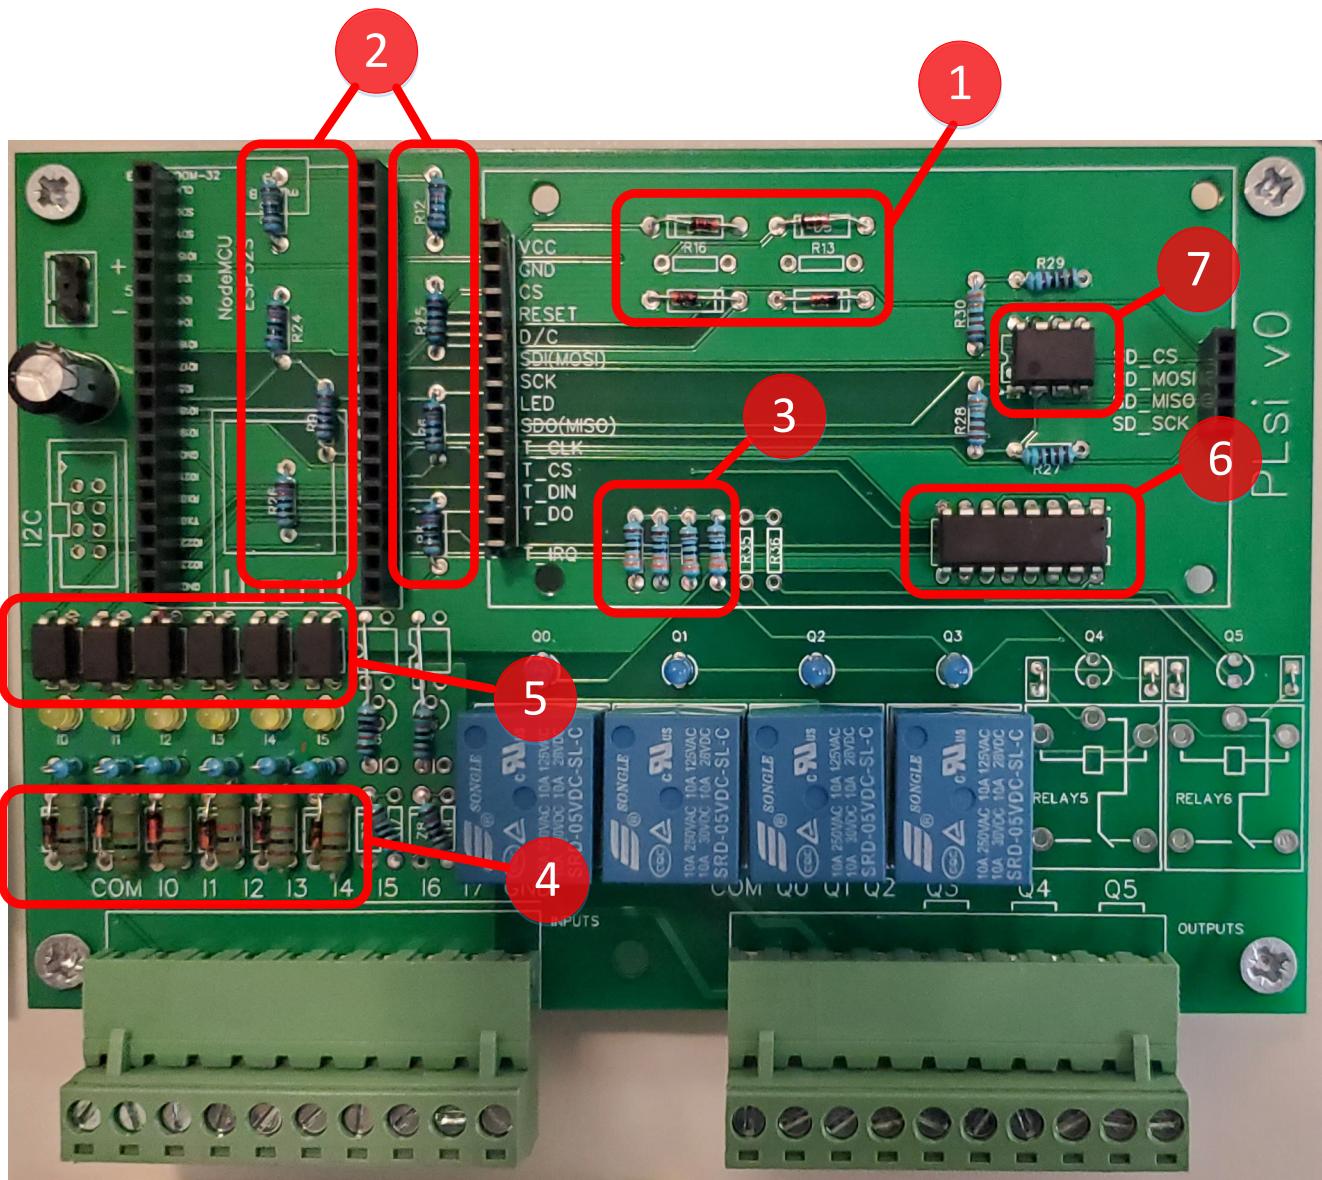

Step 1 - Weld quantity 4 x 1N4148 diodes – Item 19

Pay attention to the diodes polarity:

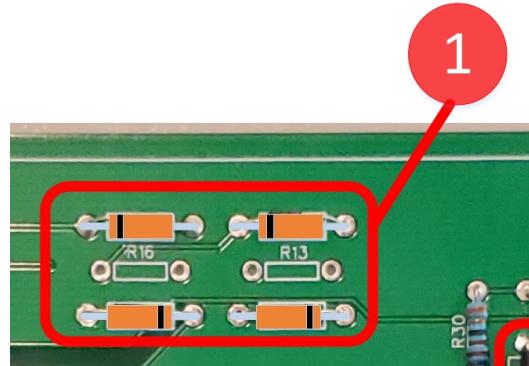

Step 2 - Weld quantity 6 x 10K Resistors – Item 14

Weld quantity 2 x 10K @1% Resistors – Item 20 – Component R25 and R26

Step 3 - Weld quantity 4 x 330 ohm Resistors – Item 17




Measure the Resistors value before to weld them

Step 4 - Weld quantity 6 x 1K x 1/2W Resistors – Item 15

Weld the 6 x Zenner Diodes 5.1V x 1W – Item 11


Pay special attention to the Zenner diodes polarity:

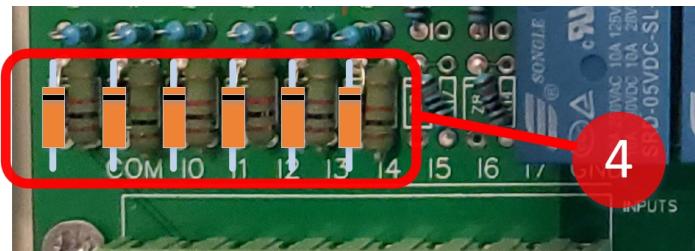

**Do not use components with less power of what is suggested.
1/2W for Resistors and 1W for Zenner Diodes**


Step 5 - Weld quantity 8 x PC817 Optocouplers – Item 10

Pay special attention to the orientation mark on the Chip

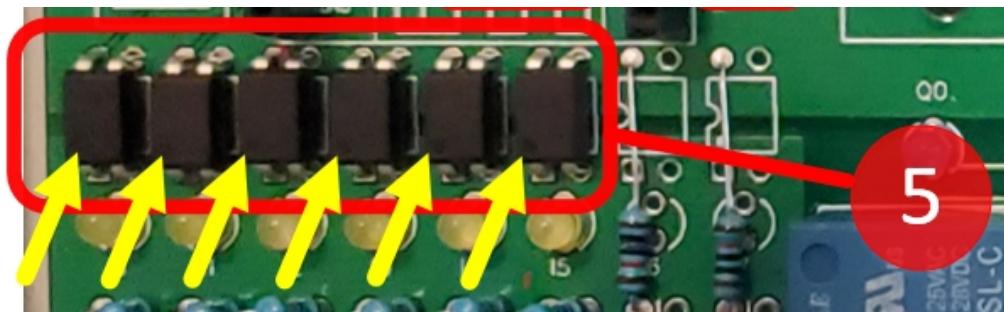

Step 6 - Weld quantity 1 x UNL2003N driver – Item 3


Pay special attention to the orientation mark on the Chip

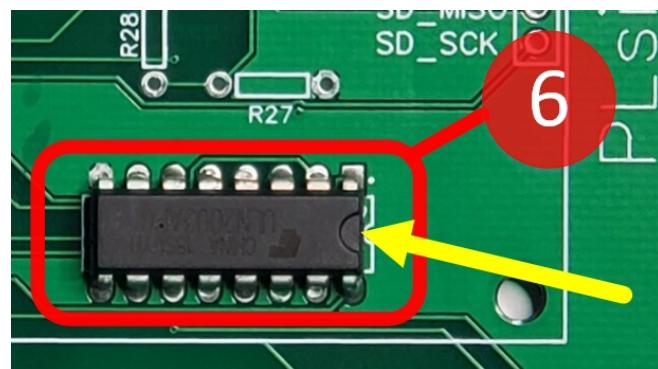

Step 7 - Weld quantity 1 x TLV2462CP Operation Amplifier – Item 23

Pay special attention to the orientation mark on the Chip



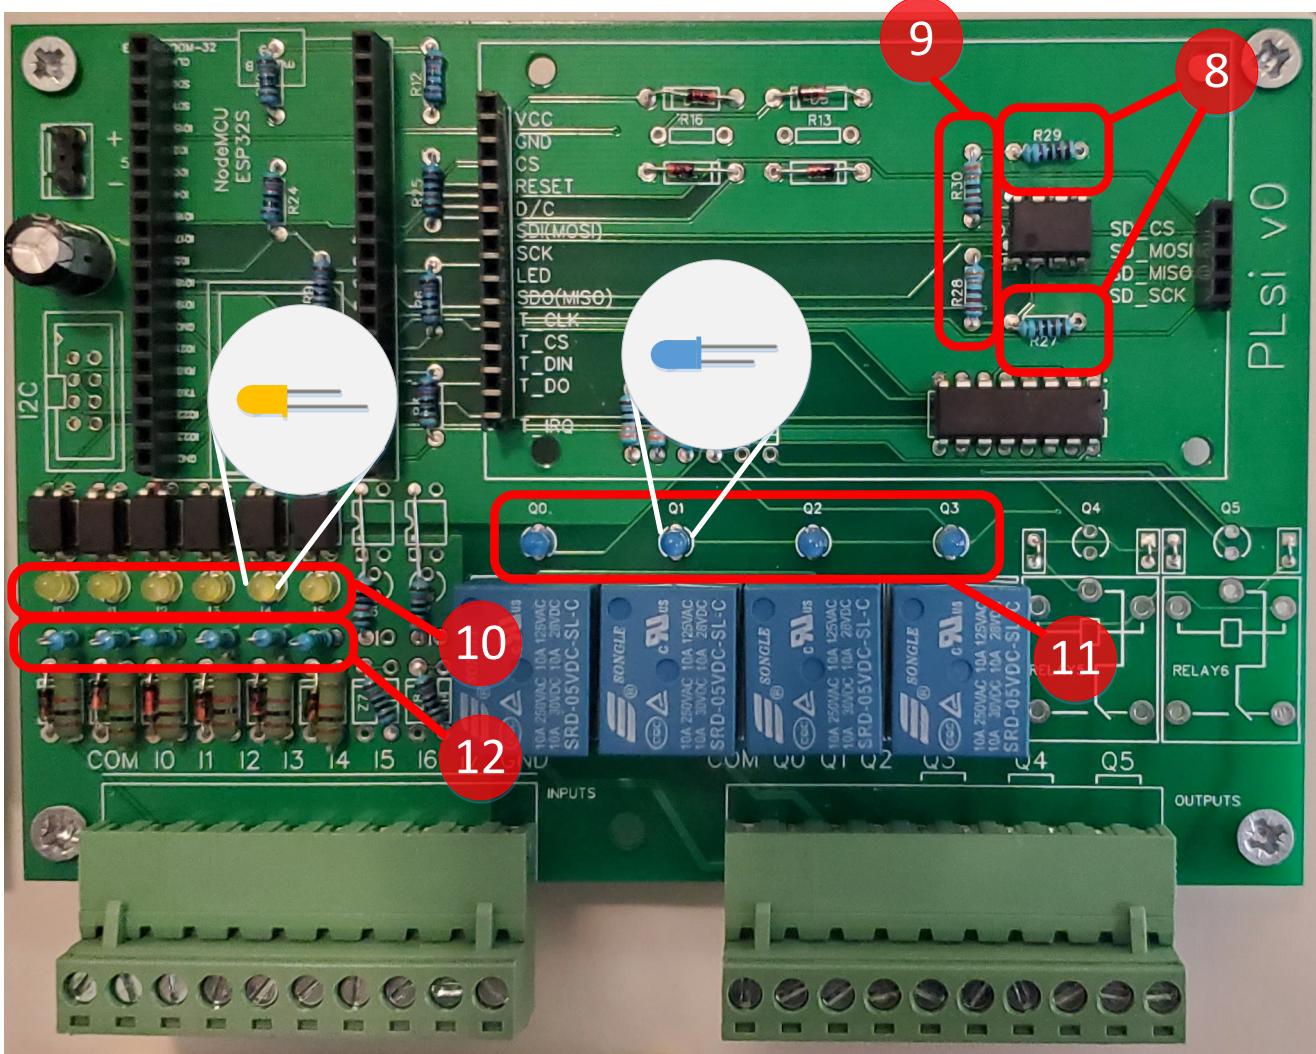

Step 8 - Weld quantity 2 x 5k1 @1% Resistors – Item 21

Step 9 - Weld quantity 2 x 3k3 @1% Resistors – Item 22

Step 10 – Weld quantity 6 x 3mm Leds of your favorite color – Item 12

It is recommended to avoid using red and green since they are typically used to indicate failures and OK statuses respectively.

Pay special attention to the polarity (Long leg/Short leg)

Recommended color: Yellow


Step 11 - Weld quantity 4 x 3mm Leds of your favorite color – Item 13

It is recommended to avoid using red and green since they are typically used to indicate failures and OK statuses respectively.

Pay special attention to the polarity (Long leg/Short leg)

Recommended color: Blue

Step 12 - Weld vertically quantity 6 x 510 ohms Resistors – Item 16

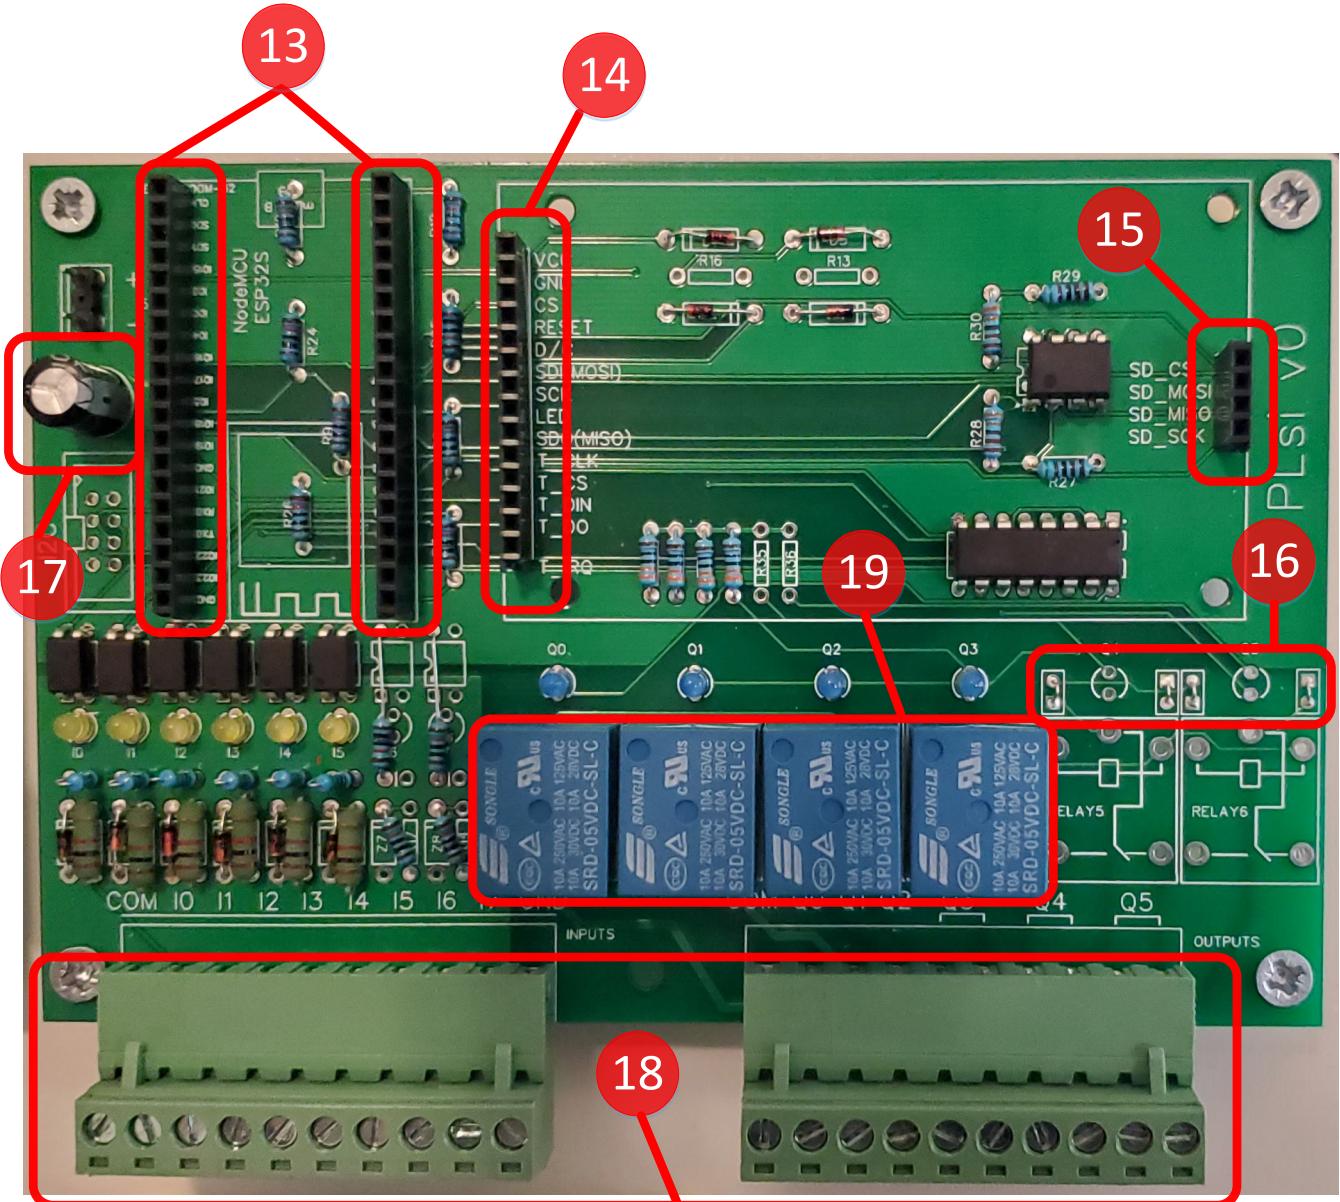


Step 13 – Weld quantity 2 x 18 pins Female Dupont headers (2.54mm) – Item 6

Step 14 - Weld quantity 1 x 14 pins Female Dupont header (2.54mm) – Item 6

Step 15 - Weld quantity 1 x 4 pins Female Dupont header (2.54mm) – Item 6


Cut the Dupont headers to the required dimension using a small cutter

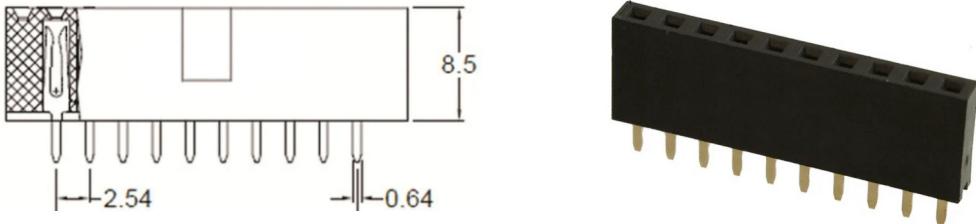

Step 16 - Weld quantity 4 jumpers


Step 17 - Weld quantity 1 x Capacitor 1000uF 9V – Item 9

Observe the Polarity detail:

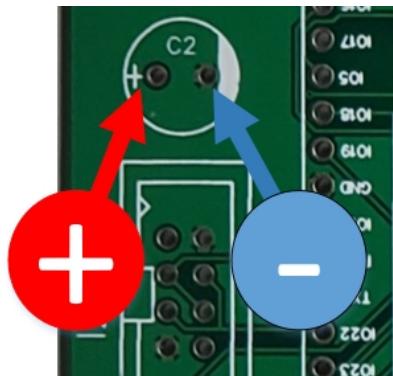


Step 18 - Weld quantity 2 x Header 10 pins 5.08mm – Item 4

Step 19 - Weld quantity 4 x Relay 10Amps Coil 5vdc – Item 18

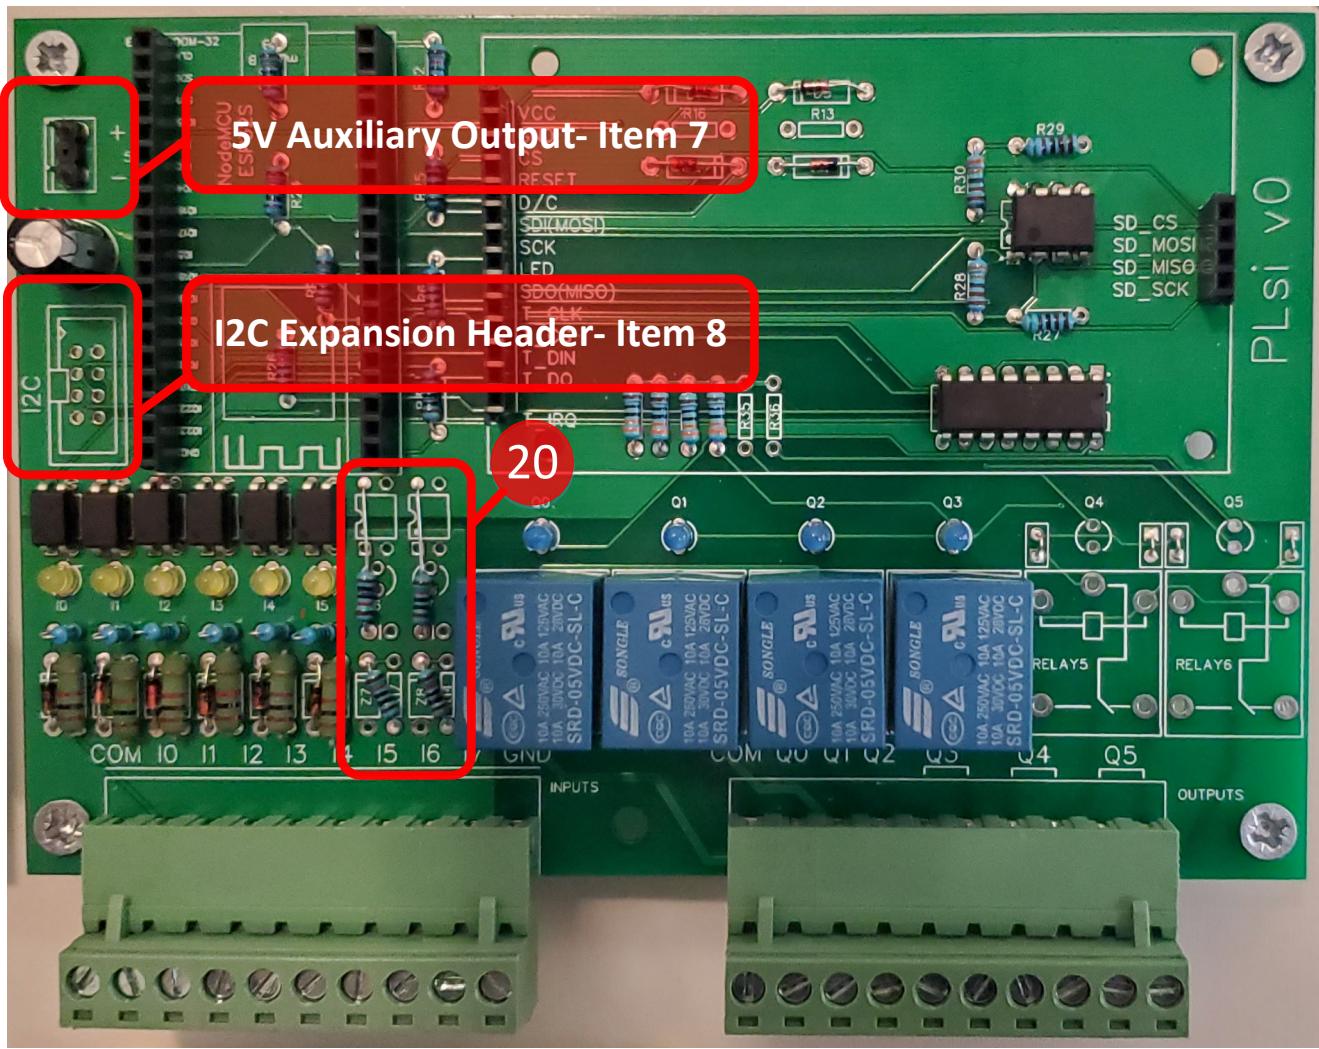

Step 20 – Weld quantity 4 x 10k @1% Resistors – Item 20

Pay special attention since these resistors are located in odd holes

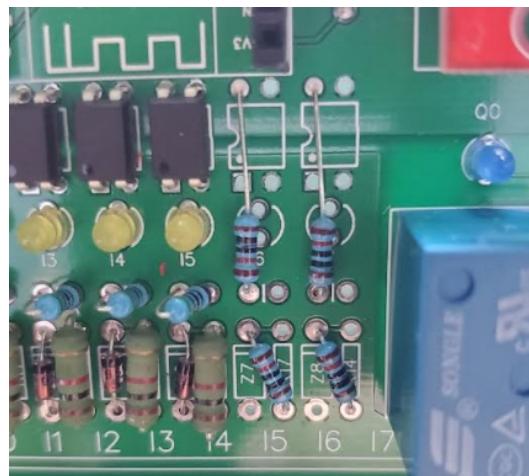


Step 21 – Optional


Weld the “5V Aux Output Header” – Item 7

Weld the “I2C Expansion Header” – Item 8

Step 22 – Weld the 4 pin Dupont male header – Item 5 – into the right side of the Display, as indicated in the following picture:

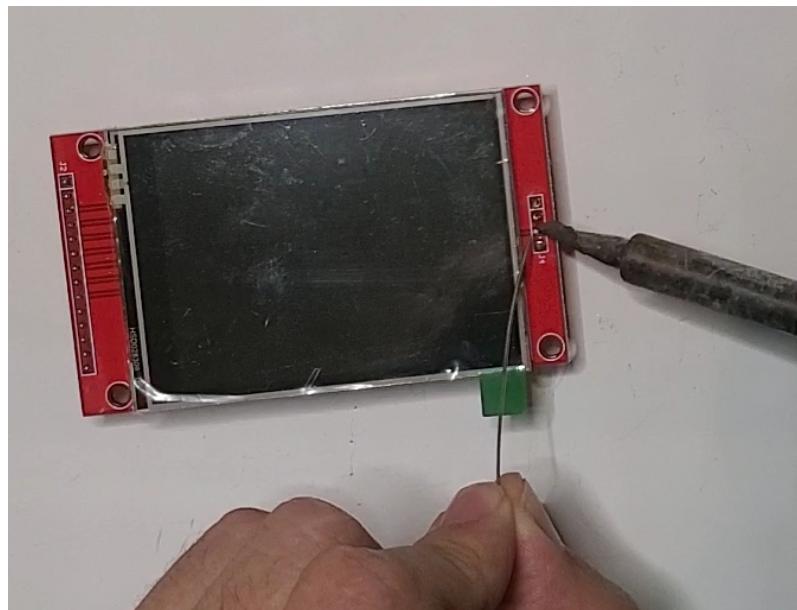

Step 23 – Insert ESP32 Module (Item 1) and Display (Item 2)

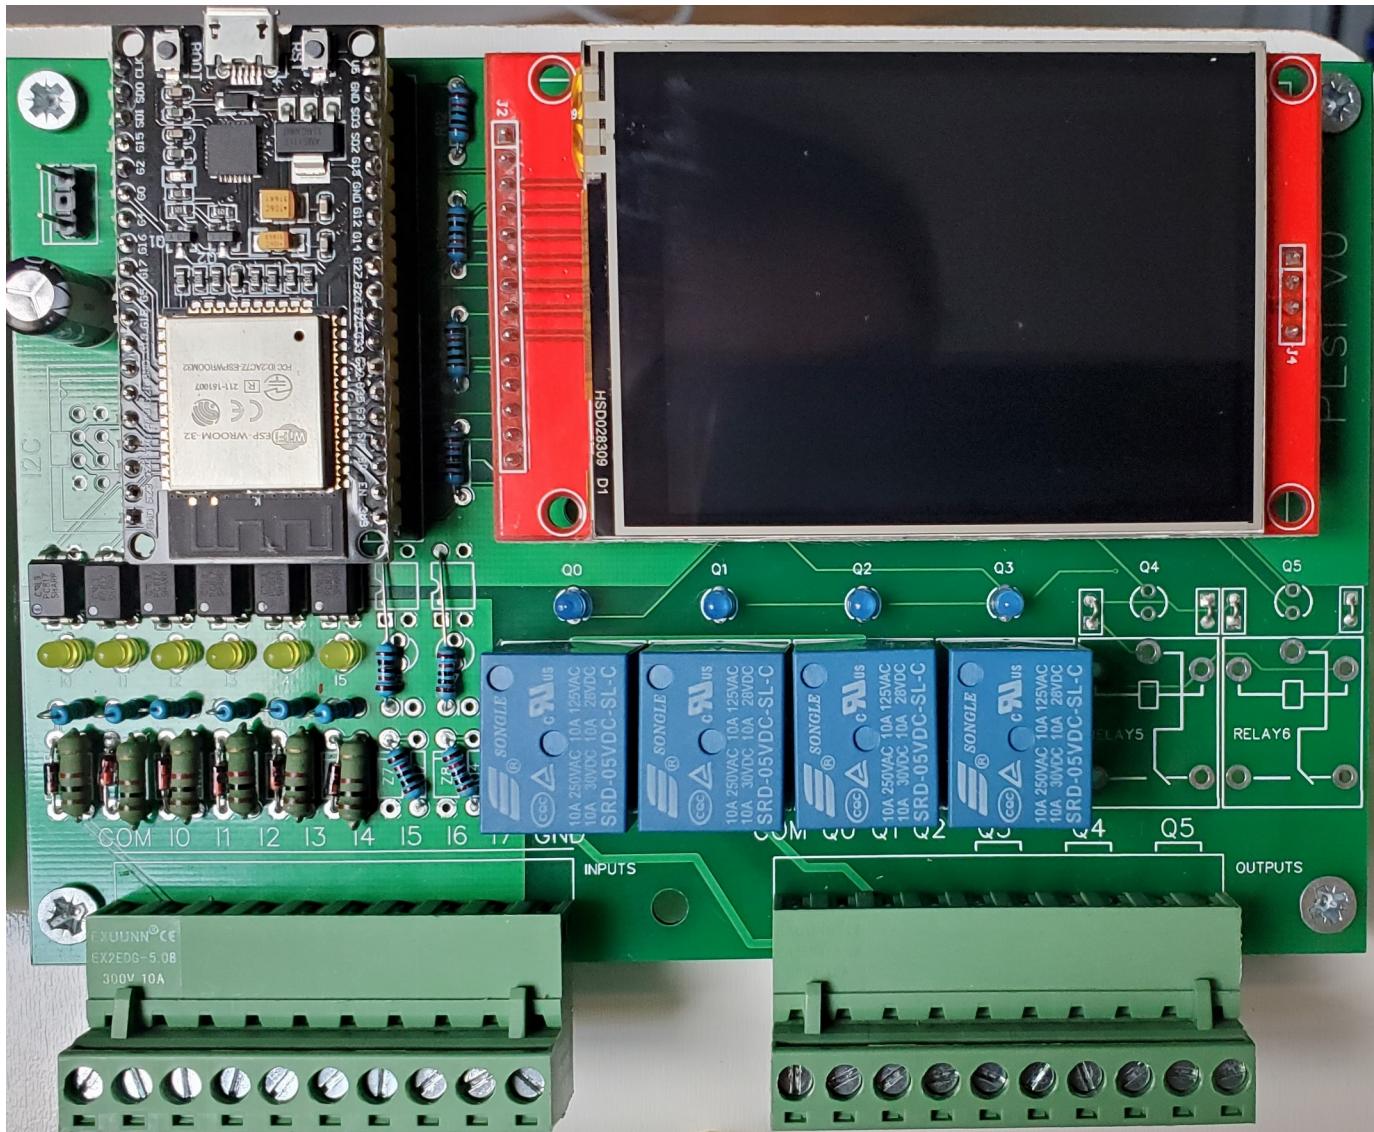

You have now completed the PLsi v0 - Analog Version - hardware assembly.

Jump to Chapter 3 to proceed with the Firmware Download procedure.

3. Firmware Download

This chapter will cover the initial firmware download procedure of your PLsi.

For the initial download the full firmware must be downloaded, it is composed by 4 files:

Number	File name	Address
1	0x01000 - bootloader_dio_40m.bin	0x01000
2	0x08000 - partitions.bin	0x08000
3	0x0E000 - boot_app0.bin	0x0E000
4	0x10000 - PLsi v0.00.03	0x10000

After this initial procedure, refer to the User Manual to start using the Web Page method to download newer Firmware versions. The web page updater only needs to download file number 4, which is the PLsi firmware itself.

All, the four files are only required to be downloaded during the initial programming discussed on this chapter.

3.1 Required files

The 4 mentioned Firmware files are provided with each [release](#) of PLsi.

For example, for the Release v0.00.03, at the bottom of the description you will find the zip named "PLsi.binaries.vX.XX.XX", containing the 4 required [files](#):

▼ Assets 3

PLsi.binaries.v0.00.03.zip	566 KB
Source code (zip)	
Source code (tar.gz)	

Download the file and decompress it, in this example using release v0.00.03, the following files should be available:

A screenshot of a Windows File Explorer window. The address bar shows the path: This PC > D (D:) > v0.00.03. The search bar contains "Search v0.00.03". The left sidebar shows icons for Pictures for manual, OneDrive, This PC, and 3D Objects. The main area displays a list of files in a table format:

	Name	Date modified	Type	Size
	0x0E000 - boot_app0.bin	7/5/2020 10:15 AM	BIN File	8 KB
	0x01000 - bootloader_dio_40m.bin	7/5/2020 10:15 AM	BIN File	16 KB
	0x08000 - partitions.bin	12/31/2020 8:45 AM	BIN File	3 KB
	0x10000 - PLsi v0.00.03.bin	3/21/2021 9:13 AM	BIN File	1,026 KB



It is recommended to download the latest available Release

3.2 Espressif download tool

The recommended method presented on this chapter, uses the standard tool provided by Espressif "Flash Download Tool" to write the initial Firmware.

Tools Required:

- PC with an USB port available. The software can be installed on Windows, macOS and Linux
- USB micro-B Cable to connect the PC to your PLsi



To get the program you can either download the latest version from Espressif web page or download a saved copy from PLsi repository:

1 – Espressif web page: Go to Support → Tools → Flash Download Tool → Download

The screenshot shows the Espressif website interface. A red circle labeled '1' highlights the 'Support' menu item. A red circle labeled '2' highlights the 'Tools' tab in the main navigation bar. A red circle labeled '3' highlights the 'Download' button for the 'Flash Download Tools' entry in the search results table.

Support > Download > Tools


All SDKs & Demos Apps Tools AT

Search keywords

Found 3 results

Title	Platform Version	Release Date	Download
Flash Download Tools	Windows PC	V3.9.2 2021.11.10	

2 – PLsi repository: Go to Folder doc → [tools](#) → Right click on File --> Download

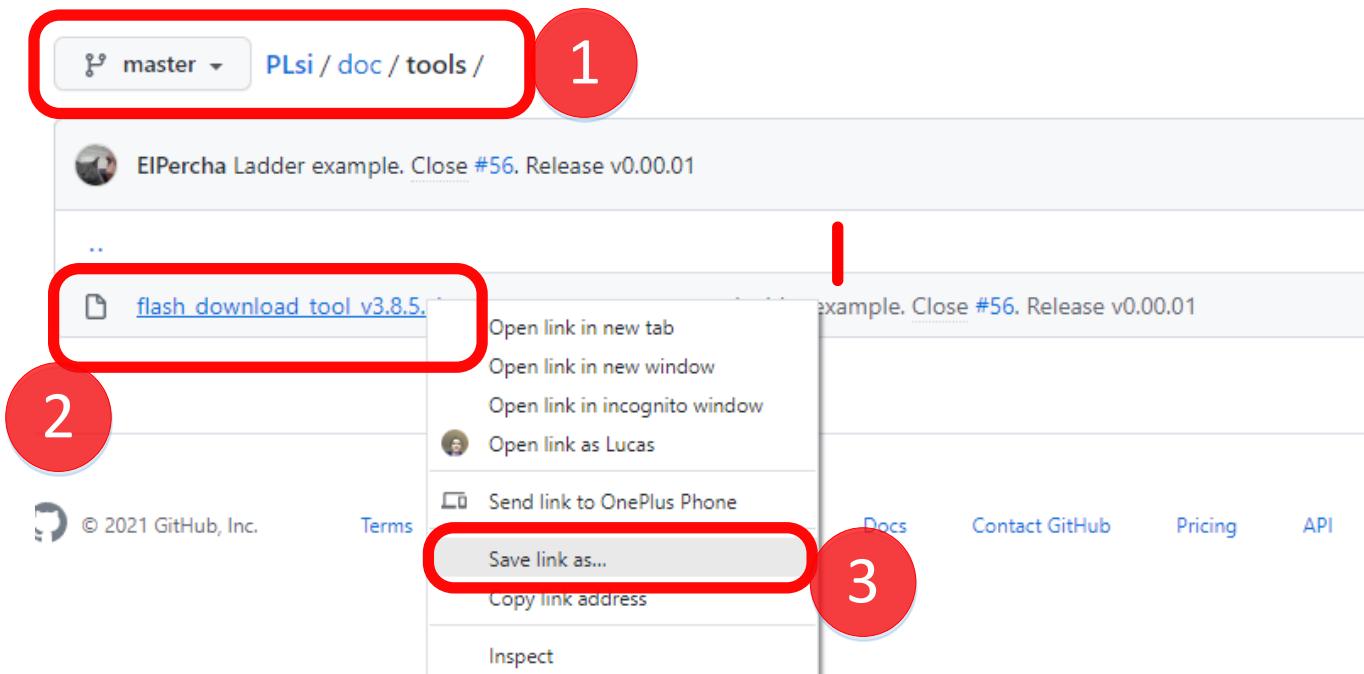


Once you have downloaded the Flash Download Tool zip file, decompress it and execute the exe file in the root directory. In this example: "flash_download_tool_3.8.5.exe"


Name	Date modified	Type	Size
bin	4/25/2020 7:57 PM	File folder	
combine	11/25/2021 5:17 PM	File folder	
configure	11/25/2021 5:17 PM	File folder	
dl_temp	11/25/2021 5:17 PM	File folder	
doc	11/25/2021 5:17 PM	File folder	
init_data	11/25/2021 5:17 PM	File folder	
logs	11/28/2021 8:00 PM	File folder	
RESOURCE	11/25/2021 5:17 PM	File folder	
flash_download_tool_3.8.5.exe	11/25/2021 4:14 PM	Application	13,834 KB
Readme.pdf	11/25/2021 4:14 PM	Microsoft Edge P...	455 KB

The main Window will appear:


Factory Mode is intended to Flash multiple devices with a single command.
Select “Developer Mode” since we will program a single device:

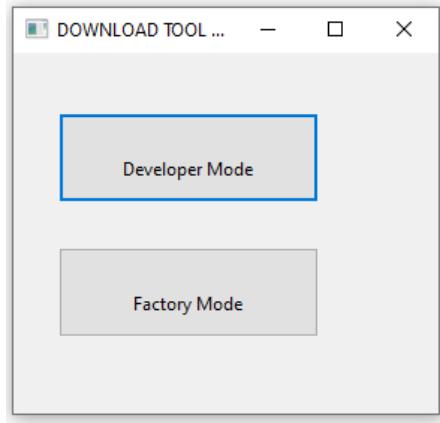

The device selection menu will appear, select “ESP32 DownloadTool” from the menu:

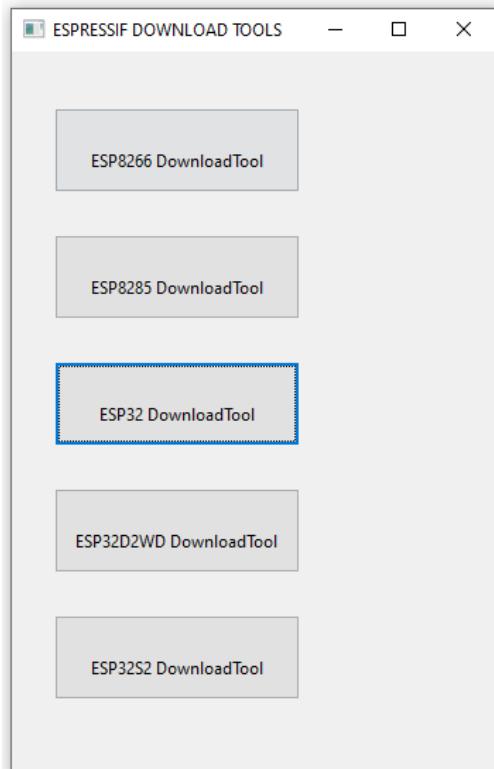

The Download tool will now open.

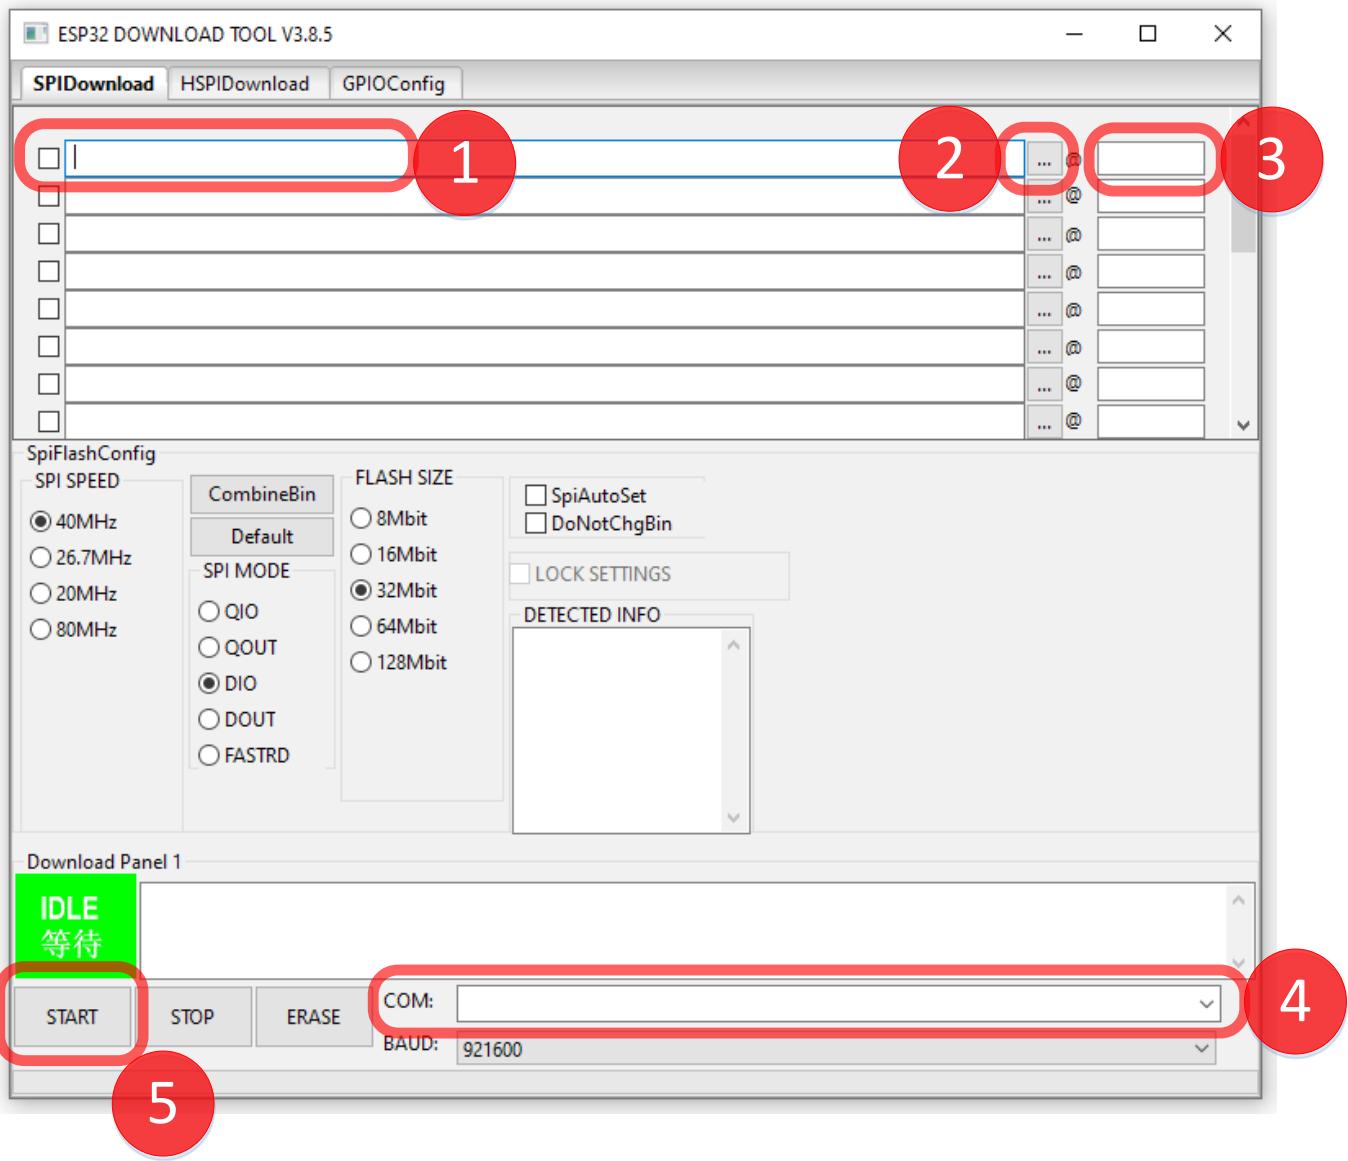


The main components to be used during the process are:

- 1 – File Name and Location. Insert the File location and name
- 2 – Opens the File Browser to facilitate the file location
- 3 – Memory Address of the File
- 4 – COM port where the ESP32 is connected
- 5 – START command for the Firmware download process

3.2 Downloading the Firmware


In the main Screen of the Flash Download Tool, select the following settings and configurations:

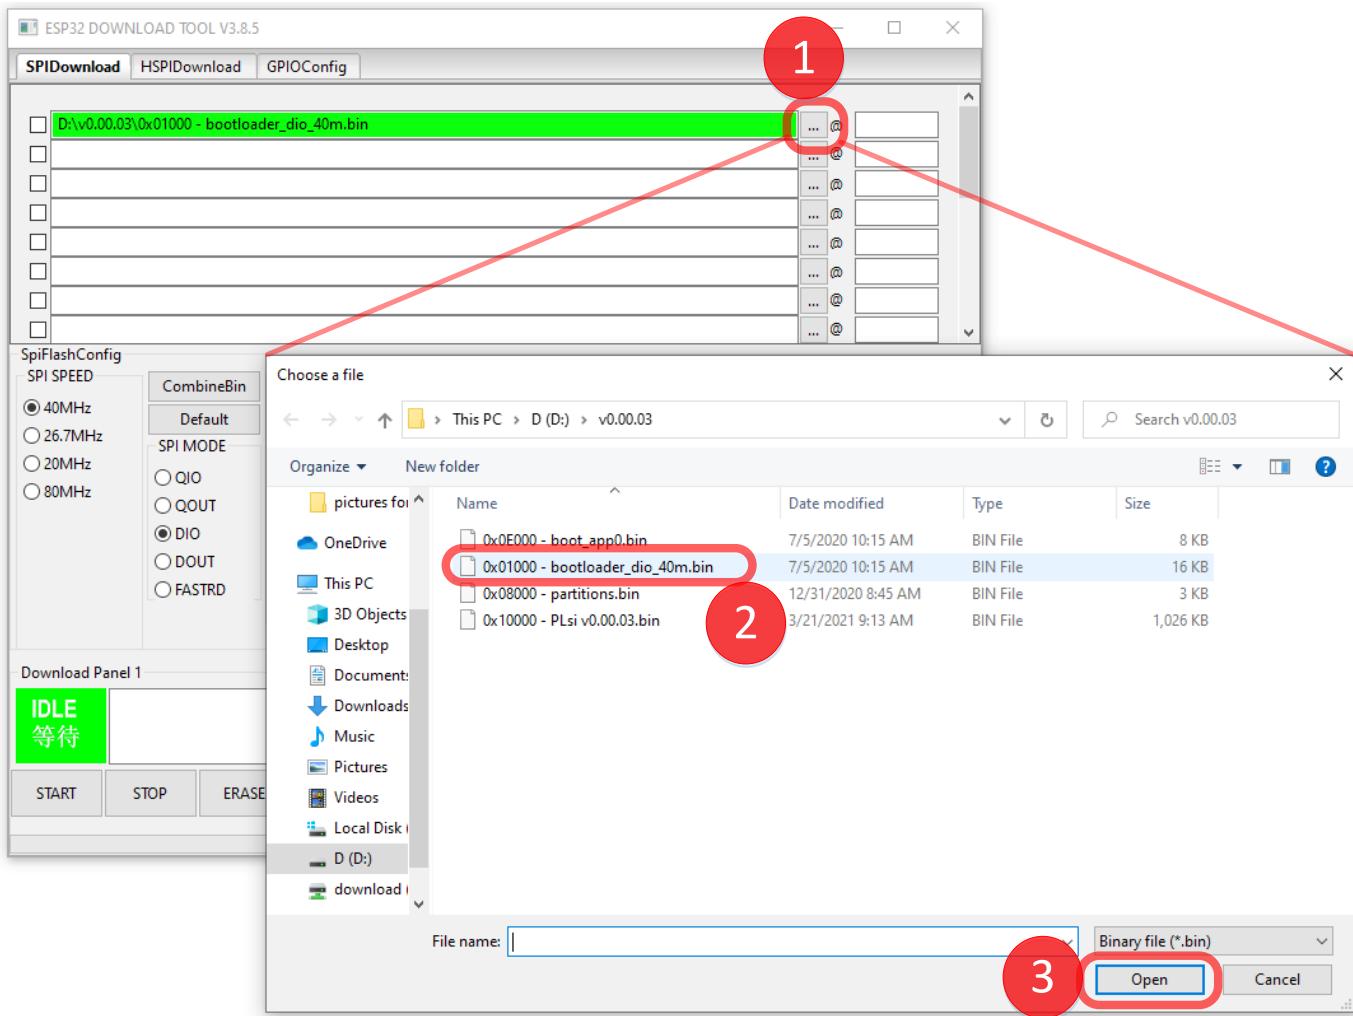

1 – Click on File Browser

2 – Select the First file to be downloaded, they will be organized from the lowest memory address to the highest. Start with the “0x01000 – bootloader_dio_40m.bin”


3 – Click “Open”

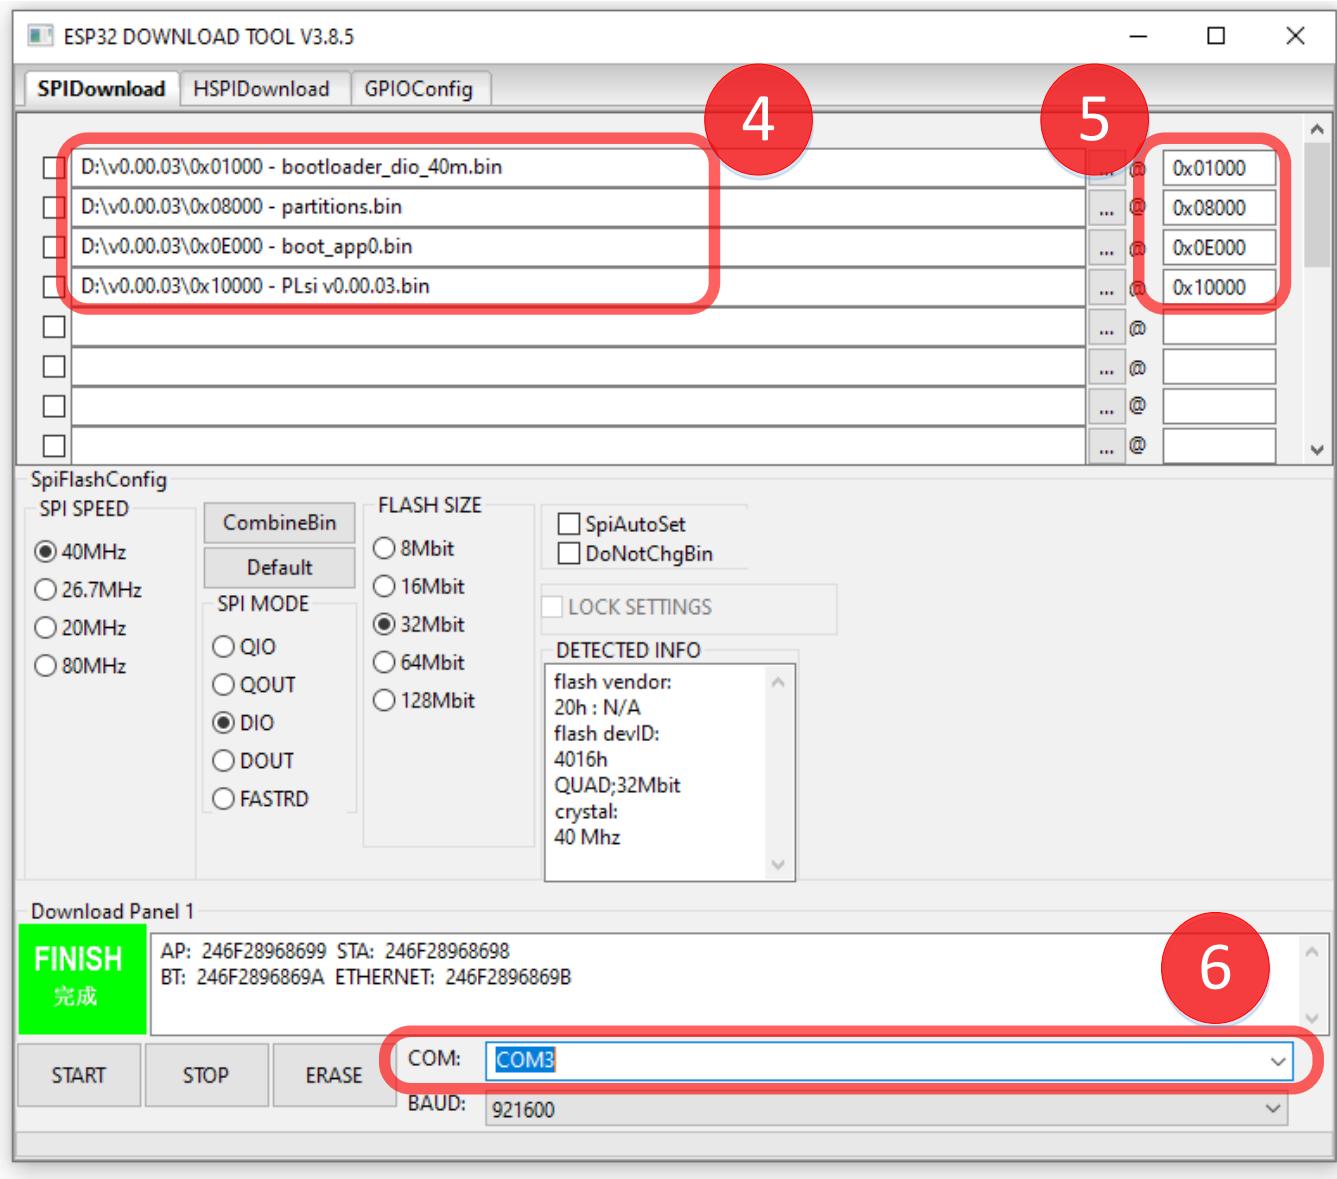

4 – Load the 4 required files

5 – Manually configure the address of each file. Double check that the filename matches with the address you are introducing on the right panel


6 – Select the COM port where the ESP32 PLsi is connected

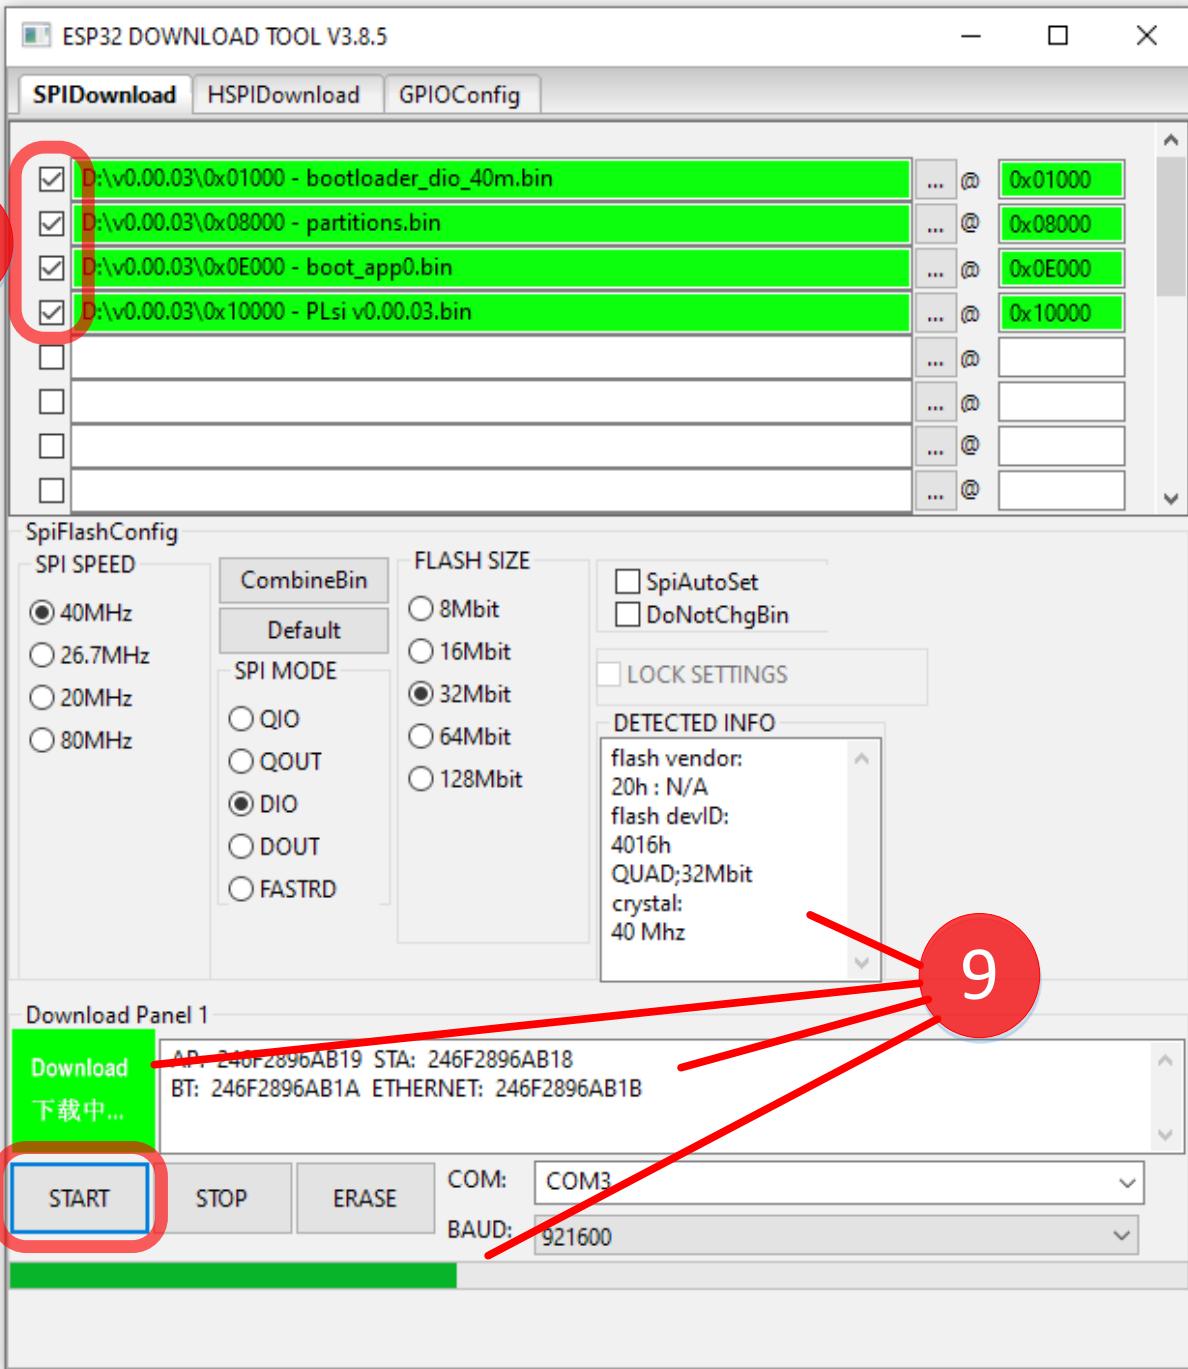


7 – Select all the 4 files, they should become green. Leave the rest of settings by Default.

8 – Click on START button to initiate the Firmware download process


9 – Immediately after the command START is given, it is recommended to push and hold for a couple of seconds the BOOT button of your ESP32 module until the process starts:

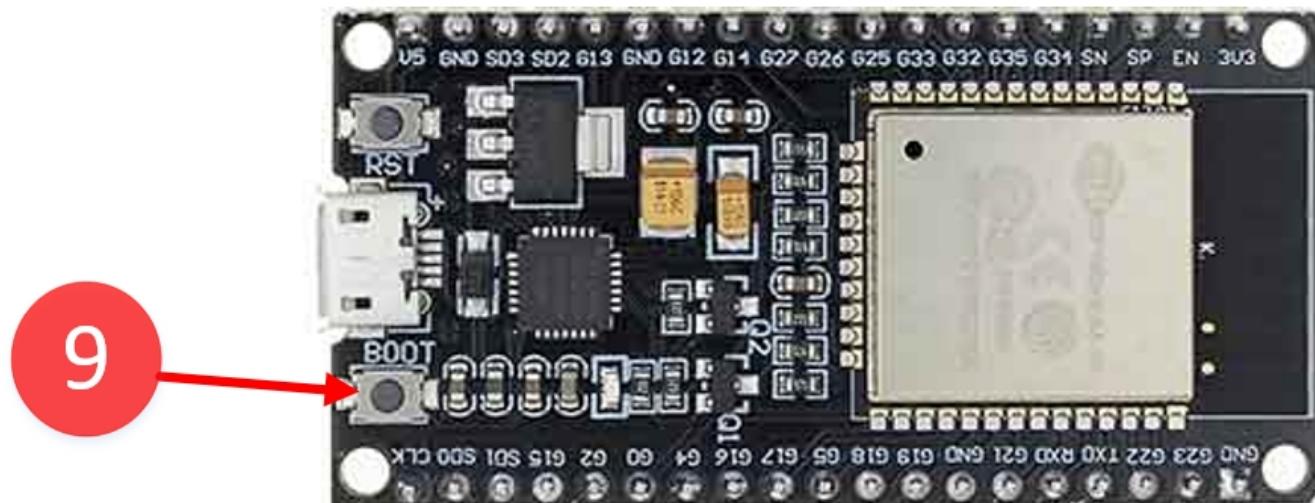

When the download process is started, you will see the green progress bar running as long as the other indications about the ESP32 chip detected.

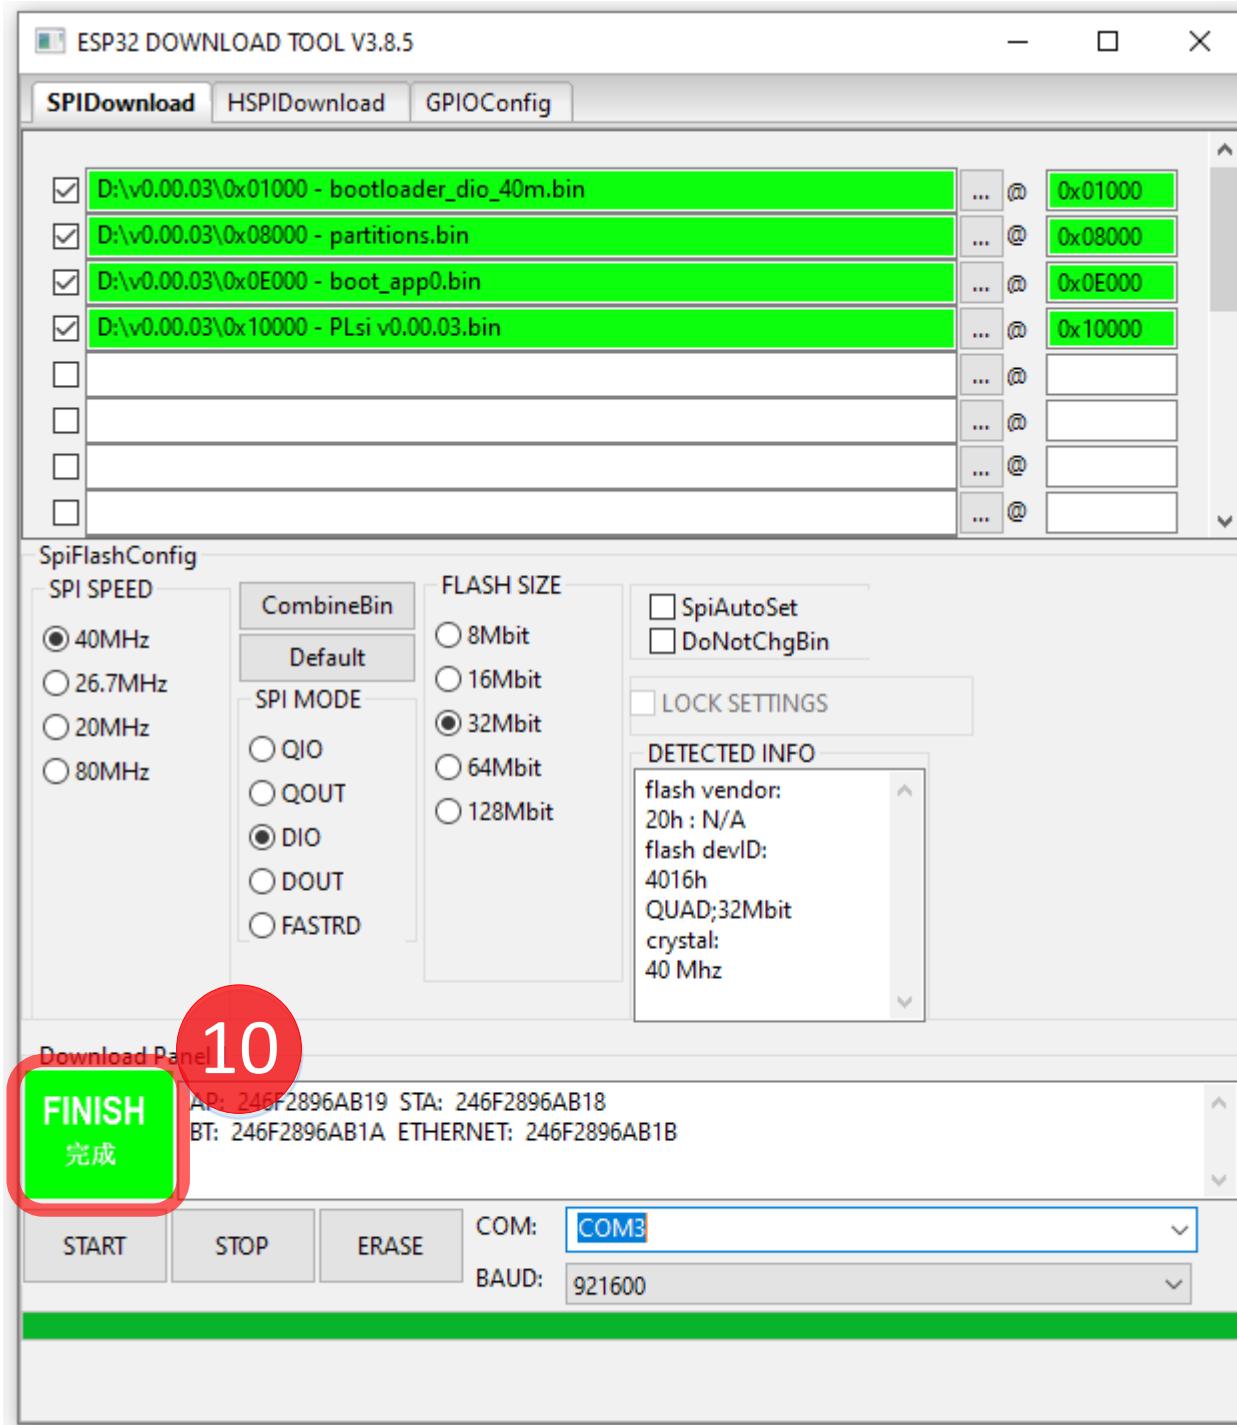

10 – When the procedure finishes with no errors, you will see the FINISH indication in green. Repeat the operation if the process was not successfully completed.

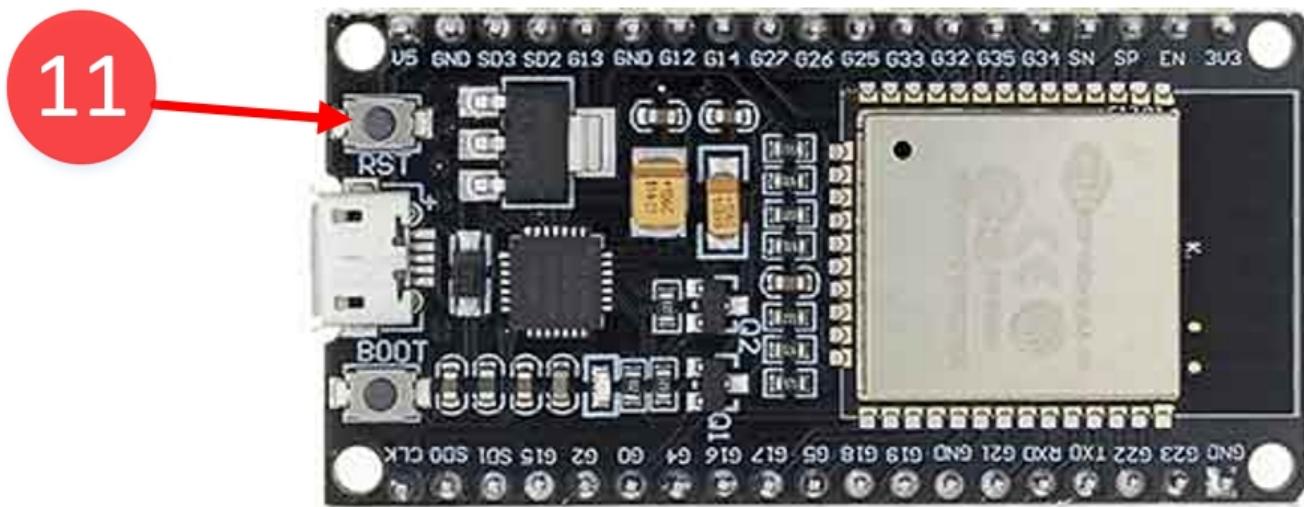

11 - After the firmware is downloaded correctly, press the RST button of the ESP32 module or you can power cycle the PLsi unit by disconnecting and reconnecting the USB cable.



Your PLsi unit is now ready to be tested, proceed with the hardware validations.
For wiring, configuration and programming refer to the User Manual.

4. Hardware Validation

This step is optional but recommended.....

4.1 Digital Inputs validation

PLsi is not fault-tolerant and must not be used to control equipment in hazardous environments where the failure of the system could lead to death, people injury, or severe environmental damage. Refers to the Disclaimer notice for more information.

4.2 Digital Outputs validation

PLsi is not fault-tolerant and must not be used to control equipment in hazardous environments where the failure of the system could lead to death, people injury, or severe environmental damage. Refers to the Disclaimer notice for more information.

4.3 Analog Inputs validation

PLsi is not fault-tolerant and must not be used to control equipment in hazardous environments where the failure of the system could lead to death, people injury, or severe environmental damage. Refers to the Disclaimer notice for more information.

Show configuration of Analog input

4.4 Analog Outputs validation

PLsi is not fault-tolerant and must not be used to control equipment in hazardous environments where the failure of the system could lead to death, people injury, or severe environmental damage. Refers to the Disclaimer notice for more information.

5. Housing

This step is optional but recommended.....

5.1 Printing parts

PLsi is not fault-tolerant and must not be used to control equipment in hazardous environments where the failure of the system could lead to death, people injury, or severe environmental damage. Refers to the Disclaimer notice for more information.

5.2 Assembly

PLsi is not fault-tolerant and must not be used to control equipment in hazardous environments where the failure of the system could lead to death, people injury, or severe environmental damage. Refers to the Disclaimer notice for more information.