
# 03: Bus Interfaces

Engr 315: Hardware / Software Codesign Andrew Lukefahr Indiana University

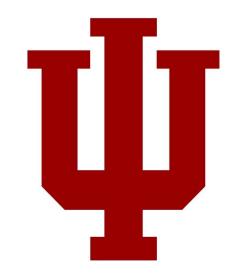

### Announcements

- Slack See Website
- Office Hours See Website / Syllabus
- P2: Due next Wednesday
  - (New Project, Could be some bumps)
  - Need a Pynq
  - Groups of 2 allowed
- P3: Out now!

### Failed Login & Disk Space


- If you can't log into the Linux machines:
  - It might be you are out of disk drive space
- ssh into silo/kj and do the following:
- \$ quota


If overfull, remove some things, then try to log in again.



## The Pynq

- Used for P2 onward
- System-on-Chip
  - SoC "S-O-C" or "Sock"
- Contains both FPGA and CPU
- Runs Linux + Python

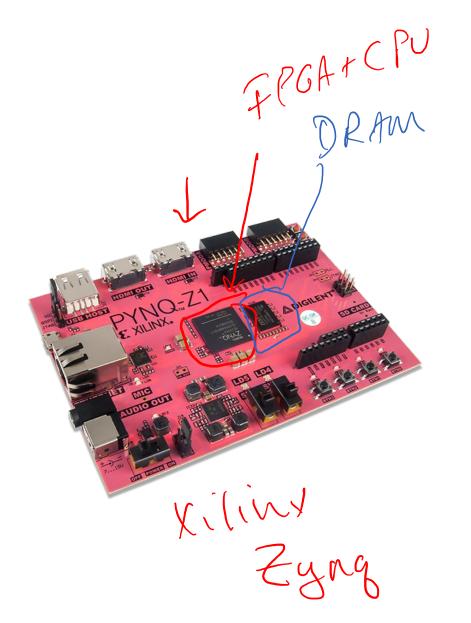

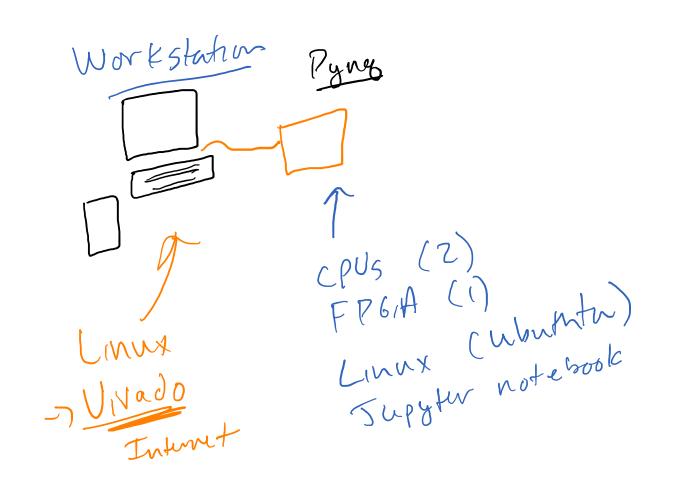

### Setup Notes

- 4111 is best.
  - Everything already set up

- Can work from home
  - need Pynq networked
  - "Some" effort support
- Pure-Remote students
  - Email me.



#### **Quick Links**

**Syllabus** 

**Lecture Slides** 

**Other Downloads** 

**Autograder** 

Canvas (Registered students only)

Zoom (Requires students only)

- Lecture
- Labs / Office Hours

Slack

Remote Setup


Pynq Network Setup



# Let's talk P2 (and P3)


- What is EMA?
- Pynq Setup
  - The password is 'iuxilinx'
- e315helper.py
- Vivado Setup


# Signal Filtering

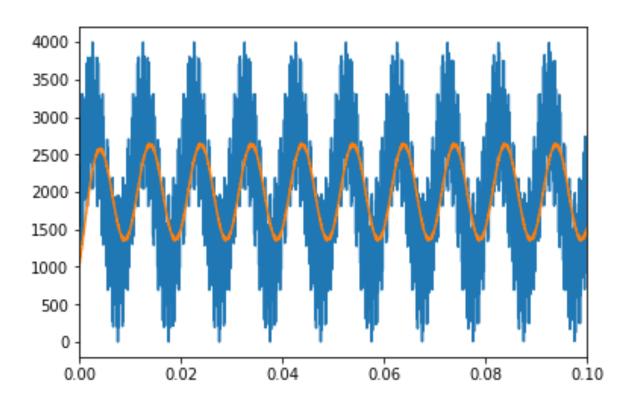

# EMA Example

$$x = 0.5$$
  
 $x = [0, 10, 0, 0, 10]$ 

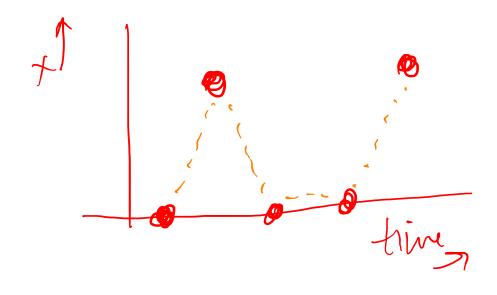

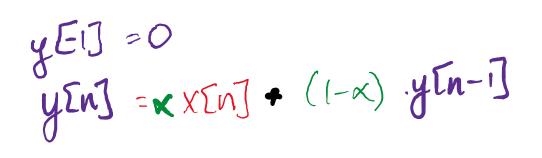

# EMA Example

$$X=0.5$$
  $X=[0,10,0,0,10]$ 

### Optimizations thus far

- Algorithmic complexity
- Function calls
- Data structures
- Libraries / Lower-level programming

• Skipped: Multicore (E201)

### Did you know you can call assembly from C?

```
int popcount asm(uint64 t num)
    uint64 t result;
    asm
       "POPCNT %1, %0 \n" \( \alpha \)
         : "=r" (result)
         : "mr" (num)
          "cc"
    return result;
```

### Optimizations thus far

- Algorithmic complexity
- Function calls
- Data structures
- Libraries / Lower-level programming
- Hardware acceleration

• Skipped: Multicore (E201)

# Can we improve performance with Python->Verilog interfacing?

Oh Yes!

### We could also map popcount to hardware

```
import cPopcount
print (cPopcount.cPopcount(0))

import hwPopcount
print hwPopcount.hwPopcount(0))
```

First we need to understand how CPUs and hardware communicate.

We're going on an excursion into buses.


### Buses: The hardware interface

Standardized hardware interfaces for transferring data

- Off-chip Buses: UART, I2C, SPI, RS-485, CAN, Ethernet
- On-Chip Buses: Wishbone, AHB/APB, AXI
- We're going to study 2.
  - AXI4-Stream
  - AXI4-Lite

P3 "EMA" uses two buses to move data between CPU + hardware

# P3 "EMA" uses two buses to move data between CPU + hardware

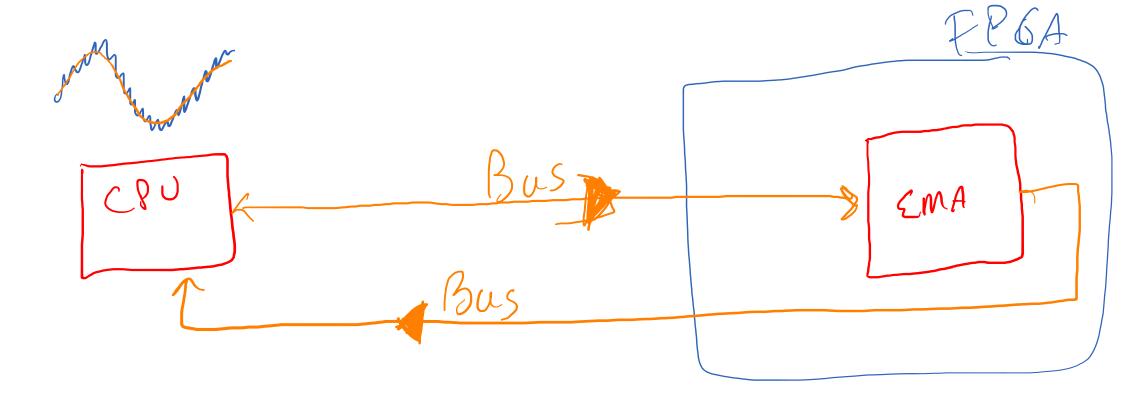

### Bus terminology

- A "transaction" occurs between an "<u>initiator</u>" and "<u>target</u>"
- Any device capable of being an initiator is said to be a "<u>bus master</u>"
  - Usually only one bus master (<u>single master</u> vs. <u>multi-master</u>).

 A device that can only be a target is said to be a "slave device".

**ACLK**: Transmit Clock JUL TDATA: Transmit Data (8,16,32,64 bit) **TVALID**: Transmit Data Valid **MASTER SLAVE** TREADY: Ready for Transmission Interface

AXI-Stream

### Data (TDATA) is only transferred when

#### **TVALID** is 1.

This indicates the **MASTER** is trying to transmit new data.

#### TREADY is 1.


This indicates the **SLAVE** is ready to receive the data.

If either TVALID or TREADY are 0, no data is transmitted.


bigger


If TVALID and TREADY are 1, TDATA is transmitted at the positive edge of ACLK

# Transferring data on a AXI4-Stream Bus.

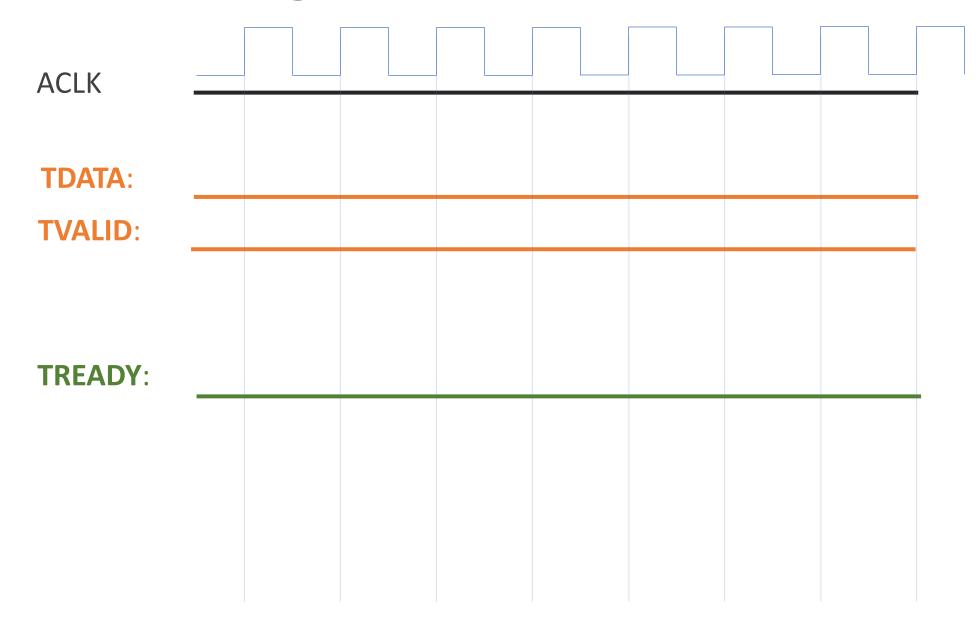

### When is data transmitted?

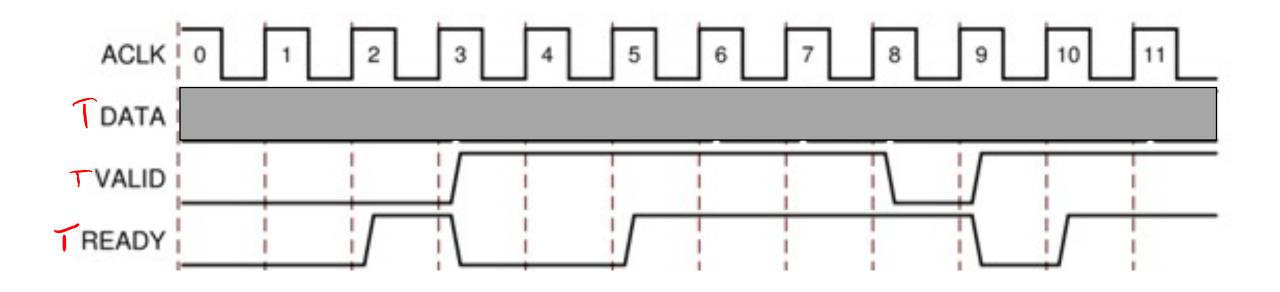

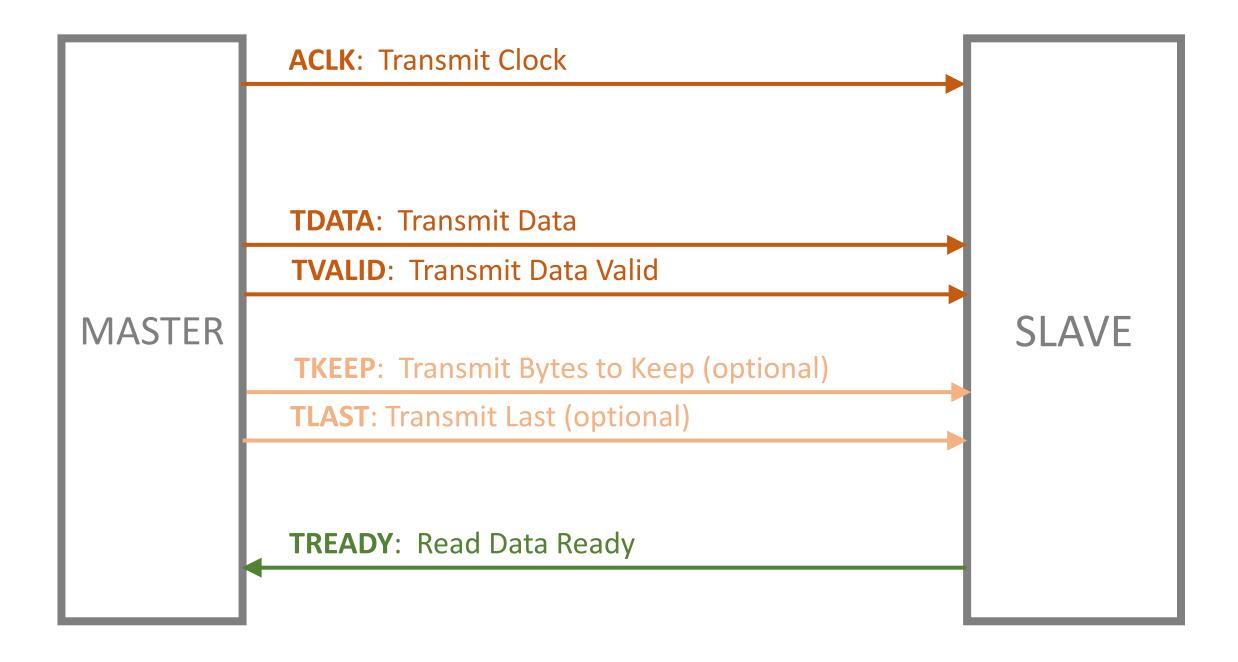


### **TLAST**

• Special signal to indicate a group or "burst" of transmissions is complete.

"Indicates the boundary of a packet"

### Transferring data on a AXI4-Stream Bus.

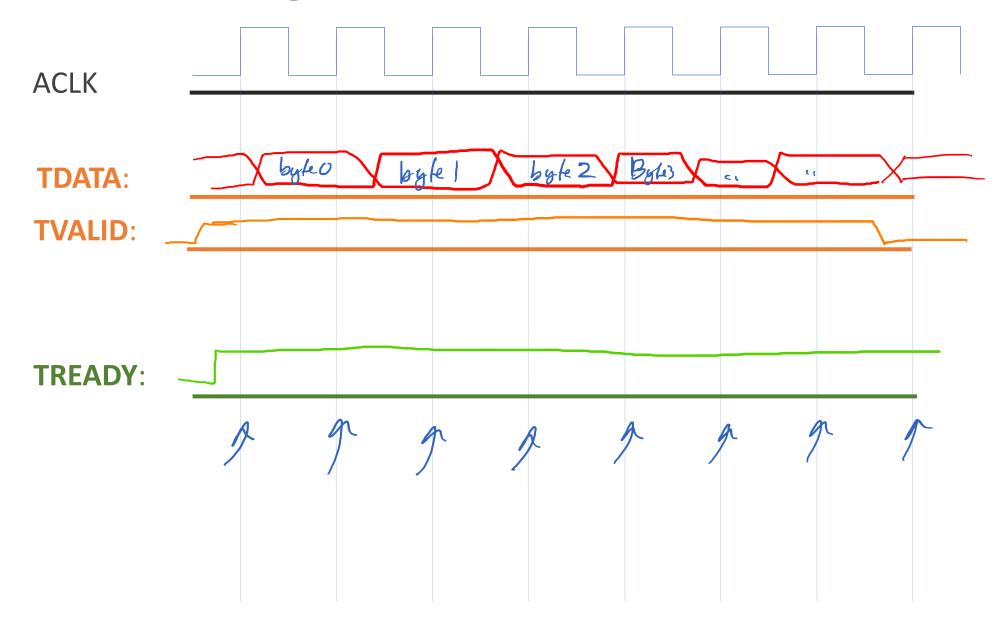


### **TKEEP**


- What if TDATA is 32-bits (4 bytes) wide, and I want to send 6 bytes?
- TKEEP let's me specify which bytes to "keep".

- TKEEP ==1111 -> Keep all 4 bytes (32-bits)
- **TKEEP** ==1100 -> Keep first 2 bytes (16-bit)
- TKEEP ==1000 -> Keep first byte (8-bit)


# Transferring data on a AXI4-Stream Bus.



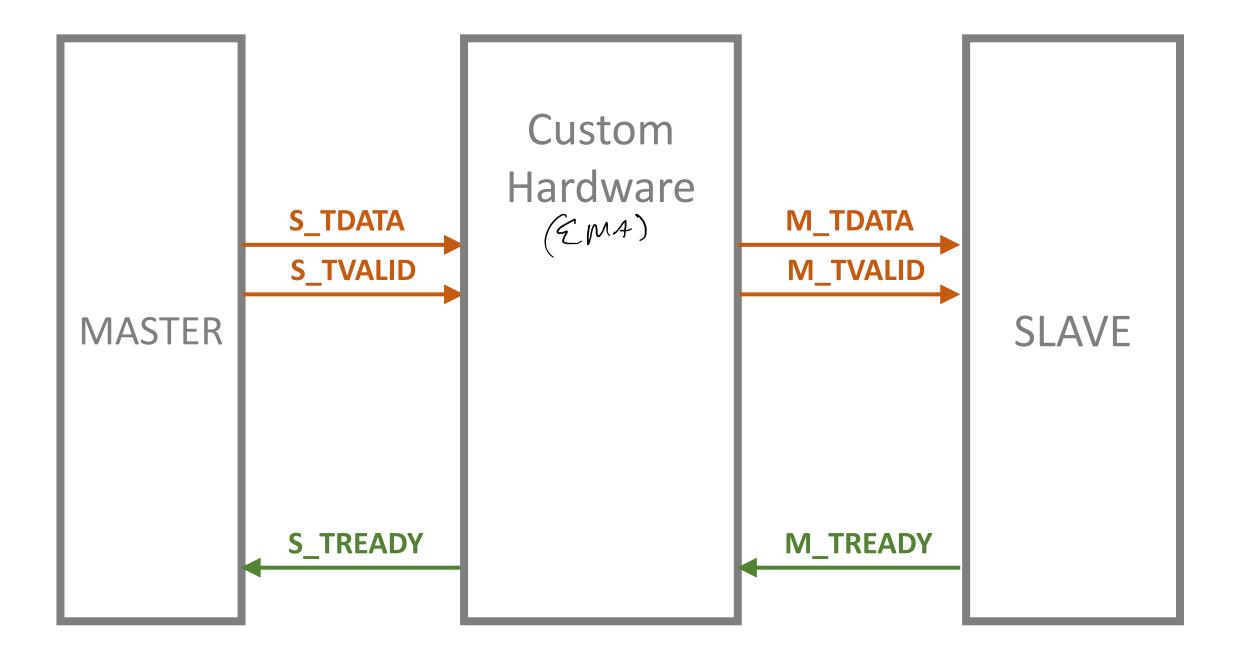

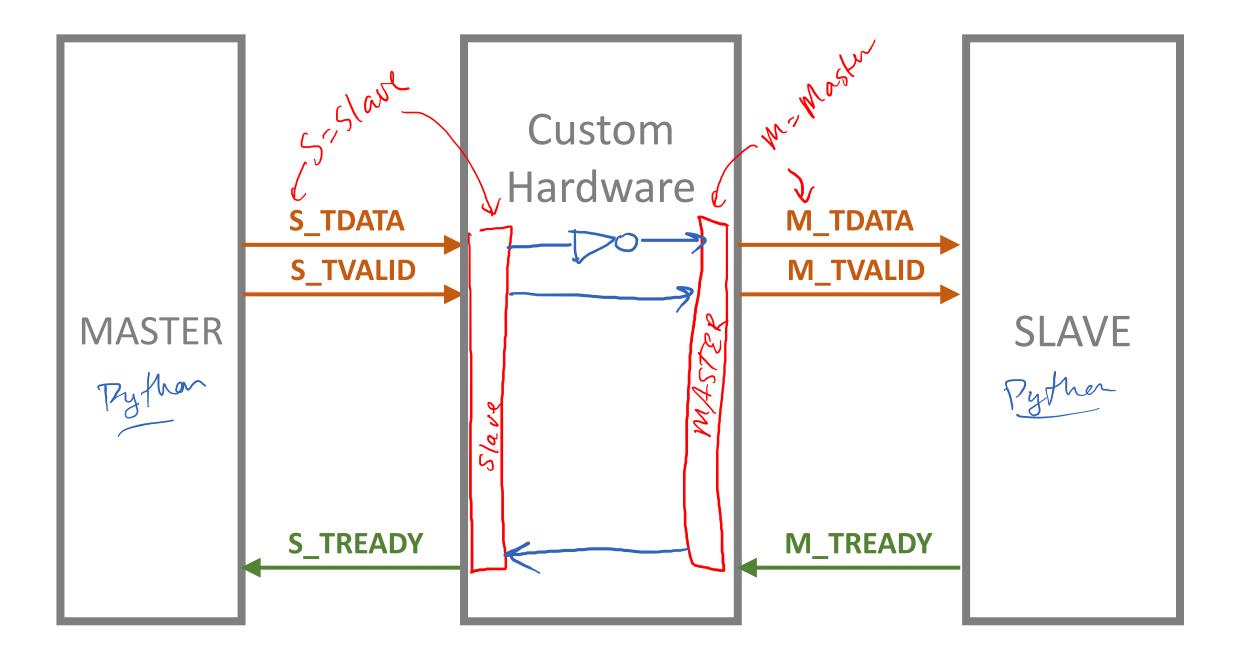


## Let's build a custom block that does nothing!

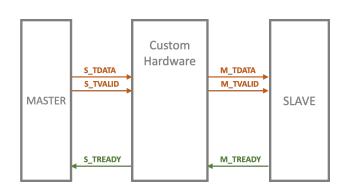


## Let's build a custom block that does nothing!

```
module custom hw (
     input ACLK,
     input ARESET,
     input [31:0] S TDATA,
     input S_TVALID,
     output S TREADY,
     output [31:0] M TDATA,
     output M TVALID,
     input M TREADY
assign M TDATA = S TDATA;
assign M TVALID = S TVALID;
assign S TREADY = M TREADY;
endmodule
```

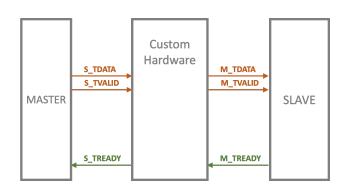


### How would I flip all the bits of TDATA?


```
module custom hw (
      input
                 ACLK,
      input ARESET,
      input [31:0] S TDATA,
      input
           S TVALID,
      output S TREADY,
      output [31:0] M TDATA,
      output
            M TVALID,
      input M TREADY
assign M TDATA = S TDATA;
assign M TVALID = S TVALID;
assign S TREADY = M TREADY;
endmodule
```

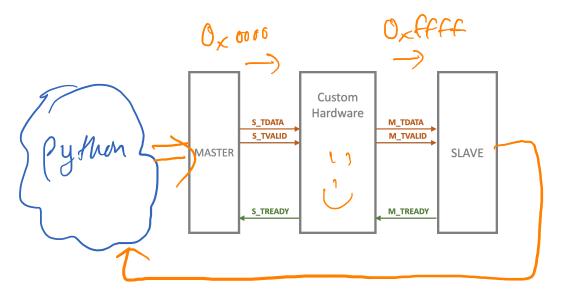


### How would I flip all the bits of TDATA?

```
module custom hw (
     input
           ACLK,
     input ARESET,
     input [31:0] S TDATA,
     input S TVALID,
     output S TREADY,
     output [31:0] M TDATA,
     output M TVALID,
     input M TREADY
assign M TDATA = ~S TDATA;
assign M TVALID = S TVALID;
assign S TREADY = M TREADY;
endmodule
```

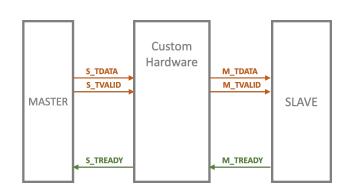

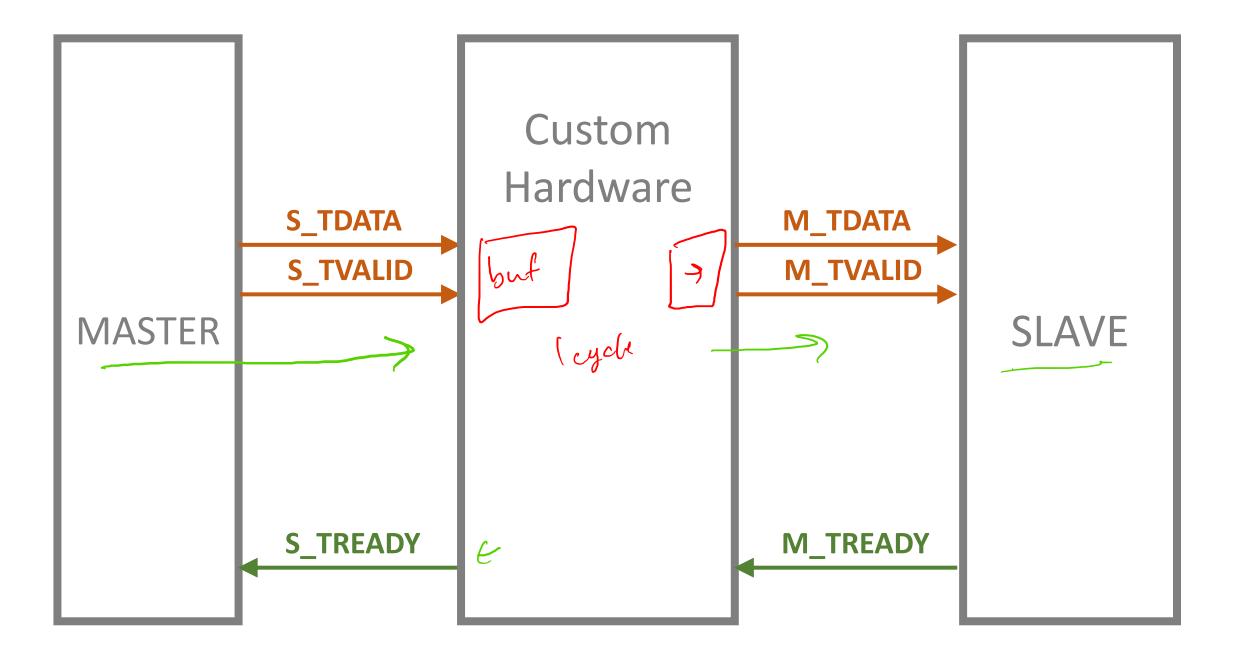


### Let's build a buffer state machine.

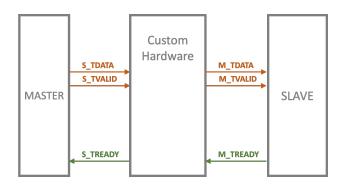

### Let's build a buffer state machine.

```
module custom hw buf (
       input
              ACLK,
       input
                     ARESET,
       input [31:0]
                      S TDATA,
       input
                      S TVALID,
       output
               S TREADY,
       output [31:0]
                     M TDATA,
       output
                      M TVALID,
       input
                      M TREADY
) ;
```

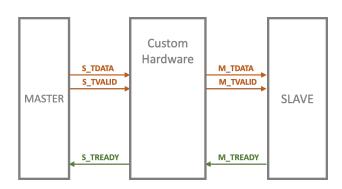

### Let's build a buffer state machine.

```
module custom hw buf (
      input
                ACLK,
      input ARESET,
      input [31:0] S TDATA,
      input
                    S TVALID,
                    S TREADY,
      output
      output [31:0] M TDATA,
      output M TVALID,
      input
                    M TREADY
enum {S0, S1} state, nextState;
reg [31:0] nextVal;
always ff @(posedge ACLK) begin
   if (ARESET) begin
      state <= S0;
      M TDATA <= 32'h0
   end else begin
      state <= nextState;</pre>
      M TDATA <= nextVal;
   end
end
```

```
always comb begin
    S TREADY = 'h1;
                              S TREADY
    M TVALID = 'h0;
    nextState = state;
    nextVal = M TDATA;
    case(state)
        S0: begin
            if (S TVALID) begin
                nextState = S1;
                nextVal = S TDATA;
            end
        end
        S1: begin
            S TREADY = 'h0;
            M TVALID = 'h1;
            if (M TREADY) begin
               nextState = S0;
        end
    endcase
end
```

### Next Time

- Memory-Mapped I/O
- Memory-Mapped Buses

### References

- Zynq Book, Chapter 19 "AXI Interfacing"
- Practical Introduction to Hardware/Software Codesign
  - Chapter 10
- AMBA AXI Protocol v1.0
  - <a href="http://mazsola.iit.uni-miskolc.hu/~drdani/docs\_arm/AMBAaxi.pdf">http://mazsola.iit.uni-miskolc.hu/~drdani/docs\_arm/AMBAaxi.pdf</a>
- https://lauri.võsandi.com/hdl/zynq/axi-stream.html

# 03: Bus Interfaces

Engr 315: Hardware / Software Codesign Andrew Lukefahr Indiana University

