

ERC v2 BUILD GUIDE

COMMUNITY EDITION

We build space shuttles with gardening tools
so anyone can have a space shuttle of their own.

VERSION 2024-01-04



Before you begin on your journey, a word of caution.

This machine can maim, burn, and electrocute you if you are not careful.

Please do not become the first ERCF fatality.
There is no special Discord flair for that.

Please, read the entire manual before you start assembly.

As you begin wrenching, please check our Discord channels for
any tips and questions that may halt your progress.

Most of all, good luck!

The ERCF Team

TABLE OF CONTENTS

Introduction	<u>10</u>
Wiring	<u>18</u>
Gearbox	<u>24</u>
Filament Blocks	<u>52</u>
End Block	<u>71</u>
Selector	<u>79</u>
Encoder	<u>95</u>
Linear Axis	<u>103</u>
Final Assembly	<u>113</u>
CottonTail Buffer	<u>127</u>

INTRODUCTION

PRINT GUIDELINES

PART PRINTING GUIDELINES

The Voron Team has provided the following print guidelines. We recommend you to follow them in order to have the best chance at success with your parts. There are often questions about substituting materials or changing printing standards, but we recommend you follow these.

FDM MATERIAL

The ERCF was tested only with ABS, so we recommend to use ABS to build the ERCF.

MATERIAL

The ERCF parts were designed for and tested with ABS, so we recommend to use ABS.

LAYER HEIGHT

Recommended : 0.2mm
First Layer: 0.25mm

EXTRUSION WIDTH

Recommended : Forced 0.4mm

INFILL TYPE

Grid, Gyroid, Honeycomb, Triangle or Cubic.

INFILL PERCENTAGE

Recommended: 40%

WALL COUNT

Recommended : 4

SOLID TOP/BOTTOM LAYERS

Recommended : 5

Beware that this project requires a well tuned printer and slicing profile, as there are many press fits and plastic on plastic mechanisms. You should first print the [ERCF_Calibration_Tool.stl](#) along with a [Tophat_xN.stl](#), and test the parts as shown in the manual. You may need to tune your printer and profile before you print the rest of the parts!

INTRODUCTION

STL FILE KEY

FILE NAMING

By this time you should have already downloaded our STL files from the ERCF GitHub. You might have noticed that we have used the Voron naming convention for the files. This is how to use them.

PRIMARY COLOR

Example [End_Bypass.stl](#)

These files will have nothing at the start of the filename.

ACCENT COLOR

Example [\[a\]_End_Bypass_Foot.stl](#)

These files have an “[a]_” prefix to denote that they should be printed with an **accent** color.

QUANTITY REQUIRED

Example [Filament_Path_xN.stl](#)

Files ending with “_x#” are telling you the **quantity** of that part required to build this system. For the ERCF, “N” means the number of channels.

COLOR REQUIRED

Example
[\[c\]_Cover_Lens_xN.stl](#)

These files have a “[c]”prefix to denote that they need to be printed in a **clear/transparent** material.

COLOR REQUIRED

Example
[\[o\]_Encoder_Slotted_Wheel.stl](#)


These files have an “[o]”prefix to denote that they need to be printed in an **opaque** material light can’t penetrate, preferably black.

OPTIONAL MULTIMATERIAL

Example
[\[mm\]_Voron_Logo_Plate.stl](#) †

These files have a “[mm]”prefix to denote that they should be printed in **multiple** colors. We always include single-color versions of these files too, for your first build.

INTRODUCTION

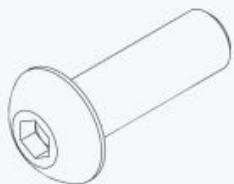

BUTTON HEAD CAP SCREW (BHCS)

Metric fastener with a domed shape head and hex drive. Most commonly found in locations where M5 fasteners are used.

ISO 7380-1



FLAT HEAD COUNTERSUNK SCREW (FHCS)

Metric fastener with a cone shaped head and a flat top.

ISO 10642



HEX NUT

Hex nuts couple with bolts to create a tight, secure joint. You'll see these used in both M3 and M5 variants throughout this guide.

ISO 4032



POST INSTALL T-SLOT NUT (T-NUT)

Nut that can be inserted into the slot of an aluminium 2020 profile.

Often also called "roll-in t-nut."

HARDWARE REFERENCE



SOCKET HEAD CAP SCREW (SHCS)

Metric fastener with a cylindrical head and hex drive. The most common fastener used on the ERCF.

ISO 4762



SELF TAPPING SCREW


Fastener with a pronounced thread profile that is screwed directly into plastic.



MAGNETS

How do they work?

These are cylinders 6mm in diameter and 3 mm tall. Shorter ones are OK, down to 2.7 mm. N52 are preferred, but N35 can work.

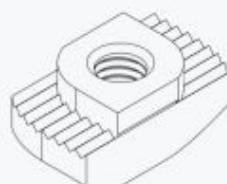

HAMMERHEAD NUT


Nut that can be inserted into the slot of an aluminium profile. Used exclusively for panel mounting, all other components use T-Slot nuts.

INTRODUCTION




625 BEARING

A ball bearing used on the Encoder.

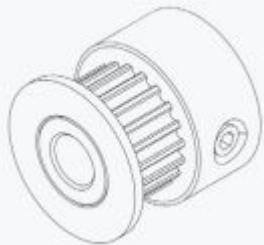

PULLEY


GT2 pulley used on the linear motion system of the ERCF.

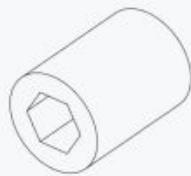

SET SCREW

Small headless screw with an internal drive. Used in pulleys and other gears. Also called a grub screw.

ISO 4026

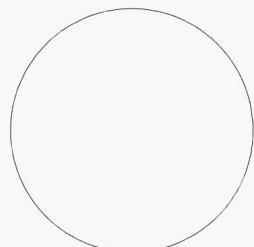

5.5MM BALL BEARING


A ball bearing used in the CottonTail Buffer (optional).



WASHER

Metric fastener with a domed shape head and hex drive. Most commonly found in locations where M5 fasteners are used.

ISO 7380-1

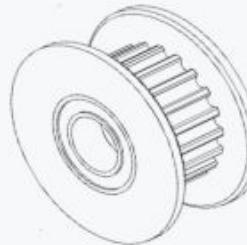


IDLER

GT2 idler used in the linear motion system of the ERCF.



HEAT SET INSERT

These are made of brass , threaded on the inside and has ridges on the outside. Heat them up to approx 250C with a soldering iron and push them into the plastic. As the plastic cools, it solidifies around the knurls and ridges on the insert for excellent resistance to both torque and pull-out.

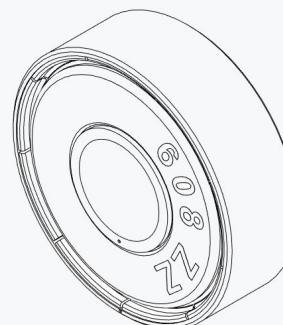

608 BEARING


A ball bearing used on the ERCT Buffer (optional),

INTRODUCTION

TOOLS

BALL-END DRIVER

Some parts of this design require the use of a ball-end hex driver for assembly. We recommend you get a 2.0mm, 2.5mm and 3mm one.

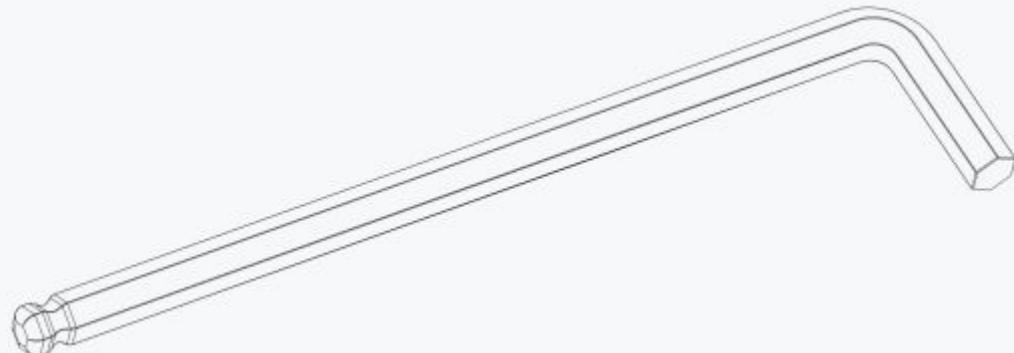

2.5MM HEX DRIVER

The 2.5mm hex driver will see a lot of use in this build. A quality driver is strongly recommended. Refer to the sourcing guide for suggestions.



ADDITIONAL TOOLS

The tools needed are similar to those used building a Voron. For recommendations, visit https://vorondesign.com/sourcing_guide and switch to the “Voron Tools” tab at the bottom of the page.

INTRODUCTION

SOLDERING IRON

We use this for setting heat-set inserts into parts. Depending on your sensor choice, you might be soldering some wires together.

ANGLE GRINDER/DREMEL

If you need to cut your 8mm smooth rods, nothing less than an angle grinder is going to cut it, literally. Leave your grandfather's trusty hacksaw in the toolbox: rods are usually hardened steel.

VISE

A vise is handy if you have to cut your 8mm rods. A vise may also be helpful when press-fitting bearings into the Selector.

WIRING CRIMPER

You'll need this to wire up the sensor. Or maybe there's a turnkey solution out there you can buy, check Discord. If you got this far without learning how to crimp, we don't judge.

CAD SOFTWARE

ERCF_v2/CAD/ERCF_V2.0.step

Software is a tool too! The CAD file for the ERCFv2 was designed to be used along with this manual as a supplement or reference, even if you aren't a CAD Pro. You can use the free edition of Fusion360, or your choice of CAD program such as TinkerCAD or FreeCAD.

TOOLS

SUPERGLUE

Yes, we consider this a tool. Superglue is useful as a plastic safe threadlock, and magnet glue. Cheap, single-use gel tubes are fine.

PULLEY TOOLS

ERCF_v2\Stls\Tools\Pulley_Tool_NEMA14.stl

ERCF_v2\Stls\Tools\Pulley_Tool_NEMA17.stl

These take the guesswork out of setting your pulley heights. You will always need the NEMA17 version, but you only need the NEMA14 version if you're using the NEMA14 drive motor.

80T GEAR WHEEL GUIDE

ERCF_v2\Stls\Tools\80T_Cog_Guide.stl

This tool helps you align your printed 80T gear when you are assembling it.

SLOTTED WHEEL PUSH TOOL

ERCF_v2\Stls\Tools\Slotted_Wheel_Push_Tool.stl

Helps you set the depth and align the Encoder slotted wheel without damaging it.

FILAMENT BLOCK BEARING INSTALL TOOL

ERCF_v2\Stls\Tools\Bearing_Install_Tool.stl

This optional tool helps you install MR85ZZ bearings into the Filament Blocks without damaging the bearings.

PRINTED PART TRACKER SPREADSHEET

There is a helpful interactive Printed Part Tracker for ERCFv2 here:

[Printed Parts Tracker Google Sheet](#)

This project aims to bring multi material capabilities to 3D printers using a single Direct Drive toolhead. While this project is mainly designed to be used on VORON printers, it can also be used (or adapted) on any 3D printer that runs Klipper.

Find all the project information on the Github page : https://github.com/Enraged-Rabbit-Community/ERCF_v2

The project is composed of 5 different components, some of which are optional:

- **Enraged Rabbit Carrot Feeder (ERCF).** The Carrot Feeder is the main unit and allows use of a high number of different filaments (tested up to 15 channels by the test team) and feed them, one at a time, into the printer toolhead on an as-needed basis.
- **Enraged Rabbit Cottontail (ERCT)** is a new integrated (but optional) filament buffer system to handle the filament when it is ejected from ERCF on a tool change. It can handle up to 1.5m bowden tube lengths. This has been specifically designed to minimize friction when setup in accordance with this manual which takes into account the natural filament memory. It has options for LED gate indicators and entry sensors.
- **Enraged Rabbit Filametrix (ERF):** This filament cutter is an optional toolhead modification to cleanly cut the tip of the ejected filament, so it can be loaded easily on next use. This option alleviates the frustrating job of tuning tip formation through movement of the filament within the extruder, which often still results in strings of filament causing clogs.
- **Toolhead Sensor:** This is a set of modifications for popular extruders that provides filament detection capability within the toolhead. Although optional, it is highly recommended, and makes filament change far more reliable and smooth.
- **Happy Hare Firmware:** This has become the go-to extension to Klipper for controlling various types of MMU. It is optimized to support ERCF.
- (Future) Enraged Rabbit Pellet Purge (ERPP): Envisioned, but currently unavailable, this will alleviate the need for a purge tower meaning more room for your prints. Stay tuned.

This is the place to recognize the origins and evolution of this project. ERCF was originally envisioned and created by Ette and the v1.1 release credits Tircown, the Voron Dev team (special mention to Dunar), Benoit, Dustin Speed, Kageurufu and the HonHonHonBaguette people!

Over time and significant adoption the shortcomings of ERCF v1.1 design came to light, and that inspired a set of modifications to address them: SturdyBunny, TripleDecky, Springy, Binky and other strange names appeared. It was then that Moggieuk, the author of Happy Hare, rounded up these project authors and created the beginnings of the ERCF v2 community release. As the project developed, Kinematicdigit developed and contributed CottonTail, Sorted developed and contributed Filametrix and we were joined by some awesome talent that polished, tested and documented to complete the project.

Many hundreds of hours of volunteer effort have gone into this project and we hope it pays tribute to Ette's wonderful original design. **The BMW of MMU's!**

- @moggieuk V0.1503 | V2.4088 (Happy Hare Dev & Chief whip)
- @gneu V2.5345 (Filament block and bling innovator)
- @sneakytreesnake V2.3804 (The project backbone!)
- @mneuhau5 VT.483 (Binky Dev)
- @Miriax (Designer & Doc Demon)
- @kinematicdigit (Cottontail Dev & Doc Illustrator)
- @ningpj (Tester, Breaker & Doc's)
- @fizzy (King of CAD)
- @gsx8299 (Test Builder Extraordinaire)
- @sorted (Filametrix "don't get enraged" filament cutting system Dev)
- @kieranthe man (Thumper Dev)



INTRODUCTION

HOW TO GET HELP

If you need assistance with your build you can head over the VORON Discord group and post your questions in the ercf_questions channel. It is the primary medium to help people with their ERCF build and tuning! You can also check the Github page for the latest releases.



<https://discord.com/channels/460117602945990666/909743915475816458>

https://github.com/Enraged-Rabbit-Community/ERCF_v2

Constructing and operating a multi-filament system can be a challenging endeavor, often more intricate than assembling the 3D printer itself. Approach this task patiently, addressing each issue methodically. Be aware that minor complications during assembly can accumulate, potentially leading to greater challenges later. If you encounter any uncertainties or roadblocks, feel free to seek guidance on Discord - remember, there are no foolish questions!


You might have heard about the frequent challenges associated with multi-filament systems. Indeed, they can be demanding. However, the Enraged Rabbit Project aims to provide a system that is not only innovative and reliable but also user-friendly. Despite these efforts, encountering some difficulties is not uncommon. In such instances, consult the available documentation and guides, and don't hesitate to ask for help on Discord. Many common issues have likely been encountered and resolved before, so assistance is readily available.

Enjoy the process of building as much as utilizing your Enraged Rabbit Carrot Feeder (ERCF)!

INTRODUCTION

CALIBRATION TOOL

Print this test piece and a **Tophat** to ensure your printer and slicing profile are tuned, in order to have a pleasant ERCF assembly experience.

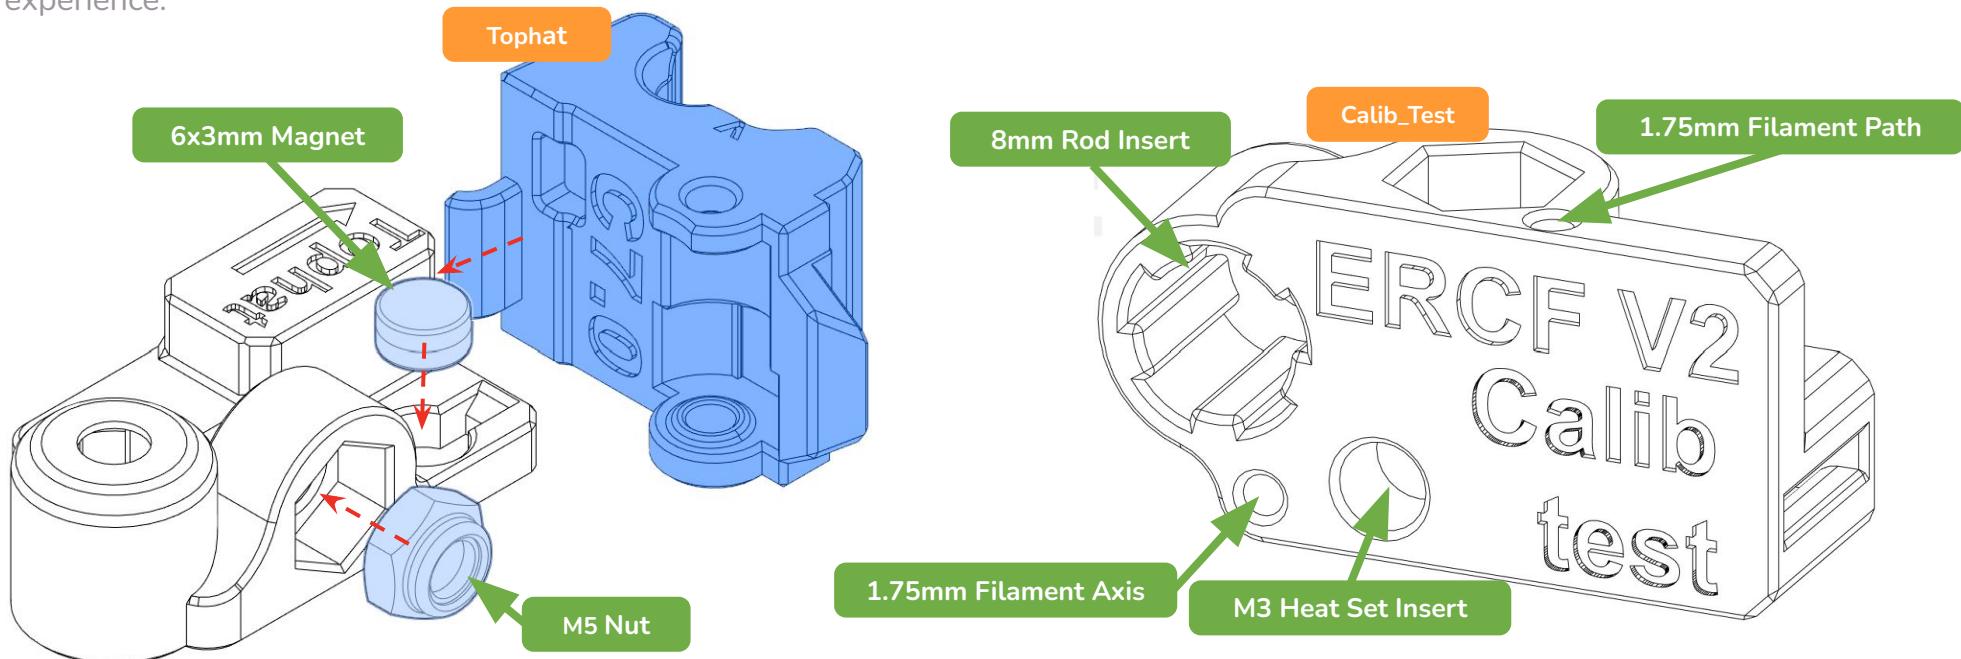

TESTS

Insert the different pieces of hardware in their dedicated slots: 6x3mm magnet, M5 nut, and 8mm rod. They should grip the hardware so that they don't fall out easily, but they should not be very difficult to insert or remove. Test the heat set insert hole using a soldering iron and insert.

Use the Filament Path to check that 1.75mm filament slides through without friction. The Filament Axis should have some light friction.

To check the **Tophat**, insert the arm of a **Tophat** into the slot. It should insert without much force. Once inserted, the **Tophat** should be able to move up and down easily. To remove the **Tophat**, pull it up while rotating it.

This design relies heavily on heat set inserts. If you've never worked with heat set inserts before, watch this guide :

<https://www.youtube.com/watch?v=cyof7fYFcwQ>

Here is a list of all the pages of this manual where you need to add the heatset inserts into the 3D printed parts, so you can do this step all at once for the whole assembly :

- [Page 27](#)
- [Page 32](#)
- [Page 41](#)
- [Page 84](#)
- [Page 85](#)
- [Page 86](#)
- [Page 95](#)
- [Page 105](#)

Optionally, for the ERCT / CottonTail Buffer:

- [Page 132](#)
- [Page 138](#)

We have provided the ERCFv2 CAD files ([ERCFv2/CAD/ERCFv2.STEP](#) and [ERCFv2.F3D](#)), so that you can follow along with the instructions in a 3D view, if you like.

The CAD file is organized into folders based on the instructions in this manual. First hide all the parts, and then reveal the parts up to the step you are on in this manual, and the CAD should match what you are building.

All of the non-printed parts are in each section's Hardware folder.

INTRODUCTION

If you are upgrading from ERCFv1 or v1.1, you can re-use some of the printed parts. These parts will have a dagger † every time we mention the file name, in case you want to re-use those parts. Here is a list:

ERCF_v2 / STLs / Gear_Box

[a]_Bearing_Spacer_x2.stl †
[a]_Knob.stl †
[a]_Logo_Plate.stl †
[a]_M4_80T_Wheel.stl †
[a]_Side_Latch_x2.stl †
[mm]_Voron_Logo_Plate.stl †
Motor_Arm_NEMA14.stl †
Motor_Arm_NEMA14_EASYBRD.stl †
Motor_Arm_NEMA17.stl †
Motor_Arm_NEMA17_EASYBRD.stl †

ERCF_v2 / STLs / Linear_Axis

[a]_Drag_Chain_Anchor_Bottom.stl †
[a]_Motor_Lock.stl †

ERCF_v2 / STLs / Selector

Belt_Tensioner.stl †
Drag_Chain_Anchor.stl †

ERCF_v2 / STLs / Supports / Adjustable_Mount

[a]_Screw_x3.stl †
Junction_Plate_Flat_x2.stl †
Junction_Plate_Gear_Box.stl †

UPGRADING FROM ERCFv1

ERCF_v2 / STLs / Supports / Adjustable_Mount / 2020

2020_Mount.stl †
2020_Mount_Mirrored.stl †

ERCF_v2 / STLs / Supports / Adjustable_Mount / 3030_(SW_with_panels)

3030_Flat_Mount.stl †
3030_Flat_Mount_Mirrored.stl †

ERCF_v2 / STLs / Supports / Adjustable_Mount / 3030_(SW_without_panels)

3030_Mount.stl †
3030_Mount_Mirrored.stl †

ERCF_v2 / STLs / Supports / Adjustable_Mount / Option

ERCF_Easy_Brd_Bracket_Mount.stl †

ERCF_v2 / STLs / Supports / V1_V2

[a]_Support_Feet_4mm_x4.stl †
[a]_Support_Feet_5mm_x4.stl †

ERCF_v2 / STLs / Tools

Pulley_Tool_NEMA14.stl †
Pulley_Tool_NEMA17.stl †

LOCAL MCU VS REMOTE MCU

When we say “local MCU” we mean a “buddy board” or other dedicated MCU that will be mounted near the ERCF. Examples include the BTT MMB (preferred and shown in this manual) and the EASY BRD. Skip to [page 21](#) if you’re using a local MCU.

When we say “remote MCU” we mean the dedicated MCU(s) for your printer. It is unusual to have enough spare motor, servo, and endstop ports to run an ERCF unless you’re using a dual SKR board setup, but if that’s you, then you can save some money on the buddy board by using this option.

PREPARING THE WIRES FOR REMOTE MCU


For an ease of installation, it is recommended to prepare the wiring before assembly.

There are two wire looms to do:

- One that goes from the connector plate to the selector motor
- One that goes from the connector plate to all the other components, namely the endstop, the servo and the encoder

SELECTOR MOTOR WIRE FOR REMOTE MCU

Prepare the 4 wire selector motor cable as shown. Don’t crimp the free ends for now.

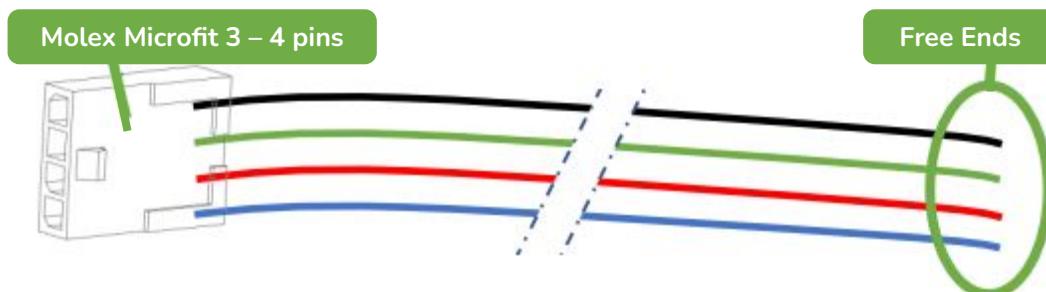

CONNECTION TO THE SELECTOR MOTOR

When using a remote MCU, it is recommended to finish the selector motor connection later in the assembly, for ease of assembly and to ensure the crimps are done with the proper wire length.

Wire Length Chart for remote MCU

Channels	Selector Motor Wire Length (mm)
N	175 + 25N
4	275
5	300
6	325
7	350
8	375
9	400
10	425
11	450
12	475
13	500
14	525
15	550

All wire lengths in this manual include approximately 25-50mm of spare length for maintenance.


WIRING (REMOTE MCU)

GEAR MOTOR WIRE

WIRING THE GEAR MOTOR WIRE


Double-check. You're supposed to skip this page if you're using a local MCU ("buddy board" like EASY BRD or BTT MMB). You wouldn't want to cut your wires too short!

Trim your Gear Motor wires to 85mm, then crimp and add the 4-pin Molex Microfit connector. That's it!

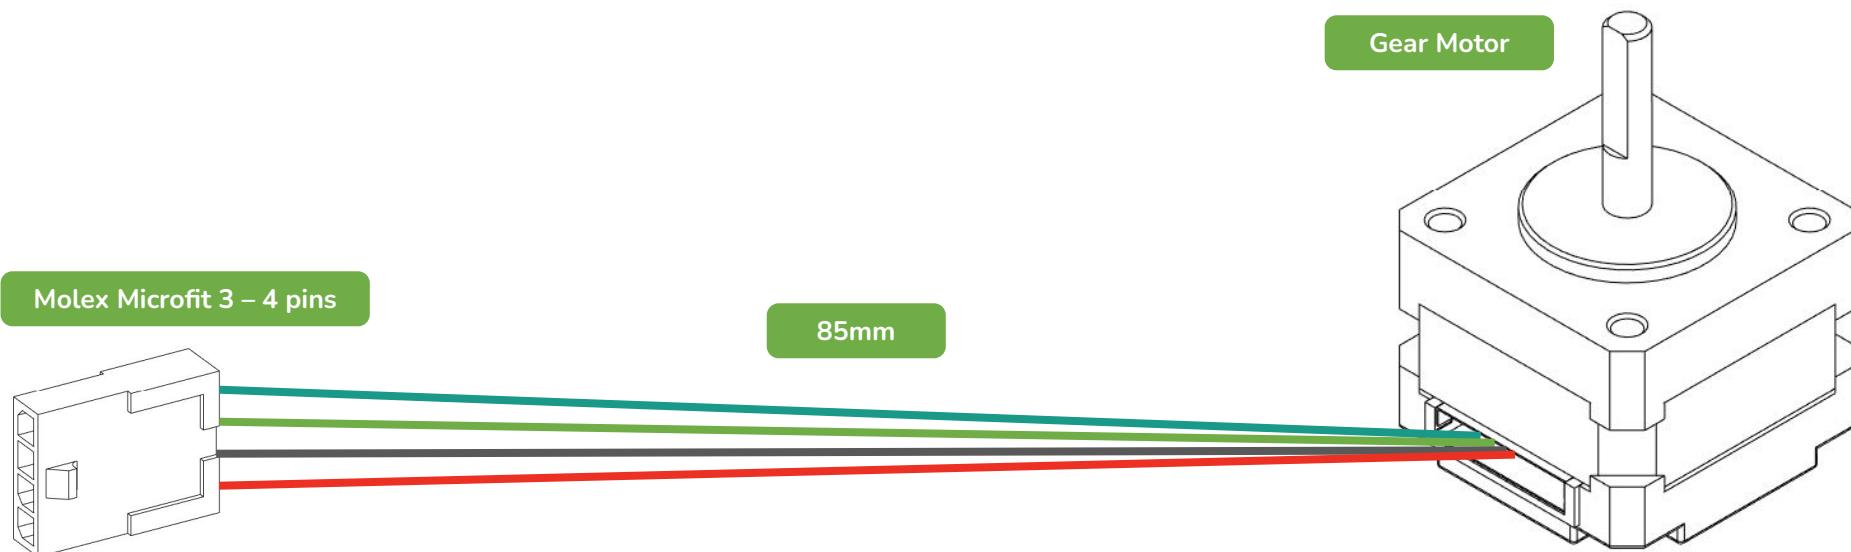

WIRING (REMOTE MCU)

SENSOR AND ENCODER WIRE BUS

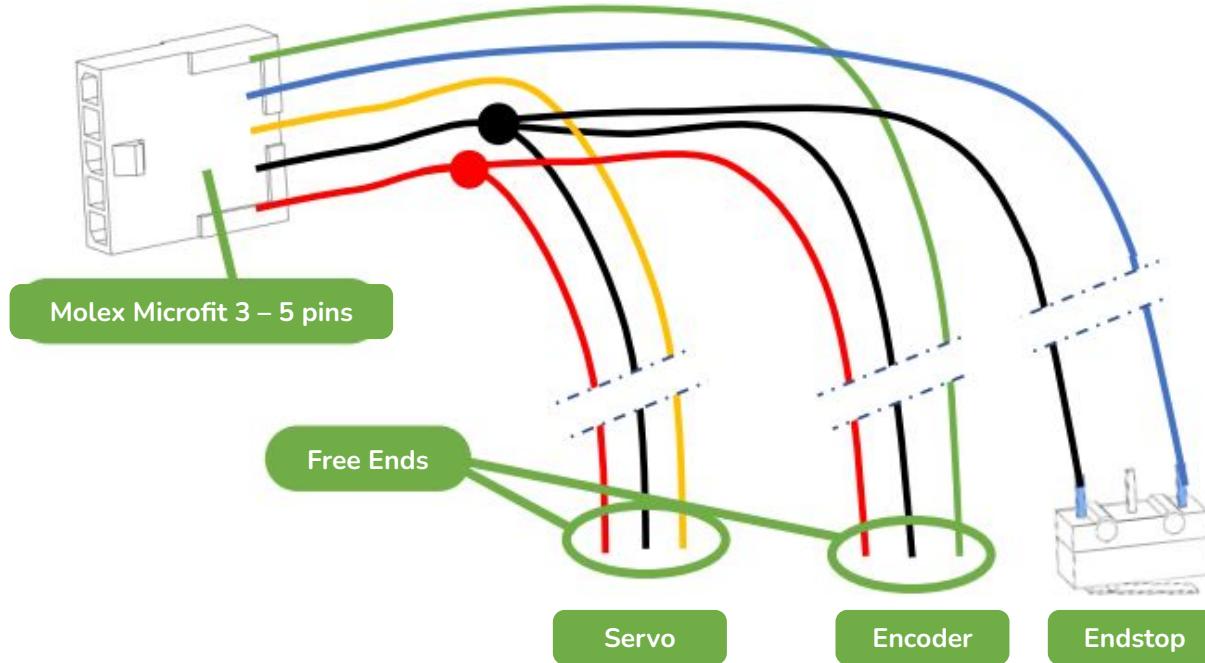

Channels	Wire Length (mm)		
	Endstop	Servo	Encoder
N	60	35 + 5N	45 + 5N
4	60	55	65
5	60	60	70
6	60	65	75
7	60	70	80
8	60	75	85
9	60	80	90
10	60	85	95
11	60	90	100
12	60	95	105
13	60	100	110
14	60	105	115
15	60	110	120

5 WIRE BUS

Prepare the 5 wire bus for the ERCF as shown. The GND is shared between the Servo, the Encoder and the Endstop. The +5V is shared between the Servo and the Encoder.

To join the multiple GND//+5V lines, either crimp them together or make a splice prior to the crimp position.

Only the Endstop is directly connected to this wire bundle, typically by soldering the wires directly on the microswitch pins. It is recommended to finish the Servo and Encoder connections later in the assembly, for ease of assembly and to ensure the crimps are done with the proper wire length.

This should be a 6-wire bus with a wire to control the Apron LEDs, but we added them late in development for RC1 release!

WIRING (LOCAL MCU)


GEAR MOTOR WIRE

WIRING THE MOTORS

Now it's time for the local MCU wiring section! You can skip to the [next page](#) if you're not using a local MCU (like BTT MMB).

Trim your Selector Motor wires to 200mm, then crimp and add the 4-pin Molex Microfit connector.

Trim your Gear Motor wires to 500mm, then crimp and add the 4-pin Molex Microfit connector.

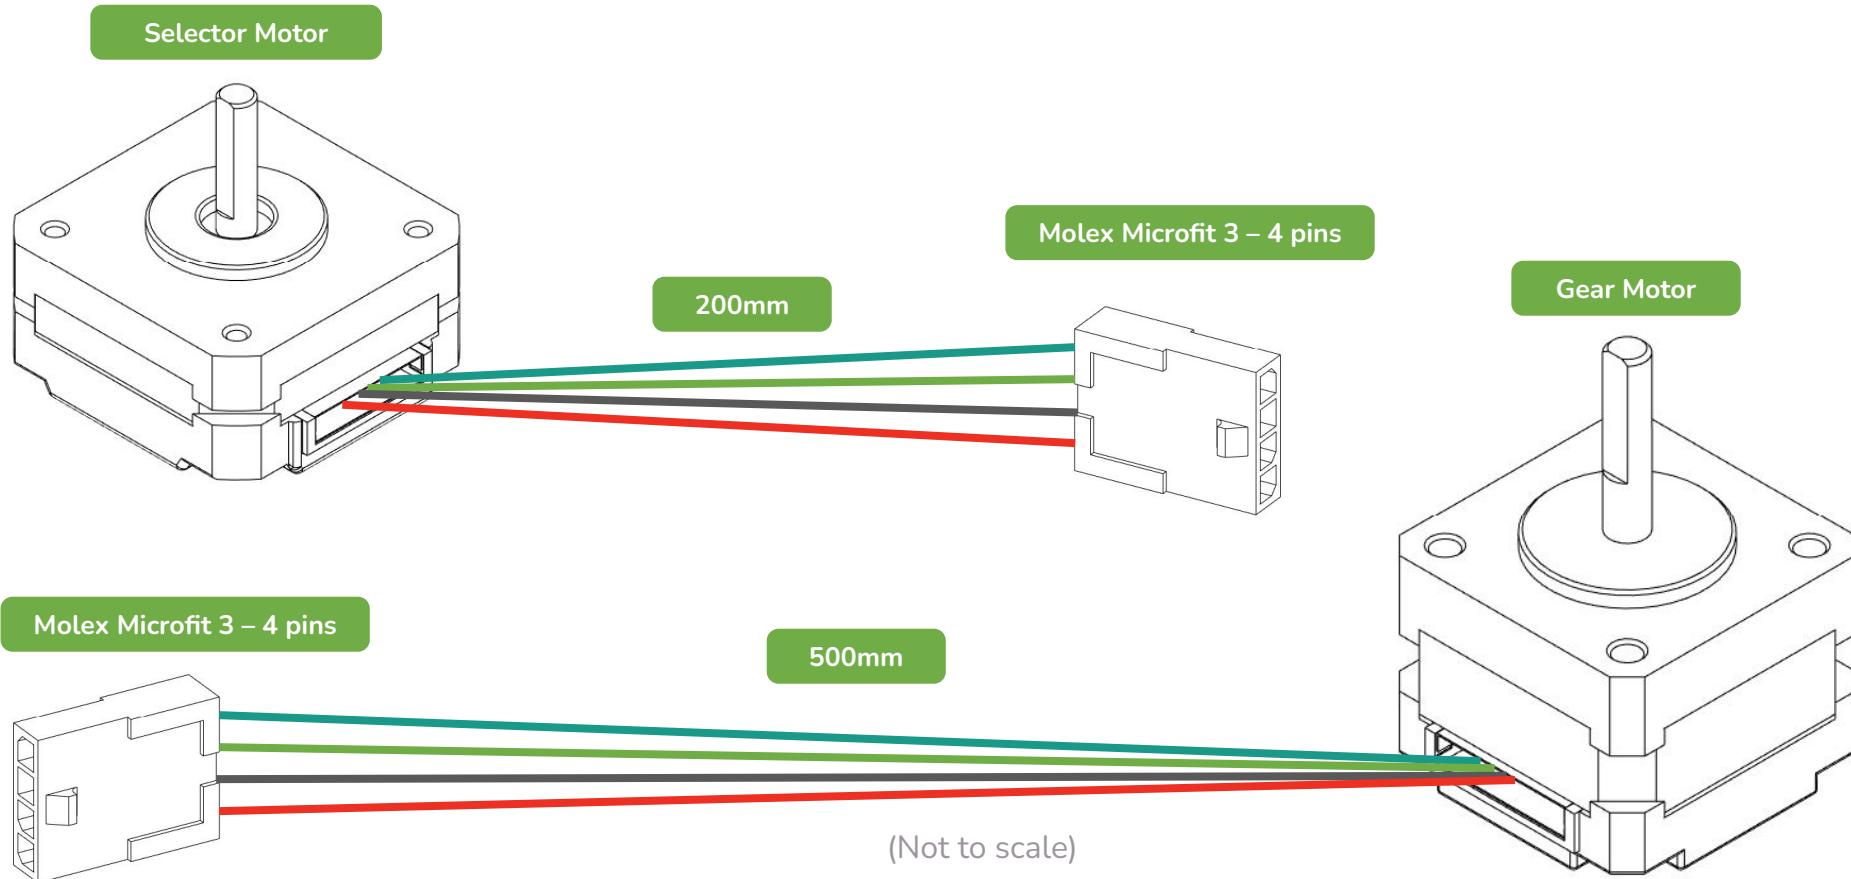

WIRING (LEDS)

WIRING THE LEDS

WIRING THE LEDS

The default option is to use a premade flexible LED strip. Unfortunately, you will need to cut up the strip and re-solder it in order to get to the necessary 23mm spacing. The suggested method is to stick the segments of LED strip to the inside of each of the [Cover_Body_xN](#), attach all of the [Cover_Body_xN](#) to the 2020 extrusion, and solder short pieces of wire between the strips.


If you are using NeoPixels or individual LED PCBs, we provide a wiring jig:
[ERCF_v2 / Stls / Apron_Leds / Options / LED_Soldering_Tool_24mm.stl](#)

For the wires between each LED, cut 20mm sections of wire and strip them back about 1.5mm on each end. Then use the jig to solder the LEDs in place.

If using a local MCU, the connection between the first LED and the MCU should be about 250mm.

If using a remote MCU, the connection between the first LED and Molex plug is 175mm.


There is an LED circuit board that is in development for later release, if you would rather wait and skip the soldering.

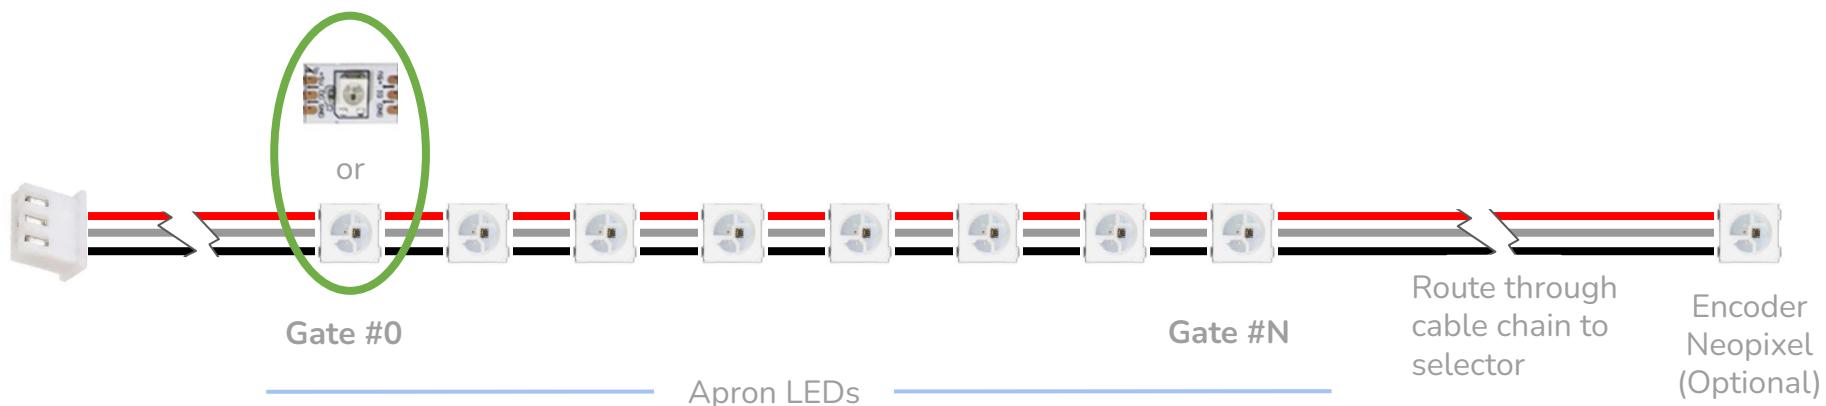


WIRING

Consistent with the ethos of the Voron community, the ERCF is open-source. This means its designs and software are freely available for anyone to use, modify, and improve, fostering a collaborative and innovative environment

What do you call an ERCF MMU on a coffee break? A "retract-relaxer."

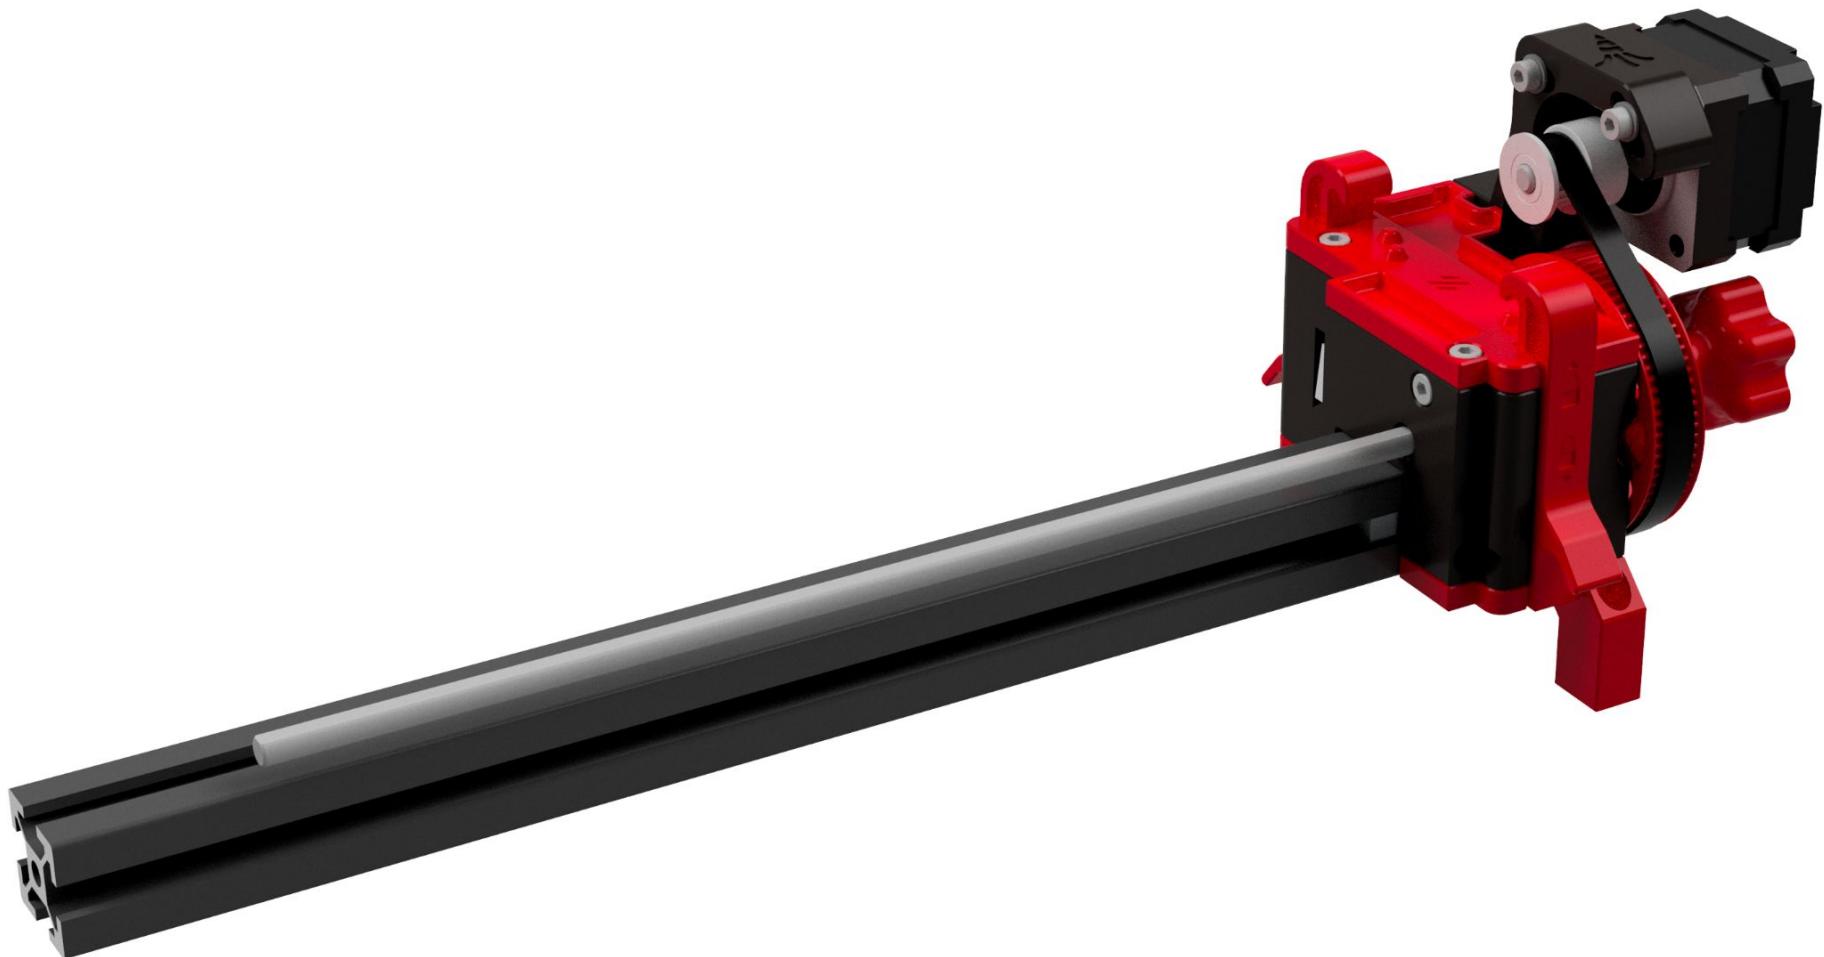

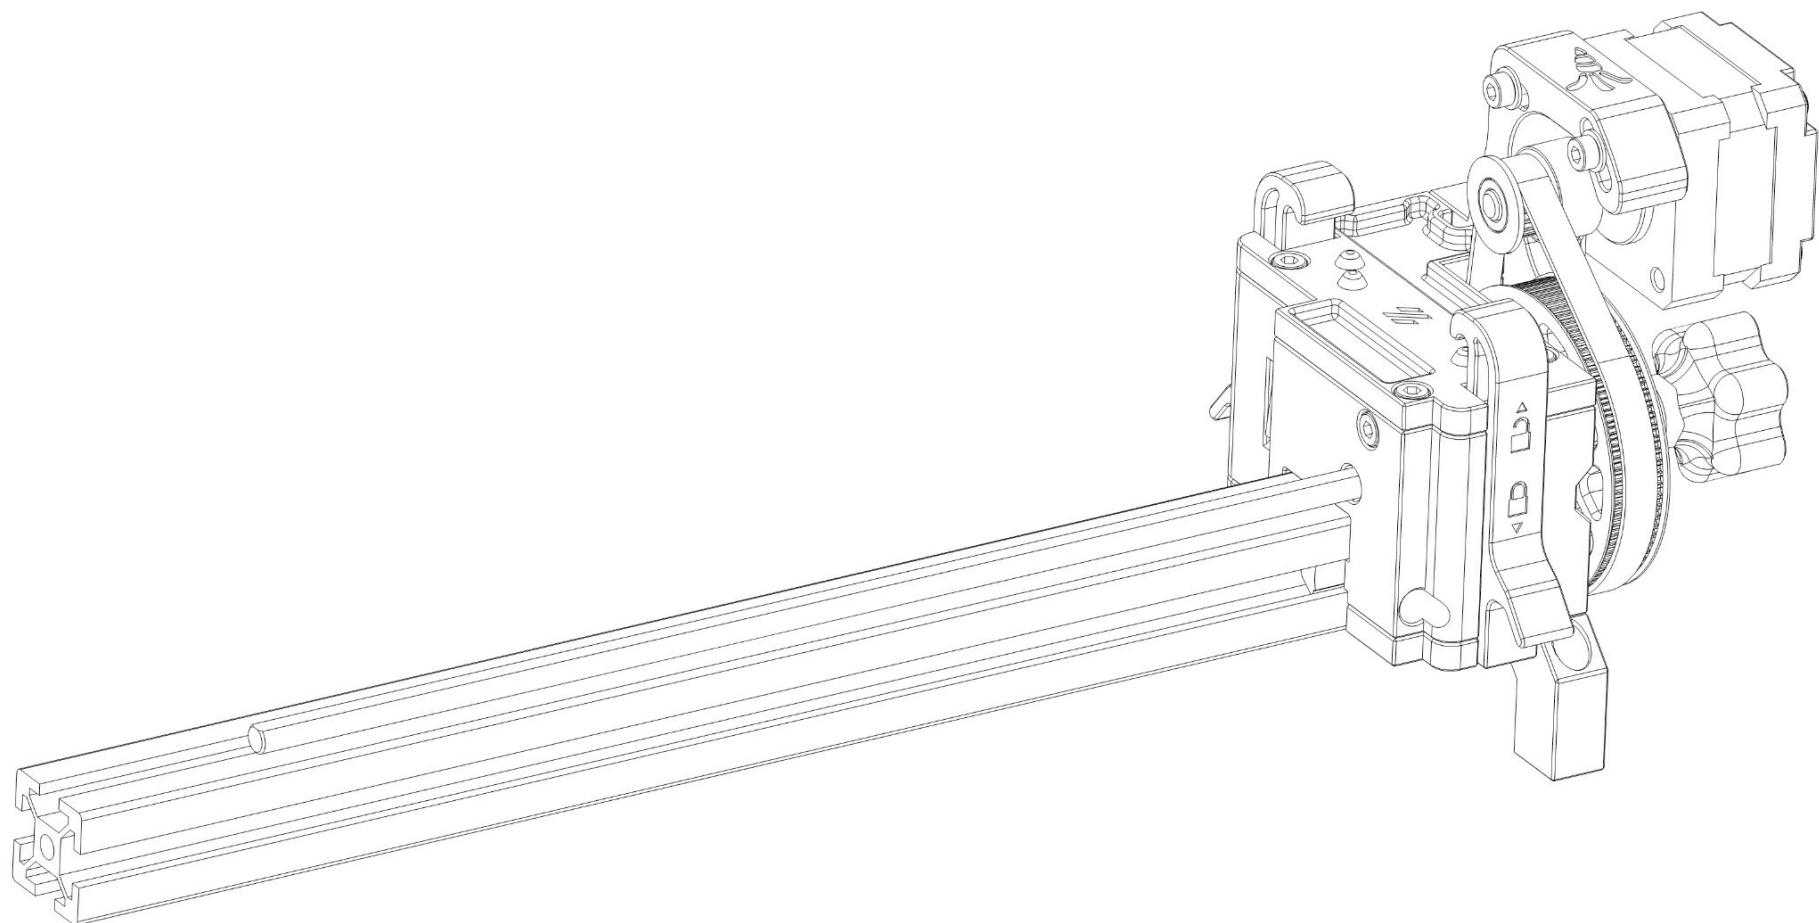


GEARBOX

EXPLODED VIEW

GEARBOX SUB-BOM FOR STEP 1

A 1x 2020 Extrusion
B 2x M2x8mm SHCS
C 4x M3 Roll In Nuts
D 13x M3 Threaded Inserts
E 1x M3x6mm SHCS
F 4x M3x8mm SHCS
G 1x M3x12mm SHCS
H 2x M3x20mm SHCS
I 1x Microswitch
J 2x MR85ZZ Bearings


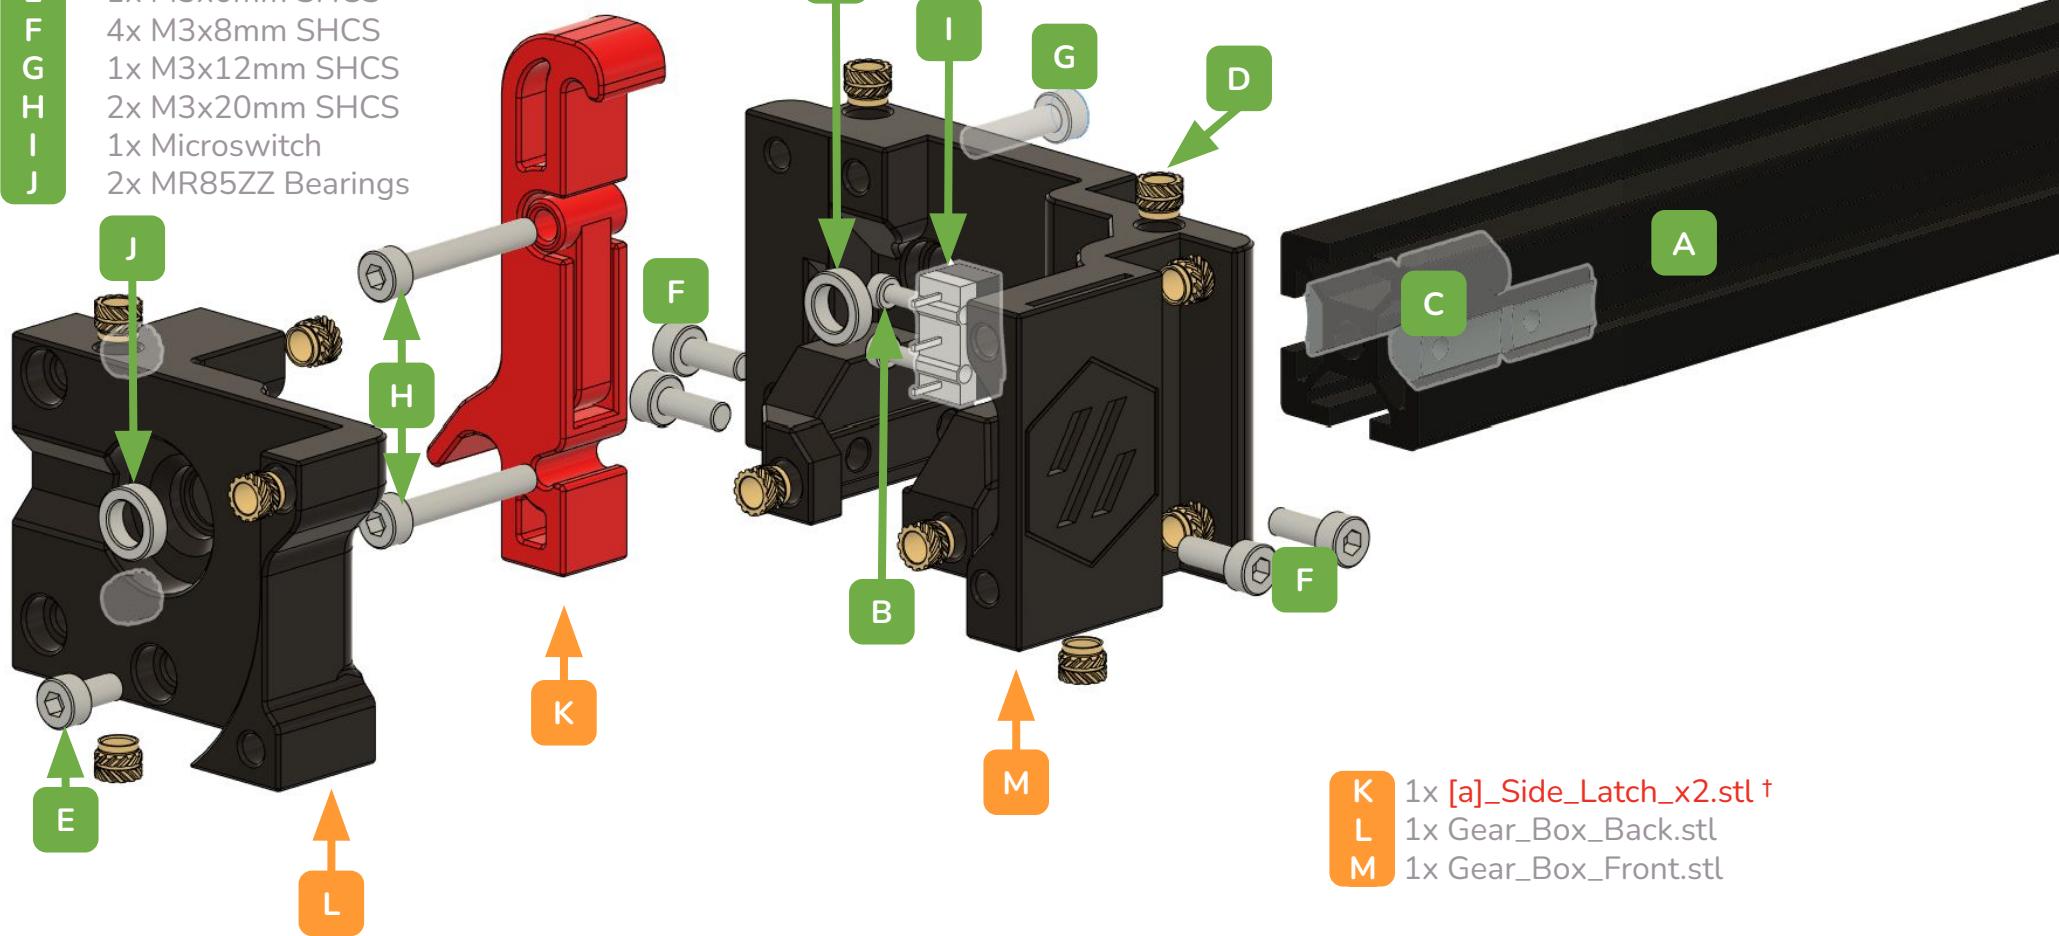


GEARBOX

GEARBOX FRONT PREPARATION


HEAT SET INSERTS

The list of pages with heat set inserts is on [Page 15](#).

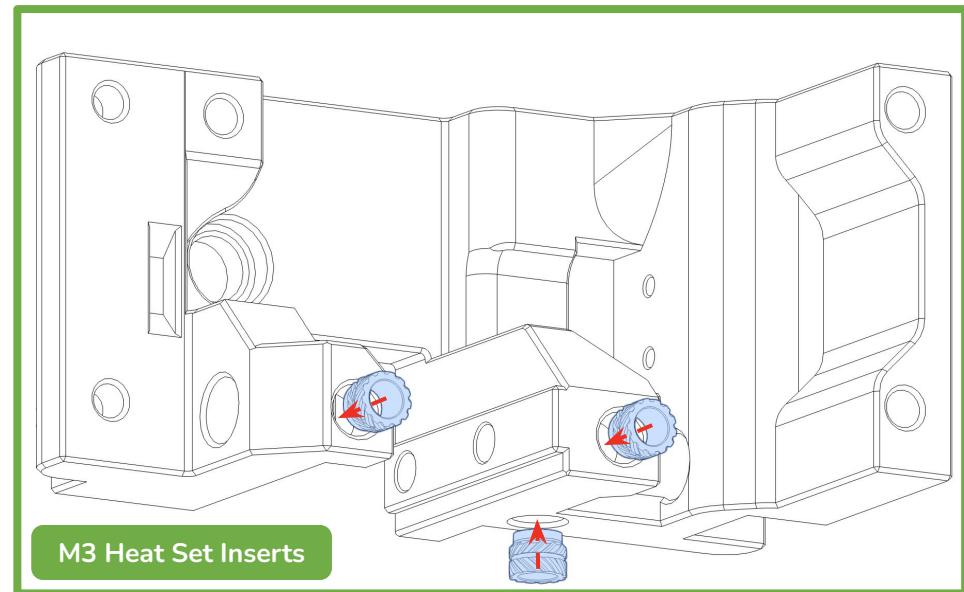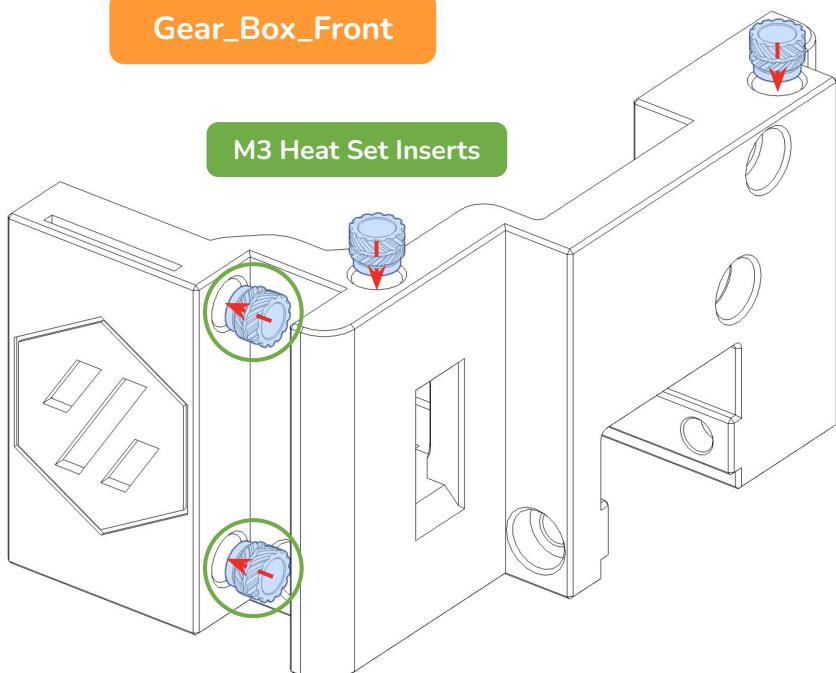



HEAT SET INSERTS TIP

Pull these inserts using the soldering iron from the side and take your time to make them flush with the surface and aligned with the screw path. You can use a long M3 screw, inserted from the left, to hold and pull the heat insert in their slot.

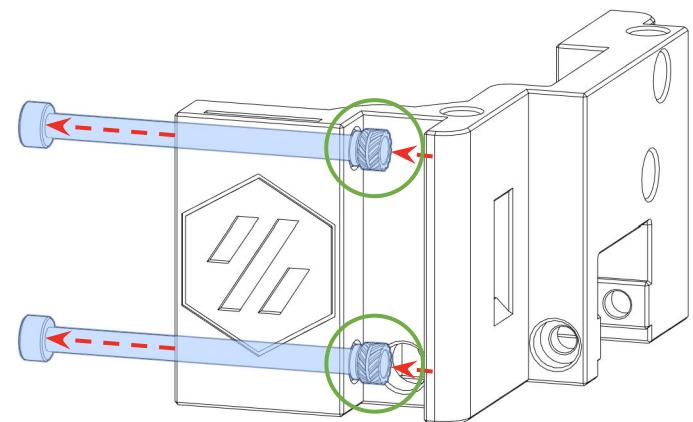

GEARBOX

SELECTOR ENDSTOP INSTALLATION

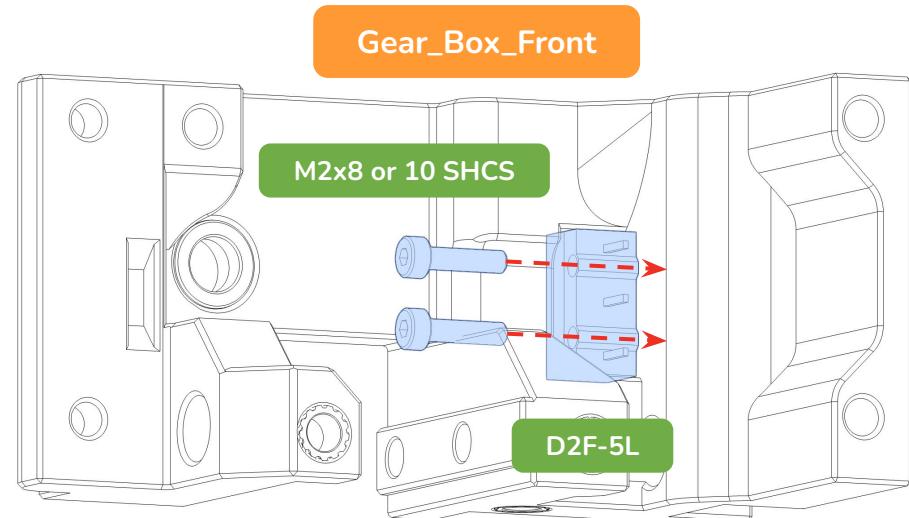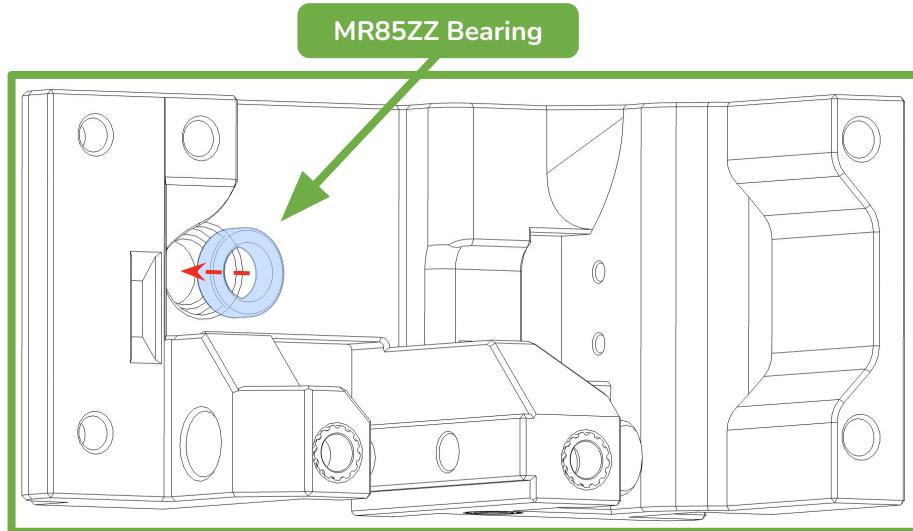

MR85ZZ BEARING INSERTION


If your printed parts are accurate, the bearing should press-fit easily into place. If you're having trouble seating the bearings, make sure the channel is clear of drooping overhangs, and try pulling the bearing into place with an M5 bolt.


M2 SCREWS

It can be helpful to pre-thread the holes with one of the M2 screws. Remember not to go too deep, you might strip it out! Use an extra-long 1.5mm hex wrench if you have it.

MICRO SWITCH ORIENTATION

If you are using a levered micro switch, install it as shown, with the lever opening to the bottom. In case you are using a micro switch without a lever, invert it so the button is on the bottom and will line up with the Encoder M3 SHCS end stop.

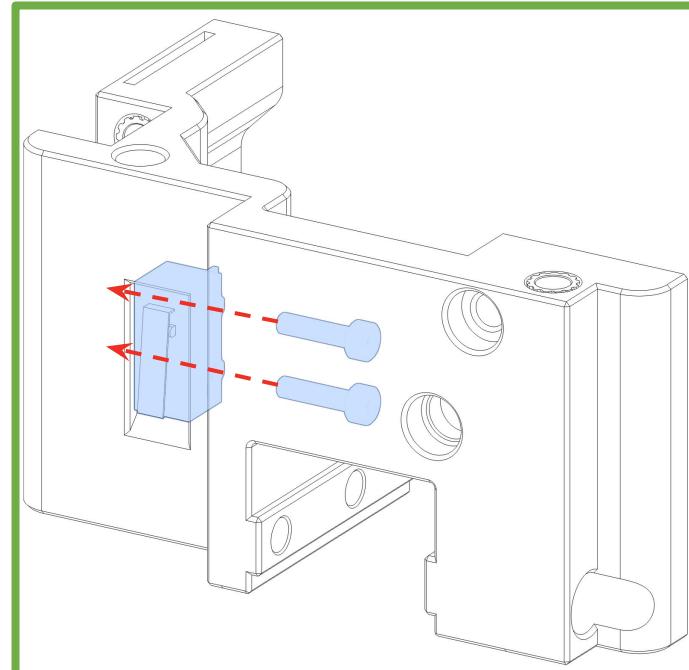


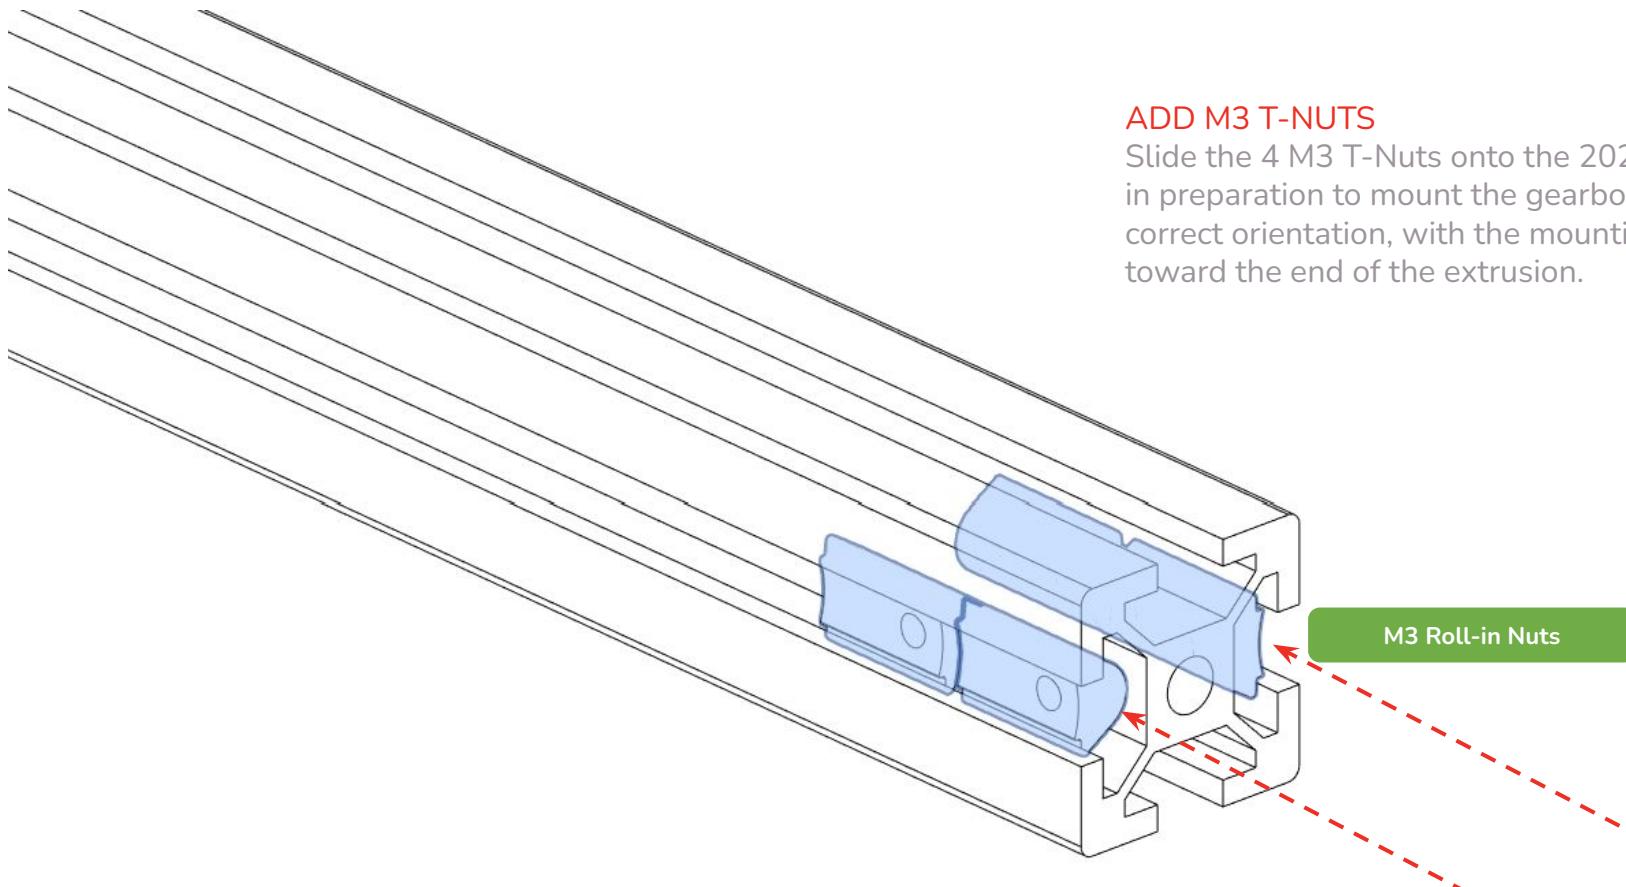**ADD M3 T-NUTS**

Slide the 4 M3 T-Nuts onto the 2020 extrusion in preparation to mount the gearbox. Note the correct orientation, with the mounting hole toward the end of the extrusion.


GEARBOX



2020 INSTALLATION

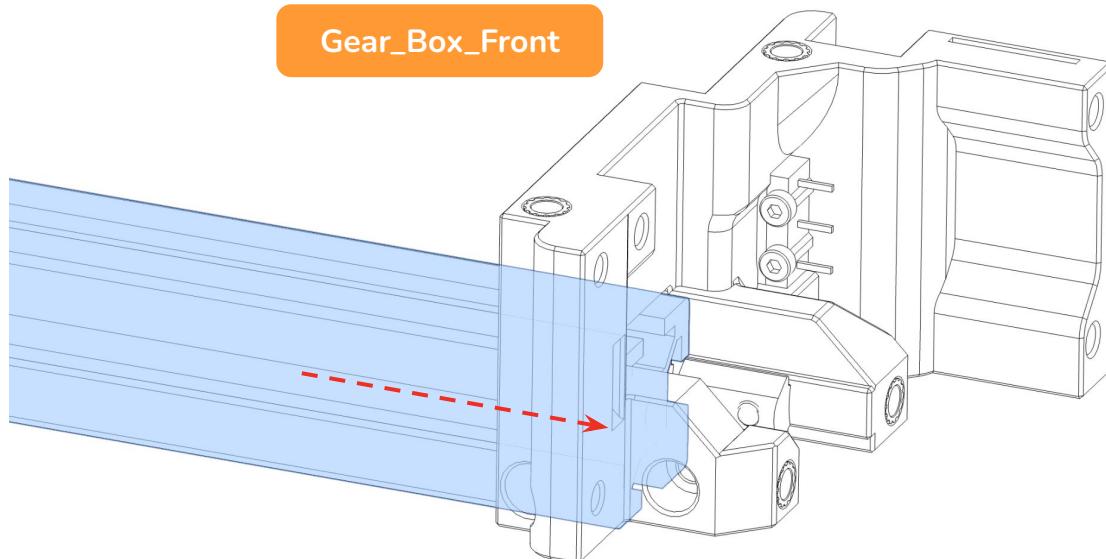

CHECK POINT



Make sure the 2020 extrusion is fully seated against the stop built into **Gear_Box_Front**.

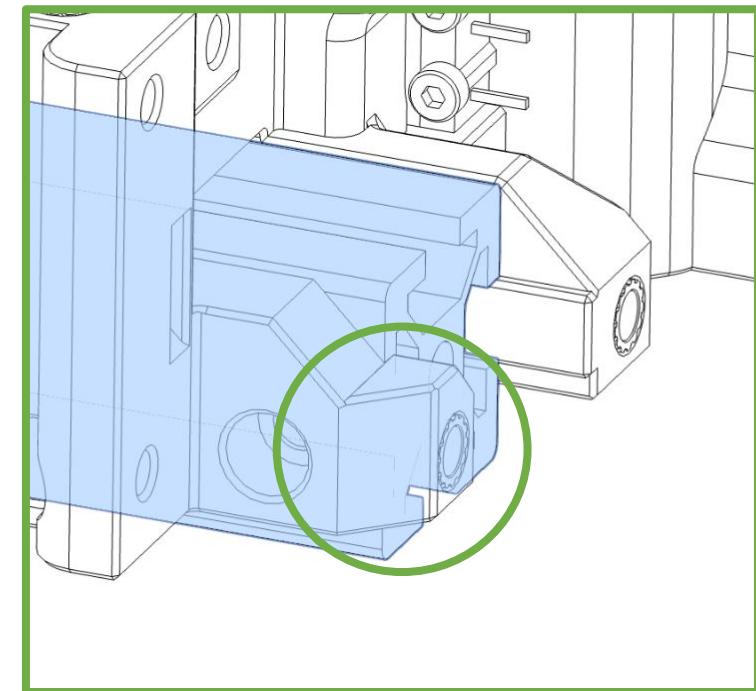

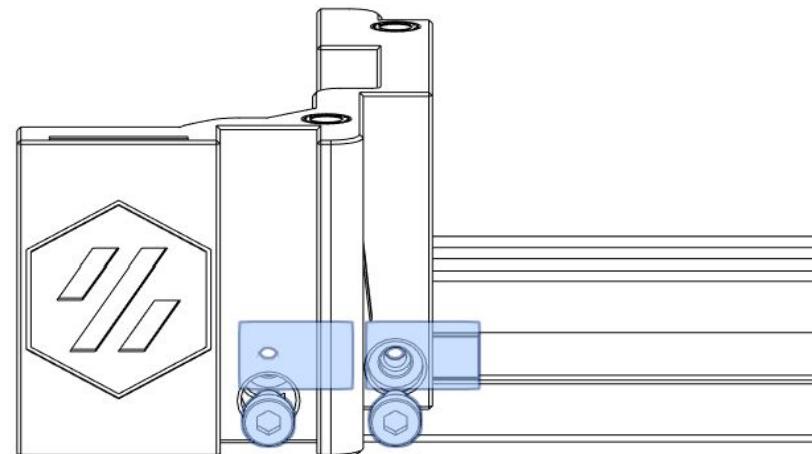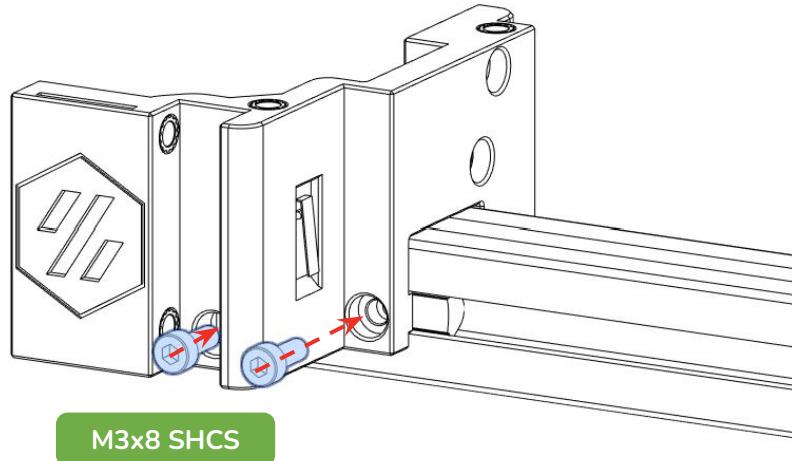


SEATING THE 2020

Start each of the 4 M3x8 screws into the M3 T nuts that you inserted earlier. Once all four are started, take care the 2020 extrusion remains seated against **Gear_Box_Front** while tightening the M3x8 screws. It is important for the alignment of the Gearbox.

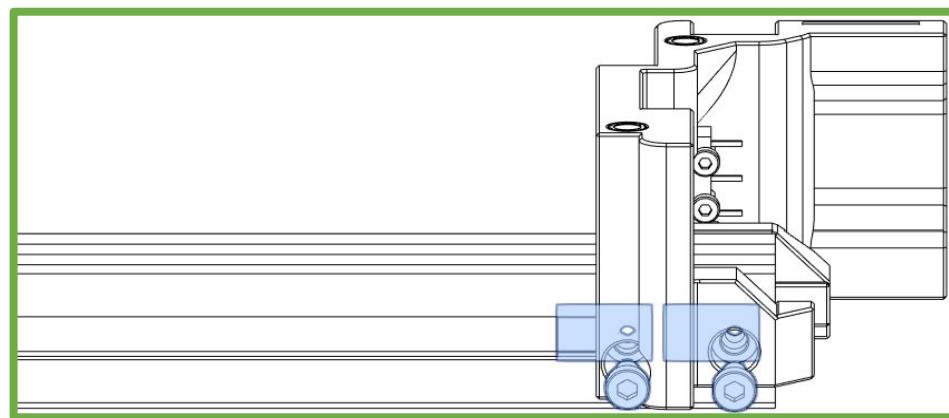
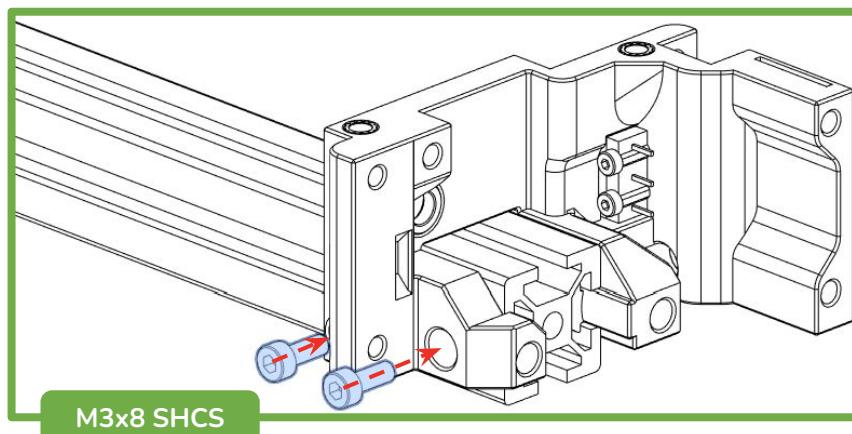


GEARBOX

GEARBOX BACK PREPARATION

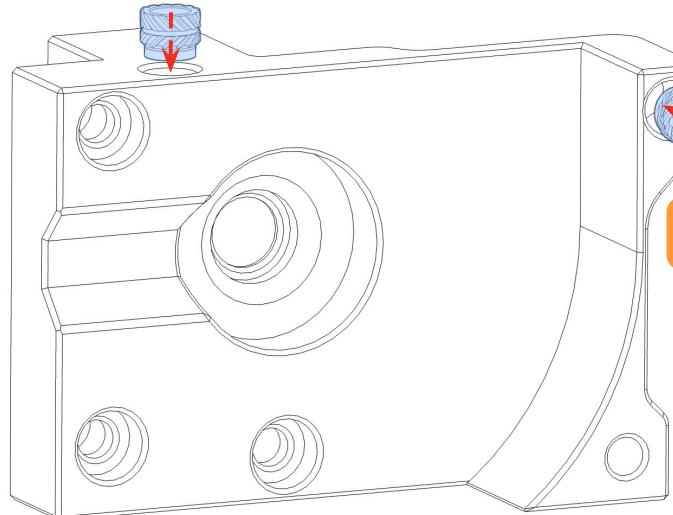


Gear_Box_Back

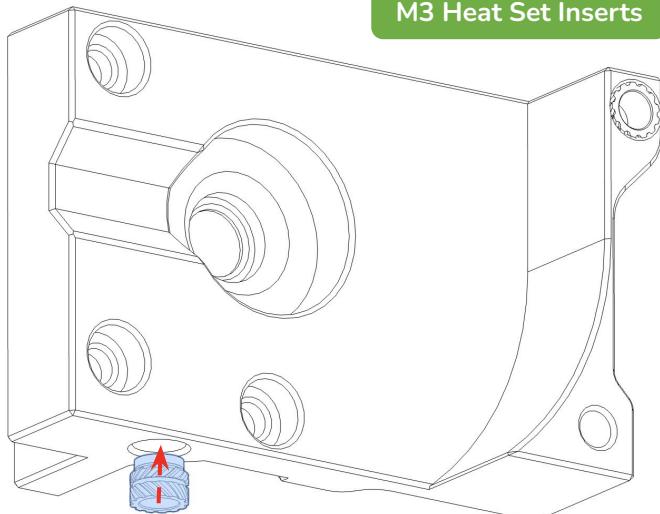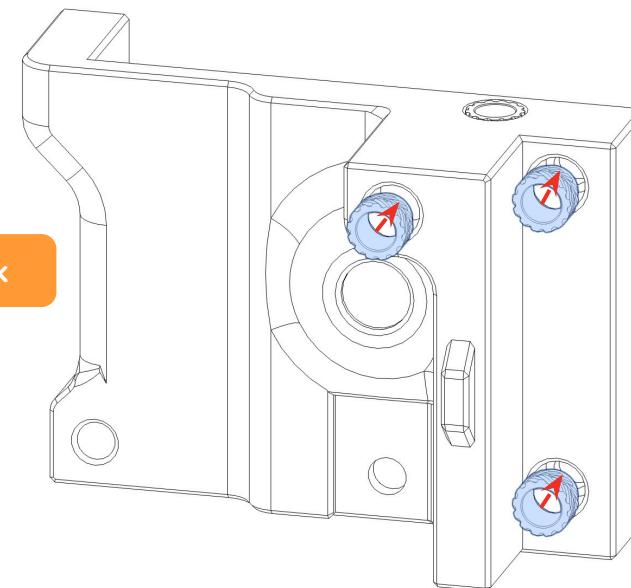

M3 Heat Set Inserts

MR85ZZ BEARING INSERTION

If your printed parts are accurate, the bearing should press-fit easily into place. If you're having trouble seating the bearings, make sure the channel is clear of drooping overhangs, and try pulling the bearing into place with an M5 bolt.


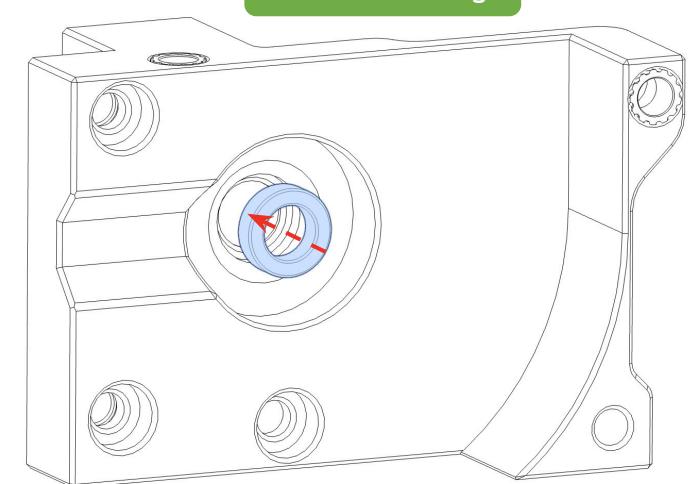


MR85ZZ Bearing

HEAT SET INSERTS

The list of pages with heat set inserts is on [Page 15](#).

[a]_Side_Latch_x2 †

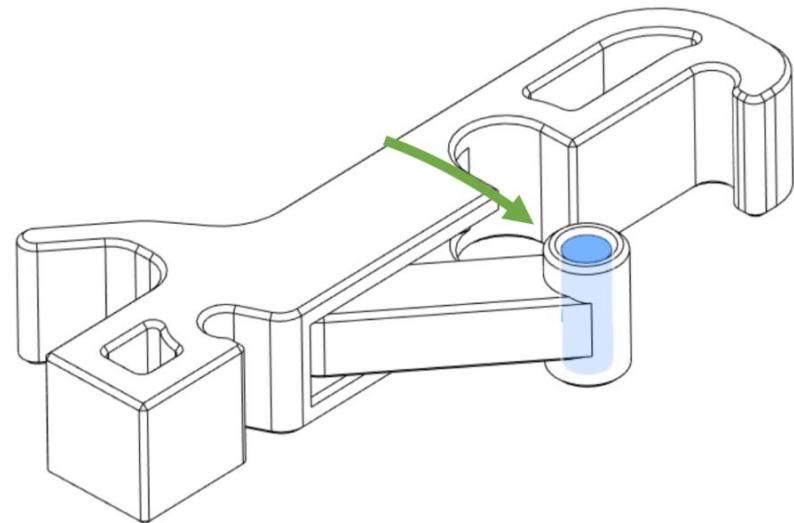
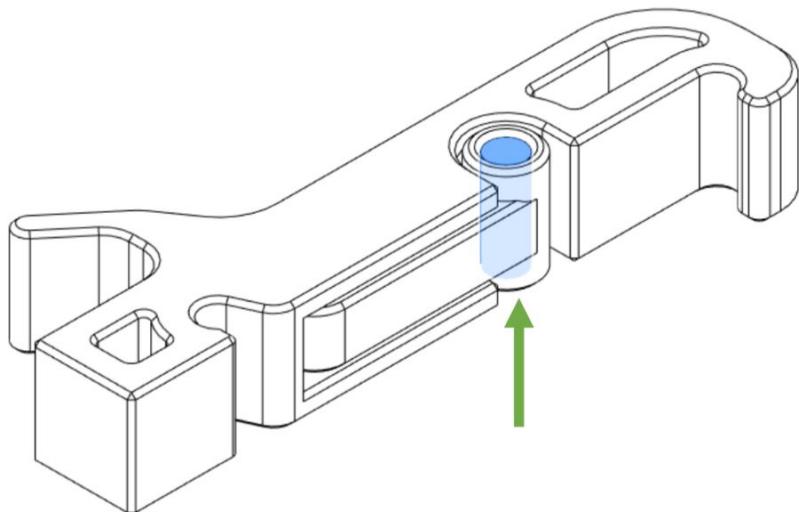


HINGE UNLOCK

Use a small tool (like an allen key) inserted into the hinge hole to free the print-in-place mechanism and ensure it rotates freely.
Do this for both latches.


GEARBOX

GEARBOX BACK & FRONT LATCH

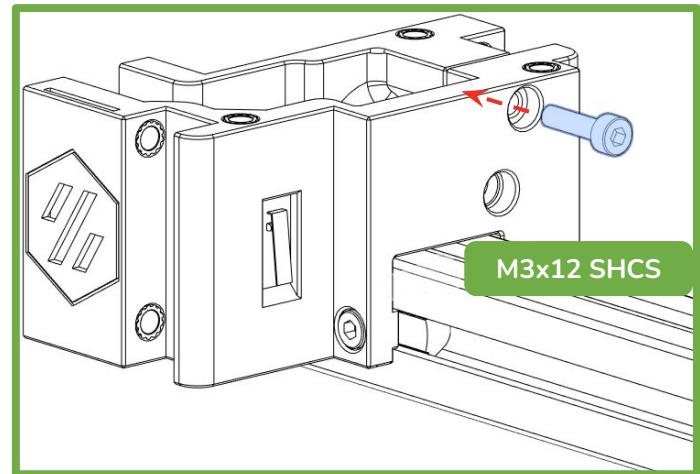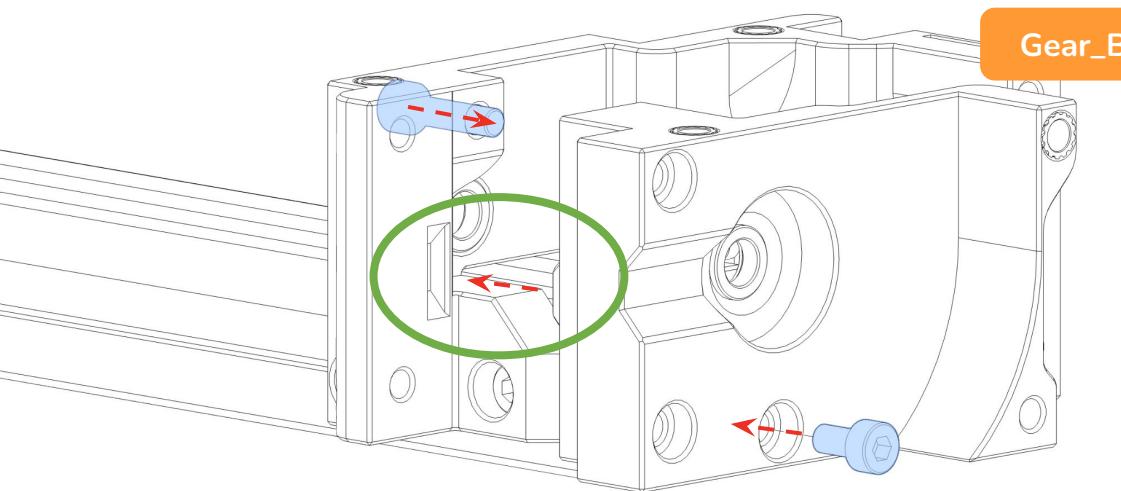

ALIGNMENT

Align the **Gear_Box_Front** and **Gear_Box_Back** with the keyed slot, and secure the **Gear_Box_Back** with 1 M3x6mm screw from the back, and 1 M3x12 screw from the front.

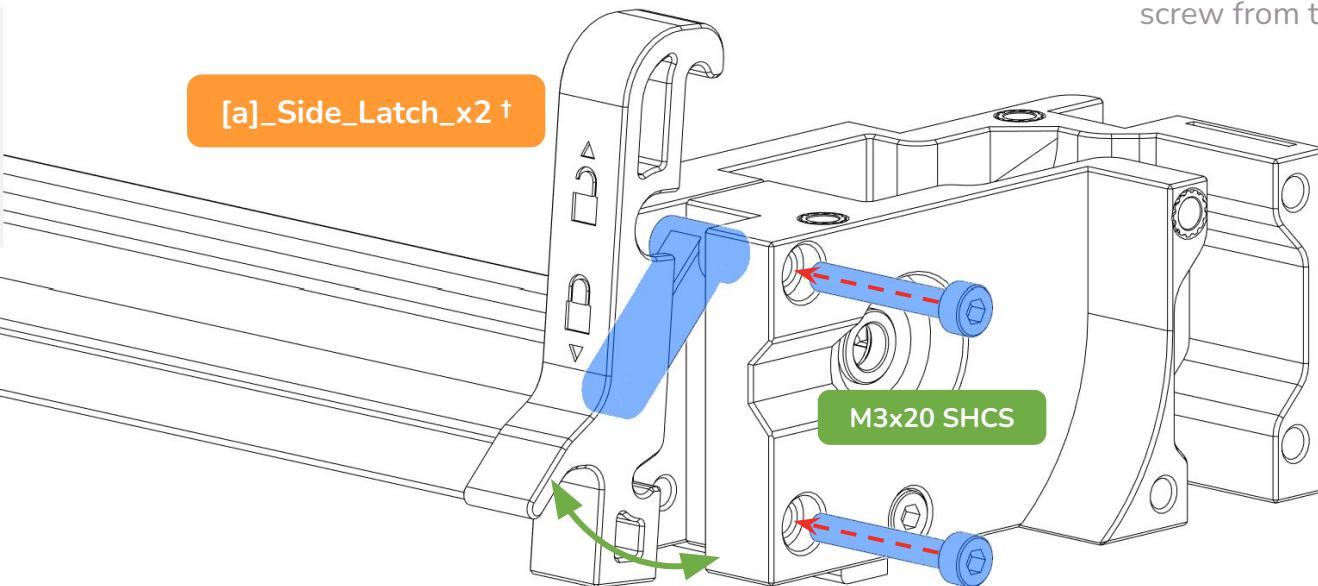

LATCH SCREWS

Extend the arm of the **Side_Latch** and hold it in place while you thread the top M3x20mm screw. Screw the top screw all the way in, then screw in the bottom M3x20mm screw. With both screws in place, close the latch.

Don't over tighten the two screws; you should be able to lock and unlock the latch without trouble.


GEARBOX

EXPLODED VIEW

GEARBOX SUB-BOM FOR STEP 2

A
B
C
D

1x 5mm D-Cut Rod
1x GT2 Belt Loop, 188mm
2x GT2 Pulley 20-tooth
5x M3x8mm BHCS

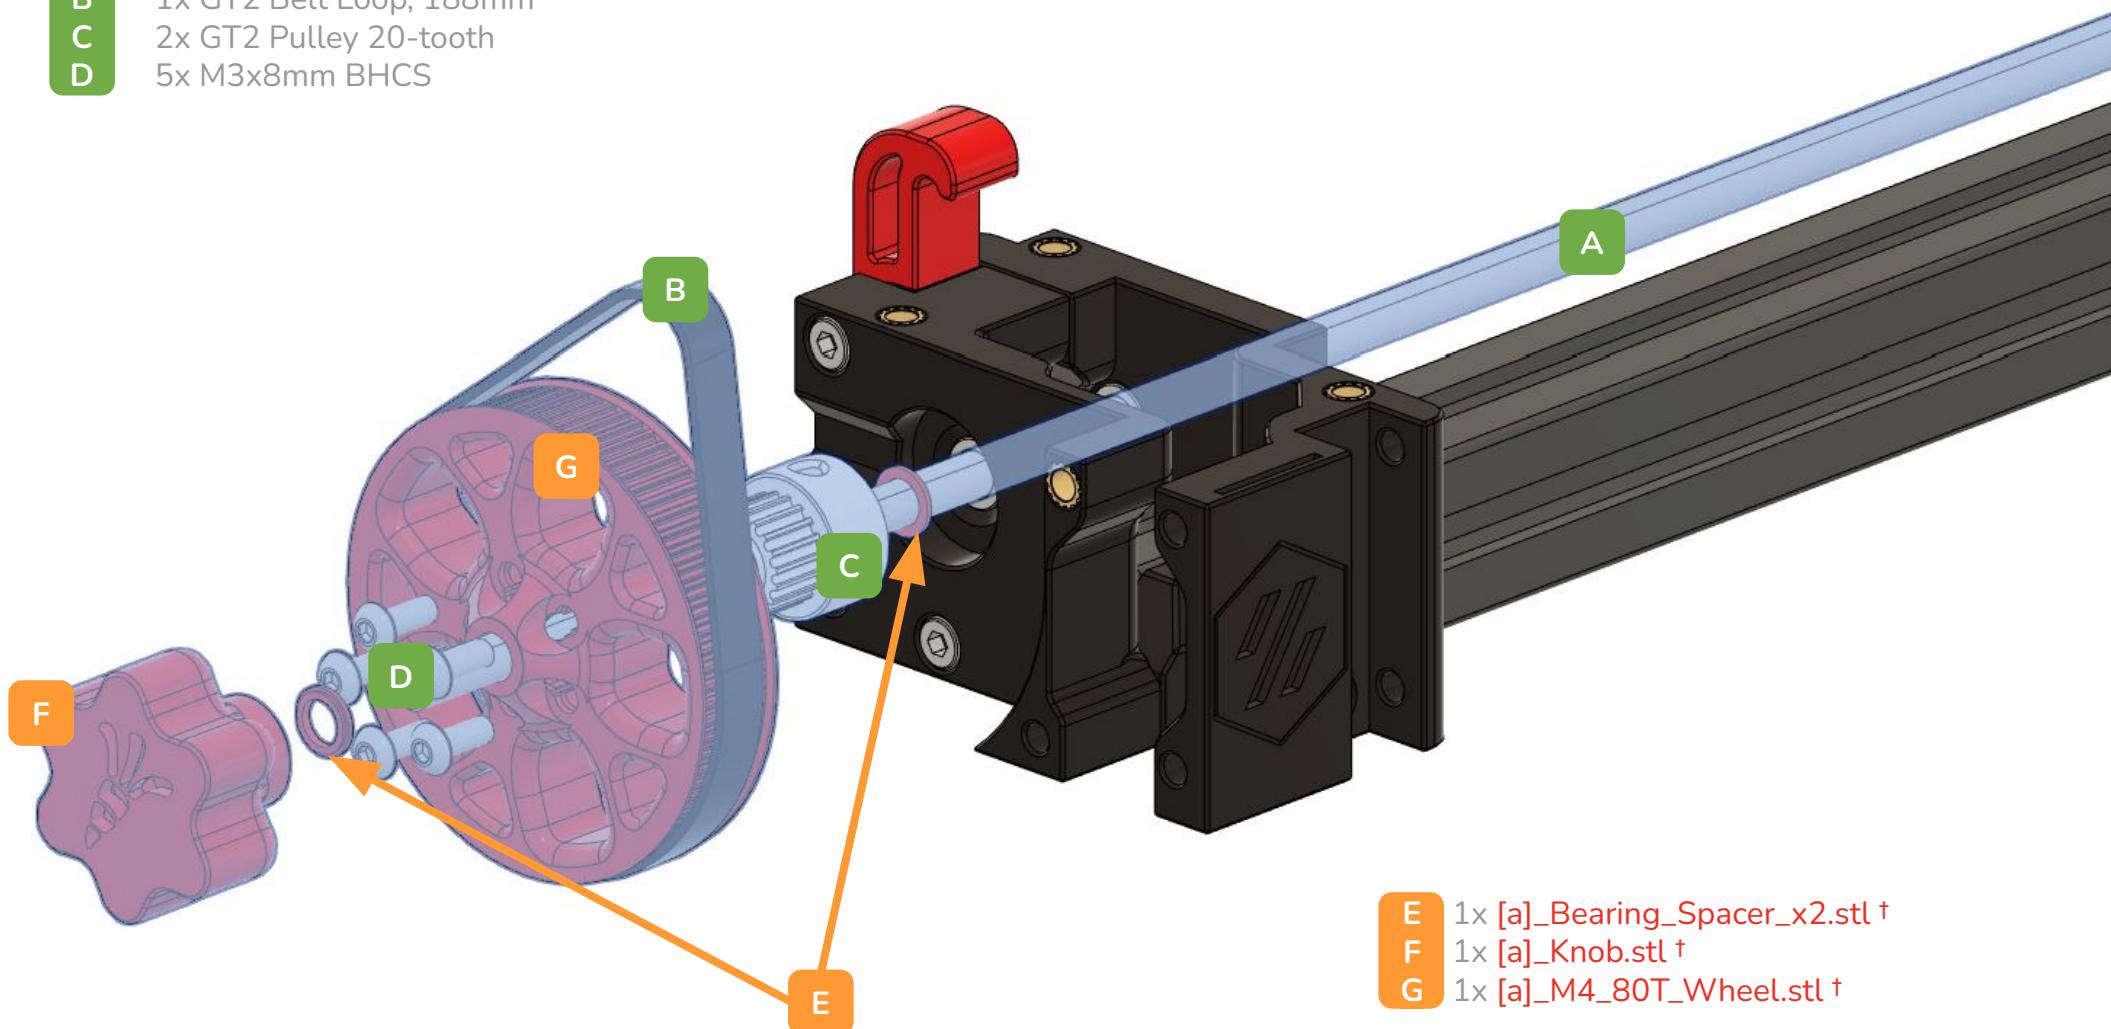


GEARBOX

80T GEAR ASSEMBLY

REMOVE FLANGE


Use pliers to gently remove the top flange of the GT2 pulley.

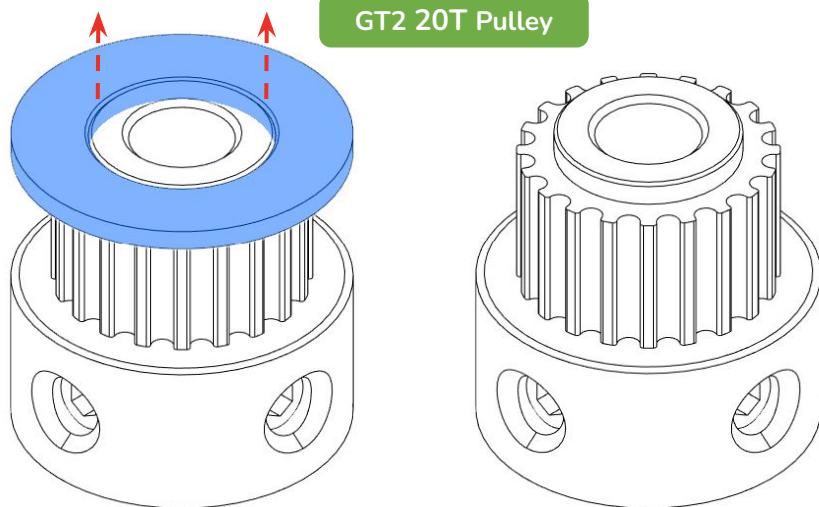


GT2 20T Pulley

INSERT PULLEY

Place the GT2 pulley into the 80T_Cog_Guide.

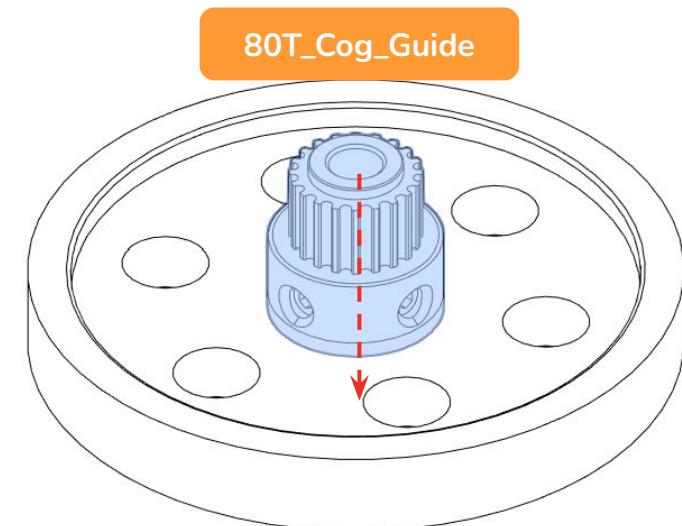

80T_Cog_Guide

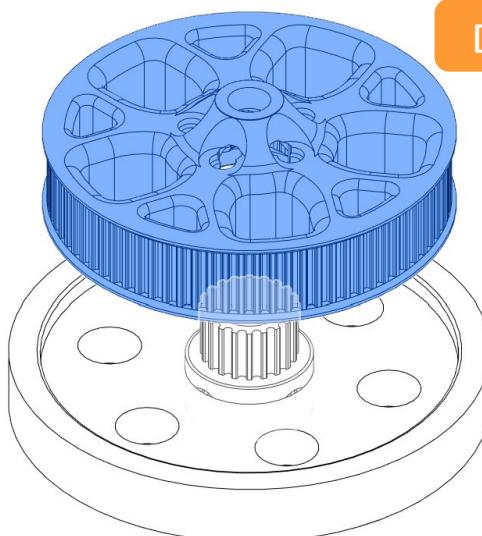


[a]_M4_80T_Wheel †

FINISH MOUNTING

Insert the **M4_80T_Wheel** onto the GT2 pulley and press it flat to the guide.


Add 5 M3x8 BHCS to secure the wheel in place. Gently tighten the screws in a star pattern (skipping every other screw) until the hub is snug. Don't overtighten, you'll strip the plastic, or worse, the pulley!

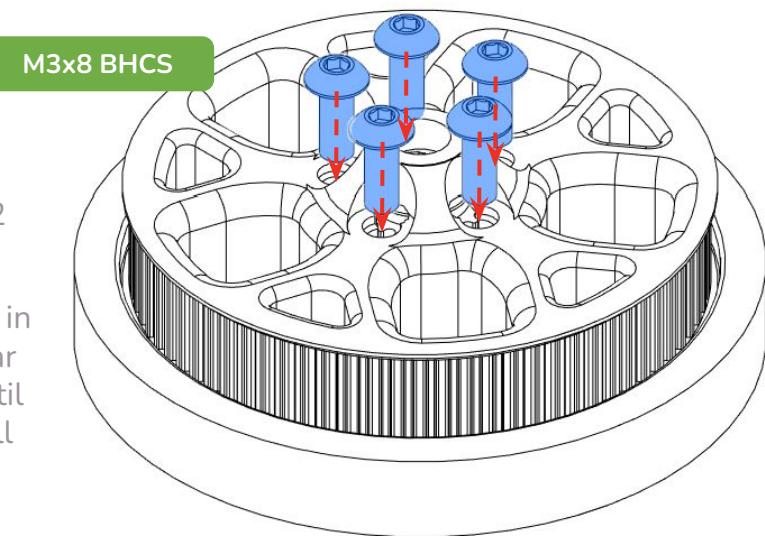

M3x8 BHCS


GEARBOX

DRIVE SHAFT

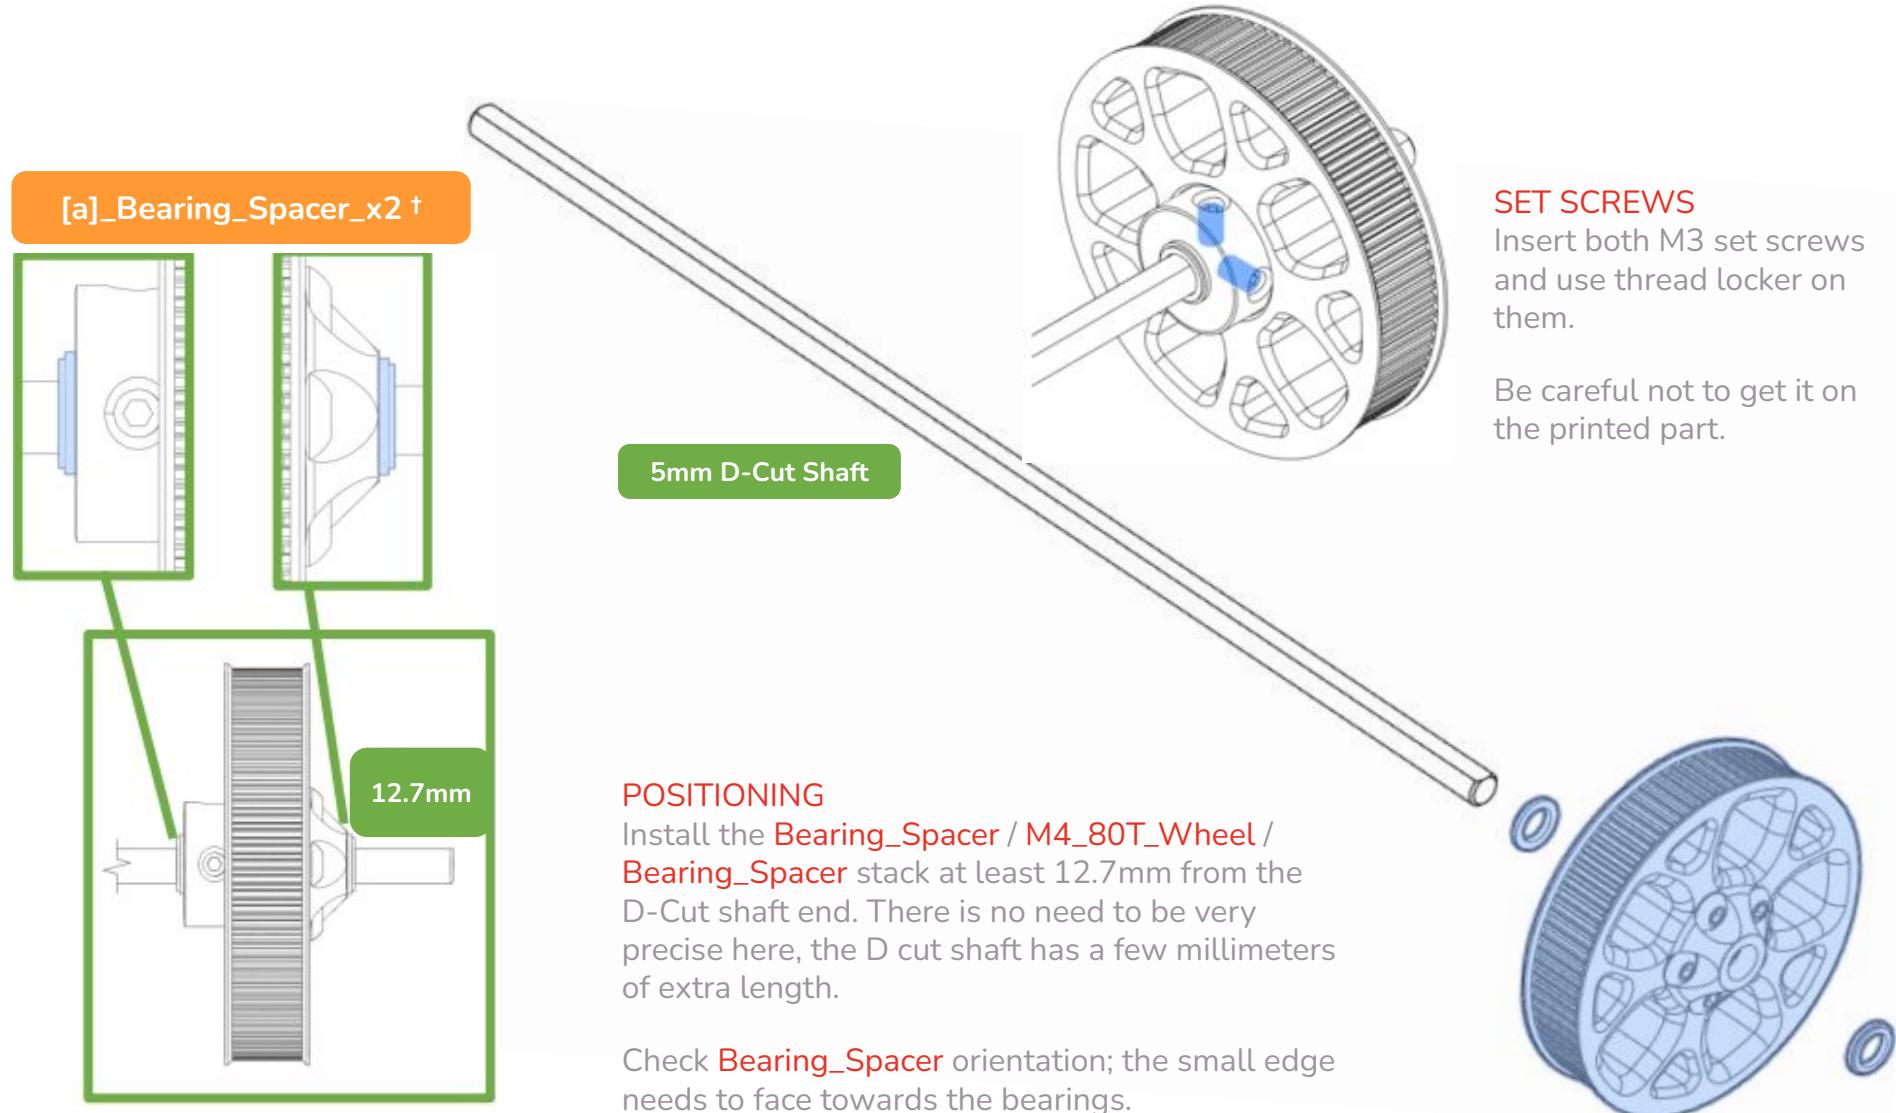

GEARBOX

GEAR DRIVE BELT

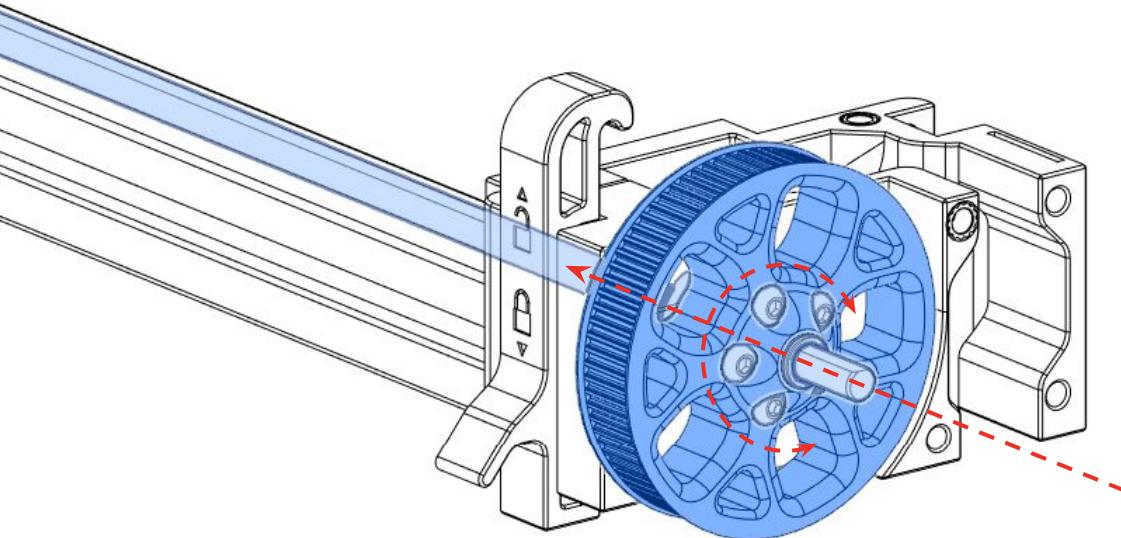


ASSEMBLY

Gently insert the D-Cut shaft assembly through the Gearbox bearings.

Depending on how well your D-Cut shaft has been machined, you may need to use a fine file or sandpaper to smooth machined edges to allow it to slide smoothly through the bearings and Bondtech gears.

Adjust the [M4_80T_Wheel](#) so it spins with as little wobble as possible, and doesn't rub. Use the back edge of the Gearbox as a guide and gently adjust the wheel / tweak BHCS screw tension until you are satisfied. **It will never be perfect.**

We will add the knob later!

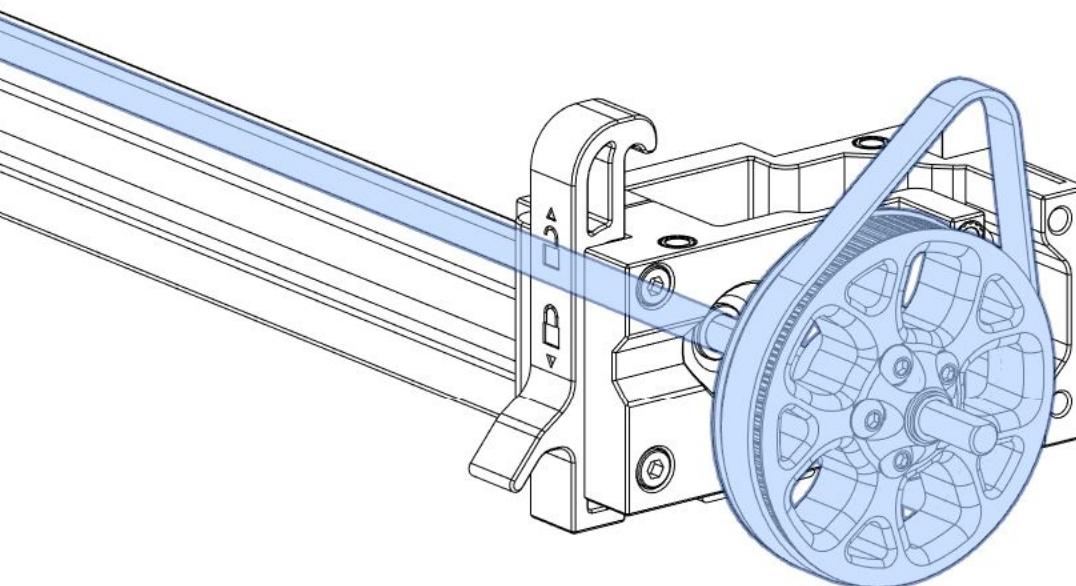

GEAR BELT

Now we need to install the 188mm GT2 belt loop around the [M4_80T_Wheel](#). It will be impossible to do so after the next steps. You can either spin it onto the wheel, or pull the Drive Shaft back out of the Gearbox and wrap the belt around the wheel before re-inserting the Drive Shaft.

If you pull out either of the bearings, make sure they re-seat correctly. It may be necessary to fully remove the Drive Shaft to re-seat the bearings.

GEARBOX


GEARBOX SUB-BOM FOR STEP 3

- A 1x GT2 Pulley 20-tooth
- B 1x M3 Threaded Insert
- C 2x M3 Washers
- D 2x M3x12mm SHCS
- E 2x M3x16mm SHCS
- F 1x M3x25mm SHCS
- G 2x M3x40mm SHCS
- H 2x Microfit 4-pin**
- I 1x Microfit 5-pin**
- J 1x MR85ZZ Bearing
- K 1x NEMA14 Motor**

EXPLODED VIEW

**NOTE: VARIATIONS

There are 4 options for the Motor Arm: NEMA 14 Motor or NEMA 17 Motor, and with or without Microfit connectors, for local or remote MCUs respectively. We're showing the NEMA 14 version with the connectors, but suit yourself!


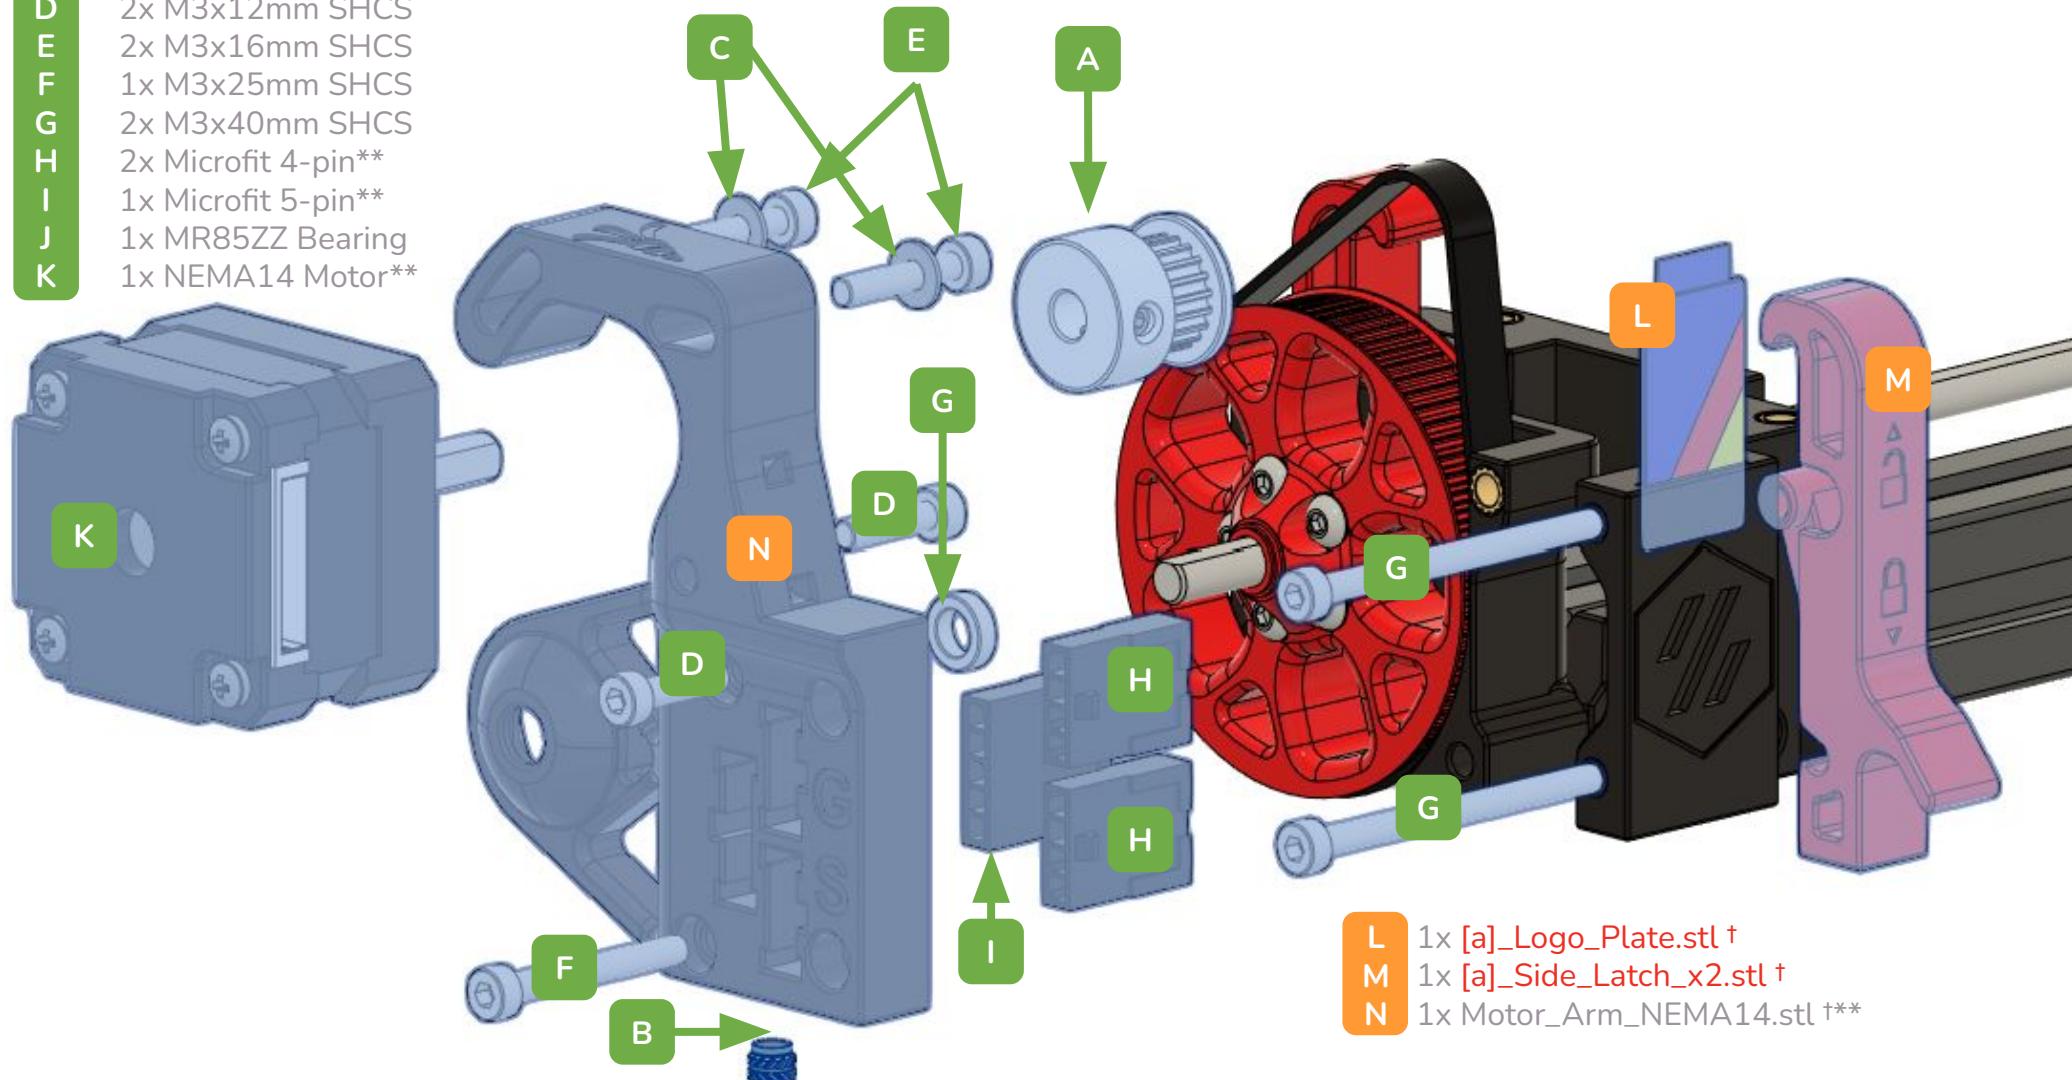


GEARBOX

MOTOR PREPARATION

MOTOR VARIATIONS

While the NEMA 14 motor is what is called for in the BOM, we also support NEMA 17 motors for those who are sourcing their own parts. NEMA 17 motors tend to have more torque but need to run at lower speeds. Use what works for you!

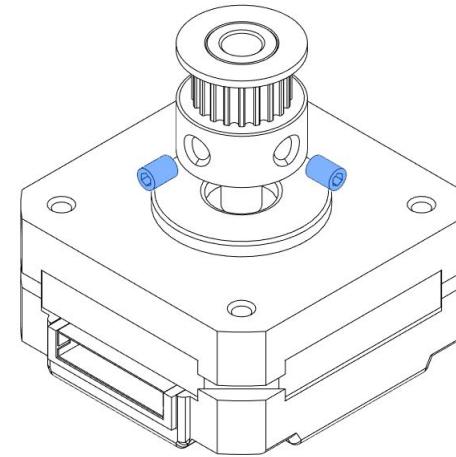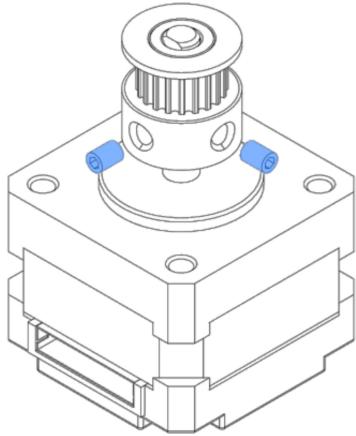


SET SCREWS


Insert both M3 set screws and use thread locker on them.

Use the appropriate pulley tool to install the pulley at the correct height on the motor shaft.

Pulley_Tool_NEMA14 †

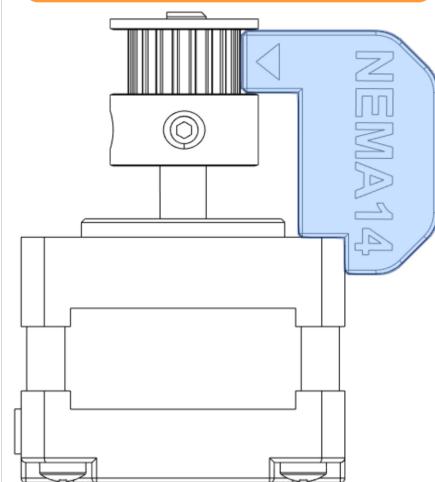

Pulley_Tool_NEMA17 †

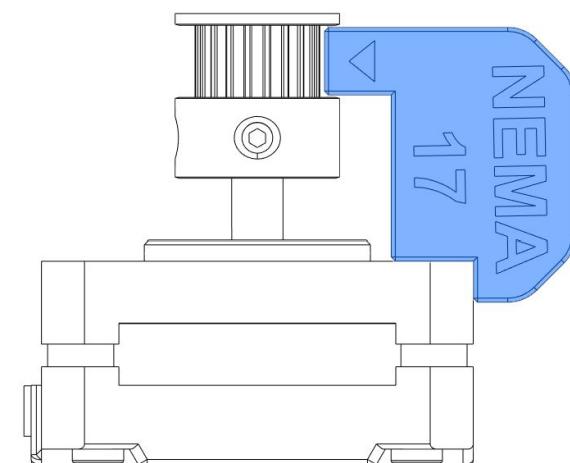


PULLEY HEIGHT

Use the [Pulley_Tool_NEMA14 †](#) to set the correct height of the GT2 20T gear.

If you are using a NEMA 17 motor for the gear axis, assembly is the same but you'll need to use [Pulley_Tool_NEMA17 †](#) and print a different Motor Arm to mount it.

GEARBOX

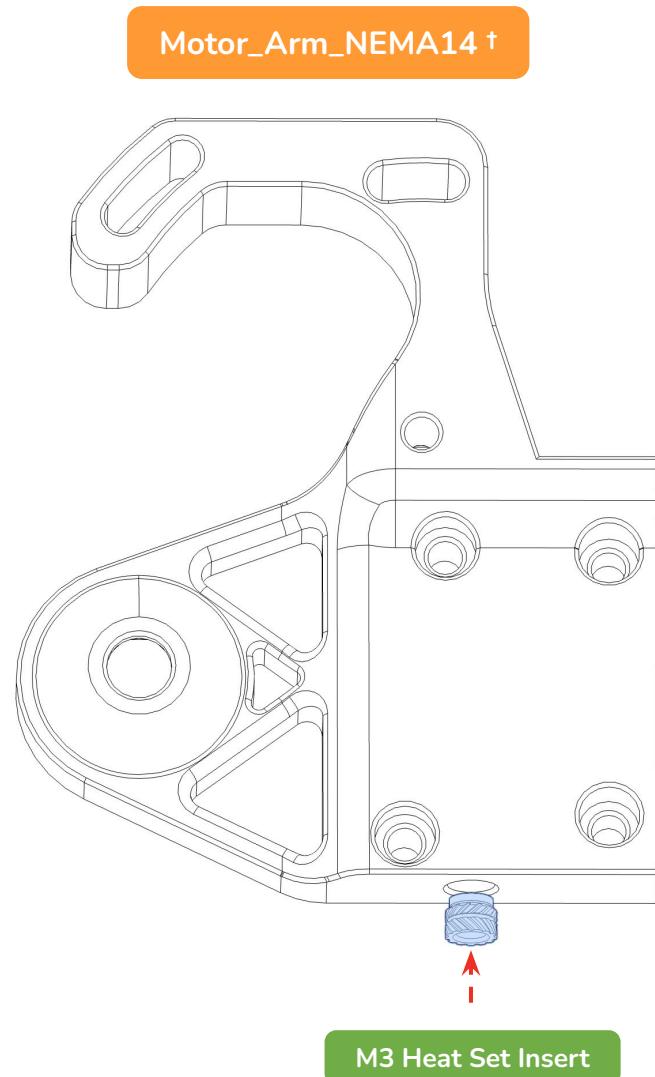

HEAT SET INSERTS

The list of pages with heat set inserts is on [Page 15](#).


MOTOR ARM

MOTOR ARMS

There is one version for each motor size, NEMA 14 vs NEMA 17.

There are two versions of each of those sizes: One with microfit connectors, for connecting to an external MCU, and one *without* connectors for use with internal MCU's like ERCF Easy BRD, Mellow Fly ERCF BRD, Fystec ERB and BTT MMB.


We will show both versions in this manual. Use what works for you!

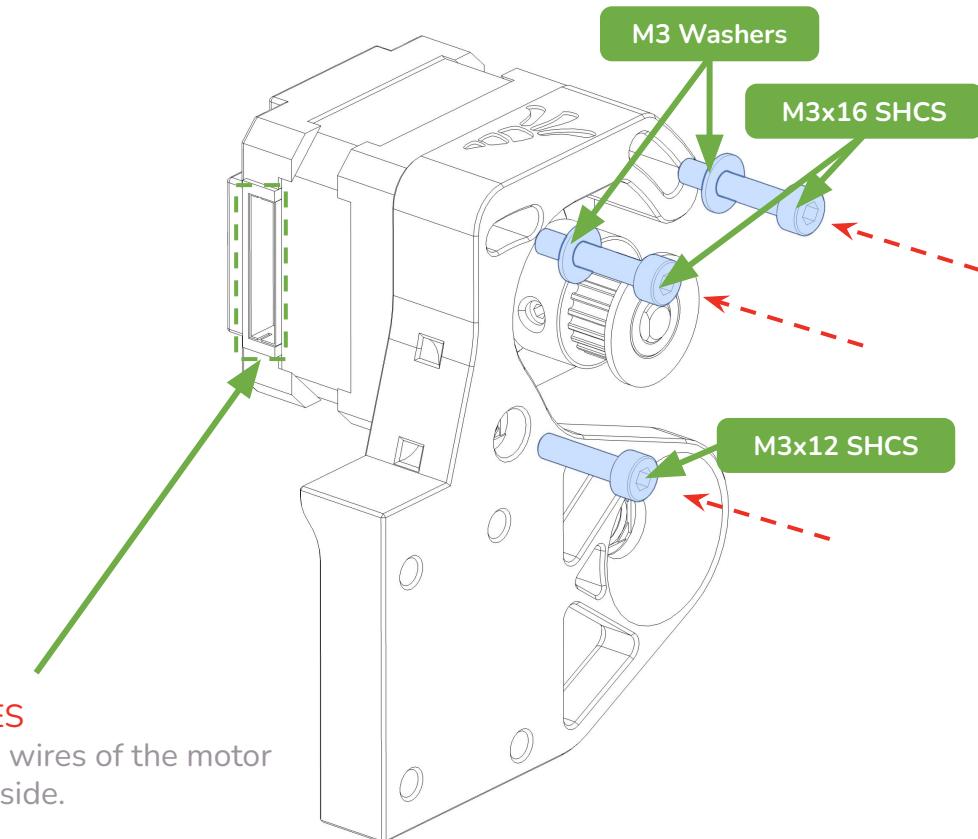

MOTOR WIRES

Make sure the wires of the motor come out this side.

GEARBOX

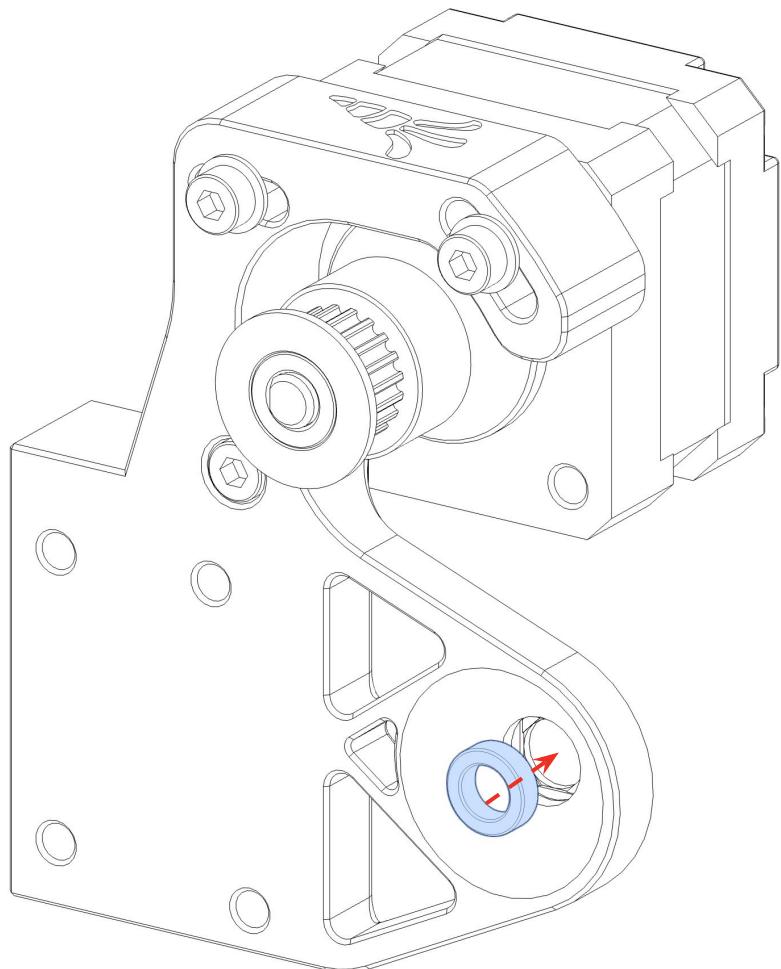


MR85ZZ Bearing

MOTOR ARM

MR85ZZ BEARING INSERTION

If your printed parts are accurate, the bearing should press-fit easily into place. If you're having trouble seating the bearings, make sure the channel is clear of drooping overhangs, and try pulling the bearing into place with an M5 bolt.

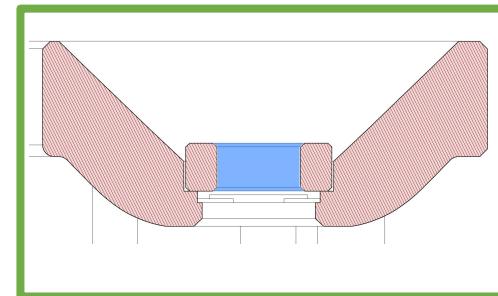

BEARING POSITION


Once installed, the bearing will not be flush and will stick out as shown.

GEARBOX (REMOTE MCU)

(OPTIONAL) MICROFIT WIRING

GEAR MOTOR WIRING

NOTE: This is an optional step to install Microfit connectors for users who want to use an external MCU to control their ERCF. If you are using a daughterboard like ERCF Easy BRD, Mellow Fly ERCF BRD, Fystec ERB or BTT MMB, you don't need to do this!

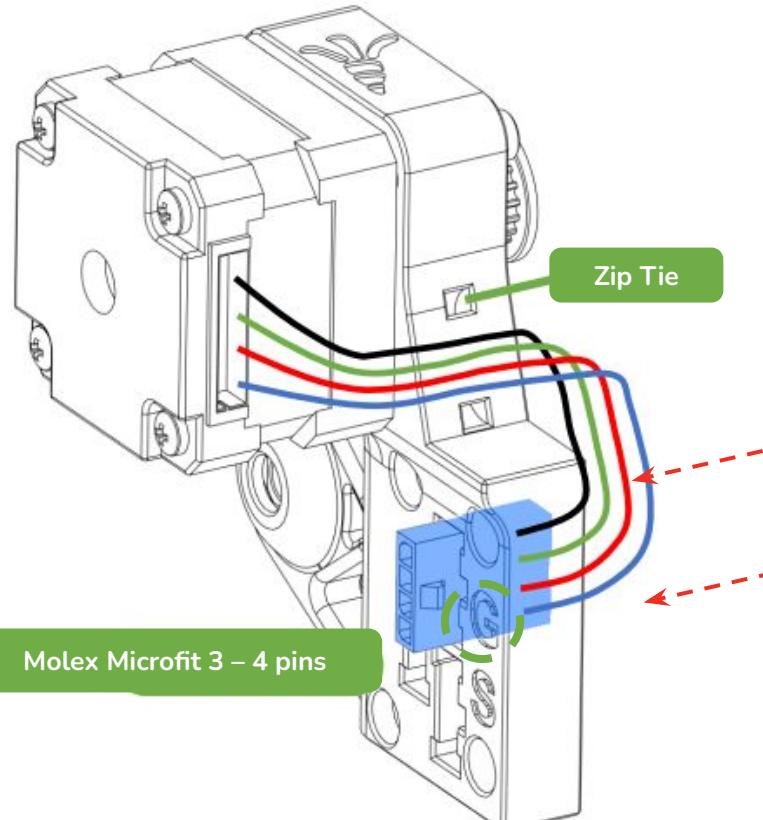


Motor_Arm_NEMA14_EASYBRD †

GEAR MOTOR CONNECTOR

Crimp the gear motor wiring into a 4-pin MicroFit 3 female connector as shown. Push the connector into the top left slot of the motor arm, marked G.

GEARBOX (REMOTE MCU)

(OPTIONAL) MICROFIT WIRING

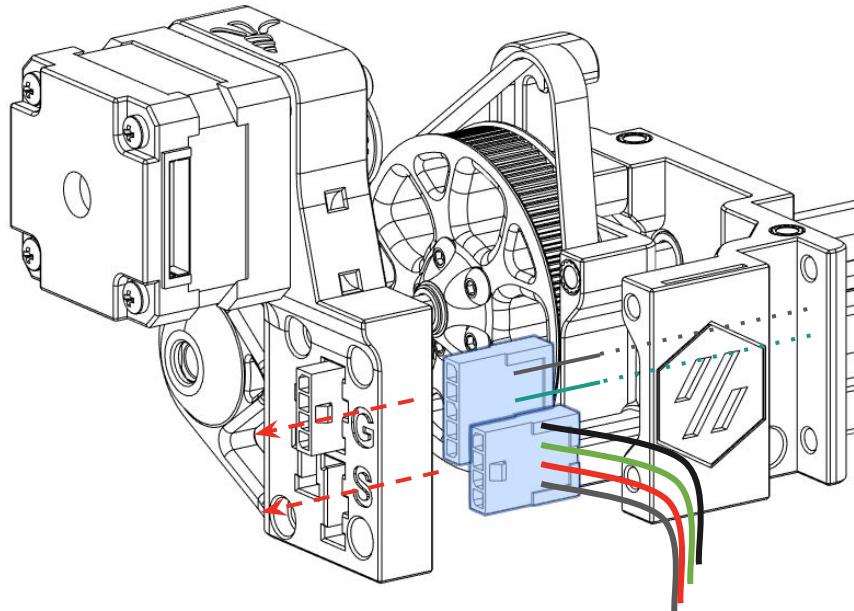

INSERT THE MICROFIT CONNECTORS

Insert the two microfit connectors from the wire bundles into their dedicated holes in the [Motor_Arm_NEMA14.stl](#) † (shown) or [Motor_Arm_NEMA17.stl](#) †.

For picture clarity, only the microswitch wires are shown for the 5-pin connector (but the other wires are assumed present).



GEARBOX

CLOSING THE GEARBOX

CLOSING THE GEARBOX

Install the [Motor_Arm](#) and pass the belt around the GT2 pulley of the Gear Motor, but don't tension it yet.

Carefully insert and tighten the M3x25mm screw first, and then the M3x12mm screw. Take your time. Make sure no wires are pinched between parts.

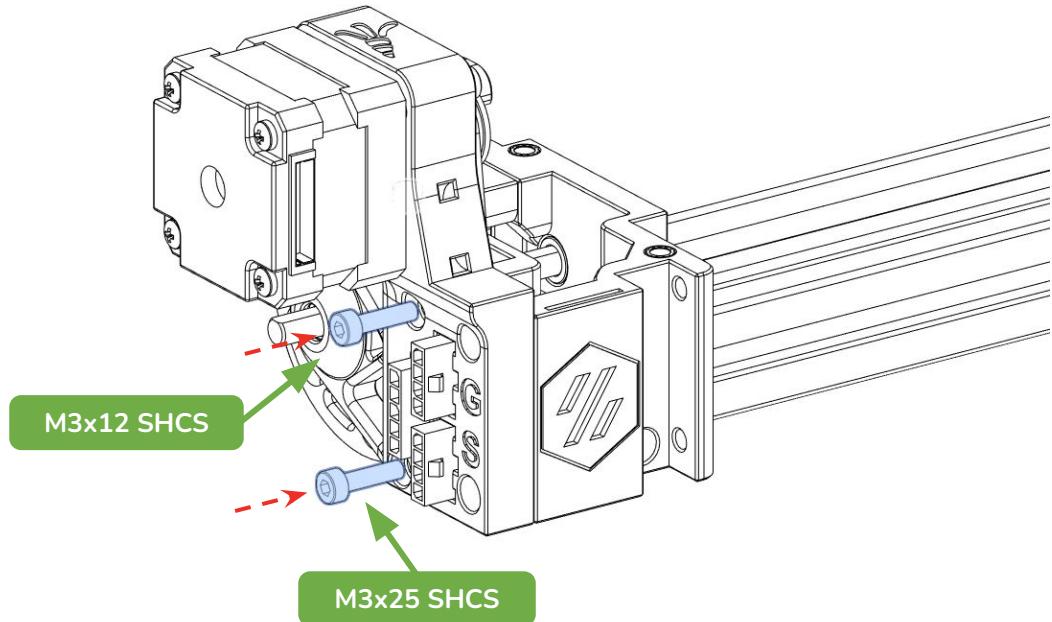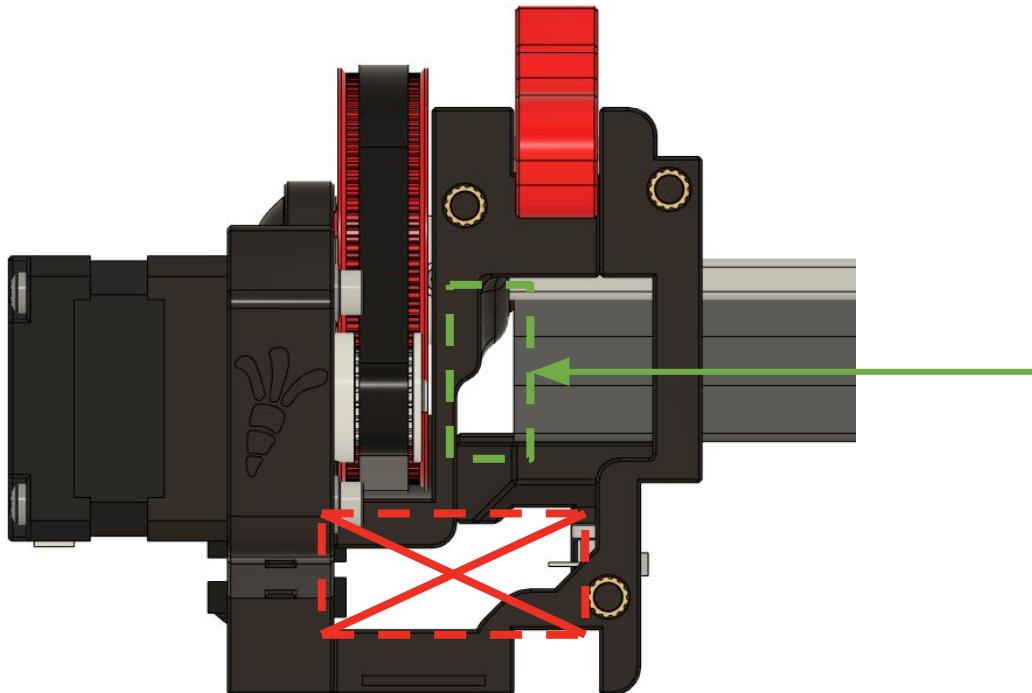


CABLE MANAGEMENT

Make sure the wires are routed in the channel between the 2020 extrusion and the [Gear_Box_Back](#). If you route the wires through the other opening, you won't be able to connect the wires later!

GEARBOX

KNOB & VORON LOGO

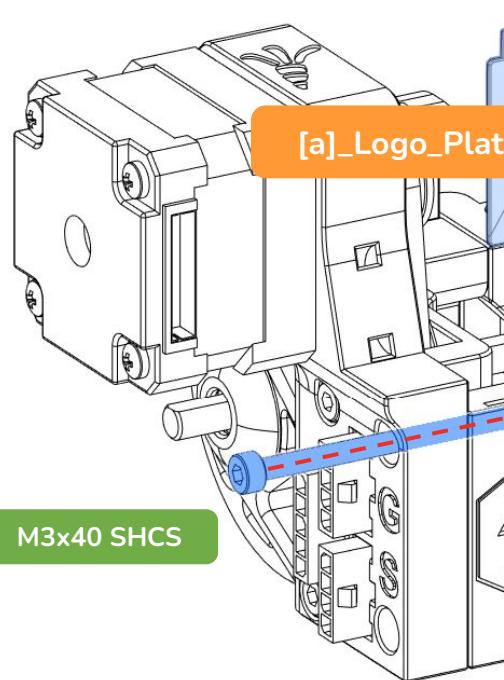


VORON LOGO

Insert the [Logo_Plate](#) into its slot. You can use single or multicolor options to customize your unit. It can be changed easily once the ERCF is fully assembled and installed.

KNOB

Insert the [Knob](#) into the 5mm D-Cut shaft (beware of the D-Cut position). It shouldn't quite touch the motor arm.

Add the bottom M3x40mm screw for the latch and close the latch.

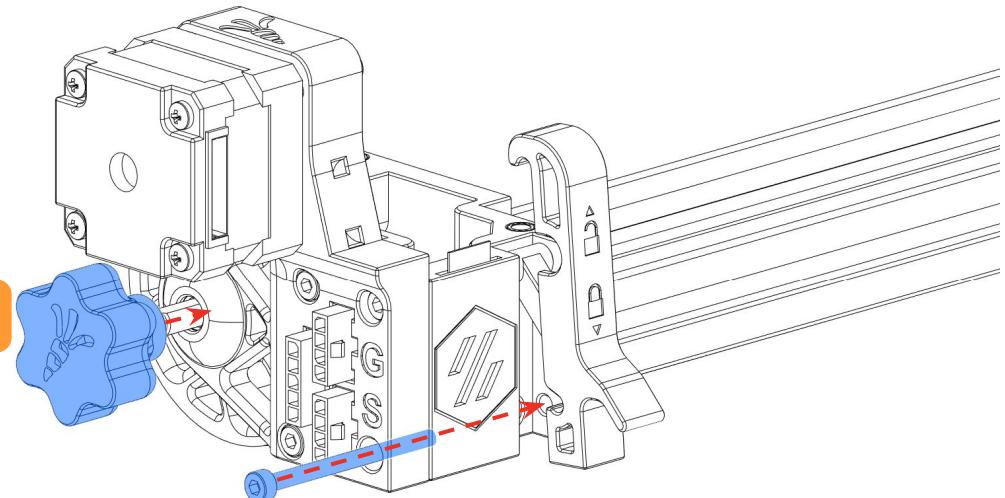

GEARBOX


GEARBOX BELT TENSION

ADJUST MOTOR AND GT2 BELT TENSION

Adjust the belt tension by slightly loosening the top two M3x16mm screws on the [Motor_Arm](#). Rotate the motor to change the tension of the belt.

Aim for around 3mm of deflection before retightening and checking the belt tension again.

In practice, the belt needs to be much looser than you think so it doesn't stall the motor as the printed wheel rotates.

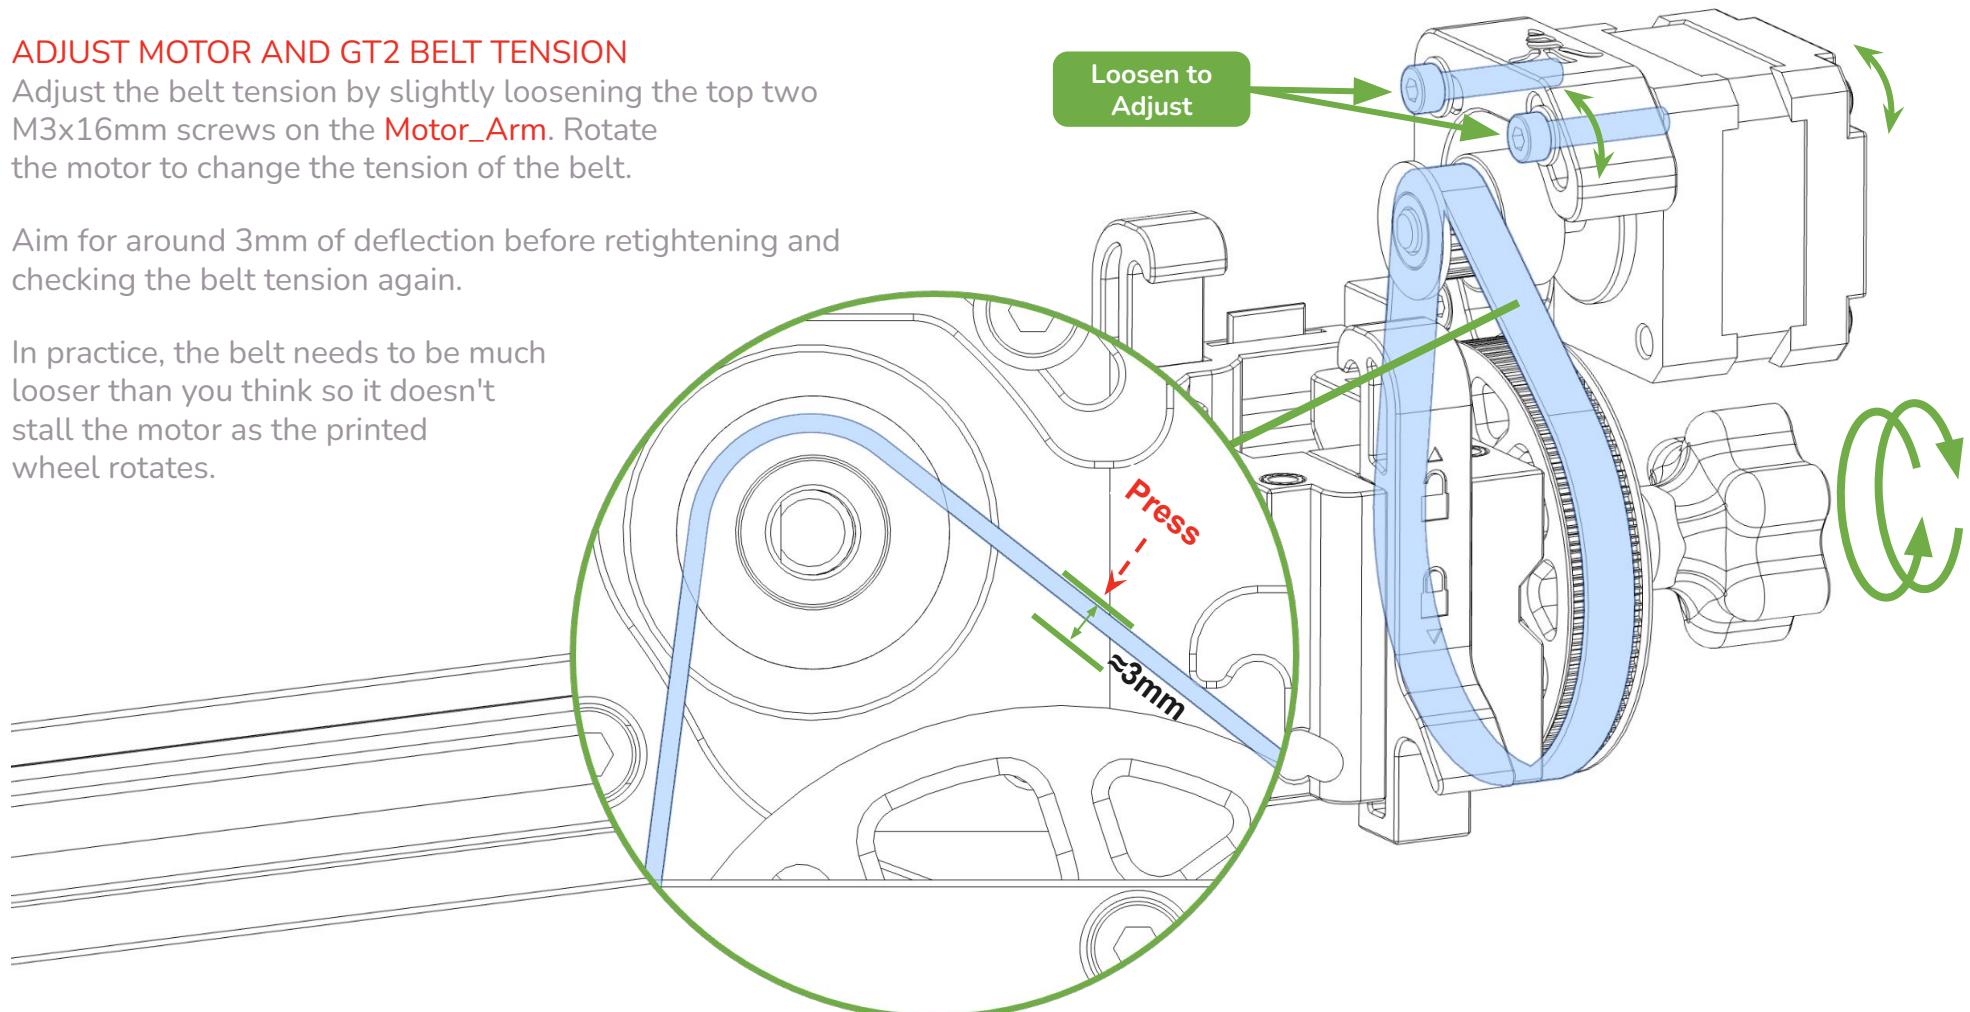

CHECK FOR RUBBING AND BINDING


Twist the knob and check for rubbing or binding. Take your time to get it right. If it is very misaligned, you can loosen the Gearbox screws to allow re-alignment of the parts before re-tightening. You want the D-Cut shaft to spin freely. If it is still rubbing after Gearbox alignment, you may need to disassemble and refit the motor mount to get everything adjusted correctly.

GEARBOX

EXPLODED VIEW


GEARBOX SUB-BOM

A 6x M3x8mm SHCS

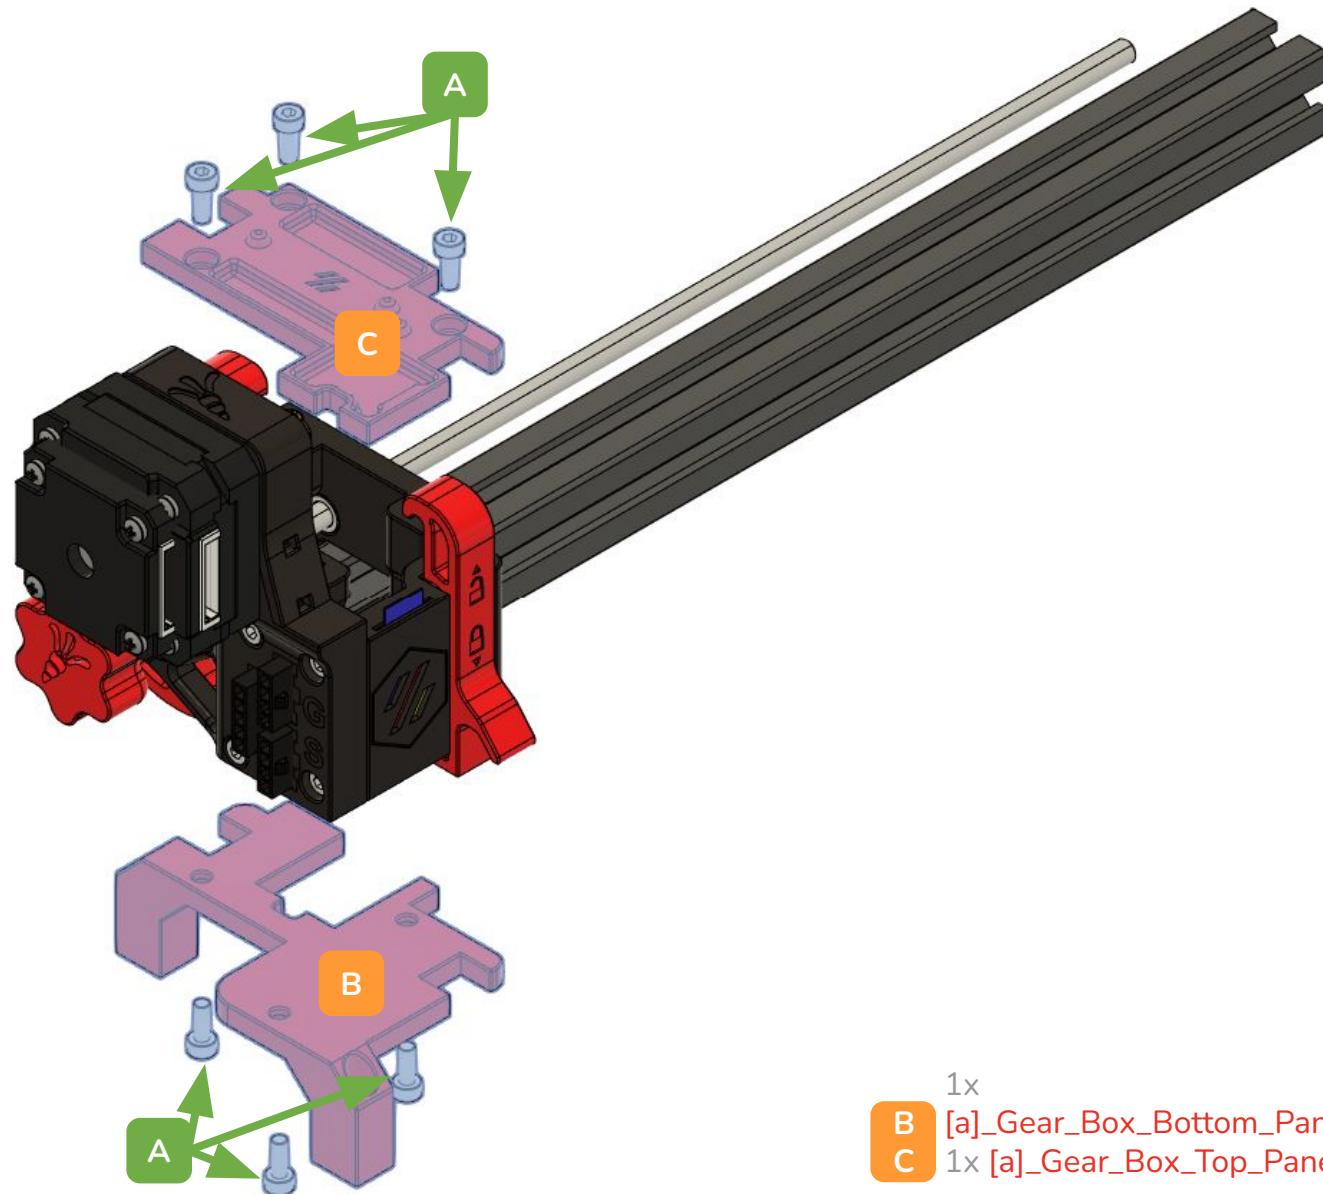

GEARBOX

TOP PANEL

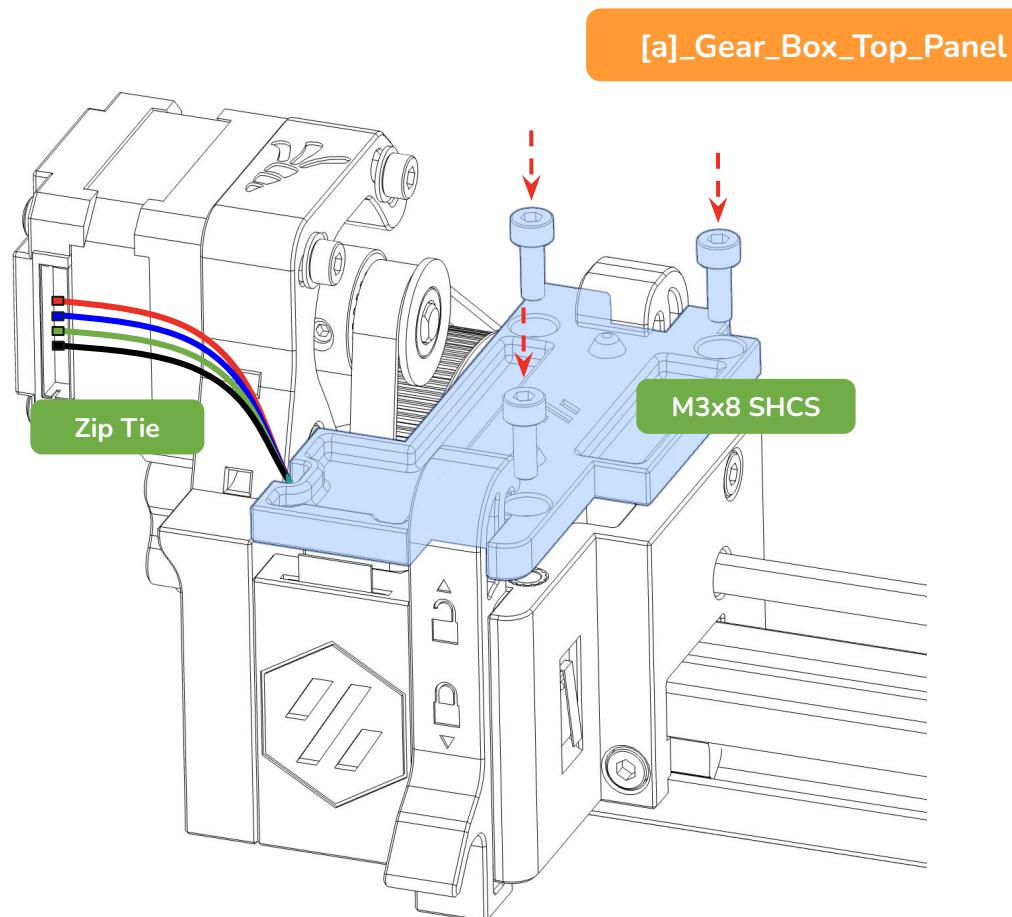

TOP PANEL

Install the [Gear_Box_Top_Panel](#) of the Gearbox using 3 M3x8mm screws and route motor wiring through the cutout in the [Gear_Box_Top_Panel](#) and out though the bottom near the 2020 extrusion.

Take care to align the [Logo_Plate](#) with the recess in the bottom of the [Gear_Box_Top_Panel](#).

Secure the motor cable with a zip tie.

GEARBOX


BOTTOM PANELS

BOTTOM PANEL

There is a cutout in the [Gear_Box_Bottom_Panel](#) for the wires that need to exit the gearbox. Route the motor and end stop wires through the cutout between the 2020 extrusion and the [Gear_Box_Back](#).


For clarity, only the motor wires are shown but the end stop wiring is assumed to be present.


After final assembly, make sure the drive shaft continues to spin freely without any obvious binding or rubbing.

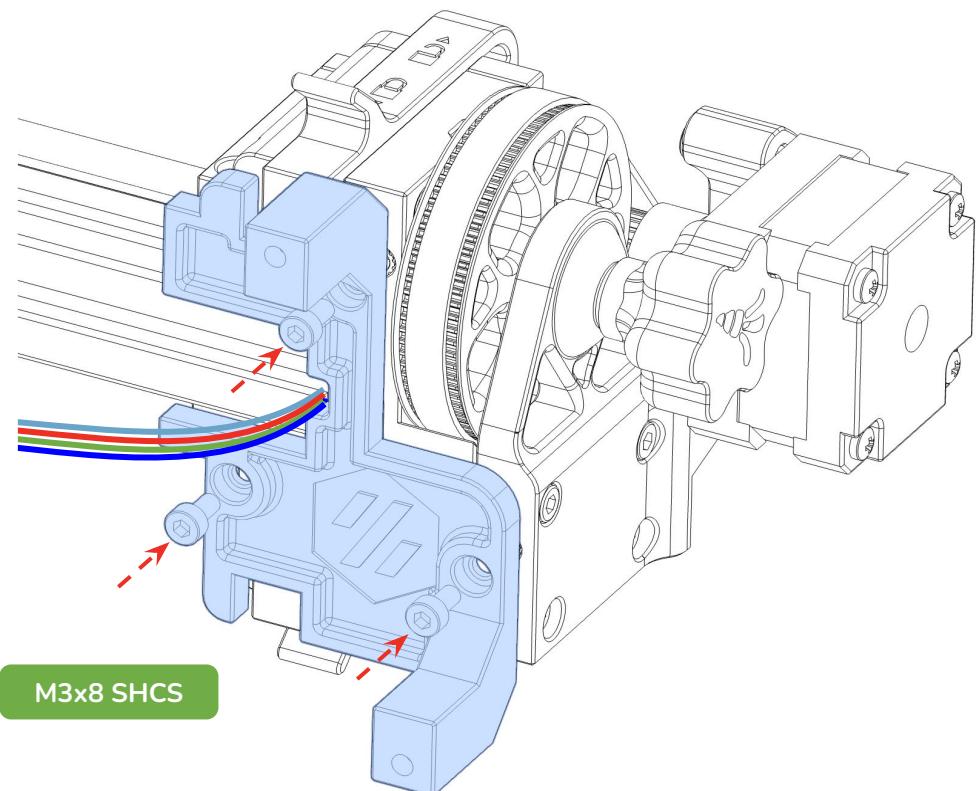

GEARBOX

One of the most groundbreaking applications of 3D printing is in the field of bioprinting, where cells and biomaterials are used to print tissues and organs. This could revolutionize the field of organ transplantation and medical research.

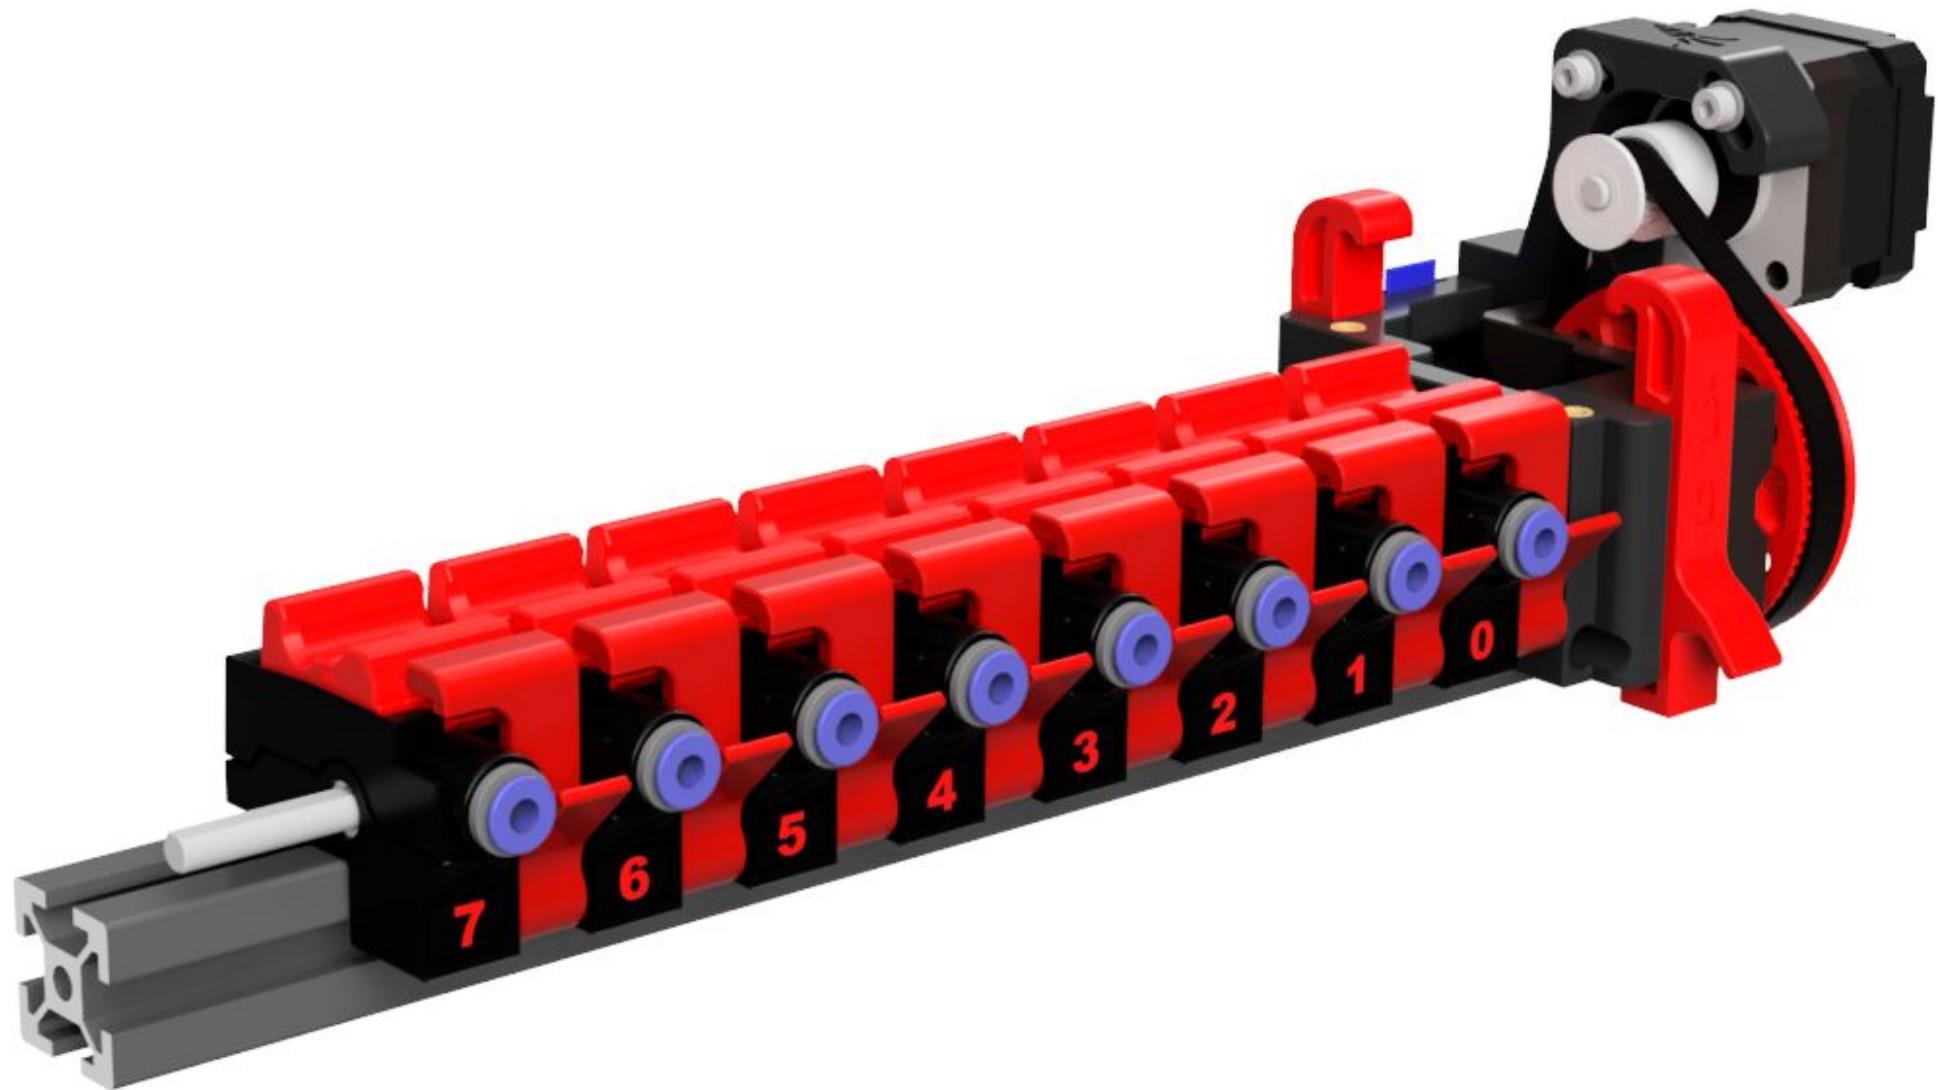

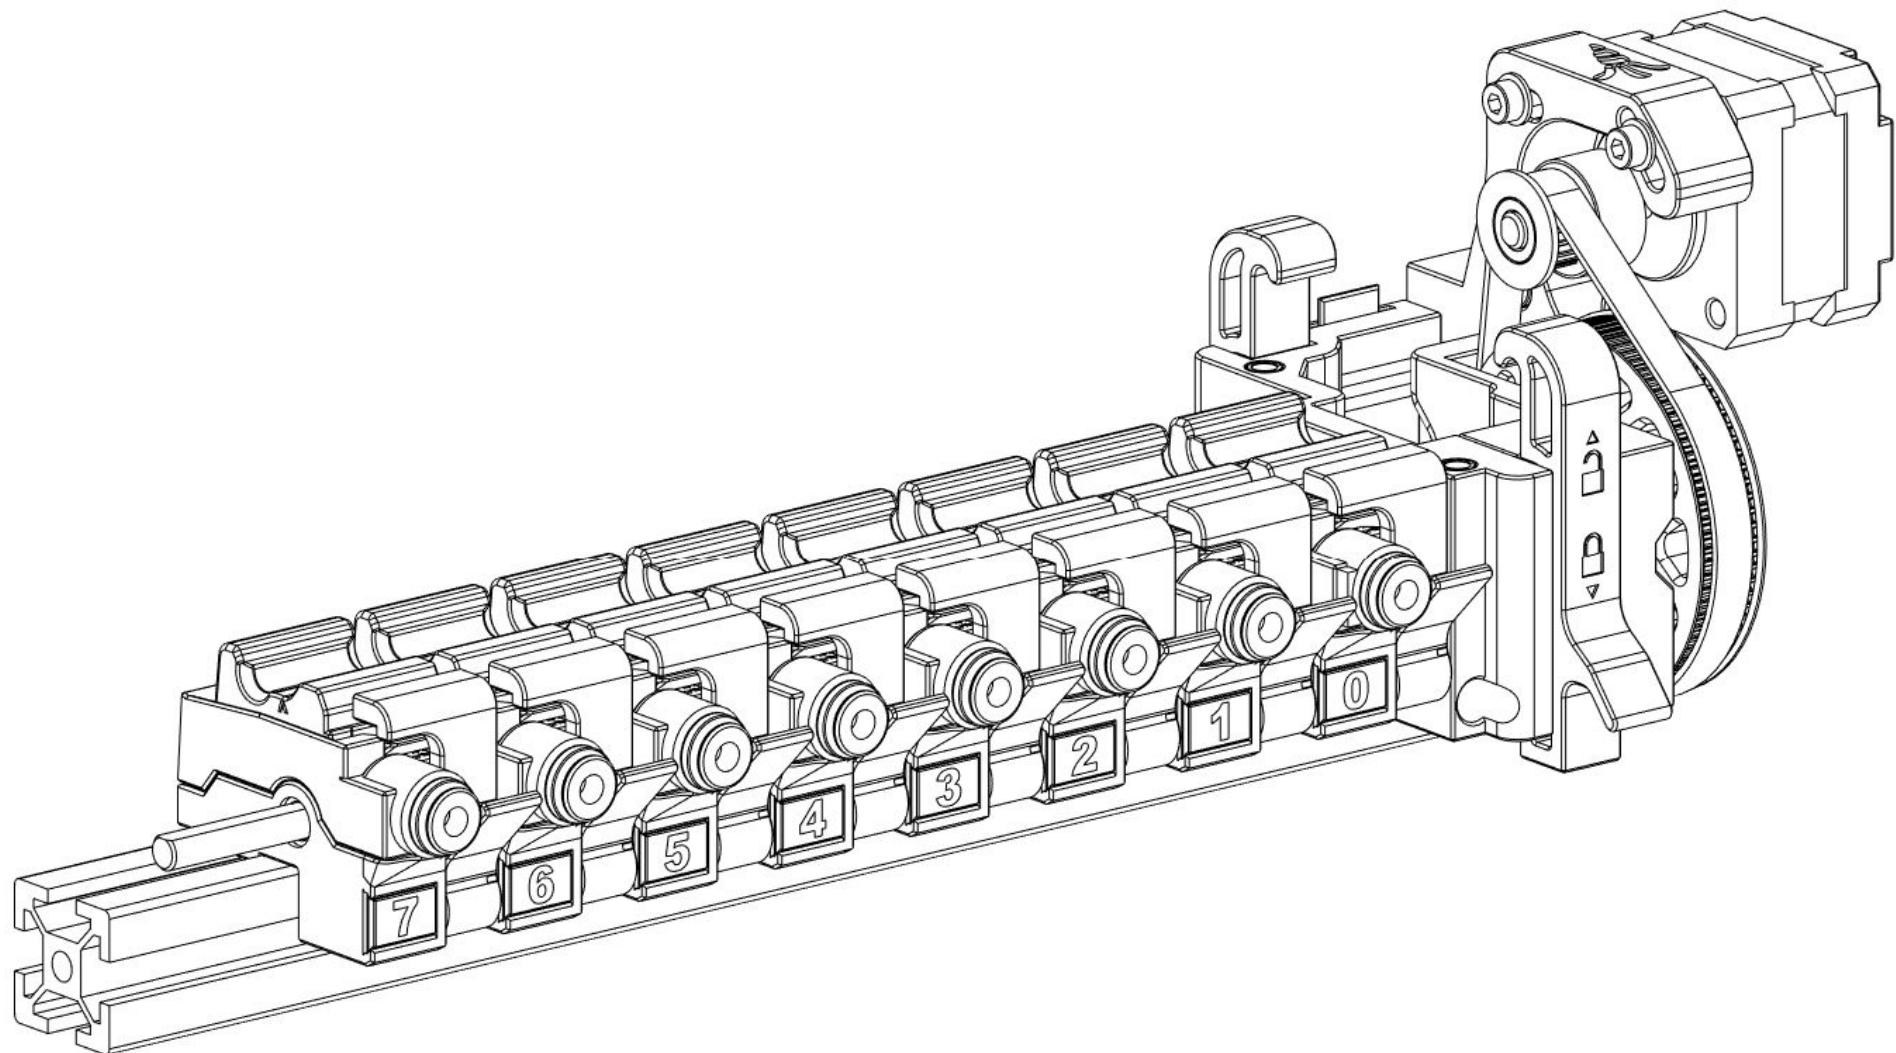


FILAMENT BLOCKS

EXPLODED VIEW

FILAMENT BLOCK SUB-BOM (PER FILAMENT BLOCK)

A	1x 3mm x 20mm pin
B	2x 6x3mm Magnets
C	1x BMG Idler Gear & Bearings
D	1x ECAS Coupler (2 piece)
E	1x M3 Set Screw
F	1x M3x8mm SHCS
G	1x M3x16mm SHCS
H	1x MR85ZZ Bearing

I	1x [a]_Base_Trap_M3_xN.stl
J	1x [a]_Tophat_xN.stl
K	1x [a]_Latch_xN.stl
L	2x [a]_Tag_plates_N_x2.stl
M	1x Base_xN.stl
N	1x Filament_Path_xN.stl
O	2x Tag_plates_DigitN_x2.stl

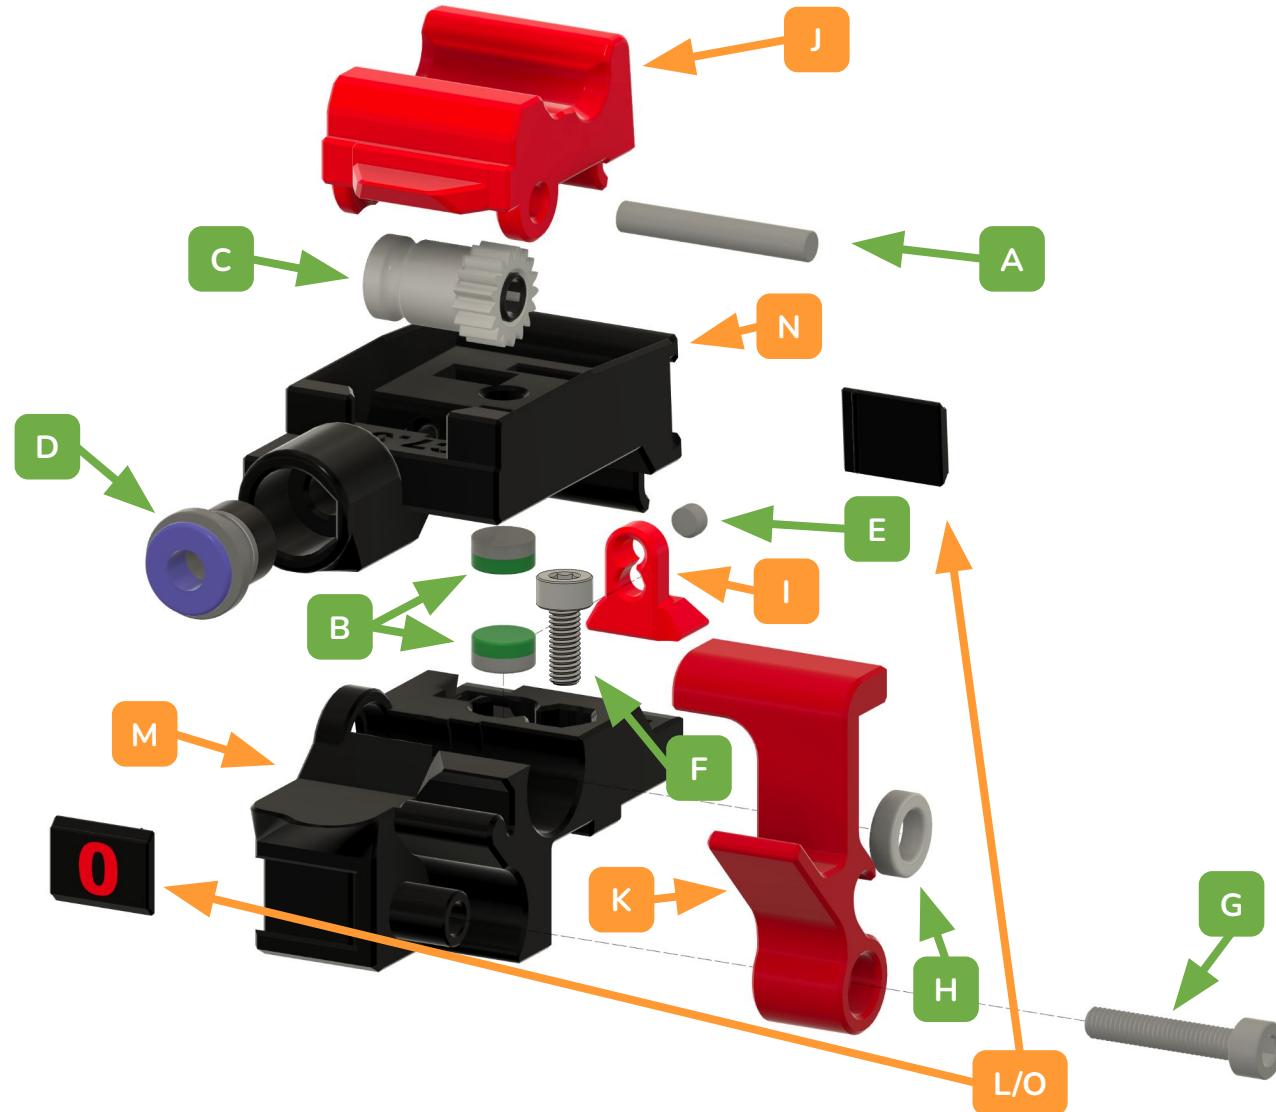


PRINT IN PLACE SUPPORTS


Before you begin you will need to remove all the print in place and built in supports for the Filament Block parts using a small screwdriver.

Please take care that you don't accidentally damage the part or yourself especially the **Tophat** and the upper Bondtech idler pin mount.


Repeat for all of the **Bases**, **Filament_Paths**, and **Tophats**.

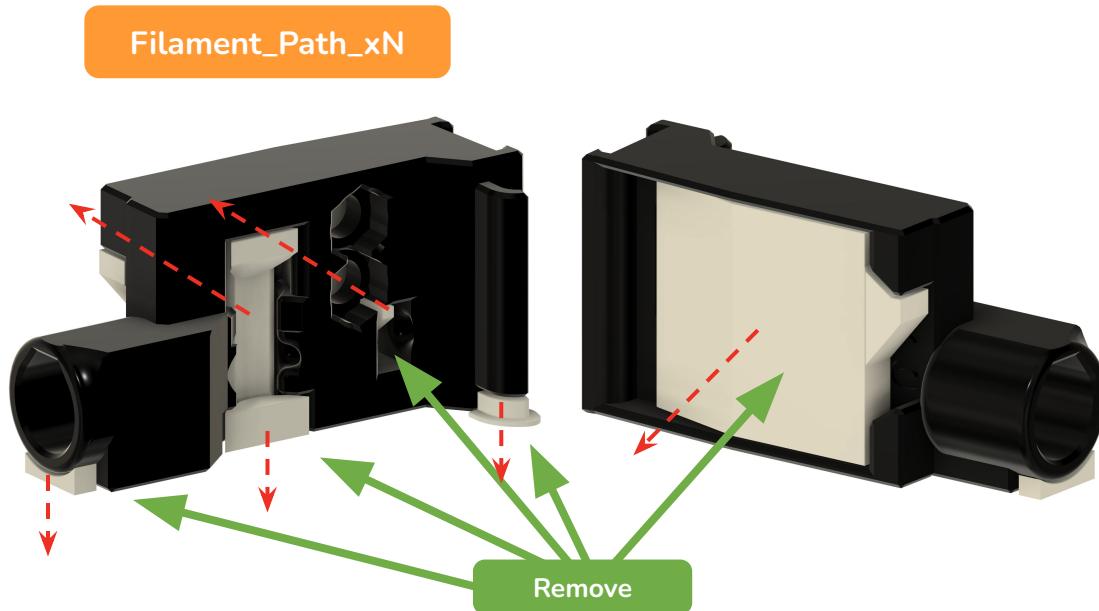

Base_xN

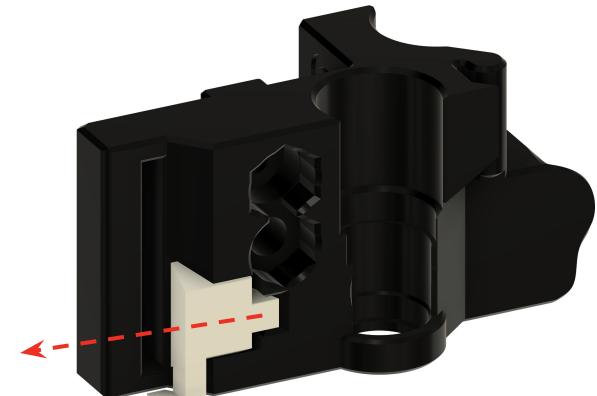

Tophat_xN

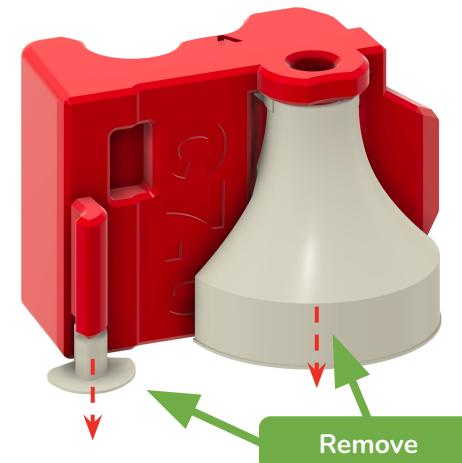

FILAMENT BLOCKS




PREPARATION

PRINT IN PLACE SUPPORT CLEANUP

Ideally, the print in place supports will snap cleanly out of the parts. If this is the case for you, congratulations! Your print settings are very dialed-in.


Otherwise, please clean up the highlighted surfaces with a small file or hobby knife. Make sure that the print in place supports didn't leave any stuck bits behind and interfere.

Repeat for all of the **Bases**, **Filament_Paths**, and **Tophats**.

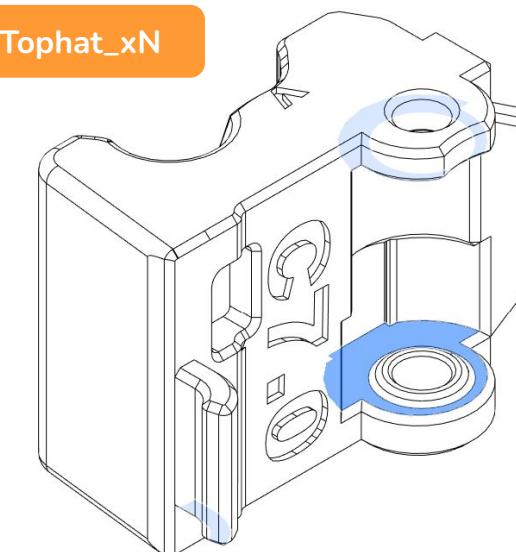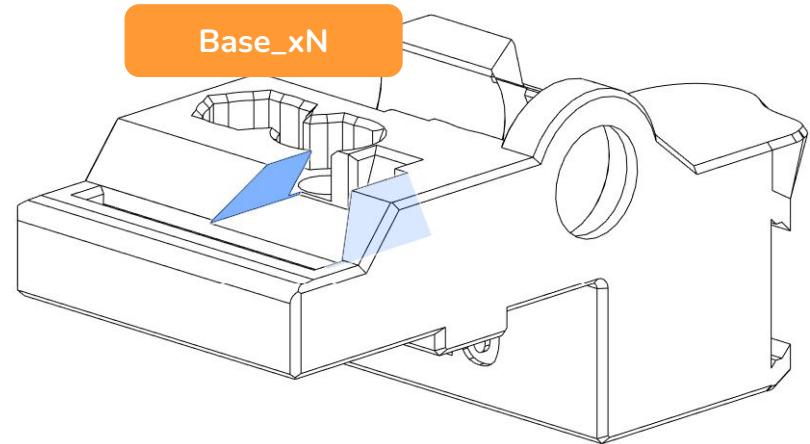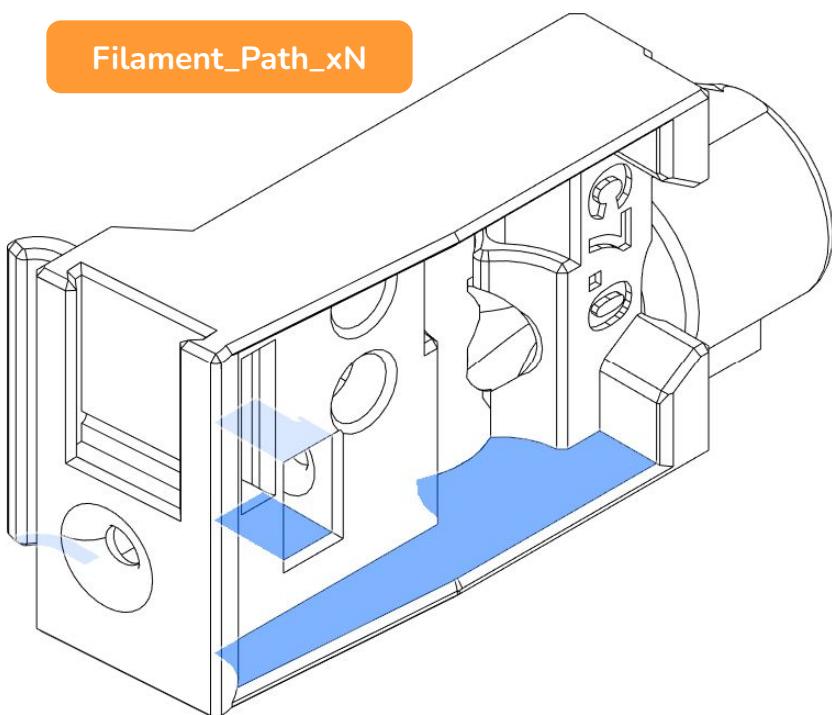

FILAMENT BLOCKS


TOP HATS

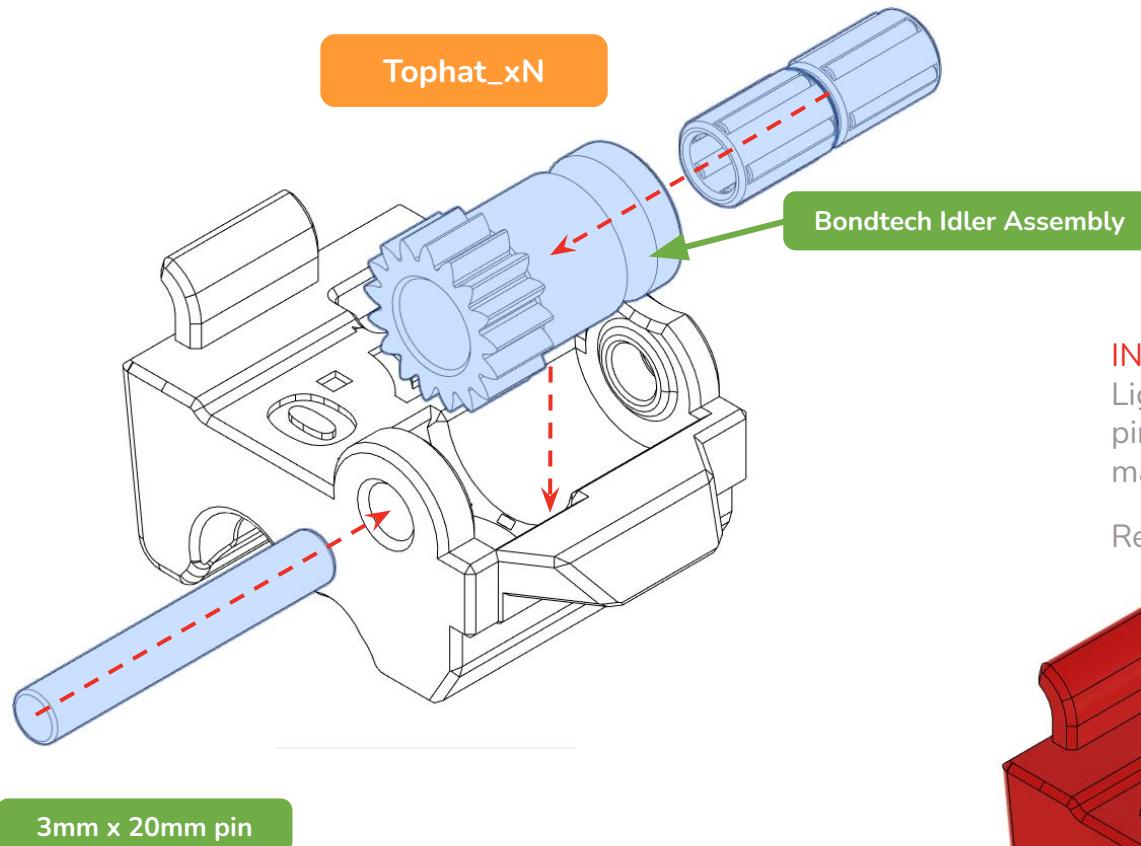

INSTALL BONDTECH IDLER GEAR

Lightly grease the bearings before inserting the pin (EP1/EP2 or Superlube). Once assembled, make sure the Bondtech idler spins freely.

Repeat for all **Tophats**.

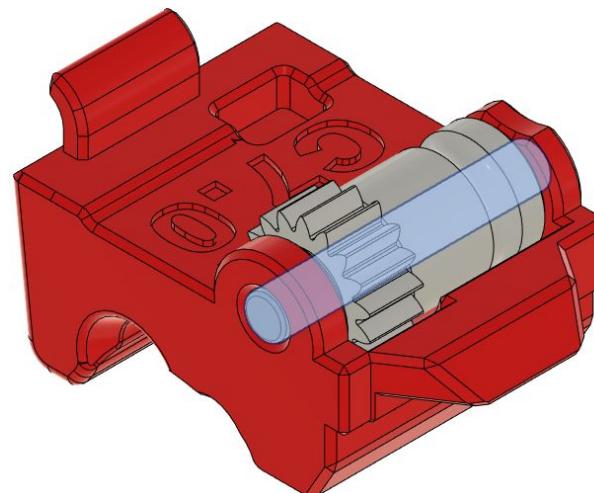

FILAMENT BLOCKS

BASE


MAGNET ORIENTATION

Polarity matters. Install the magnets in the middle recess so they repel against the magnets in the [Filament_Path](#), e.g. same poles facing each other on both magnets.

It's recommended you assemble all [Filament_Path](#) and [Base](#) parts at the same time to ensure all of the magnet polarities match.


If you want to use dual magnets, hold off installing the second magnet into the other recess until you finish attaching all the [Bases](#) to the 2020 as we need access to the bolt.

Repeat for all of the [Bases](#).

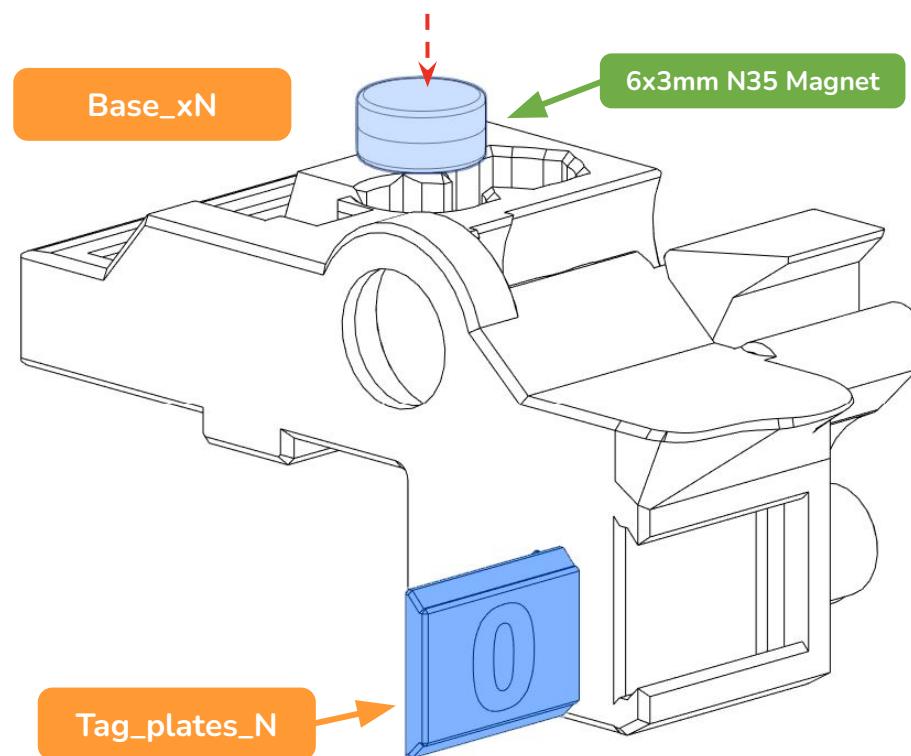

FILAMENT BLOCKS

BASE BEARING INSERTION

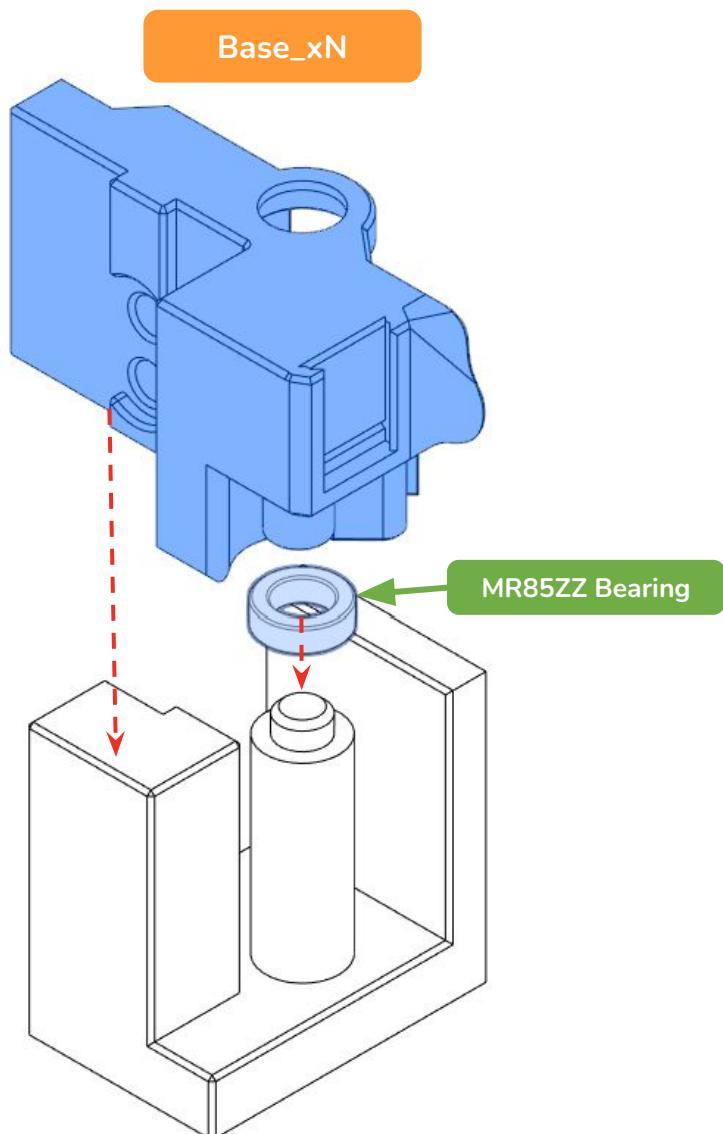

DRIVE SHAFT BEARINGS

A printed jig is provided to help you with bearing insertion on the **Bases**. You can find it in the in [ERCF_v2/Stls/Tools/Bearing_Install_Tool.stl](#).

First, add an MR85ZZ bearing to the bearing insert tool. Then, slide the **Base** down onto the bearing as shown, so that the 2020 mounting groove in the **Base** mates with the groove in the **Bearing_Install_Tool**. The bearing should seat and remain in the **Base** when you pull the **Base** off of the **Bearing_Install_Tool**.

Bearings are installed into every **Base**. If you are upgrading from ERCF v1.1 or don't have enough bearings, install them into a minimum of every 3rd **Base** and make sure you have one in the final **Base**.

Build Size	Min	Block # needing Bearings
4	2	2, 3
5	2	2, 4
6	2	2, 5
7	3	2, 5, 6
8	3	2, 5, 7
9	3	2, 5, 8
10	4	2, 5, 8, 9
11	4	2, 5, 8, 10
12	4	2, 5, 8, 11
13	5	2, 5, 8, 11, 12
14	5	2, 5, 8, 11, 13
15	5	2, 5, 8, 11, 14

FILAMENT BLOCKS

LATCH

LATCH SCREW


Resist the urge to close the **Latch** before installing the screw. You'll break the pivot off.

Drive the M3x16mm screw into the **Base**. The screw taps directly into the plastic, so don't overtighten or it will strip!

Once the screw is in, you can close the **Latch** with a satisfying click.

Repeat for all of the **Bases**.


[a]_Latch_xN

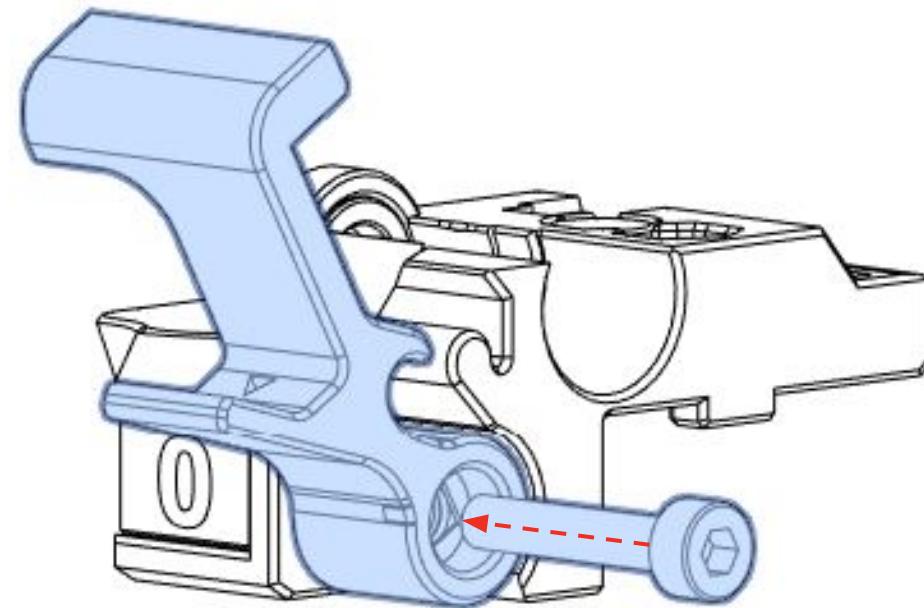

M3x16mm SHCS

FILAMENT BLOCKS

FILAMENT PATH

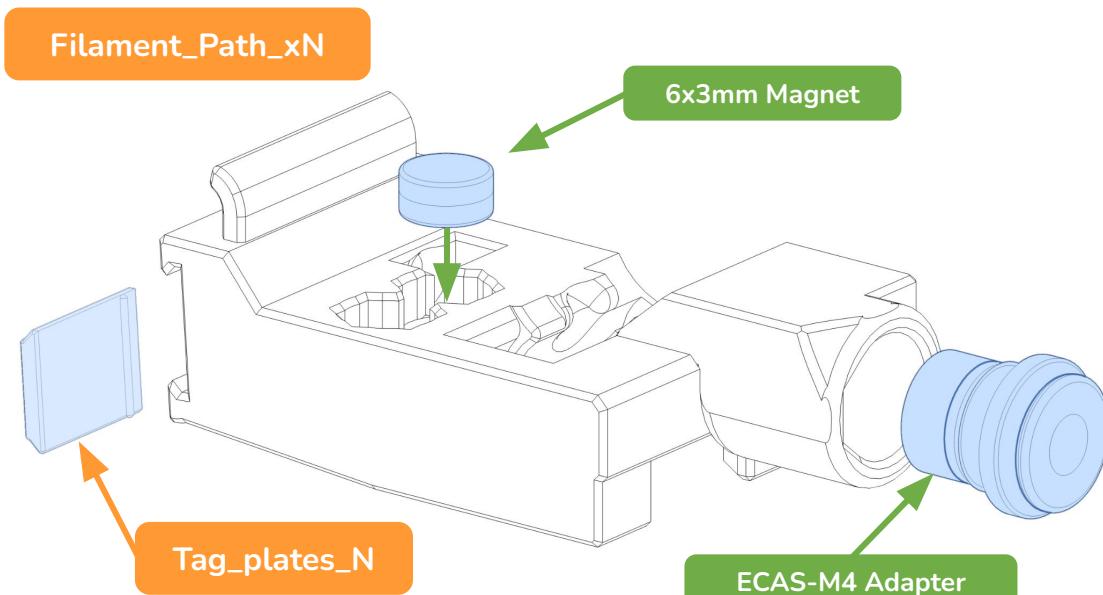

TAG PLATES

Don't forget to number your **Filament_Paths** and **Bases**, starting with 0!

MAGNET ORIENTATION

Polarity matters. Install the magnets in the middle recess so they repel against the magnets in the **Base**, e.g. same poles facing each other on both magnets.


It's recommended that you assemble all of the **Filament_Path** and **Base** parts at the same time to ensure all of the magnet polarities match.

6x3 Magnet thickness can vary. In case your magnets are a little loose, add a drop of CA glue to hold them in place but usually isn't required.

Repeat for all of the **Filament_Paths**.

FILAMENT BLOCKS

TRAP AND BLOCK ASSEMBLY

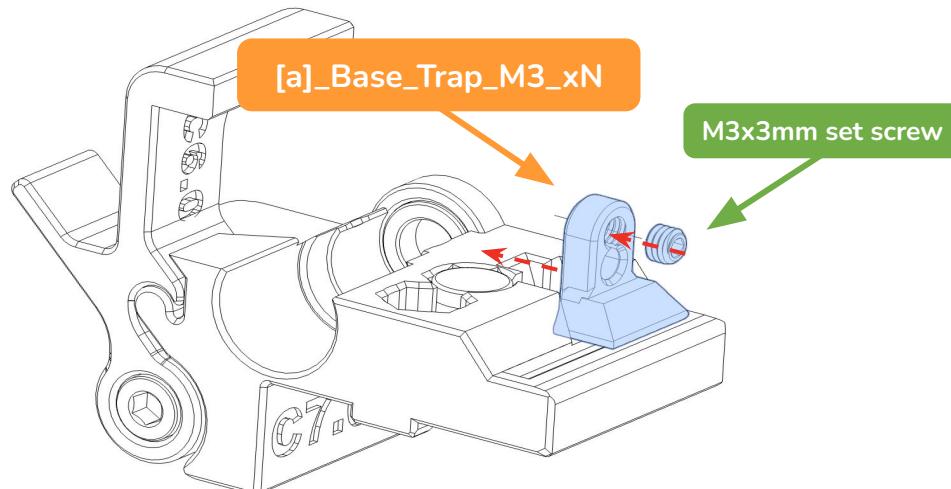

ASSEMBLY


Open the **Latch**. Next, line up the **Filament_Path** vertically with the **Base**, and make sure that the **Base_Trap** fits into its slot on the **Filament_Path**. Squeeze gently until they snap together. Close the **Latch**.

Repeat assembly of all of the parts into Filament Blocks.

To separate, pull apart at a slight angle, but be careful not to break the hinge.


BASE TRAP (BRAKE)

This traps the filament when it is not in use so it doesn't fall out of the **Base**. If you choose to use the M3 set screw version of the **Base_Trap** (recommended), make sure the set screw is screwed flush into the **Base_Trap** and doesn't protrude. Also make sure the filament hole in the **Base_Trap** is clear and free of stringing.

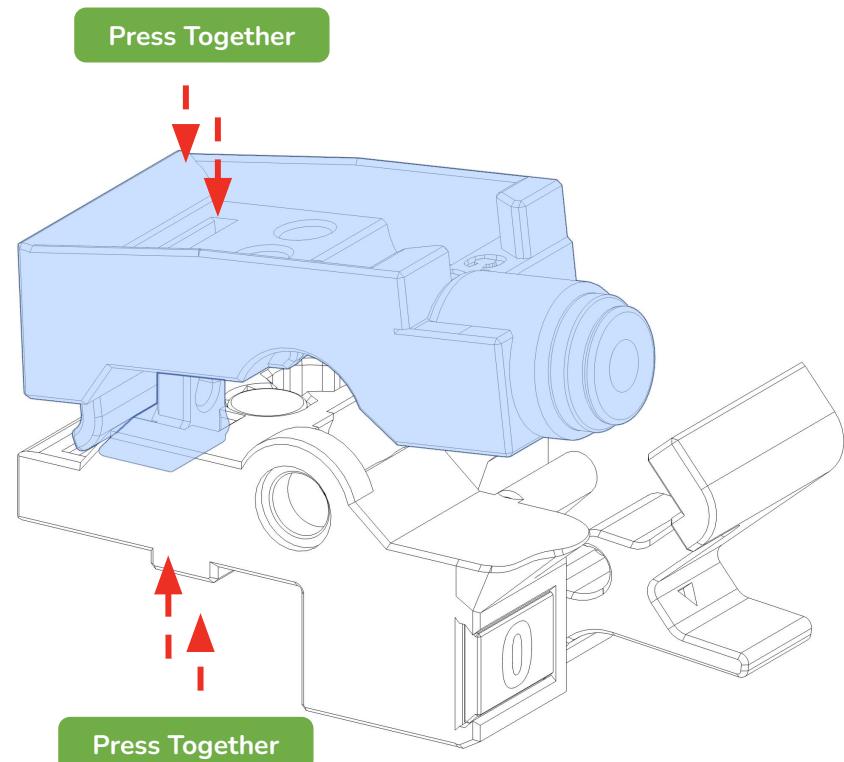

FILAMENT BLOCKS

FIT CHECK

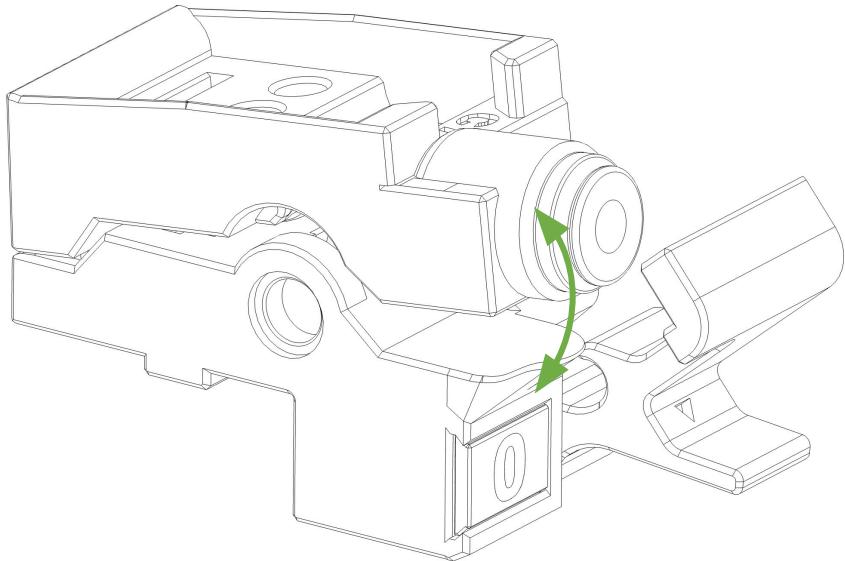

FIT CHECK

When snapped together the filament block parts should pivot freely on the rear hinge, repelled by the magnetic spring. The **Base_Trap** should move smoothly without binding or preventing the parts from closing or opening.


If the parts interfere or bind as you press them together, then you will need to disassemble them. Use a small file or hobby knife to clean out any stringing in the **Base_Trap** slot, and square up its corners (see [page 57](#)). Depending on how well calibrated your printer is, you might also need to lightly sand or file the sides of the **Base_Trap** to improve fit until the the parts move freely.

Remove the **Filament_Path** and set it aside. Repeat for all Filament Blocks.

ASSEMBLY

Insert the **Tophat** hinge into the groove on the **Filament_Path**. Close the **Latch** and press everything together to make sure that it pivots nicely.

Remove the **Tophat** and set it aside for the moment.

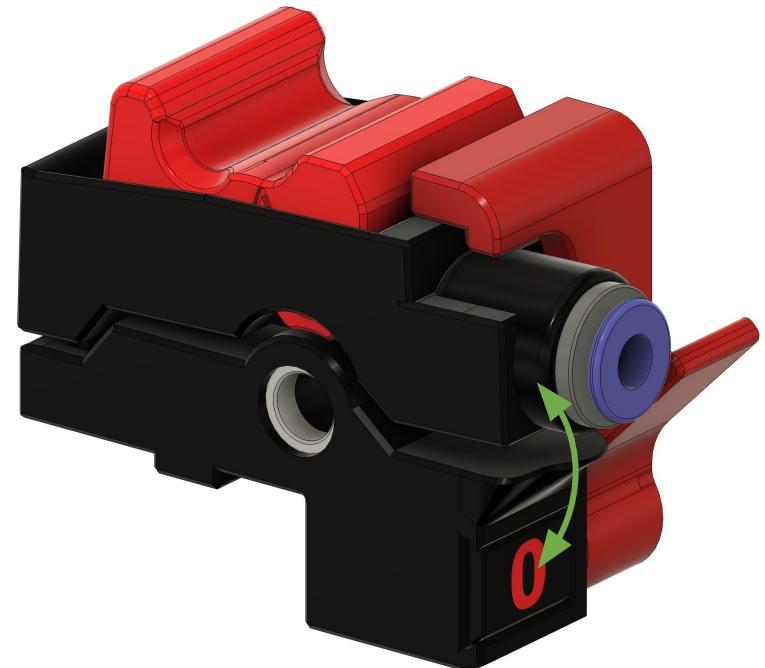

FILAMENT BLOCKS


TOP HAT CLEARANCE OPTIONS

TOLERANCES

If you have trouble with the fitment process and can't get the **Tophat** to lock in place, there are two alternate **Filament_Path** parts provided with additional clearance built in (+0.1mm & +0.2mm).


These can be found in the following folder:

[ERCF_v2/Stls/Filament_Blocks/Clearance_Options/](#)

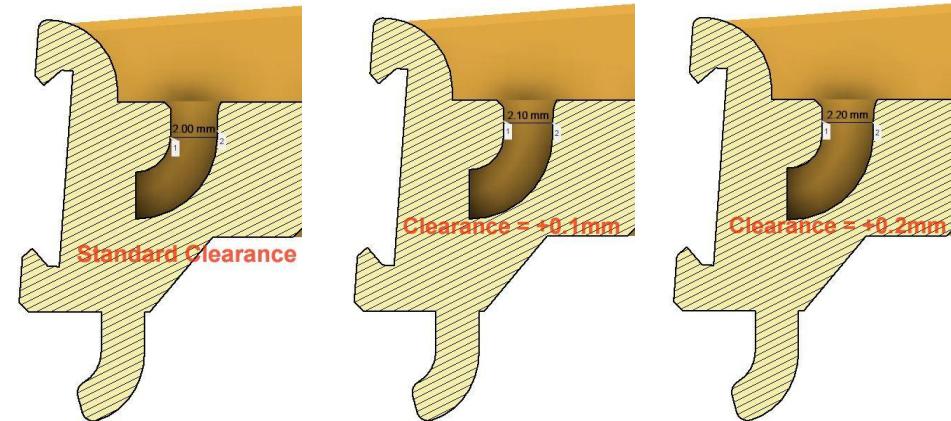


FILAMENT BLOCKS

FILAMENT BLOCK ARRAY ASSEMBLY

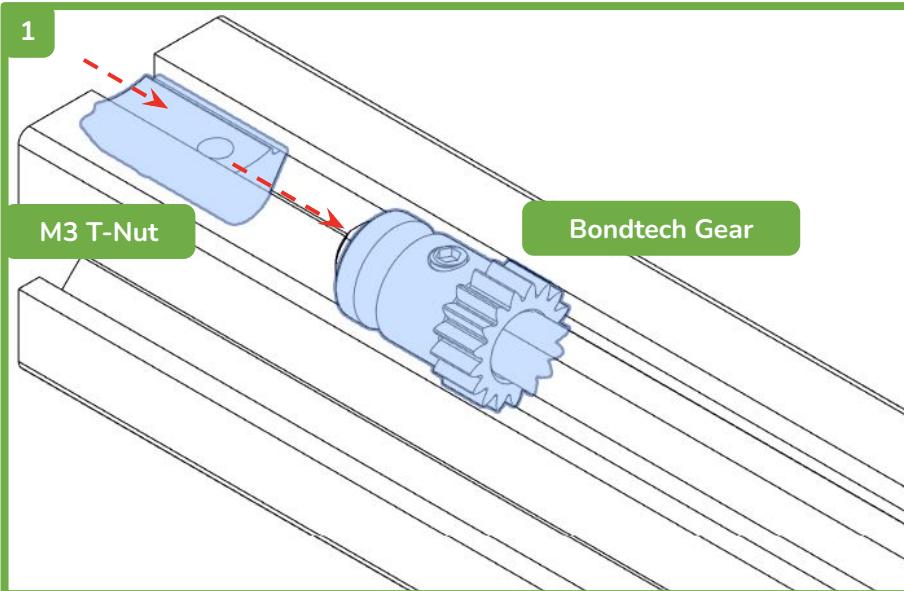

1. PREPARATION

Slide a Bondtech gear onto the D-Cut shaft. Be aware of its orientation, gear side first. Then slide a roll-in T Nut into the top channel of the 2020 extrusion, with the m3 mounting hole toward the Gearbox.


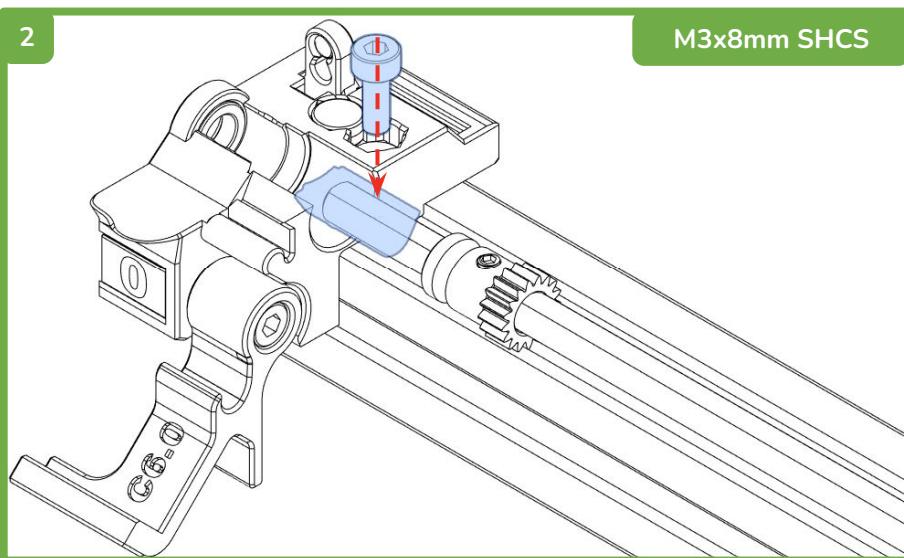


2. FILAMENT BLOCK INSERTION

Attach the **Base** labelled 0 to the T Nut with an M3x8mm screw. Leave it loose enough that the **Base** can still slide on the 2020.

FILAMENT BLOCKS

FILAMENT BLOCK ARRAY ASSEMBLY

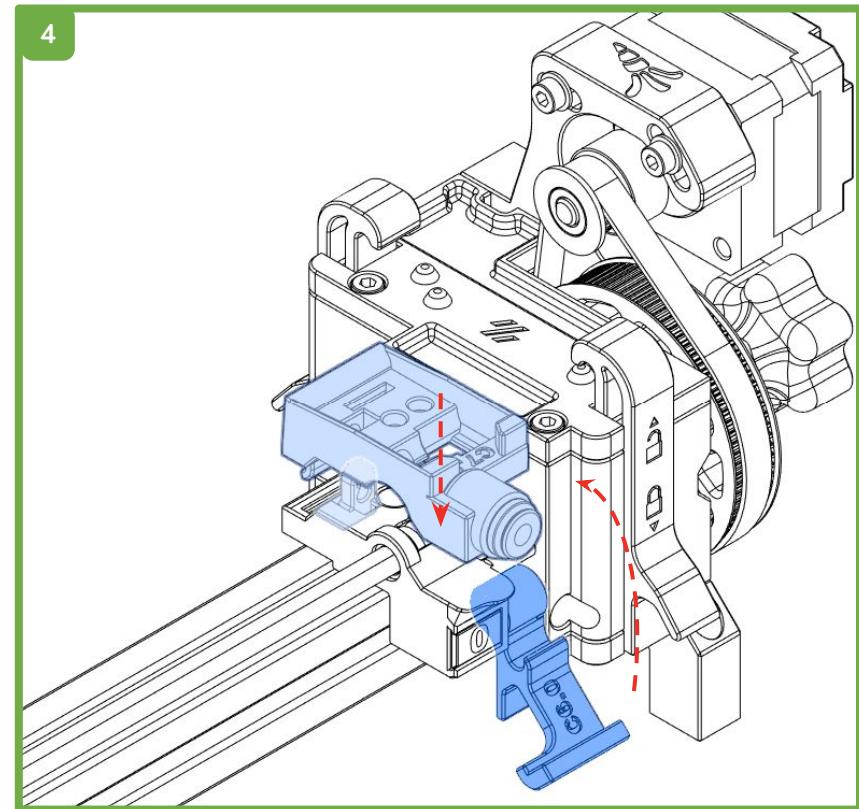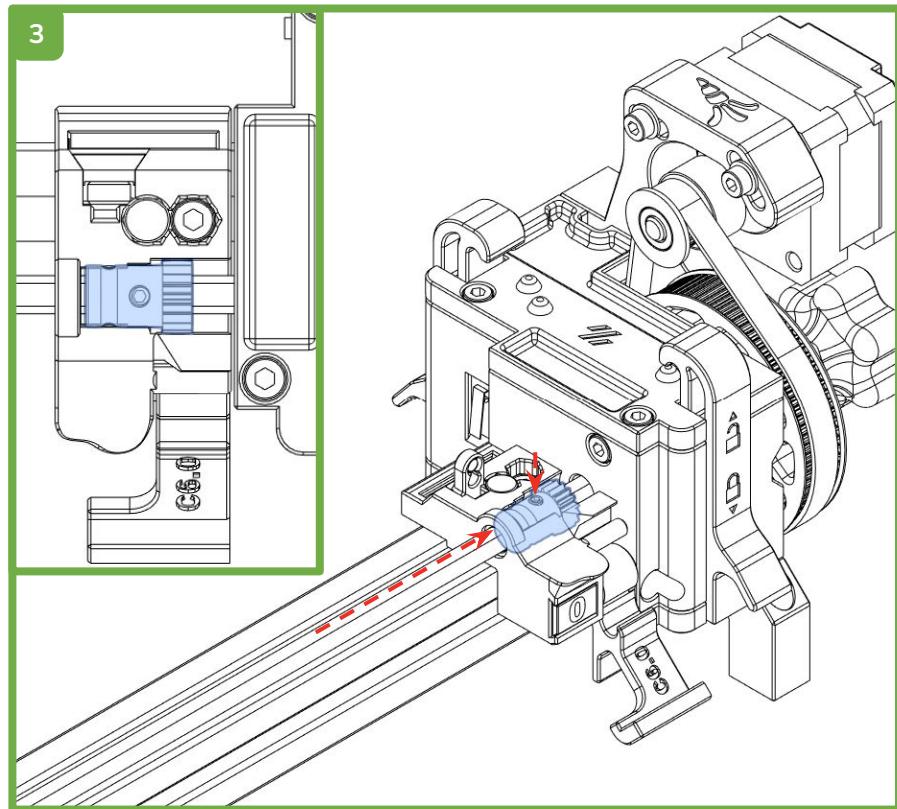

FILAMENT BASE MOUNTING

Push the Bondtech gear and **Base** to the Gearbox. The Drive Shaft should not bind on the bearings.

Snug the Bondtech gear's set screw in a central location. We will do fine adjustment later, but we need the gear to rotate smoothly for the array alignment step.

FILAMENT PATH MOUNTING

Push the **Filament_Path** labelled 0 straight down onto the **Base**. It should seat without much force. Close the **Latch**.


Repeat these 4 steps for all of the **Bases** and **Filament_Paths**.

FILAMENT BLOCKS

FILAMENT BLOCK ARRAY ALIGNMENT

TIGHTENING FILAMENT BLOCKS

Make sure the Filament Blocks are pushed firmly up against the Gearbox and each other.

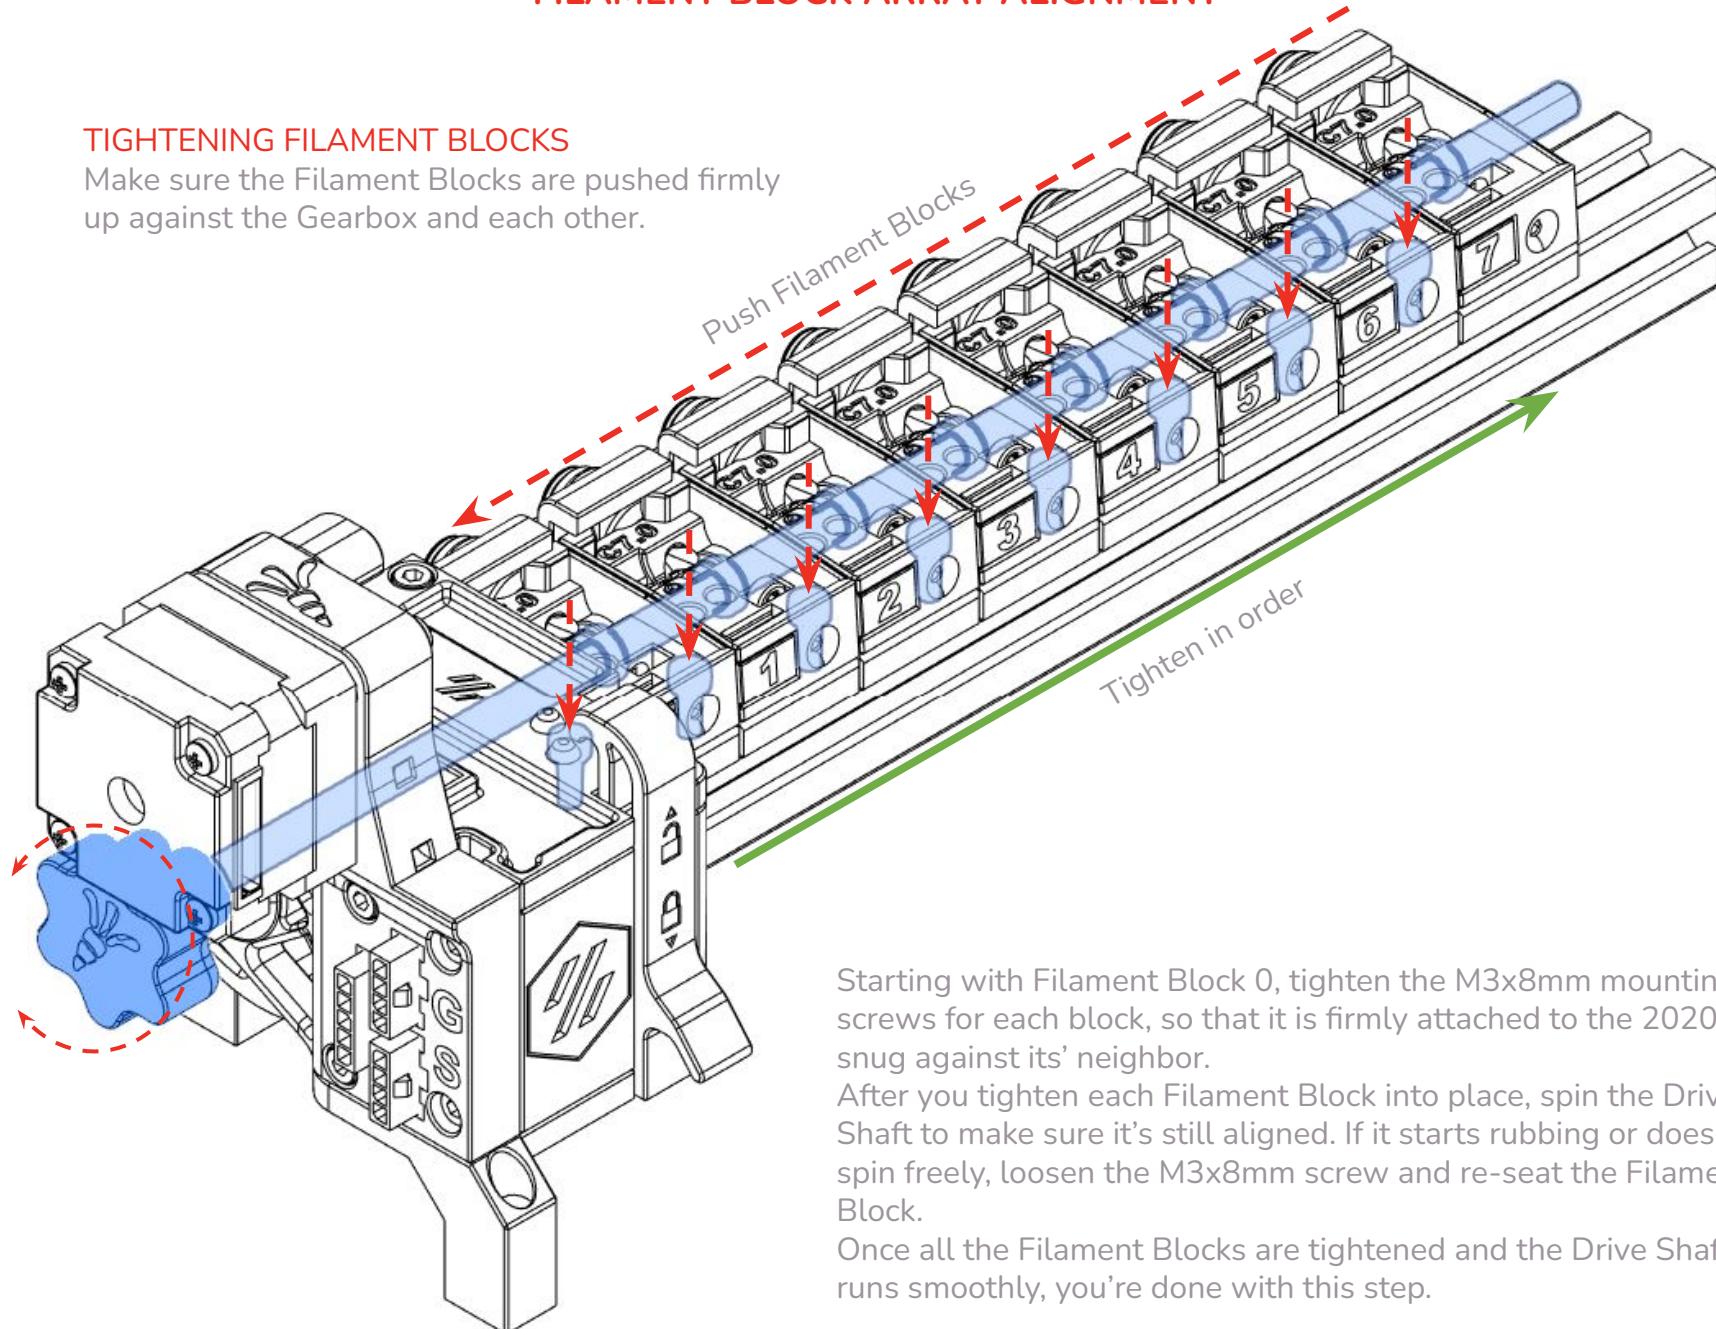


Starting with Filament Block 0, tighten the M3x8mm mounting screws for each block, so that it is firmly attached to the 2020 and snug against its' neighbor.

After you tighten each Filament Block into place, spin the Drive Shaft to make sure it's still aligned. If it starts rubbing or doesn't spin freely, loosen the M3x8mm screw and re-seat the Filament Block.

Once all the Filament Blocks are tightened and the Drive Shaft runs smoothly, you're done with this step.

FILAMENT BLOCKS

BONDTECH GEAR ALIGNMENT

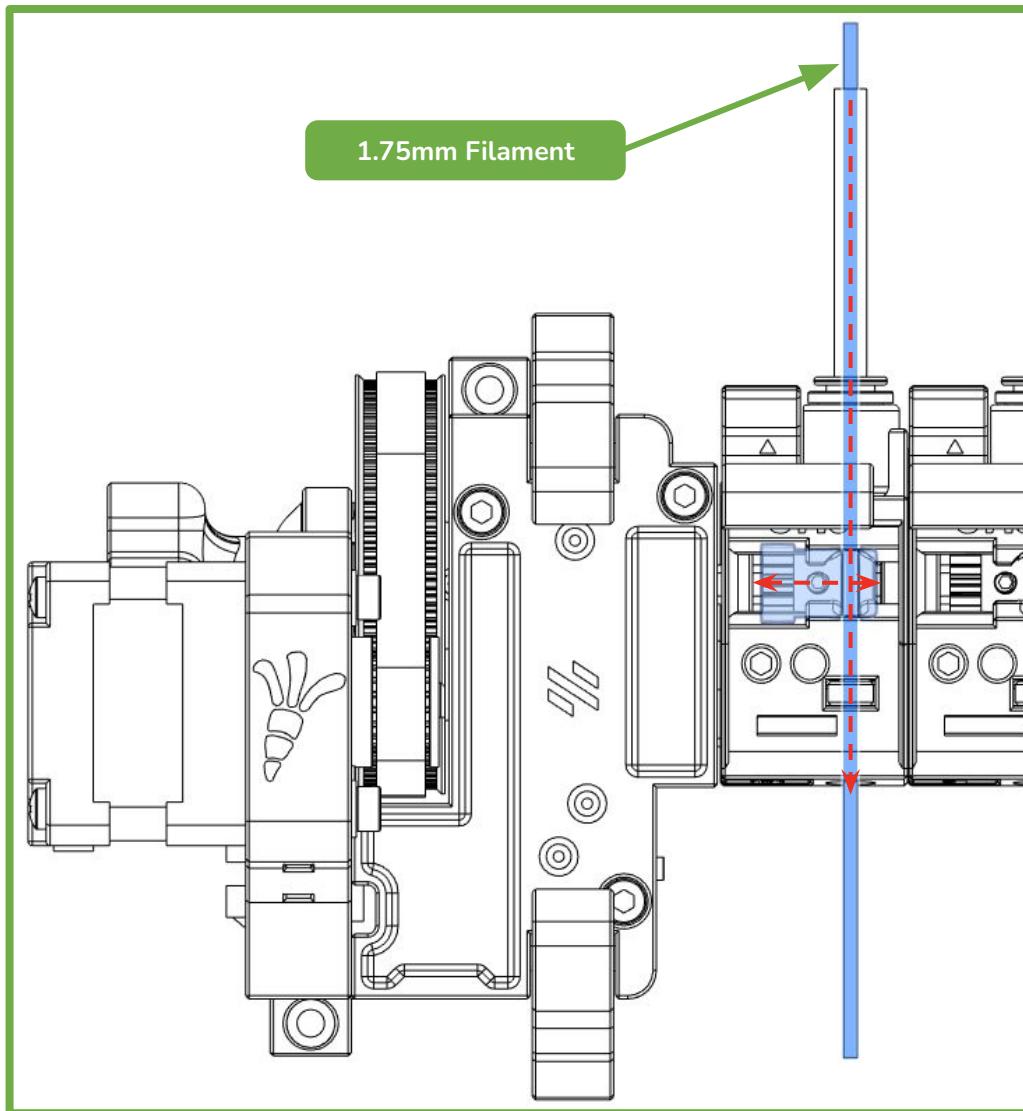

View from the top of the ERCF.

BONDTECH GEAR ALIGNMENT

Insert a small piece of PTFE tube (a few centimeters is enough) into the Filament Block ECAS. Insert a piece of filament through the block until it comes out the other side. (Depending on the shape of the filament end, it is possible that it is caught by the trap. In that case push the back of the filament path down to release the trap. Now the filament should go out the other side.)


Make sure the flat surface of the Drive shaft is facing up towards the Bondtech M3 set screw. Press down on the **Filament_Path** and use the filament to align and centre the gear with the groove, then tighten the set screw.

Don't forget to use a little thread locker on the set screw, but be careful not to get it on printed parts. If you do, clean it immediately, because thread locker degrades ABS.

Repeat this process for all the Filament Blocks.

FILAMENT BLOCKS

REPLACE TOPHATS

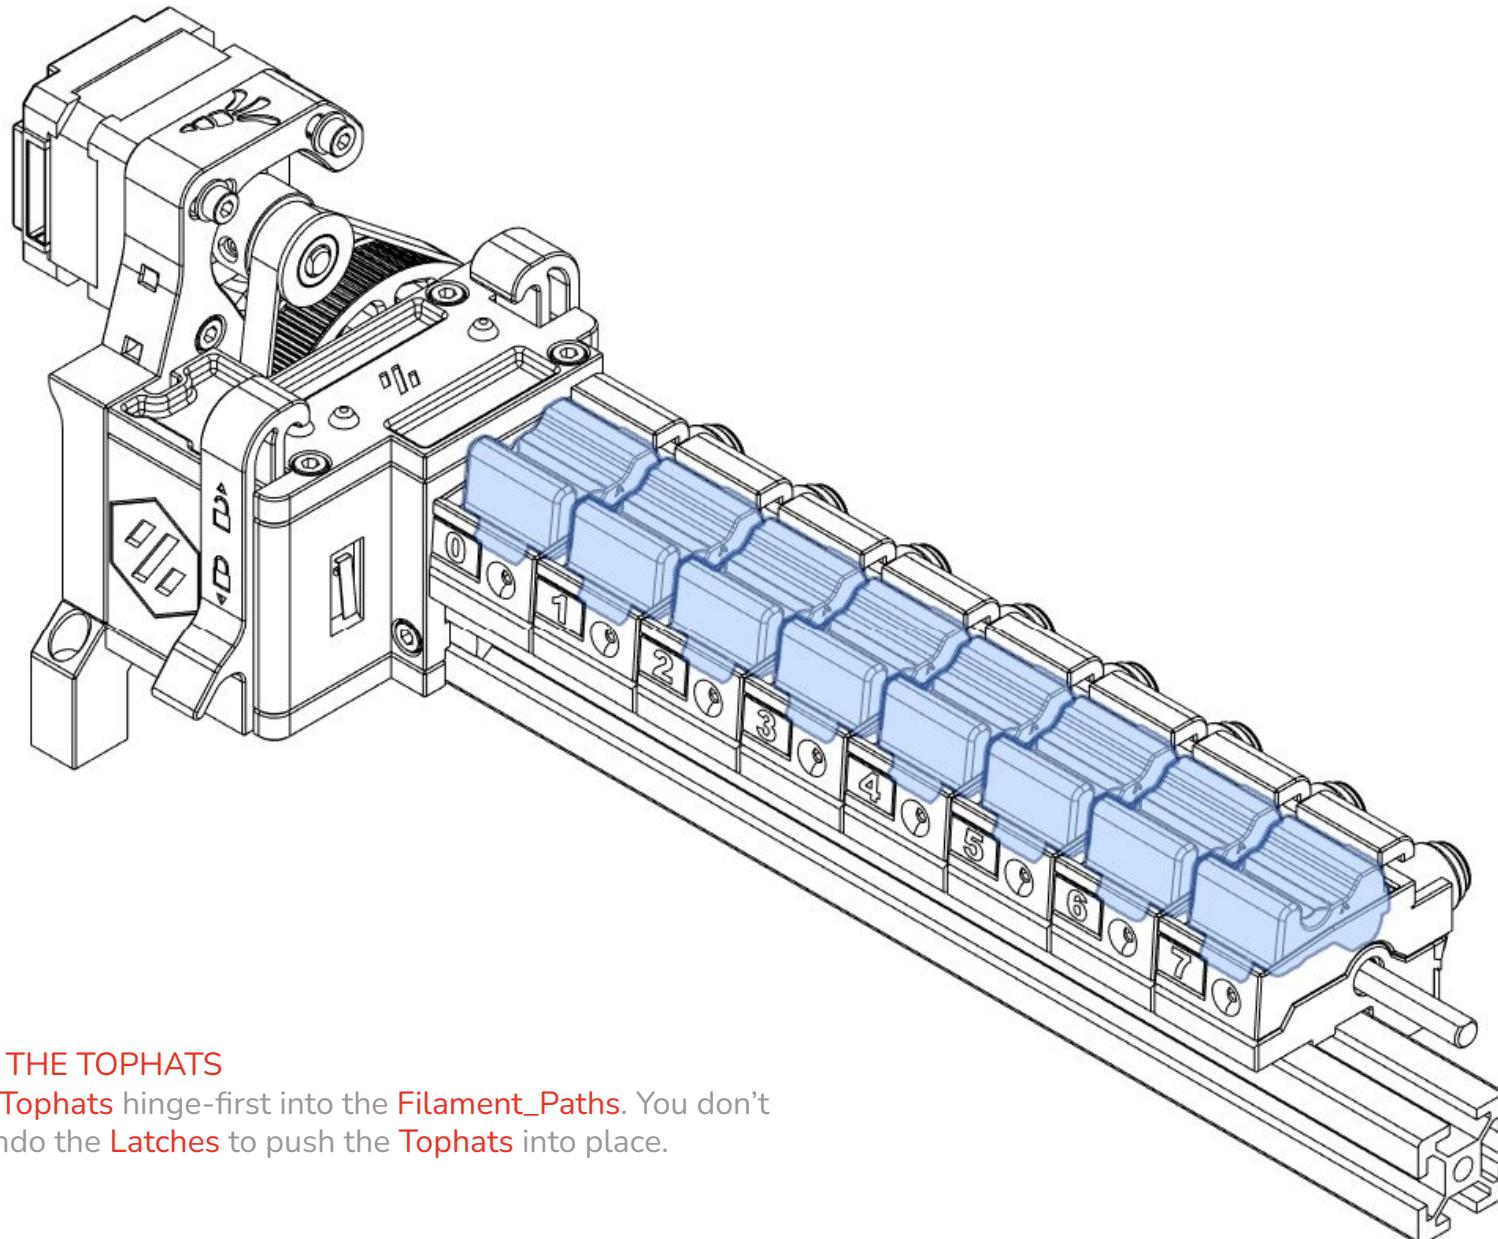

REPLACE THE TOPHATS

Place the **Tophats** hinge-first into the **Filament_Paths**. You don't need to undo the **Latches** to push the **Tophats** into place.

Need a break...

"I'm on a seafood diet. I see food, and I eat it."

"I told my wife she should embrace her mistakes. She gave me a hug."

"Why don't scientists trust atoms? Because they make up everything!"


"I'm reading a book on anti-gravity. It's impossible to put down."


"I have a joke about time travel, but you didn't like it."

Enough! Back to building...

END BLOCK

OVERVIEW

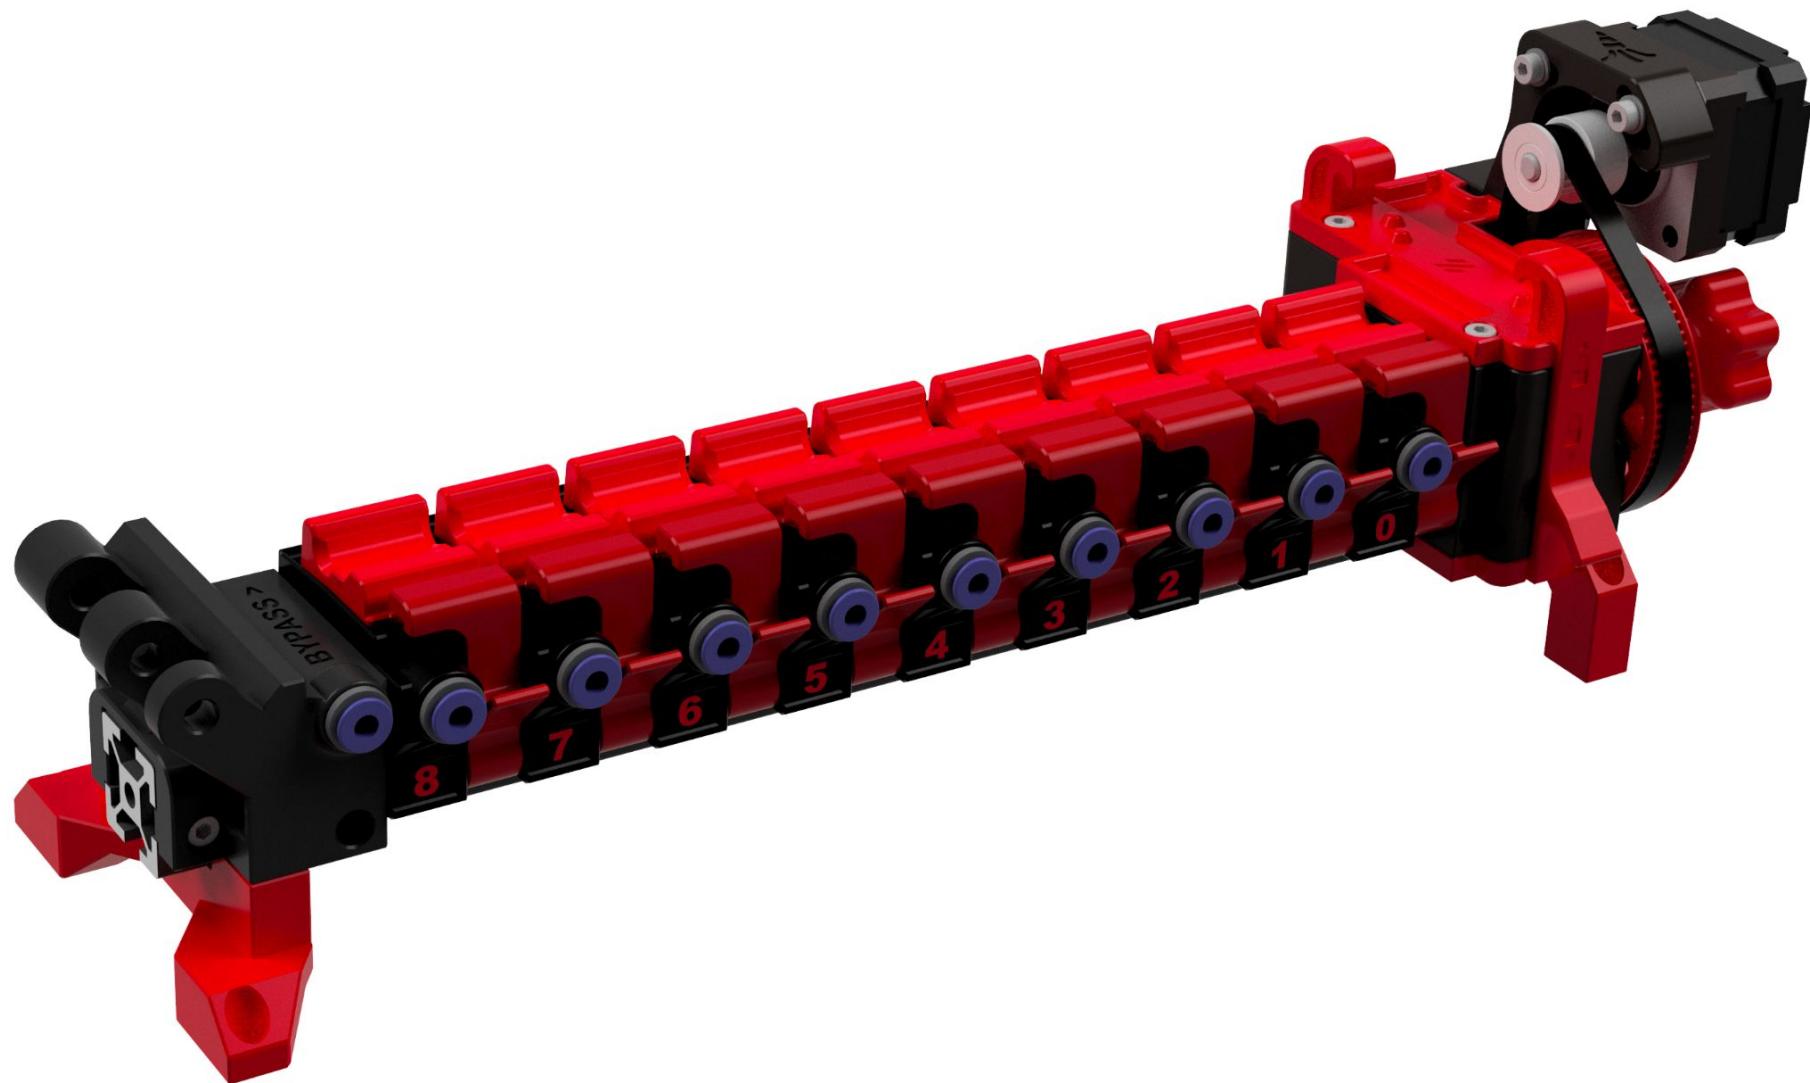

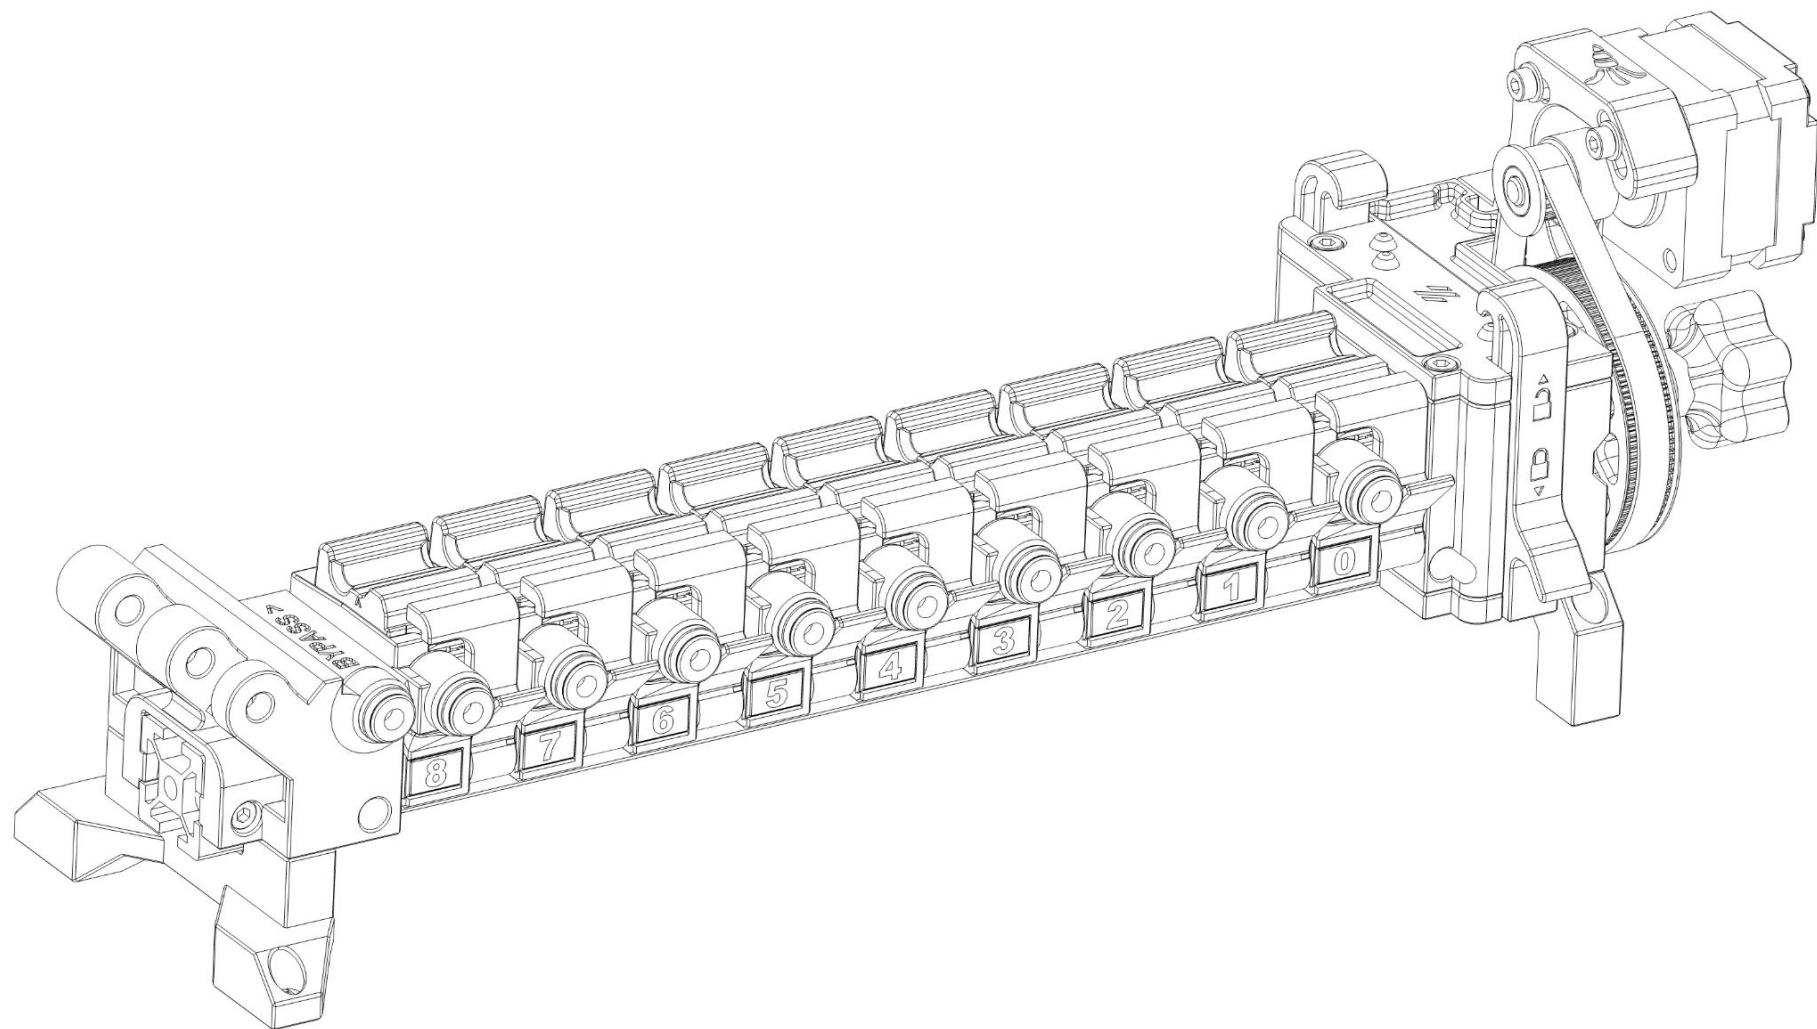

END BLOCK

EXPLODED VIEW


END BLOCK AND FOOT SUB-BOM

A
B
C
D
E

1x ECAS Coupler (2 piece)
5x M3 Roll-In T Nut
5x M3x8mm SHCS
1x M5 Locking Nut**
1x M5x30 BHCS**

F
G


1x [a]_End_Bypass_Foot.stl
1x End_Bypass.stl

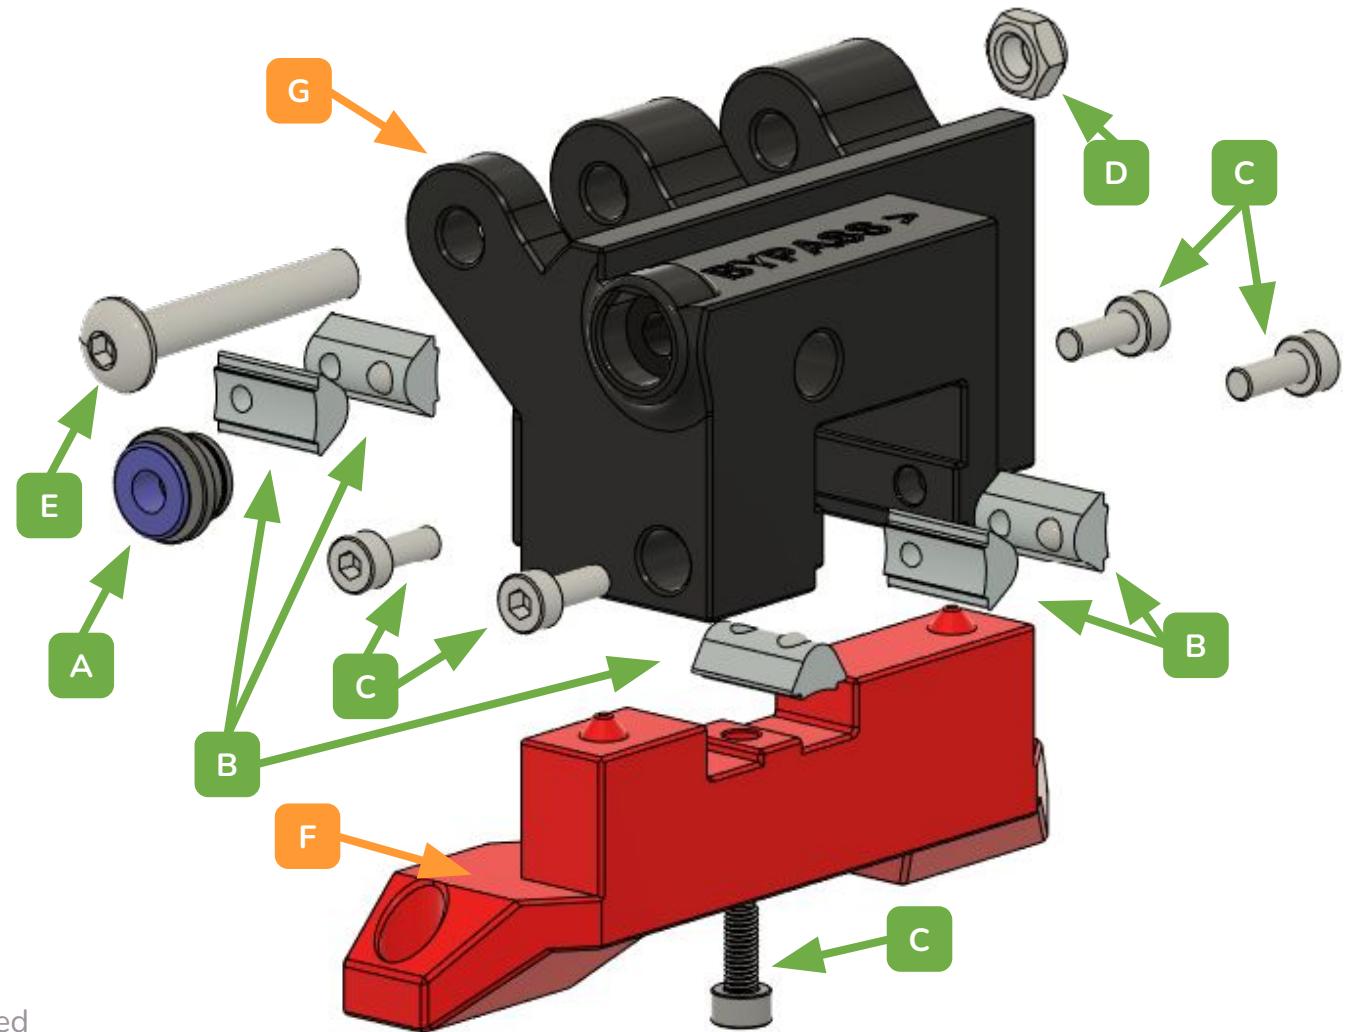

** Depicted for completeness, but used in later steps.

END BLOCK

FILAMENT END BLOCK



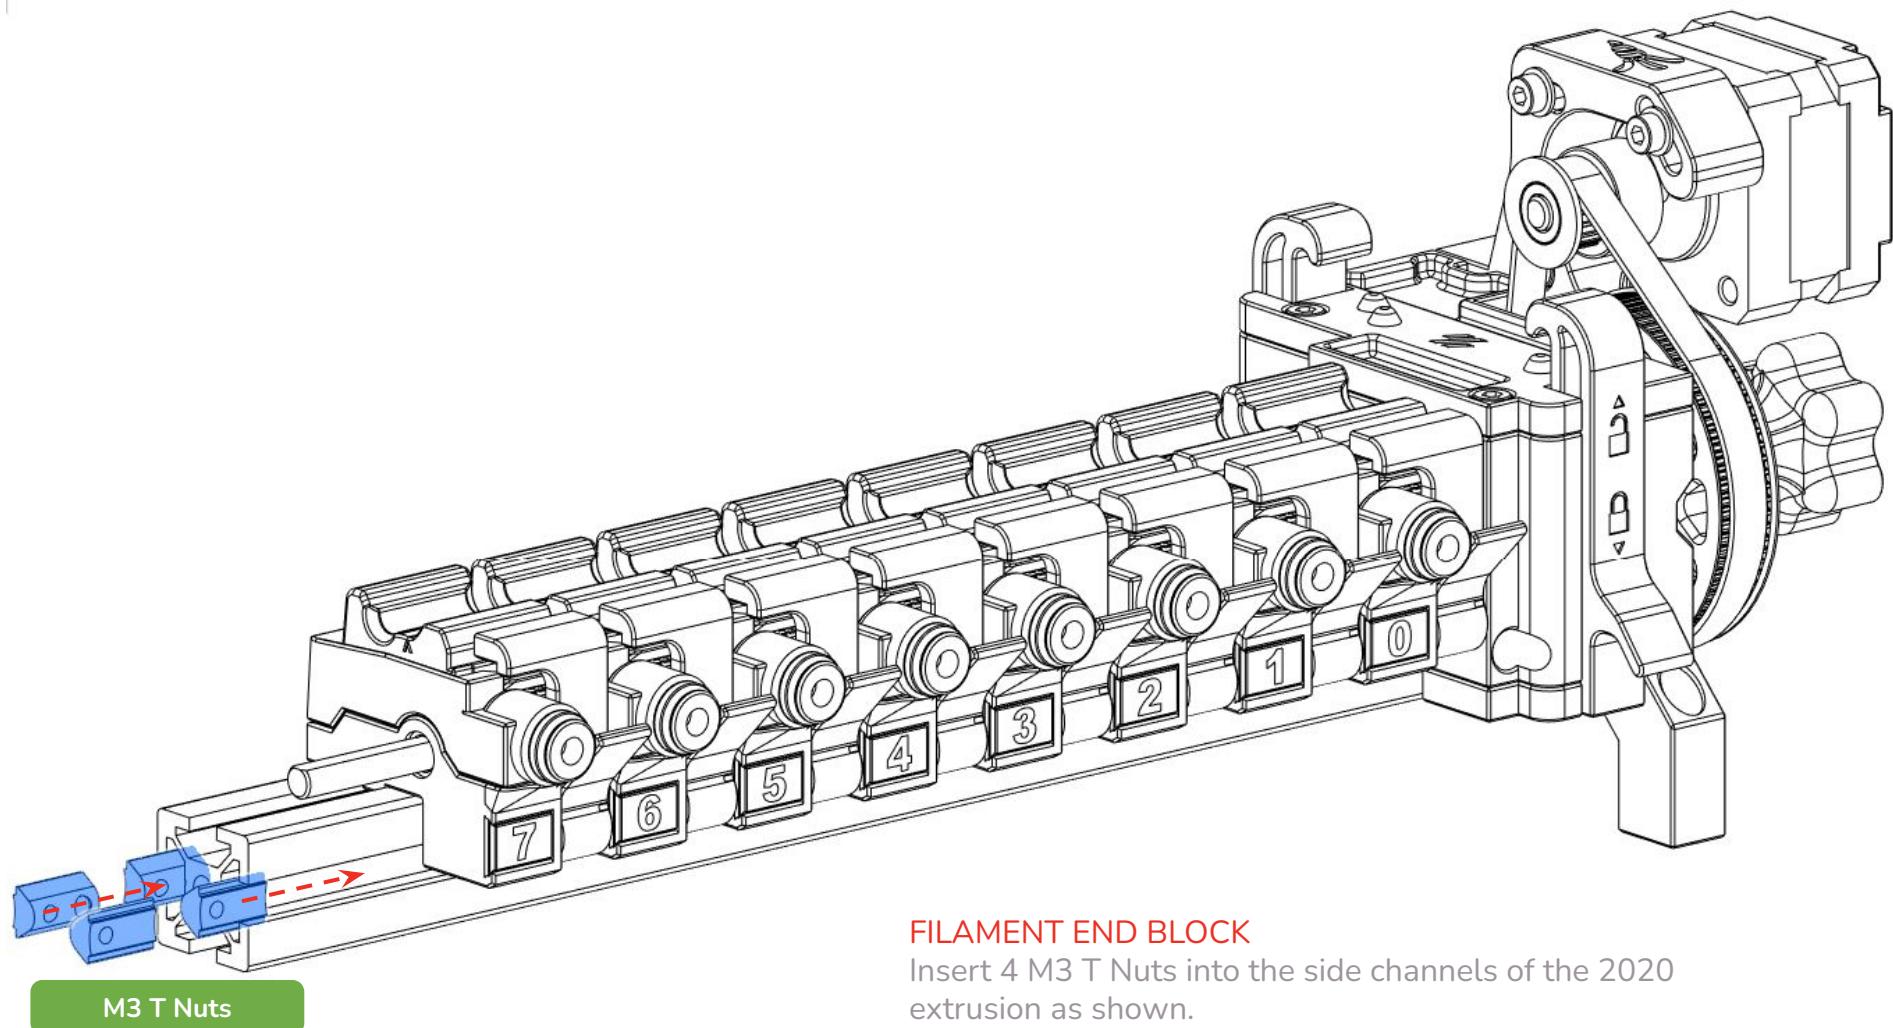


END BLOCK

END FILAMENT BLOCK

ECAS ADAPTER

Insert an ECAS-M4 adapter into the [End_Bypass](#) Block.

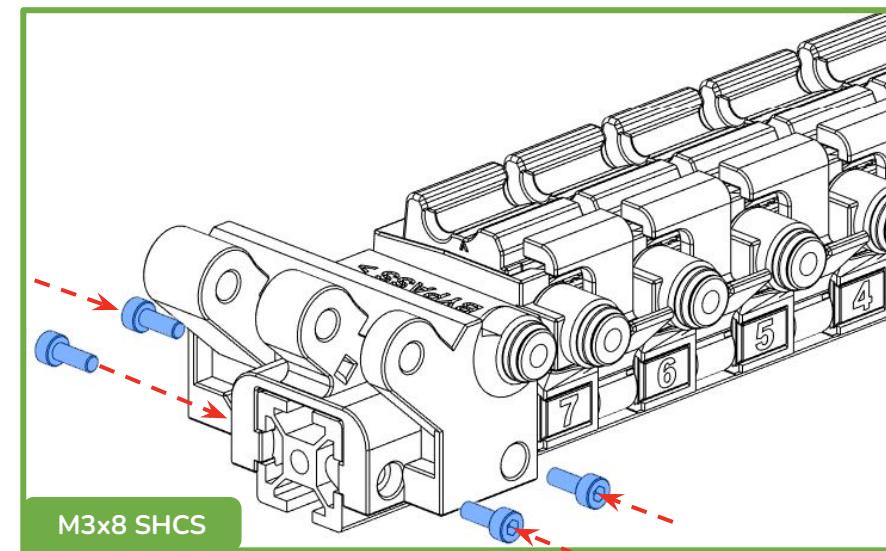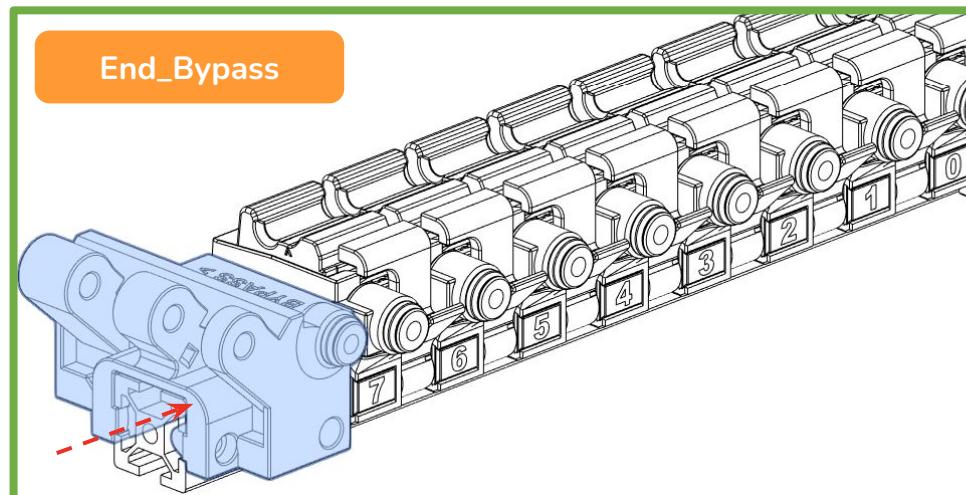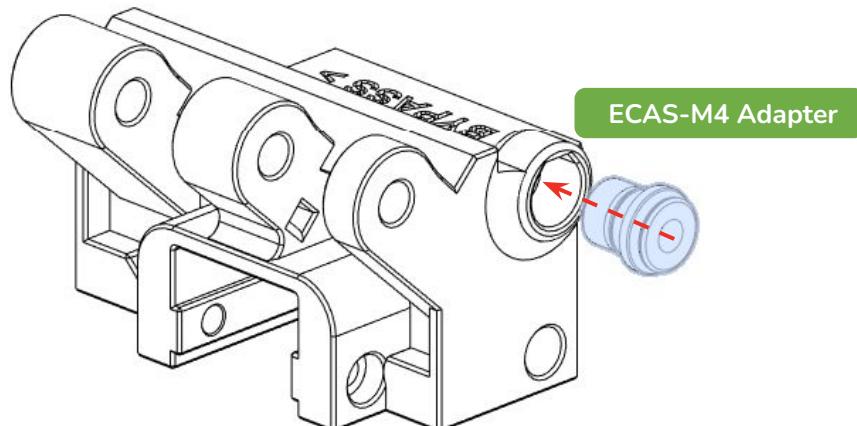

INSTALL END FILAMENT BLOCK



Slide the [End_Bypass](#) Block onto the 2020 and secure with 4 M3x8 SHCS screws.

END BLOCK

END BLOCK


Insert an M3 T Nut into the bottom channel of the 2020 extrusion as shown.

FILAMENT BLOCK END FOOT

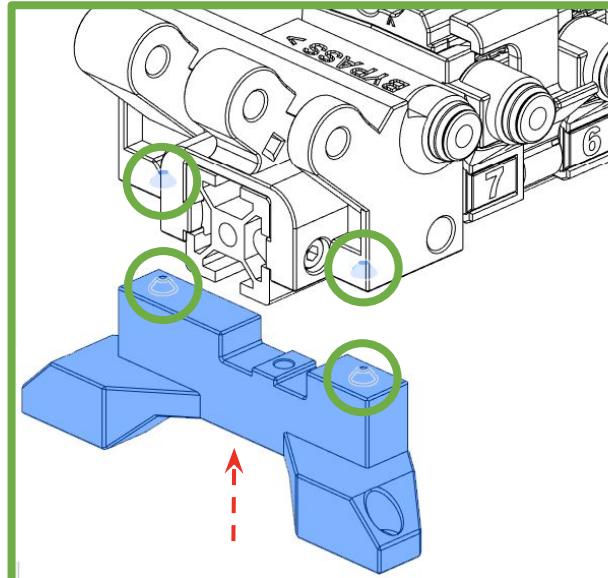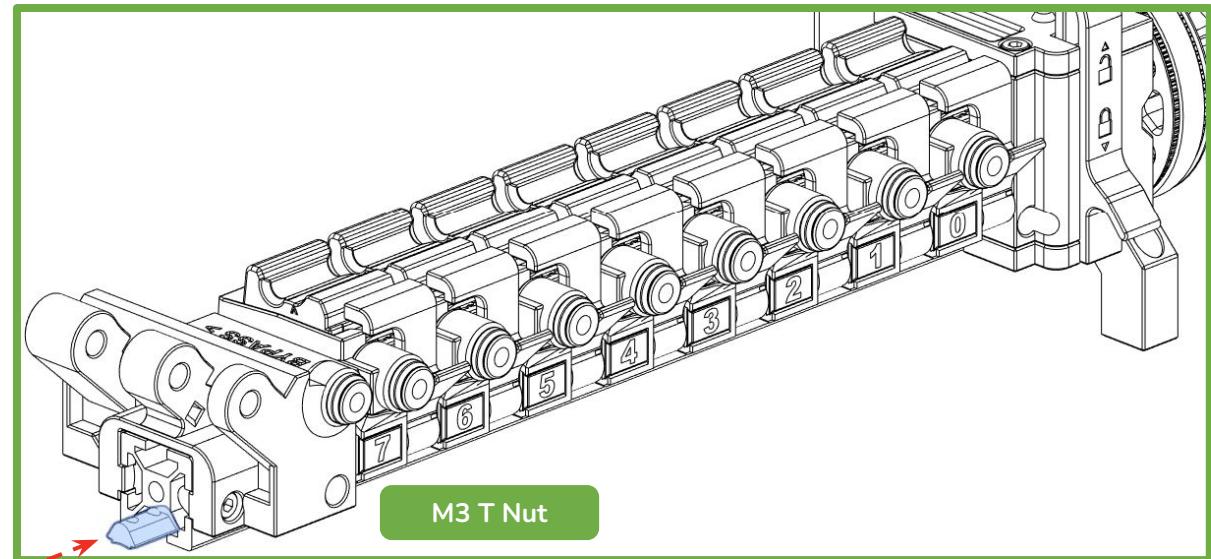

[a]_End_Bypass_Foot

ATTACH THE FOOT
Align **End_Bypass_Foot** dimples with the **End_Bypass** block and secure it with an **M3x8 SHCS** screw.

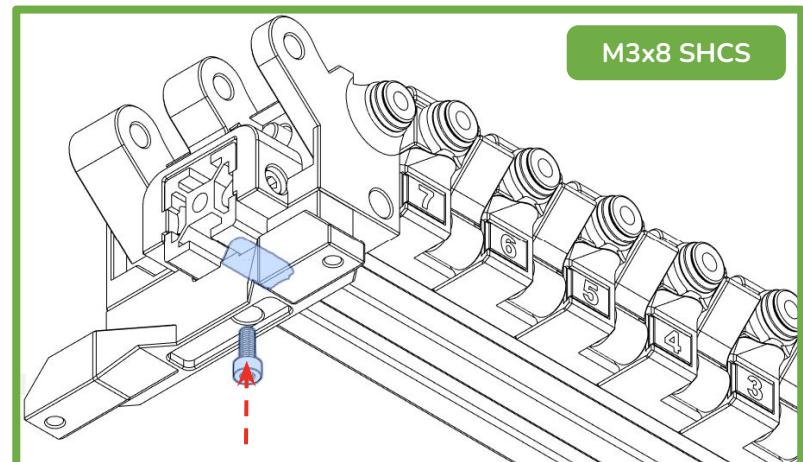


M3x8 SHCS

END BLOCK

FILAMENT BLOCK END FOOT


WHAT ABOUT THE M5x30 SCREW AND M5 NUT?


We'll use these later in the Final Assembly steps.

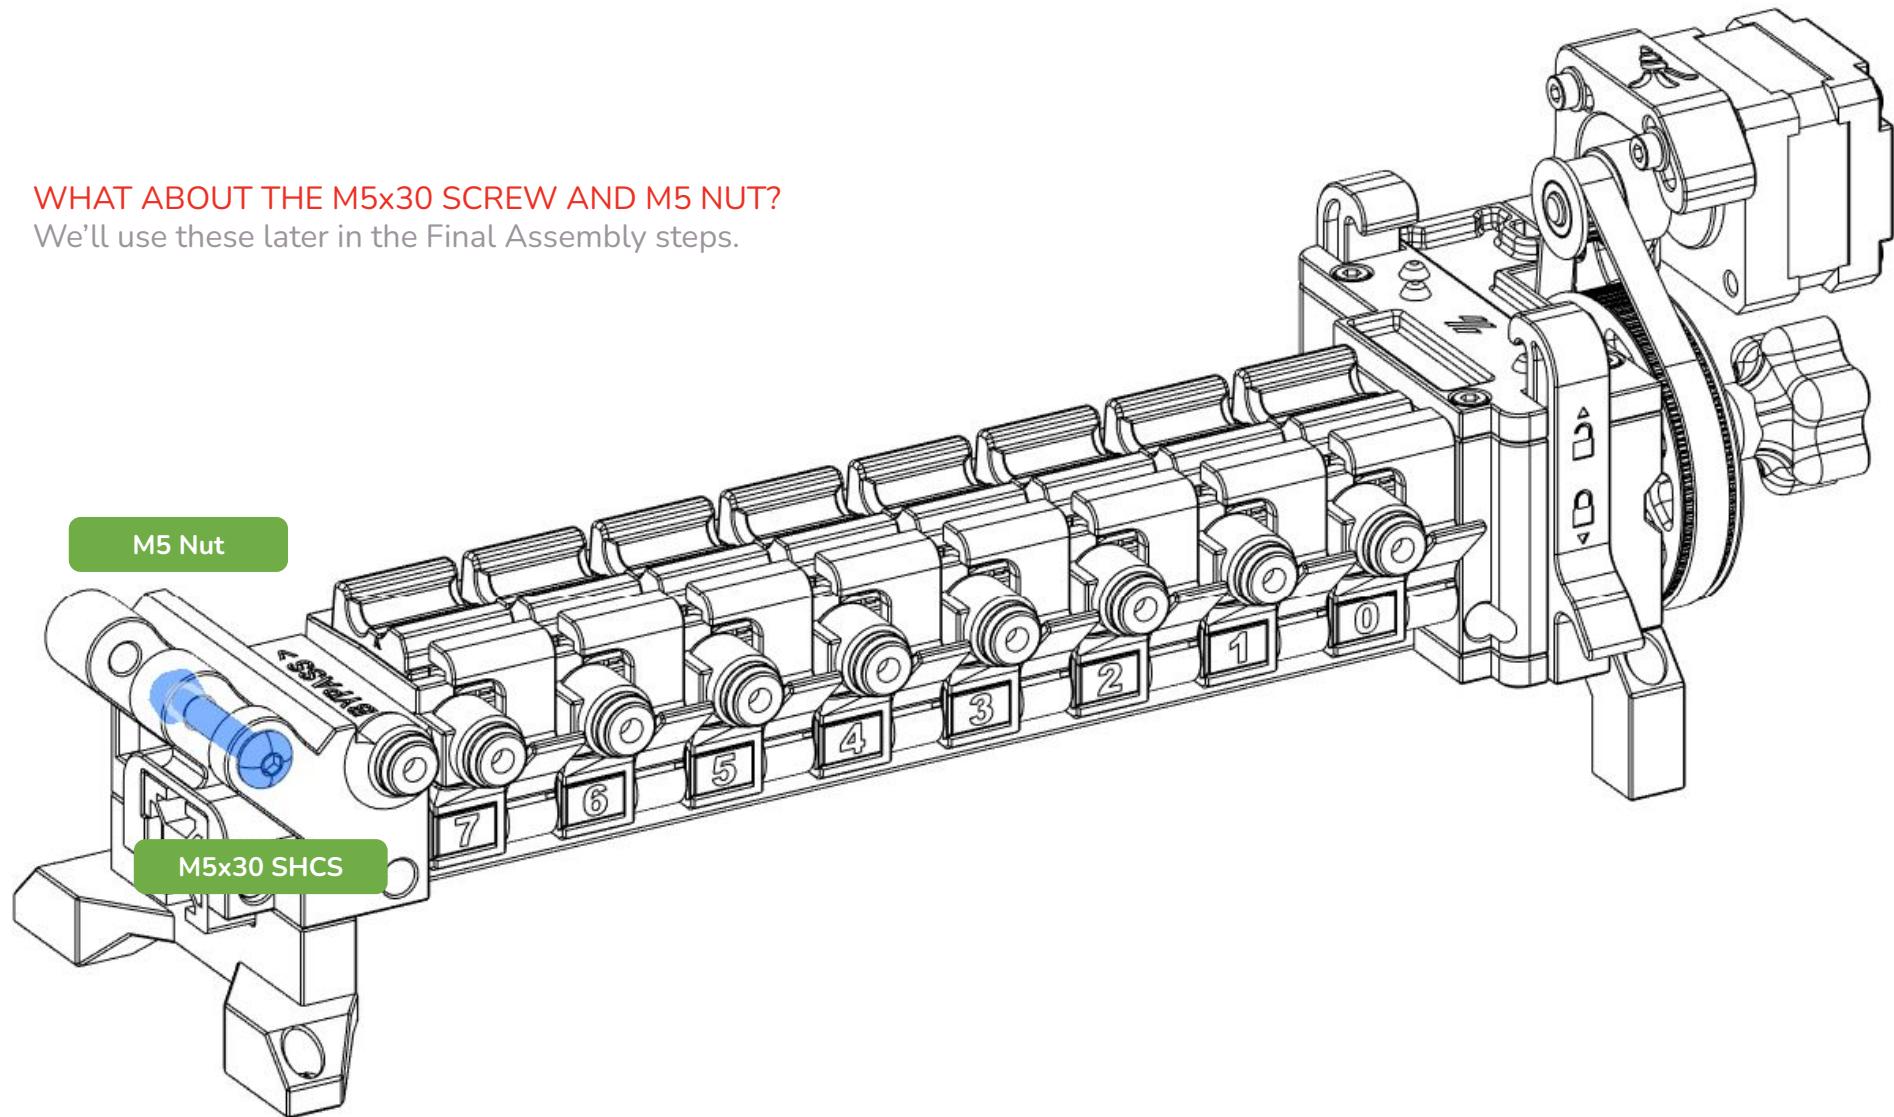

Why did the ERCF MMU go to school?

Because it wanted to learn about multi-"filament"ary education!

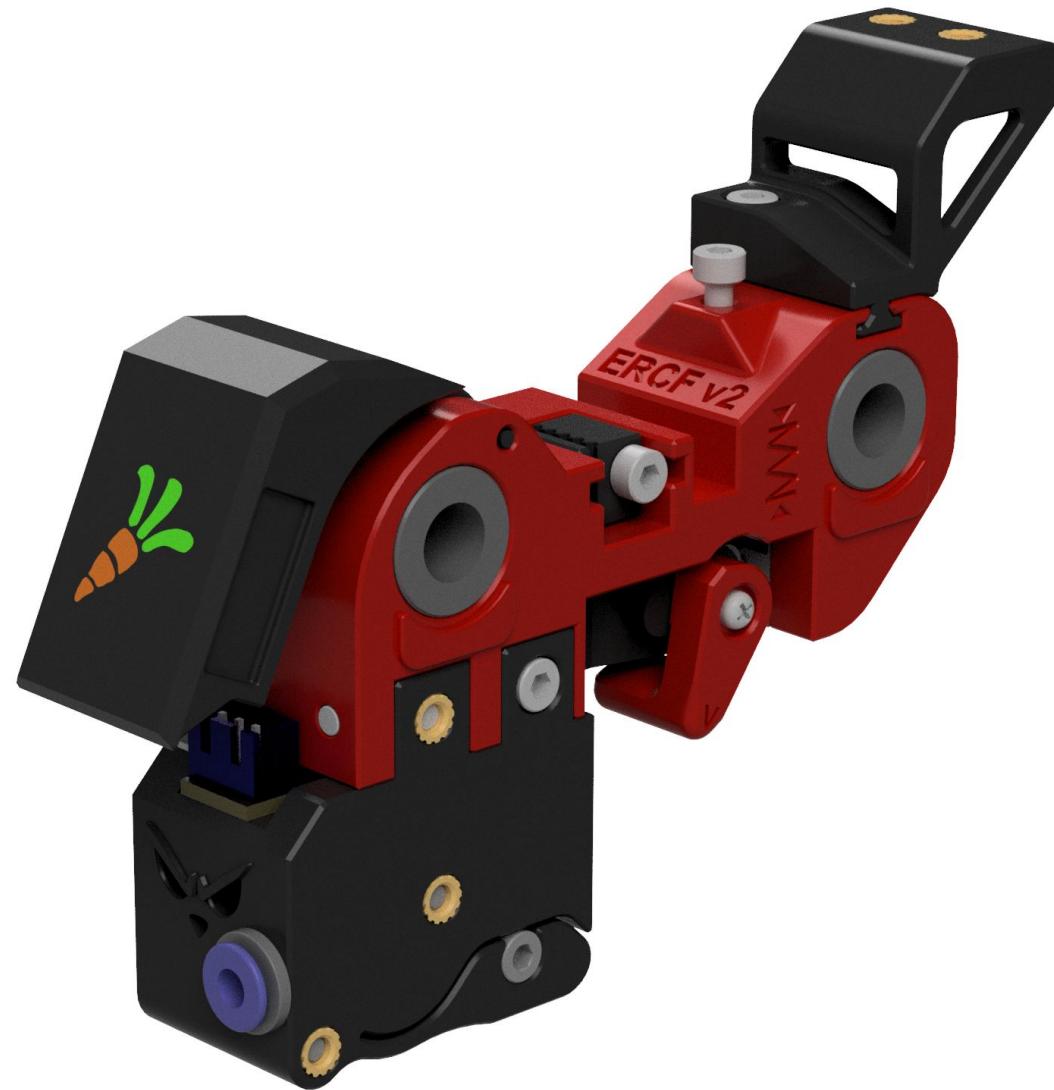

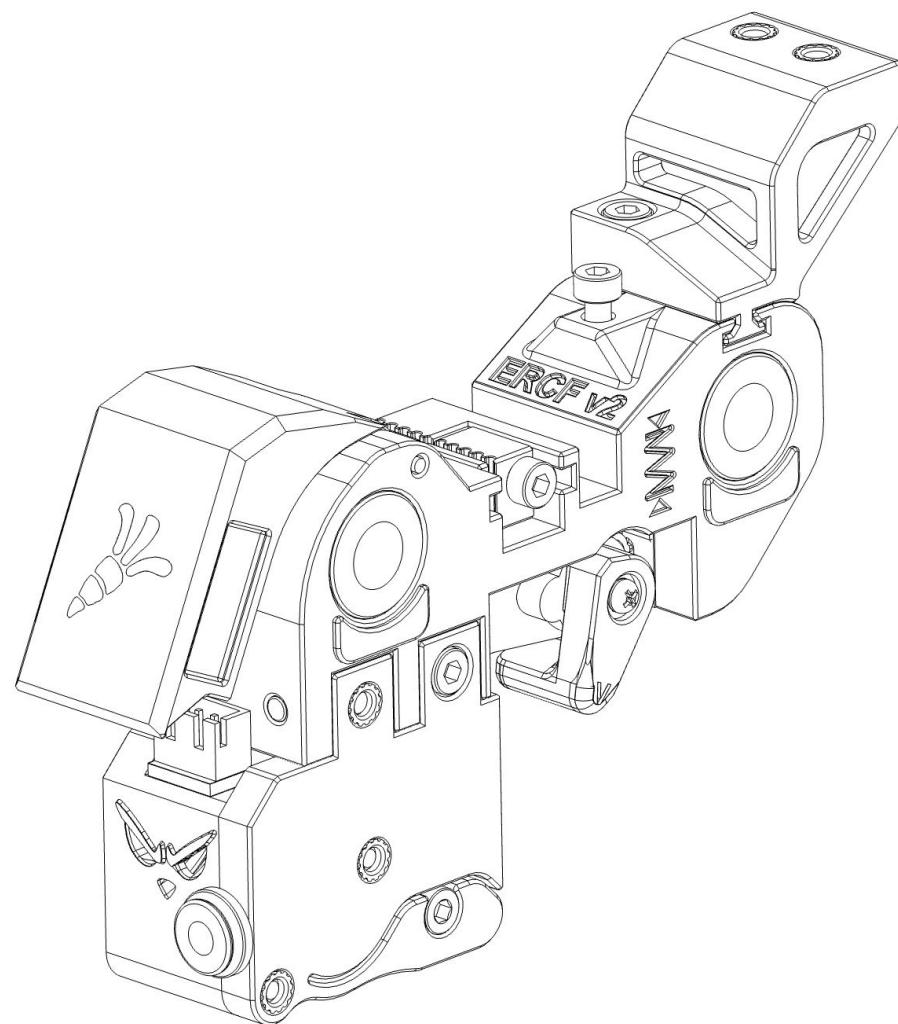


SELECTOR

EXPLODED VIEW

SELECTOR SUB-BOM

A
B
C
D
E
F
G
H

- 2x 3x2mm Magnet
- 1x 6x12x1mm Spring
- 2x LM8UU or RJ4JP-01-08
- 2x M2x10 Self-Tapping**
- 6x M3 Threaded Inserts
- 1x M3x8mm SHCS
- 1x M3x12mm SHCS
- 3x M3x20mm SHCS

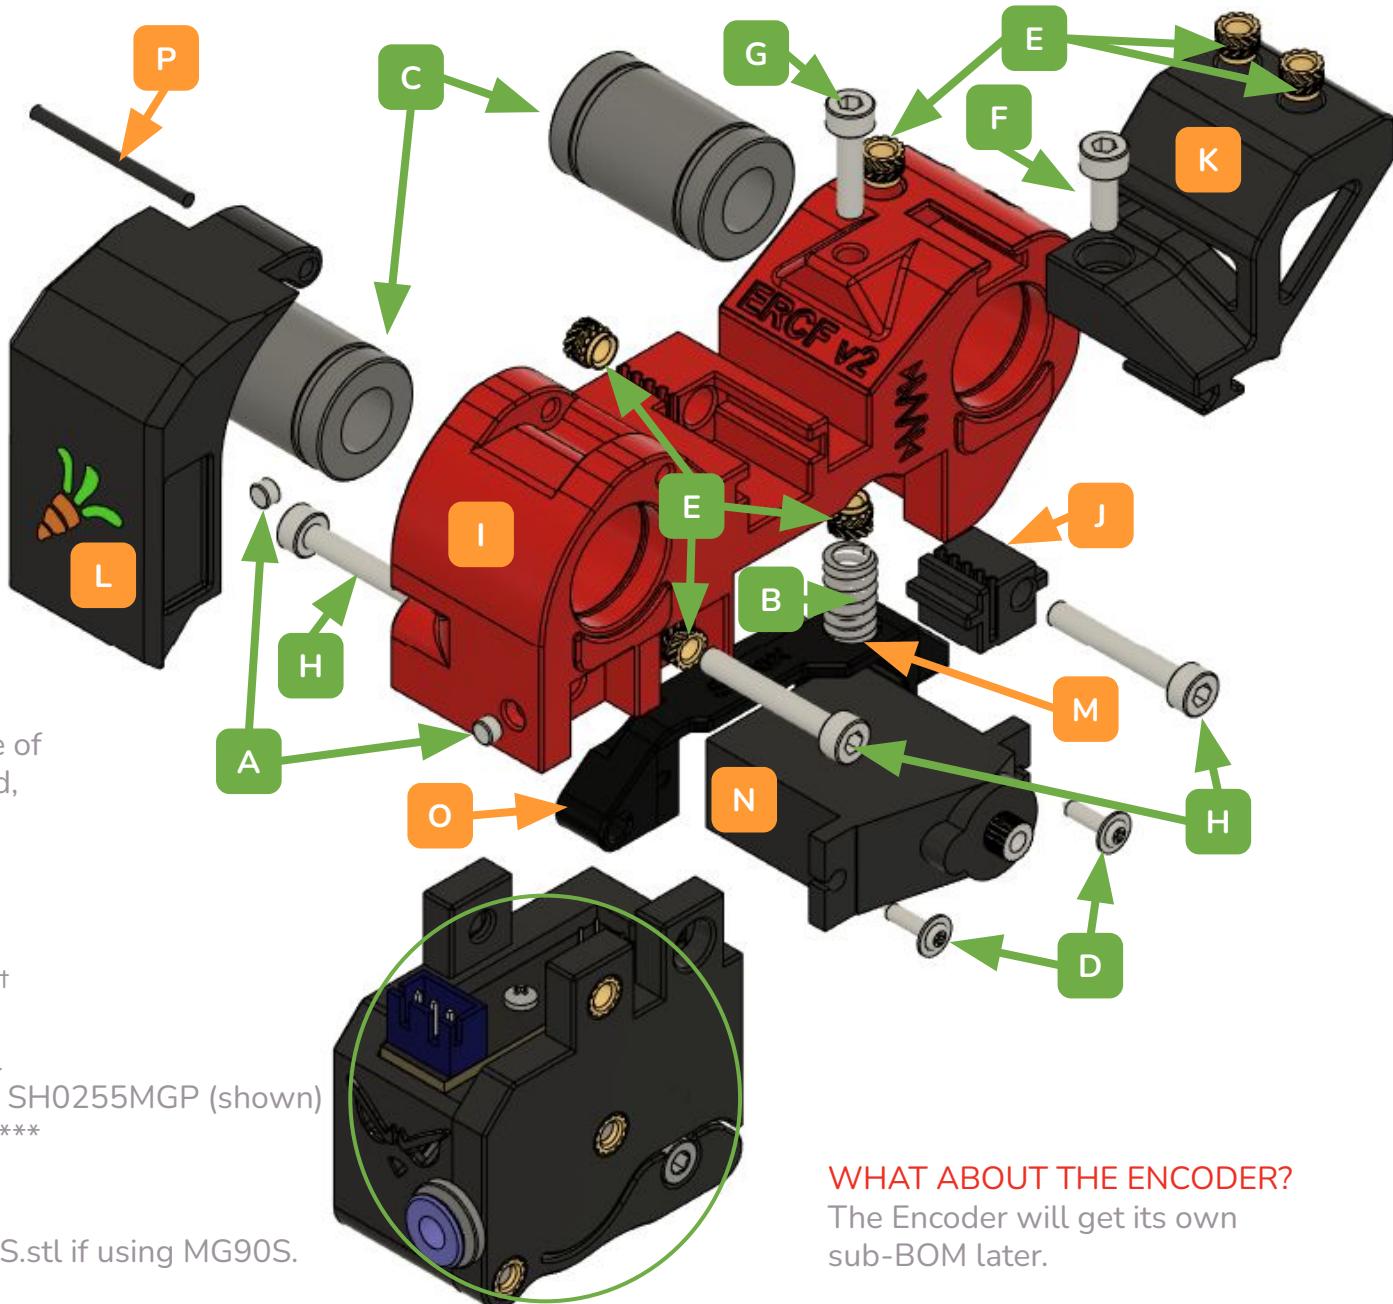

**Supplied with your choice of servo. If none were supplied, use M2x8mm SHCS.


I
J
K
L
M
N
O
P

- 1x [a]_Selector_Cart.stl
- 1x Belt_Tensioner.stl †
- 1x Drag_Chain_Anchor.stl †
- 1x Selector_Door.stl
- 1x Selector_Spring_Cap.stl
- 1x Servo, MG90S or Savox SH0255MGP (shown)
- 1x Servo_Mount_Savox.stl***
- 1x Piece of Filament

***Or Servo_Mount_MG90S.stl if using MG90S.

WHAT ABOUT THE ENCODER?


The Encoder will get its own sub-BOM later.

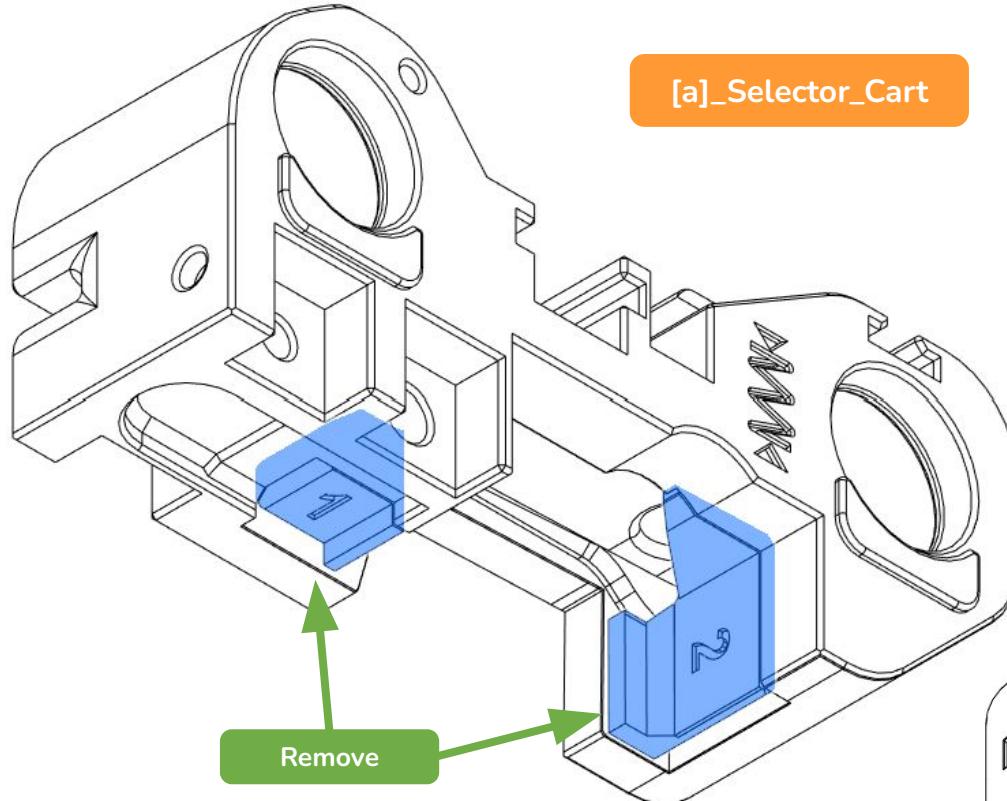

[a] Selector_Cart

REMOVE BUILT-IN SUPPORTS

Use a small tool, like a small flat screwdriver, to carefully remove the built-in supports.

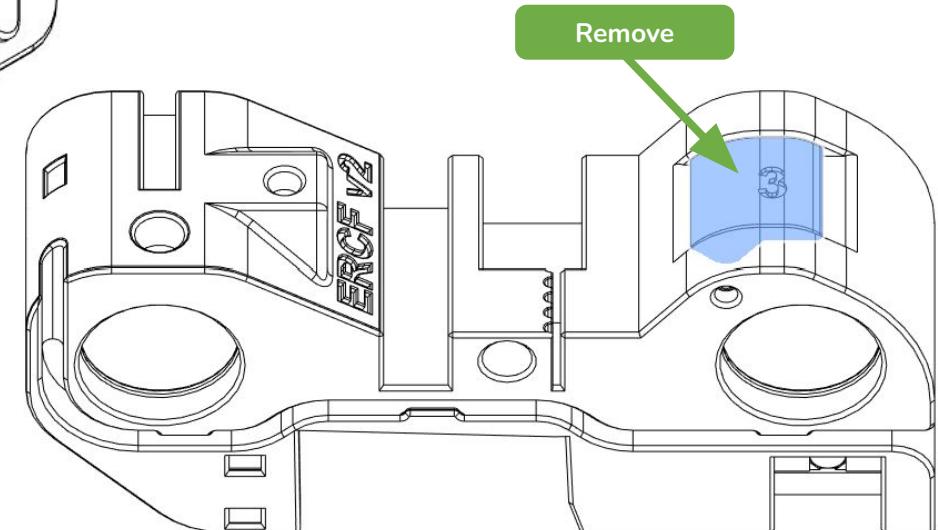


SELECTOR

SELECTOR CART BEARINGS

BEARING INSERTION

Using a soft jaw vice or flat object, carefully press-fit the bearings into their holes. They should be flush with the print bed side of the [Selector_Cart](#).

LM8UU or RJ4JP-01-08


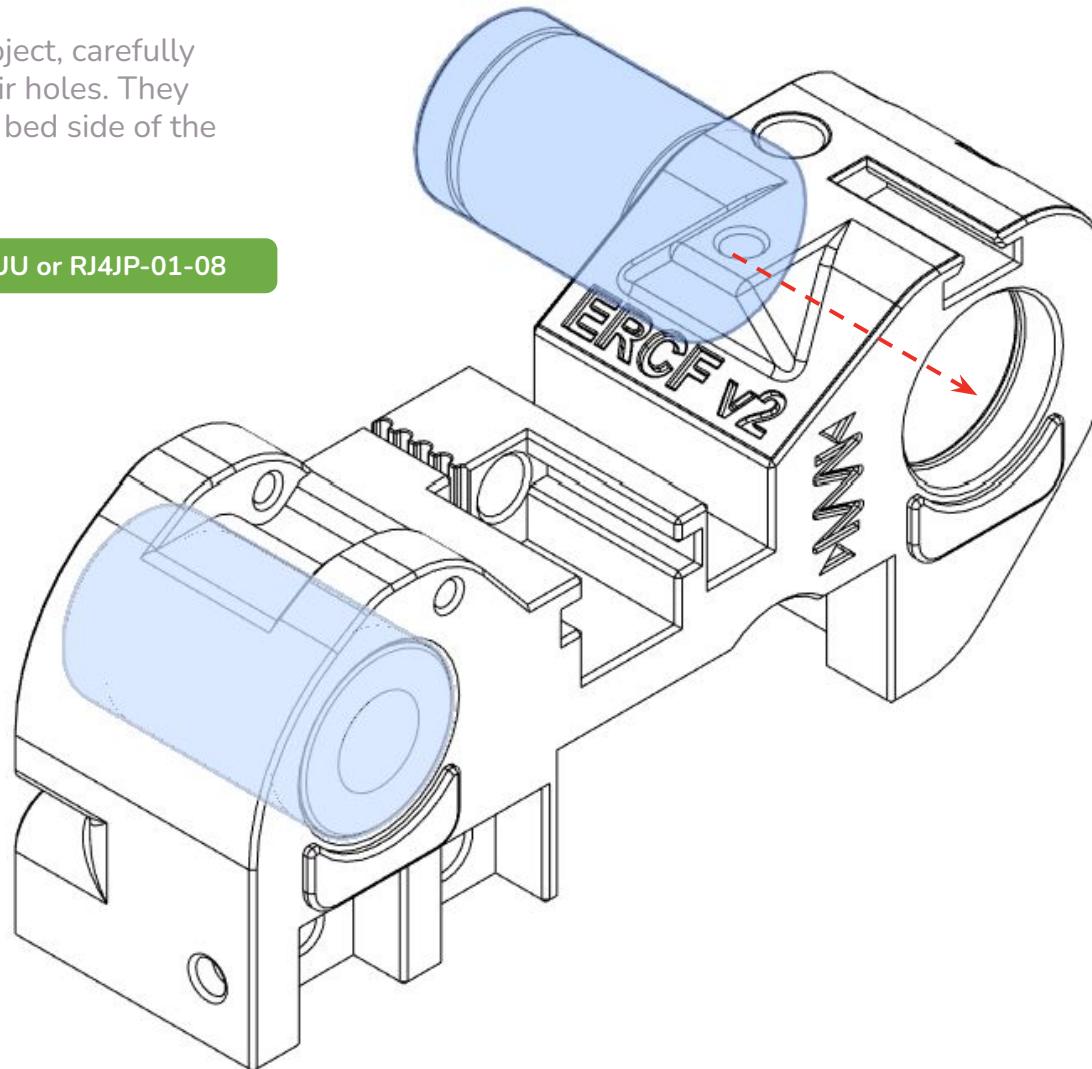


SELECTOR

SELECTOR CART HEAT SET INSERTS

HEAT SET INSERTS

The list of pages with heat set inserts is on [Page 15](#).

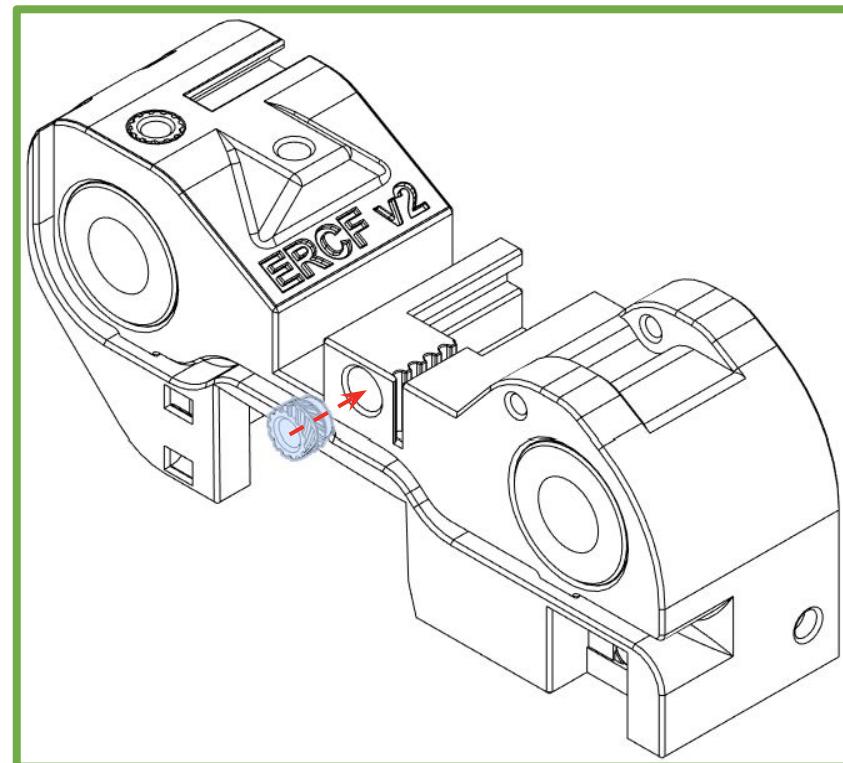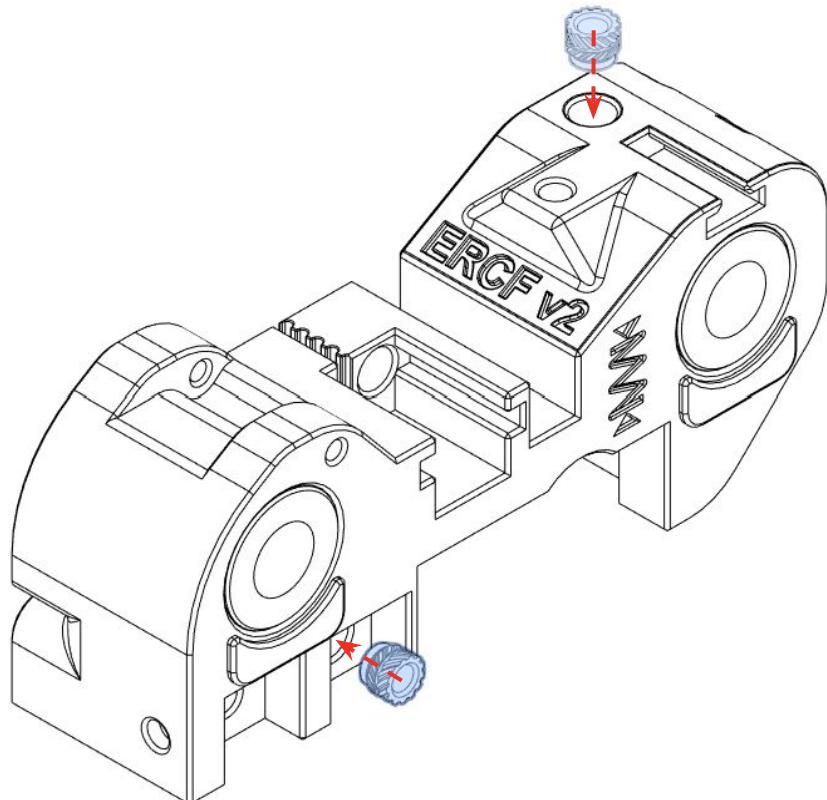


M3 Heat Set Inserts

SELECTOR

SELECTOR CART SPRING HEATSET

HEAT SET INSERTS


The list of pages with heat set inserts is on [Page 15](#).

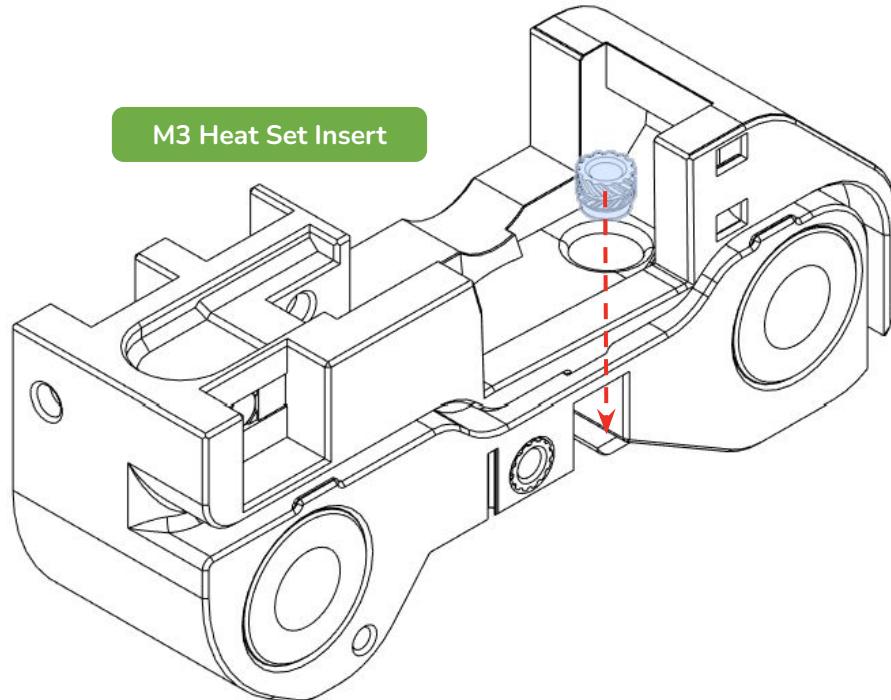

HEATSET INSERTION

This heatset insert is a tricky one. Take your time. It may help to use a screw to pull from the opposite side during insertion.

If you wind up melting the spring hole, either reprint the piece and try again, or clean up the hole with a drill bit. The bore size is 6.6mm, so use 6mm, $\frac{1}{4}$ ", or $17/64"$ sized bits.

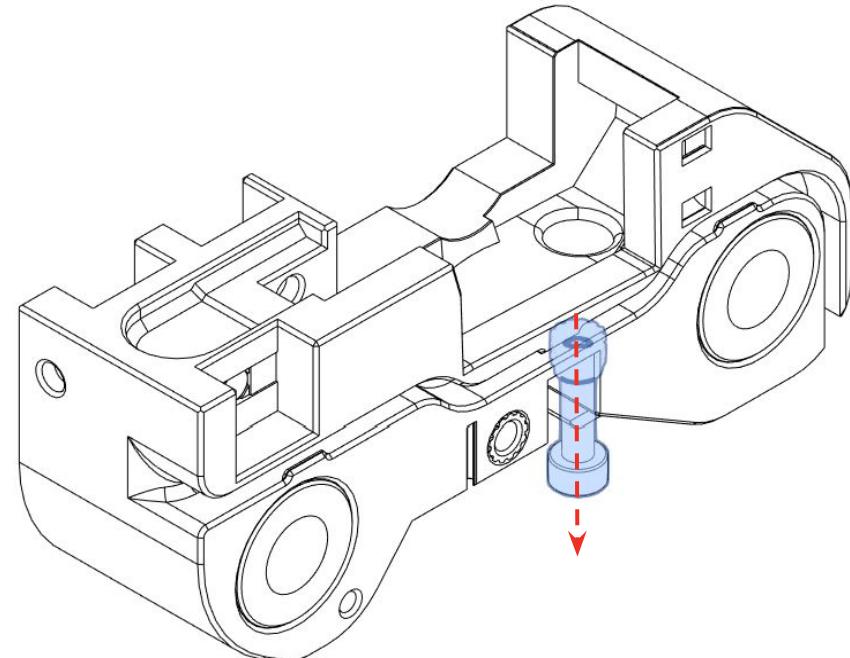

SELECTOR


DRAG CHAIN ANCHOR HEAT SET INSERTS

HEAT SET INSERTS

The list of pages with heat set inserts is on [Page 15](#).


Drag_Chain_Anchor †

M3 Heat Set Inserts

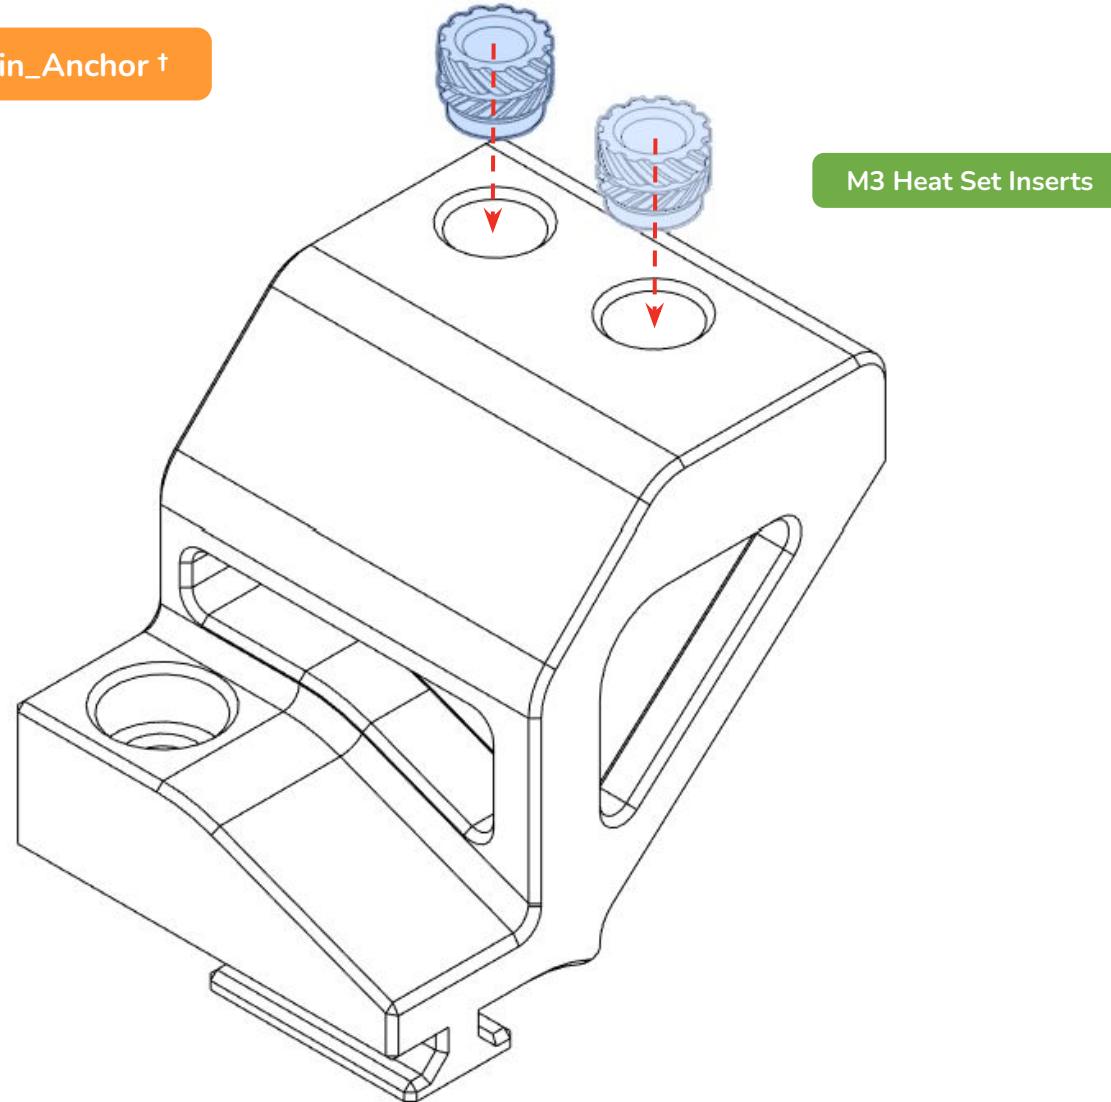


SELECTOR

DRAG CHAIN ANCHOR

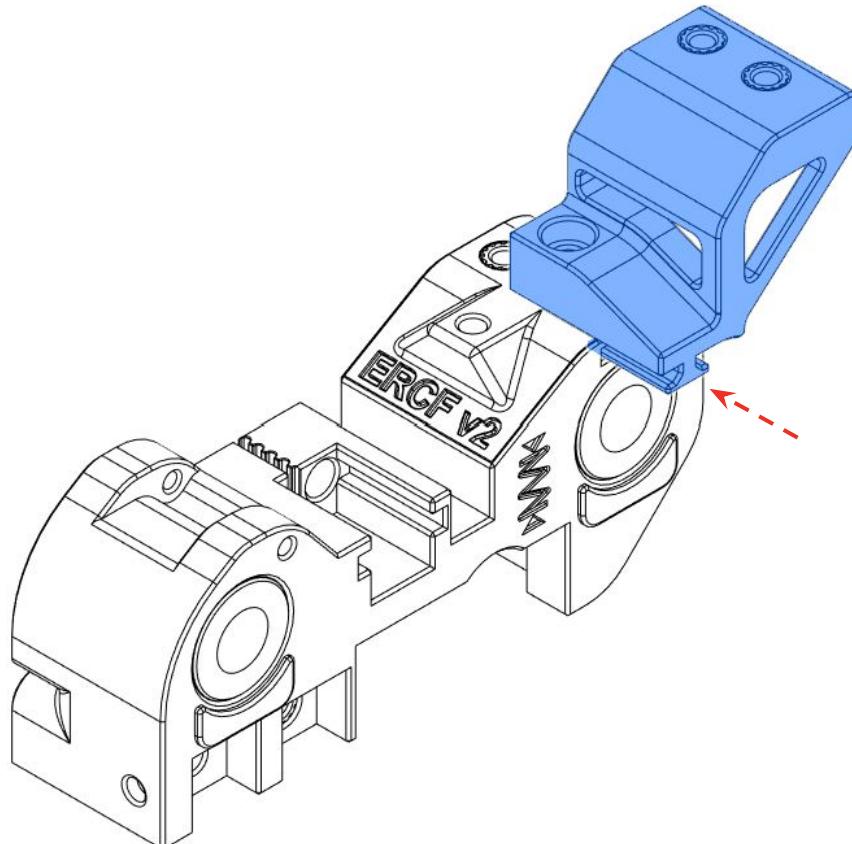

Drag_Chain_Anchor †

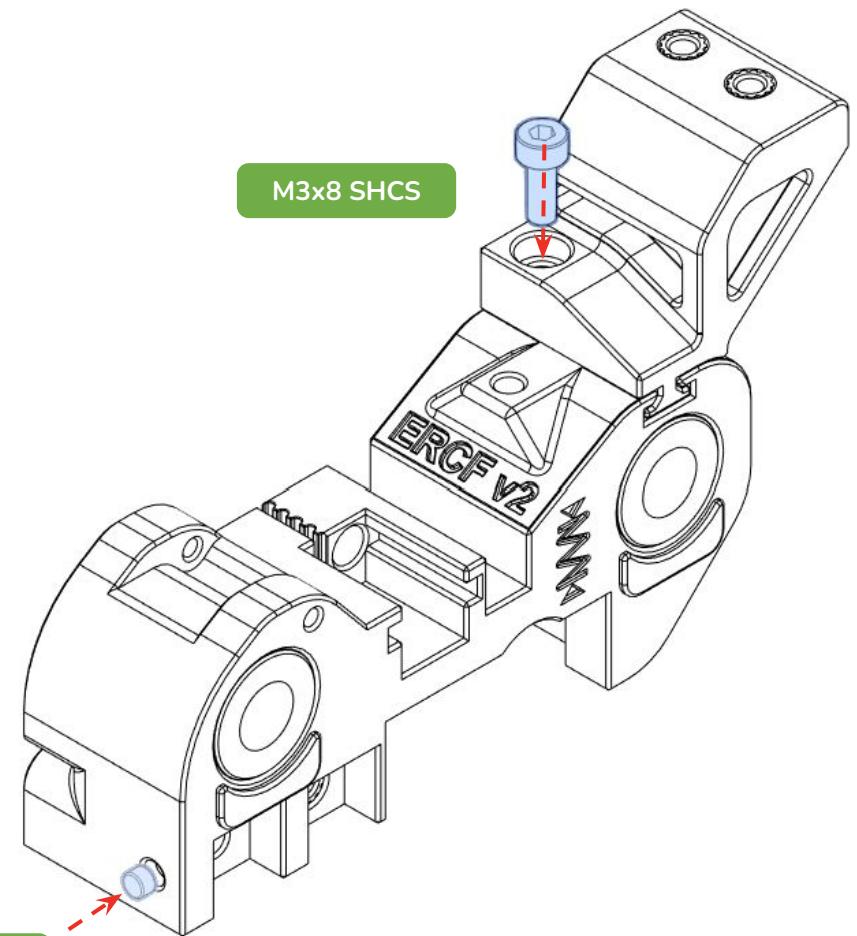

M3x8 SHCS

DRAG CHAIN AND MAGNET

Slide the [Drag_Chain_Anchor](#) † into the dovetail groove on the [Selector_Cart](#) and install with an M3x8 SHCS screw.



Add a drop of CA glue and Insert the 3x2mm magnet into its slot.

3x2mm Magnet


SELECTOR

SERVO MOUNT PREPARATION

Servo_Mount_MG90S

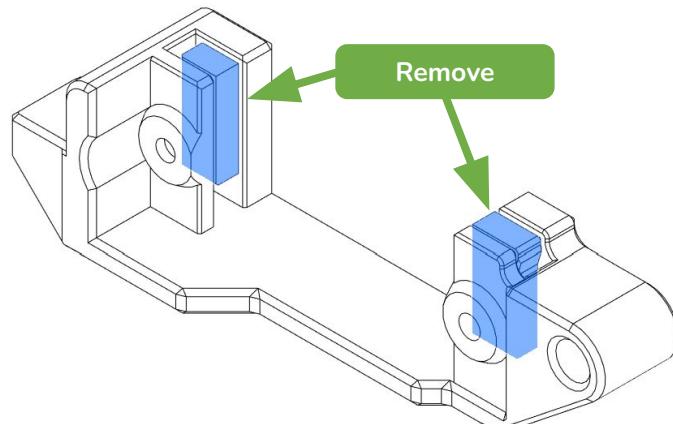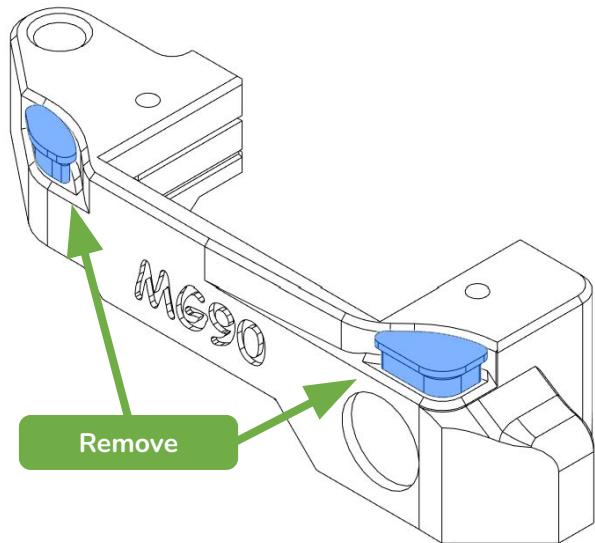

Servo_Mount_Savox

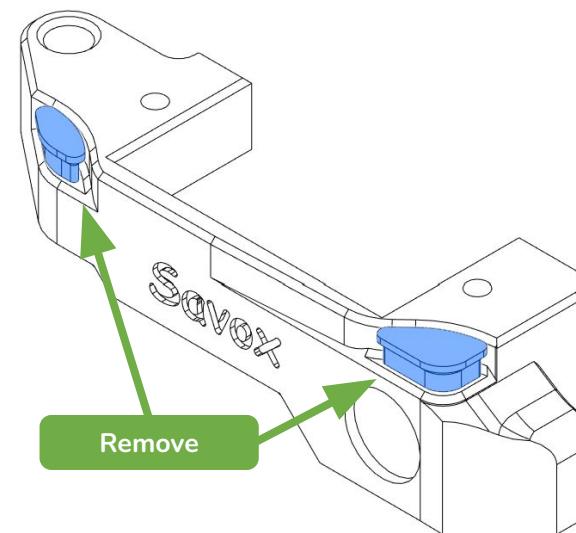


SERVO MOUNT PRINT IN PLACE SUPPORTS

Use a small tool, like a small flat screwdriver to remove the built-in supports.

The Towerpro MG90S version has 4 supports. If the inner supports don't break out cleanly, you may need to clean up the slot with a file or hobby knife to get a good fit.


SELECTOR

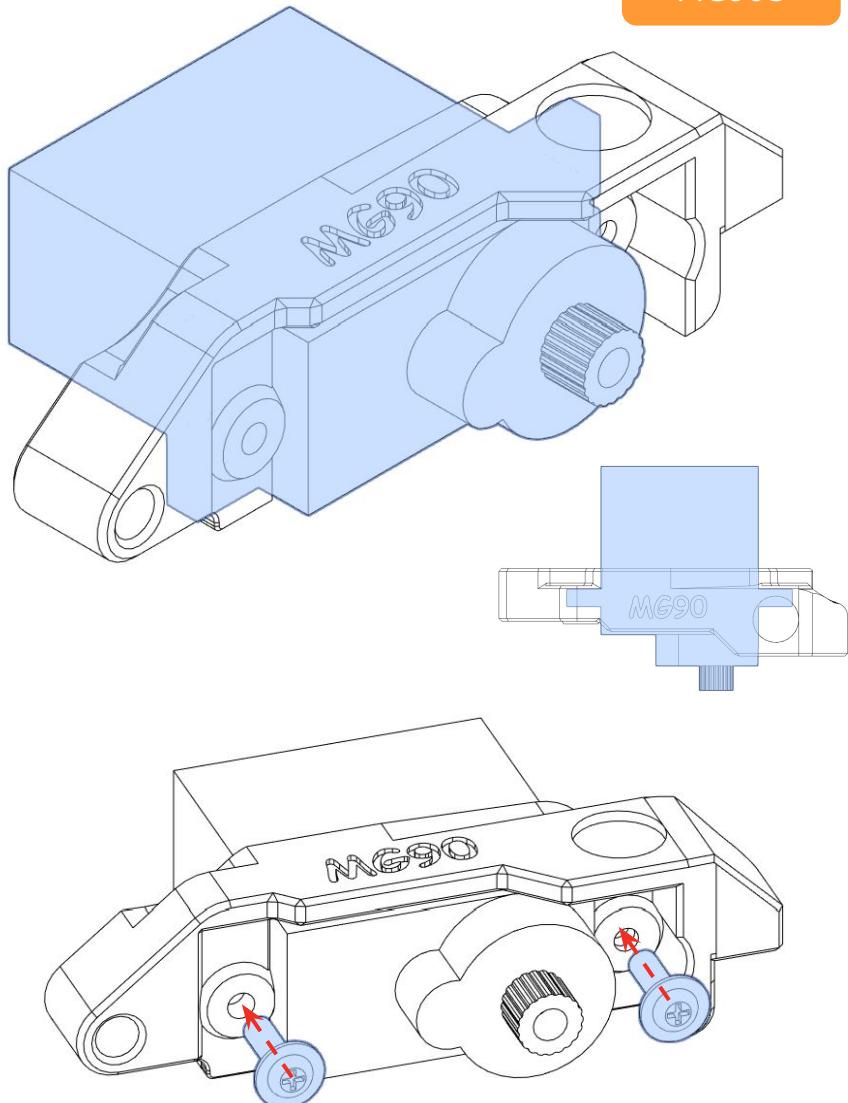

SERVO MOUNTING

MG90S

Savox SH0255MGP

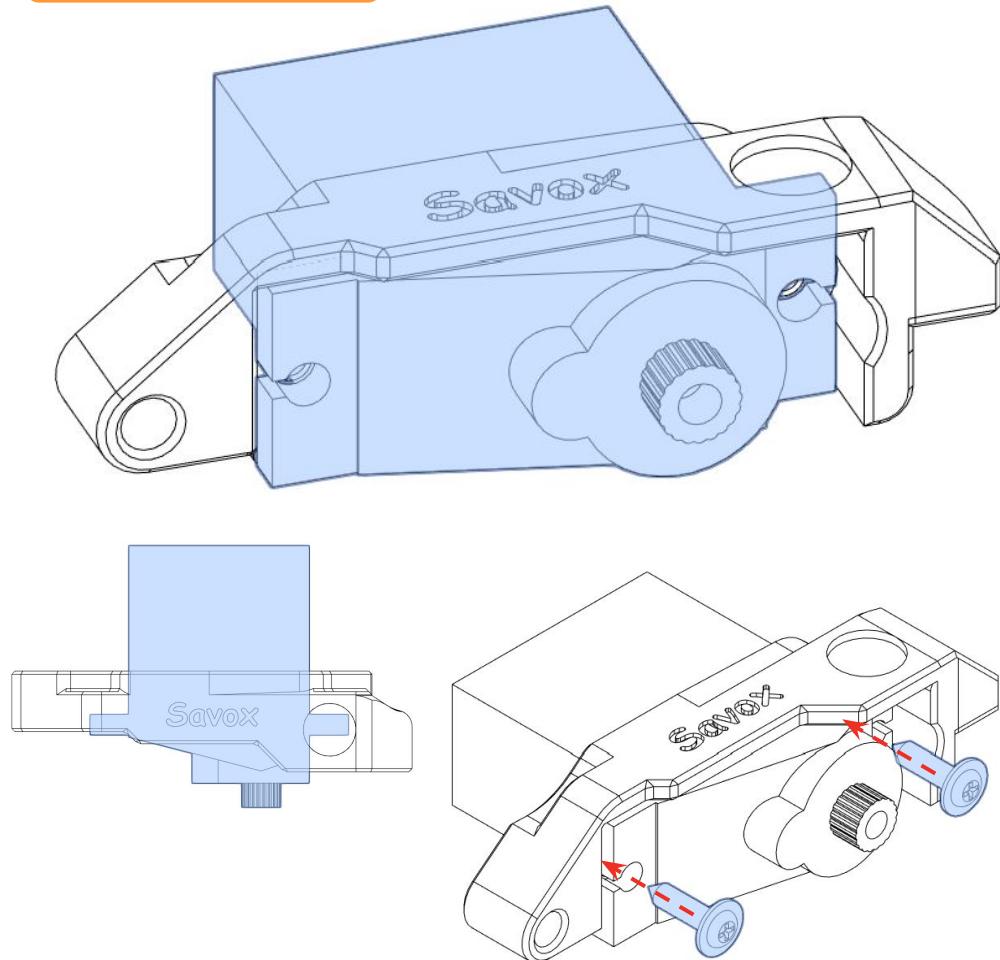


SERVO SCREWS

Use the 2 mounting screws from the servo kit. They tap directly into the selector cart plastic, so don't overtighten. If the screws strip or weren't provided, use M2x8mm SHCS instead.

SELECTOR

SPRING INSTALL

12x6mm 1mm OD
Compression Spring

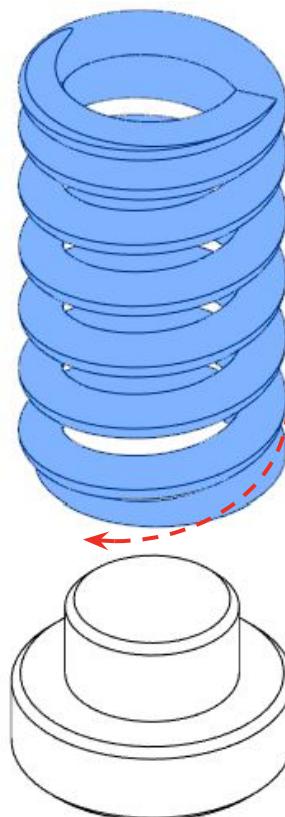


SPRING CAP

Twist the spring onto the [Selector_Spring_Cap](#) so the cap stays inserted into the spring.

Insert the spring and cap into the hole in the selector and make sure its not obstructed.



Shorter 10mm springs can be used as well.

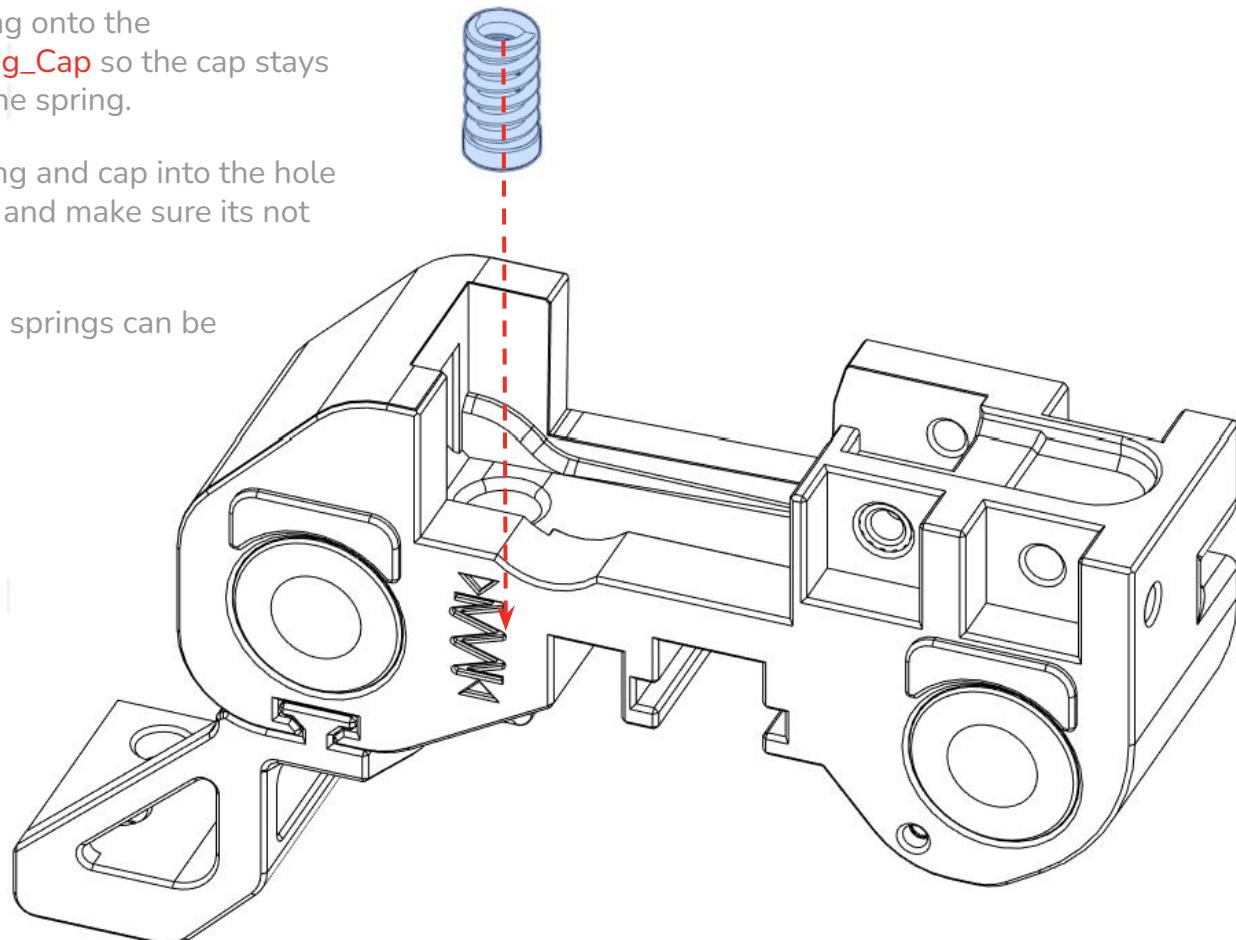

Selector_Spring_Cap

SELECTOR

SERVO INSTALLATION

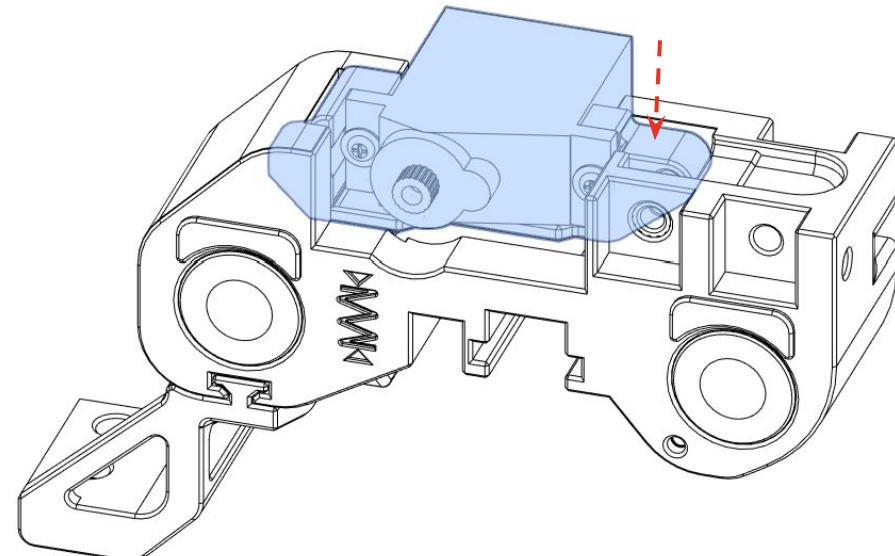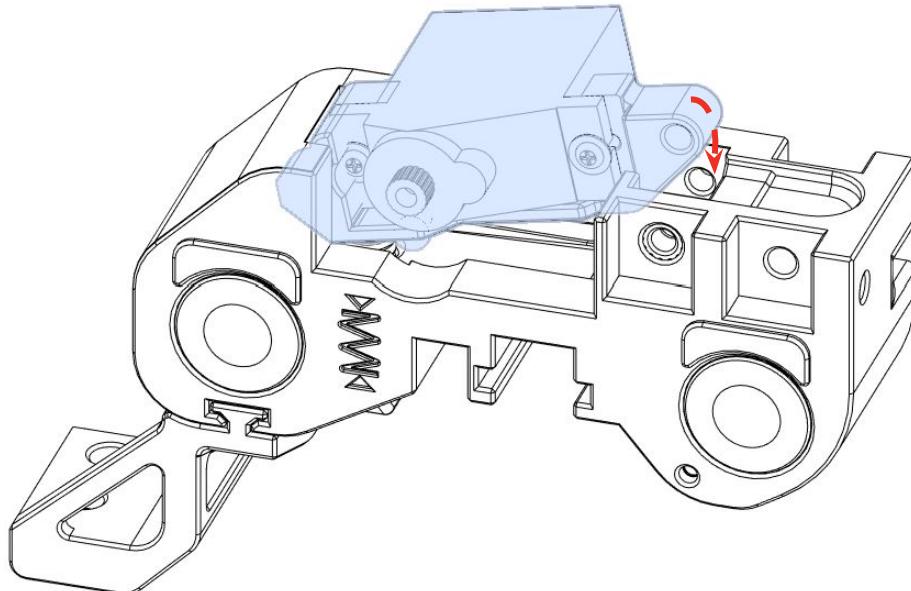


SERVO INSTALLATION

Angle the **Servo_Mount**, insert it into the captive channel in the **Selector_Cart** and press down into the pivot point. The spring should push against the **Servo_Mount** preventing it from fully seating.



Push the **Servo_Mount** into place and temporarily secure it with an M3x20 screw used for mounting the encoder.

SAVOX SH-0255MGP servo option shown, installation is identical for the Towerpro MG90S servo.

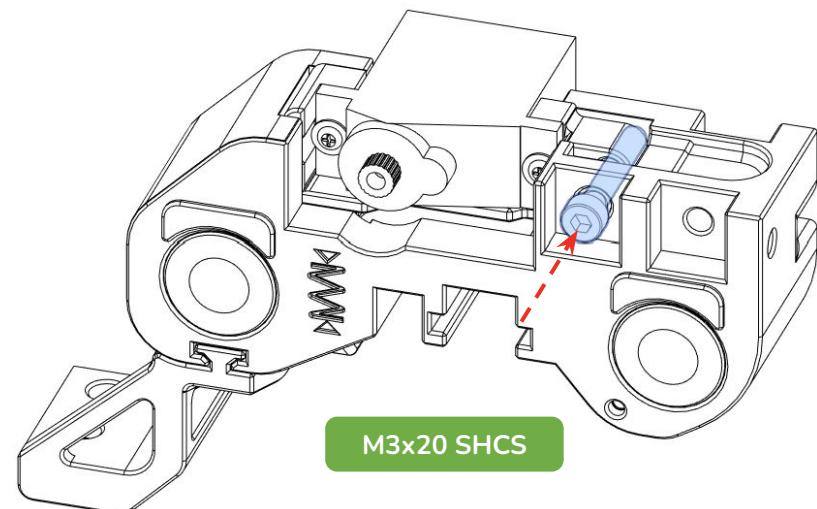

SELECTOR

TENSION SCREW INSTALLATION

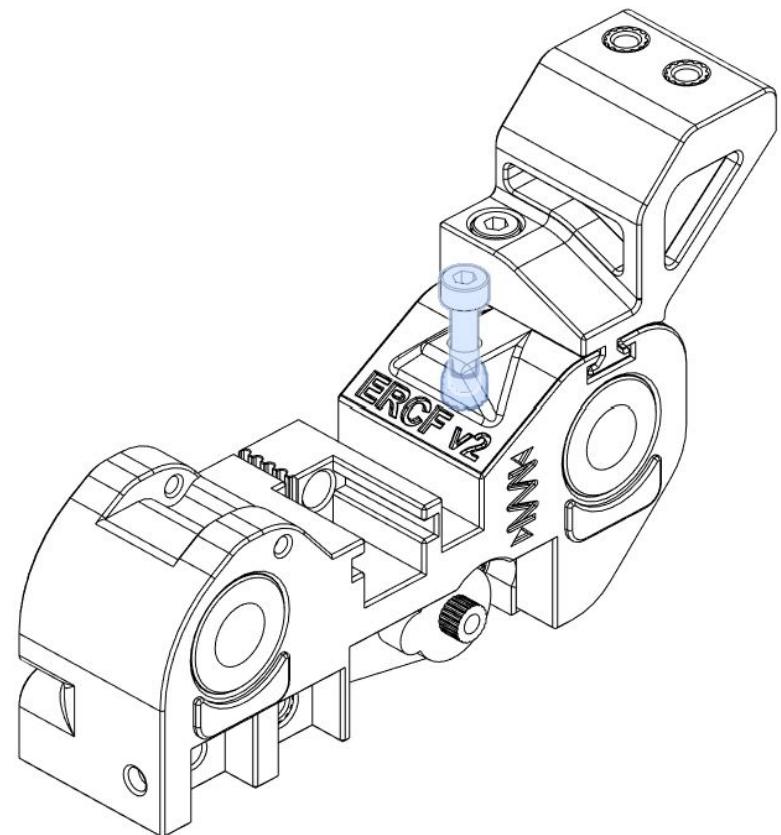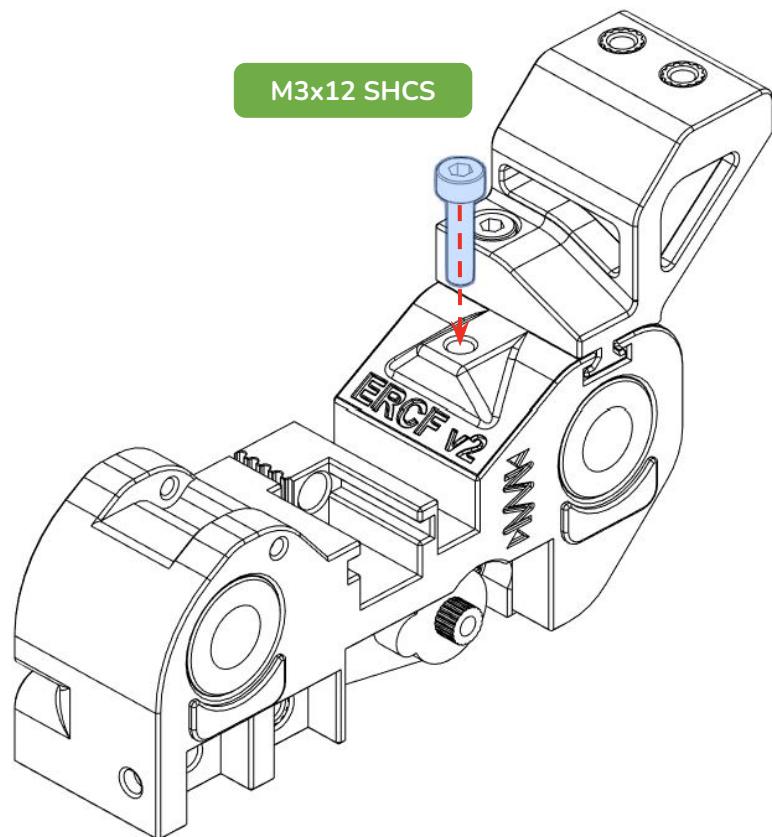


SPRING TENSION SCREW INSTALLATION

Install the servo spring tension screw. Only tighten until it touches the [Selector_Spring_Cap](#) - we will adjust and tension it later.

SELECTOR

SERVO WIRES

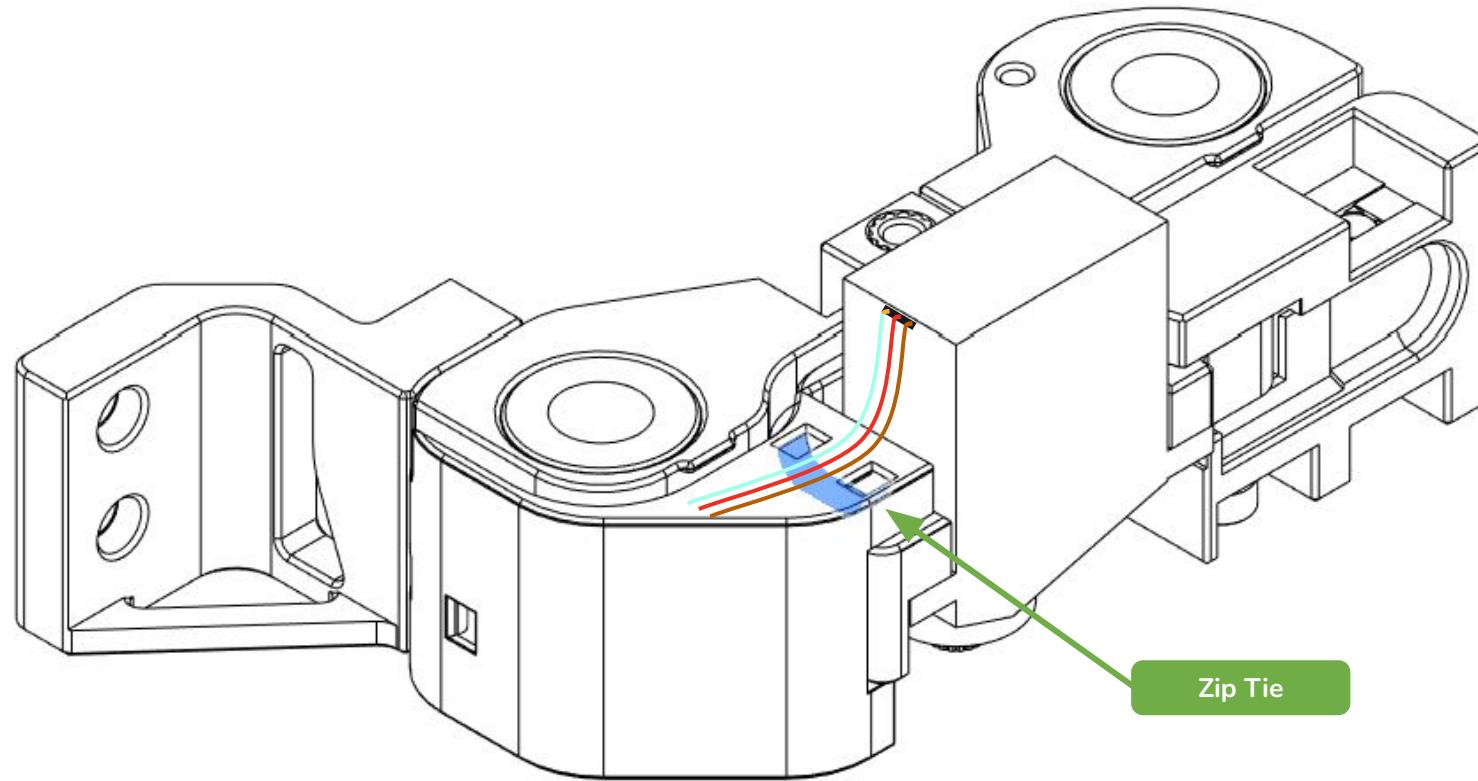

SERVO WIRES

Secure the servo wires using a zip tie. Make sure the wires lie flat against the side of the servo as shown.



SELECTOR : ENCODER

ENCODER EXPLODED VIEW

ENCODER SUB-BOM

A	1x V623ZZ Bearing**
B	1x BMG 3x20mm Stainless Rod
C	1x Binky PCB
D	1x BMG Idler Gear (without set screw)
E	2x BMG Needle Bearings
F	1x ECAS Coupler (2 piece)
G	1x M2x8 or 10mm Self-Tapping Screw
H	1x M3x8mm BHCS
I	3x M3x20mm SHCS
J	3x M3 Threaded Insert


**Or 623ZZ

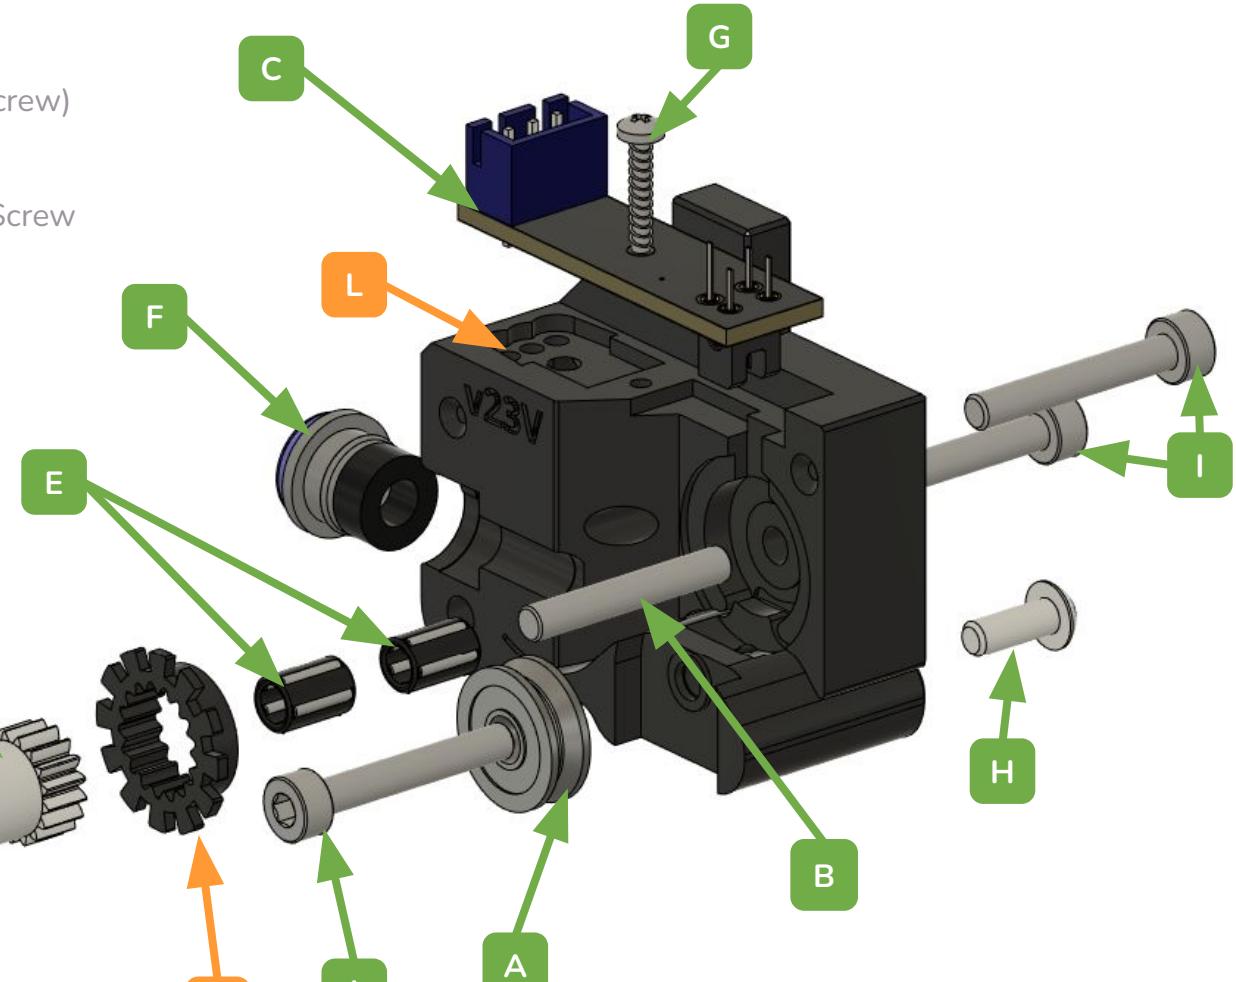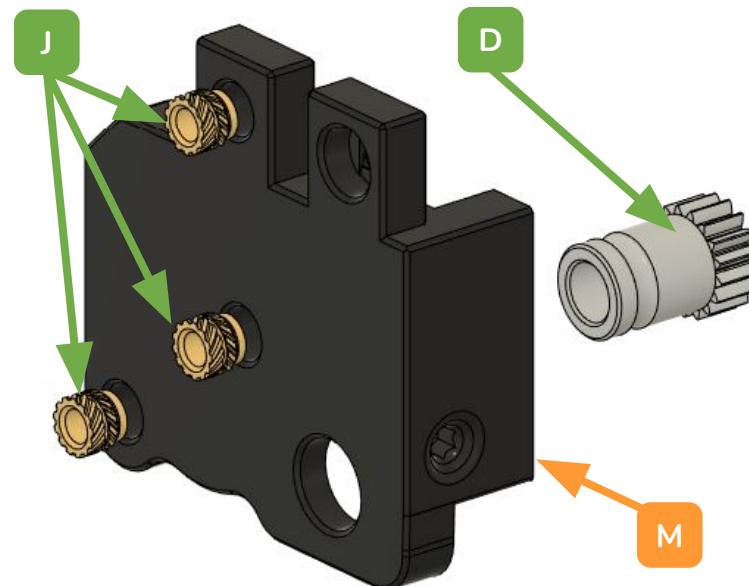

K
L
M
1x [black]_Encoder_Slotted_Wheel.stl
1X Encoder_Left.stl
1x Encoder_Right.stl

SELECTOR : ENCODER

ENCODER PREPARATION

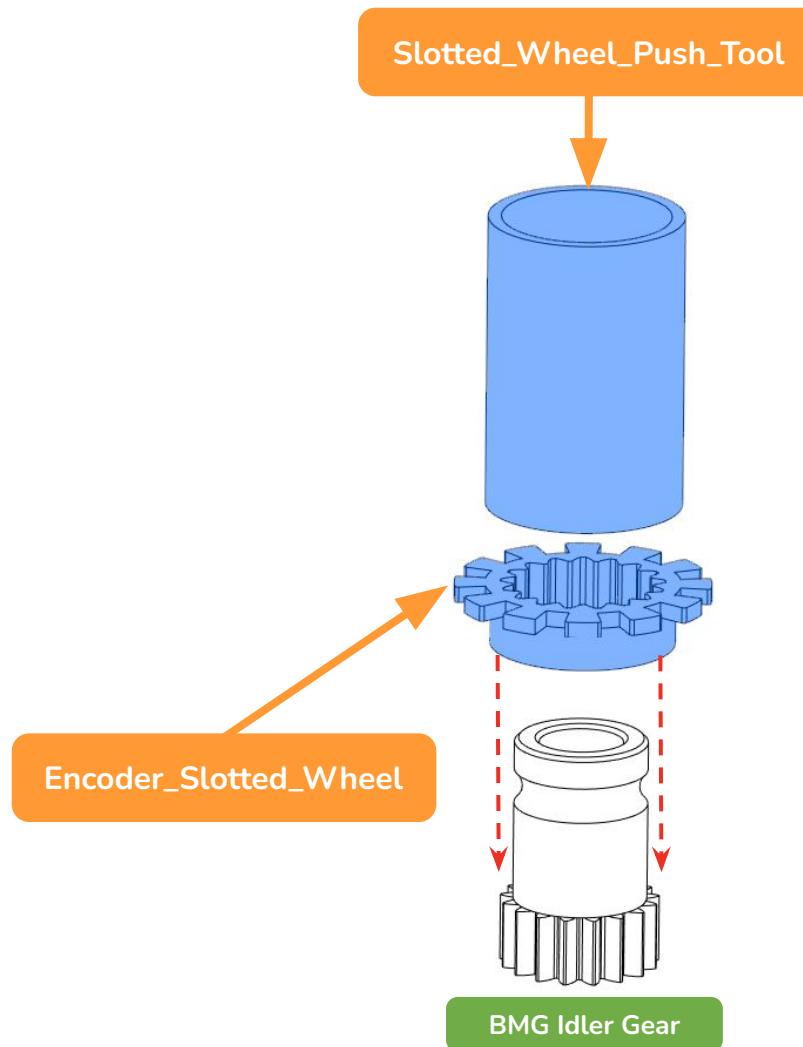

INSTALL ENCODER WHEEL

Before fitting the **Encoder_Slotted_Wheel** to the Bondtech gear, make sure the top surface of the wheel and its vanes are smooth and clean. If there are “blobs” from printing, carefully sand or trim them so they are flush.

Place the Bondtech gear as shown in the diagram on a hard surface and slide the **Encoder_Slotted_Wheel** onto the gear until it reaches the teeth.

Use the **Slotted_Wheel_Push_Tool** to **gently** push the **Encoder_Slotted_Wheel** into place until it is flush with the end of the gear using a small hammer.

The **Encoder_Slotted_Wheel** should fit firmly on the Bondtech gear. Make sure its undamaged, isn't cracked and doesn't move easily.

NOTE The **Encoder_Slotted_Wheel** must be printed in black to prevent light shining through the vanes of the wheel to avoid false readings!

SELECTOR : ENCODER

V623ZZ VS MR623ZZ BEARINGS

There are two versions of the Encoder:


One using the rarer, but better-performing V623ZZ bearing. This is our default, preferred option.

One using the much more easily-sourced MR623ZZ flat bearing. These files are in the folder:

ERCF_v2 / Stls / Selector /
Encoder_Flat_Bearing_Option

We will show the V623ZZ version of the Encoder. Installation is virtually identical for the MR623ZZ option.

ENCODER PREPARATION

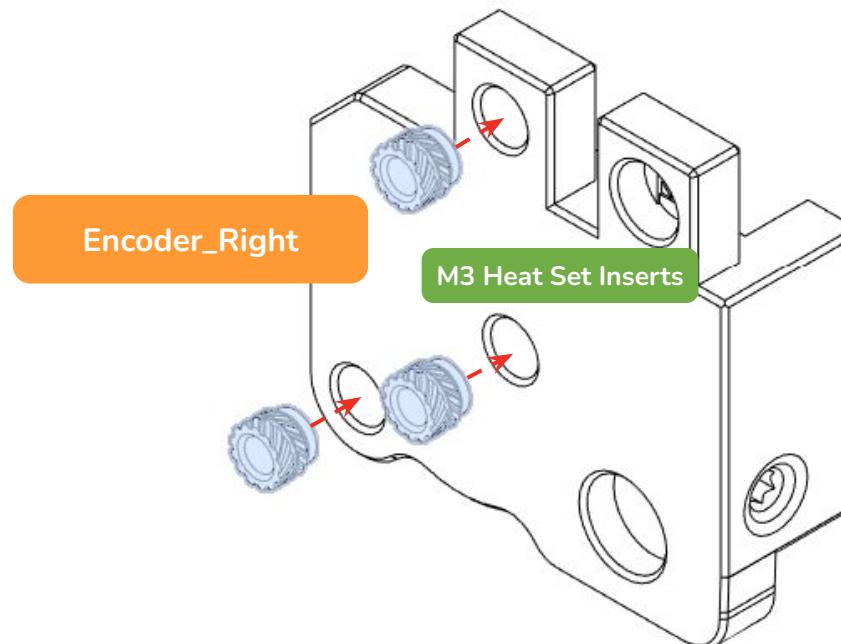


HEAT SET INSERTS

The list of pages with heat set inserts is on [Page 15](#).

SELECTOR : ENCODER

ENCODER ASSEMBLY

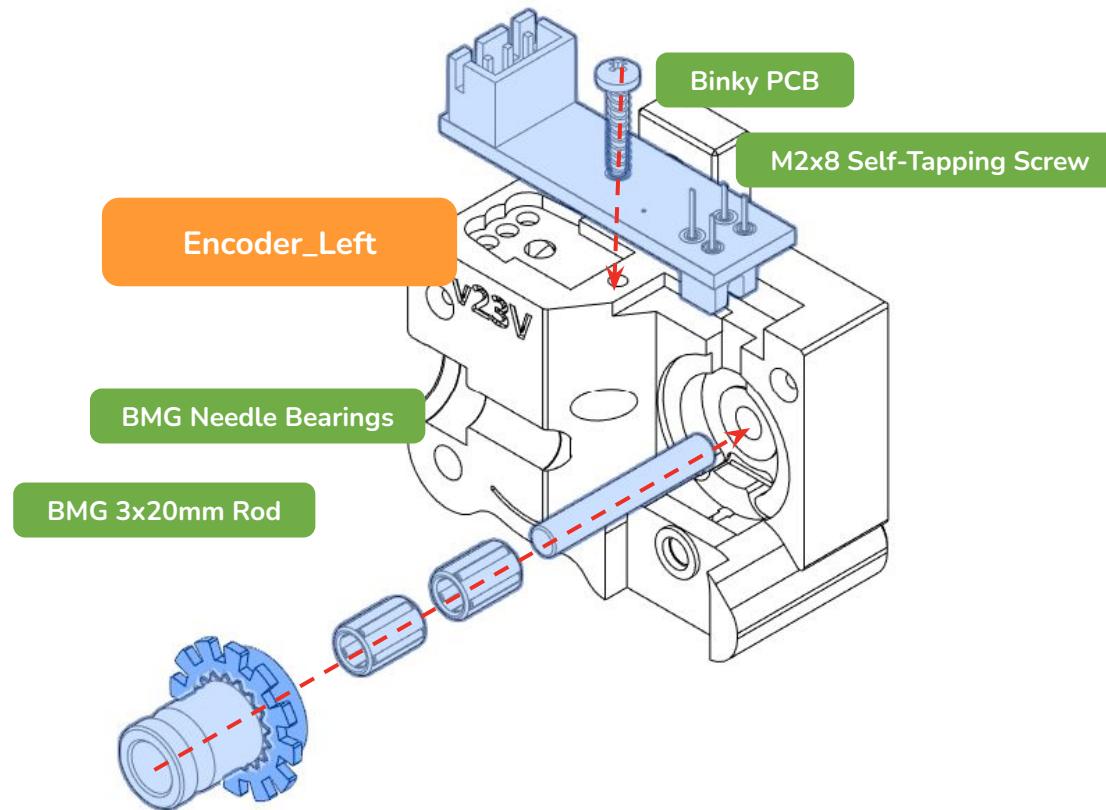


ASSEMBLY

Start by fitting the metal rod into **Encoder_Right**. Next, slide on the needle bearings and the Bondtech idler gear. Add a small dab of grease (EP1/EP2 or Superlube) on the bearings for lubrication. Slide the gear / slotted wheel assembly into place.

The slotted wheel should sit almost flush with the housing but make sure it doesn't rub on the printed part.

Insert and secure the Binky PCB with an M2x8 or 10mm screw. The sensor should fit snugly in the cutout provided.

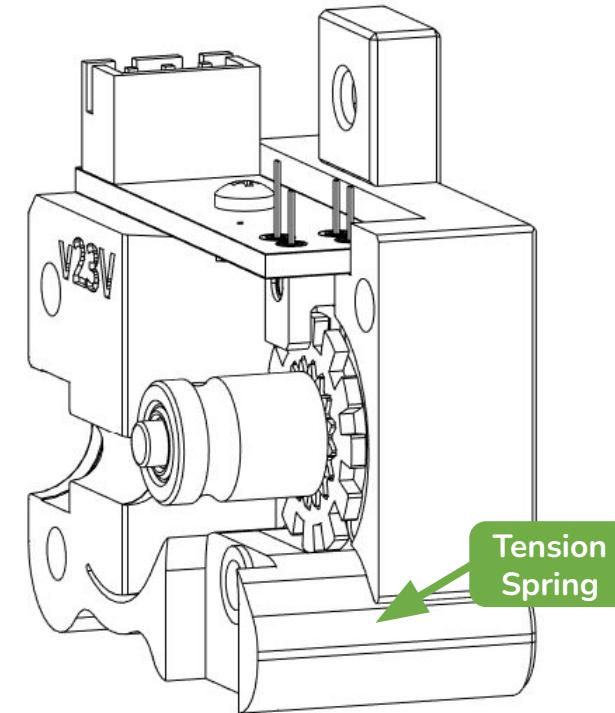


CHECK POINT

With the first half assembled, gently pull down and hold the Tension Spring to release the brake that prevents the encoder wheel from free spinning when filament is ejected.

The wheel should rotate easily and not rub on the Encoder housing or Binky optical sensor.

SELECTOR : ENCODER


ENCODER ASSEMBLY

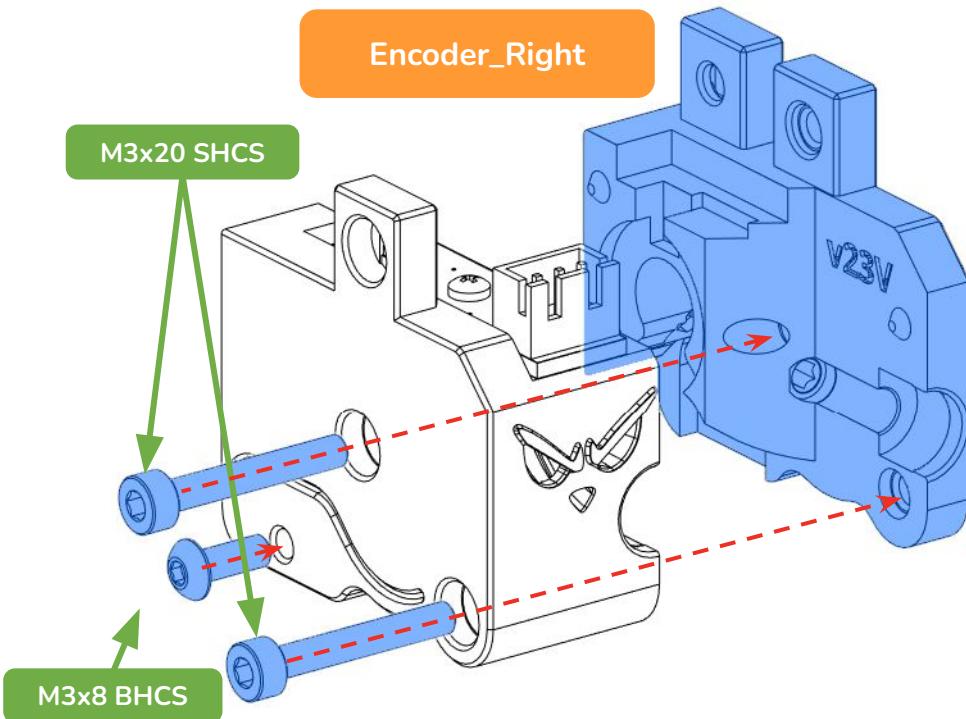

ASSEMBLY

Align the two halves of the encoder and press them together. Attach them loosely with two M3x20 SHCS screws.

Screw and tap the M3x8 SHCS into the plastic hole on the Tension Spring as a standoff for the homing endstop microswitch located in the gear housing.

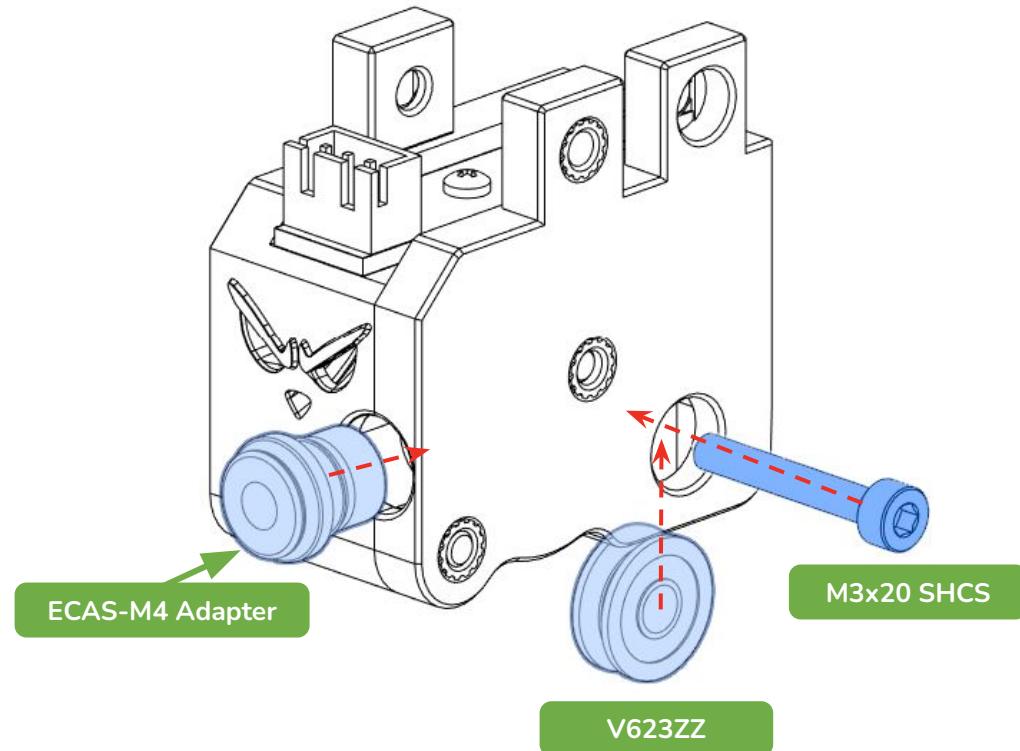

Insert the ECAS Bowden Collet from the back and tighten the two M3x20 SHSC screws you inserted earlier.


Slide the V623ZZ Filament Bearing in from the bottom and fasten with a M3x20 SHCS screw.

At this point use a small length of filament to verify everything runs smoothly and the [Encoder_Slotted_Wheel](#) doesn't rub on the Encoder body or Binky PCB Optical Sensor.

If you notice any issues, disassemble the Encoder & recheck. Adjust the position of the [Encoder_Slotted_Wheel](#), being careful not to damage it or its vanes.

SELECTOR

ENCODER INSTALLATION

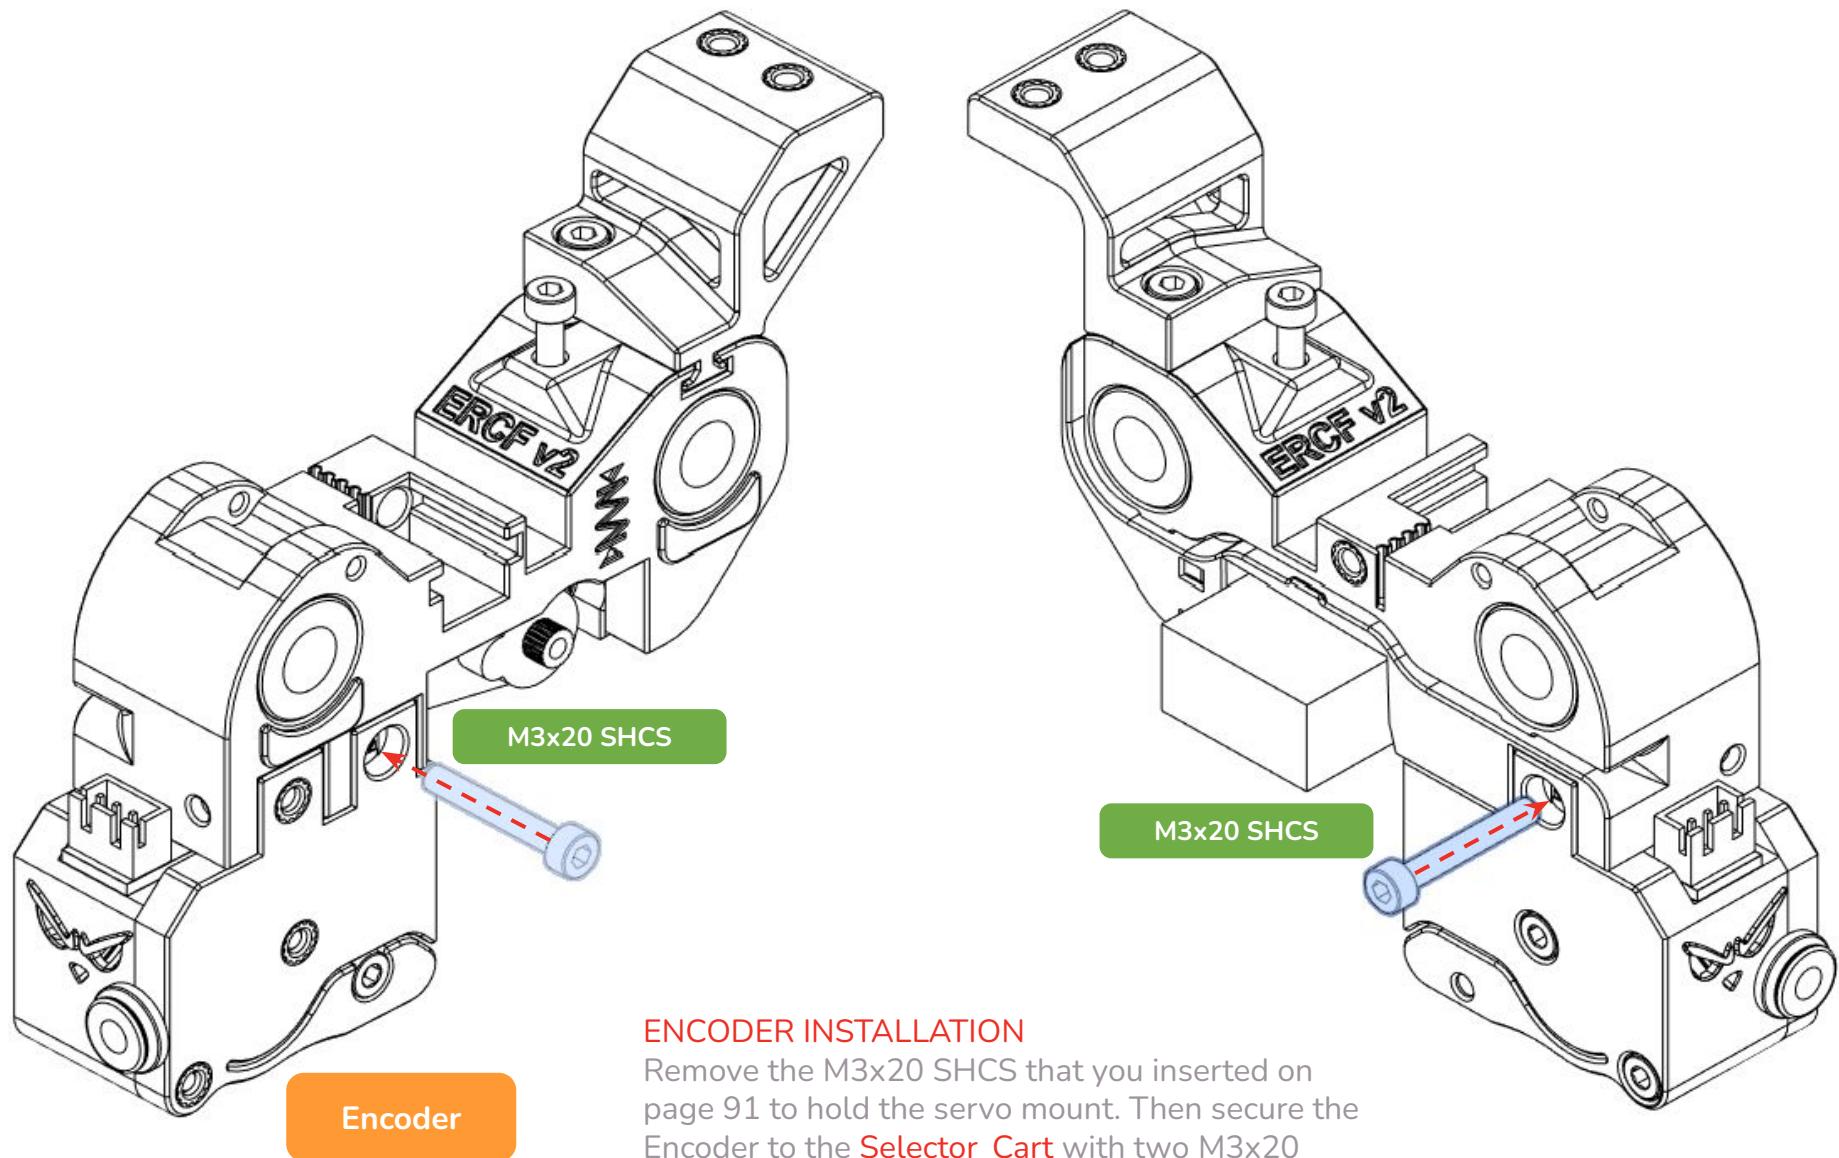


ENCODER INSTALLATION


Remove the M3x20 SHCS that you inserted on page 91 to hold the servo mount. Then secure the Encoder to the [Selector_Cart](#) with two M3x20 SHCS screws.

SELECTOR

DOOR AND BELT TENSIONER

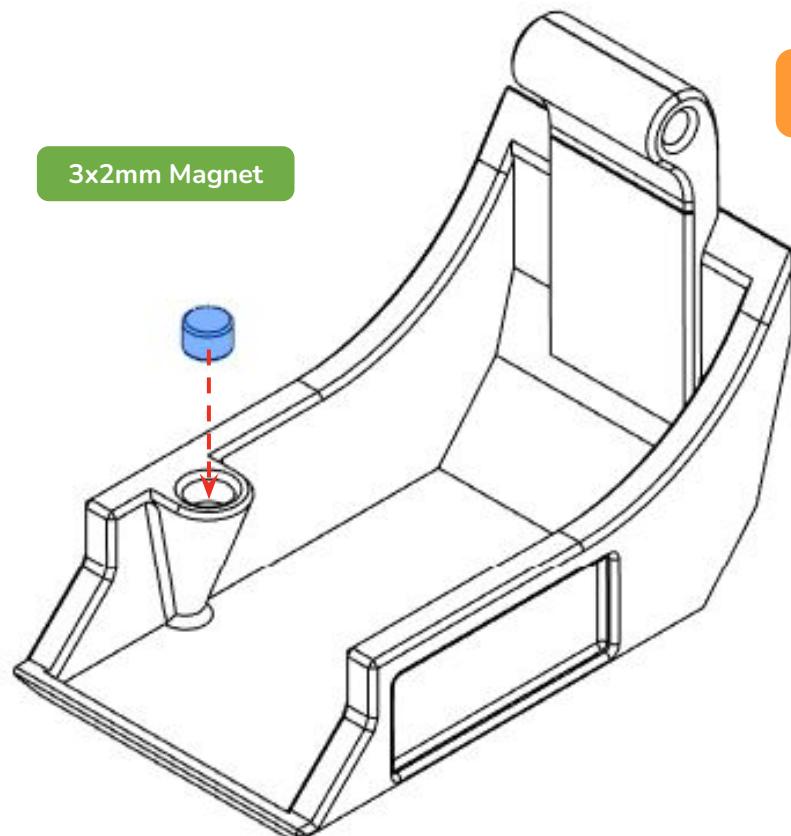

Selector_Door

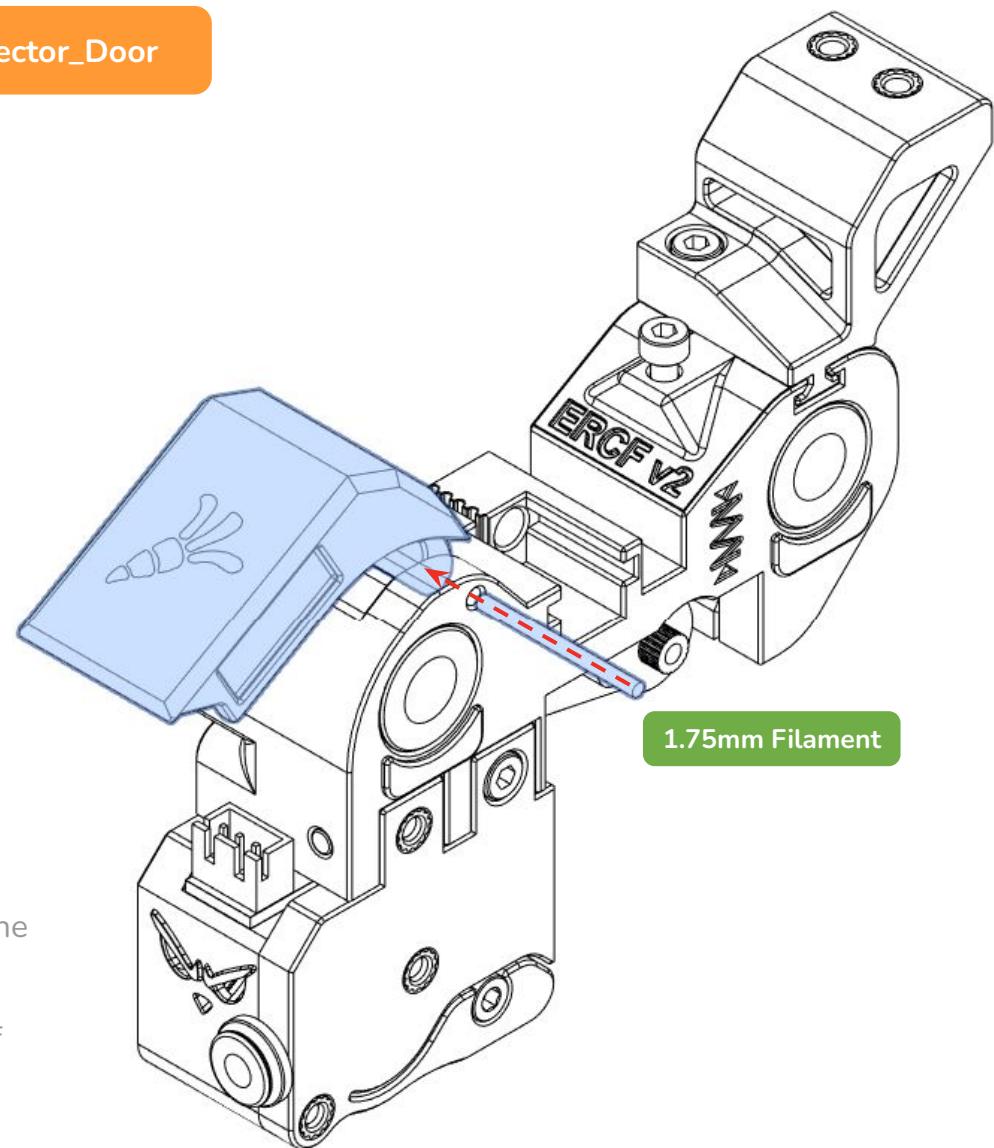

1.75mm Filament

DOOR INSTALLATION

Add a drop of CA glue and install the 3x2mm magnet into the door recess so that it attracts the door as a magnetic latch.


Attach the **Selector_Door** to the **Selector_Cart** using piece of 1.75mm Accent filament & trim to length.

SELECTOR

DOOR AND BELT TENSIONER

TENSIONER INSTALLATION


Insert the *Belt_Tensioner* into the side of the Selector and fasten it with a M3x20 screw. We don't need to tighten it all the way yet.

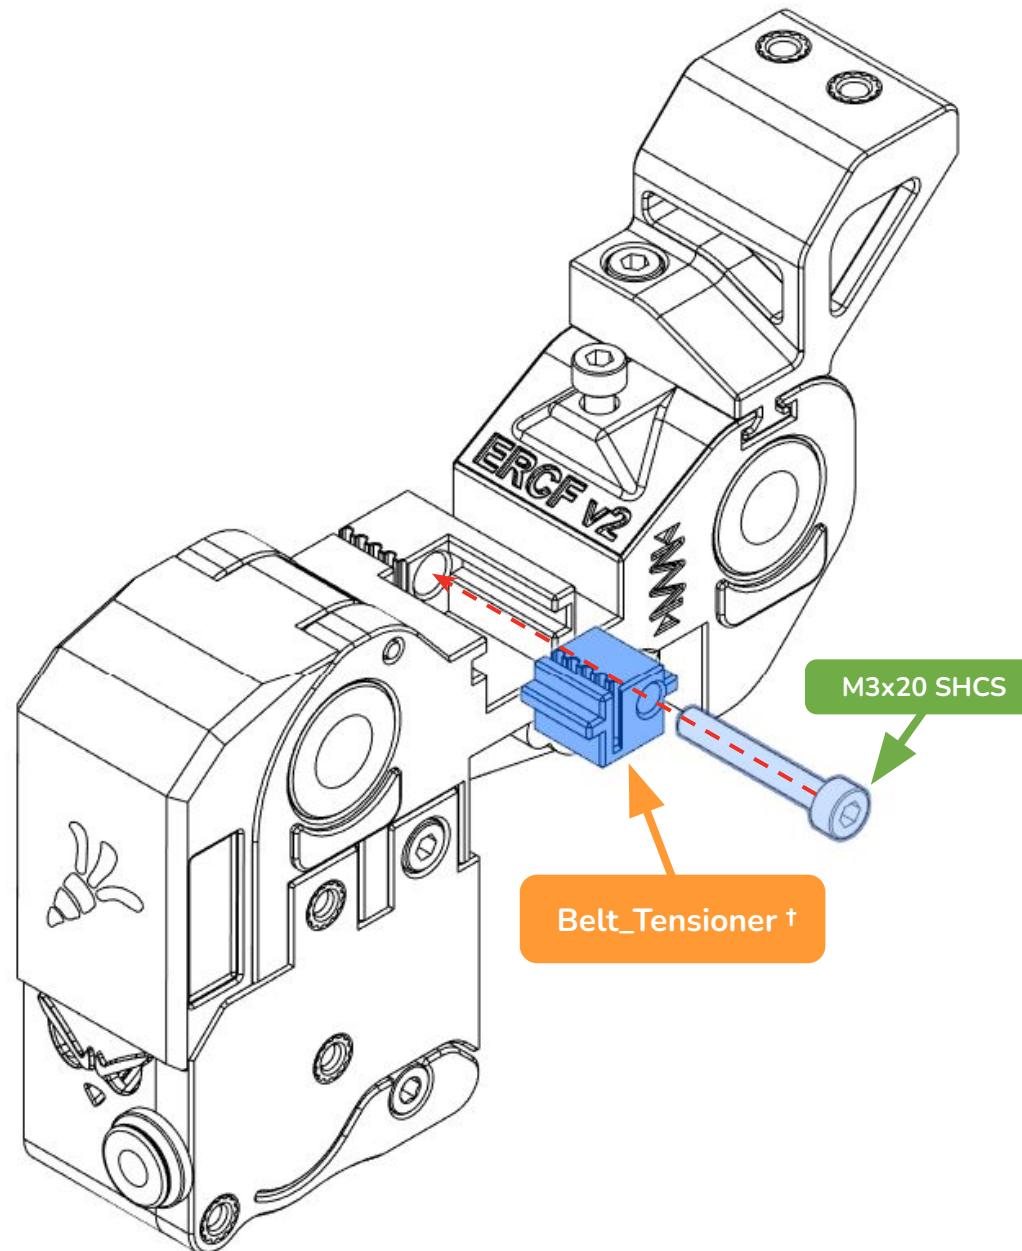

GEARBOX

The first 3D printer was invented in 1986 by Chuck Hull, who called the process "stereolithography".



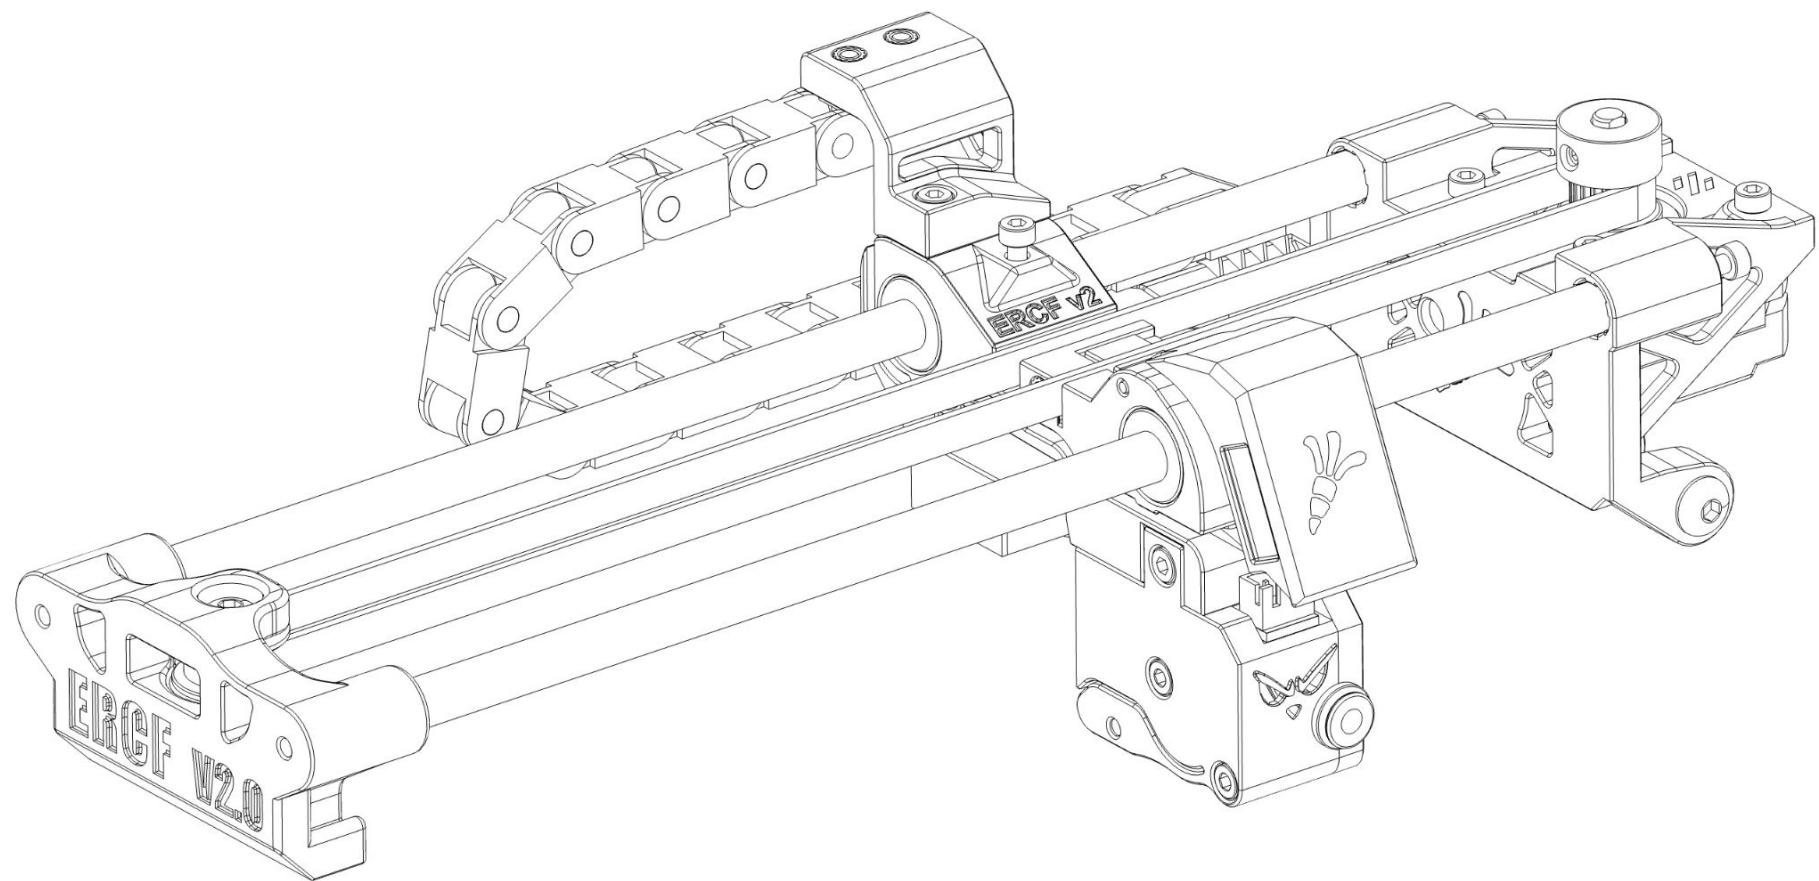


LINEAR AXIS

LINEAR AXIS HINGE EXPLODED VIEW

LINEAR AXIS HINGE SUB-BOM

A	2x 8mm rods
B	1x GT2 20T pulley
C	6x M3 Heatset Inserts
D	6x M3x8mm SHCS
E	2x M3x12mm SHCS
F	1x M5x30mm BHCS
G	1x M5 Nylock nuts
H	1x NEMA17 Pancake Motor

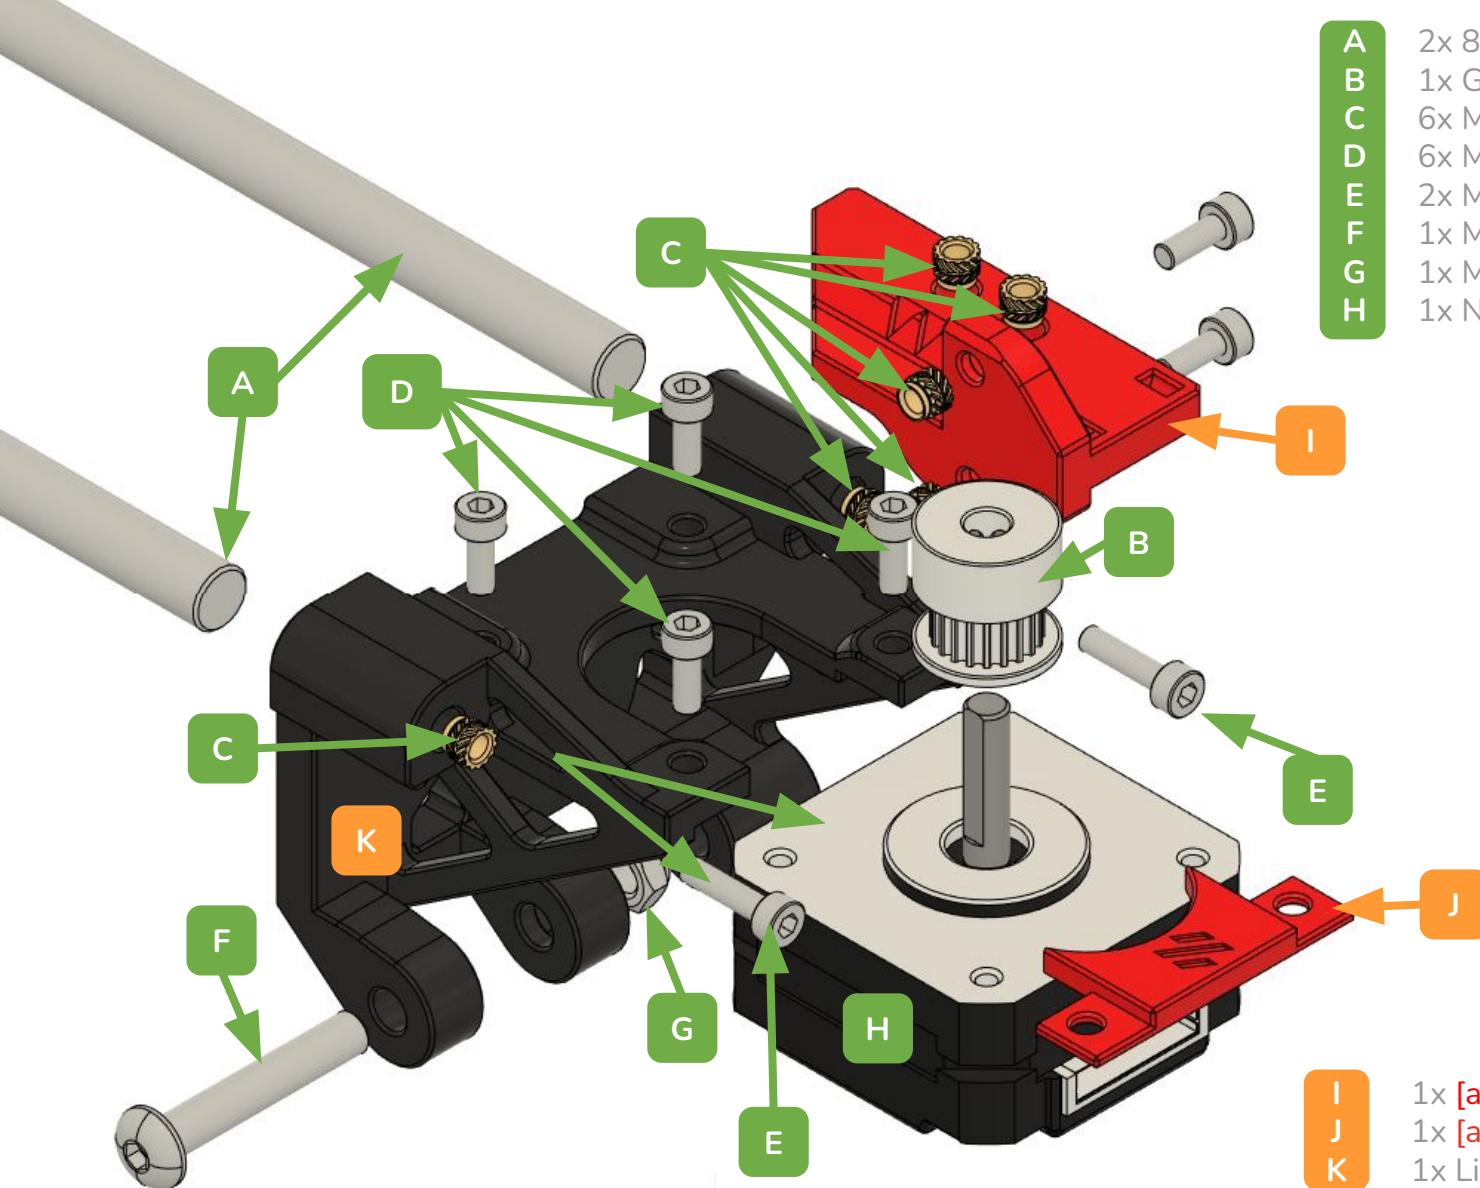


1x [a]_Drag_Chain_Anchor_Bottom.stl †
1x [a]_Motor_Lock.stl †
1x Linear_Axis_Selector_Motor_Support.stl

LINEAR AXIS

SELECTOR MOTOR SUPPORT


HEAT SET INSERTS

The list of pages with heat set inserts is on [Page 15](#).

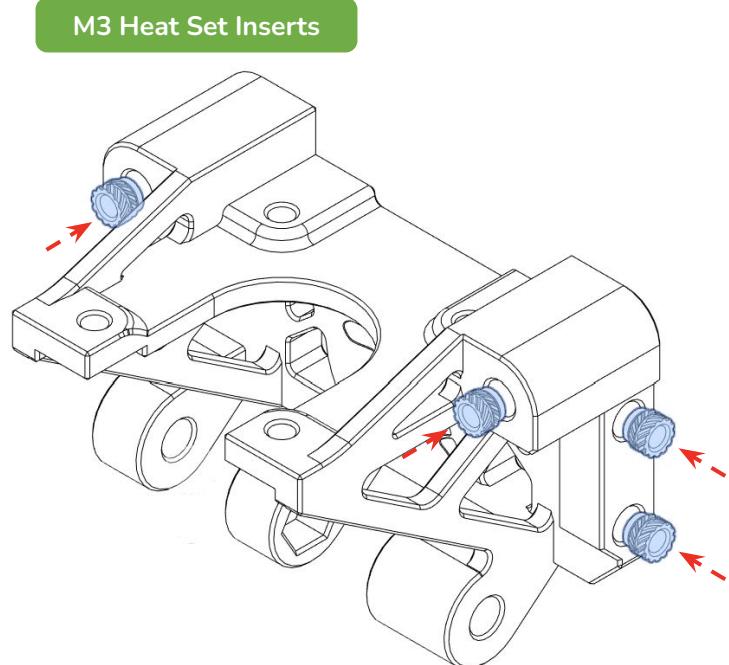


Linear_Axis_Selector_Motor_Support

[a]_Drag_Chain_Anchor_Bottom †

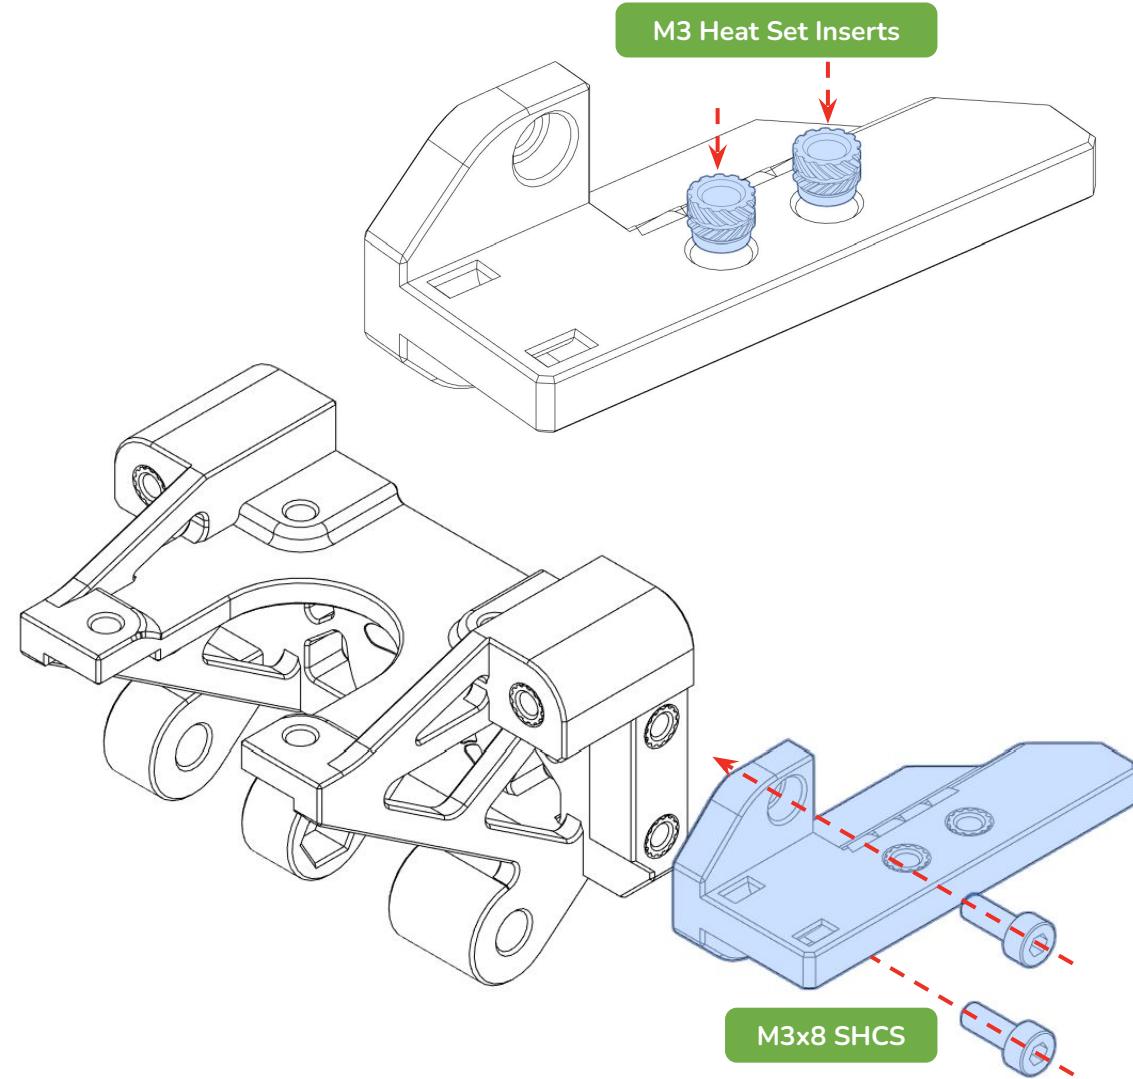

LINEAR AXIS

SELECTOR MOTOR SUPPORT

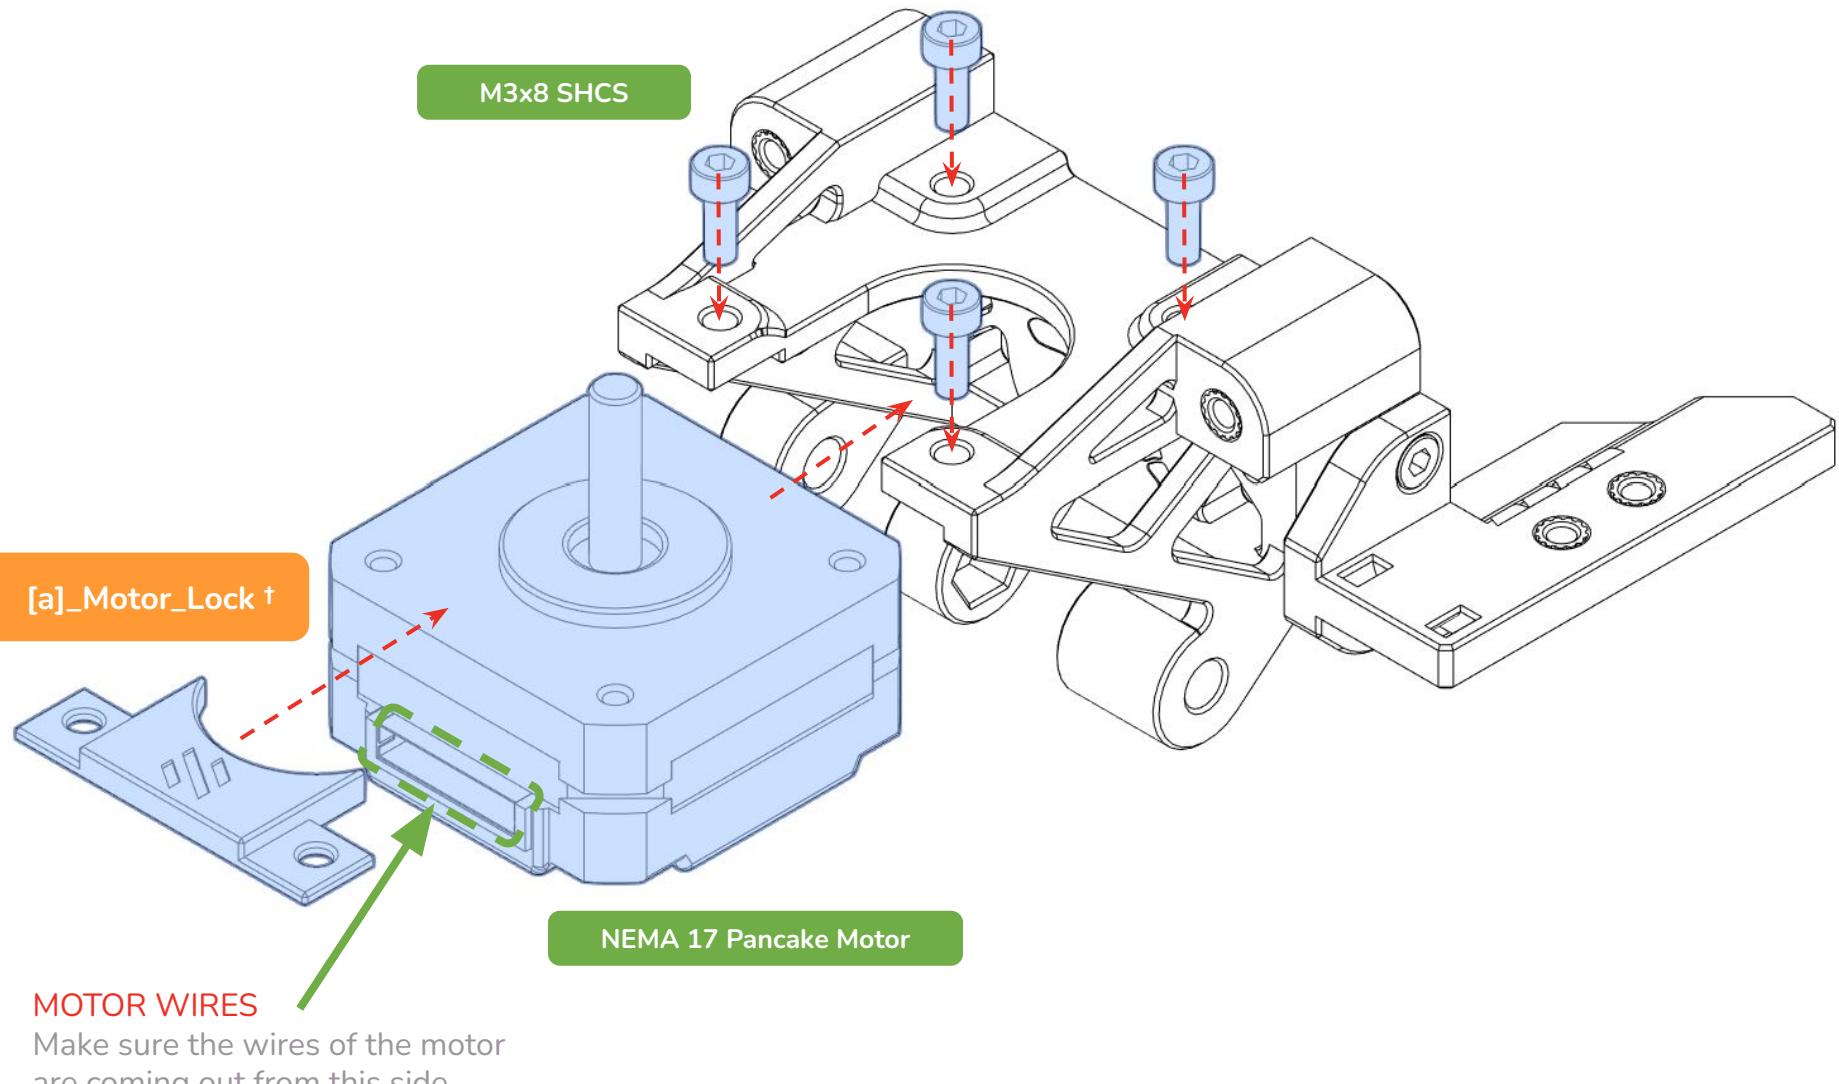

Make sure the wires of the motor
are coming out from this side.


LINEAR AXIS

LINEAR AXIS IDLER SUB-BOM

A
B
C


- 1x GT2 20T toothed idler
- 1x M5x16mm BHCS
- 1x M5 Nylock nuts

LINEAR AXIS IDLER EXPLODED VIEW

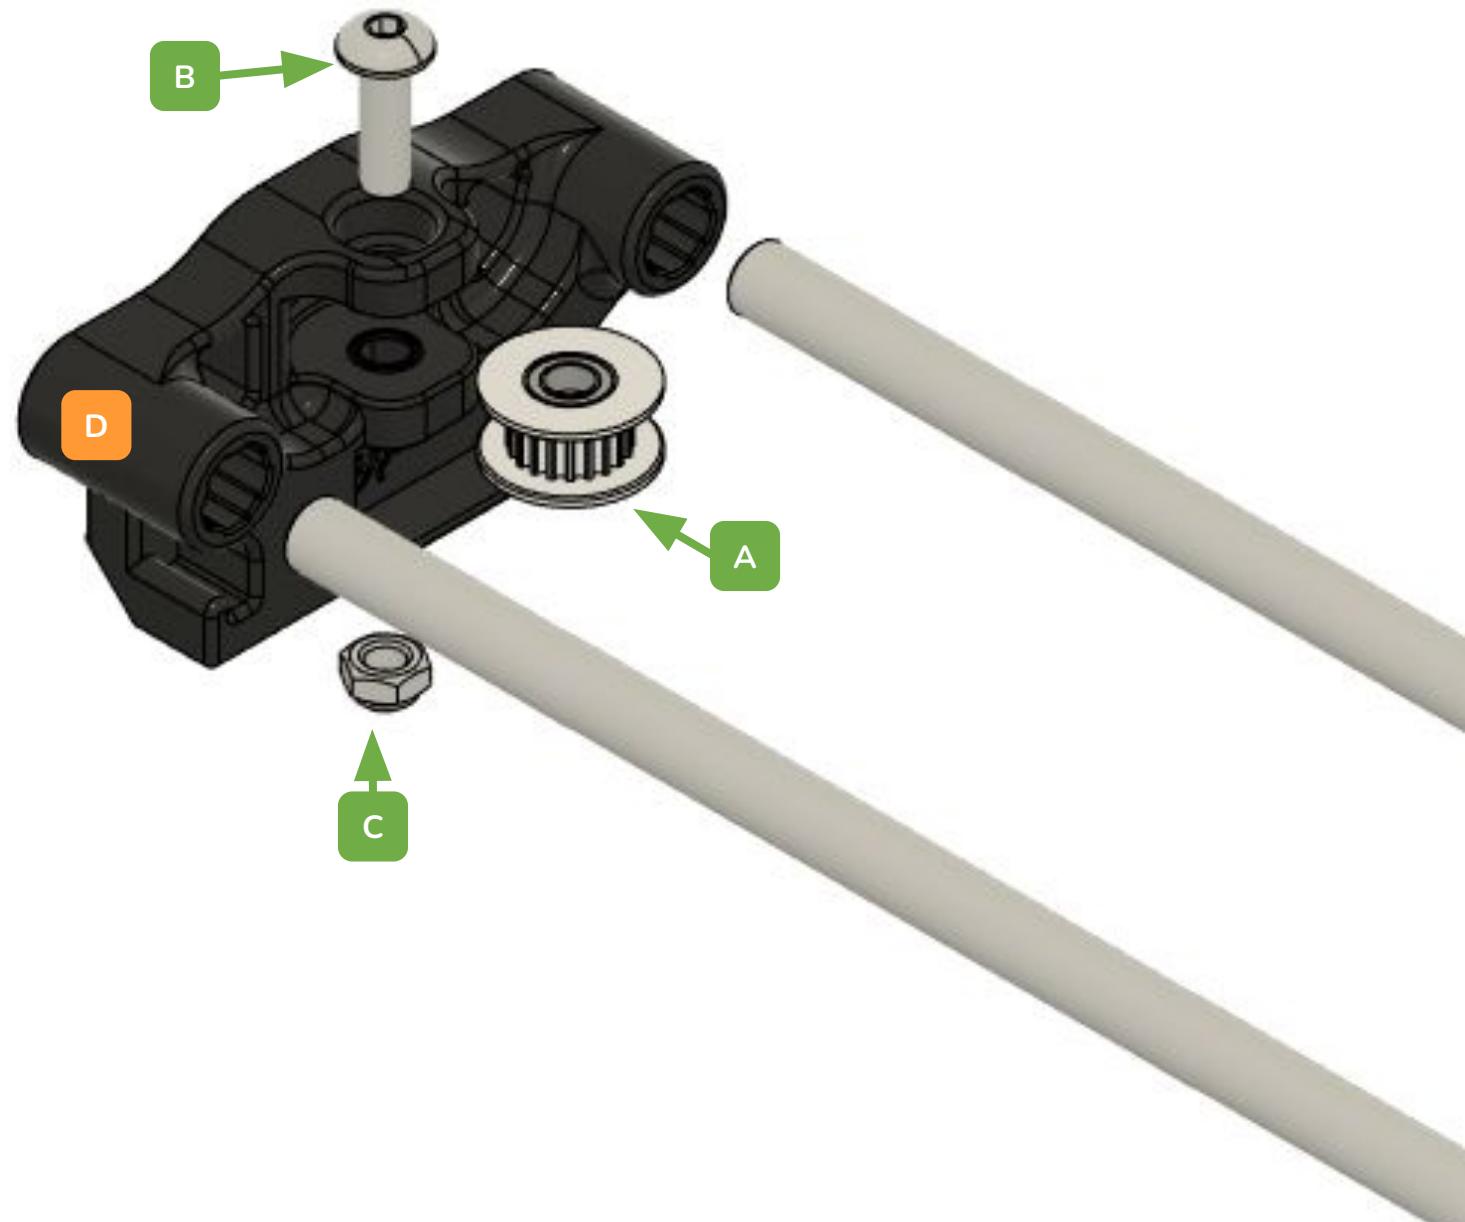


LINEAR AXIS

IDLER BLOCK

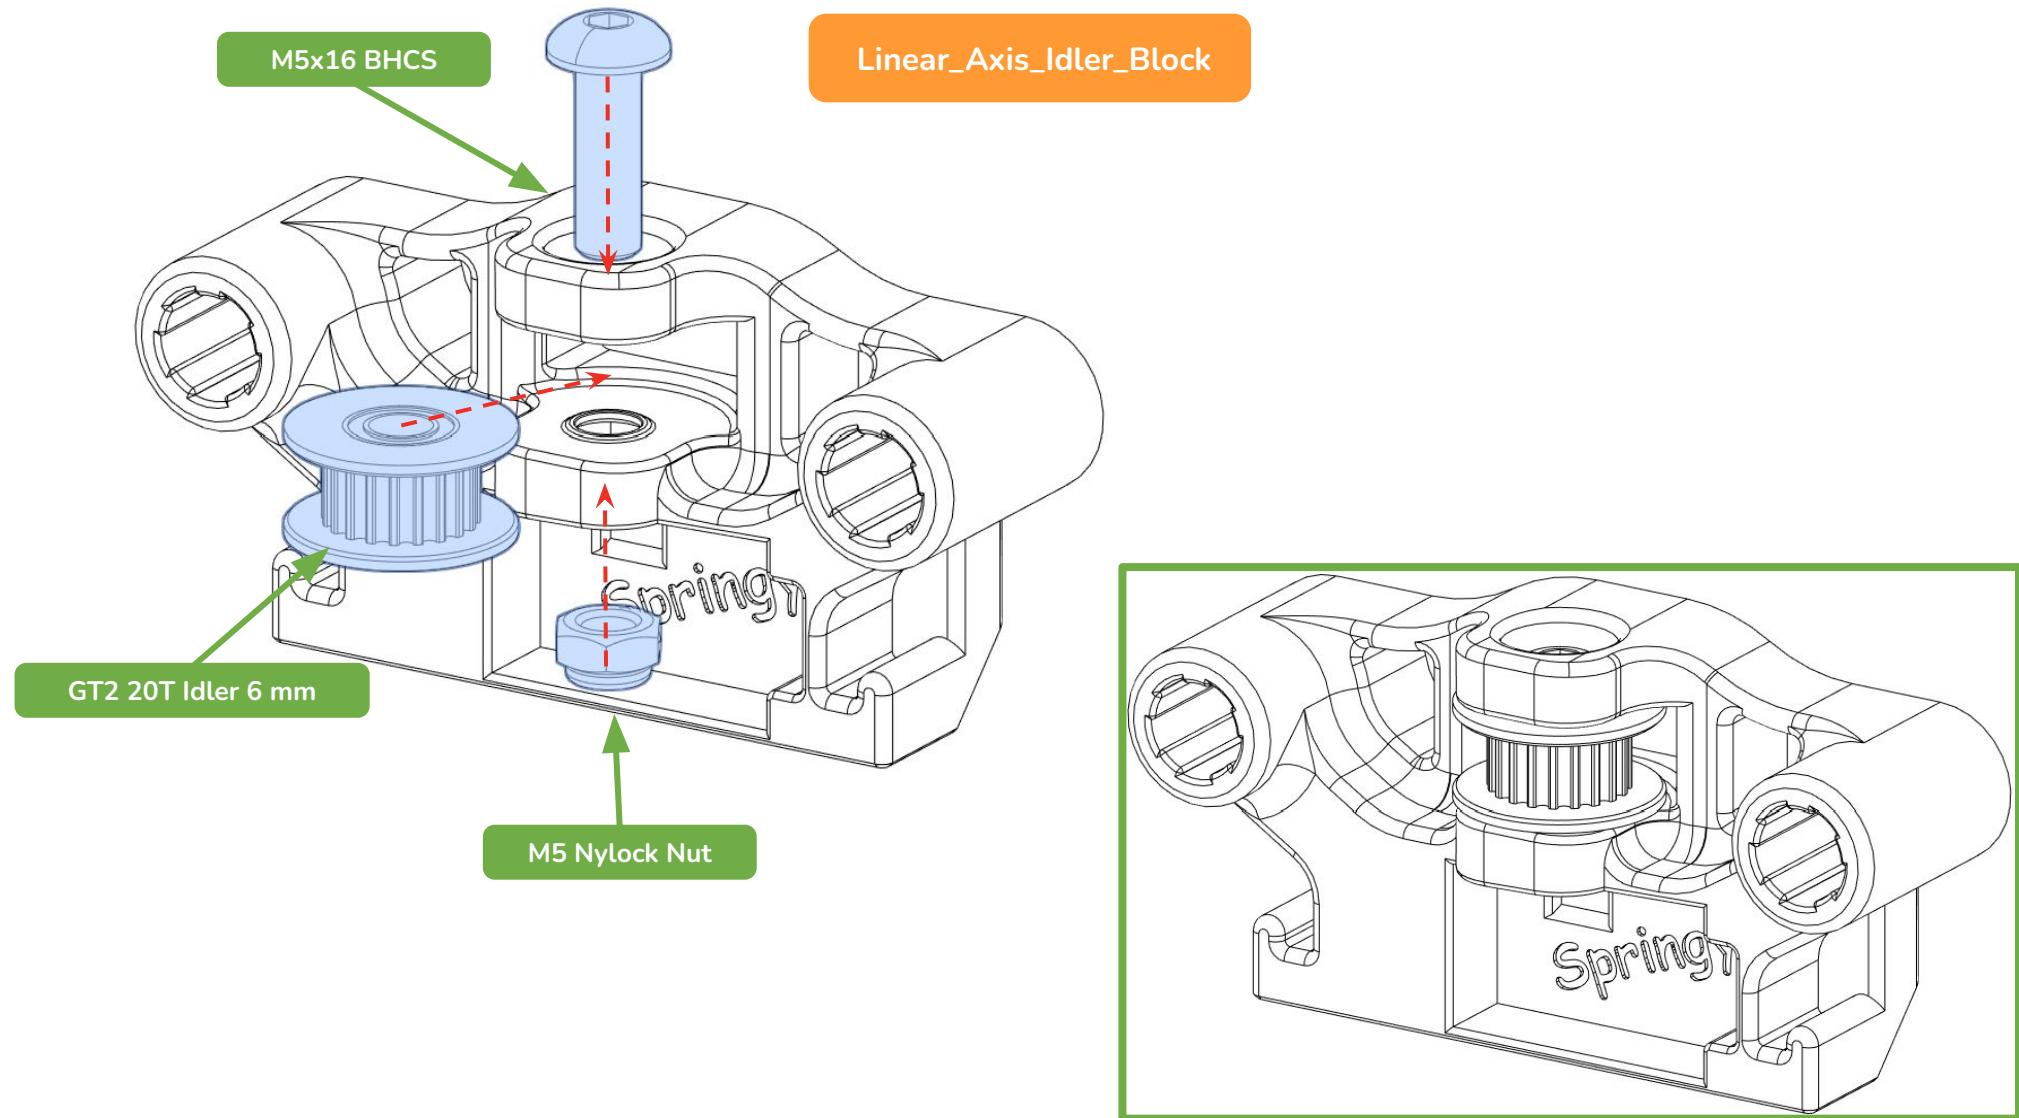

LINEAR AXIS

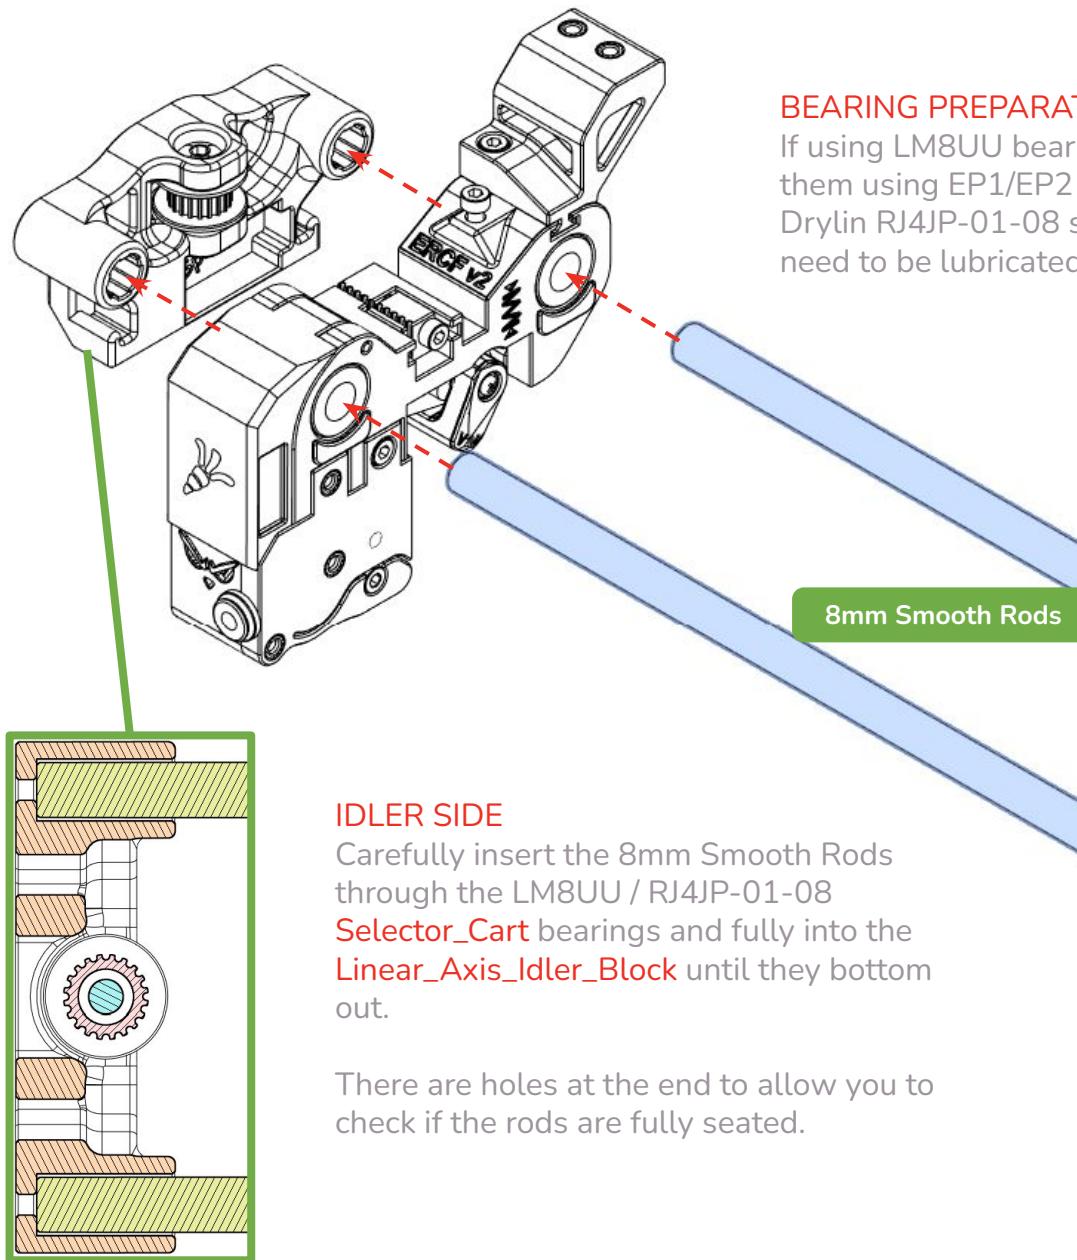

AXIS ASSEMBLY


BEARING PREPARATION

If using LM8UU bearings, lightly grease them using EP1/EP2 or Superlube grease. Drylin RJ4JP-01-08 style bearings do not need to be lubricated.

MOTOR SIDE


Don't fully insert the rods on the motor side for now, set them in a central position and just get the 2 M3x12 SHCS screws to contact.

Add the GT2 pulley and snug the grub screw. We will adjust soon.

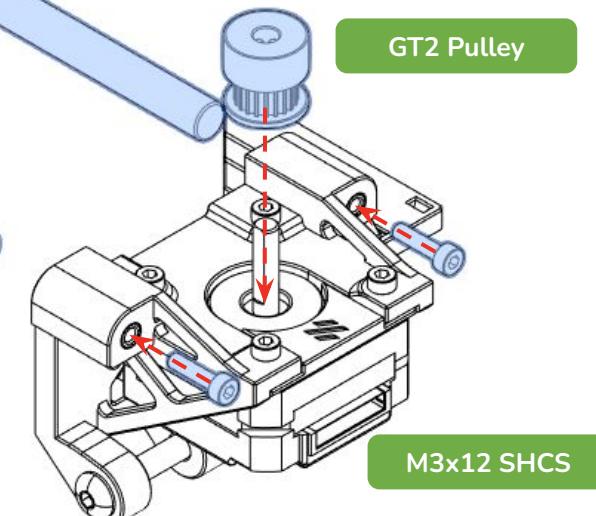

LINEAR AXIS


PULLEY AND BELT INSTALLATION

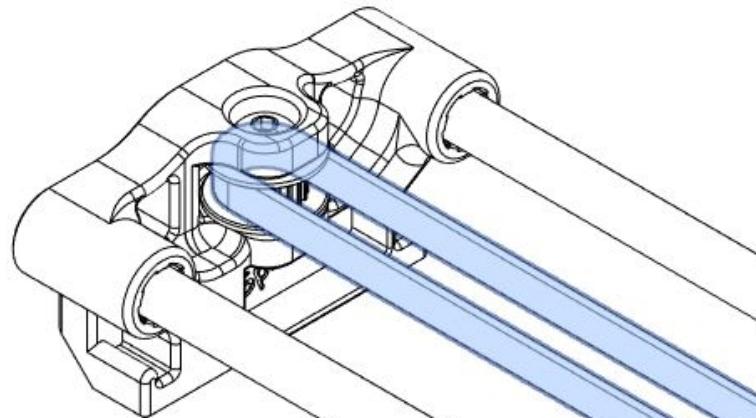

Channels	Approx Belt Length (mm)
N	165 + 46N
4	349
5	395
6	441
7	487
8	533
9	579
10	625
11	671
12	717
13	763
14	809
15	855

BELT INSTALLATION

Install the pulley and run the belt clockwise from the **Selector_Cart**, around the Idler, back across to the Selector Motor, and back to the **Selector_Cart**. Mark the belt length with a paint pen or marker. Now measure an additional 10mm of length, and cut the belt to the new mark. This ensures room for adjustment in a later step.

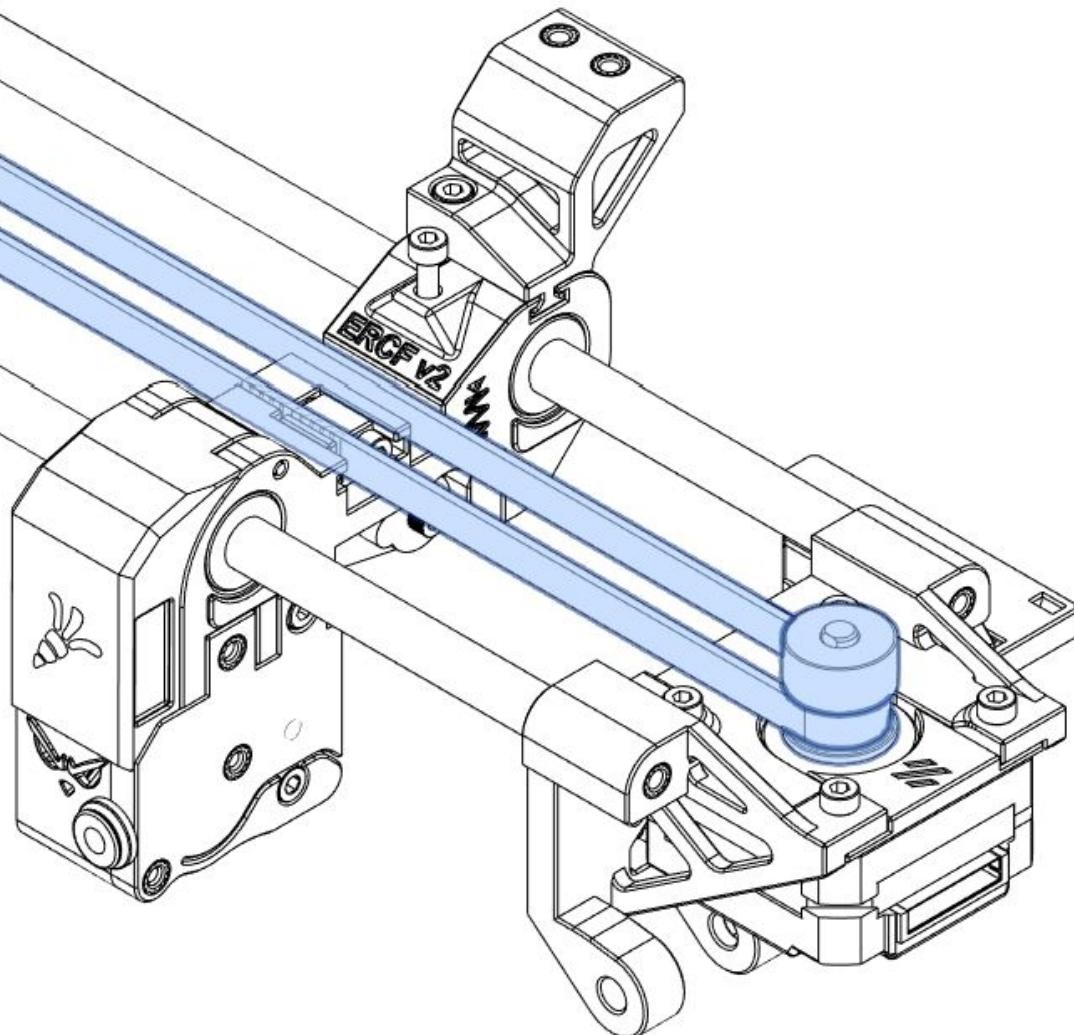

GEARBOX

ERCF in space?

The first 3D printer in space was installed on the International Space Station in 2014 and used by astronauts to create tools and parts, demonstrating the potential of this technology for long-duration space missions and even interplanetary travel.


FINAL ASSEMBLY

OVERVIEW




FINAL ASSEMBLY

OVERVIEW

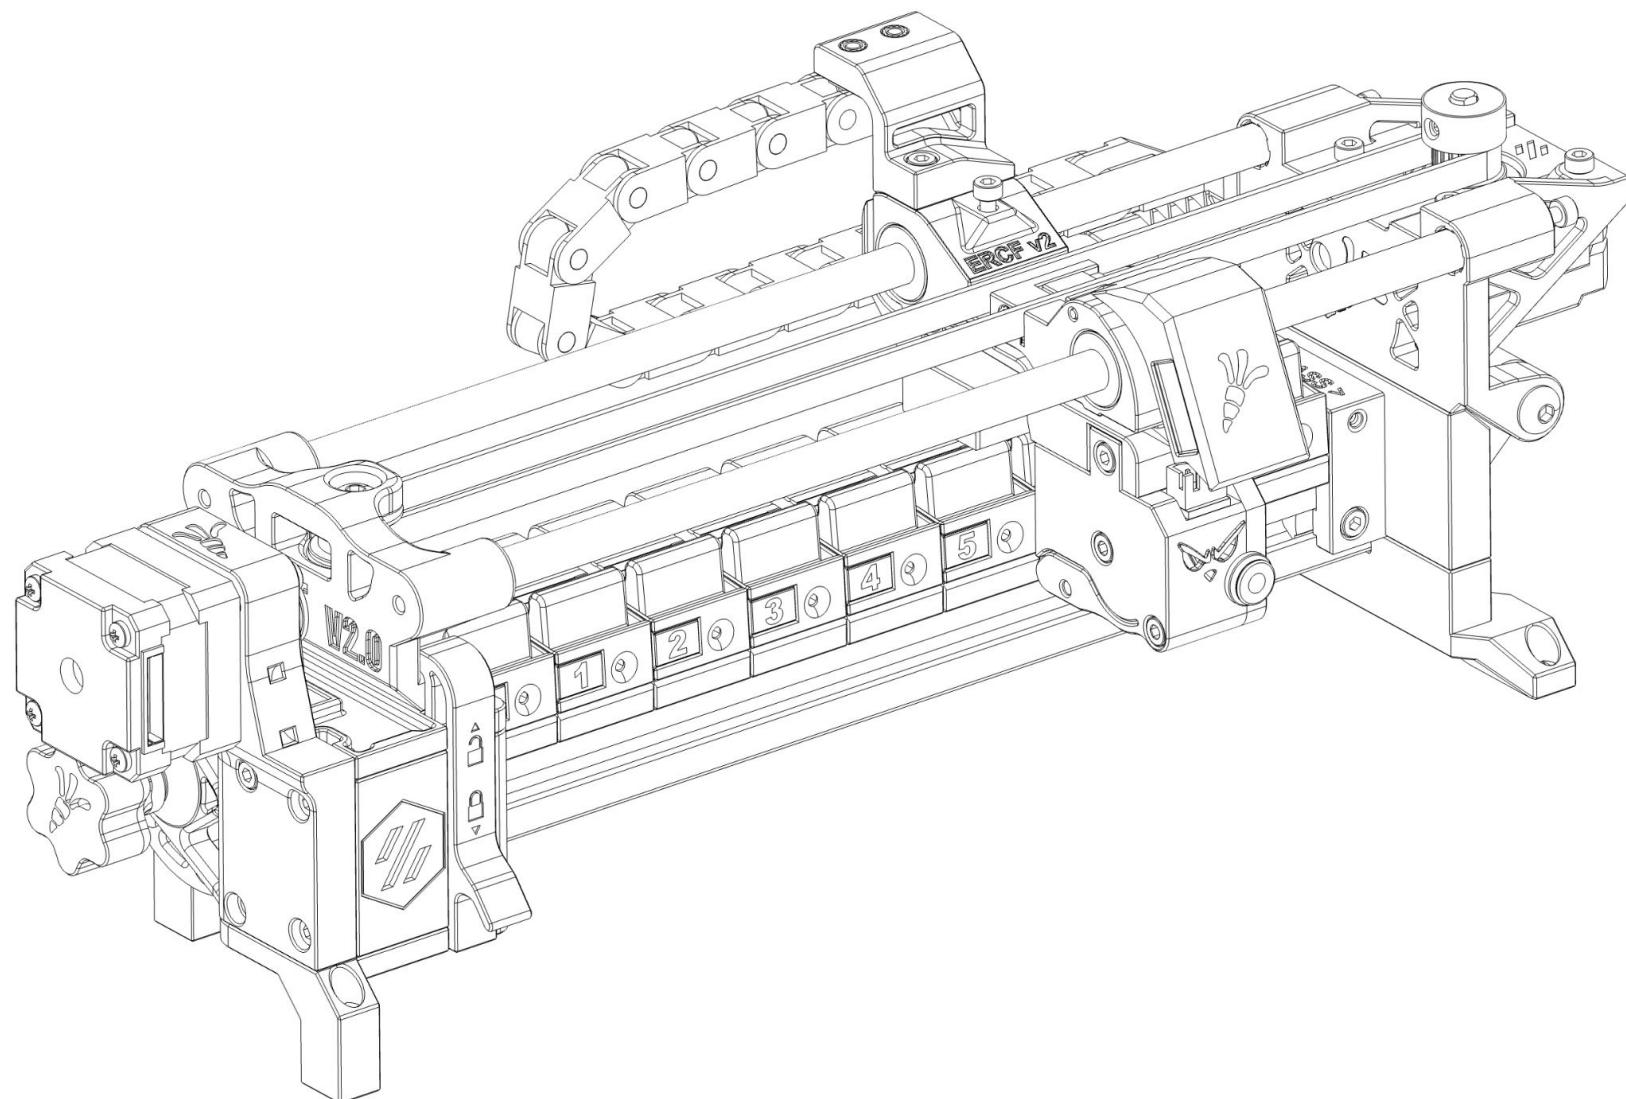


FINAL ASSEMBLY

EXPLODED VIEW

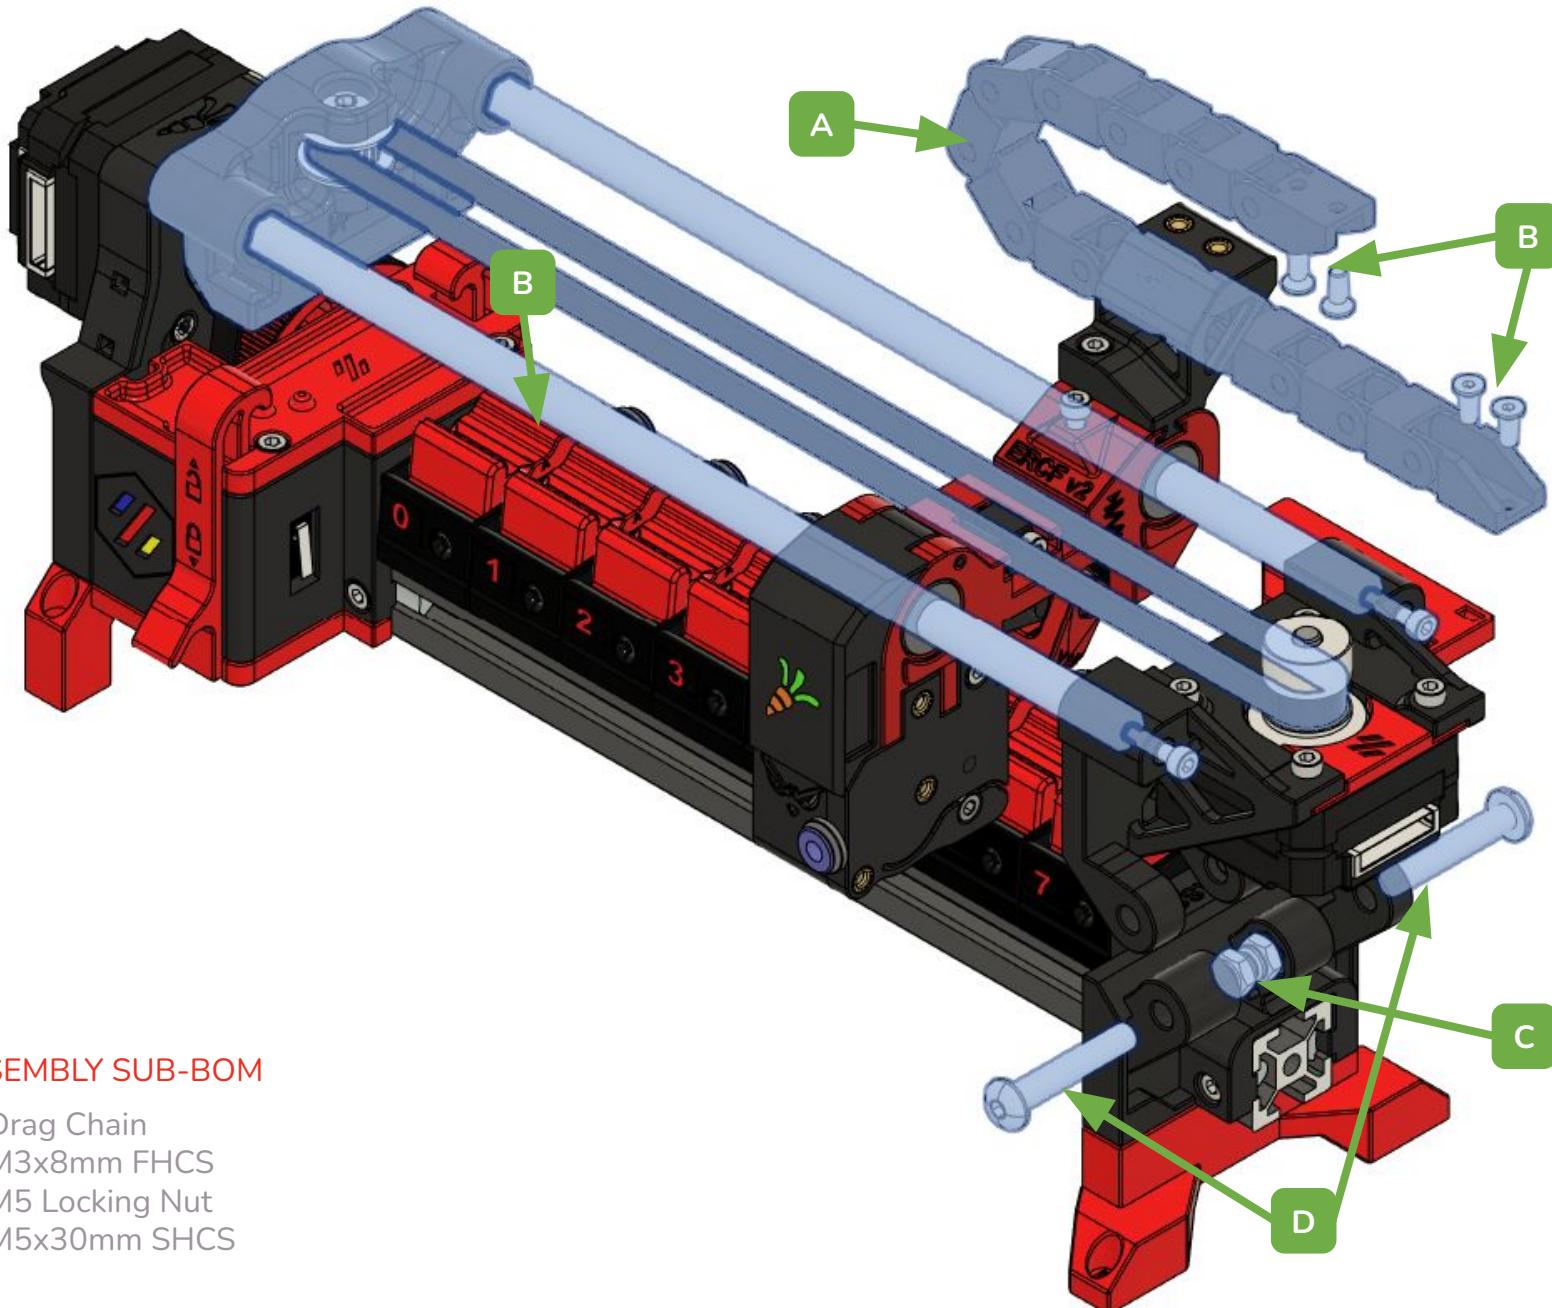


FINAL ASSEMBLY

ADDING THE LOCKING NUTS

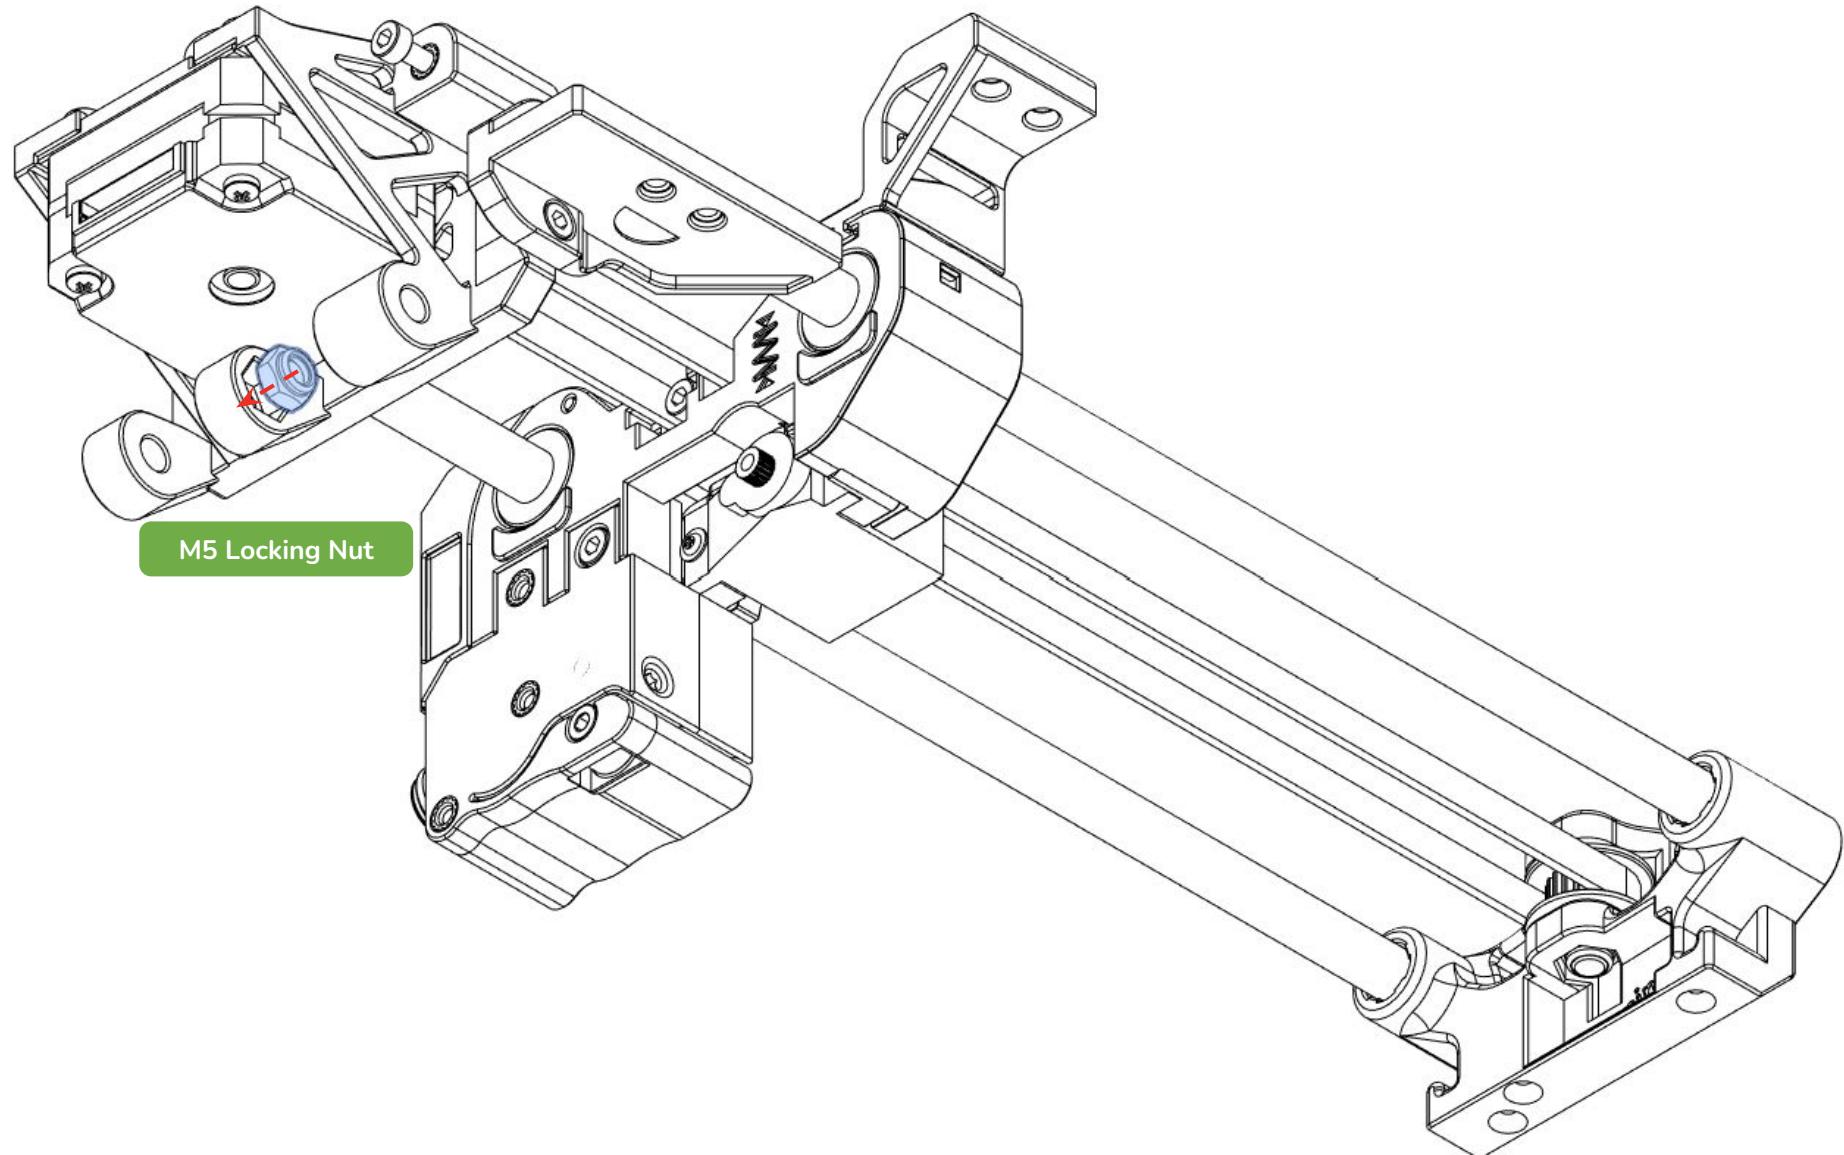


FINAL ASSEMBLY

ADDING THE LOCKING NUTS

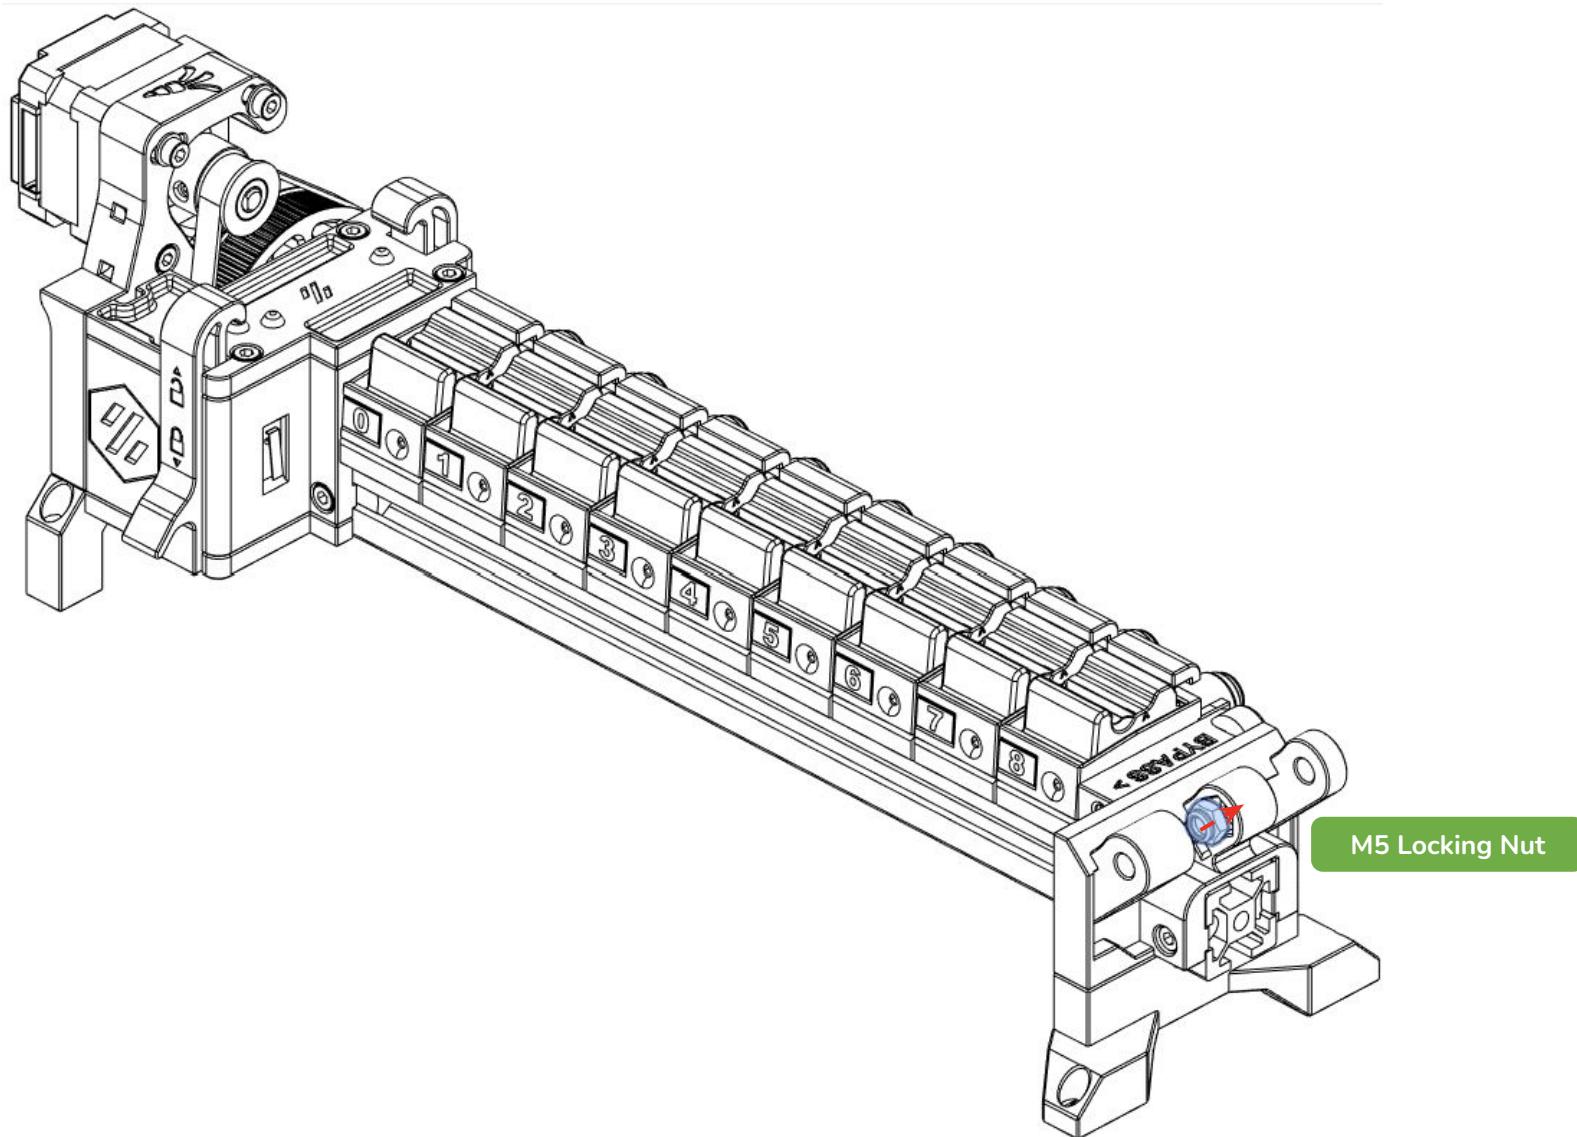


FINAL ASSEMBLY

JOINING THE TWO BLOCKS

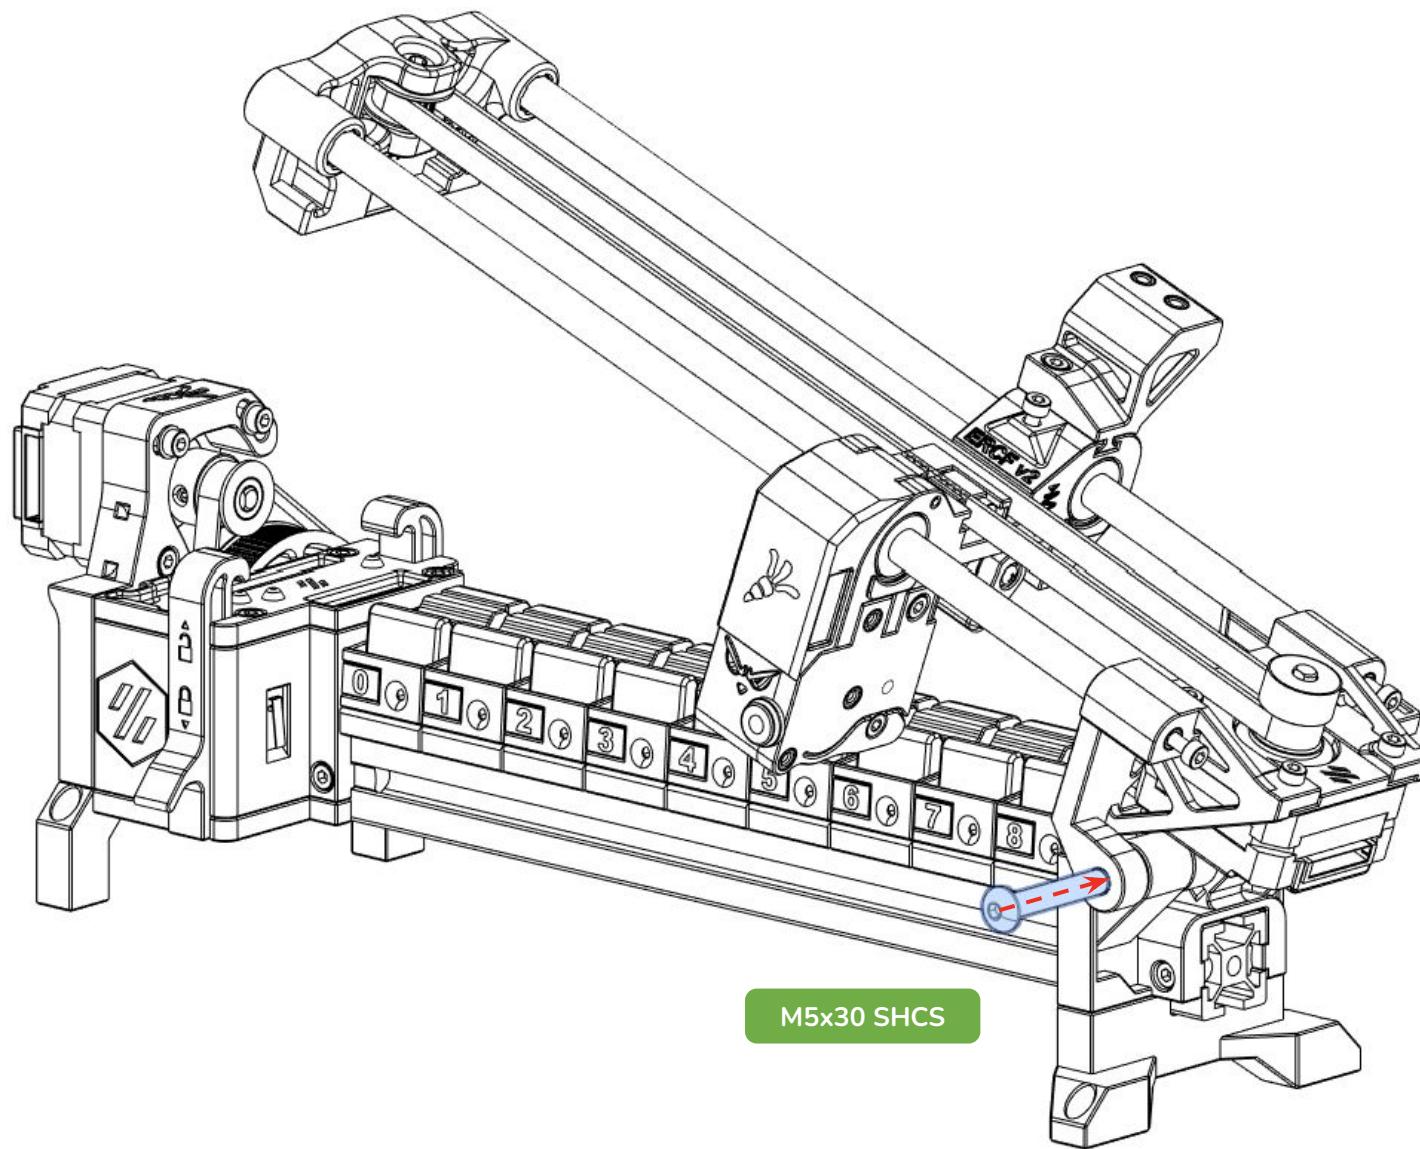

FINAL ASSEMBLY

JOINING THE TWO BLOCKS

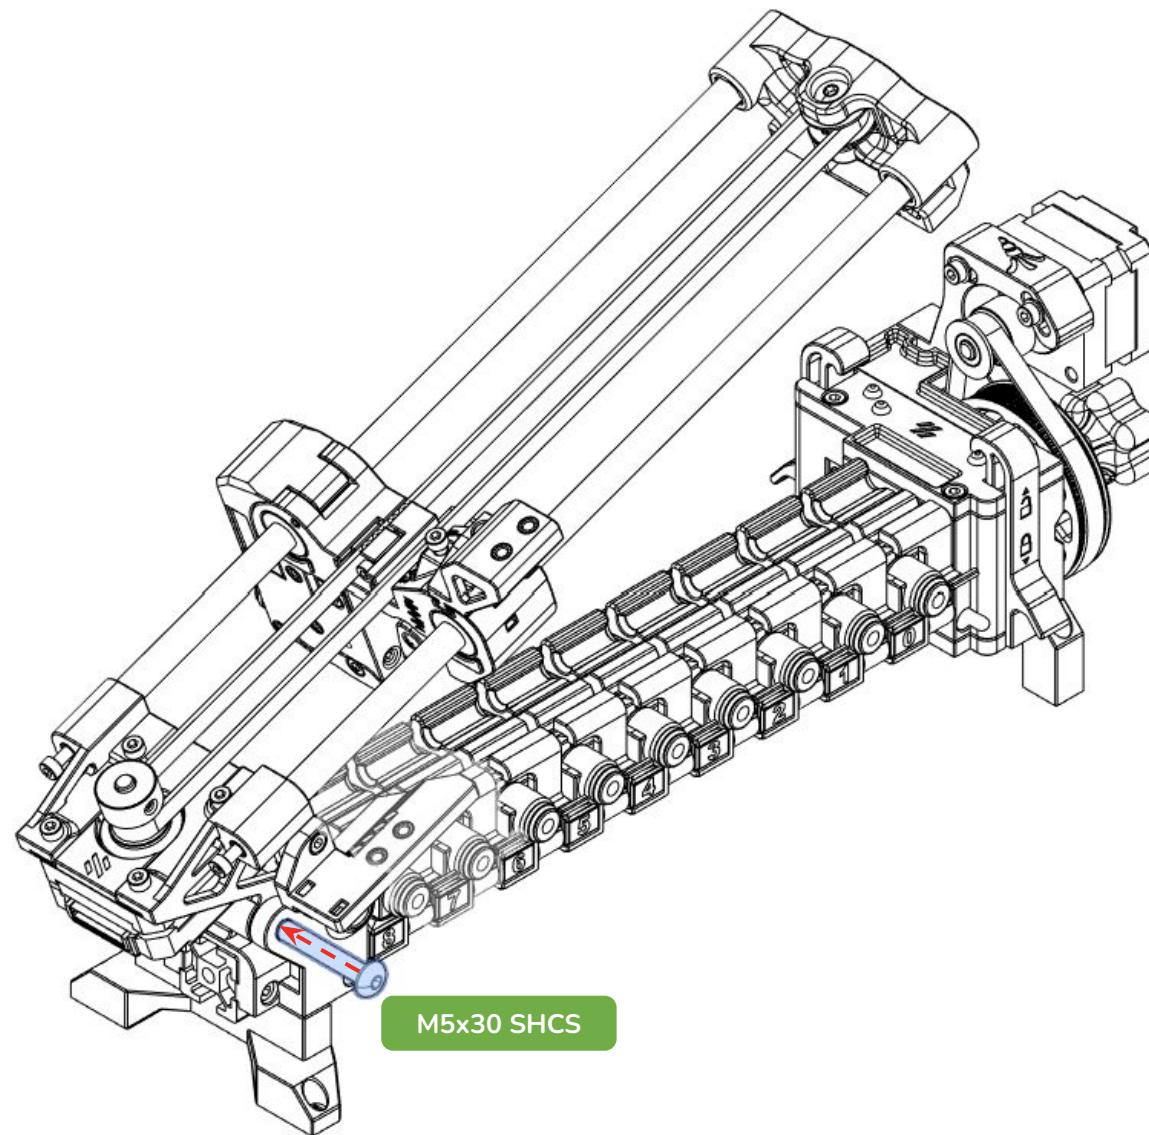

FINAL ASSEMBLY


IDLER ADJUSTMENT

IDLER POSITION

Use the two M3x16 SHCS screws on the [Linear_Axis_Selector_Motor_Support](#) to finely adjust the the [Linear_Axis_Idler_Block](#) position by pushing out the 8mm rods. If you unscrew these, make sure to push the 8mm rods in so they're still in contact with the screws.

The locating bumps on the [Linear_Axis_Idler_Block](#) must line up to the [Gear_Box_Top_Panel](#).

Once the tuning is done, lock the linear axis using the two [Side_Latches](#).

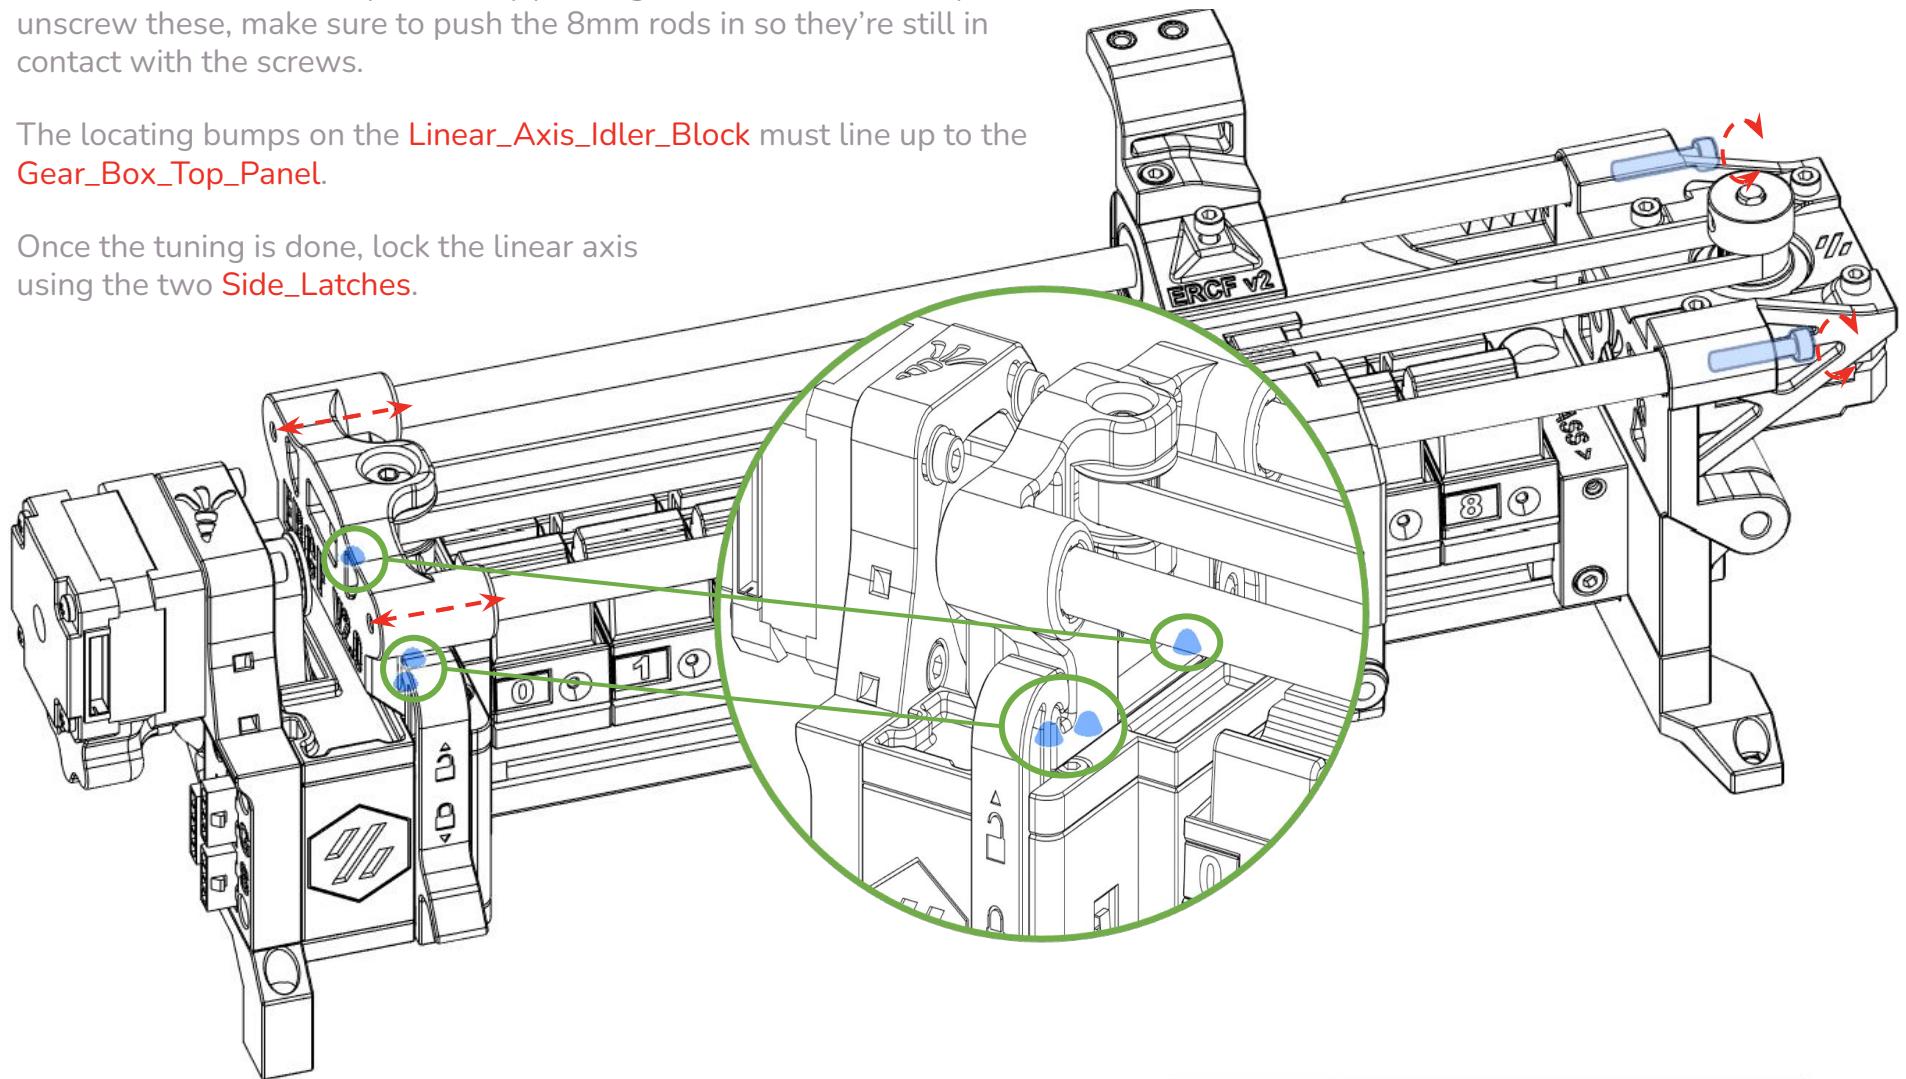

FINAL ASSEMBLY


TENSIONING THE BELT

SET SCREWS

Move the Selector as close to the Selector Motor as you can get it.

Align the pulley with the belt and then tighten both M3 set screws.


Next, remove one of the set screws and apply thread locker to the threads before reinstalling and tightening it. Repeat for the other screw.

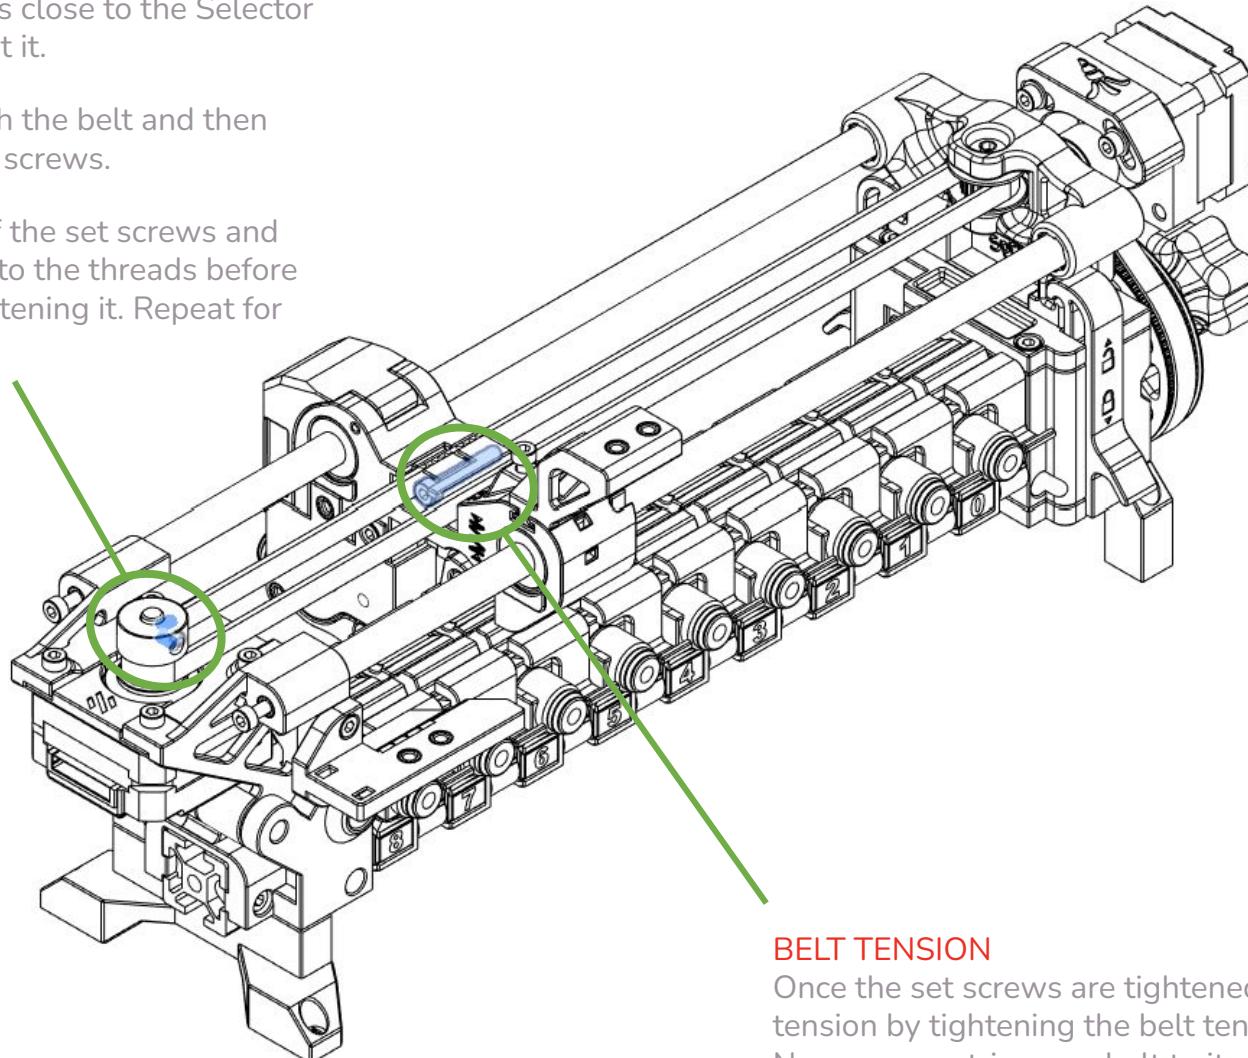

BELT TENSION

Once the set screws are tightened, adjust the belt tension by tightening the belt tensioner M3x20. Now you can trim your belt to its final length.

FINAL ASSEMBLY

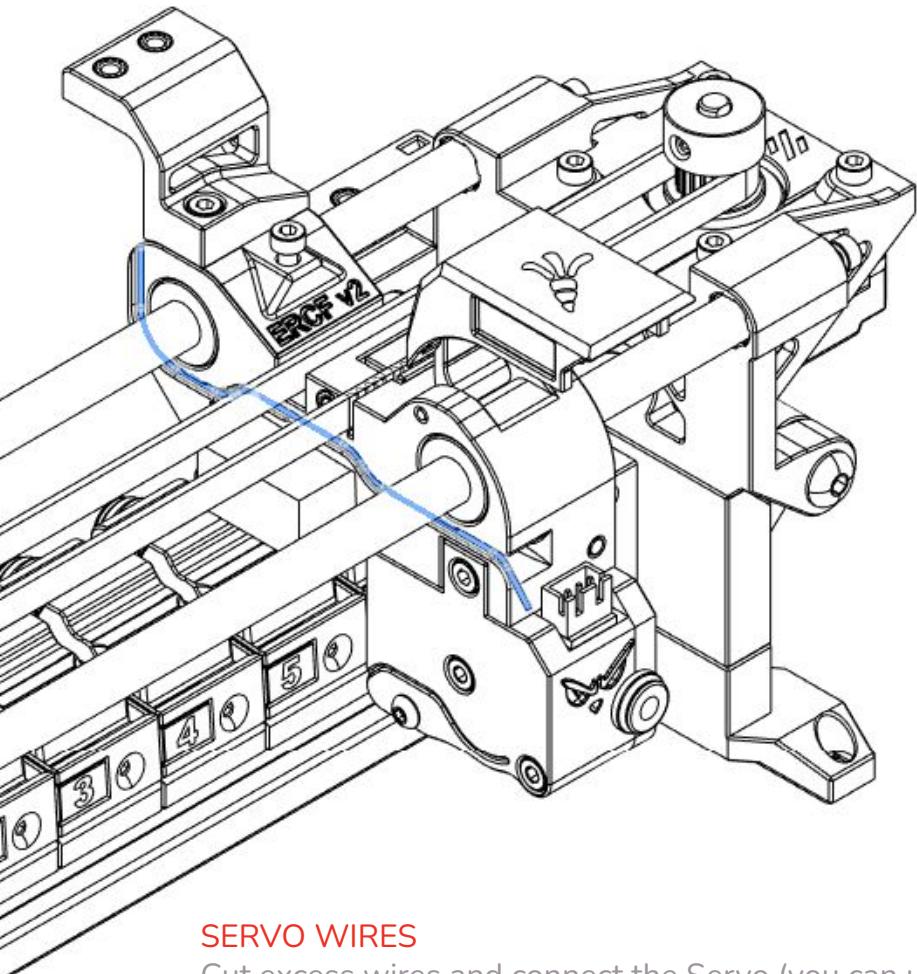

SERVO WIRES

Cut excess wires and connect the Servo (you can use a Dupont connector for example).

Secure both the Servo and Encoder wires using a zip tie.


FULL ERCF

ENCODER WIRES

Pass one of the Encoder wires into the dedicated channel in the **Selector_Cart** to define the wire length needed to plug into the Encoder.


Cut excess wire, remove the wire from the channel and do the crimps (Dupont or JST XH will work) for all wires.

Pass all the wires in the channel, then connect the Encoder and close the **Selector_Door**.

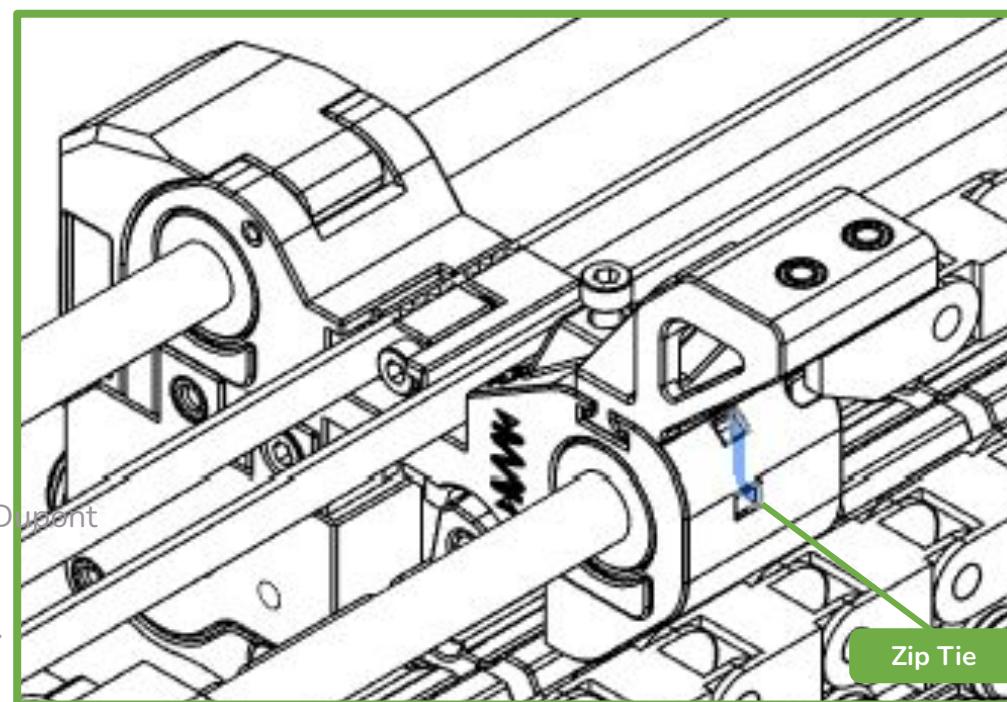

FINAL ASSEMBLY

DRAG CHAIN

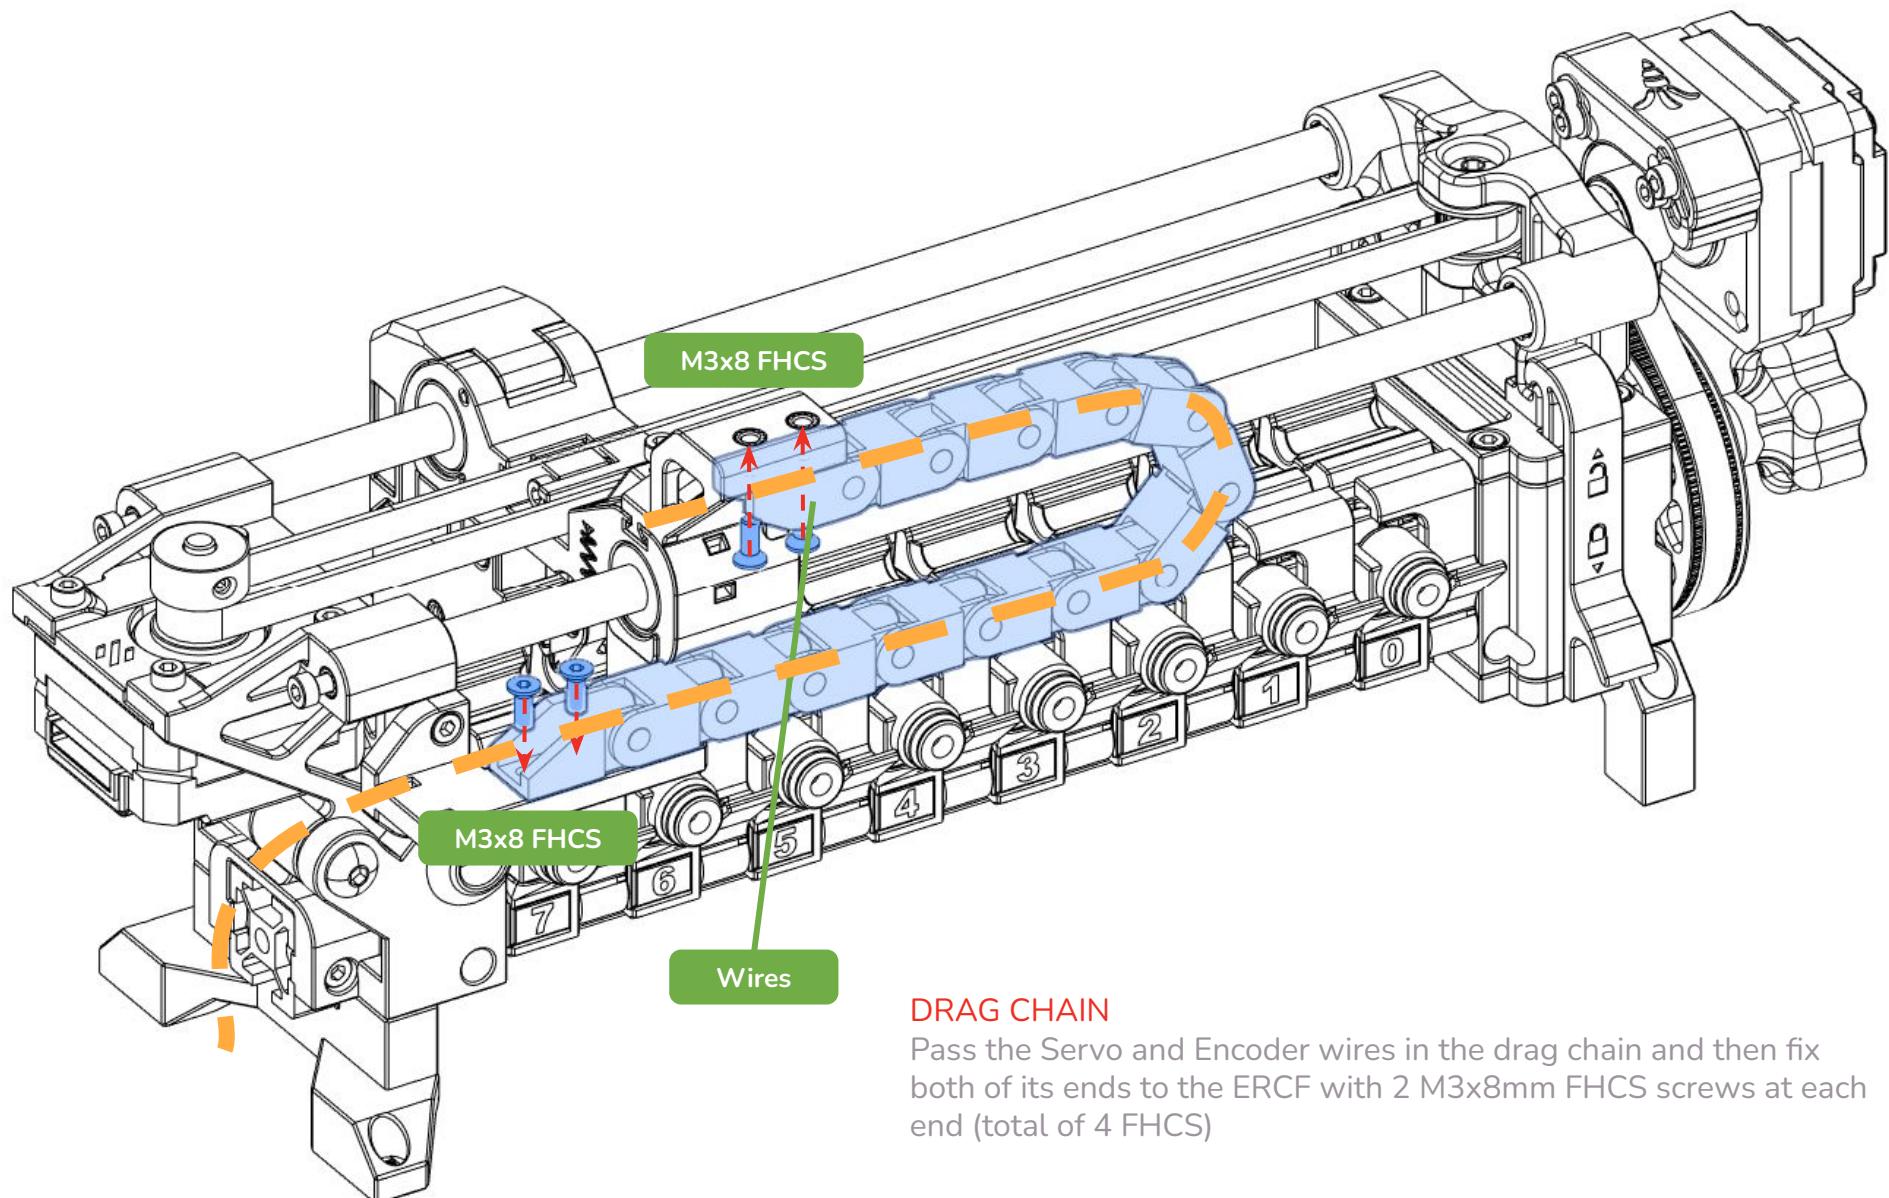

DRAG CHAIN


Pass the Servo and Encoder wires in the drag chain and then fix both of its ends to the ERCF with 2 M3x8mm FHCS screws at each end (total of 4 FHCS)

FINAL ASSEMBLY

ERCF

SELECTOR MOTOR

You can now crimp and add the connector to the Selector Motor wire.

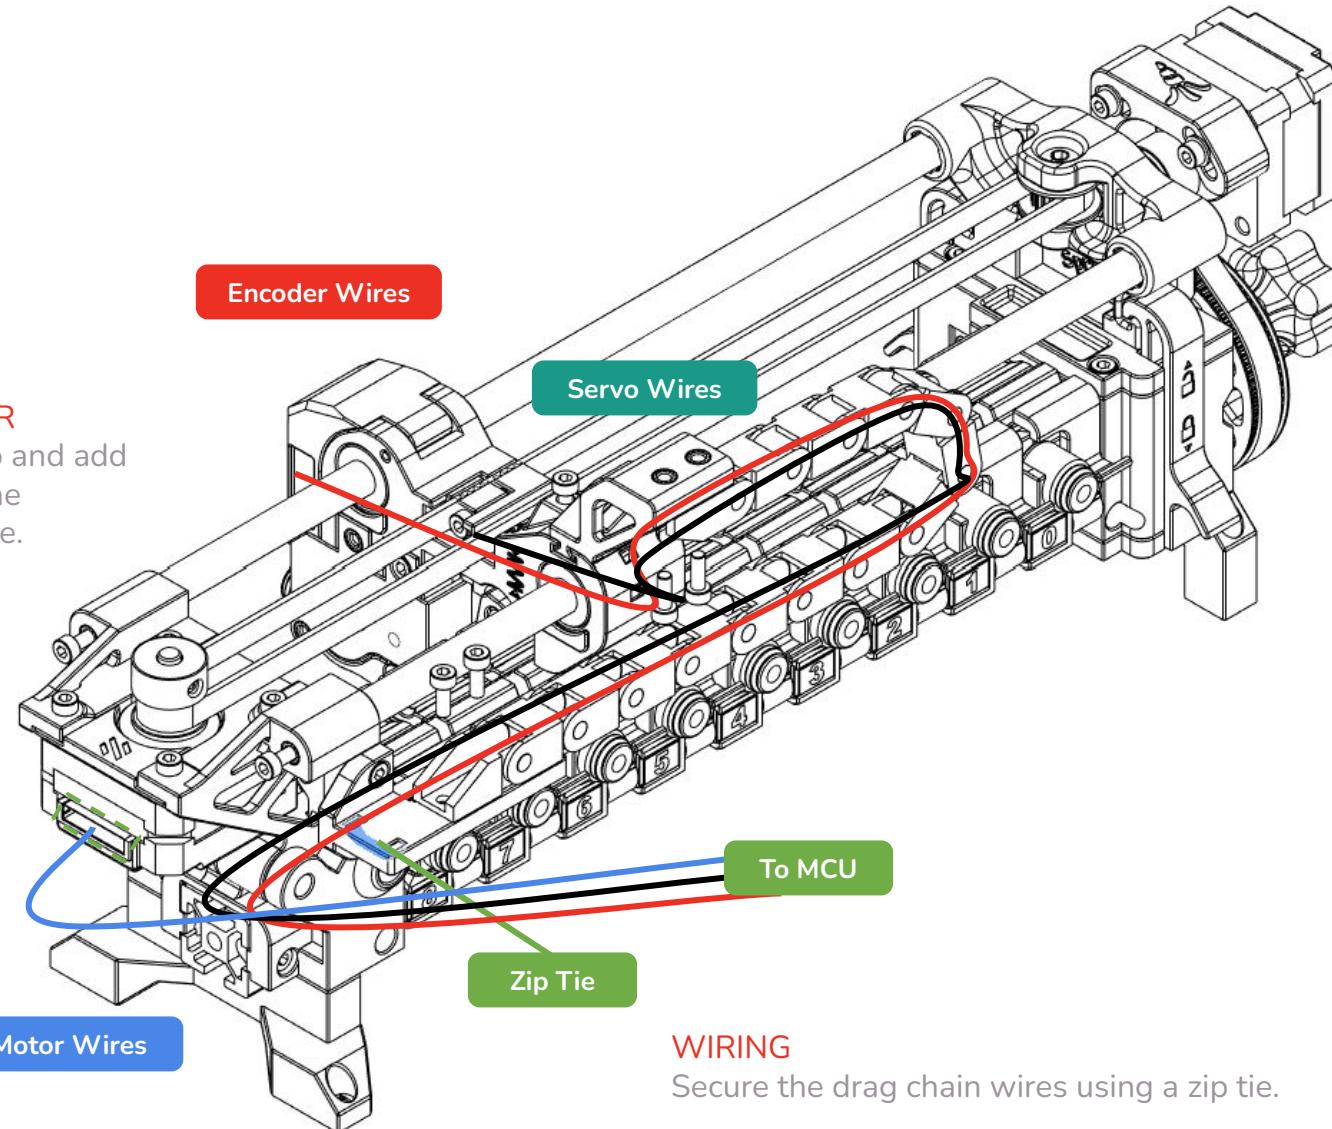


WIRING

Secure the drag chain wires using a zip tie.

WIRING

WIRING THE MMB

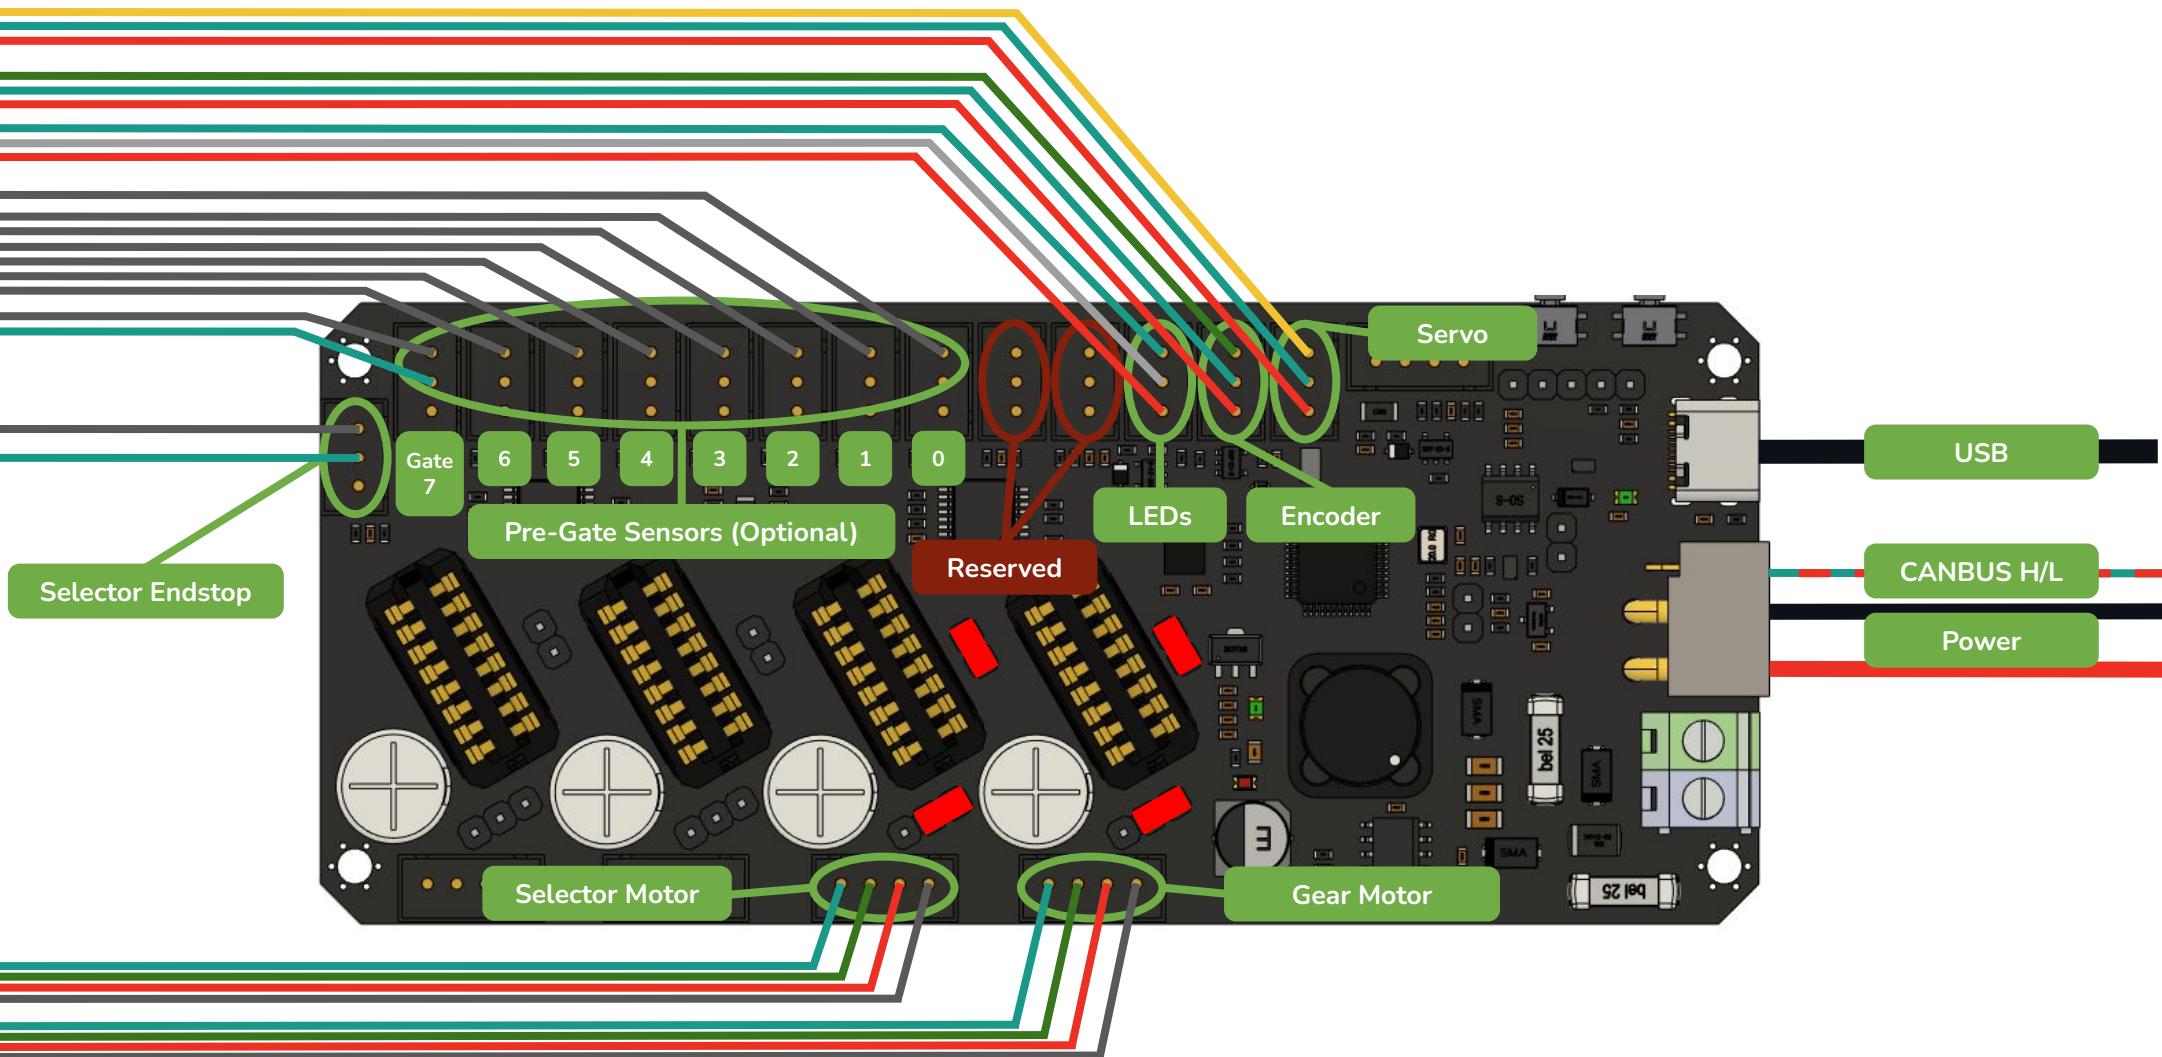


MMB WIRING

Connect the Selector Endstop and optional Pre-Gate Sensor wires (**do not use reserved ports**). Connect the Servo and Encoder wires. Connect the Selector Motor and Gear Motor wires. Wiring color order may vary between manufacturers for stepper motors. Keep a few cms of wires in the MMB box, it will be helpful in case you have to disassemble/reassemble.

FINAL ASSEMBLY

THE END! ... OR ALMOST :D

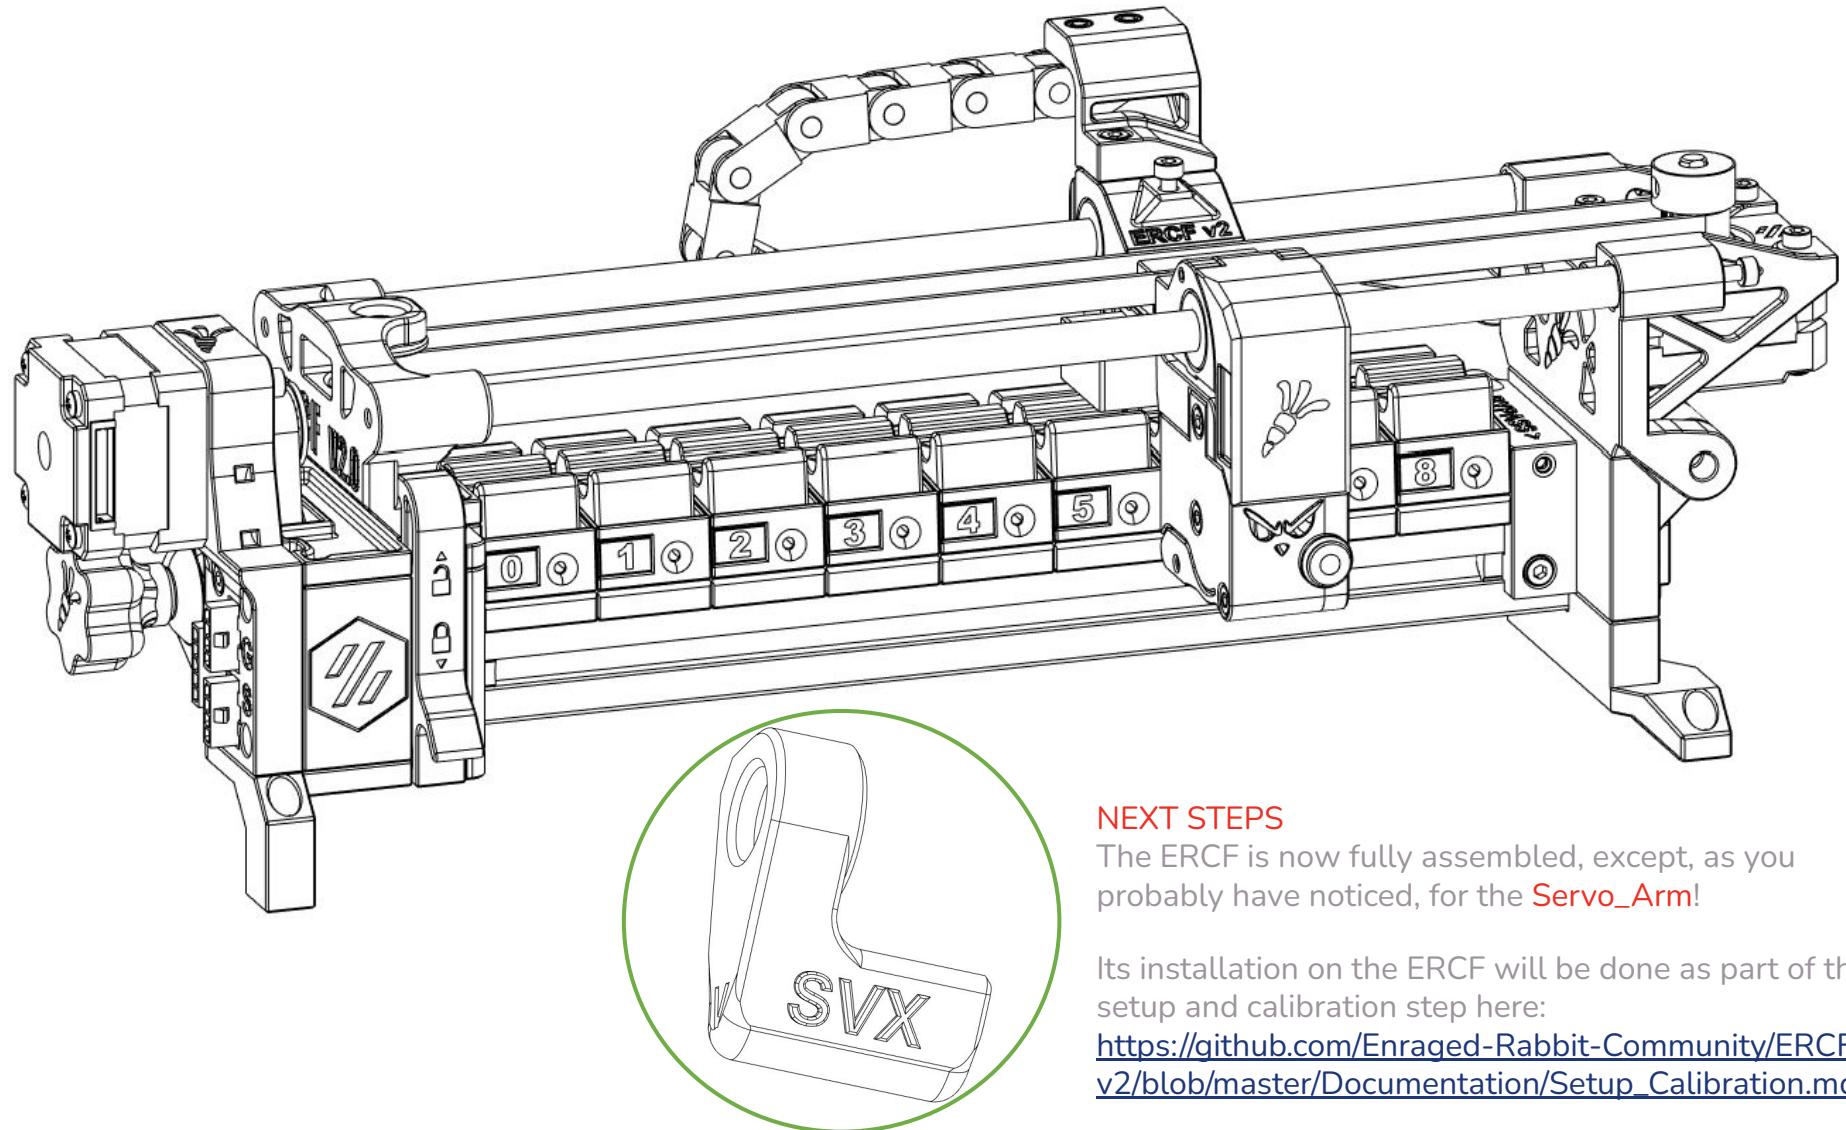


NEXT STEPS

The ERCF is now fully assembled, except, as you probably have noticed, for the **Servo_Arm**!

Its installation on the ERCF will be done as part of the setup and calibration step here:

https://github.com/Enraged-Rabbit-Community/ERCF_v2/blob/master/Documentation/Setup_Calibration.md

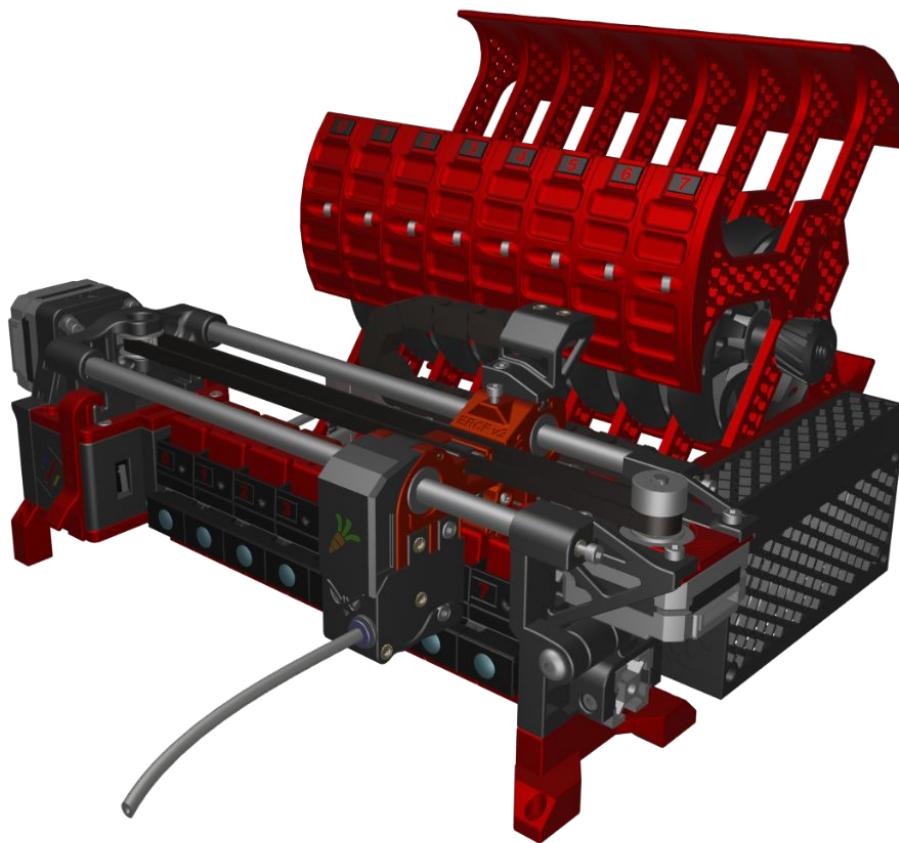


COTTONTAIL BUILD GUIDE

Even the smallest one can change the world.
—Peter Rabbit


VERSION 2023-12-21

COTTON TAIL BUFFER
ASSEMBLY

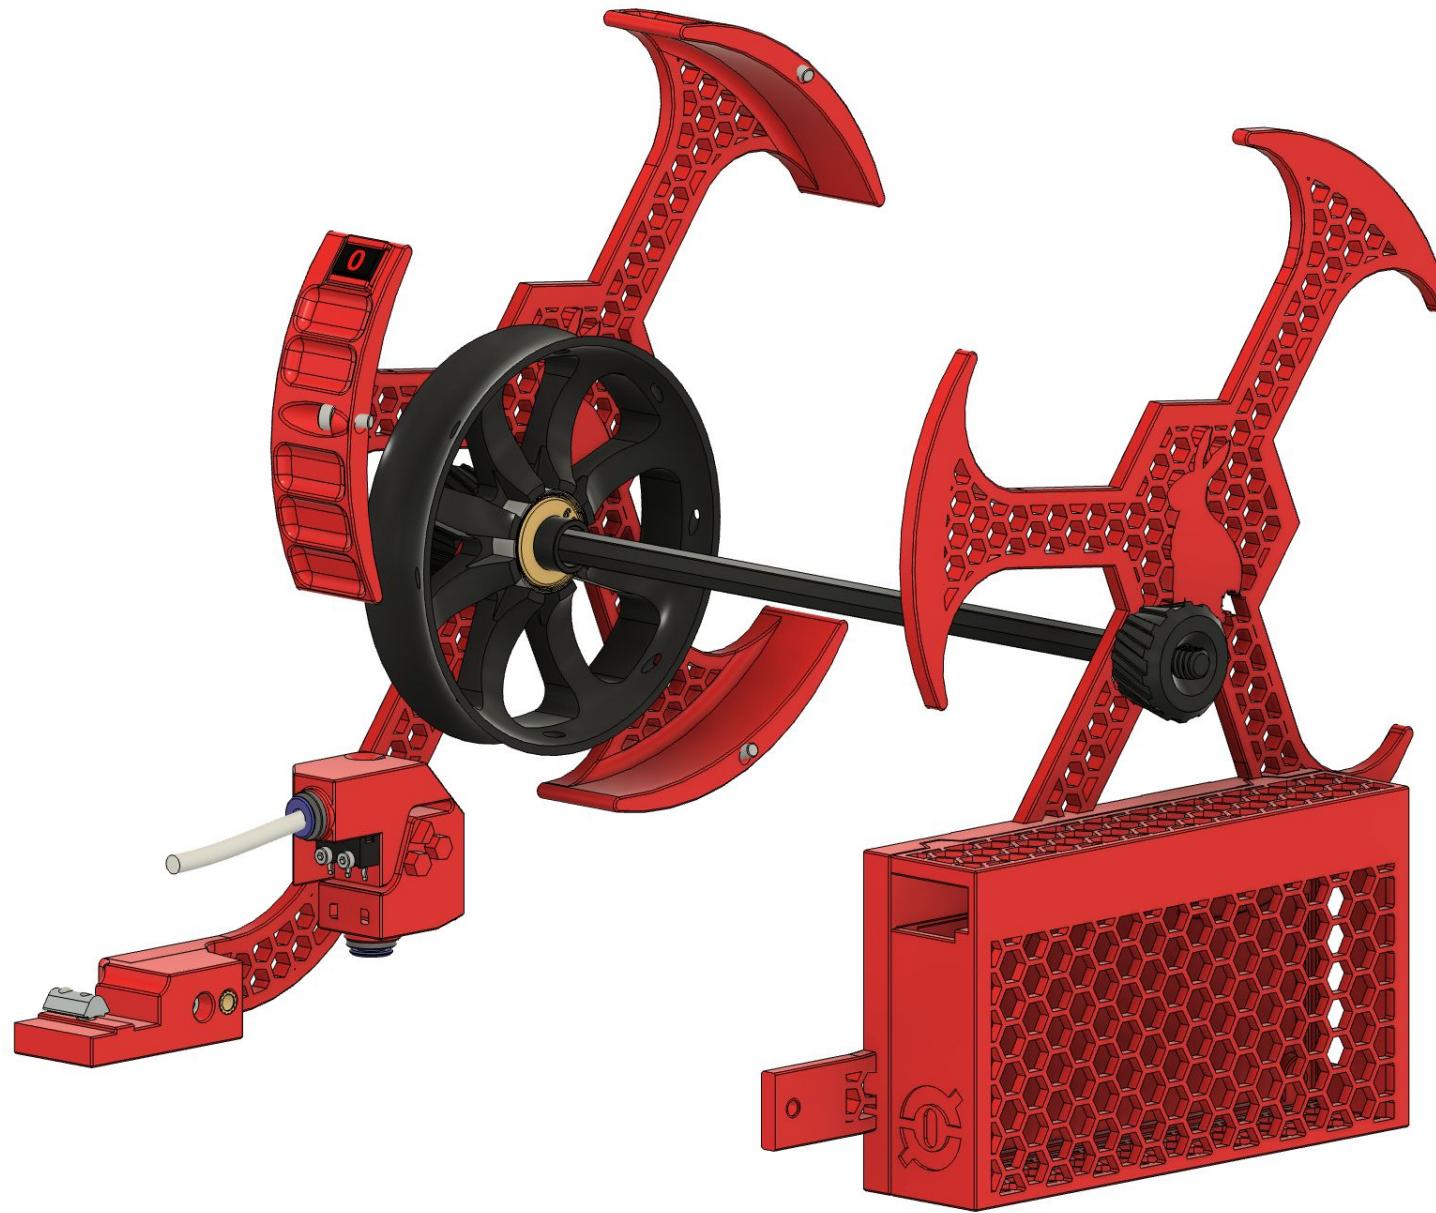

COTTON TAIL BUFFER ASSEMBLY

OVERVIEW

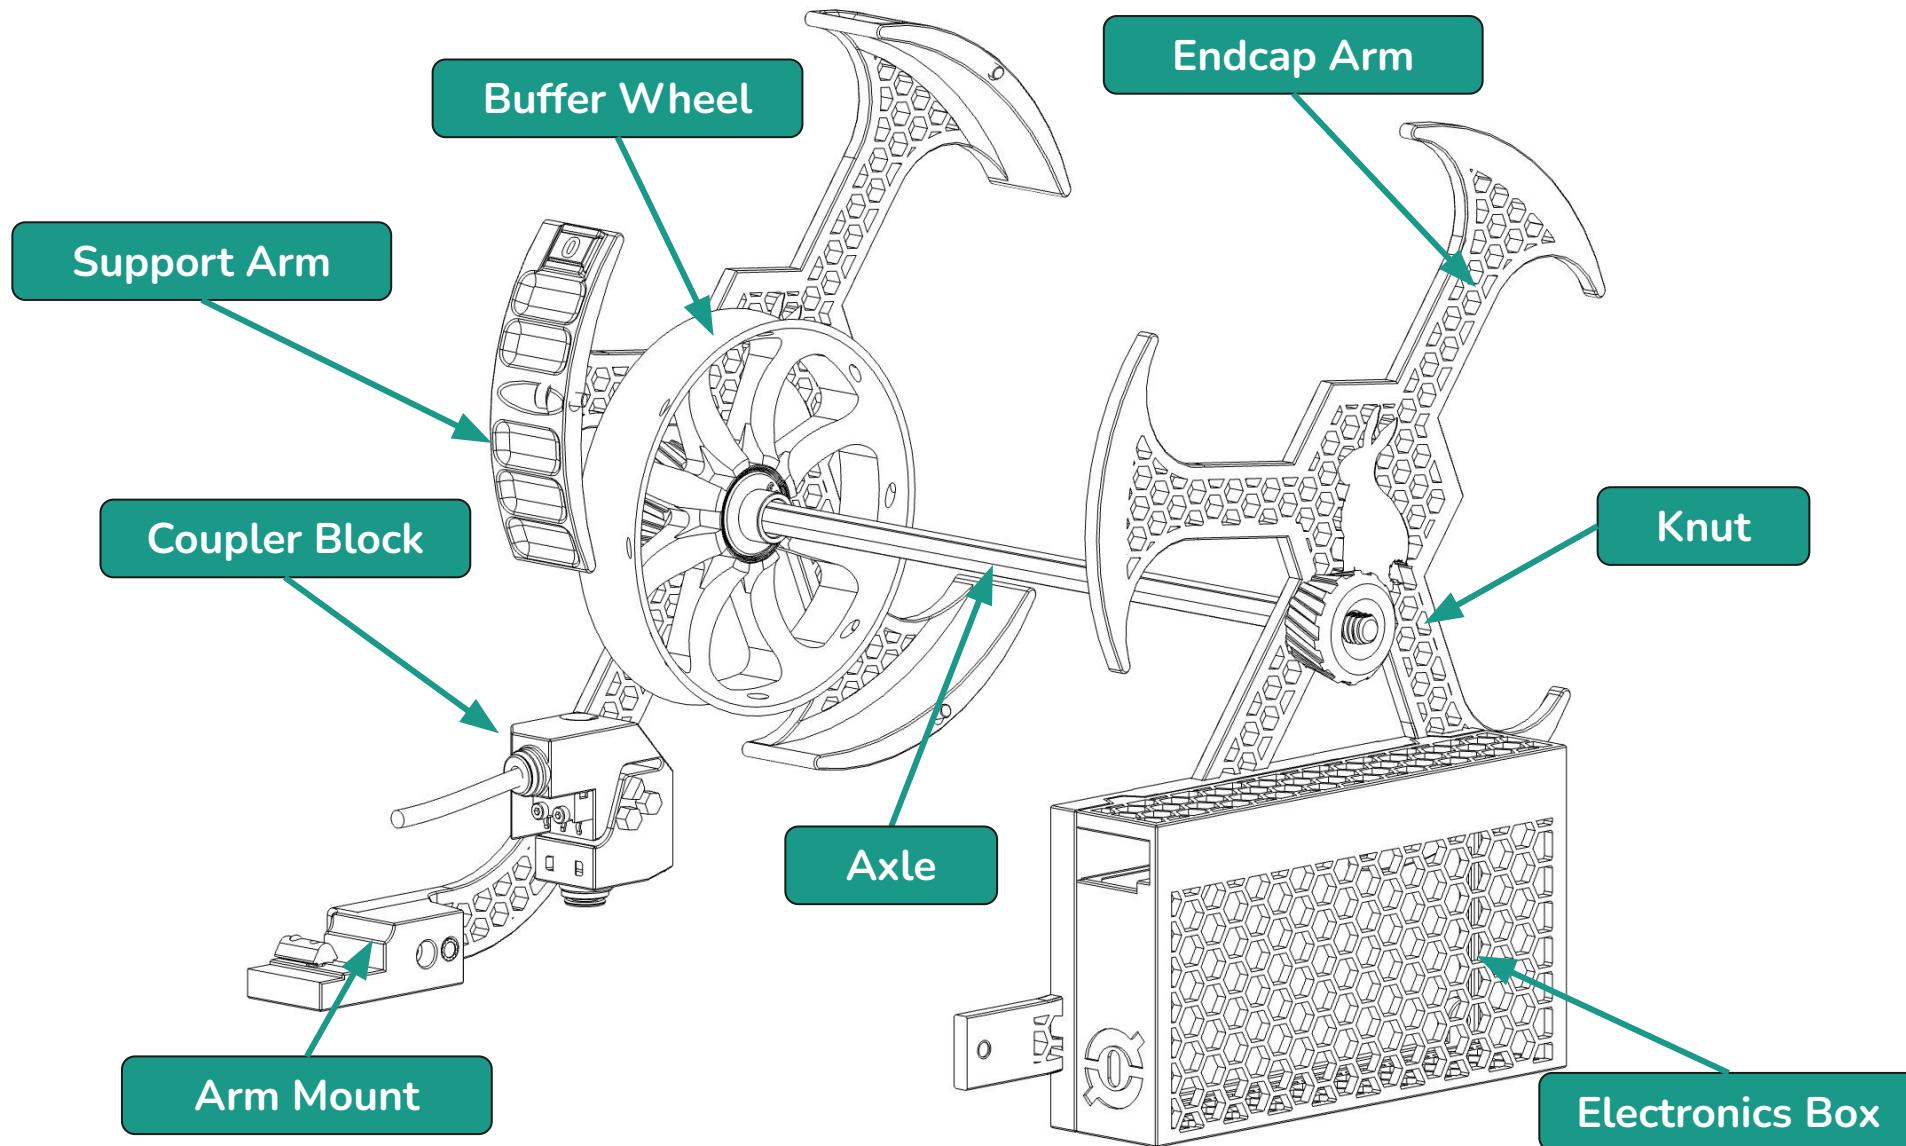

ARM GROUPS


EXPLODED VIEW

ARM GROUP BOM (PER CHANNEL)

- A 4x M3x8mm SCHS
- B 1x 608ZZ Bearing
- C 1x M3x5x4 Heat Insert
- D 1x M3 Roll-in T-Nut
- E 1x M3x16mm SCHS

ARM GROUP PRINTED PARTS (PER CHANNEL)

- F 1x [a]_Support_Arm_Mount_xN.stl
- G 2x Tag_Plates
- H 1x [a]_Support_Arm_xN.stl
- I 1x Buffer_Wheel_xN.stl
- J 1x Axle_Spacer_Standard_xN.stl

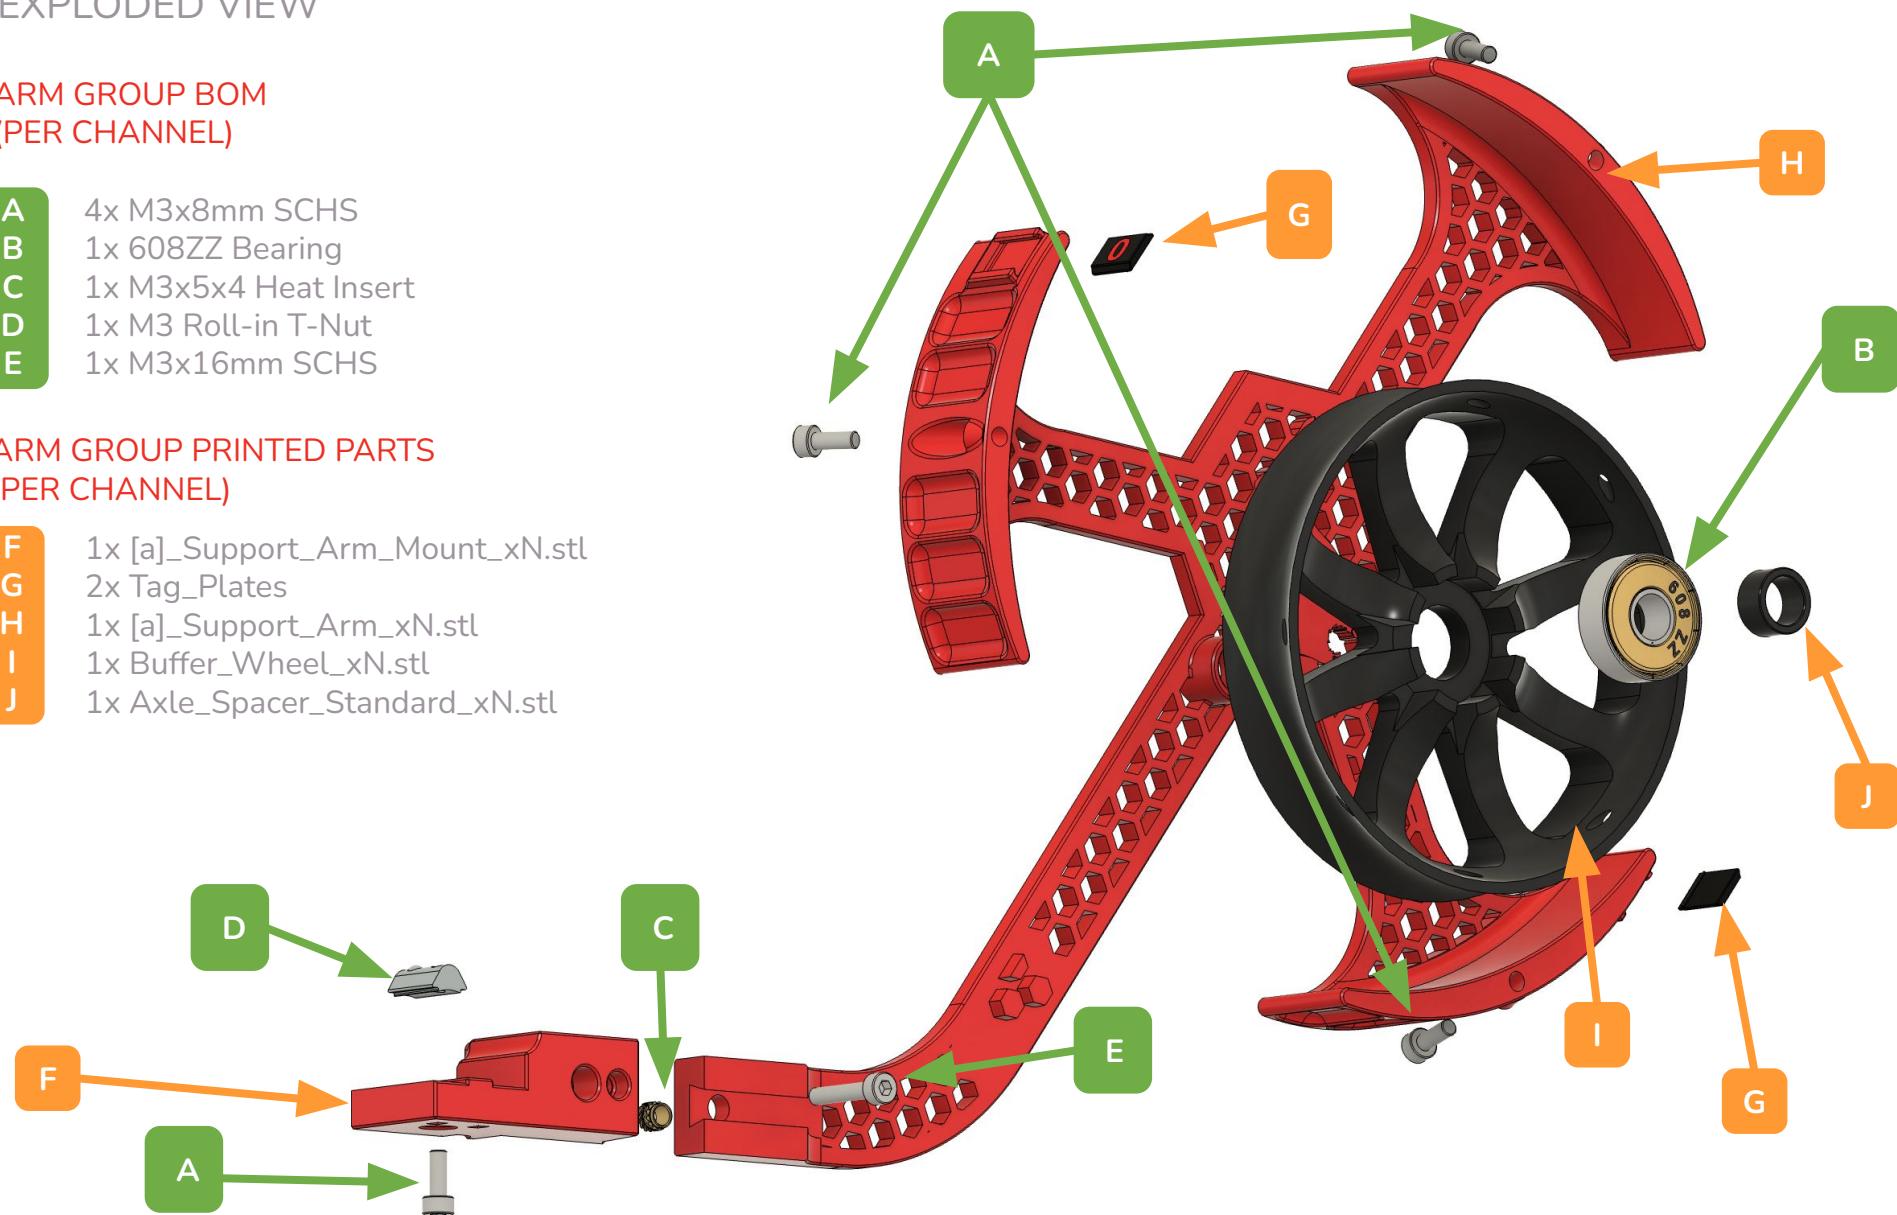


COUPLER BLOCKS

EXPLODED VIEW

COUPLER BLOCK BOM (PER CHANNEL)

- A 1x 48mm OD4.0mmxID3.0mm PTFE Tubing
- B 2x ECAS Coupler (2 piece)
- C 4x M2x8mm or M2x10mm Self Tapping Screws
- D 1x Omron D2F-5L or D2F-01L Micro Switch
- E 1x Neopixel
- F 1x 5.5mm Steel Ball Bearing

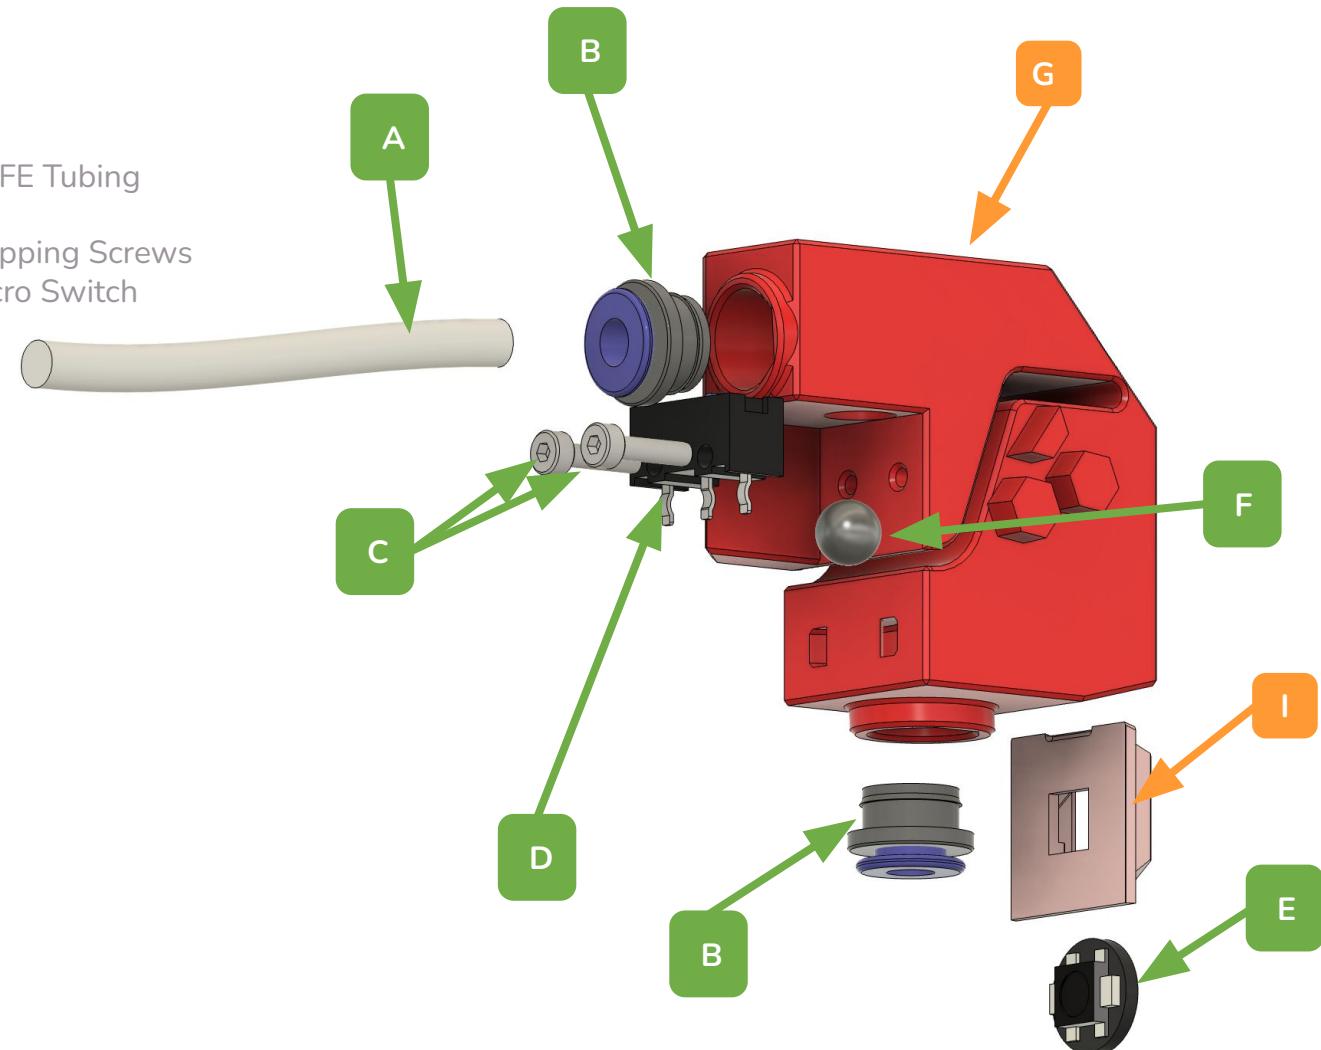

COUPLER BLOCK PRINTED PARTS (PER CHANNEL)

- G Coupler_Block_xN.stl
- I [a]_LED_Carrier_xN.stl

Although the LED uses the entire **Coupler_Block** as a diffuser for the light, it isn't required to use translucent or clear filament to print it. Choose a filament that allows it to be backlit or illuminated.

ENDCAP ARM


EXPLODED VIEW

END CAP ARM BOM

- A 1x BTT MMB Controller Board
- B 4x M3x5x4 Heat Insert (3 not pictured)
- C 5x M3x8mm SCHS

END CAP ARM PRINTED PARTS

- D Axle_N_Double_Thread.stl
- E [a]_BTT_MMB_Support_Arm_Endcap.stl
- F Knut_x2.stl
- G [a]_BTT_MMB_Box_Lid.stl

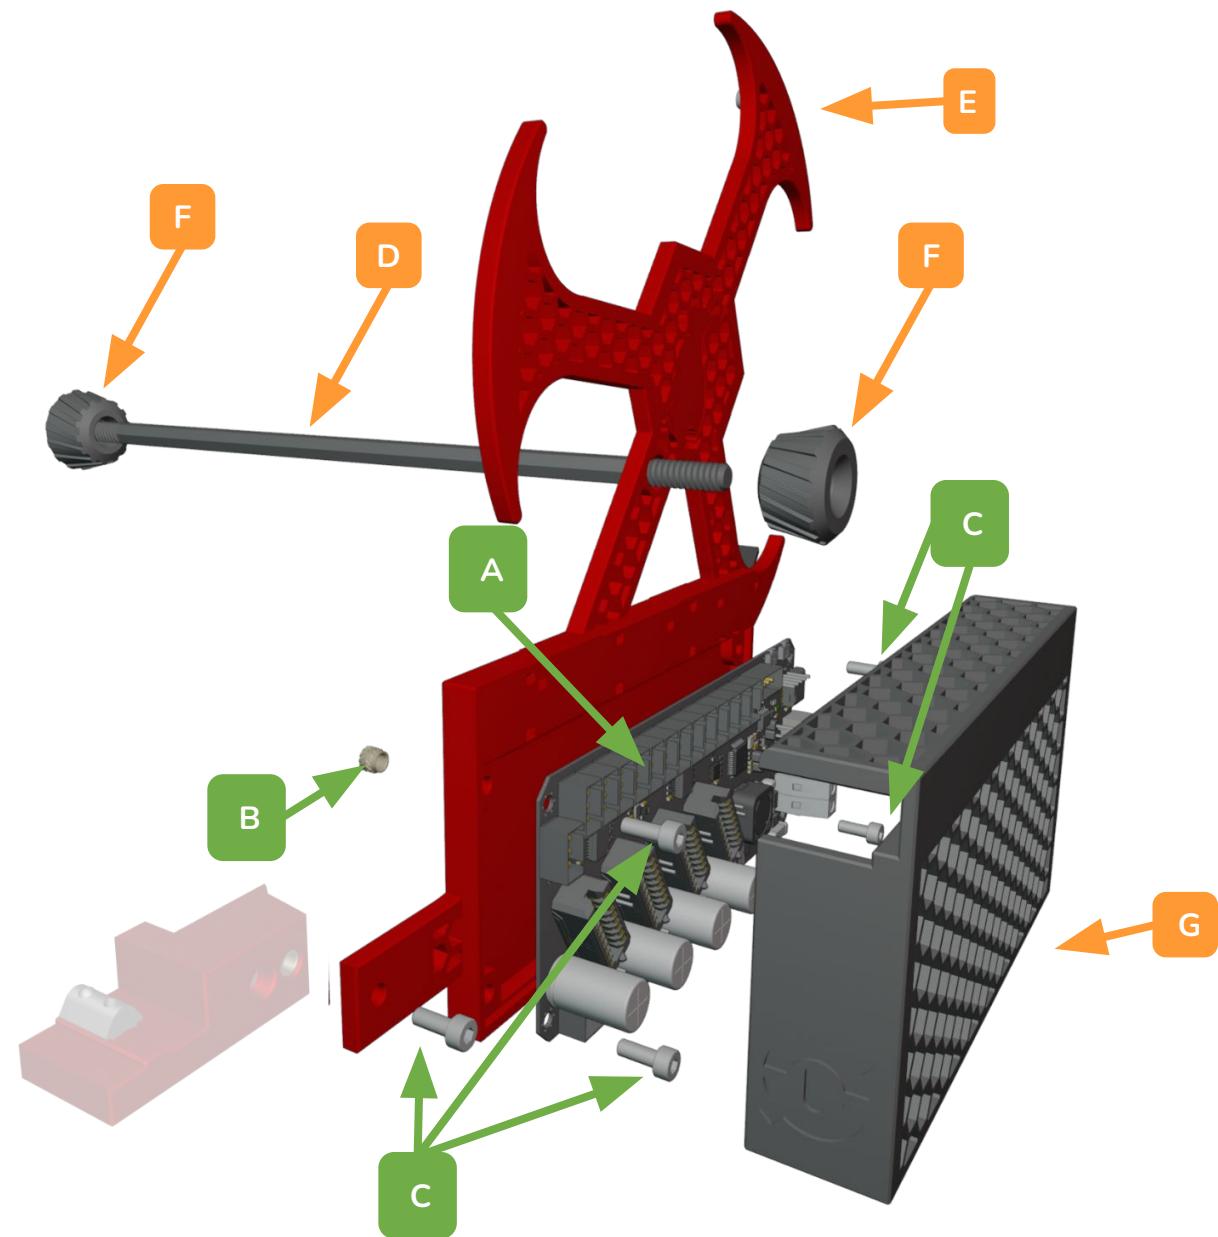

ARM GROUPS PREPARATION


ARM AND MOUNT

ASSEMBLY (PER ARM GROUP)

Start by adding the heat insert into each of the **Support_Arms**. Be careful not to go too far into the arm to obstruct the dovetail receiver on the other side. The heat set can sit slightly proud on the insertion side, so be cautious.


Slide the **Support_Arm_Mount** into the **Support_Arm** and insert a single M3x16mm screw to secure it.

Repeat this step with all the **Support_Arms** and **Support_Arm_Mounts**.

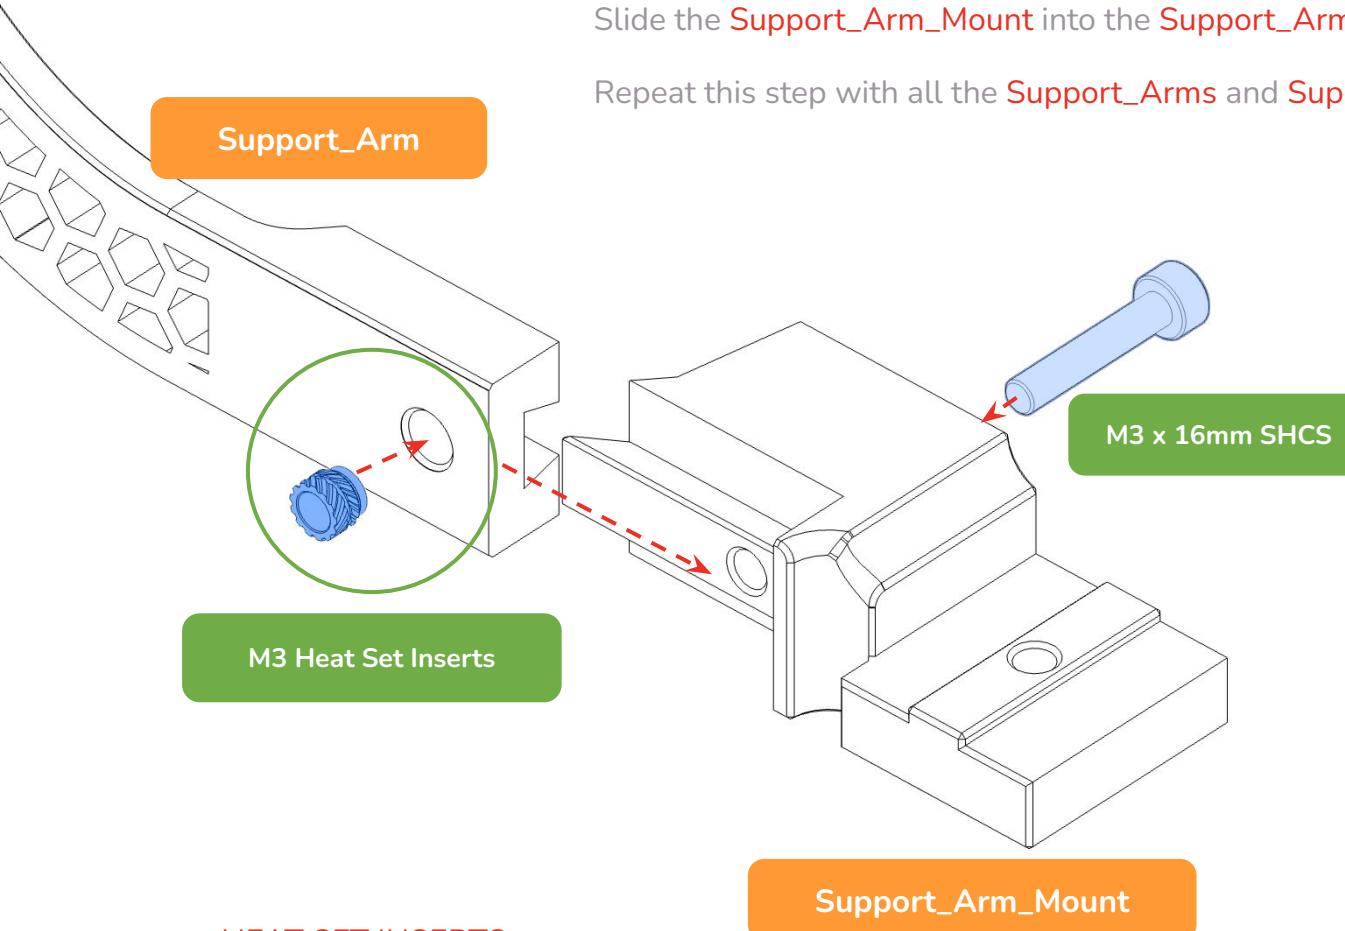

HEAT SET INSERTS


The list of pages with heat set inserts is on [Page 15](#).

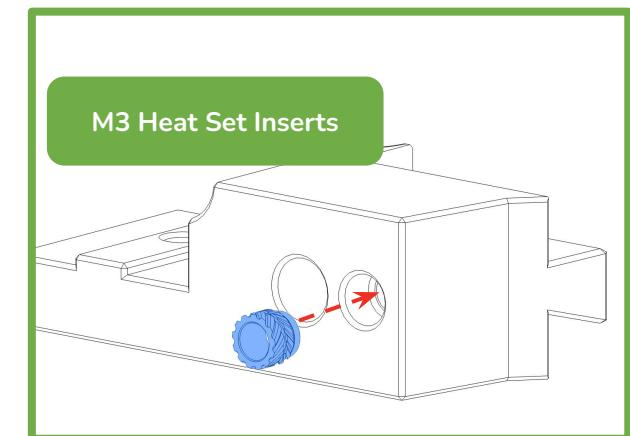

Set aside one of the **Support_Arm_Mounts** for the end, and insert a single Heat Set into the second hole. This will be used to hold the **Support_Arm_Endcap**.


ARM GROUPS PREPARATION

AXLE AND WHEEL

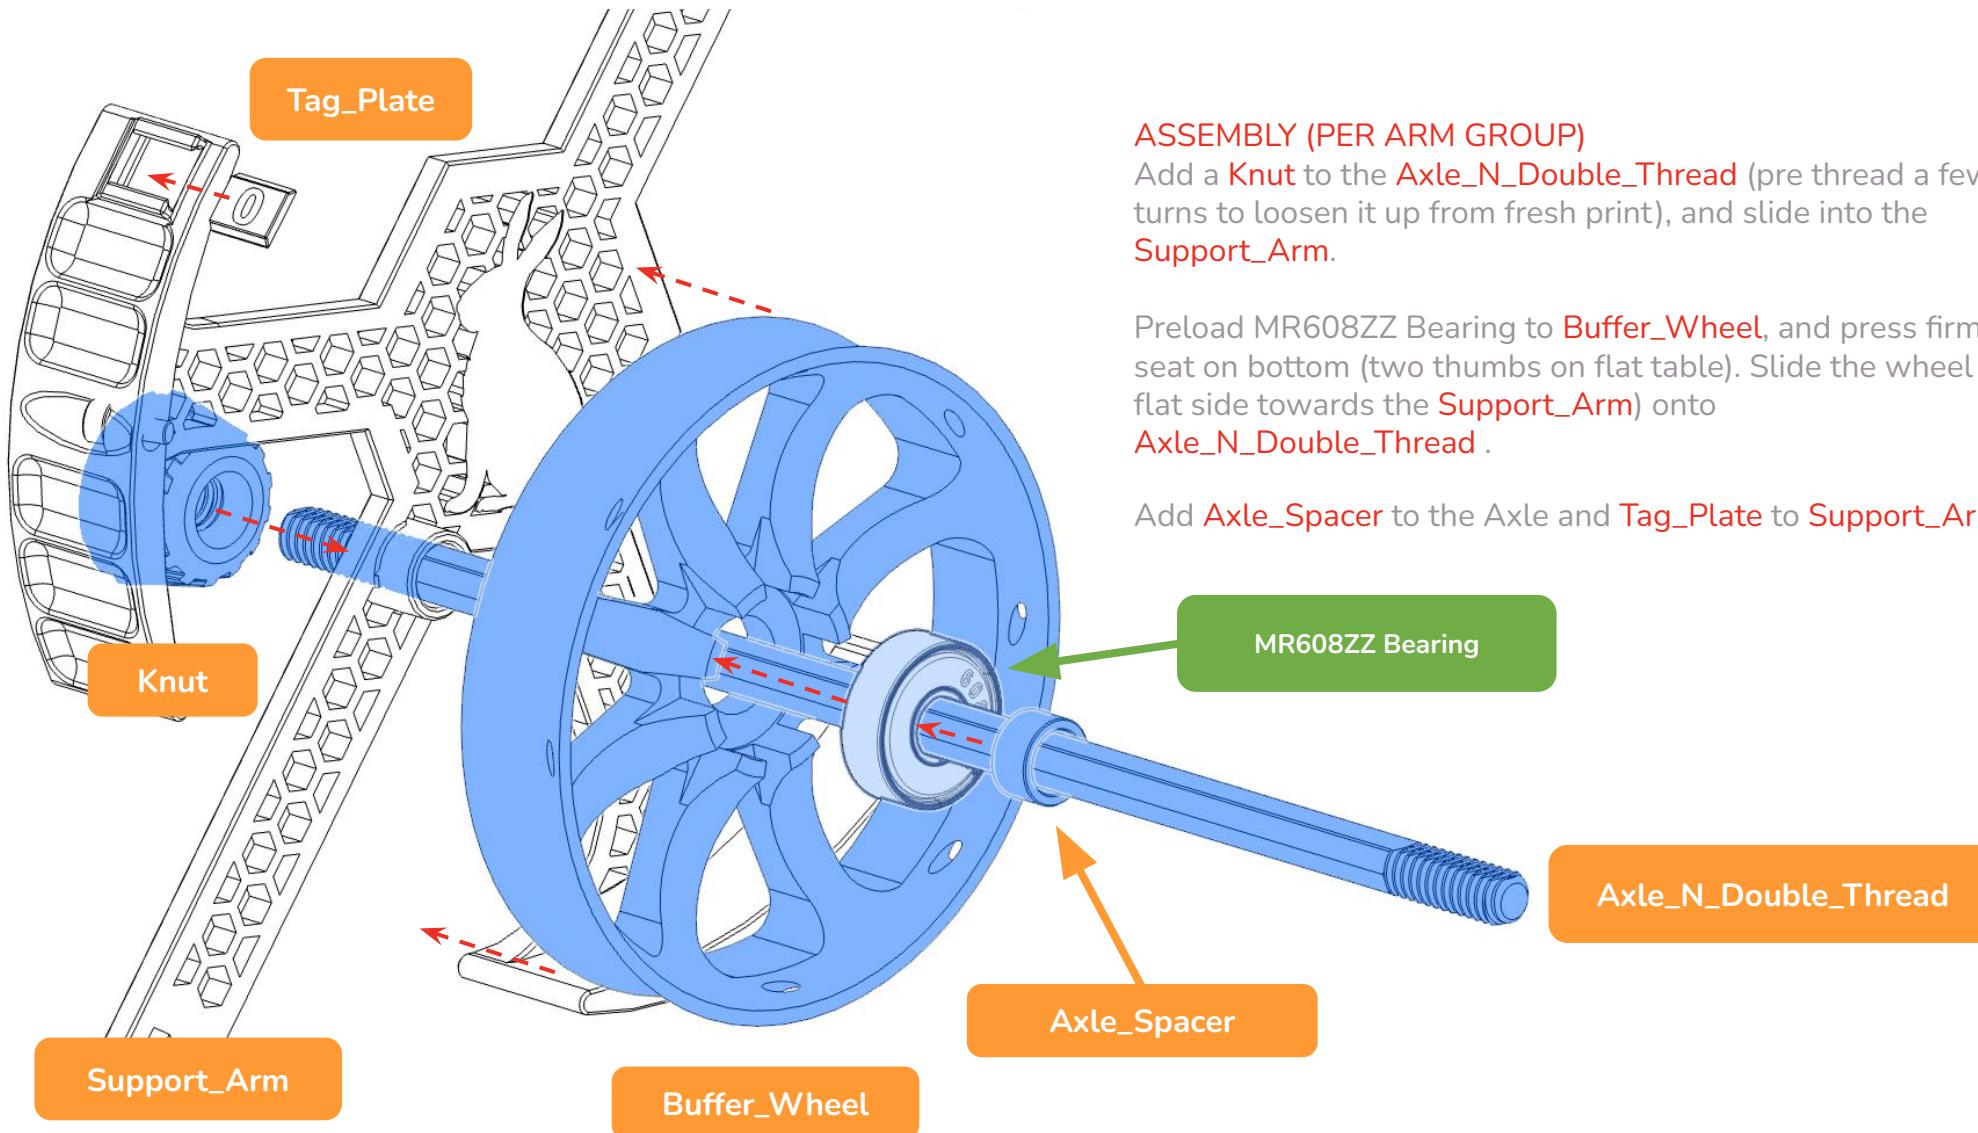

ARM GROUPS PREPARATION

COUPLER BLOCK

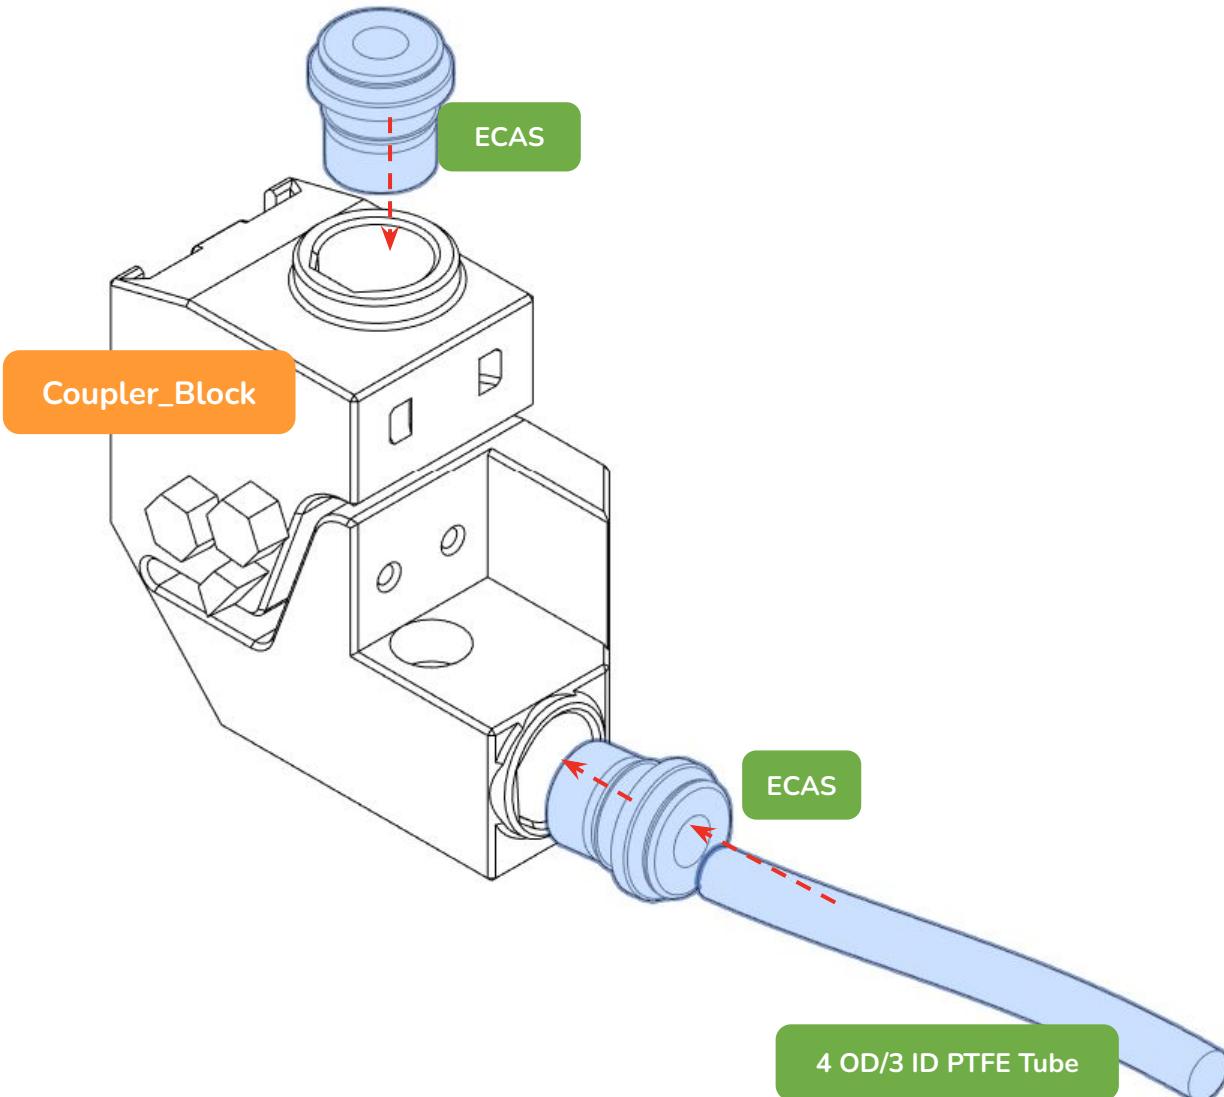

ASSEMBLY (PER ARM GROUP)

Start your assembly by inserting the ECAS collet into the two positions of the **Coupler_Block**. Use a flat surface to press in, or use a ratchet bar clamp to apply even pressure.



Use the cutting jig to cut 48.5mm of 4mm OD/3mm ID PTFE Tube. Insert into the sprung ECAS coupler. Make sure it's seated all the way in and the natural curve of the tube is curling downwards.

Repeat for all **Coupler_Blocks**.

ARM GROUPS PREPARATION

Gate	NC Wire Length (mm)
LAST (N)	110
N+1	145
N+2	179
N+3	214
N+4	249
N+5	284
N+6	319
N+7	354
N+8	389
N+9	424
N+10	459
N+11	494
N+12	529
N+13	564
N+14	599

MICROSWITCH WIRING HARNESS

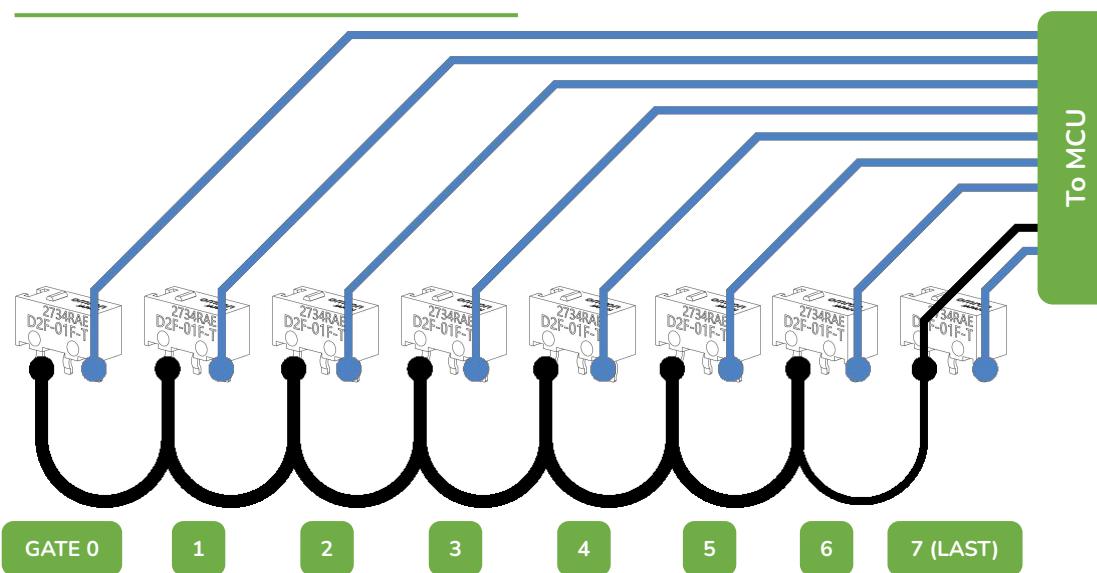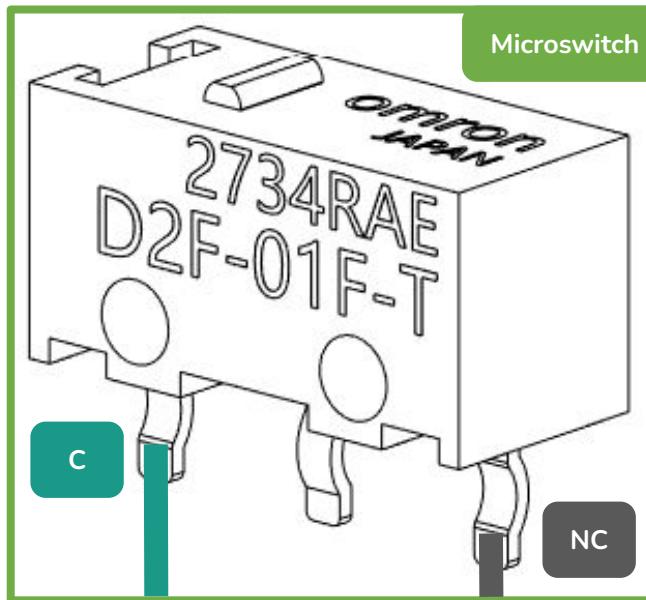

WIRING SENSORS

First, solder a wire (26-28 AWG recommended) to the Normally Closed (NC) leg of each microswitch, matching the length for each gate to the table to the left. **Last (N)** is gate closest to the MMB,

Next, connect the Common (C) legs of each neighboring switch with a piece of wire 70mm long.

For the last microswitch in the chain, solder an additional 110mm wire to the Common leg, to feed to the MCU.

Your end result should look like the second picture.


Make sure you follow the recommended lengths to ensure that the switches are not binding the Coupler_Block's upper sprung section.

This takes into account extra length so you can trim the wire to be as tidy as possible.

Use cable ties to keep bundles together.

ARM GROUPS PREPARATION


WIRING PRE-GATE SWITCHES

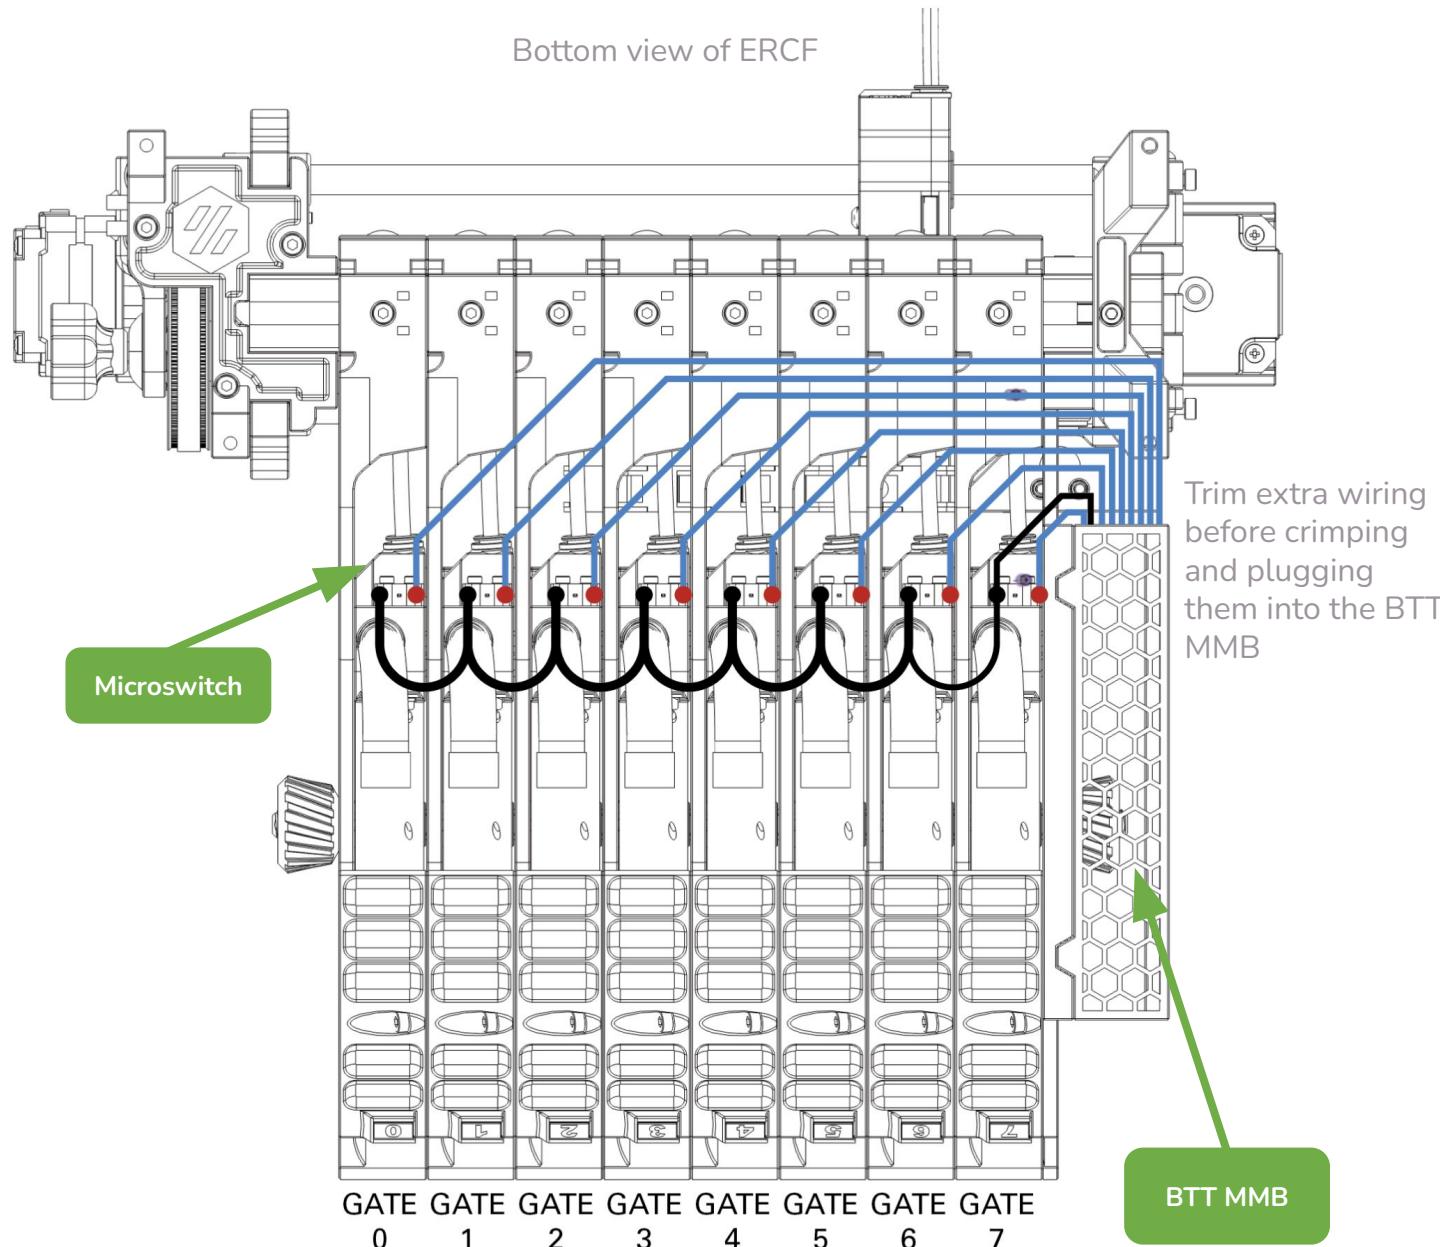


WIRING SENSORS

Make sure you follow the recommended lengths to ensure that the switches are not binding on the **Coupler_Block's** upper sprung section.

Drop a 5.5mm ball bearing into each Coupler and install each of the microswitches with 2x M2x8 or 10mm SHCS.

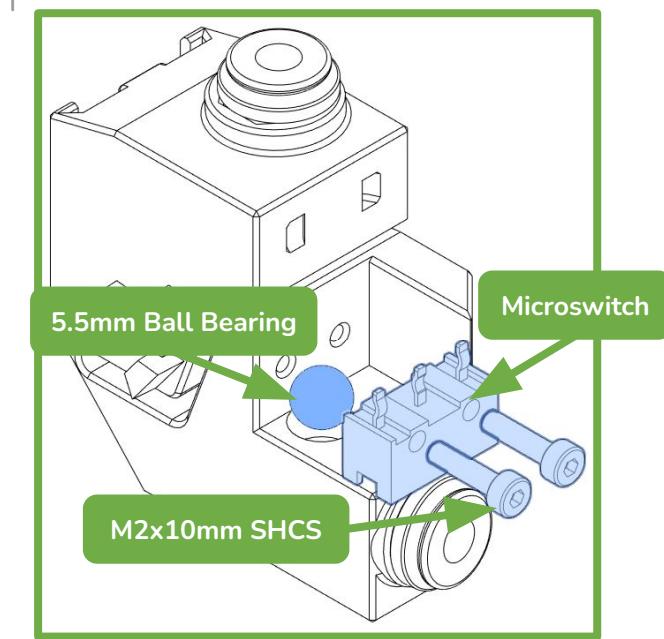

2020 INSTALLATION

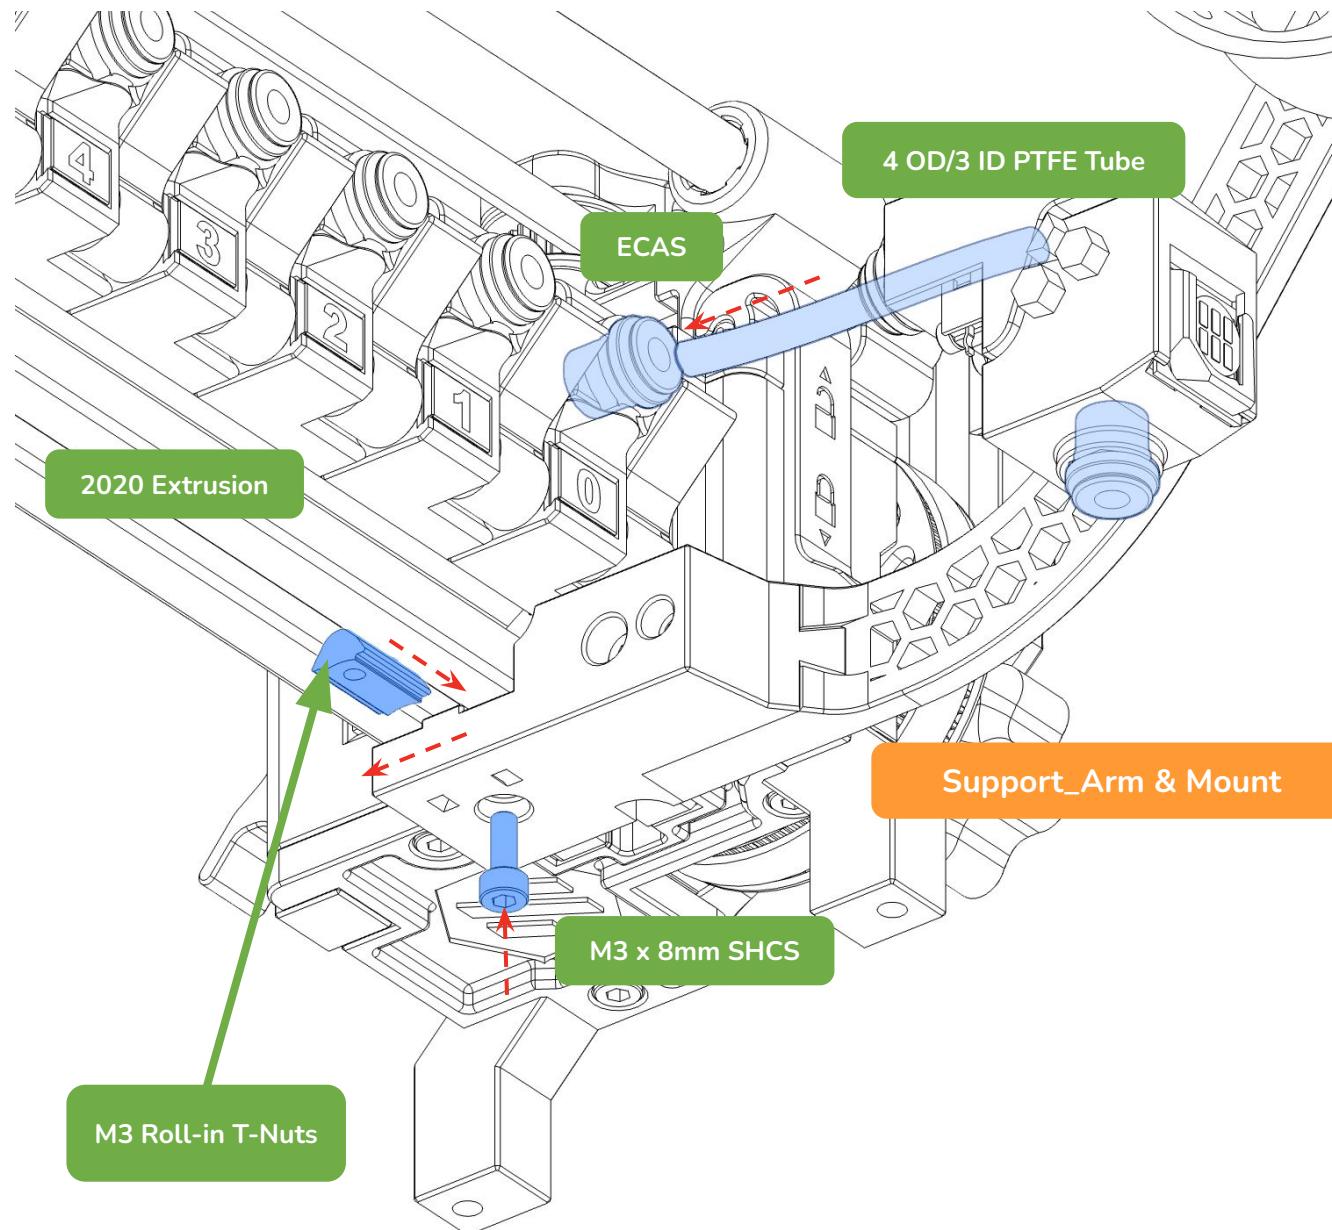

ERCF INSTALLATION

MOUNTING ARMS (PER ARM GROUP)

Preload the M3 Roll-in T-nuts into the bottom of the 2020 Extrusion.


Take the **Support_Arm** assembly, and line up the PTFE tube to the ECAS on the Filament Block. Mount the Arm onto the 2020 extrusion by lining up the T-nut, then tightening down the M3 x 8mm SHCS screw. Slide the assembly along the 202 to align the arm.

Alternatively you can align the arm to the T-nuts without the **Coupler_Block** unattached. After it's aligned, add the **Coupler_Block** with the PTFE Tube.

Repeat these steps with each arm.

ELECTRONICS BOX ASSEMBLY

ARM END CAP ASSEMBLY

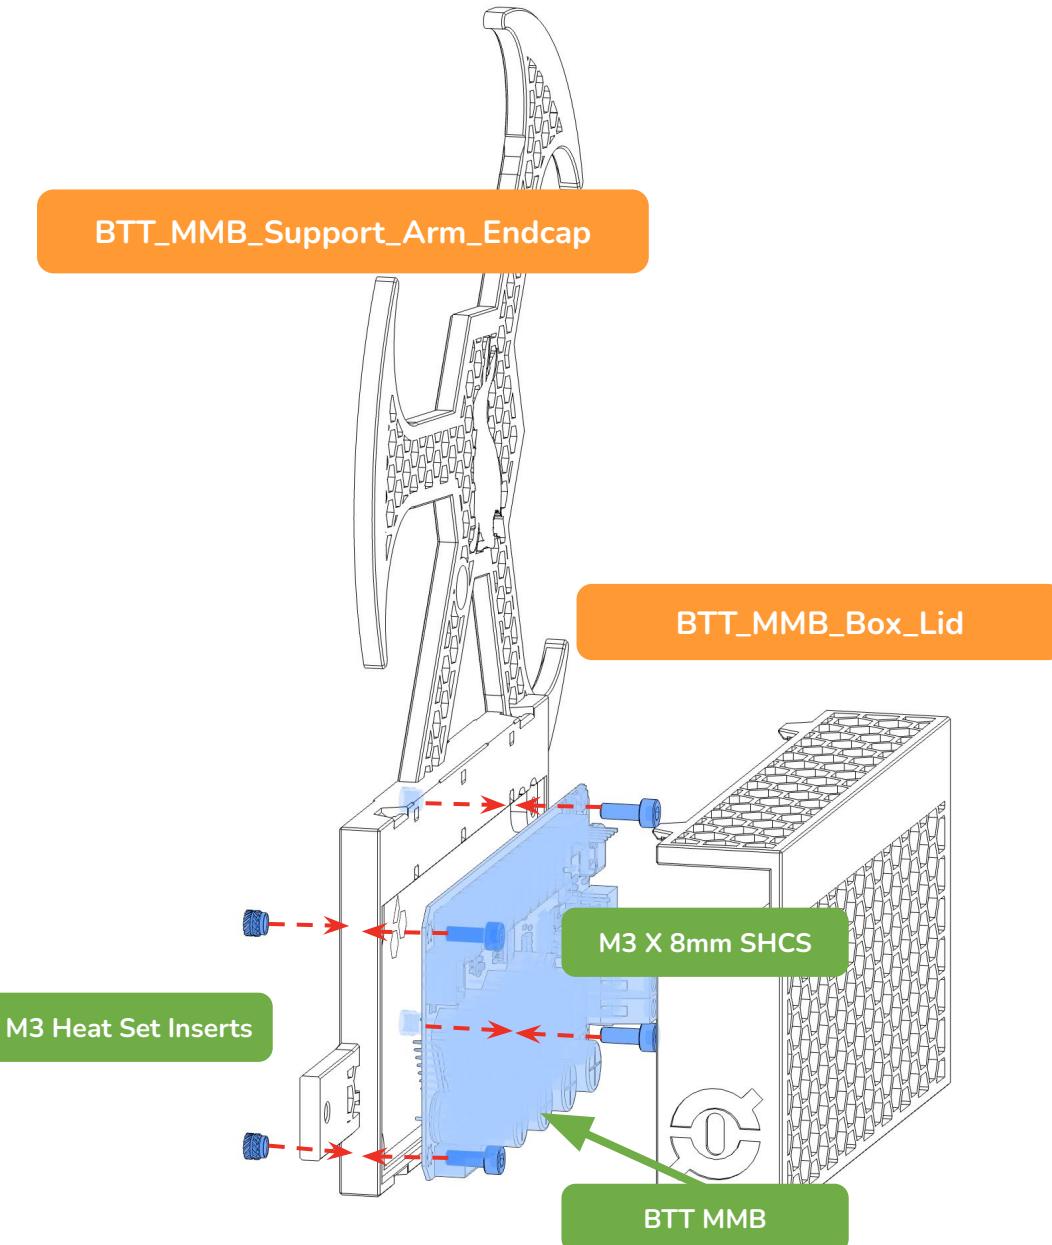

END CAP ASSEMBLY

Insert (4) M3 Heat Set inserts into the holes on the flat side of the **Support_Arm_Endcap**.

Add the BTT MMB Control board into the inset on the opposite side. There are two indents for the BOOT and RESET buttons on the board to give you the correct orientation.

Add (4) M3 x 8mm SHCS screws to secure the board.


Set aside **Box_Lid** for snap installation after wiring is completed.

HEAT SET INSERTS

The list of pages with heat set inserts is on [Page 15](#).

WIRING

WIRING THE MMB

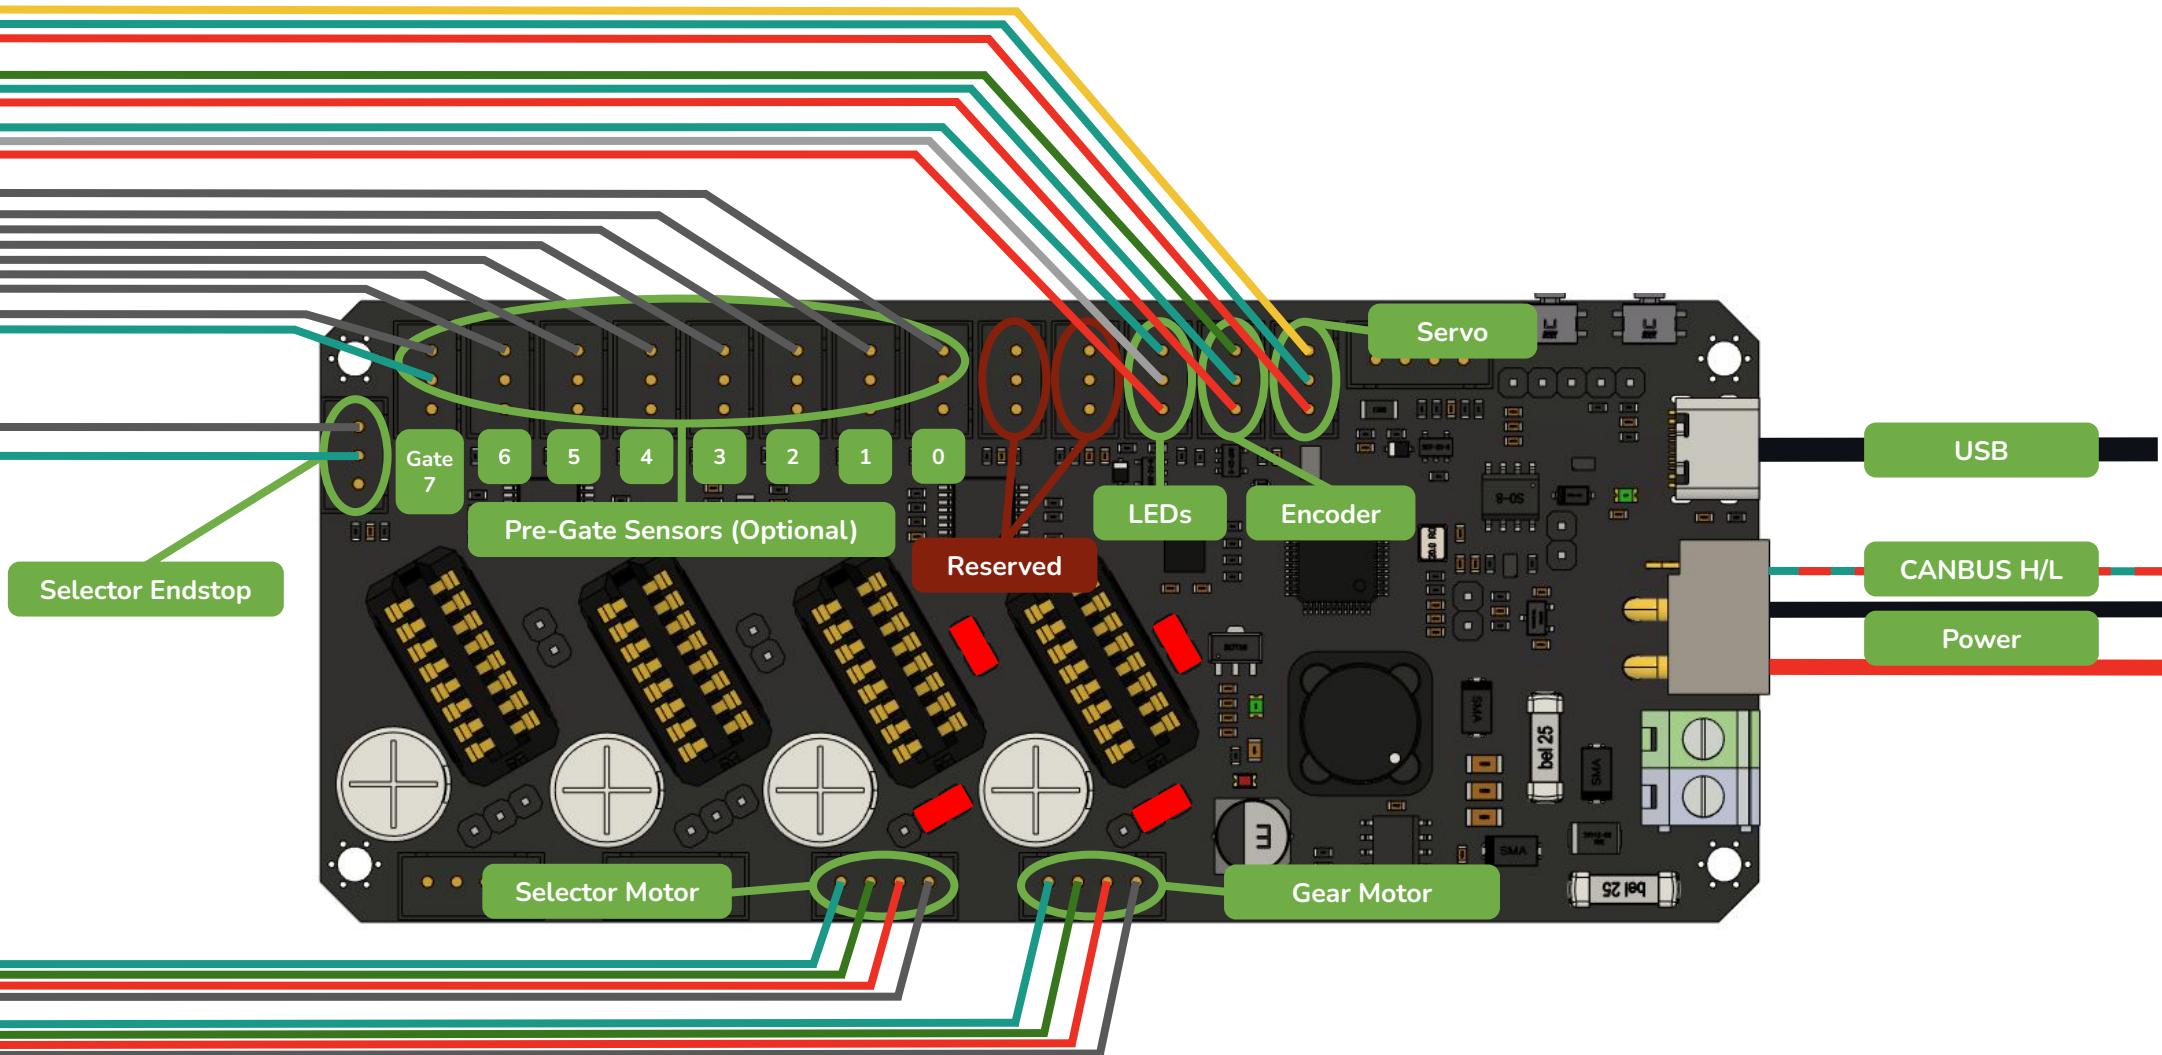


MMB WIRING

Connect the Selector Endstop and optional Pre-Gate Sensor wires (**do not use reserved ports**). Connect the Servo and Encoder wires. Connect the Selector Motor and Gear Motor wires. Wiring color order may vary between manufacturers for stepper motors. Keep a few cms of wires in the MMB box, it will be helpful in case you have to disassemble/reassemble.

AXLE MOUNTING

ARM END CAP ASSEMBLY

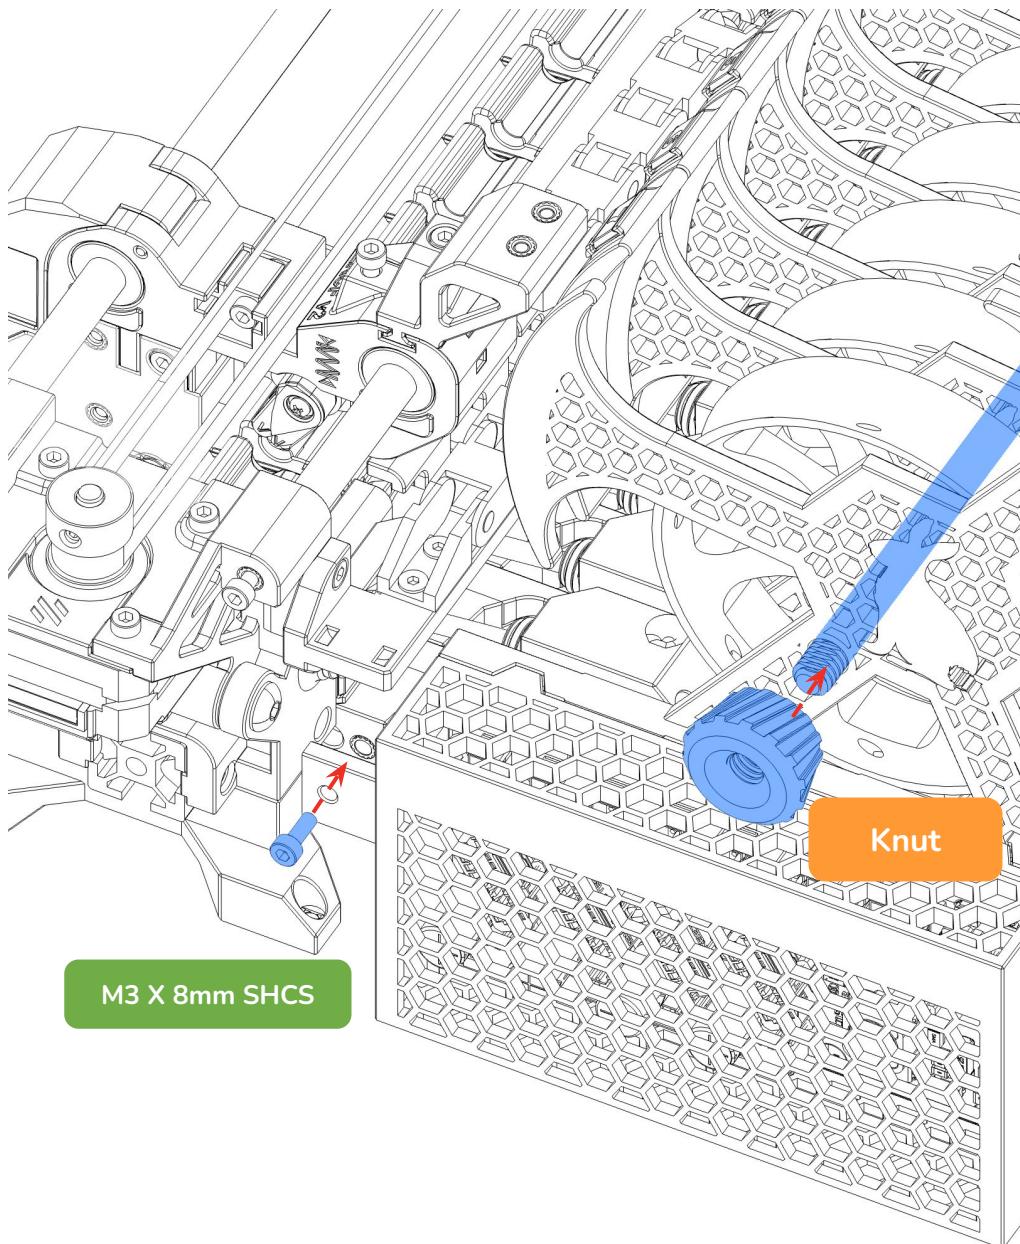


END CAP ASSEMBLY

Next step is to put the **Support_Arm_Endcap** and electronics box onto the axle.

Line up the screw to the secondary hole on the **Support_Arm_Mount** you have set aside with the single heat set for the end cap.

Add the second **Knut**, but don't over tighten. It only needs to hold the axle from wiggling back and forth.

SECURING ARM ARRAY

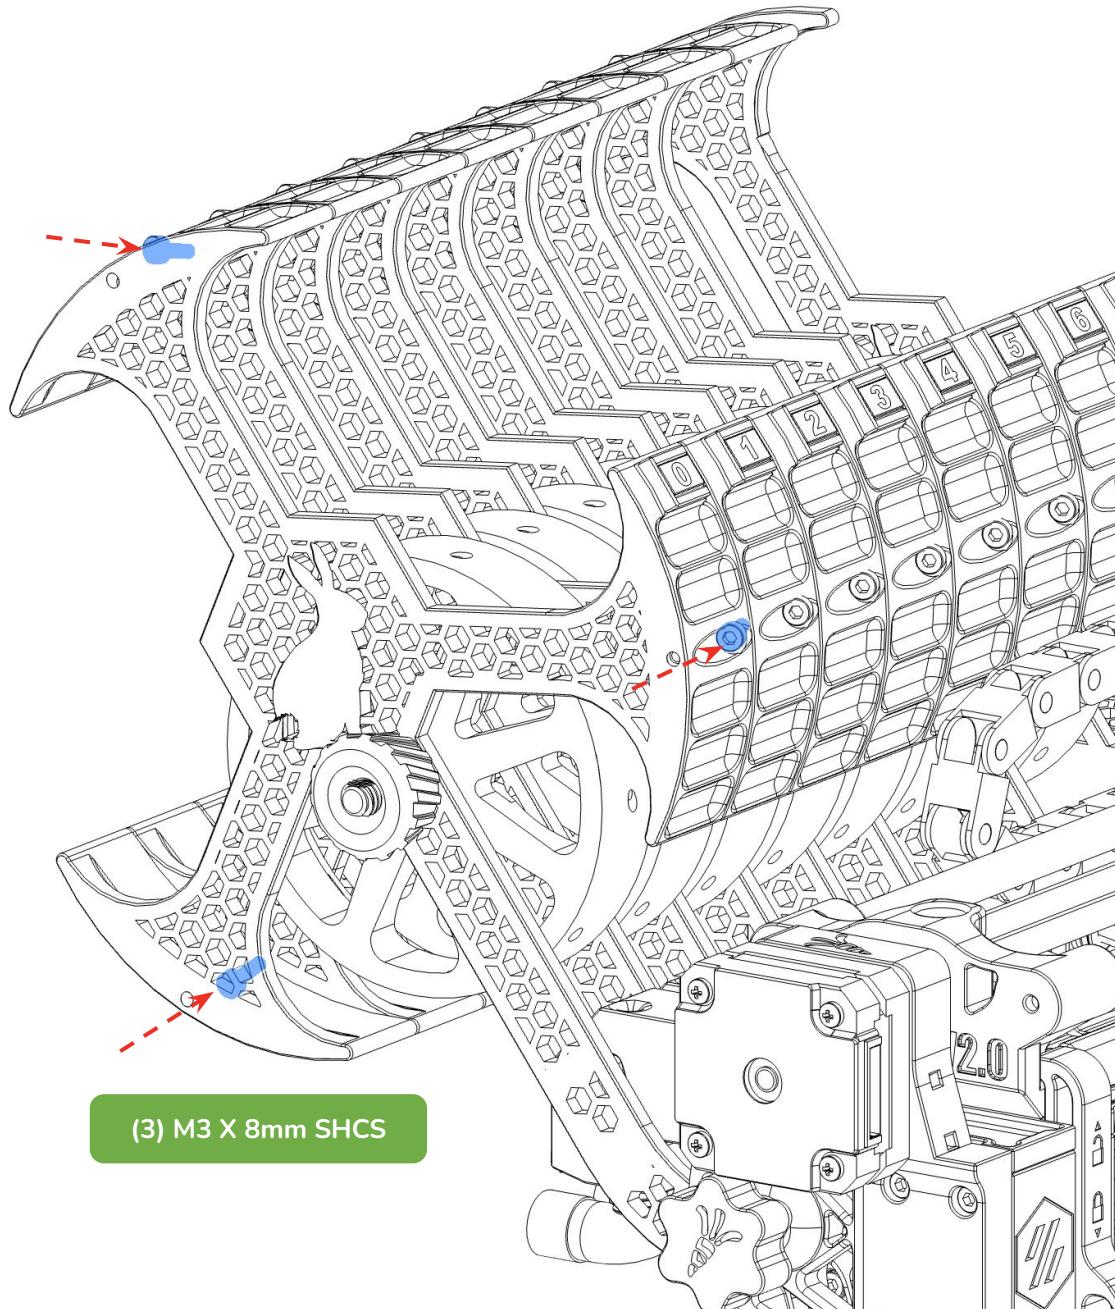

FINAL ASSEMBLY

SECURE ARMS


The final step is to install (3) M3 X 8mm SHCS screws into each of the angled holes. Do not over tighten or it will strip the plastic.

Check each of the **Buffer_Wheels** as you secure each arm and ensure they spin relatively freely. There is always a small amount of friction, but as long as it spins without too much restriction, it will not be affected by the light contact.

FILAMENT TUBE MANAGEMENT

BEST PRACTICES FOR FILAMENT TUBE MANAGEMENT

It is important to optimize your tube path to reduce any resistance for your MMU setup. This is to ensure that the path you choose does not go against the natural curl of your filament. ERCT, as an example is designed to support many of these best practices.

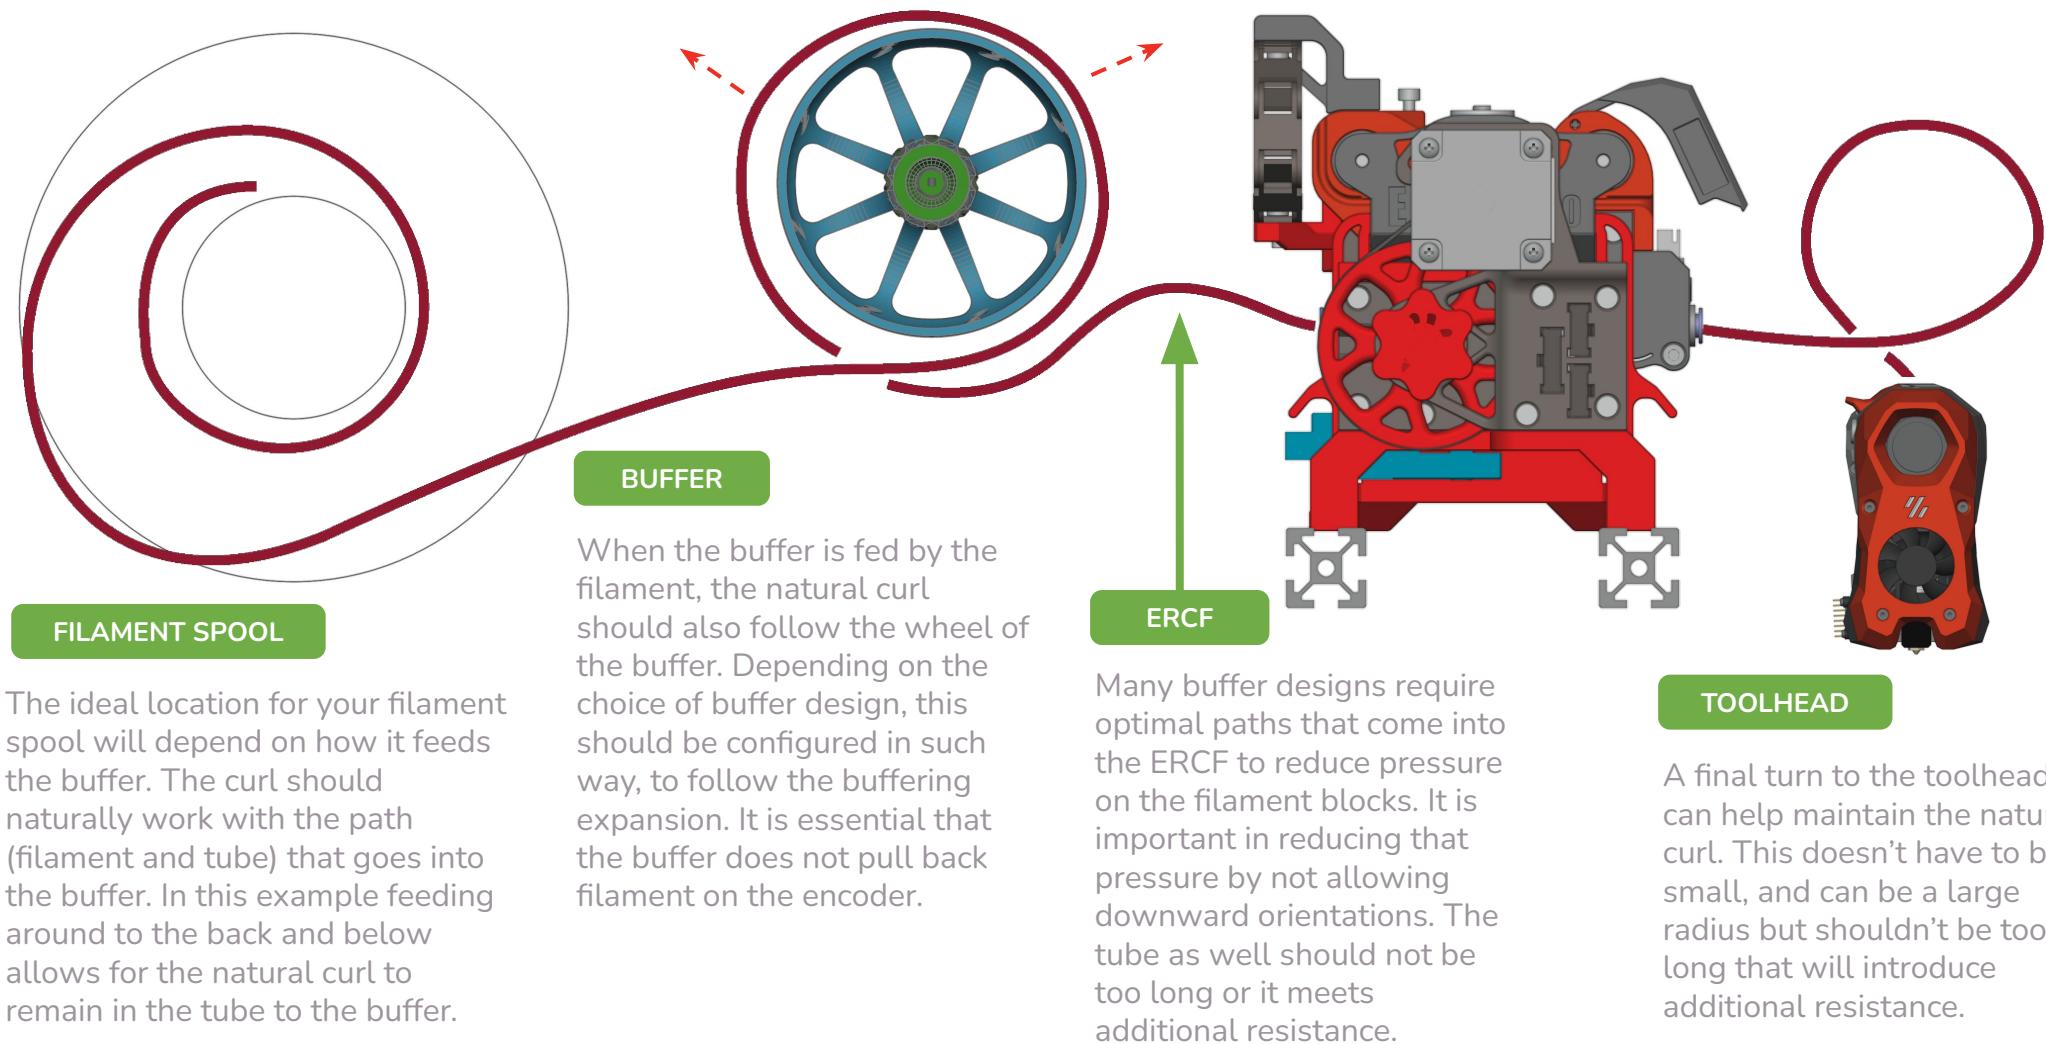

SOFTWARE SETUP AND CALIBRATION

ASSEMBLY COMPLETED! ... NEXT STEP: SETUP & CALIBRATION

This manual is designed to be a reference manual for the build process of an Enraged Rabbit Carrot Feeder v2 MultiMaterial System. Additional details about the build and background on advanced topics can be found on our documentation page linked below. The software setup and other initial setup steps with your new printer can also be found on our documentation page. We recommend starting here.



https://github.com/moggieuk/Happy-Hare/blob/main/doc/ercf_v2.md

HOW TO GET HELP

HOW TO GET HELP

If you need assistance with your build you can head over the VORON Discord group and post your questions in the ercf_questions channel. It is the primary medium to help people with their ERCF build and tuning! You can also check the Github page for the latest releases.



<https://discord.com/channels/460117602945990666/909743915475816458>

REPORTING ISSUES

Should you find an issue in this document or have a suggestion for an improvement please consider opening an issue on GitHub:

(https://github.com/Enraged-Rabbit-Community/ERCF_v2/issues).

When raising an issue please include the relevant page numbers and a short description; annotated screenshots are also very welcome.

We will update the manual based on the feedback we get for the next release (ERCFv2.1).

Enjoy your MMU.

