SpinalHDL Documentation

SpinalHDL contributors

CONTENTS

1	FAQ 1.1 1.2 1.3 1.4 1.5 1.6 1.7	What is the overhead of SpinalHDL generated RTL compared to human written VHDL/Verilog? What if SpinalHDL becomes unsupported in the future? Does SpinalHDL keep comments in generated VHDL/verilog? Could SpinalHDL scale up to big projects? How SpinalHDL came to be Why develop a new language when there is VHDL/Verilog/SystemVerilog How to use an unreleased version of SpinalHDL (but committed on git)
2	Suppo 2.1 2.2	Communication channels
3	Users 3.1 3.2	Compagnies
4	4.1 4.2 4.3 4.4 4.5 4.6	ng Started 7 Getting Started 7 Motivation 10 Presentation 10 Scala Guide 10 Help for VHDL people 21 Cheatsheets 32
5	Data 5.1 5.2 5.3 5.4 5.5 5.6 5.7 5.8 5.9	types 33 Bool 33 Bits 36 UInt/SInt 40 SpinalEnum 49 Bundle 52 Vec 54 UFix/SFix 56 Floating 59 Introduction 62
6	Struc 6.1 6.2 6.3 6.4	turing 63 Component and hierarchy 63 Area 66 Function 67 Clock domains 68

	6.5	Instantiate VHDL and Verilog IP	76
7	Sema	antic	83
	7.1	Assignments	83
	7.2	When/Switch/Mux	84
	7.3	Rules	87
	1.5	Ruics	07
8	_	ential logic	91
	8.1	Registers	
	8.2	RAM/ROM	93
9	Desig	gn errors	101
	9.1	Assignement overlap	101
	9.2	Clock crossing violation	
	9.3	Combinational loop	
	9.4	Hierarchy violation	
	9.4		
		Io bundle	
	9.6	Latch detected	
	9.7	No driver on	
	9.8	NullPointerException	
	9.9	Register defined as component input	109
	9.10	Scope violation	110
	9.11	Spinal can't clone class	111
	9.12	Unassigned register	
	9.13	Unreachable is statement	
	9.14	Width mismatch	
	9.15	Introduction	
	7.13	introduction	110
10	Other	r language features	117
	10.1	Utils	117
			11/
	10.2	Assertions	
		Assertions	119
	10.3	Assertions	119 120
	10.3 10.4	Assertions	119 120 121
	10.3 10.4 10.5	Assertions	119 120 121 123
	10.3 10.4 10.5	Assertions	119 120 121 123
11	10.3 10.4 10.5	Assertions Formal Analog and inout VHDL and Verilog generation Introduction	119 120 121 123
11	10.3 10.4 10.5 10.6 Libra	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries	119 120 121 123 129
11	10.3 10.4 10.5 10.6 Libra	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils	119 120 121 123 129 131 131
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream	119 120 121 123 129 131 131
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow	119 120 121 123 129 131 131 135
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment	119 120 121 123 129 131 131 135 143
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine	119 120 121 123 129 131 131 135 143 144
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU)	119 120 121 123 129 131 131 143 144 145 151
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory	119 120 121 123 129 131 131 135 143 144 151
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory Bus	119 120 121 123 129 131 135 143 144 145 151 151
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory Bus	119 120 121 123 129 131 131 135 143 144 151
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory Bus Com	119 120 121 123 129 131 135 143 144 145 151 151
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8 11.9	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory Bus Com	119 120 121 123 129 131 135 143 144 145 151 151 153
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8 11.9	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory Bus Com O IO	119 120 121 123 129 131 131 135 143 144 145 151 151 153 158
11	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8 11.9 11.10 11.11	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory Bus Com D IO Graphics EDA	119 120 121 123 129 131 131 135 144 145 151 153 158 159
	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8 11.9 11.10 11.11 11.12	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory Bus Com DIO Graphics EDA Introduction	119 120 121 123 129 131 131 135 144 145 151 151 153 163 163
	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8 11.9 11.10 11.11	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory Bus Com O IO Graphics EDA Introduction	119 120 121 123 129 131 131 135 144 145 151 153 158 163 163
	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8 11.9 11.10 11.11 11.12	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory Bus Com DIO Graphics EDDA Introduction slation Setup and installation	119 120 121 123 129 131 131 131 144 145 151 151 158 158 162 163 165
	10.3 10.4 10.5 10.6 Libra 11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8 11.9 11.10 11.11 11.12 11.13	Assertions Formal Analog and inout VHDL and Verilog generation Introduction aries Utils Stream Flow Fragment State machine VexRiscv (RV32IM CPU) Bus Slave Factory Bus Com DIO Graphics EDDA Introduction slation Setup and installation	119 120 121 123 129 131 131 135 144 145 151 153 158 163 163

	12.4	Clock domains	172
	12.5	Thread-full API	174
	12.6	Thread-less API	175
	12.7	Simulation engine	175
	12.8	Examples	
	12.9	Introduction	182
	12.10	How SpinalHDL simulate the hardware	182
	12.11	Performance	182
13	Exan	nples	183
		Simple ones	183
		Intermediates ones	
	13.3	Advanced ones	209
		Introduction	
14	Lega	cv 2	223
		RiscV	223
		pinsec	
15	Dovol	lopers area	239
13		Bus Slave Factory Implementation	
		How to HACK this documentation	
		Types	
	13.3	Types	250
16		r	261
	16.1	Site purpose and structure	261
		What is SpinalHDL?	
		Getting started	
	16.4	Links	162

CHAPTER

ONE

FAQ

1.1 What is the overhead of SpinalHDL generated RTL compared to human written VHDL/Verilog?

The overhead is null, SpinalHDL is not an HLS approach. Its goal is not to translate any arbitrary code into RTL, but to provide a powerful language to describe RTL and rise the abstraction level.

1.2 What if SpinalHDL becomes unsupported in the future?

This question has two sides.

First: SpinalHDL generates VHDL/Verilog files, which means that SpinalHDL will be supported by all EDA tools for many decades.

Second: If there is a bug in SpinalHDL and there is no longer support to fix it, it's not a deadly situation, because the SpinalHDL compiler is fully open source. Maybe you will be able to fix the issue in few hours. Remember how much time it takes to EDA companies to fix issues or to add new features in their closed tools.

1.3 Does SpinalHDL keep comments in generated VHDL/verilog?

No, it doesn't. Generated files should be considerate as a netlist. For example, when you compile C code, do you care about your comments in the generated assembly code?

1.4 Could SpinalHDL scale up to big projects?

Yes, some experiments were done, and it appears that generating hundreds of 3KLUT CPUs with caches takes something like 12 seconds, which is a ridiculous time compared to the time required to simulate or synthesize this kind of design.

1.5 How SpinalHDL came to be

Between December 2014 and April 2016, it was as a personal hobby project. But since April 2016 one person is working full time on it. Some people are also regularly contributing to the project.

1.6 Why develop a new language when there is VHDL/Verilog/SystemVerilog

This page is dedicated to this topic.

1.7 How to use an unreleased version of SpinalHDL (but committed on git)

For instance, if you wanna try the dev branch, do the following in a dummy folder:

git clone https://github.com/SpinalHDL/SpinalHDL.git -b dev
cd SpinalHDL
sbt clean publishLocal

Then in your project, don't forget to update the SpinalHDL version specified in the build.sbt file, see https://github.com/SpinalHDL/SpinalTemplateSbt/blob/master/build.sbt#L10.

To know which version you have to set, look in https://github.com/SpinalHDL/SpinalHDL/blob/dev/project/Version.scala#L7

2 Chapter 1. FAQ

CHAPTER

TWO

SUPPORT

2.1 Communication channels

For bug reporting and feature requests, do not hesitate to emit github issues: https://github.com/SpinalHDL/SpinalHDL/issues

For questions about the SpinalHDL syntax and live talks, a github channel is available: https://gitter.im/SpinalHDL/SpinalHDL

For questions you can also use the forum StackOverflow with the tag SpinalHDL : https://stackoverflow.com/

A google group is also available. Feel free to post whatever subject you want related to SpinalHDL: https://groups.google.com/forum/#!forum/spinalhdl-hardware-description-language

2.2 Commercial support

If you are interested in a presentation, a workshop or consulting, do not hesitate to contact us by email: spinalhdl@gmail.com

CHAPTER

THREE

USERS

3.1 Compagnies

QsPin, Belgium

3.2 Repositories

J1Sc Stack CPU VexRiscv CPU and SoC

6 Chapter 3. Users

CHAPTER

FOUR

GETTING STARTED

4.1 Getting Started

SpinalHDL is a hardware description language written in Scala, a static-type functional language using the Java virtual machine (JVM). In order to start programming with *SpinalHDL*, you must have a JVM as well as the Scala compiler. In the next section, we will explain how to download those tools if you don't have them already.

4.1.1 Requirements / Things to download to get started

Before you download the SpinalHDL tools, you need to install:

- A Java JDK, which can be downloaded from here for instance.
- A Scala 2.11.X distribution, which can be downloaded here (not required if you use SBT).
- The SBT build tool, which can be downloaded here.

Optionally:

- An IDE (which is not compulsory) we advise you to get IntelliJ with its scala plugin.
- Git tool (version control).

4.1.2 How to start programming with SpinalHDL

Once you have downloaded all the requirements, there are two ways to get started with SpinalHDL programming.

- 1. The SBT way: if you already are familiar with the SBT build system and/or if you don't need an IDE.
- 2. The IDE way: get a project already setup for you in an IDE and start programming right away.

The SBT way

We have prepared a ready to go project for you on Github.

- Either clone or download the "getting started" repository.
- Open a terminal in the root of it and run sbt run. When you execute it for the first time, the process could take some time as it will download all the dependencies required to run *SpinalHDL*.

Normally, this command must generate an output file MyTopLevel.vhd, which corresponds to the top level *SpinalHDL* code defined in src\main\scala\MyCode.scala, which corresponds to the *most simple SpinalHDL example*

From a clean Debian distribution you can type followings commands in the shell. It will install java, scala, sbt, download the base project and generate the corresponding VHDL file. Don't worry if it takes time the first time that you run it.

```
sudo apt-get install openjdk-8-jdk sudo apt-get install scala echo "deb https://dl.bintray.com/sbt/debian /" | sudo tee -a /etc/apt/sources.list.d/sbt. list sudo apt-key adv --keyserver hkp://keyserver.ubuntu.com:80 --recv 642AC823 sudo apt-get update sudo apt-get install sbt git clone https://github.com/SpinalHDL/SpinalTemplateSbt.git cd SpinalBaseProject/ sbt run ls MyTopLevel.vhd
```

SBT in a environnement isolated from internet

Basically, SBT use online repositories to download and cache your projects dependancies, this cache is located in your home/.ivy2 folder. The way to setup an internet free environnement is to copy this cache from an internet-full environnement where the cache was already filled once, and copy it on your internet less environnement.

You can get an portable SBT setups there:

https://www.scala-sbt.org/download.html

The IDE way, with IntelliJ IDEA and its Scala plugin

In addition to the aforementioned *requirements*, you also need to download the IntelliJ IDEA (the free *Community edition* is enough). When you have installed IntelliJ, also check that you have enabled its Scala plugin (install information can be found here).

And do the following:

- Either clone or download the "getting started" repository.
- In *Intellij IDEA*, "import project" with the root of this repository, the choose the *Import project from external model SBT* and be sure to check all boxes.
- In addition, you might need to specify some path like where you installed the JDK to IntelliJ.
- In the project (Intellij project GUI), right click on src/main/scala/MyCode/TopLevel.scala and select "Run MyTopLevel".

Normally, this must generate the output file MyTopLevel.vhd in the project directory which corresponds to the most *most simple SpinalHDL example*.

4.1.3 A very simple SpinalHDL example

The following code generates an and gate between two one bit inputs.

```
import spinal.core._
class AND_Gate extends Component {
    /**
```

```
* This is the component definition that corresponds to
  * the VHDL entity of the component
  */
val io = new Bundle {
  val a = in Bool
  val b = in Bool
  val c = out Bool
}

// Here we define some asynchronous logic
io.c := io.a & io.b
}

object AND_Gate {
  // Let's go
  def main(args: Array[String]) {
    SpinalVhdl(new AND_Gate)
  }
}
```

As you can see, the first line you have to write in SpinalHDL is import spinal.core._ which indicates that we are using the *Spinal* components in the file.

Generated code

Once you have successfully compiled your code, the compiler should have emitted the following VHDL code:

```
package pkg_enum is
end pkg_enum;
package pkg_scala2hdl is
end pkg_scala2hdl;
library ieee;
use ieee.std_logic_1164.all;
use ieee.numeric_std.all;
library work;
use work.pkg_scala2hdl.all;
use work.all;
use work.pkg_enum.all;
entity AND_Gate is
 port(
   io_a : in std_logic;
   io_b : in std_logic;
   io_c : out std_logic
  );
```

```
end AND_Gate;
architecture arch of AND_Gate is

begin
  io_c <= (io_a and io_b);
end arch;</pre>
```

4.1.4 What to do next?

It's up to you, but why not have a look at what the *types* are in SpinalHDL or discover what primitives the language provides to describe hardware components? You could also have a look at our *examples* to see some samples of what you could do next.

4.2 Motivation

Redirection to https://github.com/SpinalHDL/SpinalDoc/blob/master/presentation/en/workshop/taste.pdf

4.3 Presentation

Redirection to https://github.com/SpinalHDL/SpinalDoc/blob/master/presentation/en/presentation.pdf

4.4 Scala Guide

Important: Variables and functions should be defined into object, class, function. You can't define them on the root of a Scala file.

4.4.1 Basics

Types

In Scala, there are 5 major types

Туре	Literal	Description
Boolean	true, false	
Int	3, 0x32	32 bits integer
Float	3.14f	32 bits floating point
Double	3.14	64 bits floating point
String	"Hello world"	UTF-16 string

Variables

In scala, you can define a variable by using the var keyword:

```
var number : Int = 0
number = 6
number += 4
println(number) // 10
```

Scala is able to infer the type automatically. You don't need to specify it if the variable is assigned at declaration:

```
var number = 0 //The type of 'number' is inferred as a Int during the compilation.
```

But, in fact, it's not very common to use var in Scala. Instead, constant values defined by val are often used:

```
val two = 2
val three = 3
val six = two * three
```

Functions

For example, if you want to define a function which returns true if the sum of its two arguments is bigger than zero, you can do as follows:

```
def sumBiggerThanZero(a: Float, b: Float): Boolean = {
  return (a + b) > 0
}
```

Then, to call this function, you can just write:

```
sumBiggerThanZero(2.3f, 5.4f)
```

You can also specify arguements by name, which is useful if you have many arguements:

```
sumBiggerThanZero(
  a = 2.3f,
  b = 5.4f
)
```

Return

The return keyword is not necessary. In absence of it, Scala takes the last statement of your function as the returned value.

```
def sumBiggerThanZero(a: Float, b: Float): Boolean = {
  (a + b) > 0
}
```

4.4. Scala Guide 11

Return type inferation

Scala is able to automatically infer the return type. You don't need to specify it:

```
def sumBiggerThanZero(a: Float, b: Float) = {
   (a + b) > 0
}
```

Curly braces

Scala function doesn't require to have curly braces if your function contains only one statement:

```
def sumBiggerThanZero(a: Float, b: Float) = (a + b) > 0
```

Function that returns nothing

If you want a function to return nothing, the return type should be set to Unit. It's equivalent to the C/C++ void.

```
def printer(): Unit = {
  println("1234")
  println("5678")
}
```

Arguements default value

You can specify a default value for each arguement of a function:

```
def sumBiggerThanZero(a: Float, b: Float = 0.0f) = {
   (a + b) > 0
}
```

Apply

Functions named apply are special because you can call them without having to type their name:

```
class Array(){
  def apply(index: Int): Int = index + 3
}

val array = new Array()
val value = array(4)  //array(4) is interpreted as array.apply(4) and will return 7
```

This concept is also applicable for scala object (static)

```
object MajorityVote{
  def apply(value: Int): Int = ...
}
val value = MajorityVote(4) // Will call MajorityVote.apply(4)
```

Object

In scala, there is no static keyword. In place of that, there is object. Everything defined into an object is static.

The following example defines a static function named pow2 which takes a floating point value as parameter and returns a floating point as well.

```
object MathUtils{
  def pow2(value: Float): Float = value*value
}
```

Then you can call it by writing:

```
MathUtils.pow2(42.0f)
```

Entry point (main)

The entry point of a Scala program (the main function) should be defined inside an object as a function named main.

```
object MyTopLevelMain{
  def main(args: Array[String]) {
    println("Hello world")
  }
}
```

Class

The class syntax is very similar to Java. Imagine that you want to define a Color class which takes as construction parameters three Float values (r,g,b):

```
class Color(r: Float, g: Float, b: Float){
  def getGrayLevel(): Float = r * 0.3f + g * 0.4f + b *0.4f
}
```

Then, to instantiate the class from the previous example and use its getGrayLevel function:

```
val blue = new Color(0, 0, 1)
val grayLevelOfBlue = blue.getGrayLevel()
```

Be careful, if you want to access a construction parameter of the class from the outside, this construction parameter should be defined as a val:

```
class Color(val r: Float, val g: Float, val b: Float){ ... }
...
val blue = new Color(0, 0, 1)
val redLevelOfBlue = blue.r
```

4.4. Scala Guide 13

Inheritance

As an example, suppose that you want to define two classes, Rectangle and Square, which extend the class Shape:

```
class Shape{
  def getArea(): Float
}

class Square(sideLength: Float) extends Shape {
  override def getArea() = sideLength * sideLength
}

class Rectangle(width: Float, height: Float) extends Shape {
  override def getArea() = width * height
}
```

Case class

Case class is an alternative way of declaring classes.

```
case class Rectangle(width: Float, height: Float) extends Shape {
  override def getArea() = width * height
}
```

Then there are some differences between case class and class:

- case classes don't need the new keyword to be instantiated
- construction parameters are accessible from outside, you don't need to define them as val.

In SpinalHDL, this explains the reasoning behind the coding conventions: it's in general recommended to use case class instead of class in order to have less typing and more coherency.

Templates / Type parameterization

Imagine you want to design a class which is a queue of a given datatype, in that case you need to provide a type parameter to the class:

```
class Queue[T](){
  def push(that: T) : Unit = ...
  def pop(): T = ...
}
```

If you want to restrict the T type to be a sub class of a given type (for example Shape), you can use the <: Shape syntax:

```
class Shape() {
    def getArea(): Float
}
class Rectangle() extends Shape { ... }

class Queue[T <: Shape](){
    def push(that: T): Unit = ...</pre>
```

```
def pop(): T = ...
}
```

The same is possible for functions:

```
def doSomething[T <: Shape](shape: T): Something = { shape.getArea() }</pre>
```

4.4.2 Coding conventions

Introduction

The coding conventions used in SpinalHDL are the same as the ones documented in the scala doc.

Some additional practical details and cases are explained in next chapters.

class vs case class

When you define a Bundle or a Component, have a preference to declare them as case class.

The reasons are:

- It avoids the use of new keywords. Never having to use it is better than sometimes under some conditions.
- A case class provides an clone function. This is useful in SpinalHDL where there is a need to clone one Bundle. For example, when you define a new Reg or a new Stream of some kind.
- Construction parameters are directly visible from outside.

[case] class

All classes names should start with a upper case letter

```
class Fifo extends Component {
}
class Counter extends Area {
}
case class Color extends Bundle {
}
```

4.4. Scala Guide 15

companion object

A companion object should start with a upper case letter.

```
object Fifo {
  def apply(that: Stream[Bits]): Stream[Bits] = {...}
}
object MajorityVote {
  def apply(that: Bits): UInt = {...}
}
```

An exception to this rule is when the companion object is used as a function (only apply inside), and these apply functions don't generate hardware:

```
object log2{
  def apply(value: Int): Int = {...}
}
```

function

A function should always start with a lower case letter:

```
def sinTable = (0 until sampleCount).map(sampleIndex => {
   val sinValue = Math.sin(2 * Math.PI * sampleIndex / sampleCount)
   S((sinValue * ((1 << resolutionWidth) / 2 - 1)).toInt, resolutionWidth bits)
})

val rom = Mem(SInt(resolutionWidth bit),initialContent = sinTable)</pre>
```

instances

Instances of classes should always start with a lower case letter:

```
val fifo = new Fifo()
val buffer = Reg(Bits(8 bits))
```

if / when

Scala if and SpinalHDL when should normally be written in the following way:

```
if(cond){
    ...
} else if(cond){
} else {
}
```

```
when(cond){
}.elseWhen(cond){
}.otherwise{
}
```

Exceptions could be:

- It's fine to omit the dot before otherwise.
- It's fine to compress a whole if/when statements on a single line if it makes the code more readable.

switch

SpinalHDL switch should normally be written in the following way:

```
switch(value){
  is(key){

  }
  is(key){

  }
  default{
  }
}
```

It's fine to compress a is/default statement on a single line if it makes the code more readable.

Parameters

Grouping parameters of a component/bundle inside a case class is in general welcome:

- Easier to carry/manipulate to configure the design
- Better maintainability

```
case class RgbConfig(rWidth: Int, gWidth: Int, bWidth: Int){
  def getWidth = rWidth + gWidth + bWidth
}

case class Rgb(c: RgbConfig) extends Bundle {
  val r = UInt(c.rWidth bit)
  val g = UInt(c.gWidth bit)
  val b = UInt(c.bWidth bit)
}
```

But this should not be applied in all cases. For example: in a Fifo, it doesn't make sense to group the dataType parameter with the depth of the fifo because, in general, the dataType is something related to the design, while the depth is something related to the configuration of the design.

4.4. Scala Guide 17

```
class Fifo[T <: Data](dataType: T, depth: Int) extends Component {
}</pre>
```

4.4.3 Interaction

Introduction

SpinalHDL is, in fact, not an language, it's regular Scala library. It could seem strange at first glance, but this is a very powerful combination.

You can use the whole Scala world to help you in the description of your hardware via the SpinalHDL library, but to do that properly, it's important to understand how SpinalHDL interacts with Scala.

How SpinalHDL works behind the API

Basically, when you execute your SpinalHDL hardware description, each time you use an SpinalHDL function, operator, classes, it will build in your PC memory a graph that represents the netlist of your design.

Then, when the elaboration is done (Instantiation of your toplevel Component classes), SpinalHDL will do some passes on the graph that was constructed and, if everything is fine, it will flush it into a VHDL or a Verilog file.

Everything is a reference

For example, if you define a Scala function which takes a parameter of type Bits, when you call it, it will be passed as a reference. As consequence of that, if you assign that argument inside the function, it will assign it as if you would have done it outside the function.

Hardware types

Hardware data types in SpinalHDL are the combination of two things:

- An instance of a given Scala type
- The configuration of that instance

For example Bits(8 bits) is the combination of the Scala type Bits and its 8 bits configuration (as construction parameter).

RGB example

Let's take an Rgb bundle class as example:

```
case class Rgb(rWidth: Int, gWidth: Int, bWidth: Int) extends Bundle {
  val r = UInt(rWidth bits)
  val g = UInt(gWidth bits)
  val b = UInt(bWidth bits)
}
```

It appears that the hardware data type is the combination of the Scala Rgb classes and its rWidth, gWidth, bWidth parameterization.

Here is an example of usage:

```
//Define a Rgb signal
val myRgbSignal = Rgb(5, 6, 5)

//Define another Rgb signal of the same data type as the preceding one
val myRgbCloned = cloneOf(myRgbSignal)
```

You can also use functions to define kind of type factory (typedef):

```
//Define a type factory function
def myRgbTypeDef = Rgb(5, 6, 5)

//Use that type factory to create a Rgb signal
val myRgbFromTypeDef = myRgbTypeDef
```

Names of signals in the generated RTL

To name signals in the generated RTL, SpinalHDL uses Java reflections to walk through all your component hierarchy, collecting all references stored inside the class attributes and naming them with their attribute name.

This is why, the names of every signal defined inside a function are lost:

```
def myFunction(arg: UInt) {
   val temp = arg + 1 //You will not retrieve the `temp` signal in the generated RTL
   return temp
}
val value = myFunction(U"000001") + 42
```

One solution if you want preserve the names of the internal variables in the generated RTL, is to use Area:

Scala is for elaboration, SpinalHDL for hardware description

For example, if you write a scala for loop to generate some hardware, it will generate the unrolled result in VHDL/Verilog.

Also, if you want a constant, you should not use SpinalHDL Hardware literals but the scala ones. For example:

```
//This is wrong, because you can't use an hardware Bool as construction parameter, which will do hierarchy violations.
class SubComponent(activeHigh: Bool) extends Component {
```

4.4. Scala Guide 19

```
//...
}

//This is right, you can use all the scala world to parameterize your hardware.

class SubComponent(activeHigh: Boolean) extends Component {

//...
}
```

Scala elaboration capabilities (if, for, functional programming)

All the scala syntax can be used to elaborate the hardware, for instance, a scala if statement could be used to enable or disable the generation of hardware:

The same is true for Scala for loops:

```
val value = Reg(Bits(8 bits))
when(something){
    //Set all bits of value by using a scala for loop (evaluated during the hardware_
    elaboration)
    for(idx <- 0 to 7){
      value(idx) := True
    }
}</pre>
```

Also, all the functionnal programming stuff of SpinalHDL can be used:

4.4.4 Scala guide

Introduction

Scala is a very capable programming language that was influenced by a set of languages, but often, this set of languages doesn't cross the ones that people use. That doesn't help the understanding of concepts and design choices behind Scala.

The following chapters will present Scala, and try to provide enough information about it to be comfortable with SpinalHDL.

4.5 Help for VHDL people

4.5.1 VHDL comparison


Introduction

This page will show the main differences between VHDL and SpinalHDL. Things will not be explained in depth.

Process

Processes have no senses when you define RTL, and worst than that, they are very annoying and force you to split your code and duplicate things.

To produce the following RTL:

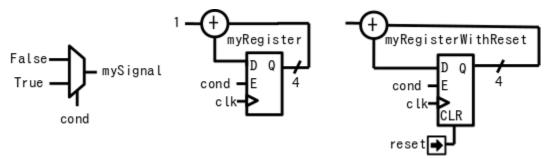

You will have to write the following VHDL:

```
signal mySignal : std_logic;
signal myRegister : std_logic_vector(3 downto 0);
signal myRegisterWithReset : std_logic_vector(3 downto 0);
begin
    process(cond)
    begin
    mySignal <= '0';
    if cond = '1' then
        mySignal <= '1';
    end if;
end process;

process(clk)
begin
    if rising_edge(clk) then</pre>
```

```
if cond = '1' then
    myRegister <= myRegister + 1;
end if;
end if;
end process;

process(clk,reset)
begin
  if reset = '1' then
    myRegisterWithReset <= (others => '0');
elsif rising_edge(clk) then
  if cond = '1' then
    myRegisterWithReset <= myRegisterWithReset + 1;
end if;
end if;
end process;</pre>
```

While in SpinalHDL, it's:

```
val mySignal = Bool
val myRegister = Reg(UInt(4 bits))
val myRegisterWithReset = Reg(UInt(4 bits)) init(0)

mySignal := False
when(cond) {
  mySignal := True
  myRegister := myRegister + 1
  myRegisterWithReset := myRegisterWithReset + 1
}
```

Implicit vs explicit definitions

In VHDL, when you declare a signal, you don't specify if this is a combinatorial signal or a register. Where and how you assign to it decides whether it is combinatorial or registered.

In SpinalHDL these kinds of things are explicit. Registers are defined as registers directly in their declaration.

Clock domains

In VHDL, every time you want to define a bunch of registers, you need the carry the clock and the reset wire to them. In addition, you have to hardcode everywhere how those clock and reset signals should be used (clock edge, reset polarity, reset nature (async, sync)).

In SpinalHDL you can define a ClockDomain, and then define the area of your hardware that uses it.

For example:

```
val coreClockDomain = ClockDomain(
  clock = io.coreClk,
  reset = io.coreReset,
  config = ClockDomainConfig(
     clockEdge = RISING,
```

```
resetKind = ASYNC,
  resetActiveLevel = HIGH
)

val coreArea = new ClockingArea(coreClockDomain) {
  val myCoreClockedRegister = Reg(UInt(4 bit))

// ...
// coreClockDomain will also be applied to all sub components instantiated in the Area
// ...
}
```

Component's internal organization

In VHDL, you have the block features that allow you to define sub areas of logic inside your component. But in fact, nobody uses them, because most people don't know about them, and also because all signals defined inside them are not readable from the outside.

In SpinalHDL you have an Area feature that does it correctly:

```
val timeout = new Area {
  val counter = Reg(UInt(8 bits)) init(0)
  val overflow = False
  when(counter =/= 100) {
    counter := counter + 1
  } otherwise {
    overflow := True
  }
}

val core = new Area {
  when(timeout.overflow) {
    timeout.counter := 0
  }
}
```

Safety

In VHDL as in SpinalHDL, it's easy to write combinatorial loops, or to infer a latch by forgetting to drive a signal in paths of a process.

Then, to detect those issues, you can use some lint tools that will analyse your VHDL, but those tools aren't free. In SpinalHDL the lint process in integrated inside the compiler, and it won't generate the RTL code until everything is fine. It also checks clock domain crossing.

Functions and procedures

Function and procedures are not used very often in VHDL, probably because they are very limited:

- You can only define a chunk of combinatorial hardware, or only a chunk of registers (if you call the function/procedure inside a clocked process).
- You can't define a process inside them.
- You can't instantiate a component inside them.
- The scope of what you can read/write inside them are limited.

In spinalHDL, all those limitation are removed.

An example that mixes combinatorial logic and a register in a single function:

```
def simpleAluPipeline(op: Bits, a: UInt, b: UInt): UInt = {
  val result = UInt(8 bits)

  switch(op){
    is(0){result := a + b}
    is(1){result := a - b}
    is(2){result := a * b}
  }

  return RegNext(result)
}
```

An example with the queue function inside the Stream Bundle (handshake). This function instantiates a FIFO component:

```
class Stream[T <: Data](dataType: T) extends Bundle with IMasterSlave with_
    DataCarrier[T] {
    val valid = Bool
    val ready = Bool
    val payload = cloneOf(dataType)

    def queue(size: Int): Stream[T] = {
        val fifo = new StreamFifo(dataType, size)
        fifo.io.push <> this
        fifo.io.pop
    }
}
```

An example where a function assigns a signal defined outside itself:

```
val counter = Reg(UInt(8 bits)) init(0)
counter := counter + 1

def clear() : Unit = {
   counter := 0
}
when(counter > 42){
   clear()
}
```

Buses and Interfaces

VHDL is very boring when it comes to buses and interfaces. You have two options:

1) Define buses and interfaces wire by wire, each time and everywhere:

```
PADDR : in unsigned(addressWidth-1 downto 0);
PSEL : in std_logic
PENABLE : in std_logic;
PREADY : out std_logic;
PWRITE : in std_logic;
PWDATA : in std_logic_vector(dataWidth-1 downto 0);
PRDATA : out std_logic_vector(dataWidth-1 downto 0);
```

2) Use records but lose parameterization (statically fixed in package), and you have to define one for each directions:

```
P_m : in APB_M;
P_s : out APB_S;
```

SpinalHDL has very strong support for bus and interface declarations with limitless parameterizations:

```
val P = slave(Apb3(addressWidth, dataWidth))
```

You can also use object oriented programming to define configuration objects:

```
val coreConfig = CoreConfig(
 pcWidth = 32,
  addrWidth = 32.
  startAddress = 0x000000000,
  regFileReadyKind = sync,
  branchPrediction = dynamic,
  bypassExecute0 = true,
  bypassExecute1 = true,
  bypassWriteBack = true,
  bypassWriteBackBuffer = true,
  collapseBubble = false,
  fastFetchCmdPcCalculation = true,
  dynamicBranchPredictorCacheSizeLog2 = 7
//The CPU has a system of plugins which allows adding new features into the core.
//Those extensions are not directly implemented into the core, but are kind of an
→additive logic patch defined in a separated area.
coreConfig.add(new MulExtension)
coreConfig.add(new DivExtension)
coreConfig.add(new BarrelShifterFullExtension)
val iCacheConfig = InstructionCacheConfig(
  cacheSize =4096,
  bytePerLine =32,
  wayCount = 1, //Can only be one for the moment
  wrappedMemAccess = true,
  addressWidth = 32,
  cpuDataWidth = 32,
```

```
memDataWidth = 32
new RiscvCoreAxi4(
  coreConfig = coreConfig,
  iCacheConfig = iCacheConfig,
  dCacheConfig = null,
  debug = debug,
  interruptCount = interruptCount
```

Signal declaration

VHDL forces you to define all signals on the top of your architecture, which is annoying.

```
.. (many signal declarations)
 signal a : std_logic;
  .. (many signal declarations)
begin
  .. (many logic definitions)
  . .
  a \ll x \& y
  . .
  .. (many logic definitions)
```

SpinalHDL is flexible when it comes to signal declarations.

```
val a = Bool
a := x \& y
```

It also allows you to define and assign signals in a single line.

```
val a = x & y
```

Component instantiation

VHDL is very verbose about this as you have to redefine all signals of your sub component entity, and then bind them one by one when you instantiate your component.

```
divider_cmd_valid : in std_logic;
divider_cmd_ready : out std_logic;
divider_cmd_numerator : in unsigned(31 downto 0);
divider_cmd_denominator : in unsigned(31 downto 0);
divider_rsp_valid : out std_logic;
                                                                              (continues on next page)
```

```
divider_rsp_ready : in std_logic;
divider_rsp_quotient : out unsigned(31 downto 0);
divider_rsp_remainder : out unsigned(31 downto 0);
divider : entity work.UnsignedDivider
  port map (
    clk
                     => clk.
    reset
                    => reset,
    cmd_valid => divider_cmd_valid,
cmd_ready => divider_cmd_ready,
    cmd_numerator => divider_cmd_numerator,
    cmd_denominator => divider_cmd_denominator,
    rsp_valid => divider_rsp_valid,
rsp_ready => divider_rsp_ready,
    rsp_quotient => divider_rsp_quotient,
    rsp_remainder => divider_rsp_remainder
  );
```

SpinalHDL removes that, and allows you to access the IO of sub components in an object oriented way.

```
val divider = new UnsignedDivider()

//And then if you want to access IO signals of that divider:
divider.io.cmd.valid := True
divider.io.cmd.numerator := 42
```

Casting

There are two annoying casting methods in VHDL:

- boolean <> std_logic (ex: To assign a signal using a condition such as mySignal <= myValue < 10 is not legal)
- unsigned <> integer (ex: To access an array)

SpinalHDL removes these casts by unifying things.

boolean/std_logic:

```
val value = UInt(8 bits)
val valueBiggerThanTwo = Bool
valueBiggerThanTwo := value > 2 //value > 2 return a Bool
```

unsigned/integer:

```
val array = Vec(UInt(4 bits),8)
val sel = UInt(3 bits)
val arraySel = array(sel) //Arrays are indexed directly by using UInt
```

Resizing

The fact that VHDL is strict about bit size is probably a good thing.

```
my8BitsSignal <= resize(my4BitsSignal,8);</pre>
```

In SpinalHDL you have two ways to do the same:

```
//The traditional way
my8BitsSignal := my4BitsSignal.resize(8)

//The smart way
my8BitsSignal := my4BitsSignal.resized
```

Parameterization

VHDL prior to the 2008 revision has many issues with generics. For example, you can't parameterize records, you can't parameterize arrays in the entity, and you can't have types parameters.

Then VHDL 2008 came and fixed those issues. But RTL tool support for VHDL 2008 is really weak depending the vendor.

SpinalHDL has full support of generics integrated natively in its compiler, and it doesn't rely on the VHDL one.

Here is an example of parameterized data structures:

```
val colorStream = Stream(Color(5, 6, 5)))
val colorFifo = StreamFifo(Color(5, 6, 5), depth = 128)
colorFifo.io.push <> colorStream
```

Here is an example of a parameterized component:

```
class Arbiter[T <: Data](payloadType: T, portCount: Int) extends Component {
  val io = new Bundle {
    val sources = Vec(slave(Stream(payloadType)), portCount)
    val sink = master(Stream(payloadType))
  }
  //...
}</pre>
```

Meta hardware description

VHDL has kind of a closed syntax. You can't add abstraction layers on top of it.

SpinalHDL, because it's built on top of Scala, is very flexible, and allows you to define new abstraction layers very easily.

Some examples of that are the FSM tool, the BusSlaveFactory tool, and also the JTAG tool.

4.5.2 VHDL equivalences

Entity and architecture

In SpinalHDL, a VHDL entity and architecture are both defined inside a Component.

Here is an example of a component which has 3 inputs (a,b,c) and an output (result). This component also has an offset construction parameter (like a VHDL generic)

```
case class MyComponent(offset: Int) extends Component {
  val io = new Bundle{
    val a,b,c = in UInt(8 bits)
    val result = out UInt(8 bits)
}
io.result := a + b + c + offset
}
```

Then to instantiate that component, you don't need to bind it:

```
case class TopLevel extends Component{
    ...
    val mySubComponent = MyComponent(offset = 5)
    ...
    mySubComponent.io.a := 1
    mySubComponent.io.b := 2
    mySubComponent.io.c := 3
    ??? := mySubComponent.io.result
    ...
}
```

Data types

SpinalHDL data types are similar to the VHDL ones:

VHDL	SpinalHDL
std_logic	Bool
std_logic_vector	Bits
unsigned	UInt
signed	SInt

While for defining an 8 bit unsigned in VHDL you have to give the range of bits unsigned (7 downto 0), in SpinalHDL you simply supply the number of bits UInt(8 bits).

VHDL	SpinalHDL
records	Bundle
array	Vec
enum	SpinalEnum

Here is an example of the SpinalHDL Bundle definition. channelWidth is a construction parameter, like VHDL generics, but for data structures:

```
case class RGB(channelWidth: Int) extends Bundle {
  val r,g,b = UInt(channelWidth bits)
}
```

Then for example, to instantiate a Bundle, you need to write val myColor = RGB(channelWidth=8).

Signal

Here is an example about signal instantiations:

Assignements

In SpinalHDL, the := assignment operator is equivalent to the VHDL signal assignment (<=):

```
val myUInt = UInt(8 bits)
myUInt := 6
```

Conditional assignments are done like in VHDL by using if/case statements:

```
val clear = Bool
val counter = Reg(UInt(8 bits))

when(clear){
    counter := 0
}.elsewhen(counter === 76){
    counter := 79
}.otherwise{
    counter(7) := ! counter(7)
}

switch(counter){
    is(42){
        counter := 65
    }
    default{
        counter := counter + 1
    }
}
```

Literals

Literals are a little bit different than in VHDL:

```
val myBool = Bool
myBool := False
myBool := True
myBool := Bool(4 > 7)

val myUInt = UInt(8 bits)
myUInt := "0001_1100"
myUInt := "xEE"
myUInt := 42
myUInt := U(54,8 bits)
myUInt := ((3 downto 0) -> myBool,default -> true)
when(myUInt === U(myUInt.range -> true)){
    myUInt(3) := False
}
```

Registers

In SpinalHDL, registers are explicitly specified while in VHDL it's inferred. Here is an example of SpinalHDL registers:

```
val counter = Reg(UInt(8 bits)) init(0)
counter := counter + 1  //Count up each cycle

//init(0) means that the register should be initialized to zero when a reset occurs
```

Process blocks

Process blocks are a simulation feature that is unnecessary to design RTL. It's why SpinalHDL doesn't contain any feature analog to process blocks, and you can assign what you want where you want.

```
val cond = Bool
val myCombinatorial = Bool
val myRegister = UInt(8 bits)

myCombinatorial := False
when(cond)
  myCombinatorial := True
  myRegister = myRegister + 1
}
```

4.6 Cheatsheets

4.6.1 Core

Redirection to https://github.com/SpinalHDL/SpinalDoc/blob/master/cheatSheet_core_oo.pdf

4.6.2 Lib

 $Redirection\ to\ https://github.com/SpinalHDL/SpinalDoc/blob/master/cheatSheet_lib_oo.pdf$

4.6.3 Symbolic

 $Redirection\ to\ https://github.com/SpinalHDL/SpinalDoc/blob/master/cheatSheet_symbolic.pdf$

CHAPTER

FIVE

DATA TYPES

5.1 Bool

5.1.1 Description

The Bool type corresponds to a boolean value (True or False).

5.1.2 Declaration

The syntax to declare a boolean value is as follows: (everything between [] is optional)

Syntax	Description	Return
Bool[()]	Create a Bool	Bool
True	Create a Bool assigned with true	Bool
False	Create a Bool assigned with false	Bool
Bool(value:	Create a Bool assigned with a Scala Boolean(true, false)	Bool
Boolean)		

5.1.3 Operators

The following operators are available for the Bool type:

Logic

Operator	Description	Return type
!x	Logical NOT	Bool
	Logical AND	Bool
x && y		
x & y		
	Logical OR	Bool
x y		
x y		
x ^ y	Logical XOR	Bool
x.set[()]	Set x to True	
x.clear[()]	Set x to False	
x.setWhen(cond)	Set x when cond is True	Bool
x.clearWhen(cond)	Clear x when cond is True	Bool

```
val a, b, c = Bool
val res = (!a & b) ^ c // ((NOT a) AND b) XOR c

val d = False
when(cond){
    d.set() // equivalent to d := True
}

val e = False
e.setWhen(cond) // equivalent to when(cond){ d := True }
```

Edge detection

Operator	Description	Return
		type
x.edge[()]	Return True when x changes state	Bool
x.edge(initAt: Bool)	Same as x.edge but with a reset value	Bool
x.rise[()]	Return True when x was low at the last cycle and is now high	Bool
x.rise(initAt: Bool)	Same as x.rise but with a reset value	Bool
x.fall[()]	Return True when x was high at the last cycle and is now low	Bool
x.fall(initAt: Bool)	Same as x.fall but with a reset value	Bool
x.edges[()]	Return a bundle (rise, fall, toggle)	BoolEdges
x.edges(initAt: Bool)	Same as x.edges but with a reset value	BoolEdges

```
when(myBool_1.rise(False)){
    // do something when a rising edge is detected
}
```

```
val edgeBundle = myBool_2.edges(False)
when(edgeBundle.rise){
    // do something when a rising edge is detected
}
when(edgeBundle.fall){
    // do something when a falling edge is detected
}
when(edgeBundle.toggle){
    // do something at each edge
}
```

Comparison

Operator	Description	Return type
x === y	Equality	Bool
x =/= y	Inequality	Bool

```
when(myBool){ // Equivalent to when(myBool === True)
    // do something when myBool is True
}
when(!myBool){ // Equivalent to when(myBool === False)
    // do something when myBool is False
}
```

Type cast

Operator	Description	Return
x.asBits	Binary cast to Bits	Bits(w(x) bits)
x.asUInt	Binary cast to UInt	UInt(w(x) bits)
x.asSInt	Binary cast to SInt	SInt(w(x) bits)
x.asUInt(bitCount)	Binary cast to UInt and resize	UInt(bitCount bits)
x.asBits(bitCount)	Binary cast to Bits and resize	Bits(bitCount bits)

```
// Add the carry to an SInt value
val carry = Bool
val res = mySInt + carry.asSInt
```

5.1. Bool 35

Misc

Operator	Description	Return
x ## y	Concatenate, x->high, y->low	Bits(w(x) + w(y) bits)

```
val a, b, c = Bool

// Concatenation of three Bool into a Bits
val myBits = a ## b ## c
```

5.2 Bits

5.2.1 Description

The Bits type corresponds to a vector of bits that does not convey any arithmetic meaning.

5.2.2 Declaration

The syntax to declare a bit vector is as follows: (everything between [] is optional)

Syntax	Description	Return
Bits [()]	Create a BitVector, bits count is inferred	Bits
Bits(x bits)	Create a BitVector with x bits	Bits
	Create a BitVector with x bits assigned with 'value'	Bits
B(value: Int[, x bits])		
B(value: BigInt[, x bits])		
B"[[size']base]value"	Create a BitVector assigned with 'value' (Base: 'h', 'd', 'o', 'b')	Bits
B([x bits,] element,)	Create a BitVector assigned with the value specified by elements	Bits

```
// Declaration
                        // the size is inferred
val myBits = Bits()
val myBits1 = Bits(32 bits)
val myBits2 = B(25, 8 bits)
val myBits3 = B"8'xFF"
                        // Base could be x,h (base 16)
                         //
                                          d (base 10)
                                             (base 8)
                                          b (base 2)
val myBits4 = B"1001_0011" // _ can be used for readability
// Element
val myBits5 = B(8 bits, default -> True) // "11111111"
val myBits6 = B(8 bits, (7 downto 5) -> B"101", 4 -> true, 3 -> True, default -> false )
→// "10111000"
val myBits7 = Bits(8 bits)
myBits7 := (7 -> true, default -> false) // "100000000" (For assignement purposes, you_
\hookrightarrow can omit the B)
```

5.2.3 Operators

The following operators are available for the Bits type

Logic

Operator	Description	Return type
~X	Bitwise NOT	Bits(w(x) bits)
x & y	Bitwise AND	Bits(w(xy) bits)
x y	Bitwise OR	Bits(w(xy) bits)
x ^ y	Bitwise XOR	Bits(w(xy) bits)
x.xorR	XOR all bits of x	Bool
x.orR	OR all bits of x	Bool
x.andR	AND all bits of x	Bool
x >> y	Logical shift right, y: Int	Bits(w(x) - y bits)
x >> y	Logical shift right, y: UInt	Bits(w(x) bits)
x << y	Logical shift left, y: Int	Bits(w(x) + y bits)
x << y	Logical shift left, y: UInt	Bits(w(x) + max(y) bits)
x >> y	Logical shift right, y: Int/UInt	Bits(w(x) bits)
x << y	Logical shift left, y: Int/UInt	Bits(w(x) bits)
x.rotateLeft(y)	Logical left rotation, y: UInt/Int	Bits(w(x) bits)
x.rotateRight(y)	Logical right rotation, y: UInt/Int	Bits(w(x) bits)
x.clearAll[()]	Clear all bits	
x.setAll[()]	Set all bits	
x.setAllTo(value: Boolean)	Set all bits to the given Boolean value	
x.setAllTo(value: Bool)	Set all bits to the given Bool value	

```
// Bitwise operator
val a, b, c = Bits(32 bits)
c := ~(a & b) // Inverse(a AND b)

val all_1 = a.andR // Check that all bits are equal to 1

// Logical shift
val bits_10bits = bits_8bits << 2 // shift left (results in 10 bits)
val shift_8bits = bits_8bits | << 2 // shift left (results in 8 bits)

// Logical rotation
val myBits = bits_8bits.rotateLeft(3) // left bit rotation

// Set/clear
val a = B"8'x42"
when(cond){
   a.setAll() // set all bits to True when cond is True
}</pre>
```

5.2. Bits 37

Comparison

Operator	Description	Return type
x === y	Equality	Bool
x =/= y	Inequality	Bool

```
when(myBits === 3){
}
when(myBits_32 =/= B"32'x44332211"){
}
```

Type cast

Operator	Description	Return
x.asBits	Binary cast to Bits	Bits(w(x) bits)
x.asUInt	Binary cast to UInt	UInt(w(x) bits)
x.asSInt	Binary cast to SInt	SInt(w(x) bits)
x.asBools	Cast to an array of Bools	Vec(Bool, w(x))
B(x: T)	Cast Data to Bits	Bits(w(x) bits)

To cast a Bool, UInt or a SInt into a Bits, you can use B(something)

```
// cast a Bits to SInt
val mySInt = myBits.asSInt

// create a Vector of bool
val myVec = myBits.asBools

// Cast a SInt to Bits
val myBits = B(mySInt)
```

Bit extraction

Operator	Description	Return
x(y)	Readbit, y: Int/UInt	Bool
x(hi,lo)	Read bitfield, hi: Int, lo: Int	Bits(hi-lo+1 bits)
x(offset,width bits)	Read bitfield, offset: UInt, width: Int	Bits(width bits)
x(range)	Read a range of bit. Ex: myBits(4 downto 2)	Bits(range bits)
x(y) := z	Assign bits, y: Int/UInt	Bool
x(offset, width bits) :=	Assign bitfield, offset: UInt, width: Int	Bits(width bits)
Z		
x(range) := z	Assign a range of bit. Ex: myBits(4 downto 2) := B"010"	Bits(range bits)

```
// get the element at the index 4
val myBool = myBits(4)
```

```
// assign
myBits(1) := True

// Range
val myBits_8bits = myBits_16bits(7 downto 0)
val myBits_7bits = myBits_16bits(0 to 6)
val myBits_6bits = myBits_16Bits(0 until 6)

myBits_8bits(3 downto 0) := myBits_4bits
```

Misc

Operator	Description	Return
x.getWidth	Return bitcount	Int
x.range	Return the range (x.high downto 0)	Range
x.high	Return the upper bound of the type x	Int
x.msb	Return the most significant bit	Bool
x.lsb	Return the least significant bit	Bool
x ## y	Concatenate, x->high, y->low	Bits(w(x) + w(y) bits)
x.subdivideIn(y slices)	Subdivide x in y slices, y: Int	Vec(Bits, y)
x.subdivideIn(y bits)	Subdivide x in multiple slices of y bits, y: Int	Vec(Bits, w(x)/y)
x.resize(y)	Return a resized copy of x, if enlarged, it is filled with	Bits(y bits)
	zero, y: Int	
x.resized	Return a version of x which is allowed to be automati-	Bits(w(x) bits)
	cally resized were needed	
x.resizeLeft(x)	Resize by keeping MSB at the same place, x:Int	Bits(x bits)

```
println(myBits_32bits.getWidth) // 32
myBool := myBits.lsb // equivalent to myBits(0)
// concatenation
myBits_24bits := bits_8bits_1 ## bits_8bits_2 ## bits_8bits_3
// Subdivide
val sel = UInt(2 bits)
val myBitsWord = myBits_128bits.subdivideIn(32 bits)(sel)
   // sel = 0 => myBitsWord = myBits_128bits(127 downto 96)
   // sel = 1 => myBitsWord = myBits_128bits( 95 downto 64)
   // sel = 2 => myBitsWord = myBits_128bits( 63 downto 32)
   // sel = 3 => myBitsWord = myBits_128bits( 31 downto 0)
// if you want to access in a reverse order you can do
val myVector = myBits_128bits.subdivideIn(32 bits).reverse
val myBitsWord = myVector(sel)
// Resize
myBits_32bits := B"32'x112233344"
                                            // automatic resize (myBits_8bits = 0x44)
myBits_8bits := myBits_32bits.resized
```

(continues on next page)

5.2. Bits 39

```
myBits_8bits := myBits_32bits.resize(8) // resize to 8 bits (myBits_8bits = 0x44)
myBits_8bits := myBits_32bits.resizeLeft(8) // resize to 8 bits (myBits_8bits = 0x11)
```

5.3 UInt/SInt

5.3.1 Description

The UInt/SInt type corresponds to a vector of bits that can be used for signed/unsigned integer arithmetic.

5.3.2 Declaration

The syntax to declare an integer is as follows: (everything between [] is optional)

Syntax	Description	Return
	Create an unsigned/signed integer, bits count is inferred	
UInt[()]		UInt
SInt[()]		SInt
	Create an unsigned/signed integer with x bits	
UInt(x bits)		UInt
SInt(x bits)		SInt
	Create an unsigned/signed integer assigned with 'value'	
U(value: Int[,x bits])		UInt
U(value: BigInt[,x bits])		SInt
S(value: Int[,x bits])		
S(value: BigInt[,x bits])		
	Create an unsigned/signed integer assigned with 'value' (Base: 'h',	
U"[[size']base]value"	'd', 'o', 'b')	UInt
S"[[size']base]value"		SInt
	Create an unsigned integer assigned with the value specified by elements	
U([x bits,] element,)	elements	UInt
S([x bits,] element,)		SInt

```
o (base 8)
                        //
                                         b (base 2)
myUInt := U"8'h1A"
myUInt := 2
                        // You can use scala Int as literal value
val myBool := myUInt === U(7 \rightarrow true, (6 downto 0) \rightarrow false)
val myBool := myUInt === U(myUInt.range -> true)
// For assignement purposes, you can omit the U/S, which also alow the use of the
→[default -> ???] feature
myUInt := (default -> true)
                                                   //Assign myUInt with "11111111"
myUInt := (myUInt.range -> true)
                                                   //Assign myUInt with "11111111"
myUInt := (7 -> true, default -> false)
                                                   //Assign myUInt with "10000000"
myUInt := ((4 downto 1) -> true, default -> false) //Assign myUInt with "00011110"
```

5.3.3 Operators

The following operators are available for the UInt and SInt type

Logic

Operator	Description	Return type
x ^ y	Logical XOR	Bool
~X	Bitwise NOT	T(w(x) bits)
x & y	Bitwise AND	T(max(w(xy) bits)
x y	Bitwise OR	T(max(w(xy) bits)
x ^ y	Bitwise XOR	T(max(w(xy) bits)
x.xorR	XOR all bits of x	Bool
x.orR	OR all bits of x	Bool
x.andR	AND all bits of x	Bool
x >> y	Arithmetic shift right, y: Int	T(w(x) - y bits)
x >> y	Arithmetic shift right, y: UInt	T(w(x) bits)
x << y	Arithmetic shift left, y: Int	T(w(x) + y bits)
x << y	Arithmetic shift left, y: UInt	T(w(x) + max(y) bits)
x >> y	Logical shift right, y: Int/UInt	T(w(x) bits)
x << y	Logical shift left, y: Int/UInt	T(w(x) bits)
x.rotateLeft(y)	Logical left rotation, y: UInt/Int	T(w(x) bits)
x.rotateRight(y)	Logical right rotation, y: UInt/Int	T(w(x) bits)
x.clearAll[()]	Clear all bits	
x.setAll[()]	Set all bits	
x.setAllTo(value :	Set all bits to the given Boolean value	
Boolean)		
x.setAllTo(value : Bool)	Set all bits to the given Bool value	

```
// Bitwise operator
val a, b, c = SInt(32 bits)
c := ~(a & b) // Inverse(a AND b)
```

(continues on next page)

5.3. UInt/SInt 41

```
val all_1 = a.andR // Check that all bits are equal to 1

// Logical shift
val uint_10bits = uint_8bits << 2 // shift left (resulting in 10 bits)
val shift_8bits = uint_8bits | << 2 // shift left (resulting in 8 bits)

// Logical rotation
val myBits = uint_8bits.rotateLeft(3) // left bit rotation

// Set/clear
val a = B"8'x42"
when(cond){
   a.setAll() // set all bits to True when cond is True
}</pre>
```

Arithmetic

Operator	Description	Return
x + y	Addition	$T(\max(w(x), w(y)), bits)$
x +^ y	Addition with carray	$T(\max(w(x), w(y) + 1), bits)$
x + y	addition by sat carray bit	$T(\max(w(x), w(y)), bits)$
x - y	Subtraction	$T(\max(w(x), w(y)), bits)$
x - y	Subtraction with carray	$T(\max(w(x), w(y) + 1), \text{ bits})$
x - y	Subtraction by sat carray bit	$T(\max(w(x), w(y)), bits)$
x * y	Multiplication	T(w(x) + w(y)), bits)
x / y	Division	T(w(x),bits)
x % y	Modulo	T(w(x),bits)

```
// Addition
val res = mySInt_1 + mySInt_2
```

Comparison

Operator	Description	Return type
x === y	Equality	Bool
x =/= y	Inequality	Bool
x > y	Greater than	Bool
x >= y	Greater than or equal	Bool
x < y	Less than	Bool
x <= y	Less than or equal	Bool

```
// Comparaison between two SInt
myBool := mySInt_1 > mySInt_2

// Comparaison between a UInt and a literal
myBool := myUInt_8bits >= U(3, 8 bits)
```

```
when(myUInt_8bits === 3){
}
```

Type cast

Operator	Description	Return
x.asBits	Binary cast to Bits	Bits(w(x),bits)
x.asUInt	Binary cast to UInt	UInt(w(x),bits)
x.asSInt	Binary cast to SInt	SInt(w(x),bits)
x.asBools	Cast into a array of Bool	Vec(Bool, w(x))
S(x: T)	Cast a Data into a SInt	SInt(w(x),bits)
U(x: T)	Cast a Data into an UInt	UInt(w(x),bits)
x.intoSInt	convert to SInt expand signbit	SInt(w(x) + 1, bits)

To cast a Bool, a Bits or a SInt into a UInt, you can use U(something). To cast things into a SInt, you can use S(something)

```
// cast a SInt to Bits
val myBits = mySInt.asBits

// create a Vector of bool
val myVec = myUInt.asBools

// Cast a Bits to SInt
val mySInt = S(myBits)
```

Bit extraction

Operator	Description	Return
x(y)	Readbit, y: Int/UInt	Bool
x(offset, width)	Read bitfield, offset: UInt, width: Int	T(width bits)
x(range)	Read a range of bits. Ex : myBits(4 downto 2)	T(range bits)
x(y) := z	Assign bits, y: Int/UInt	Bool
x(offset, width) := z	Assign bitfield, offset: UInt, width: Int	T(width bits)
x(range) := z	Assign a range of bit. Ex : myBits(4 downto 2) := U"010"	T(range bits)

```
// get the bit at index 4
val myBool = myUInt(4)

// assign bit 1 to True
mySInt(1) := True

// Range
val myUInt_8bits = myUInt_16bits(7 downto 0)
val myUInt_7bits = myUInt_16bits(0 to 6)
```

(continues on next page)

5.3. UInt/SInt 43

```
val myUInt_6bits = myUInt_16Bits(0 until 6)
mySInt_8bits(3 downto 0) := mySInt_4bits
```

Misc

Operator	Description	Return
x.getWidth	Return bitcount	Int
x.msb	Return the most significant bit	Bool
x.lsb	Return the least significant bit	Bool
x.range	Return the range (x.high downto 0)	Range
x.high	Return the upper bound of the type x	Int
x ## y	Concatenate, x->high, y->low	Bits(w(x) + w(y) bits)
x @ @ y	Concatenate x:T with y:Bool/SInt/UInt	T(w(x) + w(y) bits)
x.subdivideIn(y slices)	Subdivide x into y slices, y: Int	Vec(T, y)
x.subdivideIn(y bits)	Subdivide x into multiple slices of y bits, y: Int	Vec(T, w(x)/y)
x.resize(y)	Return a resized copy of x, if enlarged, it is filled with zero for UInt or filled with the sign for SInt, y: Int	T(y bits)
x.resized	Return a version of x which is allowed to be automatically resized where needed	T(w(x) bits)
myUInt.twoComplement(en Bool)	: Use the two's complement to transform an UInt into an SInt	SInt(w(myUInt) + 1, bits)
mySInt.abs	Return the absolute value of the UInt value	UInt(w(mySInt) bits)
mySInt.abs(en: Bool)	Return the absolute value of the UInt value when en is True	UInt(w(mySInt) bits)
mySInt.sign	Return most significant bit	Bool
x.expand	Return x with 1 bit expand	T(w(x)+1 bit)
mySInt.absWithSym	Return the absolute value of the UInt value with symmetric, shrink 1 bit	UInt(w(mySInt) - 1, bits)

```
myBool := mySInt.lsb // equivalent to mySInt(0)

// Concatenation
val mySInt = mySInt_1 @@ mySInt_1 @@ myBool
val myBits = mySInt_1 ## mySInt_1 ## myBool

// Subdivide
val sel = UInt(2 bits)
```


```
val mySIntWord = mySInt_128bits.subdivideIn(32 bits)(sel)
   // sel = 0 => mySIntWord = mySInt_128bits(127 downto 96)
   // sel = 1 => mySIntWord = mySInt_128bits( 95 downto 64)
   // sel = 2 => mySIntWord = mySInt_128bits( 63 downto 32)
   // sel = 3 => mySIntWord = mySInt_128bits( 31 downto 0)
// if you want to access in a reverse order you can do
val myVector
            = mySInt_128bits.subdivideIn(32 bits).reverse
val mySIntWord = myVector(sel)
// Resize
myUInt_32bits := U"32'x112233344"
myUInt_8bits := myUInt_32bits.resize(8)
                                       // resize to 8 bits (myUInt_8bits = 0x44)
// Two's complement
mySInt := myUInt.twoComplement(myBool)
// Absolute value
mySInt_abs := mySInt.abs
```

5.3.4 fixPoint operation

For fixed-point, we can divide it into two parts.

- LowerBit Operation(round methods)
- HighBit Operation(saturation operations)

Lower Bit operation



About Rounding: https://en.wikipedia.org/wiki/Rounding

5.3. Ulnt/SInt 45

SpinalHDL-	Wikipedia-	API	Matmatic-	re-	Sup-
Name	Name		Alogrithm	turn(align=false)	ported
FLOOR	RoundDown	floor	floor(x)	w(x)-n bits	Yes
FLOORTOZERO	RoundToZero	floorToZero	sign*floor(abs(x))	w(x)-n bits	Yes
CEIL	RoundUp	ceil	ceil(x)	w(x)-n+1 bits	Yes
CEILTOINF	RoundToInf	ceilToInf	sign*ceil(abs(x))	w(x)-n+1 bits	Yes
ROUNDUP	RoundHalfUp	roundUp	floor(x+0.5)	w(x)-n+1 bits	Yes
ROUNDDOWN	RoundHalfDown	roundDown	ceil(x-0.5)	w(x)-n+1 bits	Yes
ROUND-	Round-	round-	sign*ceil(abs(x)-0.5)	w(x)-n+1 bits	Yes
TOZERO	HalfToZero	ToZero			
ROUNDTOINF	RoundHalfToInf	roundToInf	sign*floor(abs(x)+0.5)	w(x)-n+1 bits	Yes
ROUNDTO-	RoundHalfTo-	roundTo-			No
EVEN	Even	Even			
ROUNDTOODD	Round-	round-			No
	HalfToOdd	ToOdd			

Note:

the **RoundToEven RoundToOdd** are very special ,Used in some big data statistical fields with high accuracy concern,

SpinalHDL don't support them yet.

You can find ROUNDUP, ROUNDDOWN, ROUNDTOZERO, ROUNDTOINF, ROUNDTOEVEN, ROUNTOODD are very close, *ROUNDTOINF* is most common. the api of round in different Programing-language may different.

Programing-	default-	Example	comments
language	RoundType		
Matlab	ROUNDTOINF	round(1.5)=2,round(2.5)=3;round(-1.5)=-	round to
		2,round(-2.5)=-3	$\pm Infinity$
python2	ROUNDTOINF	round(1.5)=2,round(2.5)=3;round(-1.5)=-	round to
		2,round(-2.5)=-3	$\pm Infinity$
python3	ROUNDTO-	round(1.5)=round(2.5)=2; $round(-1.5)=round(-1.5)$	close to Even
	EVEN	2.5)=-2	
Scala.math	ROUNDTOUP	round(1.5)=2,round(2.5)=3;round(-1.5)=-	always to +In-
		1,round(-2.5)=-2	finity
SpinalHDL	ROUNDTOINF	round(1.5)=2,round(2.5)=3;round(-1.5)=-	round to
		2,round(-2.5)=-3	$\pm Infinity$

Note: In SpinalHDL ROUNDTOINF is the default RoundType (round = roundToInf)

```
val A = SInt(16 bit)
val B = A.roundToInf(6 bits) //default 'align = false' with carry, got 11 bit
val B = A.roundToInf(6 bits, align = true) // sat 1 carry bit, got 10 bit
val B = A.floor(6 bits) //return 10 bit
val B = A.floorToZero(6 bits) //return 10 bit
val B = A.ceil(6 bits) //ceil with carry so return 11 bit
val B = A.ceil(6 bits, align =true) //ceil with carry then sat 1 bit return 10 bit
```

Note:

only *floor* and *floorToZero* without align option, they do not need carry bit. other round operation default with carry bit.

round Api

API	UInt/SInt	description	Return(align=false)	Return(align=true)
floor	Both		w(x)-n bits	w(x)-n bits
floorToZero	SInt	equal to floor in UInt	w(x)-n bits	w(x)-n bits
ceil	Both		w(x)-n+1 bits	w(x)-n bits
ceilToInf	SInt	equal to ceil in UInt	w(x)-n+1 bits	w(x)-n bits
roundUp	Both	simple for HW	w(x)-n+1 bits	w(x)-n bits
roundDown	Both		w(x)-n+1 bits	w(x)-n bits
roundToInf	SInt	most Common	w(x)-n+1 bits	w(x)-n bits
roundToZero	SInt	equal to roundDown in UInt	w(x)-n+1 bits	w(x)-n bits
round	Both	SpinalHDL chose roundToInf	w(x)-n+1 bits	w(x)-n bits


Note:

although roundToInf is very common.

but roundUp with lowerest cost and good timing, almost no performance lost.

so roundUp is very recommended in your work.

High Bit operation




5.3. UInt/SInt 47

function	Opera-	Postive-Op	Negtive-Op	sup-
	tion			ported
sat	Satura-	when(Top[w-1,w-n].orR) set max-	When(Top[w-1,w-n].andR) set min-	Yes
	tion	Value	Value	
trim	Discard	N/A	N/A	Yes
symme-	Symmet-	N/A	minValue = -maxValue	Yes
try	ric			

Symmetric is only valid for SInt.

fixTo function

two way are provided in UInt/SInt do fixpoint:

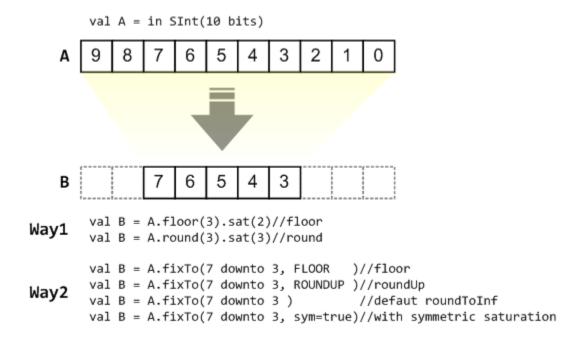

fixTo is strongly recommended in your RTL work, you don't need handle carry bit align and bit width calculate manually like Way1.

Factory Fix function with Auto Saturation

fuction	description	Return
fixTo(section,roundType,symmetric)	Factory FixFunction	section.size bits

```
val A = SInt(16 bit)
val B = A.fixTo(10 downto 3) //default RoundType.ROUNDTOINF, sym = false
val B = A.fixTo(8 downto 0, RoundType.ROUNDUP)
val B = A.fixTo(9 downto 3, RoundType.CEIL, sym = false)
val B = A.fixTo(16 downto 1, RoundType.ROUNDTOINF, sym = true )
val B = A.fixTo(10 downto 3, RoundType.FLOOR) //floor 3 bit, sat 5 bit @ highest
val B = A.fixTo(20 downto 3, RoundType.FLOOR) //floor 3 bit, expand 2 bit @ highest
```

5.4 SpinalEnum

5.4.1 Description

The Enumeration type corresponds to a list of named values.

5.4.2 Declaration

The declaration of an enumerated data type is as follows:

```
object Enumeration extends SpinalEnum {
  val element0, element1, ..., elementN = newElement()
}
```

For the example above, the default encoding is used. Native enumeration type is used for VHDL and a binary encoding is used for Verilog.

The enumeration encoding can be forced by defining the enumeration as follows:

```
object Enumeration extends SpinalEnum(defaultEncoding=encodingOfYouChoice) {
  val element0, element1, ..., elementN = newElement()
}
```

Note: If you want to define a enumeration as in/out of a given component, you have to do as following: in(MyEnum()) out(MyEnum())

Encoding

The following enumeration encodings are supported:

Encod-	Bit	Description
ing	width	
native		Use the VHDL enumeration system, this is the default encoding
binary-	log2Up(sta	ateGeuBritts to store states in declaration order (value from 0 to n-1)
Sequan-		
cial		
binary-	state-	Use Bits to store state. Each bit corresponds to one state
OneHot	Count	

Custom encoding can be performed in two different ways: static or dynamic.

5.4. SpinalEnum 49

```
* Static encoding
object MyEnumStatic extends SpinalEnum{
 val e0, e1, e2, e3 = newElement()
  defaultEncoding = SpinalEnumEncoding("staticEncoding")(
    e0 -> 0.
    e1 \rightarrow 2,
    e2 \rightarrow 3,
    e3 -> 7)
}
 * Dynamic encoding with the function : _ * 2 + 1
* e.g : e0 \Rightarrow 0 * 2 + 1 = 1
            e1 \Rightarrow 1 * 2 + 1 = 3
            e2 \implies 2 * 2 + 1 = 5
            e3 \Rightarrow 3 * 2 + 1 = 7
val encoding = SpinalEnumEncoding("dynamicEncoding", _ * 2 + 1)
object MyEnumDynamic extends SpinalEnum(encoding){
 val e0, e1, e2, e3 = newElement()
```

Example

Instantiate a enumerated signal and assign a value to it:

```
object UartCtrlTxState extends SpinalEnum {
  val sIdle, sStart, sData, sParity, sStop = newElement()
}

val stateNext = UartCtrlTxState()
  stateNext := UartCtrlTxState.sIdle

//You can also import the enumeration to have the visibility on its elements
  import UartCtrlTxState._
  stateNext := sIdle
```

5.4.3 Operators

The following operators are available for the Enumeration type

Comparison

Operator	Description	Return type
x === y	Equality	Bool
x =/= y	Inequality	Bool

```
import UartCtrlTxState._
val stateNext = UartCtrlTxState()
stateNext := sIdle
when(stateNext === sStart){

}
switch(stateNext){
  is(sIdle){

  }
  is(sStart){

  }
  ...
}
```

Type cast

Operator	Description	Return
x.asBits	Binary cast to Bits	Bits(w(x) bits)
x.asUInt	Binary cast to UInt	UInt(w(x) bits)
x.asSInt	Binary cast to SInt	SInt(w(x) bits)

```
import UartCtrlTxState._
val stateNext = UartCtrlTxState()
myBits := sIdle.asBits
```

5.4. SpinalEnum 51

5.5 Bundle

5.5.1 Description

The Bundle is a composite type that defines a group of named signals (of any SpinalHDL basic type) under a single name.

A Bundle can be used to model data structures, buses and interfaces.

5.5.2 Declaration

The syntax to declare a bundle is as follows:

```
case class myBundle extends Bundle {
  val bundleItem0 = AnyType
  val bundleItem1 = AnyType
  val bundleItemN = AnyType
}
```

For example, a bundle holding a color could be defined as:

```
case class Color(channelWidth: Int) extends Bundle {
  val r,g,b = UInt(channelWidth bits)
}
```

You can find an APB3 definition example there

5.5.3 Operators

The following operators are available for the Bundle type

Comparison

Operator	Description	Return type
x === y	Equality	Bool
x =/= y	Inequality	Bool

```
val color1 = Color(8)
color1.r := 0
color1.g := 0
color1.b := 0

val color2 = Color(8)
color2.r := 0
color2.g := 0
color2.b := 0
myBool := color1 === color2
```

Type cast

Operator	Description	Return
x.asBits	Binary cast to Bits	Bits(w(x) bits)

```
val color1 = Color(8)
val myBits := color1.asBits
```

5.5.4 IO Element direction

When you define an Bundle inside the IO definition of your component, you need to specify its direction.

in/out

If all elements of your bundle go in the same direction you can use in(MyBundle()) or out(MyBundle()).

For example:

```
val io = new Bundle{
  val input = in (Color(8))
  val output = out(Color(8))
}
```

master/slave

If your interface obeys to a master/slave topology, you can use the IMasterSlave trait. Then you have to implement the function def asMaster(): Unit to set the direction of each elements from an master perspective. Then you can use the master(MyBundle()) and slave(MyBundle()) syntax in the IO defintion.

For example:

```
case class HandShake(payloadWidth: Int) extends Bundle with IMasterSlave {
 val valid
             = Bool
             = Bool
  val ready
 val payload = Bits(payloadWidth bits)
  //You have to implement this asMaster function.
  //This function should set the direction of each signals from an master point of view
  override def asMaster(): Unit = {
   out(valid,payload)
    in(ready)
  }
}
val io = new Bundle{
 val input = slave(HandShake(8))
  val output = master(HandShake(8))
```

5.5. Bundle 53

5.6 Vec

5.6.1 Description

A Vec is a composite type that defines a group of indexed signals (of any SpinalHDL basic type) under a single name.

5.6.2 Declaration

The syntax to declare a vector is as follows:

Declaration	Description		
Vec(type: Data, size: Int)	Create a vector capable of holding size elements of type Data		
Vec(x,y,)			
	Create a vector where indexes point to given elements. this constructor supports mixed element width		

Examples

```
// Create a vector of 2 signed integers
val myVecOfSInt = Vec(SInt(8 bits),2)
myVecOfSInt(0) := 2
myVecOfSInt(1) := myVecOfSInt(0) + 3
// Create a vector of 3 different type elements
val myVecOfMixedUInt = Vec(UInt(3 bits), UInt(5 bits), UInt(8 bits))
val x,y,z = UInt(8 bits)
val myVecOf_xyz_ref = Vec(x,y,z)
// Iterate on a vector
for(element <- myVecOf_xyz_ref){</pre>
  element := 0 //Assign x,y,z with the value 0
}
// Map on vector
myVecOfMixedUInt.map(_ := 0) // assign all element with value 0
// Assign 3 to the first element of the vector
myVecOf_xyz_ref(1) := 3
```

5.6.3 Operators

The following operators are available for the Bundle type

Comparison

Operator	Description	Return type
x === y	Equality	Bool
x =/= y	Inequality	Bool

```
// Create a vector of 2 signed integers
val vec2 = Vec(SInt(8 bits), 2)
val vec1 = Vec(SInt(8 bits), 2)

myBool := vec2 === vec1 // compare all elemenets
```

Type cast

Operator Description		Return
x.asBits	Binary cast to Bits	Bits(w(x) bits)

```
// Create a vector of 2 signed integers
val vec1 = Vec(SInt(8 bits), 2)
myBits_16bits := vec1.asBits
```

Misc

Operator	Description	Return
x.getBitsWidth	Return the full size of the Vec	Int

```
// Create a vector of 2 signed integers
val vec1 = Vec(SInt(8 bits), 2)
println(vec1.getBitsWidth) // 16
```

Warning: The SpinalHDL fixed point support is only partially used/tested, if you find any bugs with it or you think that some functionality is missing, please create a github issue. Also, please do not use undocumented features in production code.

5.6. Vec 55

5.7 UFix/SFix

5.7.1 Description

The UFix and SFix types correspond to a vector of bits that can be used for fixed point arithmetic.

5.7.2 Declaration

The syntax to declare a fixed point number is as follows:

Unsigned Fixed Point

Syntax	bit	resolution	max	min
	width			
UFix(peak:ExpNumber, resolu-	peak-	2^resolution	2^peak-2^resolution	0
tion:ExpNumber)	resolution			
UFix(peak:ExpNumber,	width	2^(peak-width)	2^peak-2^(peak-width)	0
width:BitCount)				

Signed Fixed Point

Syntax	bit	resolution	max	min
	width			
SFix(peak:ExpNumber, resolu-	peak-	2^resolution	2^peak-2^resolution	-
tion:ExpNumber)	resolution	+1		(2^peak)
SFix(peak:ExpNumber,	width	2^(peak-width-1)	2^peak-2^(peak-width-1)	-
width:BitCount)				(2^peak)

Format

The chosen format follows the usual way of defining fixed point number format using Q notation. More information there).

For example Q8.2 will mean an fixed point of 8+2 bits, where 8 bit are used for the natural part and 2 bits for the fractional part. If the fixed point number is signed, one more bit is used for the sign.

The resolution is defined as being the smallest power of two that can be represented in this number.

Examples

```
// Unsigned Fixed Point
val UQ_8_2 = UFix(peak = 8 exp,resolution = -2 exp)
val UQ_8_2 = UFix(8 exp, -2 exp)

val UQ_8_2 = UFix(peak = 8 exp,width = 10 bits)
val UQ_8_2 = UFix(8 exp, 10 bits)
```

```
// Signed Fixed Point
val Q_8_2 = SFix(peak = 8 exp,resolution = -2 exp)
val Q_8_2 = SFix(8 exp, -2 exp)

val Q_8_2 = SFix(peak = 8 exp,width = 11 bits)
val Q_8_2 = SFix(8 exp, 11 bits)
```

5.7.3 Assignments

Valid Assignments

An assignment to a fixed point value is valid when there is no bit loss. Any bit loss will result in an error.

If the source fixed point value is too big, the .truncated function will allow you to resize the source number to match the destination size.

Example

From a Scala constant

Scala BigInts or Doubles can be used as constants when assigning to UFix or SFix signals.

Example

5.7. UFix/SFix 57

5.7.4 Raw value

The integer representation of the fixed point number can be read or written using the raw property.

Example

5.7.5 Operators

The following operators are available for the ${\tt UFix}$ type

Arithmetic

Ор-	Description	Returned resolution	Returned amplitude
er-			
a-			
tor			
X	Addition	Min(x.resolution,	Max(x.amplitude, y.amplitude)
+		y.resolution)	
y			
Х -	Subtraction	Min(x.resolution,	Max(x.amplitude, y.amplitude)
y		y.resolution)	
x *	Multiplication	x.resolution *	x.amplitude * y.amplitude
у		y.resolution)	
X	Arithmetic shift right, y: Int	x.amplitude >> y	x.resolution >> y
>>			
у			
X	Arithmetic shift left, y: Int	x.amplitude << y	x.resolution << y
<<			
у			
X	Arithmetic shift right, y: Int	x.amplitude >> y	x.resolution
>>			
у			
X	Arithmetic shift left, y: Int	x.amplitude << y	x.resolution
<<			
y			

Comparison

Operator	Description	Return type
x === y	Equality	Bool
x =/= y	Inequality	Bool
x > y	Greater than	Bool
x >= y	Greater than or equal	Bool
x > y	Less than	Bool
x >= y	Less than or equal	Bool

Type cast

Operator	Description	Return
x.asBits	Binary cast to Bits	Bits(w(x) bits)
x.asUInt	Binary cast to UInt	UInt(w(x) bits)
x.asSInt	Binary cast to SInt	SInt(w(x) bits)
x.asBools	Cast into a array of Bool	Vec(Bool,width(x))
x.toUInt	Return the corresponding UInt (with truncation)	UInt
x.toSInt	Return the corresponding SInt (with truncation)	SInt
x.toUFix	Return the corresponding UFix	UFix
x.toSFix	Return the corresponding SFix	SFix

Misc

Name	Return	Description
x.maxValue	Return the maximum value storable	Double
x.minValue	Return the minimum value storable	Double
x.resolution	x.amplitude * y.amplitude	Double

Warning: The SpinalHDL floating point support is under development and only partially used/tested, if you have any bug with it or you think that an functionality is missing, please create a github issue. Please, do not use undocumented features.

5.8 Floating

5.8.1 Description

The Floating type corresponds to IEEE-754 encoded numbers. A second type called RecFloating helps in simplifying your design by recoding the floating point value simplify some edge cases in IEEE-754 floating point

It's composed of a sign bit, an exponent field and a mantissa field. The widths of the different fields are defined in the IEEE-754 or de-facto standards.

This type can be used with the following import

5.8. Floating 59

SpinalHDL Documentation

import spinal.lib.experimental.math._

IEEE-754 floating format

The numbers are encoded into IEEE-754 floating point format.

Recoded floating format

Since IEEE-754 has some quirks about denormalized numbers and special values, Berkeley proposed another way of recoding floating point values.

The mantissa is modified so that denormalized values can be treated the same as the normalized ones.

The exponent field is one bit larger that one of the IEEE-754 number.

The sign bit is kept unchanged between the two encodings.

Examples can be found here

Zero

The zero is encoded with the three leading zeros of the exponent field being stuck to zero.

Denormalized values

Denormalized values are encoded in the same way as a normal floating point number. The mantissa is shifted so that the first one becomes implicit. The exponent is encoded as 107 (decimal) plus the index of the highest bit set to 1.

Normalized values

The recoded mantissa for normalized values is exactly the same as the original IEEE-754 mantissa. The recoded exponent is encoded as 130 (decimal) plus the original exponent value.

Infinity

The recoded mantissa value is treated as don't care. The recoded exponent three highest bits is 6 (decimal), the rest of the exponent can be treated as don't care.

NaN

The recoded mantissa for normalized values is exactly the same as the original IEEE-754 mantissa. The recoded exponent three highest bits is 7 (decimal), the rest of the exponent can be treated as don't care.

5.8.2 Declaration

The syntax to declare a floating point number is as follows:

IEEE-754 Number

Syntax	Description
Floating(exponentSize: Int, mantissaSize:	IEEE-754 Floating point value with a custom exponent and mantissa
Int)	size
Floating16()	IEEE-754 Half precision floating point number
Floating32()	IEEE-754 Single precision floating point number
Floating64()	IEEE-754 Double precision floating point number
Floating128()	IEEE-754 Quad precision floating point number

Recoded floating point number

Syntax	Description
RecFloating(exponentSize: Int, mantissaSize:	Recoded Floating point value with a custom exponent and man-
Int)	tissa size
RecFloating16()	Recoded Half precision floating point number
RecFloating32()	Recoded Single precision floating point number
RecFloating64()	Recoded Double precision floating point number
RecFloating128()	Recoded Quad precision floating point number

5.8.3 Operators

The following operators are available for the Floating and RecFloating types

Type cast


Operator	Description	Return
x.asBits	Binary cast to Bits	Bits(w(x)
		bits)
x.asBools	Cast into a array of Bool	Vec(Bool,width(x))
x.toUInt(size: Int)	Return the corresponding UInt (with truncation)	UInt
x.toSInt(size: Int)	Return the corresponding SInt (with truncation)	SInt
x.fromUInt	Return the corresponding Floating (with truncation)	UInt
x.fromSInt	Return the corresponding Floating (with truncation)	SInt

5.8. Floating 61

5.9 Introduction

The language provides 5 base types and 2 composite types that can be used.

- Base types: Bool, Bits, UInt for unsigned integers, SInt for signed integers and Enum.
- Composite types: Bundle and Vec.

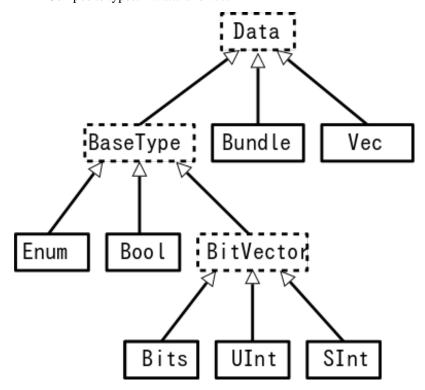

In addition to the base types, Spinal supports Fixed point that is documented *here* and floating point that is actually under development *here*.

Finally, a special type is available for checking equality between a BitVector and a bits constant that contains holes (don't care values). An example is shown below:

```
val myBits = Bits(8 bits)
val itMatch = myBits === M"00--10--" // - don't care value
```

CHAPTER

SIX

STRUCTURING

6.1 Component and hierarchy

6.1.1 Introduction

Like in VHDL and Verilog, you can define components that can be used to build a design hierarchy. However, in SpinalHDL, you don't need to bind their ports at instantiation

```
class AdderCell extends Component {
  //Declaring all in/out in an io Bundle is probably a good practice
 val io = new Bundle {
   val a, b, cin = in Bool
   val sum, cout = out Bool
  //Do some logic
  io.sum := io.a ^ io.b ^ io.cin
  io.cout := (io.a & io.b) | (io.a & io.cin) | (io.b & io.cin)
class Adder(width: Int) extends Component {
  //Create 2 AdderCell
  val cell0 = new AdderCell
  val cell1 = new AdderCell
  cell1.io.cin := cell0.io.cout
                                 //Connect cout of cell0 to cin of cell1
  // Another example which create an array of ArrayCell
 val cellArray = Array.fill(width)(new AdderCell)
  cellArray(1).io.cin := cellArray(0).io.cout //Connect cout of cell(0) to cin of_
\rightarrowcell(1)
  . . .
}
```

Tip:

val io = new Bundle $\{ \dots \}$:

Declaring all inputs and outputs in a Bundle named *io* is probably a good pratice. If you call your bundle *io*, Spinal will check that all elements are defined as input or output.

6.1.2 Input / output definition

The syntax to define inputs and outputs is the following:

Syntax	Description	Return
in/out Bool	Create an input/output Bool	Bool
in/out Bits/UInt/SInt[(x bit)]	Create an input/output of the corresponding type	Т
in/out(T)		T
	For all other data types, you should add the brackets around it. Sorry this is a Scala limitation.	
master/slave(T)		T
	This syntax is provided by the spinal.lib. T should extend IMasterSlave : Some documentation is available <i>here</i>	

There are some rules to follow with component interconnection:

- Components can only read output and input signals of child components
- Components can read their own output port values (unlike VHDL)

Tip: If for some reason, you need to read signals from far away in the hierarchy (debug, temporal patch) you can do it by using the value returned by *some.where.else.theSignal.pull()*.

6.1.3 Pruned signals

SpinalHDL only generates things which are required to drive the outputs of your top level entity (directly or indirectly).

All other signals (the useless ones) are removed from the RTL generation and are inserted into a list of pruned signals. You can get this list via the printPruned and the printPrunedIo function on the generated SpinalReport.

```
class TopLevel extends Component {
  val io = new Bundle{
    val a,b = in UInt(8 bits)
    val result = out UInt(8 bits)
}

io.result := io.a + io.b

val unusedSignal = UInt(8 bits)
val unusedSignal2 = UInt(8 bits)

unusedSignal2 := unusedSignal
}

object Main{
  def main(args: Array[String]) {
```

```
SpinalVhdl(new TopLevel).printPruned()
   //This will report :
   // [Warning] Unused wire detected : toplevel/unusedSignal : UInt[8 bits]
   // [Warning] Unused wire detected : toplevel/unusedSignal2 : UInt[8 bits]
}
```

If you want to keep a pruned signal into the generated RTL for debug reasons, you can use the keep function of that signal:

```
class TopLevel extends Component {
 val io = new Bundle{
   val a,b = in UInt(8 bits)
   val result = out UInt(8 bits)
  }
  io.result := io.a + io.b
  val unusedSignal = UInt(8 bits)
  val unusedSignal2 = UInt(8 bits).keep()
  unusedSignal := 0
  unusedSignal2 := unusedSignal
}
object Main{
 def main(args: Array[String]) {
   SpinalVhdl(new TopLevel).printPruned()
    //This will report nothing
  }
}
```

6.1.4 Generic(VHDL) / Parameter(Verilog)

If you want to parameterize your component, you can give parameters to the constructor of the component as follows:

```
class MyAdder(width: BitCount) extends Component {
  val io = new Bundle{
    val a,b = in UInt(width)
    val result = out UInt(width)
  }
  io.result := io.a + io.b
}

object Main{
  def main(args: Array[String]) {
    SpinalVhdl(new MyAdder(32 bits))
  }
}
```

I you have several parameters, it is a good practice to give a specific configuration class as follows:

6.2 Area

6.2.1 Area

Sometimes, creating a Component to define some logic is overkill because you:

- Need to define all construction parameters and IO (verbosity, duplication)
- Split your code (more than needed)

For this kind of case you can use an Area to define a group of signals/logic.

```
class UartCtrl extends Component {
 val timer = new Area {
   val counter = Reg(UInt(8 bit))
   val tick = counter === 0
   counter := counter - 1
   when(tick) {
      counter := 100
   }
  }
 val tickCounter = new Area {
   val value = Reg(UInt(3 bit))
   val reset = False
   when(timer.tick) {
                              // Refer to the tick from timer area
      value := value + 1
   }
   when(reset) {
      value := 0
   }
  }
 val stateMachine = new Area {
  }
```

Tip:

In VHDL and Verilog, sometimes prefixes are used to separate variables into logical sections. It is suggested that you use Area instead of this in SpinalHDL.

Note: ClockingArea is a special kind of Area that allows you to define chunks of hardware which use a given ClockDomain

6.3 Function

6.3.1 Introduction

The ways you can use Scala functions to generate hardware are radically different than VHDL/Verilog for many reasons:

- You can instantiate registers, combinatorial logic and components inside them.
- You don't have to play with process/@always that limit the scope of assignment of signals
- Everything is passed by reference, which allows easy manipulation.

 For example you can give a bus to a function as an argument, then the function can internally read/write to it.

 You can also return a Component, a Bus, or anything else from scala and the scala world.

6.3.2 RGB to gray

For example if you want to convert a Red/Green/Blue color into greyscale by using coefficients, you can use functions to apply them:

```
// Input RGB color
val r, g, b = UInt(8 bits)

// Define a function to multiply a UInt by a scala Float value.
def coef(value: UInt, by: Float): UInt = (value * U((255*by).toInt, 8 bits) >> 8)

// Calculate the gray level
val gray = coef(r, 0.3f) + coef(g, 0.4f) + coef(b, 0.3f)
```

6.3.3 Valid Ready Payload bus

For instance if you define a simple Valid Ready Payload bus, you can then define some useful functions inside of it.

```
class MyBus(payloadWidth: Int) extends Bundle with IMasterSlave {
  val valid = Bool
  val ready = Bool
  val payload = Bits(payloadWidth bits)

  // define the direction of the data in a master mode
  override des asMaster(): Unit = {
    out(valid, payload)
    in(ready)
  }

  // Connect that to this
```

(continues on next page)

6.3. Function 67

```
def <<(that: MyBus): Unit = {</pre>
   this.valid := that.valid
   that.ready := this.ready
    this.payload := that.payload
  }
  // Connect this to the FIFO input, return the fifo output
  def queue(size: Int): MyBus = {
   val fifo = new MyBusFifo(payloadWidth, size)
   fifo.io.push << this
   return fifo.io.pop
 }
}
class MyBusFifo(payloadWidth: Int, depth: Int) extends Component {
  val io = new Bundle {
   val push = slave(MyBus(payloadWidth))
   val pop = master(MyBus(payloadWidth))
  }
 val mem = Mem(Bits(payloadWidth bits), depth)
  // ...
```

6.4 Clock domains

6.4.1 Introduction

In *SpinalHDL*, clock and reset signals can be combined to create a **clock domain**. Clock domains can be applied to some areas of the design and then all synchronous elements instantiated into those areas will then **implicitly** use this clock domain.

Clock domain application works like a stack, which means that if you are in a given clock domain you can still apply another clock domain locally.

6.4.2 Instantiation

The syntax to define a clock domain is as follows (using EBNF syntax):

```
ClockDomain(
  clock: Bool
  [,reset: Bool]
  [,softReset: Bool]
  [,clockEnable: Bool]
  [,frequency: IClockDomainFrequency]
  [,config: ClockDomainConfig]
)
```

This definition takes five parameters:

Argu-	Description	De-
ment		fault
clock	Clock signal that defines the domain	
reset	Reset signal. If a register which needs a reset and the clock domain doesn't provide one, an error	null
	message will be displayed	
softRe	seteset which infers an additional synchronous reset	null
clockE	nall the goal of this signal is to disable the clock on the whole clock domain without having to	null
	manually implement that on each synchronous element	
freque	ncyllows you to specify the frequency of the given clock domain and later read it in your design	Un-
		known-
		Fre-
		quency
config	Specify the polarity of signals and the nature of the reset	Cur-
		rent
		config

An applied example to define a specific clock domain within the design is as follows:

```
val coreClock = Bool
val coreReset = Bool

// Define a new clock domain
val coreClockDomain = ClockDomain(coreClock,coreReset)

// Use this domain in an area of the design
val coreArea = new ClockingArea(coreClockDomain){
  val coreClockedRegister = Reg(UInt(4 bit))
}
```

Configuration

In addition to the constructor parameters given *here*, the following elements of each clock domain are configurable via a ClockDomainConfigclass:

Property	Valid values
clockEdge	RISING, FALLING
resetKind	ASYNC, SYNC, BOOT which is supported by some FPGAs (where FF values loaded by the bit-
	stream)
resetActiveLev	eHIGH, LOW
softResetActiv	e HÆGH ,llow
clockEnableAct	iheghyeqw

```
class CustomClockExample extends Component {
  val io = new Bundle {
    val clk = in Bool
    val resetn = in Bool
    val result = out UInt (4 bits)
  }
```

(continues on next page)

6.4. Clock domains 69

```
// configure the clock domain
  val myClockDomain = ClockDomain(
    clock = io.clk,
    reset = io.resetn,
    config = ClockDomainConfig(
      clockEdge
                       = RISING,
      resetKind
                      = ASYNC,
      resetActiveLevel = LOW
    )
  )
  // Define an Area which use myClockDomain
  val myArea = new ClockingArea(myClockDomain) {
    val myReg = Reg(UInt(4 bits)) init(7)
    myReg := myReg + 1
    io.result := myReg
  }
}
```

By default, a ClockDomain is applied to the whole design. The configuration of this one is:

- Clock: rising edge
- Reset: asynchronous, active high
- No clock enable

Internal clock

An alternative syntax to create a clock domain is the following:

```
ClockDomain.internal(
  name: String,
  [config: ClockDomainConfig,]
  [withReset: Boolean,]
  [withSoftReset: Boolean,]
  [withClockEnable: Boolean,]
  [frequency: IClockDomainFrequency]
)
```

This definition takes six parameters:

Argument	Description Description	
name	Name of clk and reset signal	
config	Specify polarity of signals and the nature of the reset	Current con-
		fig
withReset	Add a reset signal true	
withSoftResetAdd a soft reset signal		
withClockEna	lockEnabAed a clock enable false	
frequency	Frequency of the clock domain Unkn	
		Frequency

Its advantage is to create clock and reset signals with a specified name instead of an inherited one. Then you have to assign those ClockDomain's signals as shown in the example below:

```
class InternalClockWithPllExample extends Component {
  val io = new Bundle {
   val clk100M = in Bool
   val aReset = in Bool
   val result = out UInt (4 bits)
  }
  // myClockDomain.clock will be named myClockName_clk
  // myClockDomain.reset will be named myClockName_reset
  val myClockDomain = ClockDomain.internal("myClockName")
  // Instanciate a PLL (probably a BlackBox)
  val pll = new Pll()
  pll.io.clkIn := io.clk100M
  // Assign myClockDomain signals with something
  myClockDomain.clock := pll.io.clockOut
  myClockDomain.reset := io.aReset || !pll.io.
  // Do whatever you want with myClockDomain
  val myArea = new ClockingArea(myClockDomain){
   val myReg = Reg(UInt(4 bits)) init(7)
   myReg := myReg + 1
    io.result := myReg
  }
}
```

External clock

You can define a clock domain which is driven by the outside anywhere in your source. It will then automatically add clock and reset wire from the top level inputs to all synchronous elements.

```
ClockDomain.external(
  name: String,
  [config: ClockDomainConfig,]
  [withReset: Boolean,]
  [withSoftReset: Boolean,]
  [withClockEnable: Boolean,]
  [frequency: IClockDomainFrequency]
)
```

The arguments to the ClockDomain.external function are exactly the same as in the ClockDomain.internal function. Below an example of a design using ClockDomain.external.

```
class ExternalClockExample extends Component {
  val io = new Bundle {
    val result = out UInt (4 bits)
  }

// On top level you have two signals :
    (continues on next page)
```

6.4. Clock domains 71

```
// myClockName_clk and myClockName_reset
val myClockDomain = ClockDomain.external("myClockName")

val myArea = new ClockingArea(myClockDomain){
  val myReg = Reg(UInt(4 bits)) init(7)
  myReg := myReg + 1

  io.result := myReg
}
```

Context

You can retrieve in which clock domain you are by calling ClockDomain.current anywhere.

The returned ClockDomain instance has the following functions that can be called:

name	Description	Return
fre-	Return the frequency of the clock domain	Double
quency.getValu	e	
hasReset	Return if the clock domain has a reset signal	Boolean
hasSoftReset	Return if the clock domain has a reset signal	Boolean
hasClockEn-	Return if the clock domain has a clock enable signal	Boolean
able		
readClock-	Return a signal derived by the clock signal	Bool
Wire		
read-	Return a signal derived by the reset signal	Bool
ResetWire		
readSoftRe-	Return a signal derived by the reset signal	Bool
setWire		
readClock-	Return a signal derived by the clock enable signal	Bool
EnableWire		
isResetActive	Return True when the reset is active	Bool
isSoftRese-	Return True when the softReset is active	Bool
tActive		
isClockEn-	Return True when the clock enable is active	Bool
ableActive		

An example is included below where a UART controller uses the frequency specification to set its clock divider:

```
val coreClockDomain = ClockDomain(coreClock, coreReset, frequency=FixedFrequency(100e6))

val coreArea = new ClockingArea(coreClockDomain){
  val ctrl = new UartCtrl()
  ctrl.io.config.clockDivider := (coreClk.frequency.getValue / 57.6e3 / 8).toInt
}
```

6.4.3 Clock domain crossing

SpinalHDL checks at compile time that there is no unwanted/unspecified cross clock domain signal reads. If you want to read a signal that is emitted by another ClockDomain area, you should add the crossClockDomain tag to the destination signal as depicted in the following example:

```
//
          | (crossClockDomain) |
//
// dataIn -->| |----->| |-----
    | FF | | FF |
          -->|
                             clkB -->| | clkB -->|
// clkA
// rstA -->|__
                             rstB -->|___
                                           __| rstB -->|__
// Implementation where clock and reset pins are given by components IO
class CrossingExample extends Component {
 val io = new Bundle {
   val clkA = in Bool
   val rstA = in Bool
   val clkB = in Bool
   val rstB = in Bool
   val dataIn = in Bool
   val dataOut = out Bool
 }
 // sample dataIn with clkA
 val area_clkA = new ClockingArea(ClockDomain(io.clkA,io.rstA)){
   val reg = RegNext(io.dataIn) init(False)
 }
 // 2 register stages to avoid metastability issues
 val area_clkB = new ClockingArea(ClockDomain(io.clkB,io.rstB)){
   val buf0 = RegNext(area_clkA.reg) init(False) addTag(crossClockDomain)
   val buf1 = RegNext(buf0)
                                    init(False)
 }
 io.dataOut := area_clkB.buf1
//Alternative implementation where clock domains are given as parameters
class CrossingExample(clkA : ClockDomain,clkB : ClockDomain) extends Component {
 val io = new Bundle {
   val dataIn = in Bool
   val dataOut = out Bool
 }
 // sample dataIn with clkA
 val area_clkA = new ClockingArea(clkA){
   val reg = RegNext(io.dataIn) init(False)
```

(continues on next page)

6.4. Clock domains 73

```
// 2 register stages to avoid metastability issues
val area_clkB = new ClockingArea(clkB){
  val buf0 = RegNext(area_clkA.reg) init(False) addTag(crossClockDomain)
  val buf1 = RegNext(buf0) init(False)
}

io.dataOut := area_clkB.buf1
}
```

In general you can use 2 or more flip-flop driven by the destination clock domain to prevent metastability. The BufferCC(input: T, init: T = null, bufferDepth: Int = 2) function provided in spinal.lib._ will instantiate the necessary flip-flop (the number of flip flop will depends on the bufferDepth) to mitigate the phenomena.

```
class CrossingExample(clkA : ClockDomain,clkB : ClockDomain) extends Component {
  val io = new Bundle {
    val dataIn = in Bool
    val dataOut = out Bool
  }

  // sample dataIn with clkA
  val area_clkA = new ClockingArea(clkA) {
    val reg = RegNext(io.dataIn) init(False)
  }

  // BufferCC to avoid metastability issues
  val area_clkB = new ClockingArea(clkB) {
    val buf1 = BufferCC(area_clkA.reg, False)
  }

  io.dataOut := area_clkB.buf1
}
```

Warning: The BufferCC is only for signal Bit, or Bits with Gray-coded(Only 1 bit flip per clock cycle), Can not used for Multi-bits cross-domain process.

6.4.4 Special clocking Areas

Slow Area

A SlowArea is used to create a new clock domain area which is slower than the current one.

```
class TopLevel extends Component {
    // Use the current clock domain : 100MHz
    val areaStd = new Area {
       val counter = out(CounterFreeRun(16).value)
```

```
}
  // Slow the current clockDomain by 4 : 25 MHz
  val areaDiv4 = new SlowArea(4){
   val counter = out(CounterFreeRun(16).value)
 // Slow the current clockDomainn to 50MHz
 val area50Mhz = new SlowArea(50 MHz){
   val counter = out(CounterFreeRun(16).value)
 }
}
def main(args: Array[String]) {
 new SpinalConfig(
   defaultClockDomainFrequency = FixedFrequency(100 MHz)
  ).generateVhdl(new TopLevel)
```

ResetArea

A ResetArea is used to create a new clock domain area where a special reset signal is combined with the current clock domain reset.

```
class TopLevel extends Component {
 val specialReset = Bool
 // The reset of this area is done with the specialReset signal
 val areaRst_1 = new ResetArea(specialReset, false){
    val counter = out(CounterFreeRun(16).value)
 // The reset of this area is a combination between the current reset and the
\rightarrow special Reset
  val areaRst_2 = new ResetArea(specialReset, true){
    val counter = out(CounterFreeRun(16).value)
  }
```

ClockEnableArea

A ClockEnableArea is used to add an additional clock enable in the current clock domain.

```
class TopLevel extends Component {
  val clockEnable = Bool
  // Add a clock enable for this area
  val area_1 = new ClockEnableArea(clockEnable){
```

6.4. Clock domains 75

```
val counter = out(CounterFreeRun(16).value)
}
```

6.5 Instantiate VHDL and Verilog IP

6.5.1 Description

A blackbox allows the user to integrate an existing VHDL/Verilog component into the design by just specifying the interfaces. It's up to the simulator or synthesizer to do the elaboration correctly.

6.5.2 Defining an blackbox

An example of how to define a blackbox is shown below:

```
// Define a Ram as a BlackBox
class Ram_1w_1r(wordWidth: Int, wordCount: Int) extends BlackBox {
  // SpinalHDL will look at Generic classes to get attributes which
  // should be used ad VHDL gererics / Verilog parameter
  // You can use String Int Double Boolean and all SpinalHDL base types
  // as generic value
  val generic = new Generic {
   val wordCount = Ram_1w_1r.this.wordCount
   val wordWidth = Ram_1w_1r.this.wordWidth
  }
  // Define io of the VHDL entiry / Verilog module
  val io = new Bundle {
   val clk = in Bool
   val wr = new Bundle {
     val en = in Bool
     val addr = in UInt (log2Up(wordCount) bit)
     val data = in Bits (wordWidth bit)
   val rd = new Bundle {
     val en = in Bool
     val addr = in UInt (log2Up(wordCount) bit)
      val data = out Bits (wordWidth bit)
  }
  //Map the current clock domain to the io.clk pin
  mapClockDomain(clock=io.clk)
}
```

In VHDL, signals of type Bool will be translated into std_logic and Bits into std_logic_vector. If you want to get std_ulogic, you have to use a BlackBoxULogic instead of BlackBox.

In Verilog, BlackBoxUlogic has no effect.

```
class Ram_1w_1r(wordWidth: Int, wordCount: Int) extends BlackBoxULogic {
    ...
}
```

6.5.3 Generics

There are two different ways to declare generics:

```
class Ram(wordWidth: Int, wordCount: Int) extends BlackBox {
    val generic = new Generic {
       val wordCount = Ram.this.wordCount
       val wordWidth = Ram.this.wordWidth
    }

    // OR
    addGeneric("wordCount", wordWidth)
    addGeneric("wordWidth", wordWidth)
}
```

6.5.4 Instantiating a blackbox

Instantiating a blackbox is just like instantiating a Component:

```
// Create the top level and instantiate the Ram
class TopLevel extends Component {
 val io = new Bundle {
   val wr = new Bundle {
     val en = in Bool
     val addr = in UInt (log2Up(16) bit)
     val data = in Bits (8 bit)
   val rd = new Bundle {
     val en = in Bool
     val addr = in UInt (log2Up(16) bit)
     val data = out Bits (8 bit)
  }
  //Instantiate the blackbox
  val ram = new Ram_1w_1r(8,16)
  //Connect all the signals
  io.wr.en <> ram.io.wr.en
  io.wr.addr <> ram.io.wr.addr
  io.wr.data <> ram.io.wr.data
  io.rd.en <> ram.io.rd.en
```

```
io.rd.addr <> ram.io.rd.addr
io.rd.data <> ram.io.rd.data
}

object Main {
  def main(args: Array[String]): Unit = {
    SpinalVhdl(new TopLevel)
  }
}
```

6.5.5 Clock and reset mapping

In your blackbox definition you have to explicitly define clock and reset wires. To map signals of a ClockDomain to corresponding inputs of the blackbox you can use the mapClockDomain or mapCurrentClockDomain function. mapClockDomain has the following parameters:

name	type	default	description
clockDo-	ClockDo-	ClockDo-	Specify the clockDomain which provides the signals
main	main	main.current	
clock	Bool	Nothing	Blackbox input which should be connected to the clockDomain clock
reset	Bool	Nothing	Blackbox input which should be connected to the clockDomain reset
enable	Bool	Nothing	Blackbox input which should be connected to the clockDomain enable

mapCurrentClockDomain has almost the same parameters as mapClockDomain but without the clockDomain.

For example:

```
class MyRam(clkDomain: ClockDomain) extends BlackBox {
  val io = new Bundle {
    val clkA = in Bool
    ...
    val clkB = in Bool
    ...
}

// Clock A is map on a specific clock Domain
mapClockDomain(clkDomain, io.clkA)
// Clock B is map on the current clock domain
mapCurrentClockDomain(io.clkB)
}
```

6.5.6 io prefix

In order to avoid the prefix "io_" on each of the IOs of the blackbox, you can use the function noIoPrefix() as shown below:

```
// Define the Ram as a BlackBox
class Ram_1w_1r(wordWidth: Int, wordCount: Int) extends BlackBox {
  val generic = new Generic {
   val wordCount = Ram_1w_1r.this.wordCount
   val wordWidth = Ram_1w_1r.this.wordWidth
 val io = new Bundle {
   val clk = in Bool
   val wr = new Bundle {
     val en = in Bool
     val addr = in UInt (log2Up(_wordCount) bit)
     val data = in Bits (_wordWidth bit)
   val rd = new Bundle {
     val en = in Bool
     val addr = in UInt (log2Up(_wordCount) bit)
     val data = out Bits (_wordWidth bit)
  }
 noIoPrefix()
 mapCurrentClockDomain(clock=io.clk)
```

6.5.7 Rename all io of a blackbox

```
class MyRam() extends Blackbox {

val io = new Bundle {
  val clk = in Bool
  val portA = new Bundle{
    val cs = in Bool
    val rwn = in Bool
    val dIn = in Bits(32 bits)
    val dOut = out Bits(32 bits)
}

val portB = new Bundle{
    val cs = in Bool
    val rwn = in Bool
    val dIn = in Bits(32 bits)
    val dIn = in Bits(32 bits)
    val dIn = in Bits(32 bits)
    val dOut = out Bits(32 bits)
}
```

```
// Map the clk
  mapCurrentClockDomain(io.clk)
  // Remove io_ prefix
  noIoPrefix()
 // Function used to rename all signals of the blackbox
 private def renameIO(): Unit = {
   io.flatten.foreach(bt => {
     if(bt.getName().contains("portA")) bt.setName(bt.getName().repalce("portA_", "") +
     if(bt.getName().contains("portB")) bt.setName(bt.getName().repalce("portB_", "") +
→" B")
   })
  }
  // Execute the function renameIO after the creation of the component
 addPrePostTask(() => renameIO())
}
// This code generate those names :
     clk
//
      cs_A, rwn_A, dIn_A, dOut_A
      cs_B, rwn_B, dIn_B, dOut_B
```

6.5.8 Add RTL source

With the function addRTLPath() you can associate your RTL sources with the blackbox. After the generation of your Spinal code you can call the fonction mergeRTLSource to merge all sources together.

```
class MyBlackBox() extends Blackbox {
 val io = new Bundle {
   val clk = in Bool
   val start = in Bool
   val dIn = in Bits(32 bits)
   val dOut = out Bits(32 bits)
   val ready = out Bool
 }
 // Map the clk
 mapCurrentClockDomain(io.clk)
 // Remove io_ prefix
 noIoPrefix()
 // Add all rtl dependencies
 addRTLPath("./rtl/RegisterBank.v")
                                                            // Add a verilog file
 addRTLPath(s"./rtl/myDesign.vhd")
                                                            // Add a vhdl file
 addRTLPath(s"${sys.env("MY_PROJECT")}/myTopLevel.vhd")
                                                            // Use an environement
```

```
variable MY_PROJECT (System.getenv("MY_PROJECT"))

...

val report = SpinalVhdl(new MyBlackBox)
report.mergeRTLSource("mergeRTL") // merge all rtl sources into mergeRTL.vhd and...
...mergeRTL.v file
```

6.5.9 VHDL - No numeric type

If you want to use only std_logic_vector on your blackbox component, you can add the tag noNumericType to the blackbox.

```
class MyBlackBox() extends BlackBox{
  val io = new Bundle{
    val clk = in Bool
    val increment = in Bool
    val initValue = in UInt(8 bits)
    val counter = out UInt(8 bits)
}

mapCurrentClockDomain(io.clk)
noIoPrefix()
addTag(noNumericType) // only std_logic_vector
}
```

The code above will generate the following VHDL:

```
component MyBlackBox is
  port(
    clk : in std_logic;
    increment : in std_logic;
    initValue : in std_logic_vector(7 downto 0);
    counter : out std_logic_vector(7 downto 0)
  );
end component;
```

CHAPTER

SEVEN

SEMANTIC

7.1 Assignments

7.1.1 Assignments

There are multiple assignment operators:

Symbole	Description
:=	
	Standard assignment, equivalent to '<=' in VHDL/Verilog:
	the last assignment to a variable wins, the value is not updated until the next simulation delta cycle
\=	
	Equivalent to := in VHDL and = in Verilog
	the value is updated instantly
<>	Automatic connection between 2 signals or two bundles of the same type. Direction is inferred
	by using signal direction (in/out). (Similar behavioral to :=)

It is important to understand that in SpinalHDL, the nature of a signal (combinatorial/sequential) is defined in its

declaration, not by the way it is assigned. All datatype instances will define a cominatorial signal, while a datatype instance wrapped with a Reg(...) will define a sequential (register) signal.

```
val a = UInt(4 bits) //Define a combinatorial signal
val b = Reg(UInt(4 bits)) //Define a registered signal
val c = Reg(UInt(4 bits)) init(0) //Define a registered signal which is set to 0 when a

→reset occurs
```

7.1.2 Width checking

SpinalHDL checks that the bit count of the left side and the right side of an assignmet matches. There are multiple ways to adapt the width of a given BitVector (Bits, UInt, SInt):

Resizing ways	Description
x := y.resized	Assign x wit a resized copy of y, resize value is automatically inferred to match x
x := y.resize(newWidth)	Assign x with a resized copy of y, size is manually calculated

There is one case where Spinal automatically resizes a value:

Assignement	Problem	SpinalHDL action
$myUIntOf_8bit := U(3)$	U(3) creates an UInt of 2 bits, which	Because U(3) is a "weak" bit count in-
	doesn't match the left side (8 bits)	ferred signal, SpinalHDL resizes it auto-
		matically

7.1.3 Combinatorial loops

SpinalHDL checks that there are no combinatorial loops (latches) in your design. If one is detected, it raises an error and SpinalHDL will print the path of the loop.

7.2 When/Switch/Mux

7.2.1 When

As in VHDL and Verilog, signals can be conditionally assigned when a specified condition is met:

7.2.2 Switch

As in VHDL and Verilog, signals can be conditionally assigned when a signal has a defined value:

```
switch(x){
  is(value1){
    //execute when x === value1
  }
  is(value2){
    //execute when x === value2
  }
  default{
    //execute if none of precedent condition meet
  }
}
```

7.2.3 Local declaration

It is possible to define new signals into a when/switch statement:

```
val x,y = UInt(4 bits)
val a,b = UInt(4 bits)

when(cond) {
    val tmp = a + b
    x := tmp
    y := tmp + 1
} otherwise {
    x := 0
    y := 0
}
```

Note: SpinalHDL checks that signals defined inside a scope are only assigned inside the scope they are defined in.

7.2.4 Mux

If you just need a Mux with a Bool selection signal, there are two equivalent syntaxes:

Syntax	Return	Description
Mux(cond, whenTrue, whenFalse)	T	Return whenTrue when cond is True,
		whenFalse otherwise
cond ? whenTrue whenFalse	T	Return whenTrue when cond is True,
		whenFalse otherwise

```
val cond = Bool
val whenTrue, whenFalse = UInt(8 bits)
val muxOutput = Mux(cond, whenTrue, whenFalse)
val muxOutput2 = cond ? whenTrue | whenFalse
```

7.2. When/Switch/Mux 85

7.2.5 Bitwise selection

A bitwise selection looks like the VHDL when syntax.


Example

```
val bitwiseSelect = UInt(2 bits)
val bitwiseResult = bitwiseSelect.mux(
    0 -> (io.src0 & io.src1),
    1 -> (io.src0 | io.src1),
    2 -> (io.src0 ^ io.src1),
    default -> (io.src0)
)
```

Also, if all possible values are covered in your mux, you can omit the default value:

```
val bitwiseSelect = UInt(2 bits)
val bitwiseResult = bitwiseSelect.mux(
    0 -> (io.src0 & io.src1),
    1 -> (io.src0 | io.src1),
    2 -> (io.src0 ^ io.src1),
    3 -> (io.src0)
)
```

muxLists(...) is another bitwise selection which take as input a sequence of tuples. Below an example of dividing a Bits of 128 bits into 32 bits:

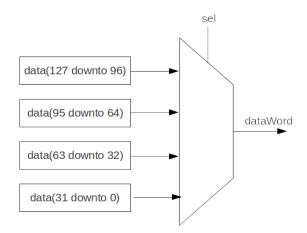

```
val sel = UInt(2 bits)
val data = Bits(128 bits)

val dataWord = sel.muxList(for(index <- 0 until 4) yield (index, data(index*32+32-1...
downto index*32)))

// This example can be written shorter.
val dataWord = data.subdivideIn(32 bits)(sel)</pre>
```

7.3 Rules

7.3.1 Introduction

The semantics behind SpinalHDL are important to learn so you understand what is really happening behind the scenes and how to control it.

These semantics are defined by multiple rules:

- Signals and registers are concurrent to each other (Parallel behavioral, as in VHDL and Verilog)
- · An assignement to a combinatorial signal is like expressing a rule which is always true
- · An assignement to a register is like expressing a rule which is applied on each cycle of its clock domain
- For each signal, the last valid assignement wins
- Each signal and register can be manipulated as an object during the hardware elaboration in a OOP manner

7.3.2 Concurrency

The order in which you assign each combinatorial or register signals as no behavioral impact.

For example, both of the following pieces of code are equivalent:

```
val a, b, c = UInt(8 bits) // Define 3 combinatorial signals
c := a + b // c will be set to 7
b := 2 // b will be set to 2
a := b + 3 // a will be set to 5
```

Is equivalent to:

More generally, when you use the := assignement operator, it's like specifying a new rule for the left side signal/register.

7.3.3 Last valid assignement wins

If a combinatorial signal or register is assigned multiple times, the last valid one wins.

As an example:

7.3. Rules 87

Will produce the following truth table:

Х	У	=>	result
False	False		1
False	True		1
True	False		2
True	True		3

7.3.4 Signal and register interactions with Scala (OOP reference + Functions)

In SpinalHDL, each hardware element is modeled by a class instance. This means you can manipulate them by using their referance, such as passing them as an argument to a function.

As an example, the following code implements a register which is incremented when inc is True and cleared when clear is True (clear has priority over inc):

You can implement exactly the same functionality by mixing the previous example with a function that assignes to counter:

```
val inc, clear = Bool
val counter = Reg(UInt(8 bits))

def setCounter(value : UInt): Unit = {
   counter := value
}

when(inc) {
   setCounter(counter + 1) // Set counter with counter + 1
}
when(clear) {
   counter := 0
}
```

You can also integrate the conditional check inside the function:

```
val inc, clear = Bool
val counter = Reg(UInt(8 bits))

def setCounterWhen(cond : Bool,value : UInt): Unit = {
   when(cond) {
     counter := value
   }
```

```
setCounterWhen(cond = inc, value = counter + 1)
setCounterWhen(cond = clear, value = 0)
```

And also specify what should be assigned to the function:

```
val inc, clear = Bool
val counter = Reg(UInt(8 bits))

def setSomethingWhen(something : UInt,cond : Bool,value : UInt): Unit = {
    when(cond) {
        something := value
    }
}

setSomethingWhen(something = counter, cond = inc, value = counter + 1)
setSomethingWhen(something = counter, cond = clear, value = 0)
```

All previous examples are strictly equivalent in their generated RTL but also from an SpinalHDL compiler perspective. This is because SpinalHDL only cares about the Scala runtime, it doesn't care about the Scala syntax itself.

In other words, from a generated RTL generation / SpinalHDL perspective, when you use functions in Scala which generate hardware, it is like the function was inlined. This is also true case for Scala loops, as they will appear like they were unrolled in the generated RTL.

7.3. Rules 89

CHAPTER

EIGHT

SEQUENTIAL LOGIC

8.1 Registers

8.1.1 Introduction

Creating registers in SpinalHDL is very different than in VHDL or Verilog.

In Spinal, there are no process/always blocks. Registers are explicitly defined at declaration.

This difference from traditional event driven HDL has a big impact:

- You can assign registers and wires in the same scope, meaning the code doesn't need to be split between process/always blocks
- It make things much more flexible (see *Functions*)

Clocks and resets are handled separately, see the *Clock domain* chapter for details.

8.1.2 Instantiation

There is 4 ways to instantiate a register:

Syntax	Description
Reg(type : Data)	Register of the given type
RegInit(resetValue : Data)	Register loaded with the given resetValue when a reset
	occurs
RegNext(nextValue : Data)	Register that samples the given nextValue each cycle
RegNextWhen(nextValue : Data, cond : Bool)	Register that samples the given nextValue when a condi-
	tion occurs

Here is an example declaring some registers:

```
//UInt register of 4 bits
val reg1 = Reg(UInt(4 bit))


//Register that samples reg1 each cycle
val reg2 = RegNext(reg1 + 1)

//UInt register of 4 bits initialized with 0 when the reset occurs
val reg3 = RegInit(U"0000")
reg3 := reg2
```

```
when(reg2 === 5){
   reg3 := 0xF
}

//Register that samples reg3 when cond is True
val reg4 = RegNextWhen(reg3,cond)
```

The code above will infer the following logic:

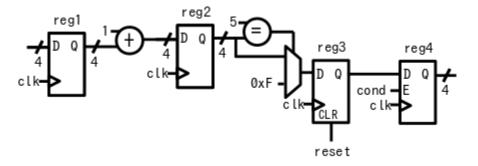

Note:

The reg3 example shows how you can assign the value of a RegInit register. But it's possible to use the same syntax to assign to the other register types as well (Reg,RegNext,RegNextWhen).

Just like in combinatorial assignments, the rule is 'Last assignment wins', but if no assignment is done, the register keeps its value.

Also, RegNext is an abstraction which is built over the Reg syntax. The two following sequences of code are strictly equivalent:

```
//Standard way
val something = Bool
val value = Reg(Bool)
value := something

//Short way
val something = Bool
val value = RegNext(something)
```

8.1.3 Reset value

In addition to the RegInit(value: Data) syntax which directly creates the register with a reset value, you can also set the reset value by calling the init(value: Data) function on the register.

```
//UInt register of 4 bits initialized with 0 when the reset occur
val reg1 = Reg(UInt(4 bit)) init(0)
```

If you have a register containing a Bundle, you can use the init function on each element of the Bundle.

```
case class ValidRGB() extends Bundle{
  val valid = Bool
  val r,g,b = UInt(8 bits)
}

val reg = Reg(ValidRGB())
reg.valid init(False) //Only the valid of that register bundle will have an reset value.
```

8.1.4 Initialization value for simulation purposes

For registers that don't need a reset value in RTL, but need an initialization value for simulation (to avoid x-propagation), you can ask for an random initialization value by calling the randBoot() function.

```
// UInt register of 4 bits initialized with a random value
val reg1 = Reg(UInt(4 bit)) randBoot()
```

8.2 RAM/ROM

8.2.1 Syntax

To create a memory in SpinalHDL, the Mem class should be used. It allows you to define a memory and add read and write ports to it.

The following table shows how to instantiate a memory:

Syntax	Description
Mem(type : Data,size : Int)	Create a RAM
Mem(type : Data,initialContent : Array[Data])	Create a ROM. If your target is an FPGA, because the
	memory can be inferred as a block ram, you can still
	create write ports on it.

Note: If you want to define a ROM, elements of the initialContent array should only be literal values (no operator, no resize functions). There is an example *here*.

Note: To give an initial content to a RAM, you can also use the init function.

The following table show how to add access ports on a memory:

8.2. RAM/ROM 93

SpinalHDL Documentation

Sy	rDescription	Re tur
	er S (audhæns)ous write	
:=		
da	enA(ss))nchronous read	Т
	Synchronous write with an optional mask. If no enable is specified, it's automatically inferred from the conditional scope where this function is called em.write(
	address	
	data	
	[enable]	
	[mask]	
)		
	Asynchronous read with an optional read under write policy	Т
me	em.readAsync(
	address	
	[readUnderWrite]	
)		
	Synchronous read with an optional enable, read under write policy and clockCrossing mode	Т
me	em.readSync(
	address	
	[enable]	
	[readUnderWrite]	
	[clockCrossing]	
)		
		Т
me	Infer a read/write port. m.readWriteSync data is written when enable && write.	
	Return the read data, the read occurs when enable is true	
	data	
4	enable Chapter 8. Sequential lo	gic
	write	
	[mack]	

Note: If for some reason you need a specific memory port which is not implemented in Spinal, you can always abstract your memory by specifying a BlackBox for it.

Important: Memory ports in SpinalHDL are not inferred but explicitly defined. You should not use coding templates like in VHDL/Verilog to help the synthesis tool to infer memory.

Here is a example which infers a simple dual port ram (32 bits * 256):

```
val mem = Mem(Bits(32 bits),wordCount = 256)
mem.write(
  enable = io.writeValid,
  address = io.writeAddress,
  data = io.writeData
)

io.readData := mem.readSync(
  enable = io.readValid,
  address = io.readAddress
)
```

8.2.2 Read under write policy

This policy specifies how a read is affected when a write occurs in the same cycle to the same address.

Kinds	Description
dontCare	Don't care about the read value when the case occurs
readFirst	The read will get the old value (before the write)
writeFirst	The read will get the new value (provided by the write)

Important: The generated VHDL/Verilog is always in the 'readFirst' mode, which is compatible with 'dontCare' but not with 'writeFirst'. To generate a design that contains this kind of feature, you need to enable the automatic memory blackboxing.

8.2.3 Mixed width ram

You can specify ports that access the memory with a width that is a power of two fraction of the memory width using these functions:

8.2. RAM/ROM 95

Synta	ax	Description			
- ,		Similar to mem.write			
mem.writeMixedWidth(
	address				
	data				
	[readUnder	Write]			
)					
		Cincilente many and A arms but in all and a metion the made along it drives the data structure since			
		Similar to mem.readAsync, but in place to return the read value, it drive the data structure given as argument			
mem	readAsyncM				
mem	address	moo mam(
	data				
	Gata				
	[readUnder	Write]			
)	[
,					
		Similar to mem.readSync, but in place to return the read value, it drive the data structure given			
		as argument			
mem.	readSyncMi	xedWidth(
	address				
	data				
	[enable]				
	[readUnder]	Write]			
	[clockCross	ing]			
)					
		The state of the s			
		Equivalent to mem.readWriteSync			
mem.readWriteSyncMixedWidth(
mem	address	netwinet () Idin(
	data				
	enable				
	write				
	[mask]				
	[mask]				
	[readUnder	Write]			
	[Tout Officer	······································			
	[clockCross	ing]			
)	[
/					

Important: As for Read under write policy, to use this feature you need to enable the automatic memory blackboxing, because there is no universal VHDL/Verilog language template to infer mixed width ram.

8.2.4 Automatic blackboxing

Because it's impossible to infer all ram kinds by using regular VHDL/Verilog, SpinalHDL integrates an optional automatic blackboxing system. This system looks at all memories present in your RTL netlist and replaces them with blackboxes. Then the generated code will rely on third party IP to provide the memory features, such as read during write policy and mixed width ports.

Here is an example of how to enable blackboxing of memories by default:

```
def main(args: Array[String]) {
    SpinalConfig()
        .addStandardMemBlackboxing(blackboxAll)
        .generateVhdl(new TopLevel)
}
```

If the standard blackboxing tools don't do enough for your design, do not hesitate to create a git issue. There is also a way to create your own blackboxing tool.

Blackboxing policy

There are multiple policies that you can use to select which memory you want to blackbox and also what to do when the blackboxing is not feasible:

Kinds	Description
blackboxAll	
	Blackbox all memory.
	Throw an error on unblackboxable memory
blackbox AllWhatsYouCan	Blackbox all memory that is blackboxable
	Diackoox all inclinity that is blackboxable
blackboxRequestedAndUnin-	
ferable	Blackbox memory specified by the user and memory that is known to be uninferable (mixed width,).
	Throw an error on unblackboxable memory
blackboxOnlyIfRequested	
	Blackbox memory specified by the user
	Throw an error on unblackboxable memory
biackboxOnlyifRequested	

To explicitly set a memory to be blackboxed, you can use its generateAsBlackBox function.

```
val mem = Mem(Rgb(rgbConfig),1 << 16)
mem.generateAsBlackBox()</pre>
```

You can also define your own blackboxing policy by extending the MemBlackboxingPolicy class.

8.2. RAM/ROM 97

Standard memory blackboxes

Here are the VHDL definitions of used blackboxes:

```
-- Simple asynchronous dual port (1 write port, 1 read port)
component Ram_1w_1ra is
  generic(
   wordCount : integer;
   wordWidth : integer;
   technology : string;
   readUnderWrite : string;
   wrAddressWidth : integer;
   wrDataWidth : integer;
   wrMaskWidth : integer;
   wrMaskEnable : boolean;
   rdAddressWidth : integer;
   rdDataWidth : integer
  );
 port(
   clk : in std_logic;
   wr_en : in std_logic;
   wr_mask : in std_logic_vector;
   wr_addr : in unsigned;
   wr_data : in std_logic_vector;
   rd_addr : in unsigned;
   rd_data : out std_logic_vector
 );
end component;
-- Simple synchronous dual port (1 write port, 1 read port)
component Ram_1w_1rs is
 generic(
   wordCount : integer;
   wordWidth : integer;
   clockCrossing : boolean;
   technology : string;
   readUnderWrite : string;
   wrAddressWidth : integer;
   wrDataWidth : integer;
   wrMaskWidth : integer;
   wrMaskEnable : boolean;
   rdAddressWidth : integer;
   rdDataWidth : integer;
   rdEnEnable : boolean
  );
 port(
   wr_clk : in std_logic;
   wr_en : in std_logic;
   wr_mask : in std_logic_vector;
   wr_addr : in unsigned;
   wr_data : in std_logic_vector;
   rd_clk : in std_logic;
   rd_en : in std_logic;
```

```
rd_addr : in unsigned;
   rd_data : out std_logic_vector
 );
end component;
-- Single port (1 readWrite port)
component Ram_1wrs is
 generic(
   wordCount : integer;
   wordWidth : integer;
   readUnderWrite : string;
   technology : string
 );
 port(
   clk : in std_logic;
   en : in std_logic;
   wr : in std_logic;
   addr : in unsigned;
   wrData : in std_logic_vector;
   rdData : out std_logic_vector
 );
end component;
--True dual port (2 readWrite port)
component Ram_2wrs is
  generic(
   wordCount : integer;
   wordWidth : integer;
   clockCrossing : boolean;
   technology : string;
   portA_readUnderWrite : string;
   portA_addressWidth : integer;
   portA_dataWidth : integer;
   portA_maskWidth : integer;
   portA_maskEnable : boolean;
   portB_readUnderWrite : string;
   portB_addressWidth : integer;
   portB_dataWidth : integer;
   portB_maskWidth : integer;
   portB_maskEnable : boolean
 );
  port(
   portA_clk : in std_logic;
   portA_en : in std_logic;
   portA_wr : in std_logic;
   portA_mask : in std_logic_vector;
   portA_addr : in unsigned;
   portA_wrData : in std_logic_vector;
   portA_rdData : out std_logic_vector;
   portB_clk : in std_logic;
   portB_en : in std_logic;
   portB_wr : in std_logic;
```

(continues on next page)

8.2. RAM/ROM 99

```
portB_mask : in std_logic_vector;
portB_addr : in unsigned;
portB_wrData : in std_logic_vector;
portB_rdData : out std_logic_vector
);
end component;
```

As you can see, blackboxes have a technology parameter. To set it you can use the setTechnology function on the corresponding memory. There are currently 4 kinds of technogy possible:

- auto
- ramBlock
- distributedLut
- registerFile

CHAPTER

NINE

DESIGN ERRORS

9.1 Assignement overlap

9.1.1 Introduction

SpinalHDL will check that no signal assignement completely erases a previous one.

9.1.2 Example

The following code

```
class TopLevel extends Component {
 val a = UInt(8 bits)
 a := 42
 a := 66 //Erease the a := 42 :(
```

will throw the following error:

```
ASSIGNMENT OVERLAP completely the previous one of (toplevel/a: UInt[8 bits])
 Source file location of the a := 66 assignement via the stack trace
```

A fix could be:

```
class TopLevel extends Component {
 val a = UInt(8 bits)
 a := 42
 when(something){
   a := 66
 }
}
```

But in the case you really want to override the previous assignment (Yes, it could make sense in some cases), you can do the following:

```
class TopLevel extends Component {
 val a = UInt(8 bits)
  a := 42
```

```
a.allowOverride
a := 66
}
```

9.2 Clock crossing violation

9.2.1 Introduction

SpinalHDL will check that every register of your design only depends (through some combinatorial logic) on registers which use the same or a synchronous clock domain.

9.2.2 Example

The following code:

will throw:

```
CLOCK CROSSING VIOLATION from (toplevel/regA : UInt[8 bits]) to (toplevel/regB : __
UInt[8 bits]).
- Register declaration at
    ***
    Source file location of the toplevel/regA definition via the stack trace
    ***
- through
    >>> (toplevel/regA : UInt[8 bits]) at ***(PlayDev.scala:834) >>>
    >>> (toplevel/tmp : UInt[8 bits]) at ***(PlayDev.scala:838) >>>
    >>> (toplevel/regB : UInt[8 bits]) at ***(PlayDev.scala:835) >>>
```

There are multiple possible fixes:

crossClockDomain tag

The crossClockDomain tag can be used to say "It's alright, don't panic" to SpinalHDL

```
class TopLevel extends Component {
  val clkA = ClockDomain.external("clkA")
  val clkB = ClockDomain.external("clkB")

val regA = clkA(Reg(UInt(8 bits)))
  val regB = clkB(Reg(UInt(8 bits))).addTag(crossClockDomain)

val tmp = regA + regA
  regB := tmp
}
```

setSyncronousWith

You can also specify that two clock domains are syncronous together.

```
class TopLevel extends Component {
  val clkA = ClockDomain.external("clkA")
  val clkB = ClockDomain.external("clkB")
  clkB.setSyncronousWith(clkA)

  val regA = clkA(Reg(UInt(8 bits)))
  val regB = clkB(Reg(UInt(8 bits)))

  val tmp = regA + regA
  regB := tmp
}
```

BufferCC

Signal Bits or Gray-coded Bits can use BufferCC to cross different clockDomain

```
class AsyncFifo extends Component {
  val popToPushGray = Bits(ptrWidth bits)
  val pushToPopGray = Bits(ptrWidth bits)

val pushCC = new ClockingArea(pushClock) {
  val pushPtr = Counter(depth << 1)
  val pushPtrGray = RegNext(toGray(pushPtr.valueNext)) init(0)
  val popPtrGray = BufferCC(popToPushGray, B(0, ptrWidth bits))
  val full = isFull(pushPtrGray, popPtrGray)
  ...
}

val popCC = new ClockingArea(popClock) {
  val popPtr = Counter(depth << 1)</pre>
```

```
val popPtrGray = RegNext(toGray(popPtr.valueNext)) init(0)
val pushPtrGray = BufferCC(pushToPopGray, B(0, ptrWidth bit))
val empty = isEmpty(popPtrGray, pushPtrGray)
...
}
```

Warning: Do not use BufferCC for general multi-Bits cross-domain process as mentioned under Clock Domains

9.3 Combinational loop

9.3.1 Introduction

SpinalHDL will check that there are no combinatorial loops in the design.

9.3.2 Example

The following code:

```
class TopLevel extends Component {
  val a = UInt(8 bits) //PlayDev.scala line 831
  val b = UInt(8 bits) //PlayDev.scala line 832
  val c = UInt(8 bits)
  val d = UInt(8 bits)

a := b
  b := c | d
  d := a
  c := 0
}
```

will throw:

```
COMBINATORIAL LOOP :
   Partial chain :
    >>> (toplevel/a : UInt[8 bits]) at ***(PlayDev.scala:831) >>>
    >>> (toplevel/d : UInt[8 bits]) at ***(PlayDev.scala:834) >>>
    >>> (toplevel/b : UInt[8 bits]) at ***(PlayDev.scala:832) >>>
    >>> (toplevel/a : UInt[8 bits]) at ***(PlayDev.scala:831) >>>
    Full chain :
        (toplevel/a : UInt[8 bits])
        (toplevel/d : UInt[8 bits])
        (UInt | UInt)[8 bits]
        (toplevel/b : UInt[8 bits])
        (toplevel/a : UInt[8 bits])
```

A possible fix could be:

```
class TopLevel extends Component {
  val a = UInt(8 bits) //PlayDev.scala line 831
  val b = UInt(8 bits) //PlayDev.scala line 832
  val c = UInt(8 bits)
  val d = UInt(8 bits)

a := b
  b := c | d
  d := 42
  c := 0
}
```

9.3.3 False-positive

It should be said that SpinalHDL's algorithm to detect combinatorial loops can be pessimistic, and it may give false positives. If it is giving a false positive, you can manualy disable loop checking on one signal of the loop like so:

```
class TopLevel extends Component {
  val a = UInt(8 bits)
  a := 0
  a(1) := a(0) //False positive because of this line
}
```

could be fixed by:

```
class TopLevel extends Component {
  val a = UInt(8 bits).noCombLoopCheck
  a := 0
  a(1) := a(0)
}
```

It should also be said that assignments such as (a(1) := a(0)) can make some tools like Verilator unhappy. It may be better to use a Vec(Bool, 8) in this case.

9.4 Hierarchy violation

9.4.1 Introduction

SpinalHDL will check that signals are never accessed outside of the current component's scope.

The following signals can be read inside a component:

- All directionless signals defined in the current component
- All in/out/inout signals of the current component
- All in/out/inout signals of children components

In addition, the following signals can be assigned to inside a component:

- · All directionless signals defined in the current component
- · All out/inout signals of the current component

• All in/inout signals of children components

If a HIERARCHY VIOLATION error appears, it means that one of the above rules was violated.

9.4.2 Example

The following code:

```
class TopLevel extends Component {
  val io = new Bundle {
    val a = in UInt(8 bits)
  }
  val tmp = U"x42"
  io.a := tmp
}
```

will throw:

```
HIERARCHY VIOLATION : (toplevel/io_a : in UInt[8 bits]) is drived by (toplevel/tmp : __
UInt[8 bits]), but isn't accessible in the toplevel component.

***

Source file location of the `io.a := tmp` via the stack trace

***
```

A fix could be:

```
class TopLevel extends Component {
  val io = new Bundle {
    val a = out UInt(8 bits) // changed from in to out
  }
  val tmp = U"x42"
  io.a := tmp
}
```

9.5 lo bundle

9.5.1 Introduction

SpinalHDL will check that each io bundle contains only in/out/inout signals.

9.5.2 Example

The following code:

```
class TopLevel extends Component {
  val io = new Bundle {
    val a = UInt(8 bits)
  }
}
```

will throw:

```
IO BUNDLE ERROR : A direction less (toplevel/io_a : UInt[8 bits]) signal was defined.

into toplevel component's io bundle

***

Source file location of the toplevel/io_a definition via the stack trace

***
```

A fix could be:

```
class TopLevel extends Component {
  val io = new Bundle {
    val a = in UInt(8 bits)
  }
}
```

But if for meta hardware description reasons you realy want io.a to be directionless, you can do:

```
class TopLevel extends Component {
  val io = new Bundle {
    val a = UInt(8 bits)
  }
  a.allowDirectionLessIo
}
```

9.6 Latch detected

9.6.1 Introduction

SpinalHDL will check that no combinatorial signal will infer a latch during synthesis. In other words, that no combinatorial signals are partially assigned.

9.6.2 Example

The following code:

```
class TopLevel extends Component {
  val cond = in(Bool)
  val a = UInt(8 bits)

  when(cond) {
    a := 42
  }
}
```

will throw:

```
LATCH DETECTED from the combinatorial signal (toplevel/a : UInt[8 bits]), defined at

***

Source file location of the toplevel/io_a definition via the stack trace

***
```

A fix could be:

9.6. Latch detected 107

```
class TopLevel extends Component {
  val cond = in(Bool)
  val a = UInt(8 bits)

  a := 0
  when(cond) {
    a := 42
  }
}
```

9.7 No driver on

9.7.1 Introduction

SpinalHDL will check that all combinatorial signals which have an impact on the design are assigned by something.

9.7.2 Example

The following code:

```
class TopLevel extends Component {
  val result = out(UInt(8 bits))
  val a = UInt(8 bits)
  result := a
}
```

will throw:

```
NO DRIVER ON (toplevel/a : UInt[8 bits]), defined at

***

Source file location of the toplevel/a definition via the stack trace

***
```

A fix could be:

```
class TopLevel extends Component {
  val result = out(UInt(8 bits))
  val a = UInt(8 bits)
  a := 42
  result := a
}
```

9.8 NullPointerException

9.8.1 Introduction

NullPointerException is a Scala runtime reported error which can happen when a variable is accessed before it was initialised.

9.8.2 Example

The following code:

```
class TopLevel extends Component {
  a := 42
  val a = UInt(8 bits)
}
```

will throw:

```
Exception in thread "main" java.lang.NullPointerException
   ***
Source file location of the a := 42 assignement via the stack trace
   ***
```

A fix could be:

```
class TopLevel extends Component {
  val a = UInt(8 bits)
  a := 42
}
```

Issue explanation:

SpinalHDL is not a language, it is a Scala library, which means it obeys the same rules as the Scala general purpose programming language. When you run your SpinalHDL hardware description to generate the corresponding VHDL/Verilog RTL, your SpinalHDL hardware description will be executed as a Scala programm, and a will be a null reference until the program executes $val\ a = UInt(8\ bits)$, so trying to assign it before then will result in a NullPointerException.

9.9 Register defined as component input

9.9.1 Introduction

In SpinalHDL, you are not allowed to define a component that has a register as an input. The reasoning behind this is to prevent surprises when the user tries to drive the inputs of child components with the registered signal. If a registered input is desired, you will need to declare the unregistered input in the *io* bundle, and register the signal in the body of the component.

9.9.2 Example

The following code:

```
class TopLevel extends Component {
  val io = new Bundle {
    val a = in(Reg(UInt(8 bits)))
  }
}
```

will throw:

```
REGISTER DEFINED AS COMPONENT INPUT : (toplevel/io_a : in UInt[8 bits]) is defined as a registered input of the toplevel component, but isn't allowed.

***

Source file location of the toplevel/io_a definition via the stack trace

***
```

A fix could be:

```
class TopLevel extends Component {
  val io = new Bundle {
    val a = in UInt(8 bits)
  }
}
```

If a registered *a* is really wanted, it can be done like so:

```
class TopLevel extends Component {
  val io = new Bundle {
    val a = in UInt(8 bits)
  }
  val a = RegNext(io.a)
}
```

9.10 Scope violation

9.10.1 Introduction

SpinalHDL will check that there are no signals assigned outside the scope they are defined in. This error isn't easy to trigger as it requires some specific meta hardware description tricks.

9.10.2 Example

The following code:

```
class TopLevel extends Component {
  val cond = Bool()

  var tmp : UInt = null
  when(cond) {
    tmp = UInt(8 bits)
  }
  tmp := U"x42"
}
```

will throw:

```
SCOPE VIOLATION : (toplevel/tmp : UInt[8 bits]) is assigned outside its declaration...

scope at

***

Source file location of the tmp := U"x42" via the stack trace

***
```

A fix could be:

```
class TopLevel extends Component {
  val cond = Bool()

  var tmp : UInt = UInt(8 bits)
  when(cond) {
  }
  tmp := U"x42"
}
```

9.11 Spinal can't clone class

9.11.1 Introduction

This error happens when SpinalHDL wants to create a new datatype via the cloneOf function but isn't able to do it. The reasons for this is nearly always because it can't retreive the construction parameters of a Bundle.

9.11.2 Example

The following code:

```
//cloneOf(this) isn't able to retreive the width value that was used to construct itself
class RGB(width : Int) extends Bundle{
  val r,g,b = UInt(width bits)
}
class TopLevel extends Component {
```

```
val tmp = Stream(new RGB(8)) //Stream requires the capability to cloneOf(new RGB(8))
}
```

will throw:

A fix could be:

```
case class RGB(width : Int) extends Bundle{
  val r,g,b = UInt(width bits)
}
class TopLevel extends Component {
  val tmp = Stream(RGB(8))
}
```

9.12 Unassigned register

9.12.1 Introduction

SpinalHDL will check that all registers which impact the design have been assigned somewhere.

9.12.2 Example

The following code:

```
class TopLevel extends Component {
  val result = out(UInt(8 bits))
  val a = Reg(UInt(8 bits))
  result := a
}
```

will throw:

```
UNASSIGNED REGISTER (toplevel/a : UInt[8 bits]), defined at

***

Source file location of the toplevel/a definition via the stack trace

***
```

A fix could be:

```
class TopLevel extends Component {
  val result = out(UInt(8 bits))
  val a = Reg(UInt(8 bits))
  a := 42
  result := a
}
```

9.12.3 Register with only init

In some cases, because of the design parametrization, it could make sense to generate a register which has no assignment but only a init statement.

```
class TopLevel extends Component {
  val result = out(UInt(8 bits))
  val a = Reg(UInt(8 bits)) init(42)

  if(something)
    a := somethingElse
  result := a
}
```

will throw:

```
UNASSIGNED REGISTER (toplevel/a : UInt[8 bits]), defined at

***

Source file location of the toplevel/a definition via the stack trace

***
```

To fix it you can ask SpinalHDL to transform the register into a combinatorial one if no assignement is present but it as a init statement:

```
class TopLevel extends Component {
  val result = out(UInt(8 bits))
  val a = Reg(UInt(8 bits)).init(42).allowUnsetRegToAvoidLatch

  if(something)
    a := somethingElse
  result := a
}
```

9.13 Unreachable is statement

9.13.1 Introduction

SpinalHDL will check all is statements in a switch are reachable.

9.13.2 Example

The following code:

```
class TopLevel extends Component {
  val sel = UInt(2 bits)
  val result = UInt(4 bits)
  switch(sel){
    is(0){ result := 4 }
    is(1){ result := 6 }
    is(2){ result := 8 }
    is(3){ result := 9 }
    is(0){ result := 2 } //Duplicated is statement!
  }
}
```

will throw:

```
UNREACHABLE IS STATEMENT in the switch statement at

***

Source file location of the is statement definition via the stack trace

***
```

A fix could be:

```
class TopLevel extends Component {
  val sel = UInt(2 bits)
  val result = UInt(4 bits)
  switch(sel){
    is(0){ result := 4 }
    is(1){ result := 6 }
    is(2){ result := 8 }
    is(3){ result := 9 }
}
```

9.14 Width mismatch

9.14.1 Introduction

SpinalHDL will check that signals on the left and right side of assignments and operators have the same width.

9.14.2 Assignement example

The following code:

```
class TopLevel extends Component {
  val a = UInt(8 bits)
  val b = UInt(4 bits)
  b := a
}
```

will throw:

```
WIDTH MISMATCH on (toplevel/b : UInt[4 bits]) := (toplevel/a : UInt[8 bits]) at
    ***
Source file location of the OR operator via the stack trace
    ***
```

A fix could be:

```
class TopLevel extends Component {
  val a = UInt(8 bits)
  val b = UInt(4 bits)
  b := a.resized
}
```

9.14.3 Operator example

The following code:

```
class TopLevel extends Component {
  val a = UInt(8 bits)
  val b = UInt(4 bits)
  val result = a | b
}
```

will throw:

```
WIDTH MISMATCH on (UInt | UInt)[8 bits]
- Left operand : (toplevel/a : UInt[8 bits])
- Right operand : (toplevel/b : UInt[4 bits])
  at
  ***
  Source file location of the OR operator via the stack trace
  ***
```

A fix could be:

```
class TopLevel extends Component {
  val a = UInt(8 bits)
  val b = UInt(4 bits)
  val result = a | (b.resized)
}
```

9.14. Width mismatch

9.15 Introduction

The SpinalHDL compile will perform many checks on your design to be sure that the generated VHDL/Verilog will be safe for simulation and synthesis. Basicaly, it should not be possible to generate a broken VHDL/Verilog. There is a not exhaustive list of SpinalHDL checks:

- · Assignement overlaping
- · Clock crossing
- · Hiearchy violation
- Combinatorial loops
- Latches
- Undriven signals
- · Width mismatch
- Unreachable switch statements

On each SpinalHDL error report, you will find a stack trace which is realy usefull to accuratly find out where the design error is. It could look overkill in a first look, but as soon you start to go futher the traditional way of doing hardware description, it is realy a helpfull tool.

CHAPTER

TEN

OTHER LANGUAGE FEATURES

10.1 Utils

10.1.1 General

Many tools and utilities are present in spinal.lib but some are already present in SpinalHDL Core.

Syntax	Return	Description
widthOf(x : BitVector)	Int	Return the width of a Bits/UInt/SInt signal
log2Up(x : BigInt)	Int	Return the number of bits needed to represent x states
isPow2(x : BigInt)	Boolean	Return true if x is a power of two
roundUp(that : BigInt, by : BigInt)	BigInt	Return the first by multiply from that (included)
Cat(x : Data*)	Bits	Concatenate all arguments, the first in MSB, the last in
		LSB

10.1.2 Cloning hardware datatypes

You can clone a given hardware data type by using the cloneOf(x) function. It will return a new instance of the same Scala type and parameters.

For example:

```
def plusOne(value : UInt) : UInt = {
    //Will recreate a UInt with the same width than ``value``
    val temp = cloneOf(value)
    temp := value + 1
    return temp
}

//treePlusOne will become a 8 bits value
val treePlusOne = plusOne(U(3,8 bits))
```

You can get more information about how hardware data types are managed *here*

Note: If you use the cloneOf function on a Bundle, this Bundle should be a case class or should override the clone function internally.

10.1.3 Passing a datatype as construction parameter

Many pieces of reusable hardware need to be parameterized by some data type. For example if you want to define a FIFO or a shift register, you need a parameter to specify which kind of payload you want for the component.

There are two similar ways to do this.

The old way

A good example of the old way to do that is in this definition of a ShiftRegister:

```
case class ShiftRegister[T <: Data](dataType: T, depth: Int) extends Component {
  val io = new Bundle {
    val input = in (cloneOf(dataType))
    val output = out(cloneOf(dataType))
  }
  // ...
}</pre>
```

And here is how you can instantiate the component:

```
val shiftReg = ShiftRegister(Bits(32 bits),depth = 8)
```

As you can see, the raw hardware type is directly passed as a construction parameter. Then each time you want to create an new instance of that kind of hardware data type, you need to use the cloneOf(...) function. Doing things this way is not super safe as it's easy to forget to use cloneOf().

The safe way

An example of the safe way to pass a data type parameter is as follows:

And here is how you instantiate the component (exactly the same as before):

```
val shiftReg = ShiftRegister(Bits(32 bits),depth = 8)
```

Notice how the example above uses a HardType wrapper around the raw data type T, which is kind of a blueprint definition of an hardware data type. This way of doing things is easier to use than the "old way", because to create a new instance of the hardware data type you just need to call the apply function of that HardType (or in other words, just add parentheses after the parameter).

Additionally, this mechanism is completely transparent from the point of view of the user, as a hardware data type can be implicitly converted into an HardType.

10.1.4 Frequency and time

SpinalHDL HDL has a dedicated syntax to define frequency and time values:

```
val frequency = 100 MHz
val timeoutLimit = 3 ms
val period = 100 us

val periodCycles = frequency*period
val timeoutCycles = frequency*timeoutLimit
```

For time definitions you can use following postfixes to get a TimeNumber:

```
fs, ps, ns, us, ms, sec, mn, hr
```

For time definitions you can use following postfixes to get a HertzNumber:

```
Hz, KHz, MHz, GHz, THz
```

TimeNumber and HertzNumber are based on the PhysicalNumber class which uses scala BigDecimal to store numbers.

10.2 Assertions

In addition to scala run-time assertions, you can add hardware assertions using the following syntax:

```
assert(assertion : Bool,message : String = null,severity: AssertNodeSeverity = Error)
Severity levels are:
```

Name	Description
NOTE	Used to report a informative message
WARNING	Used to report a unusual case
ERROR	Used to report an situation that should not happen
FAILURE	Used to report a fatal situation and close the simulation

One practical example could be to check that the valid signal of a handshake protocol never drops when ready is low:

```
class TopLevel extends Component {
  val valid = RegInit(False)
  val ready = in Bool

  when(ready){
    valid := False
  }
  // some logic

  assert(
    assertion = !(valid.fall && !ready),
```

(continues on next page)

10.2. Assertions 119

```
message = "Valid drop when ready was low",
    severity = ERROR
)
}
```

10.3 Formal

10.3.1 General

There is limited support for SystemVerilog Assertions.

You can add formal statement (assume, assert ecc..) in the Component definition, like the example below:

```
class TopLevel extends Component {
 val io = new Bundle {
   val ready = in Bool
   val valid = out Bool
  val valid = RegInit(False)
when(io.ready){
  valid := False
io.valid <> valid
// some logic
import spinal.core.GenerationFlags._
import spinal.core.Formal._
GenerationFlags.formal{
  when(initstate()) {
     assume(clockDomain.isResetActive)
     assume(io.ready === False)
  }.otherwise {
     assert(!(valid.fall && !io.ready))
}
}
```

To generate a design which includes the formal statements you can use includeFormal:

10.3.2 Supported features

Syntax	Returns	creates in SystemVerilog
assert()		assert()
cover()		cover()
	T	past(that)
past(that: T, delay: Int) past(that: T)		
rose(that : Bool)	Bool	rose(that)
fell(that : Bool)	Bool	fell(that)
changed(that : Bool)	Bool	changed(that)
stable(that : Bool)	Bool	stable(that)
initstate()	Bool	\$initstate()

10.3.3 Limitations

No support for unclocked assertions. Everything that is described in GenerationFlags.formal will be generated in a clock process.

10.4 Analog and inout

10.4.1 Introduction

You can define native tristate signals by using the Analog/inout features. These features were added for the following reasons:

- Being able to add native tristate signals to the toplevel (it avoid having to manualy wrap them with some hand written VHDL/Verilog)
- · Allowing the definition of blackbox which contains some inout pins
- Being able to connect a blackbox inout through the hierarchy to a toplevel inout pin.

As those feature were only added for convenance, do not do other fancy stuff with it and if you want to model a component like an memory mapped GPIO peripheral, please use the TriState/TriStateArray bundles from the spinal lib, which keep the true nature of the tristate driver.

10.4.2 **Analog**

Analog is the keyword which allows a signal to be defined as something ... analog, which in the digital world could mean '0', '1', or 'Z'.

For instance:

```
case class SdramInterface(g : SdramLayout) extends Bundle{
  val DQ = Analog(Bits(g.dataWidth bits)) //Bidirectional data bus
  val DQM = Bits(g.bytePerWord bits)
  val ADDR = Bits(g.chipAddressWidth bits)
  val BA = Bits(g.bankWidth bits)
```

```
val CKE, CSn, CASn, RASn, WEn = Bool
}
```

10.4.3 inout

inout is the keyword which allows you to set an Analog signal as a component inout.

For instance:

10.4.4 InOutWrapper

 $In Out Wrapper \ is \ a \ tool \ which \ allows \ you \ to \ tranform \ all \ master \ TriState/TriStateArray/ReadableOpenDrain \ bundles \ of \ a \ component \ into \ native \ inout(Analog(...)) \ signals. \ It \ allow \ you \ to \ keep \ all \ your \ hardware \ description \ without \ any \ Analog/inout \ things, \ and \ then \ transform \ the \ top level \ to \ make \ it \ synthesis \ ready.$

For instance:

```
case class Apb3Gpio(gpioWidth : Int) extends Component{
  val io = new Bundle{
    val gpio = master(TriStateArray(gpioWidth bits))
    val apb = slave(Apb3(Apb3Gpio.getApb3Config()))
  }
   ...
}
SpinalVhdl(InOutWrapper(Apb3Gpio(32)))
```

Will generate:

```
entity Apb3Gpio is
  port(
    io_gpio : inout std_logic_vector(31 downto 0); -- This io_gpio was originaly a_
    TriStateArray Bundle
    io_apb_PADDR : in unsigned(3 downto 0);
    io_apb_PSEL : in std_logic_vector(0 downto 0);
    io_apb_PENABLE : in std_logic;
    io_apb_PREADY : out std_logic;
    io_apb_PWRITE : in std_logic;
```

```
io_apb_PWDATA : in std_logic_vector(31 downto 0);
io_apb_PRDATA : out std_logic_vector(31 downto 0);
io_apb_PSLVERROR : out std_logic;
clk : in std_logic;
reset : in std_logic
);
end Apb3Gpio;
```

Instead of:

```
entity Apb3Gpio is
 port(
   io_gpio_read : in std_logic_vector(31 downto 0);
   io_gpio_write : out std_logic_vector(31 downto 0);
   io_gpio_writeEnable : out std_logic_vector(31 downto 0);
   io_apb_PADDR : in unsigned(3 downto 0);
   io_apb_PSEL : in std_logic_vector(0 downto 0);
   io_apb_PENABLE : in std_logic;
   io_apb_PREADY : out std_logic;
   io_apb_PWRITE : in std_logic;
   io_apb_PWDATA : in std_logic_vector(31 downto 0);
   io_apb_PRDATA : out std_logic_vector(31 downto 0);
   io_apb_PSLVERROR : out std_logic;
   clk : in std_logic;
   reset : in std_logic
 );
end Apb3Gpio;
```

10.5 VHDL and Verilog generation

10.5.1 Generate VHDL and Verilog from a SpinalHDL Component

To generate the VHDL from a SpinalHDL component you just need to call SpinalVhdl(new YourComponent) in a Scala main.

Generating Verilog is exactly the same, but with SpinalVerilog in place of SpinalVHDL

```
import spinal.core._

//A simple component definition
class MyTopLevel extends Component {
    //Define some input/output. Bundle like a VHDL record or a verilog struct.
    val io = new Bundle {
        val a = in Bool
        val b = in Bool
        val c = out Bool
    }

    //Define some asynchronous logic
    io.c := io.a & io.b
```

```
//This is the main that generates the VHDL and the Verilog corresponding to MyTopLevel
object MyMain {
   def main(args: Array[String]) {
        SpinalVhdl(new MyTopLevel)
        SpinalVerilog(new MyTopLevel)
   }
}
```

Important: SpinalVhdl and SpinalVerilog may need to create multiple instance of your component class, therefore the first argument is not a Component reference but a function that return a new component.

Important: SpinalVerilog implementation began the 5th of June 2016. This backend successfully passes the same regression tests as the VHDL one (RISCV CPU, Multicore and pipelined mandelbrot, UART RX/TX, Single clock fifo, Dual clock fifo, Gray counter, ..). However, if you have any issues with this new backend, please make a git issue describing the problem.

Parametrization from Scala

Argument name	Туре	Default	Description
mode	SpinalMode	null	
			Set the SpinalHDL hdl generation mode.
			Can be set to VHDL or Verilog
default-	ClockDo-		Set the clock configuration that will be used as the default value for all
ConfigFor-	mainCon-		new ClockDomain.
ClockDo-	fig	RisingEdgeC	
mains	ng .	RisingLugeC	IOCK
mams		A	-Dane4
		Asynchronou	skeset
		Dagat A atival	Ti ah
		ResetActiveF	ngn
		ClockEnable	A otival link
		Ciockenable	Activernigh
onlyStd-	Boolean	false	Change all unsigned/signed toplevel io into std_logic_vector.
LogicVec-			
torAtTo-			
pLevelIo			
default-	IClockDo-	Unknown-	Default clock frequency
ClockDo-	mainFre-	Frequency	
mainFre-	quency	1 2	
quency			
targetDi-	String	Current di-	Directory where files are generated
rectory		rectory	

And here is the syntax to specify them:

```
SpinalConfig(mode = VHDL, targetDirectory="temp/myDesign").generate(new UartCtrl)

// Or for Verilog in a more scalable formatting :
SpinalConfig(
  mode = Verilog,
   targetDirectory="temp/myDesign"
).generate(new UartCtrl)
```

Parametrization from shell

You can also specify generation parameters by using command line arguments.

```
def main(args: Array[String]): Unit = {
    SpinalConfig.shell(args)(new UartCtrl)
}
```

The syntax for command line arguments is:

```
Usage: SpinalCore [options]

--vhdl
Select the VHDL mode
--verilog
Select the Verilog mode
-d | --debug
Enter in debug mode directly
-o <value> | --targetDirectory <value>
Set the target directory
```

10.5.2 Generated VHDL and Verilog

The way how a SpinalHDL RTL description is translated into VHDL and Verilog is important:

- Names in Scala are preserved in VHDL and Verilog.
- Component hierarchy in Scala is preserved in VHDL and Verilog.
- when statements in Scala are emitted as if statements in VHDL and Verilog
- switch statements in Scala are emitted as case statements in VHDL and Verilog in all standard cases

Organization

When you use the VHDL generator, all modules are generated into a single file which contain three sections:

- 1. A package that contains the definition of all Enums
- 2. A package that contains functions used by architectures
- 3. All components needed by your design

When you use the Verilog generation, all modules are generated into a single file which contains two sections:

1. All enumeration definitions used

2. All modules needed by your design

Combinatorial logic

Scala:

```
class TopLevel extends Component {
 val io = new Bundle {
   val cond
                       = in Bool
   val value
                     = in UInt (4 bits)
   val withoutProcess = out UInt(4 bits)
   val withProcess = out UInt(4 bits)
  io.withoutProcess := io.value
  io.withProcess := 0
  when(io.cond){
   switch(io.value){
      is(U"0000"){
        io.withProcess := 8
      is(U"0001"){
        io.withProcess := 9
     default{
       io.withProcess := io.value+1
   }
  }
}
```

VHDL:

```
entity TopLevel is
 port(
    io_cond : in std_logic;
    io_value : in unsigned(3 downto 0);
    io_withoutProcess : out unsigned(3 downto 0);
    io_withProcess : out unsigned(3 downto 0)
 );
end TopLevel;
architecture arch of TopLevel is
  io_withoutProcess <= io_value;</pre>
 process(io_cond,io_value)
 begin
    io_withProcess <= pkg_unsigned("0000");</pre>
    if io_cond = '1' then
      case io_value is
        when pkg_unsigned("0000") =>
          io_withProcess <= pkg_unsigned("1000");</pre>
        when pkg_unsigned("0001") =>
          io_withProcess <= pkg_unsigned("1001");</pre>
```

```
when others =>
    io_withProcess <= (io_value + pkg_unsigned("0001"));
    end case;
    end if;
    end process;
end arch;</pre>
```

Sequential Logic

Scala:

```
class TopLevel extends Component {
  val io = new Bundle {
    val cond = in Bool
    val value = in UInt (4 bit)
    val resultA = out UInt(4 bit)
    val resultB = out UInt(4 bit)
}

val regWithReset = Reg(UInt(4 bits)) init(0)
val regWithoutReset = Reg(UInt(4 bits))

regWithReset := io.value
regWithoutReset := 0
when(io.cond) {
    regWithoutReset := io.value
}

io.resultA := regWithReset
io.resultB := regWithoutReset
}
```

VHDL:

```
entity TopLevel is
  port(
    io_cond : in std_logic;
    io_value : in unsigned(3 downto 0);
    io_resultA : out unsigned(3 downto 0);
    io_resultB : out unsigned(3 downto 0);
    clk : in std_logic;
    reset : in std_logic
    );
end TopLevel;

architecture arch of TopLevel is

    signal regWithReset : unsigned(3 downto 0);
    signal regWithoutReset : unsigned(3 downto 0);
begin
    io_resultA <= regWithReset;</pre>
```

```
io_resultB <= regWithoutReset;</pre>
  process(clk,reset)
  begin
    if reset = '1' then
      regWithReset <= pkg_unsigned("0000");</pre>
    elsif rising_edge(clk) then
      regWithReset <= io_value;</pre>
    end if;
  end process;
  process(clk)
  begin
    if rising_edge(clk) then
      regWithoutReset <= pkg_unsigned("0000");</pre>
      if io_cond = '1' then
        regWithoutReset <= io_value;</pre>
      end if;
    end if;
  end process;
end arch;
```

10.5.3 VHDL and Verilog attributes

In some situations, it is useful to give attributes to some signals of a given design to modify synthesis. To do that, you can call the following functions on any signals or memories in the design:

Syntax	Description
addAttribute(name)	Add a boolean attribute with the given name set to true
addAttribute(name,value)	Add a string attribute with the given name set to value

Example:

```
val pcPlus4 = pc + 4
pcPlus4.addAttribute("keep")
```

Produced declaration in VHDL:

```
attribute keep : boolean;
signal pcPlus4 : unsigned(31 downto 0);
attribute keep of pcPlus4: signal is true;
```

Produced declaration in Verilog:

```
(* keep *) wire [31:0] pcPlus4;
```

10.6 Introduction

10.6.1 Introduction

The core of the language defines the syntax that provides many features:

- · Types / Literals
- Register / Clock domains
- · Component / Area
- RAM / ROM
- When / Switch / Mux
- BlackBox (to integrate VHDL or Verilog IP inside Spinal)
- SpinalHDL to VHDL converter

Then, by using these features, you can of course define digital hardware, but also build powerful libraries and abstractions. It's one of the major advantages of SpinalHDL over other commonly used HDLs, because you can extend the language without having knowledge about the compiler.

One good example of this is the SpinalHDL lib which adds many utilities, tools, buses and methodologies.

To use features introduced in the following chapter you need to import spinal.core._ in your sources.

10.6. Introduction 129

CHAPTER

ELEVEN

LIBRARIES

11.1 Utils

Some utils are also present in *spinal.core*

11.1.1 State less utilities

toGray(x : UInt) Return the gray value converted from x (UInt) Return the UInt value converted value from x (gray) Reverse(x : T) T Flip all bits (lsb + n - x msb - n) UInt OHToUInt(x : Seq[Bool]) OHToUInt(x : BitVector) UInt Return the number of the single bit set (one hot) in x CountOne(x : Seq[Bool]) CountOne(x : Seq[Bool]) CountOne(x : BitVector) Bool Return True if the number of bit set in x CountOne(x : BitVector) Bool Return True if the number of bit set is > x.size / 2 MajorityVote(x : Seq[Bool]) MajorityVote(x : BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking,Inst(x : Bits) OHMasking,Iast(x : Bits) Bits OHMasking,Iast(x : Bits) OHMasking,roundRobin(requests : Bits, ohPriority : Bits) OhPriority : Bits T Returns the muxed T from the inputs based on the oneHot vector. MuxOH (oneHot : IndexedSeq[Bool], inputs : Iterable[T]	Syntax	Return	Description
Reverse(x : T) UInt Return the index of the single bit set (one hot) in x OHToUInt(x : Seq[Bool]) OHToUInt(x : BitVector) UInt Return the number of bit set in x CountOne(x : Seq[Bool]) CountOne(x : BitVector) Bool Return True if the number of bit set is > x.size / 2 MajorityVote(x : Seq[Bool]) MajorityVote(x : BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking,Inst(x : Bits) OHMasking,Iast(x : Bits) Bits OHMasking,Iast(x : Bits) OHMasking,roundRobin(requests : Bits, ohPriority : Bits) OHMasking, Instite : Bits OHMasking, Instite : Bits OHMasking, Instite : Bits OHMasking, Instite : Bits OHMasking in requests from the ohPriority position. For example if requests is "1001" and ohPriority is "0010", the roundRobin function will start looking in requests from its second bit and will return "1000". MuxOH (oneHot : IndexedSeq[Bool], inputs : Iterable[T]	toGray(x : UInt)	Bits	Return the gray value converted from x (UInt)
OHToUInt(x: Seq[Bool]) OHToUInt(x: BitVector) UInt Return the index of the single bit set (one hot) in x OHToUInt(x: BitVector) UInt CountOne(x: Seq[Bool]) CountOne(x: BitVector) Bool Return True if the number of bit set in x Return True if the number of bit set is > x.size / 2 MajorityVote(x: Seq[Bool]) MajorityVote(x: BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x: Bits) OHMasking.first(x: Bits) Bits Apply a mask on x to only keep the first bit set OHMasking.roundRobin(requests: Bits, ohPriority: Bits) OHMasking.roundRobin(requests: Bits, ohPriority: Bits) T Return True if the number of bit set in x Big-Endian <-> Little-Endian Apply a mask on x to only keep the first bit set Apply a mask on x to only keep the last bit set Apply a mask on x to only keep the bit set from requests. it start looking in requests from the ohPriority is "0010", the roundRobin function will start looking in requests from its second bit and will return "1000". T Returns the muxed T from the inputs based on the oneHot vector. MuxOH (oneHot: IndexedSeq[Bool], inputs: Iterable[T]	fromGray(x : Bits)	UInt	Return the UInt value converted value from x (gray)
OHToUInt(x: Seq[Bool]) OHToUInt(x: BitVector) UInt Return the number of bit set in x CountOne(x: Seq[Bool]) CountOne(x: BitVector) Bool Return True if the number of bit set is > x.size / 2 Majority Vote(x: Seq[Bool]) Majority Vote(x: BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x: Bits) OHMasking.first(x: Bits) OHMasking.first(x: Bits) Bits OHMasking.roundRobin(requests: Bits, ohPriority: Bits) OHMasking.roundRobin(requests: Bits, ohPriority: Bits) T Return True if the number of bit set in x Apply a mask on x to only keep the first bit set Apply a mask on x to only keep the bit set from requests. it start looking in requests from the ohPriority is "0010", the roundRobin function will start looking in requests from its second bit and will return "1000". T Return True if the number of bit set in x	Reverse(x : T)		
OHToUInt(x: BitVector) UInt Return the number of bit set in x CountOne(x: Seq[Bool]) CountOne(x: BitVector) Bool Return True if the number of bit set is > x.size / 2 Majority Vote(x: Seq[Bool]) Majority Vote(x: BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x: Bits) OHMasking.last(x: Bits) Bits OHMasking.last(x: Bits) OHMasking.roundRobin(requests: Bits, ohPriority: Bits) OhPriority: Bits OHPriority: Bits T Return True if the number of bit set in x Return True if the number of bit set is > x.size / 2 Return True if the number of bit set is > x.size / 2 Return True if the number of bit set is > x.size / 2 Return True if the number of bit set is > x.size / 2 Majority Vote(x: Seq[Bool], inputs: literable[T]		UInt	Return the index of the single bit set (one hot) in x
OHToUInt(x: BitVector) UInt Return the number of bit set in x CountOne(x: Seq[Bool]) CountOne(x: BitVector) Bool Return True if the number of bit set is > x.size / 2 Majority Vote(x: Seq[Bool]) Majority Vote(x: BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x: Bits) OHMasking.last(x: Bits) Bits OHMasking.last(x: Bits) OHMasking.roundRobin(requests: Bits, ohPriority: Bits) OhPriority: Bits OHPriority: Bits T Return True if the number of bit set in x Return True if the number of bit set is > x.size / 2 Return True if the number of bit set is > x.size / 2 Return True if the number of bit set is > x.size / 2 Return True if the number of bit set is > x.size / 2 Majority Vote(x: Seq[Bool], inputs: literable[T]	OHToUInt(x · Sea[Bool])		
CountOne(x : Seq[Bool]) CountOne(x : BitVector) Bool Return True if the number of bit set in x Return True if the number of bit set is > x.size / 2 MajorityVote(x : Seq[Bool]) MajorityVote(x : BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x : Bits) OHMasking.last(x : Bits) Bits Apply a mask on x to only keep the first bit set OHMasking.roundRobin(requests : Bits, ohPriority : Bits) OHMasking.roundRobin(requests : Bits, ohPriority : Bits) T Return True if the number of bit set in x Return True if the number of bit set in x Return True if the number of bit set in x Return True if the number of bit set is x s.size / 2 Return True if the number of bit set in x Return True if the number of bit set in x Return True if the number of bit set in x Return True if the number of bit set in x Return True if the number of bit set in x Return True if the number of bit set in x Return True if the number of bit set in x Return True if the number of bit set in x Return True if the number of bit set is x s.size / 2 Return True if the number of bit set is x s.size / 2 Return True if the number of bit set is x s.size / 2 Return True if the number of bit set is x s.size / 2 Return True if the number of bit set is x s.size / 2 Return True if the number of bit set is x s.size / 2 Return Seq [Bool]	_		
CountOne(x : Seq[Bool]) CountOne(x : BitVector) Bool Return True if the number of bit set is > x.size / 2 MajorityVote(x : Seq[Bool]) MajorityVote(x : BitVector) EndiannessSwap(that: T[, base: BitCount]) OHMasking.first(x : Bits) OHMasking.last(x : Bits) Bits OHMasking.roundRobin(requests : Bits, ohPriority : Bits) OHMasking.roundRobin(requests : Bits, ohPriority : Bits) T Return True if the number of bit set is > x.size / 2 Return the number of bit set is > x.size / 2 Return true if the number of bit set is > x.size / 2 Return true if under in the number of bit set is > x.size / 2 Return true if under in the number of bit set is > x.size / 2 Return true if under in the number	Office mi(x . bit vector)		
CountOne(x : BitVector) Bool Return True if the number of bit set is > x.size / 2 MajorityVote(x : Seq[Bool]) MajorityVote(x : BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x : Bits) OHMasking.first(x : Bits) Bits OHMasking.last(x : Bits) OHMasking.roundRobin(requests : Bits, ohPriority : Bits) OhPriority : Bits Ohriority : Bits Ohri		UInt	Return the number of bit set in x
CountOne(x : BitVector) Bool Return True if the number of bit set is > x.size / 2 Majority Vote(x : Seq[Bool]) Majority Vote(x : BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x : Bits) OHMasking.first(x : Bits) Bits Apply a mask on x to only keep the first bit set OHMasking.roundRobin(requests : Bits, ohPriority : Bits) OhPriority : Bits OhPrio	C (O (C [D 1])		
Majority Vote(x: Seq[Bool]) Majority Vote(x: BitVector) EndiannessSwap(that: T[, Big-Endian <-> Little-Endian base:BitCount]) OHMasking.first(x: Bits) OHMasking.first(x: Bits) Bits Apply a mask on x to only keep the first bit set OHMasking.roundRobin(requests: Bits, ohPriority: Bits) Apply a mask on x to only keep the bit set from requests. it start looking in requests from the ohPriority position. For example if requests is "1001" and ohPriority is "0010", the roundRobin function will start looking in requests from its second bit and will return "1000". MuxOH (oneHot: IndexedSeq[Bool], inputs: Iterable[T]	_		
MajorityVote(x: Seq[Bool]) MajorityVote(x: BitVector) EndiannessSwap(that: T[, T	CountOne(x : Bit Vector)		
MajorityVote(x: Seq[Bool]) MajorityVote(x: BitVector) EndiannessSwap(that: T[, T		Rool	Paturn True if the number of hit set is > v size / ?
Seq[Bool]) MajorityVote(x: BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x: Bits) OHMasking.last(x: Bits) Bits Apply a mask on x to only keep the first bit set OHMasking.roundRobin(requests: Bits, ohPriority: Bits) OHMasking.roundRobin(requests: Bits, ohPriority: Bits) T Returns the muxed T from the inputs based on the oneHot vector. MuxOH(oneHot: IndexedSeq[Bool], inputs: Iterable[T]		Bool	Return True if the number of oit set is > x.size / 2
MajorityVote(x: BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x: Bits) OHMasking.last(x: Bits) Bits Apply a mask on x to only keep the first bit set OHMasking.roundRobin(requests: Bits, ohPriority: Bits) OHPriority: Bits T Returns the muxed T from the inputs based on the oneHot vector. MuxOH (oneHot: IndexedSeq[Bool], inputs: Iterable[T]			
BitVector) EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x : Bits) OHMasking.last(x : Bits) Bits Apply a mask on x to only keep the first bit set OHMasking.roundRobin(requests : Bits, ohPriority : Bits OHPriority : Bits T Returns the muxed T from the inputs based on the oneHot vector. MuxOH (oneHot : IndexedSeq[Bool], inputs : Iterable[T]	Seq[Bool])		
EndiannessSwap(that: T[, base:BitCount]) OHMasking.first(x: Bits) OHMasking.last(x: Bits) Bits OHMasking.roundRobin(requests: Bits, ohPriority: Bits) OHMasking.roundRobin(requests: Bits, ohPriority: Bits OHMasking.roundRobin(requests: From the ohPriority position. For example if requests: s''1001" and ohPriority is "0010", the roundRobin function will start looking in requests from its second bit and will return "1000". The returns the muxed T from the inputs based on the oneHot vector. MuxOH(oneHot: IndexedSeq[Bool], inputs: Iterable[T]	3 • •		
base:BitCount]) OHMasking.first(x: Bits) Bits Apply a mask on x to only keep the first bit set OHMasking.last(x: Bits) Bits Apply a mask on x to only keep the last bit set OHMasking.roundRobin(requests: Bits, ohPriority: Bits) T Returns the muxed T from the inputs based on the oneHot vector. MuxOH (oneHot: IndexedSeq[Bool], inputs: Iterable[T]	BitVector)		
base:BitCount]) OHMasking.first(x: Bits) Bits Apply a mask on x to only keep the first bit set OHMasking.last(x: Bits) Bits Apply a mask on x to only keep the last bit set OHMasking.roundRobin(requests: Bits, ohPriority: Bits) T Returns the muxed T from the inputs based on the oneHot vector. MuxOH (oneHot: IndexedSeq[Bool], inputs: Iterable[T]	T 11 G (1 - TT		
OHMasking.first(x : Bits) OHMasking.last(x : Bits) Bits Apply a mask on x to only keep the first bit set Apply a mask on x to only keep the last bit set Bits OHMasking.roundRobin(requests : Bits, ohPriority : Bits OHMasking.roundRobin(requests : Bits, ohPriority : Bits OHMasking.roundRobin(requests : Bits, ohPriority : Bits OHMasking.roundRobin(requests : Bits, it start looking in requests from the ohPriority position. For example if requests is "1001" and ohPriority is "0010", the roundRobin function will start looking in requests from its second bit and will return "1000". The roundRobin function the inputs based on the oneHot vector. MuxOH(oneHot: IndexedSeq[Bool], inputs: Iterable[T]	I .	T	Big-Endian <-> Little-Endian
OHMasking.last(x : Bits) Bits Apply a mask on x to only keep the last bit set OHMasking.roundRobin(requests : Bits, ohPriority : Bits) T Returns the muxed T from the inputs based on the oneHot vector. MuxOH (oneHot : IndexedSeq[Bool], inputs : Iterable[T]		D:4:	Apply a great an order and a larger than fourthist and
OHMasking.roundRobin(requests: Bits, ohPriority: Bits) T Returns the muxed T from the inputs based on the oneHot vector. MuxOH(oneHot: IndexedSeq[Bool], inputs: Iterable[T]			
OHMasking.roundRobin(requests: Bits, ohPriority: Bits) T Returns the muxed T from the inputs based on the oneHot vector. MuxOH(oneHot: IndexedSeq[Bool], inputs: Iterable[T]	Offiviasking.last(x : bits)		Appry a mask on x to only keep the last bit set
requests: Bits, ohPriority: Bits T Returns the muxed T from the inputs based on the oneHot vector. MuxOH(oneHot: IndexedSeq[Bool], inputs: Iterable[T] it start looking in requests from the ohPriority position. For example if requests is "1001" and ohPriority is "0010", the roundRobin function will start looking in requests from its second bit and will return "1000". Returns the muxed T from the inputs based on the oneHot vector.		Dits	
ohPriority: Bits For example if requests is "1001" and ohPriority is "0010", the roundRobin function will start looking in requests from its second bit and will return "1000". T Returns the muxed T from the inputs based on the oneHot vector. MuxOH(oneHot: IndexedSeq[Bool], inputs: Iterable[T]	OHMasking.roundRobin(Apply a mask on x to only keep the bit set from requests.
roundRobin function will start looking in requests from its second bit and will return "1000". T Returns the muxed T from the inputs based on the oneHot vector. MuxOH (oneHot: IndexedSeq[Bool], inputs: Iterable[T]	requests: Bits,		it start looking in requests from the ohPriority position.
and will return "1000". T Returns the muxed T from the inputs based on the oneHot vector. MuxOH (oneHot: IndexedSeq[Bool], inputs: Iterable[T]	ohPriority: Bits		For example if requests is "1001" and ohPriority is "0010", the
T Returns the muxed T from the inputs based on the oneHot vector. MuxOH (oneHot: IndexedSeq[Bool], inputs: Iterable[T])		
MuxOH (oneHot: IndexedSeq[Bool], inputs: Iterable[T]			and will return "1000".
MuxOH (oneHot: IndexedSeq[Bool], inputs: Iterable[T]			
oneHot : IndexedSeq[Bool], inputs : Iterable[T]		T	Returns the muxed T from the inputs based on the oneHot vector.
IndexedSeq[Bool], inputs: Iterable[T]	MuxOH (
inputs : Iterable[T]	oneHot:		
inputs : Iterable[T]	IndexedSeq[Bool],		
	*-		
)		

11.1.2 State full utilities

Syntax	Return	Description
Delay(that: T, cycleCount: Int)	T	Return that delayed by cycleCount cycles
History(that: T, length: Int[,when:	List[T]	
Bool])		Return a Vec of length elements
		The first element is that, the last one is that delayed by
		length-1
		The internal shift register sample when when is asserted
BufferCC(input : T)	T	Return the input signal synchronized with the current clock do-
		main by using 2 flip flop

Counter

The Counter tool can be used to easly instanciate an hardware counter.

Instanciation syntax	Notes
Counter(start: BigInt, end: BigInt[, inc : Bool])	
Counter(range : Ranget[, inc : Bool])	Compatible with the x to y x until y syntaxes
Counter(stateCount: BigInt[, inc : Bool])	Start at zero and finish at stateCount - 1
Counter(bitCount: BitCount[, inc : Bool])	Start at zero and finish at (1 << bitCount) - 1

There is an example of different syntaxes which could be used with the Counter tool

When a Counter overflow its end value, it restart to its start value.

Note: Currently, only up counter are supported.

Timeout

The Timeout tool can be used to easly instanciate an hardware timeout.

Instanciation syntax	Notes
Timeout(cycles : BigInt)	Tick after cycles clocks
Timeout(time : TimeNumber)	Tick after a time duration
Timeout(frequency : HertzNumber)	Tick at an frequency rate

11.1. Utils 133

SpinalHDL Documentation

There is an example of different syntaxes which could be used with the Counter tool

Note: If you instanciate an Timeout with an time or frequency setup, the implicit ClockDomain should have an frequency setting.

ResetCtrl

The ResetCtrl provide some utilities to manage resets.

asyncAssertSyncDeassert

You can filter an asynchronous reset by using an asynchronously asserted synchronously deaserted logic. To do it you can use the ResetCtrl.asyncAssertSyncDeassert function which will return you the filtred value.

Argument	Туре	Description
name		
input	Bool	Signal that should be filtered
clockDomain	ClockDomain	ClockDomain which will use the filtred value
inputPolarity	Polarity	HIGH/LOW (default=HIGH)
outputPolarity	Polarity	HIGH/LOW (default=clockDomain.config.resetActiveLevel)
bufferDepth	Int	Number of register stages used to avoid metastability (default=2)

There is also an ResetCtrl.asyncAssertSyncDeassertDrive version of tool which directly assign the clockDomain reset with the filtred value.

11.1.3 Special utilities

Syntax	Return	Description
LatencyAnalysis(paths : Node*)	Int	
		Return the shortest path,in therm of cycle, that travel through all nodes, from the first one to the last one


11.2 Stream

11.2.1 Specification

The Stream interface is a simple handshake protocol to carry payload.

It could be used for example to push and pop elements into a FIFO, send requests to a UART controller, etc.

Sig-	Type	Driver	Description	Don't
nal				care
				when
valid	Bool	Mas-	When high => payload present on the interface	
		ter		
ready	Bool	Slave	When low => transaction are not consumed by the slave	valid
				is
				low
pay-	T	Mas-	Content of the transaction	valid
load		ter		is
				low

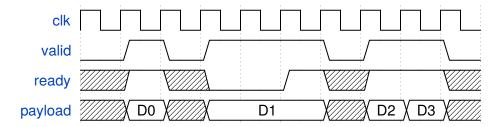

There is some examples of usage in SpinalHDL:

```
class StreamFifo[T <: Data](dataType: T, depth: Int) extends Component {
  val io = new Bundle {
    val push = slave Stream (dataType)
    val pop = master Stream (dataType)
  }
  ...
}

class StreamArbiter[T <: Data](dataType: T,portCount: Int) extends Component {
  val io = new Bundle {
    val inputs = Vec(slave Stream (dataType),portCount)
    val output = master Stream (dataType)
  }
  ...
}</pre>
```

Note: Each slave can or can't allow the payload to change when valid is high and ready is low. For examples:

• An priority arbiter without lock logic can switch from one input to the other (which will change the payload).

11.2. Stream 135

SpinalHDL Documentation

er could directly us mission. Be carefu		


11.2. Stream 137

11.2.2 Functions

Syntax	Description	Re- turn	La-
Stream(type : Data)	Create a Stream of a given type	Stream[tency
master/slave Stream(type : Data)	create a stream of a given type	Stream[
	Create a Stream of a given type		
	Initialized with corresponding in/out setup		
	initialized with corresponding in/out setup		
x.fire	Return True when a transaction is consumed	Bool	
	on the bus (valid && ready)		
x.isStall	Return True when a transaction is stall on the bus (valid &&! ready)	Bool	
x.queue(size:Int)	Return a Stream connected to x through a FIFO	Stream[
		Stream[Γ]1
x.m2sPipe()	Return a Stream drived by x		
x.stage()	through a register stage that cut valid/payload paths		
	Cost = (payload width + 1) flop flop		
x.s2mPipe()		Stream[ГD
	Return a Stream drived by x		
	ready paths is cut by a register stage		
	Cost = payload width * $(mux2 + 1 flip flop)$		
x.halfPipe()			Γ]1
	Return a Stream drived by x		
	valid/ready/payload paths are cut by some		
	register		
	Cost = (payload width + 2) flip flop,		
	bandwidth divided by two		
	Connect y to x		0
x << y			
y >> x			
	G A A A A A A B		1
	Connect y to x through a m2sPipe		1
x <-< y			
y >-> x			
	Connect y to x through a s2mPipe		0
x < y</td <td></td> <td></td> <td></td>			
y >/> x			
			1
x <-/< y	Connect y to x through s2mPipe().m2sPipe()		
y >/-> x	Which imply no combinatorial path between x and y		
38	Chap	ter 11. l	ibrari
x.haltWhen(cond : Bool)		Stream[ГD
	Return a Stream connected to x		

The following code will create this logic:

source.throwWhen(source.payload.isBlack)

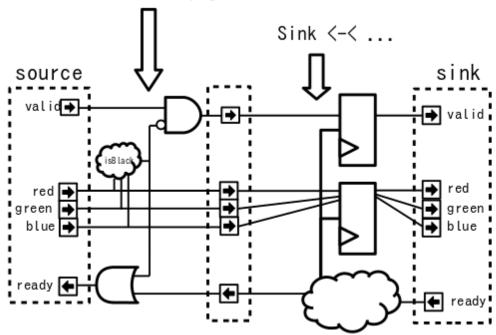

```
case class RGB(channelWidth : Int) extends Bundle{
  val red = UInt(channelWidth bit)
  val green = UInt(channelWidth bit)
  val blue = UInt(channelWidth bit)

  def isBlack : Bool = red === 0 && green === 0 && blue === 0
}

val source = Stream(RGB(8))
val sink = Stream(RGB(8))
sink <-< source.throwWhen(source.payload.isBlack)</pre>
```

11.2.3 Utils

There is many utils that you can use in your design in conjunction with the Stream bus, This chapter will document them.

StreamFifo

On each stream you can call the .queue(size) to get a buffered stream. But you can also instantiate the FIFO component itself :

```
val streamA,streamB = Stream(Bits(8 bits))
//...
val myFifo = StreamFifo(
  dataType = Bits(8 bits),
```

(continues on next page)

11.2. Stream 139

```
depth = 128
)
myFifo.io.push << streamA
myFifo.io.pop >> streamB
```

parameter name	Туре	Description
dataType	Т	Payload data type
depth	Int	Size of the memory used to store elements

io	Туре	Description
name		
push	Stream[T]	Used to push elements
pop	Stream[T]	Used to pop elements
flush	Bool	Used to remove all elements inside the FIFO
occu-	UInt of log2Up(depth + 1) bits	Indicate the internal memory occupancy
pancy		

StreamFifoCC

You can instanciate the dual clock domain version of the fifo by the following way :

```
val clockA = ClockDomain(???)
val clockB = ClockDomain(???)
val streamA, streamB = Stream(Bits(8 bits))
//...
val myFifo = StreamFifoCC(
  dataType = Bits(8 bits),
  depth = 128,
  pushClock = clockA,
  popClock = clockB
)
myFifo.io.push << streamA
myFifo.io.pop >> streamB
```

parameter name	Туре	Description
dataType	T	Payload data type
depth	Int	Size of the memory used to store elements
pushClock	ClockDomain	Clock domain used by the push side
popClock	ClockDomain	Clock domain used by the pop side

io	Туре	Description
name		
push	Stream[T]	Used to push elements
pop	Stream[T]	Used to pop elements
pushOc-	UInt of log2Up(depth + 1) bits	Indicate the internal memory occupancy (from the push
cupancy		side perspective)
popOc-	UInt of log2Up(depth + 1) bits	Indicate the internal memory occupancy (from the pop
cupancy		side perspective)

StreamCCByToggle

Component that provide a Stream cross clock domain bridge based on toggling signals.

This way of doing cross clock domain bridge is characterized by a small area usage but also a low bandwidth.

```
val clockA = ClockDomain(???)
val clockB = ClockDomain(???)
val streamA, streamB = Stream(Bits(8 bits))
//...
val bridge = StreamCCByToggle(
  dataType = Bits(8 bits),
  inputClock = clockA,
  outputClock = clockB
)
bridge.io.input << streamA
bridge.io.output >> streamB
```

parameter name	Туре	Description
dataType	T	Payload data type
inputClock	ClockDomain	Clock domain used by the push side
outputClock	ClockDomain	Clock domain used by the pop side

io name	Туре	Description
input	Stream[T]	Used to push elements
output	Stream[T]	Used to pop elements

But you can also use a this shorter syntax which directly return you the cross clocked stream:

```
val clockA = ClockDomain(???)
val clockB = ClockDomain(???)
val streamA = Stream(Bits(8 bits))
val streamB = StreamCCByToggle(
  input = streamA,
  inputClock = clockA,
  outputClock = clockB
)
```

StreamArbiter

When you have multiple Streams and you want to arbitrate them to drive a single one, you can use the StreamArbiter-Factory.

11.2. Stream 141

Arbitration	Description
functions	
lowerFirst	Lower port have priority over higher port
roundRobin	Fair round robin arbitration
sequentialOrder	
	Could be used to retrieve transaction in a sequancial order First transaction should come from port zero, then from port one,

Lock functions	Description
noLock	The port selection could change every cycle, even if the transaction on the selected port is not
	consumed.
transactionLock	The port selection is locked until the transaction on the selected port is consumed.
fragmentLock	
	Could be used to arbitrate Stream[Flow[T]]. In this mode, the port selection is locked until the selected port finish is burst (last=True).

Generation functions	Return
on(inputs : Seq[Stream[T]])	Stream[T]
onArgs(inputs : Stream[T]*)	Stream[T]

StreamFork

This utile take its input stream and duplicate it outputCount times.

```
val inputStream = Stream(Bits(8 bits))
val dispatchedStreams = StreamDispatcherSequencial(
  input = inputStream,
  outputCount = 3
)
```

StreamDispatcherSequencial

This utile take its input stream and route it to outputCount stream in a sequential order.

```
val inputStream = Stream(Bits(8 bits))
val dispatchedStreams = StreamDispatcherSequencial(
  input = inputStream,
  outputCount = 3
)
```

11.3 Flow

11.3.1 Specification

The Flow interface is a simple valid/payload protocol which mean the slave can't halt the bus. It could be used, for example, to represent data coming from an UART controller, requests to write an on-chip memory, etc.

Sig-	Туре	Driver	Description	Don't
nal				care
				when
valid	Bool	Mas-	When high => payload present on the interface	
		ter		
pay-	T	Mas-	Content of the transaction	valid
load		ter		is
				low

11.3. Flow 143

11.3.2 Functions

Syn-	Description	Re-	La-
tax		turn	tency
Flow(ty	p€reate a Flow of a given type	Flow[T]
:			
Data)			
mas-		Flow[T]
ter/slav	Cranta a Hlovy of a given type		
Flow(ty	Initialized with corresponding in/out setup		
: Doto)	muanzea wan corresponding mroat setap		
Data) x.m2sP	ina()	Flow[T	1 1
X.IIIZSF	ipe()	Flow[1] 1
	Return a Flow drived by x		
	through a register stage that cut valid/payload paths		
	Connect y to x		0
x <<			
y			
y >>			
X			
	Connect y to x through a m2sPipe		1
x <-<			
y			
y >->			
X			
x.throw	When(cond	Flow[T] 0
:			
Bool)	Return a Flow connected to x		
	When cond is high, transaction are dropped		
4 a D	(ND ******* ****************************	Т	
х.токед	(Return a register which is loaded with payload when valid is high	T	

11.4 Fragment

11.4.1 Specification

The $\mbox{{\tt Fragment}}$ bundle is the concept of transmitting a "big" thing by using multiple "small" fragments. For examples .

- A picture transmitted with width*height transaction on a Stream[Fragment[Pixel]]
- An UART packet received from an controller without flow control could be transmitted on a Flow[Fragment[Bits]]
- An AXI read burst could be carried by an Stream[Fragment[AxiReadResponse]]

Signals defined by the Fragment bundle are :

Signal	Туре	Driver	Description
fragment	T	Master	The "payload" of the current transaction
last	Bool	Master	High when the fragment is the last of the current packet

As you can see with this specification and precedent example, the Fragment concept doesn't specify how transaction are transmitted (You can use Stream,Flow or any other communication protocol). It only add enough information (last) to know if the current transaction is the first one, the last one or one in the middle of a given packet.

Note: The protocol didn't carry a 'first' bit because it can be generated at any place by doing 'RegNextWhen(bus.last, bus.fire) init(True)'

11.4.2 Functions

For Stream[Fragment[T]] and Flow[Fragment[T]], following function are presents:

		Description
tax	turr	
x.fii	stBoo	l Return True when the next or the current transaction is/would be the first of a packet
x.ta	il Boo	l Return True when the next or the current transaction is/would be not the first of a packet
x.is	Fi B ood	l Return True when an transaction is present and is the first of a packet
x.is'	ТаВюс	l Return True when an transaction is present and is the not the first/last of a packet
x.is	L aBo o	l Return True when an transaction is present and is the last of a packet

For Stream[Fragment[T]], following function are also accessible:

Syntax	Return	Description
x.insertHeader(header: T)	Stream[Fragment[T]]	Add the header to each packet on x
		and return the resulting bus


11.5 State machine

11.5.1 Introduction

In SpinalHDL you can define your state machine like in VHDL/Verilog, by using enumerations and switch cases statements. But in SpinalHDL you can also use a dedicated syntax.

The following state machine is implemented in following examples:

11.5. State machine 145

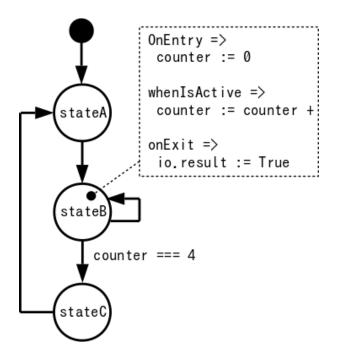

Style A:

```
import spinal.lib.fsm._
class TopLevel extends Component {
 val io = new Bundle{
   val result = out Bool
 }
 val fsm = new StateMachine{
   val counter = Reg(UInt(8 bits)) init (0)
   io.result := False
   val stateA : State = new State with EntryPoint{
     whenIsActive (goto(stateB))
   }
   val stateB : State = new State{
     onEntry(counter := 0)
     whenIsActive {
        counter := counter + 1
       when(counter === 4){
          goto(stateC)
        }
     onExit(io.result := True)
   val stateC : State = new State{
     whenIsActive (goto(stateA))
    }
 }
}
```

Style B:

```
import spinal.lib.fsm._
class TopLevel extends Component {
  val io = new Bundle{
    val result = out Bool
  val fsm = new StateMachine{
    val stateA = new State with EntryPoint
    val stateB = new State
    val stateC = new State
    val counter = Reg(UInt(8 bits)) init (0)
    io.result := False
    stateA
      .whenIsActive (goto(stateB))
    stateB
      .onEntry(counter := 0)
      .whenIsActive {
        counter := counter + 1
        when(counter === 4){
          goto(stateC)
        }
      .onExit(io.result := True)
    stateC
      .whenIsActive (goto(stateA))
  }
}
```

11.5.2 StateMachine

StateMachine is the base class that will manage the logic of your FSM.

```
val myFsm = new StateMachine{
   // Here will come states definition
}
```

The StateMachine class also provide some utils :

Name	Return	Description
isAc-	Bool	Return True when the state machine is in the given state
tive(state)		
isEnter-	Bool	Return True when the state machine is entering the given state
ing(state)		

11.5. State machine 147

11.5.3 States


There is multiple kinds of states that you can use.

- State (the base one)
- StateDelay
- StateFsm
- $\bullet \ State Parallel Fsm$

In each of them you have access the following utilities:

Name	Description
	yourStatements is executed the cycle before entering the state
F	
onEntry{	
VOI	ırStatements
}	instatements
J	
	yourStatements is executed when the state machine will be in another state the next cycle
T (
onExit{	
VOI	ırStatements
}	instatements
J	
	yourStatements is executed when the state machine is in the state
whenIsA	ctive{
VOI	ırStatements
}	instatements
J	
	yourStatements is executed when the state machine will be in the state the next cycle
whenIsN	ext{
VO	urStatements
	II Statements
}	
goto(nex	State) he state of the state machine by nextState
exit()	Set the state of the state machine to the boot one

For example, the following state could be defined in SpinalHDL by using the following syntax :

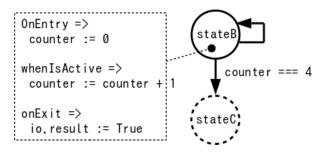

```
val stateB : State = new State{
  onEntry(counter := 0)
  whenIsActive {
    counter := counter + 1
    when(counter === 4){
      goto(stateC)
    }
  }
  onExit(io.result := True)
}
```

You can also define your state as the entry point of the state machine by extends the EntryPoint trait.

```
val stateA: State = new State with EntryPoint {
  whenIsActive {
    goto(stateB)
  }
}
```

StateDelay

StateDelay allow you to create a state which wait a fixed number of cycles before executing statments in your $whenCompleted{...}$. The standard way to write it is:

```
val stateG : State = new StateDelay(cyclesCount=40){
  whenCompleted{
    goto(stateH)
  }
}
```

But you can also write it like that:

```
val stateG : State = new StateDelay(40){whenCompleted(goto(stateH))}
```

11.5. State machine 149

StateFsm

StateFsm Allow you to describe a state which contains a nested state machine. When the nested state machine is done, your statments in whenCompleted{...} are executed.

There is an example of StateFsm definition:

```
val stateC = new StateFsm(fsm=internalFsm()){
   whenCompleted{
    goto(stateD)
   }
}
```

As you can see in the precedent code, it use a internalFsm function to create the inner state machine. There is an example of definition bellow:

```
def internalFsm() = new StateMachine {
  val counter = Reg(UInt(8 bits)) init (0)

val stateA: State = new State with EntryPoint {
    whenIsActive {
      goto(stateB)
    }
}

val stateB: State = new State {
    onEntry (counter := 0)
    whenIsActive {
      when(counter === 4) {
        exit()
      }
      counter := counter + 1
    }
}
```

In the precedent example, the exit() call will make the state machine jump to the boot state (a internal hidden state). This notify the StateFsm about the completion of the inner state machine.

StateParallelFsm

This state is able to handle multiple nested state machines. When all nested state machine are done, your statments in $whenCompleted{...}$ are executed.

There is an example of declaration:

```
val stateD = new StateParallelFsm (internalFsmA(), internalFsmB()){
  whenCompleted{
    goto(stateE)
  }
}
```

11.6 VexRiscv (RV32IM CPU)

VexRiscv is an fpga friendly RISC-V ISA CPU implementation with following features :

- RV32IM instruction set
- Pipelined on 5 stages (Fetch, Decode, Execute, Memory, WriteBack)
- 1.44 DMIPS/Mhz when all features are enabled
- · Optimized for FPGA
- Optional MUL/DIV extension
- Optional instruction and data caches
- · Optional MMU
- Optional debug extension allowing eclipse debugging via an GDB >> openOCD >> JTAG connection
- Optional interrupts and exception handling with the Machine and the User mode from the riscv-privileged-v1.9.1 spec.
- Two implementation of shift instructions, Single cycle / shiftNumber cycles
- Each stage could have bypass or interlock hazard logic
- FreeRTOS port https://github.com/Dolu1990/FreeRTOS-RISCV

Much more information there: https://github.com/SpinalHDL/VexRiscv

11.7 Bus Slave Factory

11.7.1 Introduction

In many situation it's needed to implement a bus register bank. The BusSlaveFactory is a tool that provide an abstract and smooth way to define them.

To see capabilities of the tool, an simple example use the Apb3SlaveFactory variation to implement an *memory mapped UART*. There is also another example with an *Timer* which contain a memory mapping function.

You can find more documentation about the internal implementation of the BusSlaveFactory tool there

11.7.2 Functionality

Currently there is three implementation of the BusSlaveFactory tool: APB3, AXI-lite 3 and Avalon. Each implementation of that tool take as argument one instance of the corresponding bus and then offer following

functions to map your hardware into the memory mapping:

Name	Re-	Description
1 D (W: 1/1	turn	D (d 1 ('14 C) 1
busDataWidth	Int	Return the data width of the bus t) When the bus read the address, fill the response with that at bitOffset
·		et)When the bus write the address, assign that with bus's data from bitOffset
on-	ss,bitOiis	Call doThat when a write transaction occur on address
Write(address)(c	oThat)	Can do mat when a write transaction occur on address
on-	io i mac)	Call doThat when a read transaction occur on address
Read(address)(d	oThat)	Can do 11 de Willem de 10 de de disconsiste de
nonStop-		Permanently assign that by the bus write data from bitOffset
Write(that,bitOfl	fset)	
readAnd-	,	Make that readable and writable at address and placed at bitOffset in the word
Write(that,addre	ss,bitOffs	1
readMulti-		
Word(that,addre	ss)	Controller was a server to the
		Create the memory mapping to read that from 'address'.
		If that is bigger than one word it extends the register on followings addresses
writeMulti-		
Word(that,addre	ss)	
		Create the memory mapping to write that at 'address'.
		If that is bigger than one word it extends the register on followings addresses
	Т	
cre- ateWriteOnly(da	-	Create a write only register of type dataType at address and placed at bitOffset in
createRead-	T	Create a read write register of type dataType at address and placed at bitOffset in
Write(dataType,	_	
create-		Create a writable Flow register of type dataType at address and placed at bitOffset
AndDrive-	110,111	in the word
Flow(dataType,a	ddress.bi	
		etDrive that with a register writable at address placed at bitOffset in the word
driveAn-	,	Drive that with a register writable and readable at address placed at bitOffset in
dRead(that,addre	ess,bitOff	
drive-		Emit on that a transaction when a write happen at address by using data placed at
Flow(that,addres	s,bitOffs	et b itOffset in the word
	.	Read that and consume the transaction when a read happen at address.
	Blocking(that, valid <= validBitOffset bit
address,		payload <= payloadBitOffset+widthOf(payload) downto payloadBitOffset
		payroau \- payroaubitorisci+wiuiitor(payroau) uowiito payroaubi tottiset
validBitOt	ffset,	
. 1 1751	(O.T. 1)	
payloadBi	iOffset)	
doBitsAccumula	ntion And 0	Instanciate an internal register which at each cycle do : ClearOnkead(that,
address,	lion max	reg := reg that
address,		Then when a read occur, the register is cleared. This register is readable at address
bitOffset)		and placed at bitOffset in the word

11.8 Bus

11.8.1 AHB-Lite3

Configuration and instanciation

First each time you want to create a AHB-Lite3 bus, you will need a configuration object. This configuration object is an AhbLite3Config and has following arguments:

Parameter name	Туре	Default	Description
addressWidth	Int		Width of HADDR (byte granularity)
dataWidth	Int		Width of HWDATA and HRDATA

There is in short how the AHB-Lite3 bus is defined in the SpinalHDL library:

```
case class AhbLite3(config: AhbLite3Config) extends Bundle with IMasterSlave{
 // Address and control
 val HADDR = UInt(config.addressWidth bits)
 val HSEL = Bool
 val HREADY = Bool
  val HWRITE = Bool
  val HSIZE = Bits(3 bits)
  val HBURST = Bits(3 bits)
 val HPROT = Bits(4 bits)
 val HTRANS = Bits(2 bits)
 val HMASTLOCK = Bool
  // Data
  val HWDATA = Bits(config.dataWidth bits)
  val HRDATA = Bits(config.dataWidth bits)
  // Transfer response
  val HREADYOUT = Bool
  val HRESP = Bool
 override def asMaster(): Unit = {
    out (HADDR, HWRITE, HSIZE, HBURST, HPROT, HTRANS, HMASTLOCK, HWDATA, HREADY, HSEL)
    in(HREADYOUT, HRESP, HRDATA)
 }
}
```

There is a short example of usage:

```
val ahbConfig = AhbLite3Config(
  addressWidth = 12,
  dataWidth = 32
)
val ahbX = AhbLite3(ahbConfig)
val ahbY = AhbLite3(ahbConfig)
when(ahbY.HSEL){
```

(continues on next page)

11.8. Bus 153

```
}
```

Variations

There is an AhbLite3Master variation. The only difference is the absence of the HREADYOUT signal. This variation should only be used by masters while the interconnect and slaves use AhbLite3.

11.8.2 Apb3

Introduction

The AMBA3-APB bus is commonly used to interface low bandwidth peripherals.

Configuration and instanciation

First each time you want to create a APB3 bus, you will need a configuration object. This configuration object is an Apb3Config and has following arguments:

Parameter name	Туре	Default	Description
addressWidth	Int		Width of PADDR (byte granularity)
dataWidth	Int		Width of PWDATA and PRDATA
selWidth	Int	1	With of PSEL
useSlaveError	Boolean	false	Specify the presence of PSLVERROR

There is in short how the APB3 bus is defined in the SpinalHDL library :

```
case class Apb3(config: Apb3Config) extends Bundle with IMasterSlave {
 val PADDR
                = UInt(config.addressWidth bit)
                = Bits(config.selWidth bits)
 val PSEL
                = Bool
 val PENABLE
 val PREADY
                = Bool
 val PWRITE
                = Bool
 val PWDATA
                = Bits(config.dataWidth bit)
 val PRDATA
                = Bits(config.dataWidth bit)
 val PSLVERROR = if(config.useSlaveError) Bool else null
 //...
}
```

There is a short example of usage:

```
val apbConfig = Apb3Config(
  addressWidth = 12,
  dataWidth = 32
)
val apbX = Apb3(apbConfig)
val apbY = Apb3(apbConfig)
when(apbY.PENABLE){
```

(continues on next page)

```
} //...
}
```

Functions and operators

Name	Return	Description
X >> Y		Connect X to Y. Address of Y could be smaller than the one of X
X << Y		Do the reverse of the >> operator

11.8.3 Axi4

Introduction

The AXI4 is a high bandwidth bus defined by ARM.

Configuration and instanciation

First each time you want to create a AXI4 bus, you will need a configuration object. This configuration object is an Axi4Config and has following arguments:

Note: useXXX specify if the bus has XXX signal present.

Type	Default
Int	
Int	
Int	
Int	
Boolean	true
Boolean	false
	Int Int Int Int Boolean

There is in short how the AXI4 bus is defined in the SpinalHDL library :

```
case class Axi4(config: Axi4Config) extends Bundle with IMasterSlave{
  val aw = Stream(Axi4Aw(config))
  val w = Stream(Axi4W(config))
  val b = Stream(Axi4B(config))
```

11.8. Bus 155

(continues on next page)

```
val ar = Stream(Axi4Ar(config))
val r = Stream(Axi4R(config))

override def asMaster(): Unit = {
   master(ar,aw,w)
   slave(r,b)
}
```

There is a short example of usage :

```
val axiConfig = Axi4Config(
  addressWidth = 32,
  dataWidth = 32,
  idWidth = 4
)

val axiX = Axi4(axiConfig)
val axiY = Axi4(axiConfig)
when(axiY.aw.valid) {
  //...
}
```

Variations

There is 3 other variation of the Axi4 bus:

Туре	Description
Axi4ReadOnly	Only AR and R channels are present
Axi4WriteOnly	Only AW, W and B channels are present
Axi4Shared	
	This variation is a library initiative. It use 4 channels, W, B, R and also a new one which is named AWR. The AWR channel can be used to transmit AR and AW transactions. To dissociate them, a signal write is present. The advantage of this Axi4Shared variation is to use less area, especialy in the interconnect.

Functions and operators

Name	Return	Description
X >> Y		Connect X to Y. Able infer default values as specified in the AXI4 specification,
		and also to adapt some width in a safe manner.
X << Y		Do the reverse of the >> operator
X.toWriteOnly	Axi4WriteOnly	Return an Axi4WriteOnly bus drive by X
X.toReadOnly	Axi4ReadOnly	Return an Axi4ReadOnly bus drive by X

11.8.4 AvalonMM

Introduction

The AvalonMM bus fit very well in FPGA. It is very flexible:

- Able of the same simplicity than APB
- Better for than AHB in many application that need bandwidth because AvalonMM has a mode that decouple read response from commands (reduce latency read latency impact).
- Less performance than AXI but use much less area (Read and write command use the same handshake channel. The master don't need to store address of pending request to avoid Read/Write hazard)

Configuration and instanciation

The AvalonMM Bundle has a construction argument AvalonMMConfig. Because of the flexible nature of the Avalon bus, the AvalonMMConfig as many configuration elements. For more information the Avalon spec could be find there.

```
case class AvalonMMConfig( addressWidth : Int,
                           dataWidth: Int,
                           burstCountWidth: Int.
                           useByteEnable : Boolean,
                           useDebugAccess: Boolean,
                           useRead : Boolean,
                           useWrite: Boolean,
                           useResponse : Boolean,
                           useLock: Boolean,
                           useWaitRequestn: Boolean,
                           useReadDataValid: Boolean,
                           useBurstCount : Boolean,
                           //useEndOfPacket : Boolean,
                           addressUnits : AddressUnits = symbols,
                           burstCountUnits : AddressUnits = words.
                           burstOnBurstBoundariesOnly : Boolean = false,
                           constantBurstBehavior : Boolean = false,
                           holdTime : Int = 0,
                           linewrapBursts : Boolean = false,
                           maximumPendingReadTransactions : Int = 1,
                           maximumPendingWriteTransactions : Int = 0, // unlimited
                           readLatency : Int = 0,
                           readWaitTime : Int = 0,
                           setupTime : Int = 0,
                           writeWaitTime : Int = 0
```

This configuration class has also some functions:

Name	Return	Description
getReadOn-	AvalonMM-	Return a similar configuration but with all write feature disabled
lyConfig	Config	
getWriteOn-	AvalonMM-	Return a similar configuration but with all read feature disabled
lyConfig	Config	

11.8. Bus 157

This configuration companion object has also some functions to provide some AvalonMMConfig templates:

Name	Return	Description
fixed(addressWidt	h ,AlwadowiMilM ,readLa	tellery) n a simple configuration with fixed read timings
	Config	
pipelined(address)	W Adtal,olaMMi dth)	Return a configuration with variable latency read (readDataValid)
	Config	
bursted(addressW	id Ah,akta MM th,burs	t(Retrit)Wadth) figuration with variable latency read and burst capabilities
	Config	

11.9 Com

11.9.1 **UART**

Introduction

The UART protocol could be used, for instance, to emit an receive RS232 / RS485 frames.

There is an example of an 8 bits frame, with no parity and one stop bit:



Bus definition

UartCtrl

An Uart controller is implemented in the library. This controller has the specificity to use a sampling window to read the rxd pin and then to using an majority vote to filter its value.

Ю	di-	type	Description
name	rec-		
	tion		
con-	in	UartC-	Used to set the clock divider/partity/stop/data length of the controller
fig		trl-	
		Con-	
		fig	
write	slave	Stream	Bstrcam port used to request a frame transmission
read	mas-	Flow[B	its]]ow port used to receive decoded frames
	ter		
uart	mas-	Uart	Interface to the real world
	ter		

The controller could be instantiated via an <code>UartCtrlGenerics</code> configuration object :

At-	type	Description
tribute		
dataW-	Int	Maximal number of bit inside a frame
idth-		
Max		
clock-	Int	Width of the internal clock divider
Di-		
vider-		
Width		
pre-	Int	Specify how many samplingTick are drop at the beginning of a UART baud
Sam-		
pling-		
Size		
sam-	Int	Specify how many samplingTick are used to sample rxd values in the middle of the UART baud
pling-		
Size		
post-	Int	Specify how many samplingTick are drop at the end of a UART baud
Sam-		
pling-		
Size		

11.10 IO

11.10.1 ReadableOpenDrain

ReadableOpenDrain

The ReadableOpenDrain bundle is defined as following:

11.10. IO 159

Then, as a master, you can use the read signal to read the outside value and use the write to set the value that you want to drive on the output.

There is an example of usage:

```
val io = new Bundle{
  val dataBus = master(ReadableOpenDrain(Bits(32 bits)))
}
io.dataBus.write := 0x12345678
when(io.dataBus.read === 42){
}
```

11.10.2 TriState

Introduction

SpinalHDL doesn't support natively tristates (inout) signals at the moment. The reason of that are:

- They are not really kind of digital things
- · And except for IO, they aren't used for digital design
- The tristate concept doesn't fit naturally in the SpinalHDL internal graph.

Of course it's possible to add a native tristate support, but for the moment, the clean solution to manage them is to use an Tristate Bundle bus defined in the spinal.lib:

TriState

The TriState bundle is defined as following:

```
case class TriState[T <: Data](dataType : HardType[T]) extends Bundle with IMasterSlave{
  val read,write : T = dataType()
  val writeEnable = Bool

  override def asMaster(): Unit = {
    out(write,writeEnable)
    in(read)
  }
}</pre>
```

Then, as a master, you can use the read signal to read the outside value, you can use the writeEnable to enable your output, and finally use the write to set the value that you want to drive on the output.

There is an example of usage:

```
val io = new Bundle{
  val dataBus = master(TriState(Bits(32 bits)))
}
io.dataBus.writeEnable := True
io.dataBus.write := 0x12345678
when(io.dataBus.read === 42){
}
```

TriStateArray

In some case, you need to have the control over the output enable of each individual pin (Like for GPIO). In this range of cases, you can use the TriStateArray bundle.

It is defined as following:

```
case class TriStateArray(width : BitCount) extends Bundle with IMasterSlave{
  val read,write,writeEnable = Bits(width)

  override def asMaster(): Unit = {
    out(write,writeEnable)
    in(read)
  }
}
```

It is the same than the TriState bundle, except that the writeEnable is an Bits to control each output buffer.

There is an example of usage:

```
val io = new Bundle{
  val dataBus = master(TriStateArray(32 bits)
}
io.dataBus.writeEnable := 0x87654321
io.dataBus.write := 0x12345678
when(io.dataBus.read === 42){
}
```

11.10. IO 161

11.11 Graphics

11.11.1 Colors

RGB

You can use an Rgb bundle to model colors in hardware. This Rgb bundle take as parameter an RgbConfig classes which specify the number of bits for each channels :

```
case class RgbConfig(rWidth : Int,gWidth : Int,bWidth : Int){
  def getWidth = rWidth + gWidth + bWidth
}

case class Rgb(c: RgbConfig) extends Bundle{
  val r = UInt(c.rWidth bits)
  val g = UInt(c.gWidth bits)
  val b = UInt(c.bWidth bits)
}
```

Those classes could be used as following:

```
val config = RgbConfig(5,6,5)
val color = Rgb(config)
color.r := 31
```

11.11.2 VGA

VGA bus

An VGA bus definition is available via the Vga bundle.

VGA timings

VGA timings could be modeled in hardware by using an VgaTimings bundle :

```
case class VgaTimingsHV(timingsWidth: Int) extends Bundle {
  val colorStart = UInt(timingsWidth bit)
  val colorEnd = UInt(timingsWidth bit)
  val syncStart = UInt(timingsWidth bit)
  val syncEnd = UInt(timingsWidth bit)
```

(continues on next page)

```
case class VgaTimings(timingsWidth: Int) extends Bundle {
  val h = VgaTimingsHV(timingsWidth)
  val v = VgaTimingsHV(timingsWidth)

  def setAs_h640_v480_r60 = ...
  def driveFrom(busCtrl : BusSlaveFactory, baseAddress : Int) = ...
}
```

VGA controller

An VGA controller is available. It's definition is the following:

```
case class VgaCtrl(rgbConfig: RgbConfig, timingsWidth: Int = 12) extends Component {
  val io = new Bundle {
    val softReset = in Bool
    val timings = in(VgaTimings(timingsWidth))

  val frameStart = out Bool
    val pixels = slave Stream (Rgb(rgbConfig))
    val vga = master(Vga(rgbConfig))

  val error = out Bool
  }
  // ...
}
```

frameStart is a signals that pulse one cycle at the beginning of each new frame. pixels is a stream of color used to feed the VGA interface when needed. error is high when a transaction on the pixels is needed, but nothing is present.

11.12 EDA

11.12.1 **QSysify**

Introduction

QSysify is a tool which is able to generate a QSys IP (tcl script) from a SpinalHDL component by analysing its IO definition. It currently implement the following interfaces features:

- Master/Slave AvalonMM
- Master/Slave APB3
- · Clock domain input
- · Reset output
- · Interrupt input

11.12. EDA 163

SpinalHDL Documentation

• Conduit (Used in last resort)

Example

In the case of a UART controller:

```
case class AvalonMMUartCtrl(...) extends Component{
  val io = new Bundle{
    val bus = slave(AvalonMM(AvalonMMUartCtrl.getAvalonMMConfig))
    val uart = master(Uart())
  }

//...
}
```

The following main will generate the Verilog and the QSys TCL script with io.bus as an AvalonMM and io.uart as a conduit:

tags

Because QSys require some information that are not specified in the SpinalHDL hardware specification, some tags should be added to interface:

AvalonMM / APB3

```
io.bus addTag(ClockDomainTag(busClockDomain))
```

Interrupt input

io.interrupt addTag(InterruptReceiverTag(relatedMemoryInterfacei, interruptClockDomain))

Reset output

io.resetOutput addTag(ResetEmitterTag(resetOutputClockDomain))

Adding new interface support

Basicaly, the QSysify tool can be setup with a list of interface emitter (as you can see here)

You can create your own emitter by creating a new class extending QSysifyInterfaceEmiter

11.13 Introduction

11.13.1 Introduction

The spinal.lib package goals are:

- Provide things that are commonly used in hardware design (FIFO, clock crossing bridges, useful functions)
- Provide simple peripherals (UART, JTAG, VGA, ..)
- Provide some bus definition (Avalon, AMBA, ..)
- Provide some methodology (Stream, Flow, Fragment)
- Provide some example to get the spirit of spinal
- Provide some tools and facilities (latency analyser, QSys converter, ...)

To use features introduced in followings chapter you need, in most of cases, to import spinal.lib._in your sources.

Important:

This package is currently under construction. Documented features could be considered as stable.

Do not hesitate to use github for suggestions/bug/fixes/enhancements

11.13. Introduction 165

CHAPTER

TWELVE

SIMULATION

12.1 Setup and installation

The SpinalSim with Verilator as backend is supported on both Linux and Windows platforms.

12.1.1 Scala

Don't forget to add the following in your build.sbt file

```
fork := true
```

And you will always need the following imports in your Scala testbench:

```
import spinal.core._
import spinal.core.sim._
```

12.1.2 Linux

You will also need a recent version of Verilator installed:

```
sudo apt-get install git make autoconf g++ flex bison -y # First time prerequisites
git clone http://git.veripool.org/git/verilator # Only first time
unsetenv VERILATOR_ROOT # For csh; ignore error if on bash
unset VERILATOR_ROOT # For bash
cd verilator
git pull # Make sure we're up-to-date
git checkout verilator_3_916
autoconf # Create ./configure script
./configure
make -j$(nproc)
sudo make install
echo "DONE"
```

12.1.3 Windows

In order to get SpinalSim + Verilator working on windows, you have to do the following:

- Install MSYS2
- Via MSYS2 get gcc/g++/verilator (for verilator you can compile it from the sources)
- Add bin and usrbin of MSYS2 into your windows PATH (ie: C:msys64usrbin; C:msys64mingw64bin)

Then you should be able to run SpinalSim + verilator from your Scala project without having to use MSYS2 anymore.

From a fresh install of MSYS2 MinGW 64-bits, you will have to run the following commands inside the MSYS2 MinGW 64-bits shell (enter commands one by one):

from the minGW packet manager

from source

```
pacman -Syuu
#Close the MSYS2 shell once you're asked to
pacman -Syuu
pacman -S --needed base-devel mingw-w64-x86_64-toolchain \
                   git flex\
                   mingw-w64-x86_64-cmake
git clone http://git.veripool.org/git/verilator
unset VERILATOR_ROOT
cd verilator
git pull
git checkout verilator_3_916
autoconf
./configure
export CPLUS_INCLUDE_PATH=/usr/include:$CPLUS_INCLUDE_PATH
export PATH=/usr/bin/core_perl:$PATH
cp /usr/include/FlexLexer.h ./src
make -j$(nproc)
make install
echo "DONE"
#Add C:\msys64\usr\bin;C:\msys64\mingw64\bin to you windows PATH
```

Important: Be sure that your PATH environnement variable is pointing to the JDK 1.8 and don't contain a JRE installation.

Important: Adding the MSYS2 bin folders into your windows PATH could potentially have some side effects. It's why it is safer to add them as last elements of the PATH to reduce their priority.

12.2 Boot a simulation

12.2.1 Introduction

There is an example hardware defintion + testbench:

12.2.2 Configuration

SimConfig will return your a default simulation configuration instance on which you can call multiple function to configure your simulation :

Syntax	Description
withWave	Enable the simulation wave capture
withConfig(SpinalConfig)	Specify the SpinalConfig that should be use to generate the hardware
allOptimisation	Enable all the RTL compilation optimisation to reduce simulation time (will in-
	crease compilation time)
workspacePath(path)	Change the folder where the sim files are generated

Then you can call the compile(rtl) function to compile the hardware and warmup the simulator. This will return you a SimCompiled instance.

On this SimCompiled instance you can run your simulation with the following functions :

12.2. Boot a simulation 169

Syntax	Description
<pre>doSim[(simName[, seed])]{dut =></pre>	Run the simulation until the main thread is done (doesn't wait forked threads)
}	or until all threads are stuck
doSimUntilVoid[(simName[,	Run the simulation until all threads are done or stuck
seed])]{dut =>}	

For example:

```
val spinalConfig = SpinalConfig(defaultClockDomainFrequency = FixedFrequency(10 MHz))

SimConfig
   .withConfig(spinalConfig)
   .withWave
   .allOptimisation
   .workspacePath("~/tmp")
   .compile(new TopLevel)
   .doSim{ dut =>
   //Simulation code here
}
```

Note that by default, the simulation will work into the simWorkspace/xxx folders. You can override the simWorkspace location by setting the SPINALSIM_WORKSPACE environnement variable.

12.2.3 Running multiple tests on the same hardware

```
val compiled = SimConfig.withWave.compile(new Dut)

compiled.doSim("testA"){ dut =>
    //Simulation code here
}

compiled.doSim("testB"){ dut =>
    //Simulation code here
}
```

12.2.4 Throw Success or Failure of the simulation from a thread

At any moment during a simulation you can call simSuccess or simFailure to end it.

12.3 Accessing signals of the simulation

12.3.1 Read and write signals

Each interface signals of the toplevel can be read into scala and write from scala:

Syntax	Description
Bool.toBoolean	Read an hardware Bool as a Scala Boolean value
Bits/UInt/SInt.toInt	Read an hardware BitVector as a Scala Int value
Bits/UInt/SInt.toLong	Read an hardware BitVector as a Scala Long value
Bits/UInt/SInt.toBigInt	Read an hardware BitVector as a Scala BigInt value
SpinalEnumCraft.toEnum	Read an hardware SpinalEnumCraft as a Scala SpinalEnumElement
	value
Bool #= Boolean	Assign a hardware Bool from an Scala Boolean
Bits/UInt/SInt #= Int	Assign a hardware BitVector from an Scala Int
Bits/UInt/SInt #= Long	Assign a hardware BitVector from an Scala Long
Bits/UInt/SInt #= BigInt	Assign a hardware BitVector from an Scala BigInt
SpinalEnumCraft #= SpinalEnumEle-	Assign a hardware SpinalEnumCraft from an Scala SpinalEnumEle-
ment	ment

```
dut.io.a #= 42
dut.io.a #= 421
dut.io.a #= BigInt("101010", 2)
dut.io.a #= BigInt("0123456789ABCDEF", 16)
println(dut.io.b.toInt)
```

12.3.2 Accessing signals inside the components hierarchy

To access signals which are inside the components hierarchy, you have first to set the given signal as simPublic.

You can add this simPublic tag directly into the hardware description :

```
object SimAccessSubSignal {
  import spinal.core.sim._

  class TopLevel extends Component {
    val counter = Reg(UInt(8 bits)) init(0) simPublic() //Here we add the simPublic tag_
    on the counter register to make it visible
    counter := counter + 1
}

def main(args: Array[String]) {
    SimConfig.compile(new TopLevel).doSim{dut =>
        dut.clockDomain.forkStimulus(10)

    for(i <- 0 to 3) {
        dut.clockDomain.waitSampling()
        println(dut.counter.toInt)
    }
    }
}</pre>
```

Or you can add it later, after having instanciate your toplevel for the simulation:

```
object SimAccessSubSignal {
  import spinal.core.sim._
```

(continues on next page)

```
class TopLevel extends Component {
    val counter = Reg(UInt(8 bits)) init(0)
    counter := counter + 1
  }
  def main(args: Array[String]) {
    SimConfig.compile{
      val dut = new TopLevel
      dut.counter.simPublic()
    }.doSim{dut =>
      dut.clockDomain.forkStimulus(10)
      for(i <- 0 to 3){
        dut.clockDomain.waitSampling()
        println(dut.counter.toInt)
    }
  }
}
```

12.4 Clock domains

12.4.1 Stimulus API

There is a list of ClockDomain stimulation functionalities:

ClockDomain stimulus	Description
functions	
forkStimulus(period)	Fork a simulation process to generate the clockdomain simulus (clock, reset, soft-
	Reset, clockEnable signals)
forkSimSpeed-	Fork a simulation process which will periodically print the simulation speed in
Printer(printPeriod)	kcycles per real time second. printPeriod is in realtime second
clockToggle()	Toggle the clock signal
fallingEdge()	Clear the clock signal
risingEdge()	Set the clock signal
assertReset()	Set the reset signal to its active level
deassertReset()	Set the reset signal to its inactive level
assertClockEnable()	Set the clockEnable signal to its active level
disassertClockEnable()	Set the clockEnable signal to its active level
assertSoftReset()	Set the softReset signal to its active level
disassertSoftReset()	Set the softReset signal to its active level

12.4.2 Wait API

There is a list of ClockDomain utilities that you can use to wait a given event from it:

ClockDomain wait functions	Description
waitSam-	Wait until the ClockDomain made a sampling, (Active clock edge && deassertReset && assert-
pling([cyclesCour	
1 0 12 1	
wait-	Wait cyclesCount rising edges on the clock, if not cycleCount isn't specified => 1 cycle, cycle-
RisingEdge([cycle	sstouth) = 0 is legal, not sensitive to reset/softReset/clockEnable
wait-	Same as waitRisingEdge but for the falling edge
FallingEdge([cycl	esCount])
waitAc-	Same as waitRisingEdge but for the edge level specified by the ClockDomainConfig
tiveEdge([cyclesC	ount])
wait-	As waitRisingEdge, but to exit, the boolean condition must be true when the rising edge occure
RisingEdge-	
Where(condition)	
wait-	Same as waitRisingEdgeWhere but for the falling edge
FallingEdge-	
Where(condition)	
waitAc-	Same as waitRisingEdgeWhere but for the edge level specified by the ClockDomainConfig
tiveEdge-	
Where(condition)	

All the functionalities of the wait API can only be called from the inside of a thread, and not from a callback.

12.4.3 Callback API

There is a list of ClockDomain utilities that you can use to wait a given event from it :

ClockDomain	Description
callback func-	
tions	
onNextSam-	Execute the callback code only once on next the ClockDomain sample (active edge + reset off
pling { callback	+ clock enable on)
}	
onSamplings {	Execute the callback code each time the ClockDomain sample (active edge + reset off + clock
callback }	enable on)
onActiveEdges	Execute the callback code each time the ClockDomain clock do its configured edge
{ callback }	
onEdges { call-	Execute the callback code each time the ClockDomain clock do a rising or falling edge
back }	
onRisingEdges	Execute the callback code each time the ClockDomain clock do a rising edge
{ callback }	
onFallingEdges	Execute the callback code each time the ClockDomain clock do a falling edge
{ callback }	

12.4. Clock domains

12.4.4 Default ClockDomain

You can access the default ClockDomain of your toplevel by the following way:

But you can also directly fork a standard reset/clock process:

```
dut.clockDomain.forkStimulus(period = 10)
```

And there is an example of how to wait for a rising edge on the clock:

```
dut.clockDomain.waitRisingEdge()
```

12.4.5 New ClockDomain

If you toplevel define some clock and reset inputs which aren't directly integrated into their clockdomain, you can define their corresponding clockdomain directly in the testbench:

```
//In the testbench ClockDomain(dut.io.coreClk, dut.io.coreReset).forkStimulus(10)
```

12.5 Thread-full API

In SpinalSim, you can write your testbench by using multiple threads in a similar way to SystemVerilog, and a bit like VHDL/Verilog process/always blocks. This allow to write concurant tasks of your testbench and to move/wait in the simulation time with a fluant API.

12.5.1 Fork and join simulation threads

```
//Create a new thread
val myNewThread = fork{
    //New simulation thread body
}

//Wait until `myNewThread` is execution is done.
myNewThread.join()
```

12.5.2 Sleep and waitUntil

```
//Sleep 1000 units of time
sleep(1000)

//waitUntil the dut.io.a value is bigger than 42 before continuing
waitUntil(dut.io.a > 42)
```

12.6 Thread-less API

There is some functions that you can use to avoid the usage of threading but which still allow you to move in time.

Threadless	Description
functions	
de-	Register the callback code to be called at in a given simulation time.
layed(delay){callb	ack}

The advantage of the delayed function over using a regular simulation thread + sleep are:

- Performance (no context switching)
- Memory usage (no native JVM thread memory allocation)


Also, some other thread-less function related with ClockDomain are documented as *Callback API*, and some others related with the delta-cycle execution are documented Sensitive API

12.7 Simulation engine

This page explain the internals of the simulation engine.

Basicaly, the simulation engine emulate a event-driven simulator (VHDL/Verilog like) by applying the following simulation loop on the top of the Verilator C++ simulation model :

12.6. Thread-less API

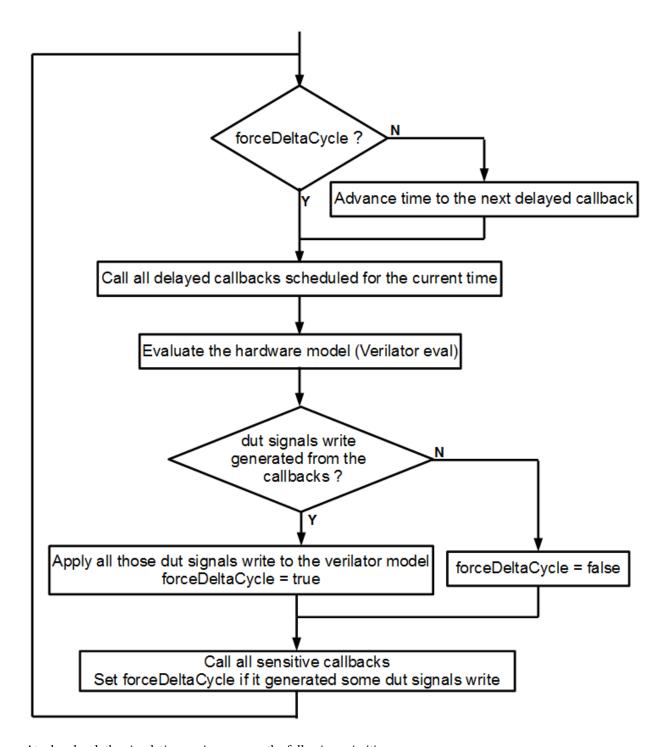

At a low level, the simulation engine manage the following primitives :

- Sensitive callbacks, which allow to call a function on each simulation delta cycle
- Delayed callbacks, which allow to call a function in a future simulation time
- Simulation threads, which allow to describe concurrent with many times utilities
- Command buffer, which allow to delay the write access to the dut to the end of the current delta cycle

There is some practical uses of those primitives:

- Sensitive callbacks can be used to wakeup a simulation thread when a given condition happen, like a rising edge on a clock
- Delayed callbacks can be used to schedule stimulus as desaserting a reset after a given time or toggle the clock
- Both sensitive and delayed callbacks can be used to resume a simulation thread
- A simulation thread can be used (for instance) to produce stimulus and check the dut output values
- The command buffer purpose is mainly avoid all concurrency issues between the DUT and the testbench

12.8 Examples

12.8.1 Asynchronous adder

```
import spinal.core.sim._
import spinal.core._
import spinal.sim._
import scala.util.Random
object SimAsynchronousExample {
 class Dut extends Component {
    val io = new Bundle {
      val a, b, c = in UInt (8 bits)
      val result = out UInt (8 bits)
    io.result := io.a + io.b - io.c
  }
  def main(args: Array[String]): Unit = {
    SimConfig.withWave.compile(new Dut).doSim{ dut =>
      var idx = 0
      while(idx < 100){</pre>
        val a, b, c = Random.nextInt(256)
        dut.io.a #= a
        dut.io.b #= b
        dut.io.c #= c
        sleep(1)
        assert(dut.io.result.toInt == ((a+b-c) \& 0xFF))
        idx += 1
    }
 }
```

12.8. Examples 177

12.8.2 Dual clock fifo

```
//Compile the simulator
val compiled = SimConfig.withWave.allOptimisation.compile(
 rtl = new StreamFifoCC(
   dataType = Bits(32 bits),
   depth = 32,
   pushClock = ClockDomain.external("clkA"),
   popClock = ClockDomain.external("clkB")
  )
)
//Run the simulation
compiled.doSimUntilVoid{dut =>
  val queueModel = mutable.Queue[Long]()
  //Fork a thread to manage the clock domains signals
  val clocksThread = fork{
    //Clear clock domains signals, to be sure the simulation capture their first edge.
   dut.pushClock.fallingEdge()
   dut.popClock.fallingEdge()
   dut.pushClock.deassertReset()
   dut.popClock.deassertReset()
   sleep(0)
   //Do the resets
   dut.pushClock.assertReset()
   dut.popClock.assertReset()
   sleep(10)
   dut.pushClock.deassertReset()
   dut.popClock.deassertReset()
   sleep(1)
   //Forever, randomly toggle one of the clocks (will create asynchronous clocks.
→without fixed frequencies)
   while(true){
      if(Random.nextBoolean()) {
        dut.pushClock.clockToggle()
      } else {
        dut.popClock.clockToggle()
      sleep(1)
   }
  }
  //Push data randomly and fill the queueModel with pushed transactions
  val pushThread = fork{
   while(true){
      dut.io.push.valid.randomize()
      dut.io.push.payload.randomize()
      dut.pushClock.waitSampling()
      if(dut.io.push.valid.toBoolean && dut.io.push.ready.toBoolean){
        queueModel.enqueue(dut.io.push.payload.toLong)
```

```
}
}

//Pop data randomly and check that it match with the queueModel
val popThread = fork{
  for(i <- 0 until 100000){
    dut.io.pop.ready.randomize()
    dut.popClock.waitSampling()
    if(dut.io.pop.valid.toBoolean && dut.io.pop.ready.toBoolean){
        assert(dut.io.pop.payload.toLong == queueModel.dequeue())
    }
}
simSuccess()
}</pre>
```

12.8.3 Single clock fifo

```
//Compile the simulator
val compiled = SimConfig.withWave.allOptimisation.compile(
  rtl = new StreamFifo(
   dataType = Bits(32 bits),
   depth = 32
  )
//Run the simulation
compiled.doSimUntilVoid{dut =>
  val queueModel = mutable.Queue[Long]()
  dut.clockDomain.forkStimulus(period = 10)
  SimTimeout (1000000*10)
  //Push data randomly and fill the queueModel with pushed transactions
  val pushThread = fork{
   dut.io.push.valid #= false
   while(true){
      dut.io.push.valid.randomize()
      dut.io.push.payload.randomize()
      dut.clockDomain.waitSampling()
      if(dut.io.push.valid.toBoolean && dut.io.push.ready.toBoolean){
        queueModel.enqueue(dut.io.push.payload.toLong)
      }
   }
  }
  //Pop data randomly and check that it match with the queueModel
  val popThread = fork{
   dut.io.pop.ready #= true
```

(continues on next page)

12.8. Examples 179

```
for(i <- 0 until 100000){
    dut.io.pop.ready.randomize()
    dut.clockDomain.waitSampling()
    if(dut.io.pop.valid.toBoolean && dut.io.pop.ready.toBoolean){
        assert(dut.io.pop.payload.toLong == queueModel.dequeue())
    }
    simSuccess()
}</pre>
```

12.8.4 Synchronous adder

```
import spinal.sim._
import spinal.core._
import spinal.core.sim._
import scala.util.Random
object SimSynchronousExample {
  class Dut extends Component {
   val io = new Bundle {
      val a, b, c = in UInt (8 bits)
      val result = out UInt (8 bits)
    io.result := RegNext(io.a + io.b - io.c) init(0)
  }
  def main(args: Array[String]): Unit = {
   SimConfig.withWave.compile(new Dut).doSim{ dut =>
      dut.clockDomain.forkStimulus(period = 10)
      var resultModel = 0
      for(idx <- 0 until 100){</pre>
        dut.io.a #= Random.nextInt(256)
        dut.io.b #= Random.nextInt(256)
        dut.io.c #= Random.nextInt(256)
        dut.clockDomain.waitSampling()
        assert(dut.io.result.toInt == resultModel)
        resultModel = (dut.io.a.toInt + dut.io.b.toInt - dut.io.c.toInt) & 0xFF
      }
   }
 }
}
```

12.8.5 Uart decoder

```
//Fork a simulation process which will analyse the uartPin and print transmited bytes.
→into the simulation terminal
fork{
  //Wait until the design put the uartPin to true (wait the reset effect)
  waitUntil(uartPin.toBoolean == true)
 while(true) {
   waitUntil(uartPin.toBoolean == false)
   sleep(baudPeriod/2)
   assert(uartPin.toBoolean == false)
   sleep(baudPeriod)
   var buffer = 0
   for(bitId <- 0 to 7) {
      if(uartPin.toBoolean)
        buffer |= 1 << bitId</pre>
      sleep(baudPeriod)
   }
   assert(uartPin.toBoolean == true)
   print(buffer.toChar)
  }
}
```

12.8.6 Uart encoder

```
//Fork a simulation process which will get char typed into the simulation terminal and
→transmit them on the simulation uartPin
fork{
 uartPin #= true
 while(true) {
   //System.in is the java equivalent of the C stdin
   if(System.in.available() != 0){
      val buffer = System.in.read()
      uartPin #= false
      sleep(baudPeriod)
      for(bitId <- 0 to 7) {</pre>
       uartPin #= ((buffer >> bitId) & 1) != 0
        sleep(baudPeriod)
      }
      uartPin #= true
      sleep(baudPeriod)
   } else {
      sleep(baudPeriod * 10) //Sleep a little while to avoid pulling System.in to often
   }
 }
```

12.8. Examples 181

12.9 Introduction

As always you can use your standard simulation tools to simulate the VHDL/Verilog generated out from SpinalHDL, but since SpinalHDL 1.0.0 the language integrate an API to write testbenches and test your hardware directly in Scala. This API provide the capabilities to read and write the DUT signals, fork and join simulation processes, sleep and wait until a given condition is filled.

12.10 How SpinalHDL simulate the hardware

Behind the scene SpinalHDL is generating a C++ cycle accurate model of your hardware by generating the equivalent Verilog and asking Verilator to convert it into a C++ model.

Then SpinalHDL ask GCC to compile the C++ model into an shared object (.so) and bind it back to Scala via JNR-FFI.

Finaly, as the native Verilator API is rude, SpinalHDL abstract it by providing an simulation multi-threaded API to help the user in his testbench implementation.

This method has several advantage:

- The C++ simulation model is realy fast to process simulation steps
- It test the generated Verilog hardware instead of the SpinalHDL internal model
- It doesn't require SpinalHDL to be able itself to simulate the hardware (Less codebase, less bugs as Verilator is a reliable tool)

And some limitations:

• Verilator will only accept to translate Synthetisable Verilog code

12.11 Performance

As verilator is currently the simulation backend, the simulation speed is realy high. On a little SoC like Murax my laptop is capable to simulate 1.2 million clock cycles per realtime seconds.

CHAPTER

THIRTEEN

EXAMPLES

13.1 Simple ones

13.1.1 APB3 definition

Introduction

This example will show the syntax to define an APB3 Bundle.

Specification

The specification from ARM could be interpreted as follows:

Signal	Туре	Driver side	Comment
Name			
PADDR	UInt(addressWidth bits)	Master	Address in byte
PSEL	Bits(selWidth)	Master	One bit per slave
PENABLE	Bool	Master	
PWRITE	Bool	Master	
PWDATA	Bits(dataWidth bits)	Master	
PREADY	Bool	Slave	
PRDATA	Bits(dataWidth bits)	Slave	
PSLVER-	Bool	Slave	Optional
ROR			

Implementation

This specification shows that the APB3 bus has multiple possible configurations. To represent that, we can define a configuration class in Scala:

```
case class Apb3Config(
  addressWidth : Int,
  dataWidth : Int,
  selWidth : Int = 1,
  useSlaveError : Boolean = true
)
```

Then we can define the APB3 Bundle which will be used to represent the bus in hardware:

```
case class Apb3(config: Apb3Config) extends Bundle with IMasterSlave {
                = UInt(config.addressWidth bit)
  val PADDR
  val PSEL
                = Bits(config.selWidth bits)
 val PENABLE
                = Bool
 val PREADY
                = Bool
                = Bool
 val PWRITE
                = Bits(config.dataWidth bit)
  val PWDATA
  val PRDATA
                 = Bits(config.dataWidth bit)
  val PSLVERROR = if(config.useSlaveError) Bool else null
 override def asMaster(): Unit = {
   out (PADDR, PSEL, PENABLE, PWRITE, PWDATA)
   in(PREADY, PRDATA)
   if(config.useSlaveError) in(PSLVERROR)
  }
}
```

Usage

Here is a usage example of this definition:

```
val apbConfig = Apb3Config(
  addressWidth = 16,
  dataWidth = 32,
  selWidth = 1,
  useSlaveError = false
)

val io = new Bundle{
  val apb = slave(Apb3(apbConfig))
}

io.apb.PREADY := True
when(io.apb.PSEL(0) && io.apb.PENABLE){
    //...
}
```

13.1.2 Carry adder

This example defines a component with inputs a and b, and a result output. At any time, result will be the sum of a and b (combinatorial). This sum is manualy done by a carry adder logic.

13.1.3 Color summing

First let's define a Color Bundle with an addition operator.

```
case class Color(channelWidth: Int) extends Bundle {
 val r = UInt(channelWidth bits)
  val q = UInt(channelWidth bits)
 val b = UInt(channelWidth bits)
 def +(that: Color): Color = {
   val result = Color(channelWidth)
   result.r := this.r + that.r
   result.g := this.g + that.g
   result.b := this.b + that.b
   return result
 def clear(): Color ={
   this.r := 0
   this.g := 0
   this.b := 0
    this
  }
}
```

Then let's define a component with a sources input which is a vector of colors, and a result output which is the sum of the sources input.

```
class ColorSumming(sourceCount: Int, channelWidth: Int) extends Component {
  val io = new Bundle {
    val sources = in Vec(Color(channelWidth), sourceCount)
    val result = out(Color(channelWidth))
  }
  (continues on next page)
```

13.1. Simple ones 185

```
var sum = Color(channelWidth)
sum.clear()
for (i <- 0 to sourceCount - 1) {
   sum \= sum + io.sources(i)
}
io.result := sum
}</pre>
```

13.1.4 Counter with clear

This example defines a component with a clear input and a value output. Each clock cycle, the value output is incrementing, but when clear is high, value is cleared.

```
class Counter(width : Int) extends Component{
  val io = new Bundle{
    val clear = in Bool
    val value = out UInt(width bits)
}

val register = Reg(UInt(width bits)) init(0)
register := register + 1
when(io.clear){
    register := 0
}
io.value := register
}
```

13.1.5 Introduction

All examples assume that you have the following imports on the top of your scala file:

```
import spinal.core._
import spinal.lib._
```

To generate VHDL for a given component, you can place the following at the bottom of your scala file:

```
object MyMainObject {
   def main(args: Array[String]) {
      SpinalVhdl(new TheComponentThatIWantToGenerate(constructionArguments)) //Or
      → SpinalVerilog
   }
}
```

13.1.6 PLL BlackBox and reset controller

Let's imagine you want to define a TopLevel component which instantiates a PLL BlackBox, and create a new clock domain from it which will be used by your core logic. Let's also imagine that you want to adapt an external asynchronous reset into this core clock domain to a synchronous reset source.

The following imports will be used in code examples on this page:

```
import spinal.core._
import spinal.lib._
```

The PLL BlackBox definition

This is how to define the PLL BlackBox:

```
class PLL extends BlackBox{
  val io = new Bundle{
    val clkIn = in Bool
    val clkOut = out Bool
    val isLocked = out Bool
  }
  noIoPrefix()
}
```

This will correspond to the following VHDL component:

```
component PLL is
  port(
    clkIn : in std_logic;
    clkOut : out std_logic;
    isLocked : out std_logic
  );
end component;
```

TopLevel definition

This is how to define your TopLevel which instantiates the PLL, creates the new ClockDomain, and also adapts the asynchronous reset input to a synchronous reset:

```
class TopLevel extends Component{
  val io = new Bundle {
    val aReset = in Bool
    val clk100Mhz = in Bool
    val result = out UInt(4 bits)
  }

// Create an Area to manage all clocks and reset things
val clkCtrl = new Area {
    //Instanciate and drive the PLL
    val pll = new PLL
    pll.io.clkIn := io.clk100Mhz
```

(continues on next page)

13.1. Simple ones 187

```
//Create a new clock domain named 'core'
   val coreClockDomain = ClockDomain.internal(
     name = "core",
      frequency = FixedFrequency(200 MHz) // This frequency specification can be used
                                           // by coreClockDomain users to do some_
→calculations
   //Drive clock and reset signals of the coreClockDomain previously created
   coreClockDomain.clock := pll.io.clkOut
   coreClockDomain.reset := ResetCtrl.asyncAssertSyncDeassert(
      input = io.aReset || ! pll.io.isLocked,
      clockDomain = coreClockDomain
  }
  //Create a ClockingArea which will be under the effect of the clkCtrl.coreClockDomain
  val core = new ClockingArea(clkCtrl.coreClockDomain){
   //Do your stuff which use coreClockDomain here
   val counter = Reg(UInt(4 bits)) init(0)
   counter := counter + 1
   io.result := counter
  }
}
```

13.1.7 RGB to gray

Let's imagine a component that converts an RGB color into a gray one, and then writes it into external memory.

io name	Direction	Description
clear	in	Clear all internal registers
r,g,b	in	Color inputs
wr	out	Memory write
address	out	Memory address, incrementing each cycle
data	out	Memory data, gray level

```
class RgbToGray extends Component{
  val io = new Bundle{
    val clear = in Bool
    val r,g,b = in UInt(8 bits)

  val wr = out Bool
  val address = out UInt(16 bits)
  val data = out UInt(8 bits)
}

def coef(value : UInt,by : Float) : UInt = (value * U((255*by).toInt,8 bits) >> 8)
  val gray = RegNext(
    coef(io.r,0.3f) +
    coef(io.g,0.4f) +
```

```
coef(io.b,0.3f)
)

val address = CounterFreeRun(stateCount = 1 << 16)
io.address := address
io.wr := True
io.data := gray

when(io.clear) {
    gray := 0
    address.clear()
    io.wr := False
}
</pre>
```

13.1.8 Sinus rom

Let's imagine that you want to generate a sine wave and also have a filtered version of it (which is completely useless in practical, but let's do it as an example).

Parameters name	Туре	Description
resolutionWidth	Int	Number of bits used to represent numbers
sampleCount	Int	Number of samples in a sine period

Ю	Di-	Туре	Description
name	rec-		
	tion		
sin	out	SInt(resolutionWidth bits)	Output which plays the sine wave
sin-	out	SInt(resolutionWidth bits)	Output which plays the filtered version of the sine
Fil-			
tred			

So let's define the Component:

```
class TopLevel(resolutionWidth : Int, sampleCount : Int) extends Component {
  val io = new Bundle {
    val sin = out SInt(resolutionWidth bits)
    val sinFiltred = out SInt(resolutionWidth bits)
  }
  // Here will come the logic implementation
}
```

To play the sine wave on the sin output, you can define a ROM which contain all samples of a sine period (tt could be just a quarter, but let's do things by the simplest way).

Then you can read that ROM with an phase counter and this will generate your sine wave.

13.1. Simple ones 189

```
//Function used to generate the rom (later)
def sinTable = for(sampleIndex <- 0 until sampleCount) yield {
  val sinValue = Math.sin(2 * Math.PI * sampleIndex / sampleCount)
  S((sinValue * ((1<<resolutionWidth)/2-1)).toInt,resolutionWidth bitss)
}

val rom = Mem(SInt(resolutionWidth bits),initialContent = sinTable)
val phase = Reg(UInt(log2Up(sampleCount) bitss)) init(0)
phase := phase + 1

io.sin := rom.readSync(phase)</pre>
```

Then to generate sinFiltred, you can for example use a first order low pass filter implementation:

```
io.sinFiltred := RegNext(io.sinFiltred - (io.sinFiltred >> 5) + (io.sin >> 5)) init(0)
```

Here is the complete code:

```
class TopLevel(resolutionWidth : Int,sampleCount : Int) extends Component {
  val io = new Bundle {
    val sin = out SInt(resolutionWidth bits)
    val sinFiltred = out SInt(resolutionWidth bits)
}

def sinTable = for(sampleIndex <- 0 until sampleCount) yield {
    val sinValue = Math.sin(2 * Math.PI * sampleIndex / sampleCount)
    S((sinValue * ((1<<resolutionWidth)/2-1)).toInt,resolutionWidth bitss)
}

val rom = Mem(SInt(resolutionWidth bits),initialContent = sinTable)
val phase = Reg(UInt(log2Up(sampleCount) bitss)) init(0)
    phase := phase + 1

io.sin := rom.readSync(phase)
    io.sinFiltred := RegNext(io.sinFiltred - (io.sinFiltred >> 5) + (io.sin >> 5))
    init(0)
}
```

13.2 Intermediates ones

13.2.1 Fractal calculator

Introduction

This example will show a simple implementation (without optimization) of a Mandelbrot fractal calculator by using data streams and fixed point calculations.

Specification

The component will receive one Stream of pixel tasks (which contain the XY coordinates in the Mandelbrot space) and will produce one Stream of pixel results (which contain the number of iterations done for the corresponding task).

Let's specify the IO of our component:

Ю	Di-	Type	Description
Name	rec-		
	tion		
cmd	slave	Stream	PPreMidskXY coordinates to process
rsp	mas-	Stream	PRetiresiteration count needed for the corresponding cmd transaction
	ter		

Let's specify the PixelTask Bundle:

Element Name	Туре	Description
X	SFix	Coordinate in the Mandelbrot space
у	SFix	Coordinate in the Mandelbrot space

Let's specify the PixelResult Bundle:

Element	Type	Description
Name		
iteration	UInt	Number of iterations required to solve the Mandelbrot coordinates

Elaboration parameters (Generics)

Let's define the class that will provide construction parameters of our system:

Note: iterationType and fixType are functions that you can call to instantiate new signals. It's like a typedef in C.

Bundle definition

```
case class PixelTask(g : PixelSolverGenerics) extends Bundle{
  val x,y = g.fixType
}

case class PixelResult(g : PixelSolverGenerics) extends Bundle{
  val iteration = g.iterationType
}
```

Component implementation

And now the implementation. The one below is a very simple one without pipelining / multi-threading.

```
case class PixelSolver(g : PixelSolverGenerics) extends Component{
 val io = new Bundle{
   val cmd = slave Stream(PixelTask(g))
   val rsp = master Stream(PixelResult(g))
  import g._
  //Define states
  val x,y
          = Reg(fixType) init(0)
  val iteration = Reg(iterationType) init(0)
  //Do some shared calculation
  val xx = x*x
 val yy = y*y
  val xy = x*y
  //Apply default assignement
  io.cmd.ready := False
  io.rsp.valid := False
  io.rsp.iteration := iteration
  when(io.cmd.valid) {
   //Is the mandelbrot iteration done ?
   when(xx + yy >= 4.0 || iteration === iterationLimit) {
      io.rsp.valid := True
     when(io.rsp.ready){
       io.cmd.ready := True
       x := 0
       v := 0
       iteration := 0
   } otherwise {
      x := (xx - yy + io.cmd.x).truncated
     y := (((xy) << 1) + io.cmd.y).truncated
      iteration := iteration + 1
  }
```

}

13.2.2 **UART**

Specification

This UART controller tutorial is based on this implementation.

This implementation is characterized by:

- ClockDivider/Parity/StopBit/DataLength configs are set by the component inputs.
- $\bullet\,$ RXD input is filtered by using a sampling window of N samples and a majority vote.

Interfaces of this UartCtrl are:

Name	Туре	Description
config	UartC-	Give all configurations to the controller
	trl-	
	Con-	
	fig	
write	Stream[]	Bilksort used by the system to give transmission order to the controller
read	Flow[Bi	tsPort used by the controller to notify the system about a successfully received frame
uart	Uart	Uart interface with rxd / txd

Data structures

Before implementing the controller itself we need to define some data structures.

Controller construction parameters

Nam ē yp	eDescription
dataWnt	Maximum number of data bits that could be sent using a single UART frame
idth-	
Max	
clockInt	Number of bits that the clock divider has
Di-	
vider-	
Width	
pre- Int	Number of samples to drop at the beginning of the sampling window
Sam-	
pling-	
Size	
sam- Int	Number of samples use at the middle of the window to get the filtered RXD value
pling-	
Size	
post-Int	Number of samples to drop at the end of the sampling window
Sam-	
pling-	
Size	

To make the implementation easier let's assume that preSamplingSize + samplingSize + postSamplingSize is always a power of two.

Instead of adding each construction parameters (generics) to UartCtrl one by one, we can group them inside a class that will be used as single parameter of UartCtrl.

UART bus

Let's define a UART bus without flow control.

```
case class Uart() extends Bundle with IMasterSlave {
  val txd = Bool
  val rxd = Bool

  override def asMaster(): Unit = {
    out(txd)
    in(rxd)
  }
}
```

UART configuration enums

Let's define parity and stop bit enumerations.

```
object UartParityType extends SpinalEnum(sequancial) {
  val NONE, EVEN, ODD = newElement()
}
object UartStopType extends SpinalEnum(sequancial) {
  val ONE, TWO = newElement()
  def toBitCount(that : T) : UInt = (that === ONE) ? U"0" | U"1"
}
```

UartCtrl configuration Bundles

Let's define Bundles that will be used as IO elements to setup UartCtrl.

```
case class UartCtrlFrameConfig(g: UartCtrlGenerics) extends Bundle {
 val dataLength = UInt(log2Up(q.dataWidthMax) bit) //Bit count = dataLength + 1
                = UartStopType()
 val stop
  val parity
                = UartParityType()
}
case class UartCtrlConfig(g: UartCtrlGenerics) extends Bundle {
  val frame
                  = UartCtrlFrameConfig(q)
 val clockDivider = UInt (g.clockDividerWidth bit) //see UartCtrlGenerics.
→clockDividerWidth for calculation
 def setClockDivider(baudrate : Double,clkFrequency : Double = ClockDomain.current.
→frequency.getValue) : Unit = {
   clockDivider := (clkFrequency / baudrate / g.rxSamplePerBit).toInt
  }
}
```

Implementation

In UartCtrl, 3 things will be instantiated:

- One clock divider that generates a tick pulse at the UART RX sampling rate.
- One UartCtrlTx Component
- One UartCtrlRx Component

UartCtrlTx

The interfaces of this Component are the following:

Name	Туре	Description
con-	UartC-	Containts data bit width count and party/stop bits configurations
figFrame	e trl-	
	Frame-	
	Con-	
	fig	
sam-	Bool	Time reference that pulses rxSamplePerBit times per UART baud
plingTic	k	
write	Stream[]	Bilksort used by the system to give transmission orders to the controller
txd	Bool	UART txd pin

Let's define the enumeration that will be used to store the state of UartCtrlTx:

```
object UartCtrlTxState extends SpinalEnum {
  val IDLE, START, DATA, PARITY, STOP = newElement()
}
```

Let's define the skeleton of UartCtrlTx:

```
class UartCtrlTx(g : UartCtrlGenerics) extends Component {
 import g._
 val io = new Bundle {
   val configFrame = in(UartCtrlFrameConfig(g))
   val samplingTick = in Bool
   val write = slave Stream (Bits(dataWidthMax bit))
   val txd
                    = out Bool
  }
  // Provide one clockDivider.tick each rxSamplePerBit pulses of io.samplingTick
  // Used by the stateMachine as a baud rate time reference
 val clockDivider = new Area {
   val counter = Reg(UInt(log2Up(rxSamplePerBit) bits)) init(0)
   val tick = False
 }
  // Count up each clockDivider.tick, used by the state machine to count up data bits.
→and stop bits
 val tickCounter = new Area {
   val value = Reg(UInt(Math.max(dataWidthMax, 2) bit))
   def reset() = value := 0
  }
  val stateMachine = new Area {
   import UartCtrlTxState._
   val state = RegInit(IDLE)
   val parity = Reg(Bool)
   val txd = True
   switch(state) {
   }
  }
  io.txd := RegNext(stateMachine.txd) init(True)
}
```

And here is the complete implementation:

```
class UartCtrlTx(g : UartCtrlGenerics) extends Component {
  import g._

val io = new Bundle {
  val configFrame = in(UartCtrlFrameConfig(g))
  val samplingTick = in Bool
  val write = slave Stream (Bits(dataWidthMax bit))
  val txd = out Bool
}
```

```
// Provide one clockDivider.tick each rxSamplePerBit pulse of io.samplingTick
 // Used by the stateMachine as a baud rate time reference
 val clockDivider = new Area {
   val counter = Reg(UInt(log2Up(rxSamplePerBit) bits)) init(0)
   val tick = False
   when(io.samplingTick) {
     counter := counter - 1
     tick := counter === 0
   }
 }
 // Count up each clockDivider.tick, used by the state machine to count up data bits.
→and stop bits
 val tickCounter = new Area {
   val value = Reg(UInt(Math.max(dataWidthMax, 2) bit))
   def reset() = value := 0
   when(clockDivider.tick) {
     value := value + 1
   }
 }
 val stateMachine = new Area {
   import UartCtrlTxState._
   val state = RegInit(IDLE)
   val parity = Reg(Bool)
   val txd = True
   when(clockDivider.tick) {
     parity := parity ^ txd
   }
   io.write.ready := False
   switch(state) {
     is(IDLE){
       when(io.write.valid && clockDivider.tick){
         state := START
       }
     is(START) {
       txd := False
       when(clockDivider.tick) {
         state := DATA
         parity := io.configFrame.parity === UartParityType.ODD
         tickCounter.reset()
       }
     is(DATA) {
       txd := io.write.payload(tickCounter.value)
       when(clockDivider.tick) {
         when(tickCounter.value === io.configFrame.dataLength) {
```

```
io.write.ready := True
          tickCounter.reset()
          when(io.configFrame.parity === UartParityType.NONE) {
            state := STOP
          } otherwise {
            state := PARITY
        }
      }
    is(PARITY) {
      txd := parity
      when(clockDivider.tick) {
        state := STOP
        tickCounter.reset()
      }
    }
    is(STOP) {
      when(clockDivider.tick) {
        when(tickCounter.value === toBitCount(io.configFrame.stop)) {
          state := io.write.valid ? START | IDLE
      }
    }
  }
}
io.txd := RegNext(stateMachine.txd, True)
```

UartCtrlRx

The interfaces of this Component are the following:

Name	Type	Description
con-	UartC-	Contains data bit width and party/stop bits configurations
figFrame	e trl-	
	Frame-	
	Con-	
	fig	
sam-	Bool	Time reference that pulses rxSamplePerBit times per UART baud
plingTic	k	
read	Flow[Bi	tsPort used by the controller to notify the system about a successfully received frame
rxd	Bool	UART rxd pin, not synchronized with the current clock domain

Let's define the enumeration that will be used to store the state of UartCtrlTx:

```
object UartCtrlRxState extends SpinalEnum {
  val IDLE, START, DATA, PARITY, STOP = newElement()
}
```

Let's define the skeleton of the UartCtrlRx:

```
class UartCtrlRx(g : UartCtrlGenerics) extends Component {
  import g._
 val io = new Bundle {
   val configFrame = in(UartCtrlFrameConfig(g))
   val samplingTick = in Bool
   val read
                    = master Flow (Bits(dataWidthMax bit))
   val rxd
                    = in Bool
  }
  // Implement the rxd sampling with a majority vote over samplingSize bits
  // Provide a new sampler.value each time sampler.tick is high
  val sampler = new Area {
   val syncroniser = BufferCC(io.rxd)
   val samples = History(that=syncroniser,when=io.samplingTick,length=samplingSize)
                 = RegNext(MajorityVote(samples))
   val value
   val tick
                   = RegNext(io.samplingTick)
  }
  // Provide a bitTimer.tick each rxSamplePerBit
  // reset() can be called to recenter the counter over a start bit.
  val bitTimer = new Area {
   val counter = Reg(UInt(log2Up(rxSamplePerBit) bit))
   def reset() = counter := preSamplingSize + (samplingSize - 1) / 2 - 1)
   val tick = False
  }
  // Provide bitCounter.value that count up each bitTimer.tick, Used by the state.
→machine to count data bits and stop bits
 // reset() can be called to reset it to zero
 val bitCounter = new Area {
   val value = Reg(UInt(Math.max(dataWidthMax, 2) bit))
   def reset() = value := 0
  }
  val stateMachine = new Area {
   import UartCtrlRxState._
   val state = RegInit(IDLE)
   val parity = Reg(Bool)
   val shifter = Reg(io.read.payload)
   switch(state) {
   }
  }
}
```

And here is the complete implementation:

```
class UartCtrlRx(g : UartCtrlGenerics) extends Component {
 import g._
 val io = new Bundle {
   val configFrame = in(UartCtrlFrameConfig(g))
   val samplingTick = in Bool
   val read
                = master Flow (Bits(dataWidthMax bit))
   val rxd
                   = in Bool
 }
 // Implement the rxd sampling with a majority vote over samplingSize bits
 // Provide a new sampler.value each time sampler.tick is high
 val sampler = new Area {
   val syncroniser = BufferCC(io.rxd)
   val samples = History(that=syncroniser,when=io.samplingTick,length=samplingSize)
   }
 // Provide a bitTimer.tick each rxSamplePerBit
 // reset() can be called to recenter the counter over a start bit.
 val bitTimer = new Area {
   val counter = Reg(UInt(log2Up(rxSamplePerBit) bit))
   def reset() = counter := preSamplingSize + (samplingSize - 1) / 2 - 1
   val tick = False
   when(sampler.tick) {
     counter := counter - 1
     when(counter === 0) {
       tick := True
   }
 }
 // Provide bitCounter.value that count up each bitTimer.tick, Used by the state.
→machine to count data bits and stop bits
 // reset() can be called to reset it to zero
 val bitCounter = new Area {
   val value = Reg(UInt(Math.max(dataWidthMax, 2) bit))
   def reset() = value := 0
   when(bitTimer.tick) {
     value := value + 1
 }
 val stateMachine = new Area {
   import UartCtrlRxState._
   val state = RegInit(IDLE)
   val parity = Reg(Bool)
   val shifter = Reg(io.read.payload)
   //Parity calculation
   when(bitTimer.tick) {
```

```
parity := parity ^ sampler.value
}
io.read.valid := False
switch(state) {
  is(IDLE) {
    when(sampler.value === False) {
      state := START
      bitTimer.reset()
   }
  }
  is(START) {
   when(bitTimer.tick) {
      state := DATA
      bitCounter.reset()
      parity := io.configFrame.parity === UartParityType.ODD
      when(sampler.value === True) {
        state := IDLE
      }
    }
  }
  is(DATA) {
    when(bitTimer.tick) {
      shifter(bitCounter.value) := sampler.value
      when(bitCounter.value === io.configFrame.dataLength) {
        bitCounter.reset()
        when(io.configFrame.parity === UartParityType.NONE) {
          state := STOP
        } otherwise {
          state := PARITY
        }
      }
    }
  }
  is(PARITY) {
   when(bitTimer.tick) {
      state := STOP
      bitCounter.reset()
      when(parity =/= sampler.value) {
        state := IDLE
      }
   }
  }
  is(STOP) {
   when(bitTimer.tick) {
      when(!sampler.value) {
        state := IDLE
      }.elsewhen(bitCounter.value === toBitCount(io.configFrame.stop)) {
        state := IDLE
        io.read.valid := True
      }
    }
```

```
}
}
io.read.payload := stateMachine.shifter
}
```

UartCtrl

Let's write UartCtrl that instantiates the UartCtrlRx and UartCtrlTx parts, generate the clock divider logic, and connect them to each other.

```
class UartCtrl(g : UartCtrlGenerics = UartCtrlGenerics()) extends Component {
 val io = new Bundle {
   val config = in(UartCtrlConfig(g))
   val write = slave(Stream(Bits(g.dataWidthMax bit)))
   val read = master(Flow(Bits(g.dataWidthMax bit)))
   val uart = master(Uart())
 val tx = new UartCtrlTx(g)
 val rx = new UartCtrlRx(g)
  //Clock divider used by RX and TX
  val clockDivider = new Area {
   val counter = Reg(UInt(g.clockDividerWidth bits)) init(0)
   val tick = counter === 0
   counter := counter - 1
   when(tick) {
     counter := io.config.clockDivider
   }
  }
  tx.io.samplingTick := clockDivider.tick
  rx.io.samplingTick := clockDivider.tick
  tx.io.configFrame := io.config.frame
  rx.io.configFrame := io.config.frame
  tx.io.write << io.write</pre>
  rx.io.read >> io.read
  io.uart.txd <> tx.io.txd
  io.uart.rxd <> rx.io.rxd
}
```

Example with test bench

Here is a top level example that does the followings things:

- Instantiate UartCtrl and set its configuration to 921600 baud/s, no parity, 1 stop bit.
- Each time a byte is received from the UART, it writes it on the leds output.
- Every 2000 cycles, it sends the switches input value to the UART.

```
class UartCtrlUsageExample extends Component{
  val io = new Bundle{
   val uart = master(Uart())
   val switchs = in Bits(8 bits)
   val leds = out Bits(8 bits)
  val uartCtrl = new UartCtrl()
  uartCtrl.io.config.setClockDivider(921600)
  uartCtrl.io.config.frame.dataLength := 7 //8 bits
  uartCtrl.io.config.frame.parity := UartParityType.NONE
  uartCtrl.io.config.frame.stop := UartStopType.ONE
  uartCtrl.io.uart <> io.uart
  //Assign io.led with a register loaded each time a byte is received
  io.leds := uartCtrl.io.read.toReg()
  //Write the value of switch on the uart each 2000 cycles
  val write = Stream(Bits(8 bits))
  write.valid := CounterFreeRun(2000).willOverflow
  write.payload := io.switchs
  write >-> uartCtrl.io.write
}
object UartCtrlUsageExample{
  def main(args: Array[String]) {
    SpinalVhdl(new UartCtrlUsageExample,defaultClockDomainFrequency=FixedFrequency(50e6))
  }
}
```

The following example is just a "mad one" but if you want to send a 0x55 header before sending the value of switches, you can replace the write generator of the preceding example by:

```
val write = Stream(Fragment(Bits(8 bits)))
write.valid := CounterFreeRun(4000).willOverflow
write.fragment := io.switchs
write.last := True
write.stage().insertHeader(0x55).toStreamOfFragment >> uartCtrl.io.write
```

Here you can get a simple VHDL testbench for this small UartCtrlUsageExample.

Bonus: Having fun with Stream

If you want to queue data received from the UART:

```
val uartCtrl = new UartCtrl()
val queuedReads = uartCtrl.io.read.toStream.queue(16)
```

If you want to add a queue on the write interface and do some flow control:

```
val uartCtrl = new UartCtrl()
val writeCmd = Stream(Bits(8 bits))
val stopIt = Bool
writeCmd.queue(16).haltWhen(stopIt) >> uartCtrl.io.write
```

13.2.3 VGA

Introduction

VGA interfaces are becoming an endangered species, but implementing a VGA controller is still a good exercise.

An explanation about the VGA protocol can be found here.

This VGA controller tutorial is based on this implementation.

Data structures

Before implementing the controller itself we need to define some data structures.

RGB color

First, we need a three channel color structure (Red, Green, Blue). This data structure will be used to feed the controller with pixels and also will be used by the VGA bus.

```
case class RgbConfig(rWidth : Int,gWidth : Int,bWidth : Int){
  def getWidth = rWidth + gWidth + bWidth
}

case class Rgb(c: RgbConfig) extends Bundle{
  val r = UInt(c.rWidth bit)
  val g = UInt(c.gWidth bit)
  val b = UInt(c.bWidth bit)
}
```

VGA bus

io	Driver	Description
name		
vSync	master	Vertical syncronization, indicate the beginning of a new frame
hSync	master	Horizontal syncronization, indicate the beginning of a new line
col-	master	High when the interface is in the visible part
orEn		
color	master	Carry the color, don't care when colorEn is low

```
case class Vga (rgbConfig: RgbConfig) extends Bundle with IMasterSlave{
  val vSync = Bool
  val hSync = Bool

  val colorEn = Bool
  val color = Rgb(rgbConfig)

  override def asMaster() : Unit = this.asOutput()
}
```

This Vga Bundle uses the IMasterSlave trait, which allows you to create master/slave VGA interfaces using the following:

```
master(Vga(...))
slave(Vga(...))
```

VGA timings

The VGA interface is driven by using 8 differents timings. Here is one simple example of a Bundle that is able to carry them.

```
case class VgaTimings(timingsWidth: Int) extends Bundle {
  val hSyncStart = UInt(timingsWidth bits)
  val hSyncEnd = UInt(timingsWidth bits)
  val hColorStart = UInt(timingsWidth bits)
  val hColorEnd = UInt(timingsWidth bits)
  val vSyncStart = UInt(timingsWidth bits)
  val vSyncEnd = UInt(timingsWidth bits)
  val vColorStart = UInt(timingsWidth bits)
  val vColorEnd = UInt(timingsWidth bits)
}
```

But this not a very good way to specify it because it is redundant for vertical and horizontal timings.

Let's write it in a clearer way:

```
case class VgaTimingsHV(timingsWidth: Int) extends Bundle {
  val colorStart = UInt(timingsWidth bit)
  val colorEnd = UInt(timingsWidth bit)
  val syncStart = UInt(timingsWidth bit)
  val syncEnd = UInt(timingsWidth bit)
```

```
case class VgaTimings(timingsWidth: Int) extends Bundle {
  val h = VgaTimingsHV(timingsWidth)
  val v = VgaTimingsHV(timingsWidth)
}
```

Then we could add some some functions to set these timings for specific resolutions and frame rates:

```
case class VgaTimingsHV(timingsWidth: Int) extends Bundle {
 val colorStart = UInt(timingsWidth bit)
 val colorEnd = UInt(timingsWidth bit)
 val syncStart = UInt(timingsWidth bit)
 val syncEnd
              = UInt(timingsWidth bit)
}
case class VgaTimings(timingsWidth: Int) extends Bundle {
 val h = VgaTimingsHV(timingsWidth)
  val v = VgaTimingsHV(timingsWidth)
  def setAs_h640_v480_r60: Unit = {
   h.syncStart := 96 - 1
   h.syncEnd := 800 - 1
   h.colorStart := 96 + 16 - 1
   h.colorEnd := 800 - 48 - 1
   v.syncStart := 2 - 1
   v.syncEnd := 525 - 1
   v.colorStart := 2 + 10 - 1
   v.colorEnd := 525 - 33 - 1
  }
  def setAs_h64_v64_r60: Unit = {
   h.syncStart := 96 - 1
   h.syncEnd := 800 - 1
   h.colorStart := 96 + 16 - 1 + 288
   h.colorEnd := 800 - 48 - 1 - 288
   v.syncStart := 2 - 1
   v.syncEnd := 525 - 1
   v.colorStart := 2 + 10 - 1 + 208
   v.colorEnd := 525 - 33 - 1 - 208
 }
}
```

VGA Controller

Specification

io	Direc-	Description
name	tion	
soft-	in	Reset internal counters and keep the VGA interface inactive
Reset		
tim-	in	Specify VGA horizontal and vertical timings
ings		
pixels	slave	Stream of RGB colors that feeds the VGA controller
error	out	High when the pixels stream is too slow
frameS-	out	High when a new frame starts
tart		
vga	master	VGA interface

The controller does not integrate any pixel buffering. It directly takes them from the pixels Stream and puts them on the vga.color out at the right time. If pixels is not valid then error becomes high for one cycle.

Component and io definition

Let's define a new VgaCtrl Component, which takes as RgbConfig and timingsWidth as parameters. Let's give the bit width a default value of 12.

```
class VgaCtrl(rgbConfig: RgbConfig, timingsWidth: Int = 12) extends Component {
  val io = new Bundle {
    val softReset = in Bool
    val timings = in(VgaTimings(timingsWidth))
    val pixels = slave Stream (Rgb(rgbConfig))

  val error = out Bool
  val frameStart = out Bool
  val vga = master(Vga(rgbConfig))
  }
  ...
}
```

Horizontal and vertical logic

The logic that generates horizontal and vertical syncronization signals is quite the same. It kind of resembles ~PWM~. The horizontal one counts up each cycle, while the vertical one use the horizontal syncronization signal as to increment.

Let's define HVArea, which represents one ~PWM~ and then instantiate it two times: one for both horizontal and vertical syncronization.

```
class VgaCtrl(rgbConfig: RgbConfig, timingsWidth: Int = 12) extends Component {
  val io = new Bundle {...}

  case class HVArea(timingsHV: VgaTimingsHV, enable: Bool) extends Area {
    val counter = Reg(UInt(timingsWidth bit)) init(0)
```

```
val syncStart = counter === timingsHV.syncStart
 val syncEnd = counter === timingsHV.syncEnd
 val colorStart = counter === timingsHV.colorStart
 val colorEnd = counter === timingsHV.colorEnd
 when(enable) {
    counter := counter + 1
   when(syncEnd) {
     counter := 0
   }
 }
             = RegInit(False) setWhen(syncStart) clearWhen(syncEnd)
 val colorEn = RegInit(False) setWhen(colorStart) clearWhen(colorEnd)
 when(io.softReset) {
    counter := 0
    sync := False
    colorEn := False
}
val h = HVArea(io.timings.h, True)
val v = HVArea(io.timings.v, h.syncEnd)
```

As you can see, it's done by using Area. This is to avoid the creation of a new Component which would have been much more verbose.

Interconnections

Now that we have timing generators for horizontal and vertical syncronization, we need to drive the outputs.

```
class VgaCtrl(rgbConfig: RgbConfig, timingsWidth: Int = 12) extends Component {
  val io = new Bundle {...}

  case class HVArea(timingsHV: VgaTimingsHV, enable: Bool) extends Area {...}
  val h = HVArea(io.timings.h, True)
  val v = HVArea(io.timings.v, h.syncEnd)

val colorEn = h.colorEn && v.colorEn
  io.pixels.ready := colorEn
  io.error := colorEn && ! io.pixels.valid

io.frameStart := v.syncEnd

io.vga.hSync := h.sync
  io.vga.vSync := v.sync
  io.vga.colorEn := colorEn
  io.vga.colorEn := colorEn
  io.vga.colorEn := colorEn
  io.vga.colorEn := io.pixels.payload
}
```

Bonus

The VgaCtrl that was defined above is generic (not application specific). We can imagine a case where the system provides a Stream of Fragment of RGB, which means the system transmits pixels between start/end of picture indications.

In this case we can automaticly manage the softReset input by asserting it when an error occurs, then wait for the end of the current pixels picture to deassert error.

Let's add a function to VgaCtrl that can be called from the parent component to feed VgaCtrl by using this Stream of Fragment of RGB.

```
class VgaCtrl(rgbConfig: RgbConfig, timingsWidth: Int = 12) extends Component {
    ...
    def feedWith(that : Stream[Fragment[Rgb]]): Unit ={
        io.pixels << that.toStreamOfFragment

    val error = RegInit(False)
    when(io.error){
        error := True
    }
    when(that.isLast){
        error := False
    }

    io.softReset := error
    when(error){
        that.ready := True
    }
}</pre>
```

13.3 Advanced ones

13.3.1 JTAG TAP

Introduction

Important: The goal of this page is to show the implementation of a JTAG TAP (a slave) by a non-conventional way.

Important:

This implementation is not a simple one, it mix object oriented programming, abstract interfaces decoupling, hardware generation and hardware description.

Of course a simple JTAG TAP implementation could be done only with a simple hardware description, but the goal here is really to going forward and creating an very reusable and extensible JTAG TAP generator

Important: This page will not explains how JTAG work. A good tutorial could be find there.

13.3. Advanced ones 209

One big difference between commonly used HDL and Spinal, is the fact that SpinalHDL allow you to define hardware generators/builders. It's very different than describing hardware. Let's take a look into the example bellow because the difference between generate/build/describing could seem "playing with word" or could be interpreted differently.

The example bellow is a JTAG TAP which allow the JTAG master to read switchs/keys inputs and write leds outputs. This TAP could also be recognized by a master by using the UID 0x87654321.

```
class SimpleJtagTap extends Component {
 val io = new Bundle {
               = slave(Jtag())
   val jtag
   val switchs = in Bits(8 bit)
   val keys
             = in Bits(4 bit)
   val leds
               = out Bits(8 bit)
 }
 val tap = new JtagTap(io.jtag, 8)
 val idcodeArea = tap.idcode(B"x87654321") (instructionId=4)
 val switchsArea = tap.read(io.switchs)
                                            (instructionId=5)
 val keysArea = tap.read(io.keys)
                                            (instructionId=6)
 val ledsArea
               = tap.write(io.leds)
                                            (instructionId=7)
```

As you can see, a JtagTap is created but then some Generator/Builder functions (idcode,read,write) are called to create each JTAG instruction. This is what i call "Hardware generator/builder", then these Generator/Builder are used by the user to describing an hardware. And there is the point, in commonly HDL you can only describe your hardware, which imply many donkey job.

This JTAG TAP tutorial is based on this implementation.

JTAG bus

First we need to define a JTAG bus bundle.

```
case class Jtag() extends Bundle with IMasterSlave {
  val tms = Bool
  val tdi = Bool
  val tdo = Bool

  override def asMaster() : Unit = {
    out(tdi, tms)
    in(tdo)
  }
}
```

As you can see this bus don't contain the TCK pin because it will be provided by the clock domain.

JTAG state machine

Let's define the JTAG state machine as explained here

```
object JtagState extends SpinalEnum {
 val RESET, IDLE,
     IR_SELECT, IR_CAPTURE, IR_SHIFT, IR_EXIT1, IR_PAUSE, IR_EXIT2, IR_UPDATE,
     DR_SELECT, DR_CAPTURE, DR_SHIFT, DR_EXIT1, DR_PAUSE, DR_EXIT2, DR_UPDATE =_
→newElement()
}
class JtagFsm(jtag: Jtag) extends Area {
 import JtagState._
 val stateNext = JtagState()
 val state = RegNext(stateNext) randBoot()
 stateNext := state.mux(
              -> (jtag.tms ? RESET
                                                          //RESET
   default
                                      | IDLE),
   IDLE
              -> (jtag.tms ? DR_SELECT | IDLE),
   IR_SELECT -> (jtag.tms ? RESET | IR_CAPTURE),
   IR_CAPTURE -> (jtag.tms ? IR_EXIT1 | IR_SHIFT),
   IR_SHIFT
             -> (jtag.tms ? IR_EXIT1 | IR_SHIFT),
             -> (jtag.tms ? IR_UPDATE | IR_PAUSE),
   IR_EXIT1
   IR_PAUSE -> (jtag.tms ? IR_EXIT2 | IR_PAUSE),
   IR_EXIT2 -> (jtag.tms ? IR_UPDATE | IR_SHIFT),
   IR_UPDATE -> (jtag.tms ? DR_SELECT | IDLE),
   DR_SELECT -> (jtag.tms ? IR_SELECT | DR_CAPTURE),
   DR_CAPTURE -> (jtag.tms ? DR_EXIT1 | DR_SHIFT),
   DR_SHIFT
             -> (jtag.tms ? DR_EXIT1 | DR_SHIFT),
   DR_EXIT1 -> (jtag.tms ? DR_UPDATE | DR_PAUSE),
   DR_PAUSE -> (jtag.tms ? DR_EXIT2 | DR_PAUSE),
   DR_EXIT2 -> (jtag.tms ? DR_UPDATE | DR_SHIFT),
   DR_UPDATE -> (jtag.tms ? DR_SELECT | IDLE)
}
```

Note: The randBoot() on state make it initialized with a random state. It's only for simulation purpose.

JTAG TAP

Let's implement the core of the JTAG TAP, without any instruction, just the base manage the instruction register (IR) and the bypass.

```
class JtagTap(val jtag: Jtag, instructionWidth: Int) extends Area{
  val fsm = new JtagFsm(jtag)
  val instruction = Reg(Bits(instructionWidth bit))
  val instructionShift = Reg(Bits(instructionWidth bit))
  val bypass = Reg(Bool)

jtag.tdo := bypass
```

(continues on next page)

13.3. Advanced ones 211

```
switch(fsm.state) {
  is(JtagState.IR_CAPTURE) {
    instructionShift := instruction
  }
  is(JtagState.IR_SHIFT) {
    instructionShift := (jtag.tdi ## instructionShift) >> 1
    jtag.tdo := instructionShift.lsb
  }
  is(JtagState.IR_UPDATE) {
    instruction := instructionShift
  }
  is(JtagState.DR_SHIFT) {
    bypass := jtag.tdi
  }
}
```

Jtag instructions

Now that the JTAG TAP core is done, we can think about how to implement JTAG instructions by an reusable way.

JTAG TAP class interface

First we need to define how an instruction could interact with the JTAG TAP core. We could of course directly take the JtagTap area, but it's not very nice because is some situation the JTAG TAP core is provided by another IP (Altera virtual JTAG for example).

So let's define a simple and abstract interface between the JTAG TAP core and instructions:

```
trait JtagTapAccess {
  def getTdi : Bool
  def getTms : Bool
  def setTdo(value : Bool) : Unit

  def getState : JtagState.T
  def getInstruction() : Bits
  def setInstruction(value : Bits) : Unit
}
```

Then let's the JtagTap implement this abstract interface:

```
class JtagTap(val jtag: Jtag, ...) extends Area with JtagTapAccess{
    ...

//JtagTapAccess impl
override def getTdi: Bool = jtag.tdi
override def setTdo(value: Bool): Unit = jtag.tdo := value
override def getTms: Bool = jtag.tms

override def getState: JtagState.T = fsm.state
override def getInstruction(): Bits = instruction
```

```
override def setInstruction(value: Bits): Unit = instruction := value
}
```

Base class

Let's define a useful base class for JTAG instruction that provide some callback (doCapture/doShift/doUpdate/doReset) depending the selected instruction and the state of the JTAG TAP :

```
class JtagInstruction(tap: JtagTapAccess,val instructionId: Bits) extends Area {
  def doCapture(): Unit = {}
  def doShift(): Unit = {}
  def doUpdate(): Unit = {}
  def doReset(): Unit = {}
  val instructionHit = tap.getInstruction === instructionId
  Component.current.addPrePopTask(() => {
   when(instructionHit) {
      when(tap.getState === JtagState.DR_CAPTURE) {
        doCapture()
      }
      when(tap.getState === JtagState.DR_SHIFT) {
        doShift()
      }
      when(tap.getState === JtagState.DR_UPDATE) {
        doUpdate()
   }
   when(tap.getState === JtagState.RESET) {
      doReset()
   }
  })
```

Note:

About the Component.current.addPrePopTask(...):

This allow you to call the given code at the end of the current component construction. Because of object oriented nature of JtagInstruction, doCapture, doShift, doUpdate and doReset should not be called before children classes construction (because children classes will use it as a callback to do some logic)

13.3. Advanced ones 213

Read instruction

Let's implement an instruction that allow the JTAG to read a signal.

```
class JtagInstructionRead[T <: Data](data: T) (tap: JtagTapAccess,instructionId:_
____Bits)extends JtagInstruction(tap,instructionId) {
  val shifter = Reg(Bits(data.getBitsWidth bit))

  override def doCapture(): Unit = {
    shifter := data.asBits
  }

  override def doShift(): Unit = {
    shifter := (tap.getTdi ## shifter) >> 1
    tap.setTdo(shifter.lsb)
  }
}
```

Write instruction

Let's implement an instruction that allow the JTAG to write a register (and also read its current value).

Idcode instruction

Let's implement the instruction that return a idcode to the JTAG and also, when a reset occur, set the instruction register (IR) to it own instructionId.

```
class JtagInstructionIdcode[T <: Data](value: Bits)(tap: JtagTapAccess, instructionId:_
__Bits)extends JtagInstruction(tap,instructionId) {
  val shifter = Reg(Bits(32 bit))

  override def doShift(): Unit = {</pre>
```

```
shifter := (tap.getTdi ## shifter) >> 1
  tap.setTdo(shifter.lsb)
}

override def doReset(): Unit = {
  shifter := value
  tap.setInstruction(instructionId)
  }
}
```

User friendly wrapper

Let's add some user friendly function to the JtagTapAccess to make instructions instantiation easier .

```
trait JtagTapAccess {
    ...

def idcode(value: Bits)(instructionId: Bits) =
    new JtagInstructionIdcode(value)(this,instructionId)

def read[T <: Data](data: T)(instructionId: Bits) =
    new JtagInstructionRead(data)(this,instructionId)

def write[T <: Data](data: T, cleanUpdate: Boolean = true, readable: Boolean = true)(instructionId: Bits) =
    new JtagInstructionWrite[T](data,cleanUpdate,readable)(this,instructionId)
}</pre>
```

Usage demonstration

And there we are, we can now very easly create an application specific JTAG TAP without having to write any logic or any interconnections.

```
class SimpleJtagTap extends Component {
 val io = new Bundle {
   val itag
             = slave(Jtag())
   val switchs = in Bits(8 bit)
   val keys = in Bits(4 bit)
   val leds = out Bits(8 bit)
 val tap = new JtagTap(io.jtag, 8)
 val idcodeArea = tap.idcode(B"x87654321") (instructionId=4)
 val switchsArea = tap.read(io.switchs)
                                           (instructionId=5)
 val keysArea = tap.read(io.keys)
                                            (instructionId=6)
 val ledsArea
               = tap.write(io.leds)
                                            (instructionId=7)
```

This way of doing things (Generating hardware) could also be applied to, for example, generating an APB/AHB/AXI bus slave.

13.3. Advanced ones 215

13.3.2 Memory mapped UART

Introduction

This example will take the UartCtrl component implemented in the previous *example* to create a memory mapped UART controller.

Specification

The implementation will be based on the APB3 bus with a RX FIFO.

Here is the register mapping table:

Name	Туре	Access	Address	Description
clockDi-	UInt	RW	0	Set the UartCtrl clock divider
vider				
frame	UartCtrl-	RW	4	Set the dataLength, the parity and the stop bit configuration
	Frame-			
	Config			
writeCmd	Bits	W	8	Send a write command to UartCtrl
write-	Bool	R	8	Bit 0 => zero when a new writeCmd can be sent
Busy				
read	Bool /	R	12	
	Bits			Bits 7 downto 0 => rx payload
				Bit 31 => rx payload valid


Implementation

For this implementation, the Apb3SlaveFactory tool will be used. It allows you to define a APB3 slave with a nice syntax. You can find the documentation of this tool *there*.

First, we just need to define the Apb3Config that will be used for the controller. It is defined in a Scala object as a function to be able to get it from everywhere.

```
object Apb3UartCtrl{
  def getApb3Config = Apb3Config(
    addressWidth = 4,
    dataWidth = 32
  )
}
```

Then we can define a Apb3UartCtrl component which instantiates a UartCtrl and creates the memory mapping logic between it and the APB3 bus:

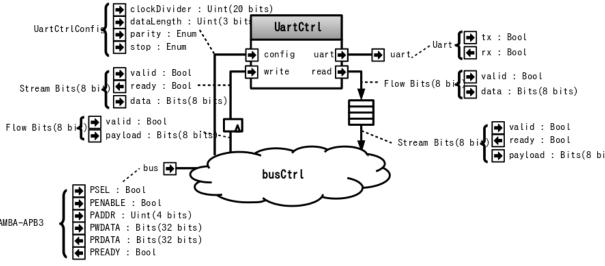

```
class Apb3UartCtrl(uartCtrlConfig : UartCtrlGenerics, rxFifoDepth : Int) extends_
→Component{
 val io = new Bundle{
   val bus = slave(Apb3(Apb3UartCtrl.getApb3Config))
   val uart = master(Uart())
 }
 // Instanciate an simple uart controller
 val uartCtrl = new UartCtrl(uartCtrlConfig)
 io.uart <> uartCtrl.io.uart
 // Create an instance of the Apb3SlaveFactory that will then be used as a slave.
→ factory drived by io.bus
 val busCtrl = Apb3SlaveFactory(io.bus)
 // Ask the busCtrl to create a readable/writable register at the address 0
 // and drive uartCtrl.io.config.clockDivider with this register
 busCtrl.driveAndRead(uartCtrl.io.config.clockDivider,address = 0)
 // Do the same thing than above but for uartCtrl.io.config.frame at the address 4
 busCtrl.driveAndRead(uartCtrl.io.config.frame,address = 4)
 // Ask the busCtrl to create a writable Flow[Bits] (valid/payload) at the address 8.
 // Then convert it into a stream and connect it to the uartCtrl.io.write by using an
→register stage (>->)
 busCtrl.createAndDriveFlow(Bits(uartCtrlConfig.dataWidthMax bits),address = 8).
→toStream >-> uartCtrl.io.write
 // To avoid losing writes commands between the Flow to Stream transformation just.
→above.
 // make the occupancy of the uartCtrl.io.write readable at address 8
 busCtrl.read(uartCtrl.io.write.valid,address = 8)
 // Take uartCtrl.io.read, convert it into a Stream, then connect it to the input of au
→FIFO of 64 elements
 // Then make the output of the FIFO readable at the address 12 by using a non blocking.
                                                                           (continues on next page)
```

13.3. Advanced ones 217

Important:

Yes, that's all it takes. It's also synthesizable.

The Apb3SlaveFactory tool is not something hard-coded into the SpinalHDL compiler. It's something implemented with SpinalHDL regular hardware description syntax.

13.3.3 Pinesec

Rembember to add it

13.3.4 Timer

Introduction

A timer module is probably one of the most basic pieces of hardware. But even for a timer, there are some interresting things that you can do with SpinalHDL. This example will define a simple timer component which integrates a bus bridging utile.

Timer

So let's start with the Timer component.

Specification

The Timer component will have a single construction parameter:

Parameter Name	Туре	Description
width	Int	Specify the bit width of the timer counter

And also some inputs/outputs:

IO Name	Direction	Туре	Description
tick	in	Bool	When tick is True, the timer count up until limit.
clear	in	Bool	When tick is True, the timer is set to zero. clear has
			priority over tick.
limit	in	UInt(width bits)	When the timer value is equal to limit, the tick input
			is inhibited.
full	out	Bool	full is high when the timer value is equal to limit and
			tick is high.
value	out	UInt(width bits)	Wire out the timer counter value.

Implementation

```
case class Timer(width : Int) extends Component{
 val io = new Bundle{
   val tick
                 = in Bool
                = in Bool
   val clear
   val limit
                = in UInt(width bits)
   val full = out Bool
   val value = out UInt(width bits)
 }
 val counter = Reg(UInt(width bits))
 when(io.tick && !io.full){
   counter := counter + 1
 when(io.clear){
   counter := 0
 io.full := counter === io.limit && io.tick
 io.value := counter
```

Bridging function

Now we can start with the main purpose of this example: defining a bus bridging function. To do that we will use two techniques:

- ullet Using the BusSlaveFactory tool documented here
- Defining a function inside the Timer component which can be called from the parent component to drive the Timer's IO in an abstract way.

Specification

This bridging function will take the following parameters:

Pa-	Type	Description
ram-		
eter		
Name		
busCtrl	Bus-	The BusSlaveFactory instance that will be used by the function to create the bridging logic.
	Slave-	
	Fac-	
	tory	
baseAd-	BigInt	The base address where the bridging logic should be mapped.
dress		
ticks	Seq[Boo	l]A list of Bool sources that can be used as a tick signal.
clears	Seq[Boo	l]A list of Bool sources that can be used as a clear signal.

The register mapping assumes that the bus system is 32 bits wide:

13.3. Advanced ones 219

Name	Ac-	Width	Ad-	Bit	Description
	cess		dress	off-	
			off-	set	
			set		
tick-	RW	len(tic	k s)	0	Each ticks bool can be actived if the corresponding ticksEnable bit is
sEn-					high.
able					
clearsl	Er RW	len(cle	eafts)	16	Each clears bool can be actived if the corresponding clearsEnable bit
able					is high.
limit	RW	width	4	0	
					Access the limit value of the timer component. When this register is written to, the timer is cleared.
					,
value	R	width	8	0	Access the value of the timer.
clear	W		8		When this register is written to, it clears the timer.

Implementation

Let's add this bridging function inside the Timer component.

```
case class Timer(width : Int) extends Component{
 val io = new Bundle{
   val tick
                 = in Bool
   val clear
                = in Bool
   val limit = in UInt(width bits)
   val full = out Bool
   val value = out UInt(width bits)
 }
 // Logic previously defined
 // ....
 // The function prototype uses Scala currying funcName(arg1,arg2)(arg3,arg3)
 // which allow to call the function with a nice syntax later
 // This function also returns an area, which allows to keep names of inner signals in.
→ the generated VHDL/Verilog.
 def driveFrom(busCtrl : BusSlaveFactory,baseAddress : BigInt)(ticks : Seq[Bool],clears_

→: Seq[Bool]) = new Area {
   //Address 0 => clear/tick masks + bus
   val ticksEnable = busCtrl.createReadWrite(Bits(ticks.length bits),baseAddress + 0,
\rightarrow 0) init(0)
   val clearsEnable = busCtrl.createReadWrite(Bits(clears.length bits),baseAddress + 0,
\rightarrow16) init(0)
   val busClearing = False
   io.clear := (clearsEnable & clears.asBits).orR | busClearing
   io.tick := (ticksEnable & ticks.asBits ).orR
   //Address 4 => read/write limit (+ auto clear)
```

```
busCtrl.driveAndRead(io.limit,baseAddress + 4)
busClearing setWhen(busCtrl.isWriting(baseAddress + 4))

//Address 8 => read timer value / write => clear timer value
busCtrl.read(io.value,baseAddress + 8)
busClearing setWhen(busCtrl.isWriting(baseAddress + 8))
}
```

Usage

Here is some demonstration code which is very close to the one used in the Pinsec SoC timer module. Basically it instantiates following elements:

- One 16 bit prescaler
- One 32 bit timer
- Three 16 bit timers

Then by using an Apb3SlaveFactory and functions defined inside the Timers, it creates bridging logic between the APB3 bus and all instantiated components.

```
val io = new Bundle{
  val apb = Apb3(ApbConfig(addressWidth = 8, dataWidth = 32))
  val interrupt = in Bool
  val external = new Bundle{
   val tick = Bool
   val clear = Bool
  }
}
//Prescaler is very similar to the timer, it mainly integrates a piece of auto reload.
val prescaler = Prescaler(width = 16)
val timerA = Timer(width = 32)
val timerB, timerC, timerD = Timer(width = 16)
val busCtrl = Apb3SlaveFactory(io.apb)
val prescalerBridge = prescaler.driveFrom(busCtrl,0x00)
val timerABridge = timerA.driveFrom(busCtrl,0x40)(
 // The first element is True, which allows you to have a mode where the timer is.
→always counting up.
 ticks = List(True, prescaler.io.overflow),
  // By looping the timer full to the clears, it allows you to create an autoreload mode.
  clears = List(timerA.io.full)
)
val timerBBridge = timerB.driveFrom(busCtrl,0x50)(
  //The external.tick could allow to create an impulsion counter mode
  ticks = List(True, prescaler.io.overflow, io.external.tick),
```

(continues on next page)

13.3. Advanced ones 221

```
//external.clear could allow to create an timeout mode.
  clears = List(timerB.io.full, io.external.clear)
)

val timerCBridge = timerC.driveFrom(busCtrl,0x60)(
  ticks = List(True, prescaler.io.overflow, io.external.tick),
  clears = List(timerC.io.full, io.external.clear)
)

val timerDBridge = timerD.driveFrom(busCtrl,0x70)(
  ticks = List(True, prescaler.io.overflow, io.external.tick),
  clears = List(timerD.io.full, io.external.clear)
)

val interruptCtrl = InterruptCtrl(4)
val interruptCtrlBridge = interruptCtrl.driveFrom(busCtrl,0x10)
interruptCtrl.io.inputs(0) := timerA.io.full
interruptCtrl.io.inputs(1) := timerB.io.full
interruptCtrl.io.inputs(2) := timerC.io.full
interruptCtrl.io.inputs(3) := timerD.io.full
io.interrupt := interruptCtrl.io.pendings.orR
```

13.4 Introduction

Examples are split in tree kinds:

- Simple ones that could be used to get used to the basics of SpinalHDL.
- Intermediates ones which implement components by using a traditional approach.
- Advanced ones which go further than traditional HDL by using object oriented programming, functional programming, and meta-hardware description.

They are all accessible in the sidebar under the corresponding sections.

Important: The SpinalHDL workshop contains many labs with their solutions. See here.

Note: You can also find a list of repostitories using SpinalHDL *there*

CHAPTER

FOURTEEN

LEGACY

14.1 RiscV

Warning: This page document the first RISC-V cpu iteration done in SpinalHDL. The second iteration of this CPU is available there and already offer better perforance/area/features.

14.1.1 Features

RISC-V CPU

- Pipelined on 5 stages (Fetch Decode Execute0 Execute1 WriteBack)
- Multiple branch prediction modes : (disable, static or dynamic)
- Data path parameterizable between fully bypassed to fully interlocked

Extensions

- One cycle multiplication
- 34 cycle division
- Iterative shifter (N shift -> N cycles)
- Single cycle shifter
- Interruption controller
- Debugging module (with JTAG bridge, openOCD port and GDB)
- Instruction cache with wrapped burst memory interface, one way
- Data cache with instructions to evict/flush the whole cache or a given address, one way

Performance/Area (on cyclone II)

- small core -> 846 LE, 0.6 DMIPS/Mhz
- debug module (without JTAG) -> 240 LE
- JTAG Avalon master -> 238 LE
- big core with MUL/DIV/Full shifter/I\$/Interrupt/Debug -> 2200 LE, 1.15 DMIPS/Mhz, at least 100 Mhz (with default synthesis option)

14.1.2 Base FPGA project

You can find a DE1-SOC project which integrate two instance of the CPU with MUL/DIV/Full shifter/I\$/Interrupt/Debug there :

https://drive.google.com/drive/folders/0B-CqLXDTaMbKNkktb2k3T3lzcUk?usp=sharing

CPU/JTAG/VGA IP are pre-generated. Quartus Prime: 15.1.

14.1.3 How to generate the CPU VHDL

Warning: This avalon version of the CPU isn't present in recent releases of SpinalHDL. Please considerate the VexRiscv instead.

14.1.4 How to debug

You can find the openOCD fork there:

https://github.com/Dolu1990/openocd_riscv

An example target configuration file could be find there:

https://github.com/Dolu1990/openocd_riscv/blob/riscv_spinal/tcl/target/riscv_spinal.cfg

Then you can use the RISCV GDB.

14.1.5 Todo

- · Documentation
- Optimise instruction/data caches FMax by moving line hit condition forward into combinatorial paths.


Contact spinalhdl@gmail.com for more information

14.2 pinsec

14.2.1 Hardware

Introduction

There is the Pinsec toplevel hardware diagram:

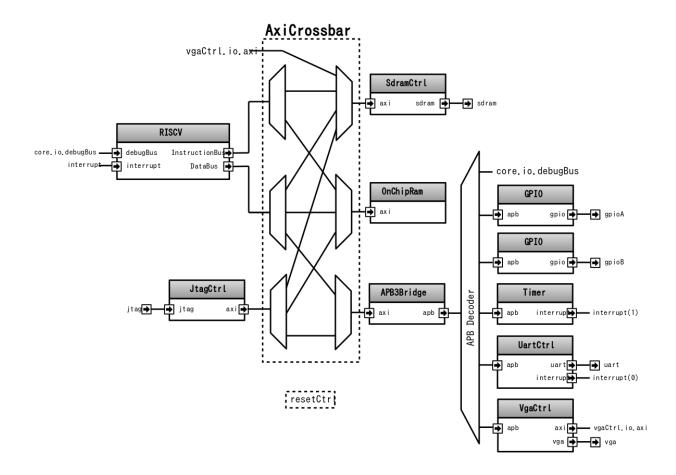

RISCV

The RISCV is a 5 stage pipelined CPU with following features :

- · Instruction cache
- · Single cycle Barrel shifter
- Single cycle MUL, 34 cycle DIV
- Interruption support
- Dynamic branch prediction
- · Debug port

AXI4

As previously said, Pinsec integrate an AXI4 bus fabric. AXI4 is not the easiest bus on the Earth but has many advantages like :

- A flexible topology
- High bandwidth potential
- Potential out of order request completion
- · Easy methods to meets clocks timings
- · Standard used by many IP

14.2. pinsec 225

• An hand-shaking methodology that fit with SpinalHDL Stream.

From an Area utilization perspective, AXI4 is for sure not the lightest solution, but some techniques could dramatically reduce that issue:

- Using Read-Only/Write-Only AXI4 variations where it's possible
- Introducing an Axi4-Shared variation where a new ARW channel is introduced to replace AR and AW channels. This solution divide resources usage by two for the address decoding and the address arbitration.
- Depending the interconnect implementation, if masters doesn't use the R/B channels ready, this path will be removed until each slaves at synthesis, which relax timings.
- As the AXI4 spec suggest, the interconnect can expand the transactions ID by aggregating the corresponding input port id. This allow the interconnect to have an infinite number of pending request and also to support out of order completion with a negligible area cost (transaction id expand).

The Pinsec interconnect doesn't introduce latency cycles.

APB3

In Pinsec, all peripherals implement an APB3 bus to be interfaced. The APB3 choice was motivated by following reasons:

- Very simple bus (no burst)
- Use very few resources
- · Standard used by many IP

Generate the RTL

To generate the RTL, you have multiple solutions:

You can download the SpinalHDL source code, and then run:

```
sbt "project SpinalHDL-lib" "run-main spinal.lib.soc.pinsec.Pinsec"
```

Or you can create your own main into your own SBT project and then run it:

```
import spinal.lib.soc.pinsec._

object PinsecMain{
  def main(args: Array[String]) {
    SpinalVhdl(new Pinsec(100 MHz))
    SpinalVerilog(new Pinsec(100 MHz))
  }
}
```

Note: Currently, only the verilog version was tested in simulation and in FPGA because the last release of GHDL is not compatible with cocotb.

14.2.2 SoC toplevel (Pinsec)


Introduction

Pinsec is a little SoC designed for FPGA. It is available in the SpinalHDL library and some documentation could be find *there*

Its toplevel implementation is an interesting example, because it mix some design pattern that make it very easy to modify. Adding a new master or a new peripheral to the bus fabric could be done in the seconde.

This toplevel implementation could be consulted there: https://github.com/SpinalHDL/SpinalHDL/blob/master/lib/src/main/scala/spinal/lib/soc/pinsec/Pinsec.scala

There is the Pinsec toplevel hardware diagram:

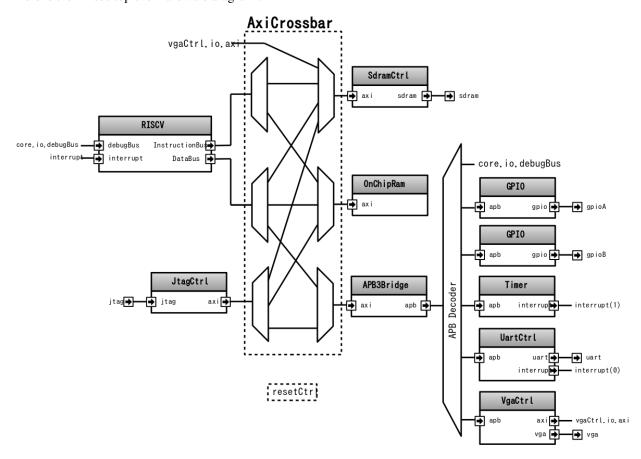

Defining all IO

```
val io = new Bundle{
    //Clocks / reset
    val asyncReset = in Bool
    val axiClk = in Bool
    val vgaClk = in Bool

    //Main components IO
    val jtag = slave(Jtag())
    val sdram = master(SdramInterface(IS42x320D.layout))
    (continues on next page)
```

14.2. pinsec 227

```
//Peripherals IO
val gpioA = master(TriStateArray(32 bits)) //Each pin has it's individual output
enable control
val gpioB = master(TriStateArray(32 bits))
val uart = master(Uart())
val vga = master(Vga(RgbConfig(5,6,5)))
}
```

Clock and resets

Pinsec has three clocks inputs:

- · axiClock
- vgaClock
- jtag.tck

And one reset input:

• asyncReset

Which will finally give 5 ClockDomain (clock/reset couple):

Name	Clock	Description
resetCtrlClock-	axi-	Used by the reset controller, Flops of this clock domain are initialized by the FPGA
Domain	Clock	bitstream
axiClockDo-	axi-	Used by all component connected to the AXI and the APB interconnect
main	Clock	
coreClockDo-	axi-	The only difference with the axiClockDomain, is the fact that the reset could also be
main	Clock	asserted by the debug module
vgaClockDo-	vga-	Used by the VGA controller backend as a pixel clock
main	Clock	
jtagClockDo-	jtag.tck	Used to clock the frontend of the JTAG controller
main		

Reset controller

First we need to define the reset controller clock domain, which has no reset wire, but use the FPGA bitstream loading to setup flipflops.

```
val resetCtrlClockDomain = ClockDomain(
  clock = io.axiClk,
  config = ClockDomainConfig(
    resetKind = BOOT
  )
)
```

Then we can define a simple reset controller under this clock domain.

```
val resetCtrl = new ClockingArea(resetCtrlClockDomain) {
 val axiResetUnbuffered = False
 val coreResetUnbuffered = False
 //Implement an counter to keep the reset axiResetOrder high 64 cycles
 // Also this counter will automaticly do a reset when the system boot.
 val axiResetCounter = Reg(UInt(6 bits)) init(0)
 when(axiResetCounter =/= U(axiResetCounter.range -> true)){
   axiResetCounter := axiResetCounter + 1
   axiResetUnbuffered := True
 }
 when(BufferCC(io.asyncReset)){
   axiResetCounter := 0
 }
 //When an axiResetOrder happen, the core reset will as well
 when(axiResetUnbuffered){
   coreResetUnbuffered := True
 }
 //Create all reset used later in the design
 val axiReset = RegNext(axiResetUnbuffered)
 val coreReset = RegNext(coreResetUnbuffered)
 val vgaReset = BufferCC(axiResetUnbuffered)
```

Systems clock domains

Now that the reset controller is implemented, we can define clock domain for all part of Pinsec:

Also all the core system of Pinsec will be defined into a axi clocked area:

14.2. pinsec 229

```
val axi = new ClockingArea(axiClockDomain) {
   //Here will come the rest of Pinsec
}
```

Main components

Pinsec is constituted mainly by 4 main components:

- · One RISCV CPU
- One SDRAM controller
- · One on chip memory
- One JTAG controller

RISCV CPU

The RISCV CPU used in Pinsec as many parametrization possibilities:

```
val core = coreClockDomain {
 val coreConfig = CoreConfig(
   pcWidth = 32,
   addrWidth = 32,
   startAddress = 0x000000000,
   regFileReadyKind = sync,
   branchPrediction = dynamic,
   bypassExecute0 = true,
   bypassExecute1 = true,
   bypassWriteBack = true,
   bypassWriteBackBuffer = true,
   collapseBubble = false,
   fastFetchCmdPcCalculation = true,
   dynamicBranchPredictorCacheSizeLog2 = 7
 )
 //The CPU has a systems of plugin which allow to add new feature into the core.
 //Those extension are not directly implemented into the core, but are kind of additive.
→logic patch defined in a separated area.
 coreConfig.add(new MulExtension)
 coreConfig.add(new DivExtension)
 coreConfig.add(new BarrelShifterFullExtension)
 val iCacheConfig = InstructionCacheConfig(
   cacheSize =4096,
   bytePerLine =32,
   wayCount = 1, //Can only be one for the moment
   wrappedMemAccess = true.
   addressWidth = 32,
   cpuDataWidth = 32,
   memDataWidth = 32
 )
```

```
//There is the instanciation of the CPU by using all those construction parameters
new RiscvAxi4(
    coreConfig = coreConfig,
    iCacheConfig = iCacheConfig,
    dCacheConfig = null,
    debug = true,
    interruptCount = 2
)
}
```

On chip RAM

The instanciation of the AXI4 on chip RAM is very simple.

In fact it's not an AXI4 but an Axi4Shared, which mean that a ARW channel replace the AR and AW ones. This solution use less area while being fully interoperable with full AXI4.

```
val ram = Axi4SharedOnChipRam(
  dataWidth = 32,
  byteCount = 4 kB,
  idWidth = 4  //Specify the AXI4 ID width.
)
```

SDRAM controller

First you need to define the layout and timings of your SDRAM device. On the DE1-SOC, the SDRAM device is an IS42x320D one.

```
object IS42x320D {
 def layout = SdramLayout(
   bankWidth = 2,
   columnWidth = 10,
   rowWidth
              = 13,
   dataWidth = 16
  )
  def timingGrade7 = SdramTimings(
   bootRefreshCount =
                         8,
   tPOW
                    = 100 \text{ us,}
                    = 64 ms,
   tREF
   tRC
                     = 60 ns.
   tRFC
                    = 60 ns,
   tRAS
                     = 37 ns.
   tRP
                     = 15 ns,
   tRCD
                     = 15 ns,
   cMRD
                       2,
   tWR
                    = 10 ns,
    cWR
                         1
 )
}
```

14.2. pinsec 231

Then you can used those definition to parametrize the SDRAM controller instantiation.

```
val sdramCtrl = Axi4SharedSdramCtrl(
  axiDataWidth = 32,
  axiIdWidth = 4,
  layout = IS42x320D.layout,
  timing = IS42x320D.timingGrade7,
  CAS = 3
)
```

JTAG controller

The JTAG controller could be used to access memories and debug the CPU from an PC.

```
val jtagCtrl = JtagAxi4SharedDebugger(SystemDebuggerConfig(
  memAddressWidth = 32,
  memDataWidth = 32,
  remoteCmdWidth = 1,
  jtagClockDomain = jtagClockDomain
))
```

Peripherals

Pinsec integrate some peripherals:

- GPIO
- Timer
- UART
- VGA

GPIO

232

```
val gpioACtrl = Apb3Gpio(
   gpioWidth = 32
)

val gpioBCtrl = Apb3Gpio(
   gpioWidth = 32
)
```

Timer

The Pinsec timer module is constituted of:

- · One prescaler
- One 32 bits timer
- Three 16 bits timers

All of them are packed into the PinsecTimerCtrl component.

```
val timerCtrl = PinsecTimerCtrl()
```

UART controller

First we need to define a configuration for our UART controller:

Then we can use it to instantiate the UART controller

```
val uartCtrl = Apb3UartCtrl(uartCtrlConfig)
```

VGA controller

First we need to define a configuration for our VGA controller:

Then we can use it to instantiate the VGA controller

```
val vgaCtrl = Axi4VgaCtrl(vgaCtrlConfig)
```

14.2. pinsec 233

Bus interconnects

There is three interconnections components:

- AXI4 crossbar
- AXI4 to APB3 bridge
- · APB3 decoder

AXI4 to APB3 bridge

This bridge will be used to connect low bandwidth peripherals to the AXI crossbar.

```
val apbBridge = Axi4SharedToApb3Bridge(
  addressWidth = 20,
  dataWidth = 32,
  idWidth = 4
)
```

AXI4 crossbar

The AXI4 crossbar that interconnect AXI4 masters and slaves together is generated by using an factory. The concept of this factory is to create it, then call many function on it to configure it, and finally call the build function to ask the factory to generate the corresponding hardware:

First you need to populate slaves interfaces:

```
// Slave -> (base address, size) ,

axiCrossbar.addSlaves(
  ram.io.axi -> (0x00000000L, 4 kB),
   sdramCtrl.io.axi -> (0x40000000L, 64 MB),
   apbBridge.io.axi -> (0xF00000000L, 1 MB)
)
```

Then you need to populate interconnections between slaves and masters:

Then to reduce combinatorial path length and have a good design FMax, you can ask the factory to insert pipelining stages between itself a given master or slave :

Note:

halfPipe / >> / << / >/-> in the following code are provided by the Stream bus library.

Some documentation could be find *there*. In short, it's just some pipelining and interconnection stuff.

```
//Pipeline the connection between the crossbar and the apbBridge.io.axi
axiCrossbar.addPipelining(apbBridge.io.axi,(crossbar,bridge) => {
  crossbar.sharedCmd.halfPipe() >> bridge.sharedCmd
  crossbar.writeData.halfPipe() >> bridge.writeData
  crossbar.writeRsp
                               << bridge.writeRsp</pre>
  crossbar.readRsp
                                << bridge.readRsp</pre>
})
//Pipeline the connection between the crossbar and the sdramCtrl.io.axi
axiCrossbar.addPipelining(sdramCtrl.io.axi,(crossbar,ctrl) => {
  crossbar.sharedCmd.halfPipe() >> ctrl.sharedCmd
  crossbar.writeData
                               >/-> ctrl.writeData
  crossbar.writeRsp
                                << ctrl.writeRsp</pre>
  crossbar.readRsp
                                 << ctrl.readRsp</pre>
})
```

APB3 decoder

The interconnection between the APB3 bridge and all peripherals is done via an APB3Decoder:

```
val apbDecoder = Apb3Decoder(
  master = apbBridge.io.apb,
  slaves = List(
    gpioACtrl.io.apb -> (0x00000, 4 kB),
    gpioBCtrl.io.apb -> (0x01000, 4 kB),
    uartCtrl.io.apb -> (0x10000, 4 kB),
    timerCtrl.io.apb -> (0x20000, 4 kB),
    vgaCtrl.io.apb -> (0x30000, 4 kB),
    core.io.debugBus -> (0xF0000, 4 kB)
)
)
```

Misc

To connect all toplevel IO to components, the following code is required:

```
io.gpioA <> axi.gpioACtrl.io.gpio
io.gpioB <> axi.gpioBCtrl.io.gpio
io.jtag <> axi.jtagCtrl.io.jtag
io.uart <> axi.uartCtrl.io.uart
io.sdram <> axi.sdramCtrl.io.sdram
io.vga <> axi.vgaCtrl.io.vga
```

And finally some connections between components are required like interrupts and core debug module resets

14.2. pinsec 235

```
core.io.interrupt(0) := uartCtrl.io.interrupt
core.io.interrupt(1) := timerCtrl.io.interrupt

core.io.debugResetIn := resetCtrl.axiReset
when(core.io.debugResetOut){
   resetCtrl.coreResetUnbuffered := True
}
```

14.2.3 Introduction

Note: This page document the SoC implemented with the first RISC-V cpu iteration done in SpinalHDL. The second iteration of this SoC (and CPU) is available there and offer better perforance/area/features.

Introduction

Pinsec is the name of a little FPGA SoC fully written in SpinalHDL. Goals of this project are multiple:

- Prove that SpinalHDL is a viable HDL alternative in non-trivial projects.
- Show advantage of SpinalHDL meta-hardware description capabilities in a concrete project.
- Provide a fully open source SoC.

Pinsec has followings hardware features:

- AXI4 interconnect for high speed busses
- APB3 interconnect for peripherals
- RISCV CPU with instruction cache, MUL/DIV extension and interrupt controller
- JTAG bridge to load binaries and debug the CPU
- SDRAM SDR controller
- · On chip ram
- One UART controller
- One VGA controller
- Some timer module
- · Some GPIO

The toplevel code explanation could be find there

Board support

A DE1-SOC FPGA project can be find there with some demo binaries.

14.2.4 Software

RISCV tool-chain

Binaries executed by the CPU can be defined in ASM/C/C++ and compiled by the GCC RISCV fork. Also, to load binaries and debug the CPU, an OpenOCD fork and RISCV GDB can be used.

RISCV tools: https://github.com/riscv/riscv-wiki/wiki/RISC-V-Software-Status

OpenOCD fork: https://github.com/Dolu1990/openocd_riscv Software examples: https://github.com/Dolu1990/pinsecSoftware

OpenOCD/GDB/Eclipse configuration

About the OpenOCD fork, there is the configuration file that could be used to connect the Pinsec SoC: https://github.com/Dolu1990/openocd_riscv/blob/riscv_spinal/tcl/target/riscv_spinal.cfg

There is an example of arguments used to run the OpenOCD tool:

```
openocd -f ../tcl/interface/ftdi/ft2232h_breakout.cfg -f ../tcl/target/riscv_spinal.cfg - _{\rightarrow}d 3
```

To debug with eclipse, you will need the Zylin plugin and then create an "Zynlin embedded debug (native)".

Initialize commands:

```
target remote localhost:3333
monitor reset halt
load
```

Run commands:

```
continue
```

14.2. pinsec 237

238 Chapter 14. Legacy

CHAPTER

FIFTEEN

DEVELOPERS AREA


15.1 Bus Slave Factory Implementation

15.1.1 Introduction

This page will document the implementation of the BusSlaveFactory tool and one of those variant. You can get more information about the functionality of that tool *there*.

15.1.2 Specification

The class diagram is the following:

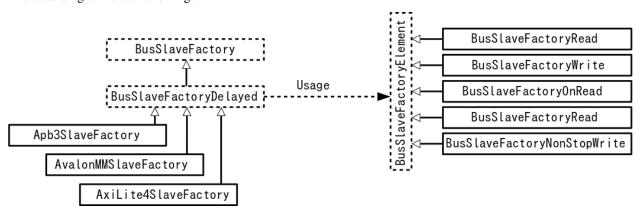

The BusSlaveFactory abstract class define minimum requirements that each implementation of it should provide:

Name	Description				
busDataWidth	Return the data width of the bus				
read(that,address,	bi Wolfishetthe bus read the address, fill the response with that at bitOffset				
write(that,address	bWOMEneth)e bus write the address, assign that with bus's data from bitOffset				
on-	Call doThat when a write transaction occur on address				
Write(address)(do	Write(address)(do That)				
on-	Call doThat when a read transaction occur on address				
Read(address)(do	Read(address)(doThat)				
nonStop-	Permanently assign that by the bus write data from bitOffset				
Write(that,bitOffset)					

By using them the BusSlaveFactory should also be able to provide many utilities:

Name	Re-	Description
	turn	
readAnd-		Make that readable and writable at address and placed at bitOffset in the word
Write(that,addre	ss,bitOffs	et)
readMulti-		
Word(that,addre	ss)	Create the memory mapping to read that from 'address'.:
		If that is bigger than one word it extends the register on followings addresses
writeMulti-		
Word(that,addre	ss)	Create the memory mapping to write that at 'address'.:
		If that is bigger than one word it extends the register on followings addresses
cre-	T	Create a write only register of type dataType at address and placed at bitOffset in
ateWriteOnly(da	taType,ac	
createRead-	T	Create a read write register of type dataType at address and placed at bitOffset in
Write(dataType,		
create-	Flow[T	Create a writable Flow register of type dataType at address and placed at bitOffset
AndDrive-		in the word
Flow(dataType,a		·
	s,bitOffs	etDrive that with a register writable at address placed at bitOffset in the word
driveAn-		Drive that with a register writable and readable at address placed at bitOffset in
dRead(that,addre	ss,bitOff	
drive-		Emit on that a transaction when a write happen at address by using data placed at
Flow(that,addres	s,bitOffs	et b itOffset in the word
readStreamNonI	Blocking(Read that and consume the transaction when a read happen at address. valid <= validBitOffset bit
validBitOffset,pa	ayloadBit	Operation <= payloadBitOffset+widthOf(payload) downto payloadBitOffset
		I nstanciate an internal register which at each cycle do :
doBitsAccumula	tionAnd(reg := reg that
(that,address,bit	Offset)	Then when a read occur, the register is cleared. This register is readable at address and placed at bitOffset in the word

About BusSlaveFactoryDelayed, it's still an abstract class, but it capture each primitives (BusSlaveFactoryElement) calls into a data-model. This datamodel is one list that contain all primitives, but also a HashMap that link each address used to a list of primitives that are using it. Then when they all are collected (at the end of the current component), it do a callback that should be implemented by classes that extends it. The implementation of this callback should implement the hardware corresponding to all primitives collected.

15.1.3 Implementation

BusSlaveFactory

Let's describe primitives abstract function:

Then let's operate the magic to implement all utile based on them:

```
trait BusSlaveFactory extends Area{
 //...
 def readAndWrite(that : Data,
                   address: BigInt,
                   bitOffset : Int = 0): Unit = {
   write(that,address,bitOffset)
   read(that,address,bitOffset)
 }
 def drive(that : Data,
            address : BigInt,
            bitOffset : Int = 0) : Unit = {
   val reg = Reg(that)
   write(reg,address,bitOffset)
   that := reg
 }
 def driveAndRead(that : Data,
                   address : BigInt,
                   bitOffset : Int = 0) : Unit = {
   val reg = Reg(that)
   write(reg,address,bitOffset)
   read(reg,address,bitOffset)
   that := reg
```

```
}
def driveFlow[T <: Data](that : Flow[T],</pre>
                          address: BigInt,
                          bitOffset : Int = 0) : Unit = {
 that.valid := False
 onWrite(address){
    that.valid := True
 nonStopWrite(that.payload,bitOffset)
}
def createReadWrite[T <: Data](dataType: T,</pre>
                                address: BigInt,
                                bitOffset : Int = 0): T = {
 val reg = Reg(dataType)
 write(reg,address,bitOffset)
 read(reg,address,bitOffset)
}
def createAndDriveFlow[T <: Data](dataType : T,</pre>
                                address: BigInt,
                                bitOffset : Int = 0) : Flow[T] = {
 val flow = Flow(dataType)
 driveFlow(flow,address,bitOffset)
  flow
}
def doBitsAccumulationAndClearOnRead(
                                          that: Bits,
                                          address : BigInt,
                                         bitOffset : Int = 0): Unit = {
 assert(that.getWidth <= busDataWidth)</pre>
 val reg = Reg(that)
 reg := reg | that
 read(reg,address,bitOffset)
 onRead(address){
    reg := that
 }
}
def readStreamNonBlocking[T <: Data] (that : Stream[T],</pre>
                                        address: BigInt,
                                       validBitOffset : Int,
                                       payloadBitOffset : Int) : Unit = {
 that.ready := False
 onRead(address){
    that.ready := True
 read(that.valid ,address,validBitOffset)
 read(that.payload,address,payloadBitOffset)
```

```
def readMultiWord(that : Data,
                address : BigInt) : Unit = {
   val wordCount = (widthOf(that) - 1) / busDataWidth + 1
   val valueBits = that.asBits.resize(wordCount*busDataWidth)
   val words = (0 until wordCount).map(id => valueBits(id * busDataWidth , busDataWidth__
→bit))
    for (wordId <- (0 until wordCount)) {</pre>
      read(words(wordId), address + wordId*busDataWidth/8)
  }
  def writeMultiWord(that : Data,
                 address : BigInt) : Unit = {
   val wordCount = (widthOf(that) - 1) / busDataWidth + 1
   for (wordId <- (0 until wordCount)) {</pre>
      write(
        that = new DataWrapper{
          override def getBitsWidth: Int =
            Math.min(busDataWidth, widthOf(that) - wordId * busDataWidth)
          override def assignFromBits(value : Bits): Unit = {
            that.assignFromBits(
              bits
                     = value.resized,
              offset = wordId * busDataWidth,
              bitCount = getBitsWidth bits)
        },address = address + wordId * busDataWidth / 8,0
   }
 }
}
```

BusSlaveFactoryDelayed

Let's implement classes that will be used to store primitives:

Then let's implement the BusSlaveFactoryDelayed itself:

```
trait BusSlaveFactoryDelayed extends BusSlaveFactory{
 // elements is an array of all BusSlaveFactoryElement requested
 val elements = ArrayBuffer[BusSlaveFactoryElement]()
 // elementsPerAddress is more structured than elements, it group all.
→BusSlaveFactoryElement per requested addresses
 val elementsPerAddress = collection.mutable.HashMap[BigInt.
→ArrayBuffer[BusSlaveFactoryElement]]()
 private def addAddressableElement(e : BusSlaveFactoryElement,address : BigInt) = {
   elements += e
   elementsPerAddress.getOrElseUpdate(address, ArrayBuffer[BusSlaveFactoryElement]())_
+= e
 }
 override def read(that : Data,
          address : BigInt,
          bitOffset : Int = 0) : Unit = {
   assert(bitOffset + that.getBitsWidth <= busDataWidth)</pre>
   addAddressableElement(BusSlaveFactoryRead(that,address,bitOffset),address)
 }
 override def write(that : Data,
            address : BigInt,
            bitOffset : Int = 0) : Unit = {
   assert(bitOffset + that.getBitsWidth <= busDataWidth)</pre>
    addAddressableElement(BusSlaveFactoryWrite(that,address,bitOffset),address)
 def onWrite(address : BigInt)(doThat : => Unit) : Unit = {
   addAddressableElement(BusSlaveFactoryOnWrite(address,() => doThat),address)
 def onRead (address : BigInt)(doThat : => Unit) : Unit = {
   addAddressableElement(BusSlaveFactoryOnRead(address,() => doThat),address)
```

(continues on next page)

244

AvalonMMSlaveFactory

First let's implement the companion object that provide the compatible AvalonMM configuration object that correspond to the following table :

Pin name	Type	Description
read	Bool	High one cycle to produce a read request
write	Bool	High one cycle to produce a write request
address	UInt(addressWidth bits)	Byte granularity but word aligned
writeData	Bits(dataWidth bits)	
readDataValid	Bool	High to respond a read command
readData	Bool(dataWidth bits)	Valid when readDataValid is high

Then, let's implement the AvalonMMSlaveFactory itself.

```
bus.readDataValid := readAtRsp.valid
 bus.readData := readAtRsp.payload
 readAtCmd.valid := bus.read
 readAtCmd.payload := 0
 override def build(): Unit = {
   for(element <- elements) element match {</pre>
     case element : BusSlaveFactoryNonStopWrite =>
       element.that.assignFromBits(bus.writeData(element.bitOffset, element.that.

    getBitsWidth bits))
     case _ =>
   for((address, jobs) <- elementsPerAddress){</pre>
     when(bus.address === address){
       when(bus.write){
          for(element <- jobs) element match{</pre>
            case element : BusSlaveFactoryWrite => {
              element.that.assignFromBits(bus.writeData(element.bitOffset, element.that.
→getBitsWidth bits))
            case element : BusSlaveFactoryOnWrite => element.doThat()
            case _ =>
         }
       }
       when(bus.read){
          for(element <- jobs) element match{</pre>
            case element : BusSlaveFactoryRead => {
              readAtCmd.payload(element.bitOffset, element.that.getBitsWidth bits) :=__
⇒element.that.asBits
            case element : BusSlaveFactoryOnRead => element.doThat()
            case _ =>
       }
     }
   }
 }
 override def busDataWidth: Int = bus.c.dataWidth
```

15.1.4 Conclusion

That's all, you can check one example that use this Apb3SlaveFactory to create an Apb3UartCtrl there.

If you want to add the support of a new memory bus, it's very simple you just need to implement another variation of the BusSlaveFactoryDelayed trait. The Apb3SlaveFactory is probably a good starting point:D

15.2 How to HACK this documentation

If you want to add your page to this documentation you need to add your source file in the appropriate section. I opted to create a structure that resample the various section of the documentation, this is not strictly necessary, but for clarity sake, highly encourage.

This documentation uses a recursive index tree: every folder have a special index.rst files that tell sphinx witch file, and in what order put it in the documentation tree.

15.2.1 Title convention


Sphinx is very smart, the document structure is deduced from how you use non alphanumerical characters (like: = - ` : ' " ~ ^ _ * + # < >), you only need to be consistent. Still, for consistency sakes we use this progression:

- = over and underline for section titles
- = underline for titles
- - underline for paragraph
- ^ for subparagraph

15.2.2 Wavedrom integration

This documentation makes use of the sphinxcontrib-wavedrom plugin, So you can specify a timing diagram, or a register description with the WaveJSON syntax like so:


and you get:

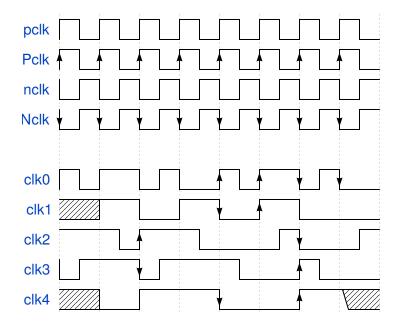

Note: if you want the Wavedrom diagram to be present in the pdf export, you need to use the "non relaxed" JSON dialect. long story short, no javascript code and use " arround key value (Eg. "name").

you can describe register mapping with the same syntax:

```
{"reg":[
    {"bits": 8, "name": "things"},
    {"bits": 2, "name": "stuff" },
    {"bits": 6},
],
"config": { "bits":16,"lanes":1 }
}
15 10 9 8 7
```



15.2.3 New section

if you want to add a new section you need to specify in the top index, the index file of the new section. I suggest to name the folder like the section name, but is not required; Sphinx will take the name of the section from the title of the index file.

example

I want to document the new feature in SpinalHDL, and I want to create a section for it; let's call it Cheese So I need to create a folder named Cheese (name is not important), and in it create a index file like:

```
Cheese
=====
.. toctree::
:glob:
introduction
*
```

Note: The .. toctree:: directive accept some parameters, in this case :glob: makes so you can use the * to include all the remaining files.

Note: The file path is relative to the index file, if you want to specify the absolute path, you need to prepend /

Note: introduction.rst will be always the first on the list because it's specified in the index file. Other files will be included in alphabetical order.

Now I can add the introduction.rst and other files like cheddar.rst, stilton.rst, etc.

The only thing remaining to do is to add cheese to the top index file like so:

```
Welcome to SpinalHDL's documentation!
.. toctree::
   :maxdepth: 2
   :titlesonly:
  rst/About SpinalHDL/index
  rst/Getting Started/index
  rst/Data types/index
  rst/Structuring/index
  rst/Semantic/index
  rst/Sequential logic/index
  rst/Design errors/index
  rst/Other language features/index
  rst/Libraries/index
  rst/Simulation/index
  rst/Examples/index
  rst/Legacy/index
  rst/Developers area/index
  rst/Cheese/index
```


that's it, now you can add all you want in cheese and all pages will show up in the documentation.

15.3 Types

15.3.1 Introduction

The language provides 5 base types and 2 composite types that can be used.

- Base types: Bool, Bits, UInt for unsigned integers, SInt for signed integers, Enum.
- Composite types : Bundle, Vec.

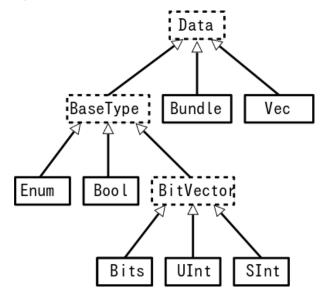

Those types and their usage (with examples) are explained hereafter.

About the fixed point support it's documented there

15.3.2 Bool

This is the standard boolean type that correspond to a bit.

Declaration

The syntax to declare such as value is as follows:

Syntax	Description	Return
Bool or Bool()	Create a Bool	Bool
True	Create a Bool assigned with true	Bool
False	Create a Bool assigned with false	Bool
Bool(value : Boolean)	Create a Bool assigned with a Scala Boolean	Bool

Using this type into SpinalHDL yields:

Operators

The following operators are available for the Bool type

Operator	Description	Return
		type
!x	Logical NOT	Bool
	Logical AND	Bool
x && y		
x & y		
	Logical OR	Bool
x y		
x y		
x ^ y	Logical XOR	Bool
x.set[()]	Set x to True	
x.clear[()]	Set x to False	
x.rise[()]	Return True when x was low at the last cycle and is now high	Bool
x.rise(initAt : Bool)	Same as x.rise but with a reset value	Bool
x.fall[()]	Return True when x was high at the last cycle and is now low	Bool
x.fall(initAt : Bool)	Same as x.fall but with a reset value	Bool
x.setWhen(cond)	Set x when cond is True	Bool
x.clearWhen(cond)	Clear x when cond is True	Bool

15.3.3 The BitVector family - (Bits, UInt, SInt)

BitVector is a family of types for storing multiple bits of information in a single value. This type has three subtypes that can be used to model different behaviours:

Bits do not convey any sign information whereas the UInt (unsigned integer) and SInt (signed integer) provide the required operations to compute correct results if signed / unsigned arithmetics is used.

Declaration syntax

Syntax	Description	Return	
Bits/UInt/SInt [()]	Create a BitVector, bits count is inferred	Bits/UInt	/SInt
Bits/UInt/SInt(x bits)	Create a BitVector with x bits	Bits/UInt	/SInt
B/U/S(value : Int[,width : BitCount])	Create a BitVector assigned with 'value'	Bits/UInt	/SInt
B/U/S"[[size']base]value"	Create a BitVector assigned with 'value'	Bits/UInt	/SInt
B/U/S([x bits], element,)	Create a BitVector assigned with the value speci-	Bits/UInt	/SInt
	fied by elements (see bellow table)		

Elements could be defined as follows:

Element syntax	Description
x : Int -> y : Boolean/Bool	Set bit x with y
x : Range -> y : Boolean/Bool	Set each bits in range x with y
x : Range -> y : T	Set bits in range x with y
x : Range -> y : String	
	Set bits in range x with y
	The string format follow same rules than B/U/S"xyz" one
x : Range -> y : T	Set bits in range x with y
default -> y : Boolean/Bool	
	Set all unconnected bits with the y value. This feature could only be use to do assignements without the U/B/S prefix

You can define a Range values

Range syntax	Description	Width
(x downto y)	[x:y] x >= y	x-y+1
(x to y)	$[x:y] x \le y$	y-x+1
(x until y)	[x:y[x < y	у-х

```
val myUInt = UInt(8 bits)
myUInt := U(2,8 bits)
myUInt := U(2)
myUInt := U"0000_0101" // Base per default is binary => 5
myUInt := U"h1A"
                         // Base could be x (base 16)
                         //
                                         h (base 16)
                                         d (base 10)
                                          o (base 8)
                         //
                         //
                                           b (base 2)
myUInt := U"8'h1A"
myUInt := 2
                        // You can use scala Int as literal value
val myBool := myUInt === U(7 \rightarrow true, (6 downto 0) \rightarrow false)
val myBool := myUInt === U(myUInt.range -> true)
//For assignement purposes, you can omit the B/U/S, which also alow the use of the
→[default -> ???] feature
myUInt := (default -> true)
                                                    //Assign myUInt with "11111111"
myUInt := (7 -> true, default -> false)
myIInt := (4 default -> false)
myUInt := (myUInt.range -> true)
                                                    //Assign myUInt with "11111111"
                                                   //Assign myUInt with "10000000"
myUInt := ((4 downto 1) -> true,default -> false) //Assign myUInt with "00011110"
```

Operators

Operator	Description	Return
~X	Bitwise NOT	T(w(x) bits)
x & y	Bitwise AND	$T(\max(w(x), w(y) \text{ bits})$
x y	Bitwise OR	$T(\max(w(x), w(y) \text{ bits})$
x ^ y	Bitwise XOR	$T(\max(w(x), w(y) \text{ bits})$
x(y)	Readbit, y: Int/UInt	Bool
x(hi,lo)	Read bitfield, hi: Int, lo: Int	T(hi-lo+1 bits)
x(offset,width)	Read bitfield, offset: UInt, width: Int	T(width bits)
x(y) := z	Assign bits, y: Int/UInt	Bool
x(hi,lo) := z	Assign bitfield, hi: Int, lo: Int	T(hi-lo+1 bits)
x(offset,width) := z	Assign bitfield, offset: UInt, width: Int	T(width bits)
x.msb	Return the most significant bit	Bool
x.lsb	Return the least significant bit	Bool
x.range	Return the range (x.high downto 0)	Range
x.high	Return the upper bound of the type x	Int
x.xorR	XOR all bits of x	Bool
x.orR	OR all bits of x	Bool
x.andR	AND all bits of x	Bool
x.clearAll[()]	Clear all bits	T
x.setAll[()]	Set all bits	T
x.setAllTo(value : Boolean)	Set all bits to the given Boolean value	
x.setAllTo(value : Bool)	Set all bits to the given Bool value	
x.asBools	Cast into a array of Bool	Vec(Bool,width(x))

Masked comparison

Some time you need to check equality between a BitVector and a bits constant that contain hole (don't care values).

There is an example about how to do that :

```
val myBits = Bits(8 bits)
val itMatch = myBits === M"00--10--"
```

15.3.4 Bits

Operator	Description	Return
x >> y	Logical shift right, y: Int	T(w(x) - y bits)
x >> y	Logical shift right, y: UInt	T(w(x) bits)
x << y	Logical shift left, y: Int	T(w(x) + y bits)
x << y	Logical shift left, y: UInt	T(w(x) + max(y) bits)
x.rotateLeft(y)	Logical left rotation, y: UInt	T(w(x))
x.resize(y)	Return a resized copy of x, filled with zero, y: Int	T(y bits)

15.3.5 UInt, SInt

Operator	Description	Return
x + y	Addition	$T(\max(w(x), w(y) \text{ bits})$
x - y	Subtraction	$T(\max(w(x), w(y) \text{ bits})$
x * y	Multiplication	T(w(x) + w(y) bits)
x > y	Greater than	Bool
x >= y	Greater than or equal	Bool
x < y	Less than	Bool
x <= y	Less than or equal	Bool
x >> y	Arithmetic shift right, y: Int	T(w(x) - y bits)
x >> y	Arithmetic shift right, y: UInt	T(w(x) bits)
x << y	Arithmetic shift left, y: Int	T(w(x) + y bits)
x << y	Arithmetic shift left, y: UInt	T(w(x) + max(y) bits)
x.resize(y)	Return an arithmetic resized copy of x, y: Int	T(y bits)

15.3.6 Bool, Bits, Ulnt, SInt

Operator	Description	Return
x.asBits	Binary cast in Bits	Bits(w(x) bits)
x.asUInt	Binary cast in UInt	UInt(w(x) bits)
x.asSInt	Binary cast in SInt	SInt(w(x) bits)

15.3.7 Vec

Declaration	Description
Vec(type : Data, size : Int)	Create a vector of size time the given type
Vec(x,y,)	
	Create a vector where indexes point to given elements. this construct support mixed element width

Operator	Description	Return
x(y)	Read element y, y: Int/UInt	T
x(y) := z	Assign element y with z, y: Int/UInt	

(continues on next page)

(continued from previous page)

```
}
myVecOf_xyz_ref(1) := 3  //Assign y with the value 3
```

15.3.8 **Bundle**

Bundles could be used to model data structure line buses and interfaces.

All attributes that extends Data (Bool, Bits, UInt, ...) that are defined inside the bundle are considered as part of the bundle.

Simple example (RGB/VGA)

The following example show an RGB bundle definition with some internal function.

```
case class RGB(channelWidth : Int) extends Bundle{
  val red = UInt(channelWidth bits)
  val green = UInt(channelWidth bits)
  val blue = UInt(channelWidth bits)

def isBlack : Bool = red === 0 && green === 0 && blue === 0
  def isWhite : Bool = {
    val max = U((channelWidth-1 downto 0) -> true)
    return red === max && green === max && blue === max
}
```

Then you can also incorporate a Bundle inside Bundle as deeply as you want:

```
case class VGA(channelWidth : Int) extends Bundle{
  val hsync = Bool
  val vsync = Bool
  val color = RGB(channelWidth)
}
```

And finaly instanciate your Bundles inside the hardware:

If you want to specify your bundle as an input or an output of a Component, you have to do it by the following way:

Interface example (APB)

If you want to define an interface, let's imagine an APB interface, you can also use bundles:

```
class APB(addressWidth: Int.
          dataWidth: Int,
          selWidth: Int,
          useSlaveError : Boolean) extends Bundle {
                 = UInt(addressWidth bit)
  val PADDR
  val PSEL
                 = Bits(selWidth bits)
  val PENABLE
                 = Bool
                = Bool
  val PREADY
  val PWRITE
                 = Bool
              = Bits(datawidth bit)
= Bits(dataWidth bit)
  val PWDATA
  val PRDATA
 val PSLVERROR = if(useSlaveError) Bool else null //This wire is created only when.
→useSlaveError is true
}
// Example of usage :
val bus = APB(addressWidth = 8,
              dataWidth = 32,
              selWidth = 4.
              useSlaveError = false)
```

One good practice is to group all construction parameters inside a configuration class. This could make the parametrization much easier later in your components, especially if you have to reuse the same configuration at multiple places. Also if one time you need to add another construction parameter, you will only have to add it into the configuration class and everywhere this one is instantiated:

```
case class APBConfig(addressWidth: Int,
                      dataWidth: Int,
                      selWidth : Int,
                      useSlaveError : Boolean)
class APB(val config: APBConfig) extends Bundle { //[val] config, make the_
→configuration public
  val PADDR
                 = UInt(config.addressWidth bit)
                 = Bits(config.selWidth bits)
  val PSEL
  val PENABLE = Bool
  val PREADY
                 = Bool
  val PWRITE
                 = Bool
 val PWDATA = Bits(config.dataWidth bit)
val PRDATA = Bits(config.dataWidth bit)
 val PRDATA
                 = Bits(config.dataWidth bit)
  val PSLVERROR = if(config.useSlaveError) Bool else null
}
// Example of usage
val apbConfig = APBConfig(addressWidth = 8,dataWidth = 32,selWidth = 4,useSlaveError = __
→false)
val busA = APB(apbConfig)
val busB = APB(apbConfig)
```

Then at some points, you will probably need to use the APB bus as master or as slave interface of some components. To do that you can define some functions :

```
import spinal.core._
case class APBConfig(addressWidth: Int,
                     dataWidth: Int,
                     selWidth: Int,
                     useSlaveError : Boolean)
class APB(val config: APBConfig) extends Bundle {
                 = UInt(config.addressWidth bit)
  val PADDR
  val PSEL
                 = Bits(config.selWidth bits)
  val PENABLE
                = Bool
                = Bool
  val PREADY
  val PWRITE
                = Bool
                = Bits(config.dataWidth bit)
  val PWDATA
  val PRDATA
                = Bits(config.dataWidth bit)
  val PSLVERROR = if(config.useSlaveError) Bool else null
  def asMaster(): this.type = {
   out(PADDR, PSEL, PENABLE, PWRITE, PWDATA)
    in(PREADY.PRDATA)
   if(config.useSlaveError) in(PSLVERROR)
    this
  }
  def asSlave(): this.type = this.asMaster().flip() //Flip reverse all in out_
⇔configuration.
// Example of usage
val apbConfig = APBConfig(addressWidth = 8,dataWidth = 32,selWidth = 4,useSlaveError = __

false)
val io = new Bundle{
 val masterBus = APB(apbConfig).asMaster()
  val slaveBus = APB(apbConfig).asSlave()
```

Then to make that better, the spinal.lib integrate a small master slave utile named IMasterSlave. When a bundle extends IMasterSlave, it should implement/override the asMaster function. It give you the ability to setup a master or a slave interface by a smoother way:

```
val apbConfig = APBConfig(addressWidth = 8,dataWidth = 32,selWidth = 4,useSlaveError = false)
val io = new Bundle{
  val masterBus = master(apbConfig)
  val slaveBus = slave(apbConfig)
}
```

There is an example of an APB bus that implement this IMasterSlave:

```
//You need to import spinal.lib._ to use IMasterSlave
import spinal.core._

(continues or gout received)
```

(continues on next page)

(continued from previous page)

```
import spinal.lib._
case class APBConfig(addressWidth: Int,
                     dataWidth: Int,
                     selWidth : Int,
                     useSlaveError : Boolean)
class APB(val config: APBConfig) extends Bundle with IMasterSlave {
              = UInt(addressWidth bit)
 val PADDR
  val PSEL
                 = Bits(selWidth bits)
 val PENABLE = Bool
 val PREADY = Bool
 val PWRITE = Bool
 val PWDATA = Bits(dataWidth bit)
val PRDATA = Bits(dataWidth bit)
 val PSLVERROR = if(useSlaveError) Bool else null //This wire is created only when.
→useSlaveError is true
 override def asMaster() : Unit = {
    out(PADDR, PSEL, PENABLE, PWRITE, PWDATA)
    in(PREADY,PRDATA)
    if(useSlaveError) in(PSLVERROR)
  //The asSlave is by default the flipped version of asMaster.
```

15.3.9 Enum

SpinalHDL support enumeration with some encodings:

En-	Bit	Description
cod-	width	
ing		
native		Use the VHDL enumeration system, this is the default encoding
bina-	log2Up(state Binst to store states in declaration order (value from 0 to n-1)
rySe-		
quan-		
cial		
bina-	state-	Use Bits to store state. Each bit correspond to one state
ry-	Count	
One-		
Hot		

Define a enumeration type:

Instantiate a enumeration signal and assign it:

```
val stateNext = UartCtrlTxState() // Or UartCtrlTxState(encoding=encodingOfYouChoice)
stateNext := UartCtrlTxState.sIdle

//You can also import the enumeration to have the visibility on its elements
import UartCtrlTxState._
stateNext := sIdle
```

15.3.10 Data (Bool, Bits, Ulnt, Slnt, Enum, Bundle, Vec)

All hardware types extends the Data class, which mean that all of them provide following operators:

Operator	Description	Return
x === y	Equality	Bool
x =/= y	Inequality	Bool
x.getWidth	Return bitcount	Int
x ## y	Concatenate, x->high, y->low	Bits(width(x) + width(y))
		bits)
Cat(x)	Concatenate list, first element on lsb, x : Ar-	Bits(sumOfWidth bits)
	ray[Data]	
Mux(cond,x,y)	if cond? x: y	$T(\max(w(x), w(y) \text{ bits})$
x.asBits	Cast in Bits	Bits(width(x) bits)
x.assignFromBits(bits)	Assign from Bits	
x.assignFromBits(bits,hi,lo)	Assign bitfield, hi: Int, lo: Int	T(hi-lo+1 bits)
x.assignFromBits(bits,offset,width)Assign bitfield, offset: UInt, width: Int		T(width bits)
x.getZero	Get equivalent type assigned with zero	T

15.3.11 Literals as signal declaration

Literals are generally use as a constant value. But you can also use them to do two things in a single one:

• Define a wire which is assigned with a constant value

There is an example:

WELCOME TO SPINALHDL'S DOCUMENTATION!

16.1 Site purpose and structure

This site presents the SpinalHDL language and how to use it on concrete examples.

If you are learning the language from scratch, this presentation is probably a good starting point.

16.2 What is SpinalHDL?

SpinalHDL is an open source high-level hardware description language. It can be used as an alternative to VHDL or Verilog and has several advantages over them.

Also, SpinalHDL is not an HLS approch. Its goal is not to push something abstract into flip-flops and gates, but by using simple elements (flip-flops, gates, if / case statments) create new a abstraction level and help the designer to reuse their code and not write the same thing over and over again.

Note: SpinalHDL is *fully interoperable* with standard VHDL/Verilog-based EDA tools (simulators and synthetizers) as the output generated by the toolchain could be VHDL or Verilog. It also enables mixed designs where SpinalHDL components inter-operate with VHDL or Verilog IPs.

16.2.1 Advantages of using SpinalHDL over VHDL / Verilog

As SpinalHDL is based on a high-level language, it provides several advantages to improve your hardware coding:

- 1. No more endless wiring Create and connect complex buses like AXI in one single line.
- 2. **Evolving capabilities** Create your own bus definitions and abstraction layers.
- 3. **Reduce code size** By a high factor, especially for wiring. This enables you to have a better overview of your code base, increase your productivity and create fewer headaches.
- 4. **Free and user friendly IDE** Thanks to Scala tools for auto-completion, error highlighting, navigation shortcuts, and many others.
- 5. **Powerful and easy type conversions** Bidirectional translation between any data type and bits. Useful when loading a complex data structure from a CPU interface.
- 6. **Loop detection** Tools check that there are no combinatorial loops / latches.
- 7. Clock domain safety The tools inform you that there are no unintentional clock domain crossings.

Generic design - There are no restrictions to the genericity of your hardware description by using Scala constructs.

16.2.2 License

SpinalHDL uses two licenses, one for spinal.core, and one for spinal.lib.

spinal.core (the compiler) is under the LGPL license, which could be summarized with following statements:

- You can make money with your SpinalHDL description and its generated RTL.
- You don't have to share your SpinalHDL description and its generated RTL.
- There are no fees and no royalties.
- If your make improvements to the SpinalHDL core, please share your modifications to make the tool better for everybody.

spinal.lib (a general purpose library of components/tools/interfaces) is under the permissive MIT license.

16.3 Getting started

Want to try it for yourself? Then jump to the getting started section and have fun!

16.4 Links

SpinalHDL repository:

https://github.com/SpinalHDL/SpinalHDL

A short show case (PDF):

http://spinalhdl.github.io/SpinalDoc/motivation/

Presentation of the language (PDF):

http://spinalhdl.github.io/SpinalDoc/presentation/

SBT base project:

https://github.com/SpinalHDL/SpinalTemplateSbt

Workshop:

https://github.com/SpinalHDL/SpinalWorkshop

VexRiscy CPU and SoC:

https://github.com/SpinalHDL/VexRiscv

StackOverflow (tag: SpinalHDL):

StackOverflow

Google group:

https://groups.google.com/forum/#! forum/spinalhdl-hardware-description-language



16.4. Links 263