# Erriez DS1307 I2C RTC library for Arduino 1.0.0

Generated by Doxygen 1.8.13

## **Contents**

1	DS1	307 hig	h precisio	on I2C RTC library for Arduino	1
2	Clas	s Index			5
	2.1	Class	List		5
3	File	Index			7
	3.1	File Lis	st		7
4	Clas	s Docu	mentation	1	9
	4.1	Erriez	OS1307 CI	ass Reference	9
		4.1.1	Detailed	Description	10
		4.1.2	Member	Function Documentation	10
			4.1.2.1	bcdToDec()	10
			4.1.2.2	begin()	10
			4.1.2.3	decToBcd()	11
			4.1.2.4	getEpoch()	11
			4.1.2.5	getTime()	11
			4.1.2.6	isOscillatorStopped()	12
			4.1.2.7	oscillatorEnable()	12
			4.1.2.8	read()	13
			4.1.2.9	readBuffer()	13
			4.1.2.10	setDateTime()	13
			4.1.2.11	setEpoch()	14
				setSquareWave()	14
				setTime()	
				write()	
				writeBuffer()	

ii CONTENTS

5	File	Docume	entation									17
	5.1	src/Erri	iezDS1307	cpp File Refe	rence		 	 	 	 	 	 17
		5.1.1	Detailed D	escription .			 	 	 	 	 	 17
	5.2	src/Erri	iezDS1307	h File Referer	nce		 	 	 	 	 	 18
		5.2.1	Detailed D	escription .			 	 	 	 	 	 19
		5.2.2	Macro De	finition Docum	entation		 	 	 	 	 	 20
			5.2.2.1	DS1307_NUN	/_REGS		 	 	 	 	 	 20
			5.2.2.2	DS1307_REC	G_SECON	IDS	 	 	 	 	 	 20
			5.2.2.3	DS1307_SEC	C_CH		 	 	 	 	 	 20
		5.2.3	Enumerat	on Type Docu	mentation	١	 	 	 	 	 	 20
			5.2.3.1	SquareWave			 	 	 	 	 	 20
Inc	dex											23

## **Chapter 1**

## DS1307 high precision I2C RTC library for Arduino

This is a DS1307 I2C RTC library for Arduino.

## **Library features**

- libc <time.h> compatible
- Read/write date/time struct tm
- Set/get Unix epoch UTC time\_t
- Set/get time (hours, minutes, seconds)
- · Set date and time
- Control SQW signal (disable / 1Hz / 4096Hz / 8192Hz / 32768Hz)
- · Full RTC register access

## Hardware

Any Arduino hardware with a TWI interface and  $\mbox{Wire.h}$  support.

#### **Pins**

Pins board - DS1307	VCC	GND	SDA	SCL	SQW
Arduino UNO (ATMega328 boards)	5V	GND	A4	A5	D2 (INT0)
Arduino Mega2560	5V	GND	D20	D21	D2 (INT4)
Arduino Leonardo	5V	GND	D2	D3	D7 (INT6)
Arduino DUE (ATSAM3X8E)	3V3	GND	20	21	2
ESP8266	3V3	GND	GPIO4 (D2)	GPIO5 (D1)	GPIO0 (D3)
ESP32	3V3	GND	GPIO21	GPIO22	GPIO0

Note: Tested ESP8266 / ESP32 boards:

- ESP8266 boards: ESP12F / WeMos D1 & R2 / Node MCU v2 / v3
- ESP32 boards: WeMos LOLIN32 / LOLIN D32

Other unlisted MCU's may work, but are not tested.

## **Examples**

Arduino IDE | Examples | Erriez DS1307 RTC:

- ErriezDS1307SetDateTime Set date time.
- ErriezDS1307Read Read example.
- ErriezDS1307Test RTC test.

#### **Documentation**

- Doxygen online HTML
- Doxygen PDF
- DS1307 datasheet

## **Usage**

#### Initialization

```
{c++}
#include <Wire.h>
#include <ErriezDS1307.h>

// Create RTC object
ErriezDS1307 ds1307;

void setup()
{
    // Initialize I2C
    Wire.begin();
    Wire.setClock(100000);

    // Initialize RTC
    while (!ds1307.begin()) {
        Serial.println(F("Error: DS1307 not found"));
        delay(3000);
    }

    // Set square wave out pin
    // SquareWaveDisable, SquareWave1Hz, SquareWave4096Hz, SquareWave8192Hz, SquareWave32768Hz
    ds1307.setSquareWave(SquareWaveDisable);
}
```

#### Check oscillator status at startup

```
{c++}
// Check oscillator status
if (ds1307.isOscillatorStopped()) {
    // Error: DS1307 RTC oscillator stopped. Date/time cannot be trusted.
    // Set new date/time before reading date/time.
}
```

#### Set time

```
{c++}
// Write time to RTC
if (!ds1307.setTime(12, 0, 0)) {
   // Error: RTC write failed
}
```

#### Get time

#### Set date time

```
{c++}
// Write RTC date/time: 13:45:09  31 December 2019  2=Tuesday
if (!ds1307.setDateTime(13, 45, 9, 31, 12, 2019, 2) {
    // Error: RTC write failed
}
```

#### Write date/time struct tm

```
{c++}
struct tm dt = {0};
dt.tm_hour = 12;
dt.tm_min = 34;
dt.tm_sec = 56;
dt.tm_mday = 29;
dt.tm_mon = 1; // 0=January
dt.tm_year = 2020-1900;
dt.tm_wday = 6; // 0=Sunday

if (!ds1307.write(&dt)) {
    // Error: RTC Read failed
```

## Read date/time struct tm

```
{c++}
struct tm dt = {0};

// Read RTC date/time
if (!ds1307.read(&dt)) {
    // Error: RTC read failed
}
```

## **Read Unix Epoch UTC**

## **Square Wave Out (SQW)**

## Library dependencies

• Wire.h

## Library installation

Please refer to the Wiki page.

## Other Arduino Libraries and Sketches from Erriez

• Erriez Libraries and Sketches

## **Chapter 2**

## **Class Index**

21	Class	l iet

	Here are the classes.	structs.	unions	and interfaces	with	brief	description
--	-----------------------	----------	--------	----------------	------	-------	-------------

ErriezDS1307																			
DS1307 RTC class			 											 					9

6 Class Index

## **Chapter 3**

## File Index

## 3.1 File List

Here is a list of all documented files with brief descriptions:

src/ErriezDS1307.cpp	
DS1307 RTC library for Arduino	 17
src/ErriezDS1307.h	
DS1307 RTC library for Arduino	 18

8 File Index

## **Chapter 4**

## **Class Documentation**

## 4.1 ErriezDS1307 Class Reference

```
DS1307 RTC class.
```

```
#include <ErriezDS1307.h>
```

#### **Public Member Functions**

· bool begin ()

Initialize and detect DS1307 RTC.

• bool oscillatorEnable (bool enable)

Enable or disable oscillator (Clock Halt bit in seconds register).

• bool isOscillatorStopped ()

Read RTC CH (Clock Halt) from seconds register.

time\_t getEpoch ()

Read Unix UTC epoch time\_t.

bool setEpoch (time\_t t)

Write Unix epoch UTC time to RTC.

bool read (struct tm \*dt)

Read date and time from RTC.

bool write (const struct tm \*dt)

Write date and time to RTC.

bool setTime (uint8\_t hour, uint8\_t min, uint8\_t sec)

Write time to RTC.

• bool getTime (uint8\_t \*hour, uint8\_t \*min, uint8\_t \*sec)

Read time from RTC.

bool setDateTime (uint8\_t hour, uint8\_t min, uint8\_t sec, uint8\_t mday, uint8\_t mon, uint16\_t year, uint8\_t wday)

Set date time.

• bool setSquareWave (SquareWave squareWave)

Configure SQW (Square Wave) output pin.

• uint8\_t bcdToDec (uint8\_t bcd)

BCD to decimal conversion.

• uint8\_t decToBcd (uint8\_t dec)

Decimal to BCD conversion.

• bool readBuffer (uint8\_t reg, void \*buffer, uint8\_t len)

Read buffer from RTC.

bool writeBuffer (uint8\_t reg, void \*buffer, uint8\_t len)

Write buffer to RTC.

10 Class Documentation

## 4.1.1 Detailed Description

DS1307 RTC class.

Definition at line 80 of file ErriezDS1307.h.

## 4.1.2 Member Function Documentation

## 4.1.2.1 bcdToDec()

BCD to decimal conversion.

#### **Parameters**

#### Returns

Decimal value.

Definition at line 384 of file ErriezDS1307.cpp.

## 4.1.2.2 begin()

```
bool ErriezDS1307::begin ( )
```

Initialize and detect DS1307 RTC.

Call this function from setup().

#### Return values

true	RTC detected.
false	RTC not detected.

Definition at line 52 of file ErriezDS1307.cpp.

#### 4.1.2.3 decToBcd()

Decimal to BCD conversion.

#### **Parameters**

dec Decimal value.	
--------------------	--

#### Returns

BCD encoded value.

Definition at line 396 of file ErriezDS1307.cpp.

## 4.1.2.4 getEpoch()

```
time_t ErriezDS1307::getEpoch ( )
```

Read Unix UTC epoch time\_t.

#### Returns

Unix epoch time\_t seconds since 1970.

Definition at line 137 of file ErriezDS1307.cpp.

## 4.1.2.5 getTime()

Read time from RTC.

Read hour, minute and second registers from RTC.

#### **Parameters**

hour	Hours 023.
min	Minutes 059.
sec	Seconds 059.

12 Class Documentation

#### Return values

true	Success.
false	Invalid second, minute or hour read from RTC. The time is set to zero.

Definition at line 288 of file ErriezDS1307.cpp.

#### 4.1.2.6 isOscillatorStopped()

```
bool ErriezDS1307::isOscillatorStopped ( )
```

Read RTC CH (Clock Halt) from seconds register.

The application is responsible for checking the CH (Clock Halt) bit before reading date/time date. This function may be used to judge the validity of the date/time registers.

#### Return values

	true	The date/time data is invalid when the CH bit is set. The application should enable the oscillator, or	
		program a new date/time.	
Ī	false	e RTC oscillator is running.	

Definition at line 113 of file ErriezDS1307.cpp.

## 4.1.2.7 oscillatorEnable()

Enable or disable oscillator (Clock Halt bit in seconds register).

#### **Parameters**

enable	true: Enable RTC clock.
	false: Stop RTC clock.

#### Return values

true	Success.
false	Oscillator enable failed.

Definition at line 80 of file ErriezDS1307.cpp.

#### 4.1.2.8 read()

```
bool ErriezDS1307::read ( {\tt struct\ tm\ *\ dt\ )}
```

Read date and time from RTC.

Read all RTC registers at once to prevent a time/date register change in the middle of the register read operation.

#### **Parameters**

#### Return values

true	Success
false	RTC read failed.

Definition at line 195 of file ErriezDS1307.cpp.

#### 4.1.2.9 readBuffer()

Read buffer from RTC.

#### **Parameters**

reg	RTC register number 0x000x07.	
buffer	Buffer.	
len	Buffer length. Reading is only allowed within valid RTC registers.	

#### Return values

true	Success
false	I2C read failed.

Definition at line 444 of file ErriezDS1307.cpp.

#### 4.1.2.10 setDateTime()

14 Class Documentation

```
uint8_t min,
uint8_t sec,
uint8_t mday,
uint8_t mon,
uint16_t year,
uint8_t wday )
```

Set date time.

#### **Parameters**

hour	Hours 023
min	Minutes 059
sec	Seconds 059
mday	Day of the month 131
mon	Month 112 (1=January)
year	Year 20002099
wday	Day of the week 06 (0=Sunday, 6=Sunday)

#### Return values

true	Success.
false	Set time failed.

Definition at line 336 of file ErriezDS1307.cpp.

## 4.1.2.11 setEpoch()

```
bool ErriezDS1307::setEpoch ( time\_t \ t \ )
```

Write Unix epoch UTC time to RTC.

#### **Parameters**

```
t time_t time
```

#### Returns

See write returns.

Definition at line 167 of file ErriezDS1307.cpp.

## 4.1.2.12 setSquareWave()

Configure SQW (Square Wave) output pin.

This will disable or initialize the SQW clock pin.

#### **Parameters**

squareWave	SquareWave configuration:
	Disable: SquareWaveDisable
	1Hz: SquareWave1Hz
	4096Hz: SquareWave4096Hz
	8192Hz: SquareWave8192Hz
	32748Hz: SquareWave32768Hz

#### Return values

true	Success
false	Set squareWave failed.

Definition at line 371 of file ErriezDS1307.cpp.

#### 4.1.2.13 setTime()

Write time to RTC.

Write hour, minute and second registers to RTC.

## **Parameters**

hour	Hours 023.
min	Minutes 059.
sec	Seconds 059.

#### **Return values**

true	Success.
false	Set time failed.

Definition at line 260 of file ErriezDS1307.cpp.

#### 4.1.2.14 write()

```
bool ErriezDS1307::write ( {\tt const\ struct\ tm\ *\ dt\ )}
```

16 Class Documentation

Write date and time to RTC.

Write all RTC registers at once to prevent a time/date register change in the middle of the register write operation. This function enables the oscillator.

#### **Parameters**

```
dt Date/time struct tm. Providing invalid date/time data may result in unpredictable behavior.
```

Definition at line 228 of file ErriezDS1307.cpp.

#### 4.1.2.15 writeBuffer()

Write buffer to RTC.

Please refer to the RTC datasheet.

#### **Parameters**

reg	RTC register number 0x000x07.
buffer	Buffer.
len	Buffer length. Writing is only allowed within valid RTC registers.

## Return values

true	Success	
false	I2C write failed.	

Definition at line 416 of file ErriezDS1307.cpp.

The documentation for this class was generated from the following files:

- src/ErriezDS1307.h
- src/ErriezDS1307.cpp

## **Chapter 5**


## **File Documentation**

## 5.1 src/ErriezDS1307.cpp File Reference

DS1307 RTC library for Arduino.

```
#include <pgmspace.h>
#include <Wire.h>
#include "ErriezDS1307.h"
```

Include dependency graph for ErriezDS1307.cpp:

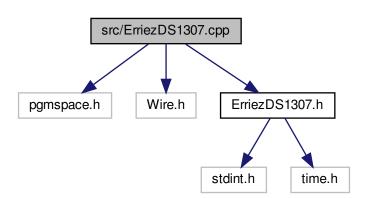

## 5.1.1 Detailed Description

DS1307 RTC library for Arduino.

Source: https://github.com/Erriez/ErriezDS1307 Documentation: https://erriez. $\leftarrow$  github.io/ErriezDS1307


18 File Documentation

## 5.2 src/ErriezDS1307.h File Reference


DS1307 RTC library for Arduino.

```
#include <stdint.h>
#include <time.h>
```

Include dependency graph for ErriezDS1307.h:

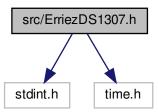

This graph shows which files directly or indirectly include this file:

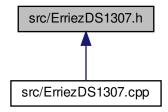

#### **Classes**

class ErriezDS1307
 DS1307 RTC class.

#### **Macros**

• #define DS1307\_REG\_SECONDS 0x00

DS1307 registers.

• #define DS1307\_REG\_MINUTES 0x01

Minutes register.

• #define DS1307\_REG\_HOURS 0x02

Hours register.

```
    #define DS1307_REG_DAY_WEEK 0x03
```

Day of the week register.

#define DS1307\_REG\_DAY\_MONTH 0x04

Day of the month register.

• #define DS1307\_REG\_MONTH 0x05

Month register.

#define DS1307\_REG\_YEAR 0x06

Year register.

#define DS1307\_REG\_CONTROL 0x07

Control register.

• #define DS1307\_NUM\_REGS 8

DS1307 number of registers.

#define DS1307\_SEC\_CH 7

DS1307 register bit defines.

#define DS1307 HOUR 12H 24H 6

12 or 24 hour mode

#define DS1307\_HOUR\_AM\_PM 5

AM/PM.

#define DS1307\_CTRL\_OUT 7

Enable oscillator.

#define DS1307 CTRL SQWE 4

Square-Wave Enable.

• #define DS1307\_CTRL\_RS1 1

Rate Select 1.

• #define DS1307\_CTRL\_RS0 0

Rate Select 0.

#define DS1307 ADDR (0xD0 >> 1)

DS1307 I2C 7-bit address.

## **Enumerations**

```
• enum SquareWave { SquareWaveDisable = ((0 << DS1307_CTRL_SQWE) | (0 << DS1307_CTRL_RS1) | (0 << DS1307_C \leftarrow TRL_RS0)), SquareWave1Hz = ((1 << DS1307_CTRL_SQWE) | (0 << DS1307_CTRL_RS1) | (0 << D \leftarrow S1307_CTRL_RS0)), SquareWave4096Hz = ((1 << DS1307_CTRL_SQWE) | (0 << DS1307_CTRL_RS1) | (1 << DS1307_CTRL_RS0)), SquareWave8192Hz = ((1 << DS1307_CTRL_SQWE) | (1 << DS1307_CTRL_SQWE) | (1 << DS1307_CTRL_RS1) | (0 << DS1307_CTRL_RS0)), SquareWave32768Hz = ((1 << DS1307_CTRL_SQWE) | (1 << DS1307_CTRL_RS1) | (1 << DS13
```

Squarewave enum.

### 5.2.1 Detailed Description

DS1307 RTC library for Arduino.

```
Source: https://github.com/Erriez/ErriezDS1307 Documentation: https://erriez.\leftarrowgithub.io/ErriezDS1307
```

20 File Documentation

## 5.2.2 Macro Definition Documentation

#### 5.2.2.1 DS1307\_NUM\_REGS

#define DS1307\_NUM\_REGS 8

DS1307 number of registers.

8 RTC register: 0x00..0x07

Definition at line 50 of file ErriezDS1307.h.

## 5.2.2.2 DS1307\_REG\_SECONDS

#define DS1307\_REG\_SECONDS 0x00

DS1307 registers.

Seconds register

Definition at line 40 of file ErriezDS1307.h.

## 5.2.2.3 DS1307\_SEC\_CH

#define DS1307\_SEC\_CH 7

DS1307 register bit defines.

Clock halt

Definition at line 53 of file ErriezDS1307.h.

## 5.2.3 Enumeration Type Documentation

## 5.2.3.1 SquareWave

enum SquareWave

Squarewave enum.

## Enumerator

SquareWaveDisable	SQW disable.
SquareWave1Hz	SQW 1Hz.
SquareWave4096Hz	SQW 4096Hz.
SquareWave8192Hz	SQW 8192Hz.
SquareWave32768Hz	SQW 32768Hz.

Definition at line 68 of file ErriezDS1307.h.

22 File Documentation

## Index

bcdToDec ErriezDS1307, 10
begin
ErriezDS1307, 10
DS1307_NUM_REGS ErriezDS1307.h, 20 DS1307_REG_SECONDS ErriezDS1307.h, 20 DS1307_SEC_CH ErriezDS1307.h, 20 decToBcd ErriezDS1307, 10
ErriezDS1307, 9 bcdToDec, 10 begin, 10 decToBcd, 10 getEpoch, 11 getTime, 11 isOscillatorStopped, 12 oscillatorEnable, 12 read, 12 readBuffer, 13 setDateTime, 13 setEpoch, 14 setSquareWave, 14 setTime, 15 write, 15 writeBuffer, 16 ErriezDS1307.h DS1307_NUM_REGS, 20 DS1307_SEC_CH, 20 SquareWave, 20
getEpoch ErriezDS1307, 11
getTime ErriezDS1307, 11
isOscillatorStopped ErriezDS1307, 12
oscillatorEnable ErriezDS1307, 12
read ErriezDS1307, 12 readBuffer

ErriezDS1307, 13

```
setDateTime
    ErriezDS1307, 13
setEpoch
    ErriezDS1307, 14
setSquareWave
    ErriezDS1307, 14
setTime
    ErriezDS1307, 15
SquareWave
    ErriezDS1307.h, 20
src/ErriezDS1307.cpp, 17
src/ErriezDS1307.h, 18
write
    ErriezDS1307, 15
writeBuffer
    ErriezDS1307, 16
```