Erriez DS3231 high precision I2C RTC library for Arduino 2.0.0

Generated by Doxygen 1.8.13

Contents

1	DS3	231 hig	h precisio	n I2C RTC library for Arduino	1
2	Clas	ss Index			9
	2.1	Class I	List		9
3	File	Index			11
•	3.1		at .		11
	0.1	THO LIC			•
4	Clas	ss Docu	mentation		13
	4.1	Erriez	OS3231 Cl	ass Reference	13
		4.1.1	Detailed	Description	14
		4.1.2	Member	Function Documentation	14
			4.1.2.1	alarmInterruptEnable()	14
			4.1.2.2	bcdToDec()	15
			4.1.2.3	begin()	15
			4.1.2.4	clearAlarmFlag()	16
			4.1.2.5	clockEnable()	16
			4.1.2.6	decToBcd()	17
			4.1.2.7	getAgingOffset()	17
			4.1.2.8	getAlarmFlag()	17
			4.1.2.9	getDateTime()	18
			4.1.2.10	getEpoch()	18
			4.1.2.11	getTemperature()	19
			4.1.2.12	getTime()	19
			41213	isBunning()	20

ii CONTENTS

		4.1.2.14	outputClockPinEnable()	20
		4.1.2.15	read()	21
		4.1.2.16	readBuffer()	21
		4.1.2.17	readRegister()	21
		4.1.2.18	setAgingOffset()	22
		4.1.2.19	setAlarm1()	22
		4.1.2.20	setAlarm2()	23
		4.1.2.21	setDateTime()	24
		4.1.2.22	setEpoch()	24
		4.1.2.23	setSquareWave()	25
		4.1.2.24	setTime()	25
		4.1.2.25	startTemperatureConversion()	26
		4.1.2.26	write()	26
		4.1.2.27	writeBuffer()	27
		4.1.2.28	writeRegister()	27
5 F	ile Docu	mentation		29
			1.cpp File Reference	
		rriezDS323	1.cpp File Reference	29
5	.1 src/E 5.1.1	rriezDS323 Detailed		29 29
5	.1 src/E 5.1.1	Detailed	Description	29 29
5	.1 src/E 5.1.1 .2 src/E	Detailed TrriezDS323 Detailed	Description	29 29 30
5	.1 src/E 5.1.1 .2 src/E 5.2.1	Detailed TrriezDS323 Detailed	Description 1.h File Reference Description	29 29 30 33
5	.1 src/E 5.1.1 .2 src/E 5.2.1	petailed rriezDS323 Detailed Detailed Macro D	Description 1.h File Reference Description efinition Documentation	29 29 30 33 33
5	.1 src/E 5.1.1 .2 src/E 5.2.1	Detailed rriezDS323 Detailed Detailed Macro D 5.2.2.1	Description 1.h File Reference Description efinition Documentation DS3231_HOUR_12H_24H	29 29 30 33 33
5	.1 src/E 5.1.1 .2 src/E 5.2.1	Detailed frriezDS323 Detailed frriezDS323 Detailed Macro D 5.2.2.1 5.2.2.2 5.2.2.3	Description 1.h File Reference Description efinition Documentation DS3231_HOUR_12H_24H DS3231_NUM_REGS	29 29 30 33 33 33
5	.1 src/E 5.1.1 .2 src/E 5.2.1 5.2.2	Detailed frriezDS323 Detailed frriezDS323 Detailed Macro D 5.2.2.1 5.2.2.2 5.2.2.3	Description 1.h File Reference Description efinition Documentation DS3231_HOUR_12H_24H DS3231_NUM_REGS DS3231_REG_SECONDS	29 29 30 33 33 33 33
5	.1 src/E 5.1.1 .2 src/E 5.2.1 5.2.2	Detailed rriezDS323 Detailed Macro D 5.2.2.1 5.2.2.2 5.2.2.3 Enumera	Description 1.h File Reference Description efinition Documentation DS3231_HOUR_12H_24H DS3231_NUM_REGS DS3231_REG_SECONDS ation Type Documentation	29 29 30 33 33 33 33 33
5	.1 src/E 5.1.1 .2 src/E 5.2.1 5.2.2	Detailed rriezDS323 Detailed Macro D 5.2.2.1 5.2.2.2 5.2.2.3 Enumera 5.2.3.1	Description 1.h File Reference Description efinition Documentation DS3231_HOUR_12H_24H DS3231_NUM_REGS DS3231_REG_SECONDS ation Type Documentation Alarm1Type	29 30 33 33 33 33 33 33
5	.1 src/E 5.1.1 .2 src/E 5.2.1 5.2.2	Detailed TrriezDS323 Detailed Macro D 5.2.2.1 5.2.2.2 5.2.2.3 Enumera 5.2.3.1 5.2.3.2	Description 1.h File Reference Description efinition Documentation DS3231_HOUR_12H_24H DS3231_NUM_REGS DS3231_REG_SECONDS ation Type Documentation Alarm1Type Alarm2Type	29 29 30 33 33 33 33 33 34

Chapter 1

DS3231 high precision I2C RTC library for Arduino

This is a DS3231 high precision I2C RTC library for Arduino.

Library features

- · Set / get time
- Set date / time with struct tm
- Set / get Unix Epoch UTC 32-bit timestamp $\mathtt{time_t}$
- · Day of the week calculation
- Read temperature (0.25 degree resolution)
- Alarm 1 (second/minute/hour/day/date match)
- Alarm 2 (minute/hour/day/date match)
- Polling and Alarm INT/SQW interrupt pin
- Control 32kHz out signal (enable/disable)
- Control SQW signal (disable/1/1024/4096/8192Hz)
- · Configure aging offset
- · Serial terminal interface
- · Full RTC register access
- · Set date/time over serial with Python script

Hardware

Any Arduino hardware with a TWI interface and ${\tt Wire.h}$ support.

ESP32 notes

ESP32 problem: The Arduino IDE | Board manager installs an old version 1.0.0 from https://dl. ← espressif.com/dl/package_esp32_index.json which contains a broken I2C repeated start. Generating a repeated start with Wire.endTransmission(false); results in reading zero's from any I2C device and is not a problem of this library.

Solution: Use the Git master branch (or a newer release when available) to solve this problem as described on: https://github.com/espressif/arduino-esp32/blob/master/docs/arduino-ide/windows. ← md.

Pins

Pins board - DS3231	vcc	GND	SDA	SCL	SQW
Arduino UNO (ATMega328 boards)	5V	GND	A4	A5	D2 (INT0)
Arduino Mega2560	5V	GND	D20	D21	D2 (INT4)
Arduino Leonardo	5V	GND	D2	D3	D7 (INT6)
Arduino DUE (ATSAM3X8E)	3V3	GND	20	21	2
ESP8266	3V3	GND	GPIO4 (D2)	GPIO5 (D1)	GPIO0 (D3)
ESP32	3V3	GND	GPIO21	GPIO22	GPIO0

Note: Tested ESP8266 / ESP32 boards:

• ESP8266 boards: ESP12E / WeMos D1 & R2 / Node MCU v2 / v3

• ESP32 boards: WeMos LOLIN32 / LOLIN D32

Other unlisted MCU's may work, but are not tested.

Examples

Arduino IDE | Examples | Erriez DS3231 RTC:

- AgingOffset Aging offset programming.
- AlarmInterrupt Alarm with interrupts.
- AlarmPolling Alarm polled.
- DateStrings Date strings in flash example.
- ReadDateTime Simple RTC read date/time example.
- ReadTimeInterrupt Read time with 1Hz SQW interrupt. (Highly recommended)
- SetGetTime Set/Get time.
- SQWBlink Blink LED on SQW interrupt pin.
- Temperature Temperature.
- Terminal Advanced terminal interface with set date/time Python script.
- Test Regression test.
- WriteDateTime Write date time. (Must be started first)

Documentation

- Doxygen online HTML
- Doxygen PDF
- DS3231 datasheet

Usage

Initialization

```
{c++}
#include <Wire.h>
#include <ErriezDS3231.h>

// Create DS3231 RTC object
DS3231 rtc;

void setup()
{
    // Initialize TWI with a 100kHz (default) or 400kHz clock
    Wire.begin();
    Wire.setClock(400000);

    // Initialize RTC
    while (!ds3231.begin()) {
        // Error: Could not detect DS3231 RTC, retry after some time delay(3000);
    }
}
```

Check oscillator status at startup

```
{c++}
// Check oscillator status
if (ds3231.isOscillatorStopped()) {
    // Error: DS3231 RTC oscillator stopped. Date/time cannot be trusted.
    // Set new date/time before reading date/time.

    // Start oscillator with date/time "Sun Jan 1 2000 0:00:00"
    ds3231.oscillatorEnable(true);
```

Set time

```
{c++}
// Write time to RTC
if (!ds3231.setTime(12, 0, 0)) {
    // Error: Write time failed
}
```

Get time

Set date time

Get date time

```
{c++}
struct tm dt;

// Read date/time from RTC
if (!ds3231.read(&dt)) {
    // Error: Read date/time failed
```

Get Epoch Unix UTC time

```
{c++}
// Get Unix epoch UTC time
time_t t = ds3231.getEpoch();
```

Get temperature

Program Alarm 1

Note: Alarm 1 and Alarm 2 have different behavior. Please refer to the documentation which Alarm1Type and Alarm2Type are supported. Some examples:

Program Alarm 2

```
{c++}
// Generate alarm 2 every minute
ds3231.setAlarm2(Alarm2EveryMinute, 0, 0, 0);

// Generate alarm 2 every hour, minute match
ds3231.setAlarm2(Alarm2MatchHours, 0, 23, 59);

// Generate alarm 2 every date, hour, minute match
ds3231.setAlarm2(Alarm2MatchDate, 28, 7, 0);
```

Alarm polling

Note: The INT pin changes to low when an Alarm 1 or Alarm 2 match occurs and and the interrupt is enabled. The pin remains low until both alarm flags are cleared by the application.

```
{c++}
// Poll alarm 1 flag
if (ds3231.getAlarmFlag(Alarm1)) {
    // Handle Alarm 1

    // Clear alarm 1 flag
    ds3231.clearAlarmFlag(Alarm1);
}

// Poll alarm 2 flag
if (ds3231.getAlarmFlag(Alarm2)) {
    // Handle Alarm 2

    // Clear alarm 2 flag
    ds3231.clearAlarmFlag(Alarm2);
}
```

Alarm interrupt

Note: Enabling interrupt will disable the SQW output signal.

```
// Uno, Nano, Mini, other 328-based: pin D2 (INTO) or D3 (INT1)
#define INT_PIN
// Alarm interrupt flag must be volatile
volatile bool alarmInterrupt = false;
#if defined(ARDUINO_ARCH_ESP8266) || defined(ARDUINO_ARCH_ESP32)
ICACHE_RAM_ATTR
#endif
void alarmHandler()
    // Set global interrupt flag
    alarmInterrupt = true;
void setup()
    // Attach to INTO interrupt falling edge
pinMode(INT_PIN, INPUT_PULLUP);
    attachInterrupt(digitalPinToInterrupt(INT_PIN), alarmHandler, FALLING);
    // Enable Alarm 1 and 2 interrupts
    ds3231.alarmInterruptEnable(Alarm1, true);
    ds3231.alarmInterruptEnable(Alarm2, true);
}
void loop()
    // Check global alarm interrupt flag
    if (alarmInterrupt) {
        if (ds3231.getAlarmFlag(Alarm1)) {
             // Handle alarm 1
             // Clear alarm 1 interrupt
```

```
ds3231.clearAlarmFlag(Alarm1);
}

if (ds3231.getAlarmFlag(Alarm2)) {
    // Handle alarm 2

    // Clear alarm 2 interrupt
    ds3231.clearAlarmFlag(Alarm2);
    }
}
```

32kHz clock out

Enable or disable 32kHz output pin.

```
{c++}
ds3231.outputClockPinEnable(true); // Enable
ds3231.outputClockPinEnable(false); // Disable
```

Square Wave Out (SQW)

Note: Enabling SQW pin will disable the alarm INT signal.

API changes v1.0.1 to v2.0.0

The API has been changed to make RTC libraries compatible with libc time.h. This makes it easier to calculate with date/time and port the application to different platforms. See changes below:

v1.0.1	v2.0.0									
DS3231_DateTime	struct tm									
Function returns true: failure	Function returns false: failure									
	clearOscillatorStopFlag() merged into oscillator↔									
	Enable()									
setDateTime() bool write(struct tm *dt)										
<pre>getDateTime()</pre>	bool read(struct tm *dt)									
getEpochTime()	time_t getEpoch()									
	bool setEpoch(time_t t)									
	bool setDateTime(uint8_t hour, uint8_t min, uint8↔									
	_t sec, uint8_t mday, uint8_t mon, uint16_t year,									
	uint8_t wday)									
	ErriezDS3231Debug class removed to reduce flash size									

Library dependencies

- Wire.h
- Terminal.ino requires ErriezSerialTerminal library.

Library installation

Please refer to the Wiki page.

Other Arduino Libraries and Sketches from Erriez

• Erriez Libraries and Sketches

DS3231 h	high precision	I2C RTC III	brary for	Arduino
----------	----------------	--------------------	-----------	---------

Chapter 2

Class Index

21	Class	l iet

Here are the classes, structs,	unions and interfaces with brief descriptions:	

ErriezDS3231																		
DS3231 RTC class																		13

10 Class Index

Chapter 3

File Index

3.1 File List

Here is a list of all documented files with brief descriptions:

src/ErriezDS3231.cpp	
DS3231 high precision RTC library for Arduino	 29
src/ErriezDS3231.h	
DS3231 high precision RTC library for Arduino	 30

12 File Index

Chapter 4

Class Documentation

4.1 ErriezDS3231 Class Reference

```
DS3231 RTC class.
```

```
#include <ErriezDS3231.h>
```

Public Member Functions

• bool begin ()

Initialize and detect DS3231 RTC.

• bool isRunning ()

Read RTC OSF (Oscillator Stop Flag) from status register.

• bool clockEnable (bool enable=true)

Enable or disable oscillator when running on V-BAT.

• time_t getEpoch ()

Read Unix UTC epoch time_t.

bool setEpoch (time_t t)

Write Unix epoch UTC time to RTC.

bool read (struct tm *dt)

Read date and time from RTC.

• bool write (const struct tm *dt)

Write date and time to RTC.

• bool setTime (uint8_t hour, uint8_t min, uint8_t sec)

Write time to RTC.

bool getTime (uint8_t *hour, uint8_t *min, uint8_t *sec)

Read time from RTC.

bool setDateTime (uint8_t hour, uint8_t min, uint8_t sec, uint8_t mday, uint8_t mon, uint16_t year, uint8_t wday)

Set date time.

• bool getDateTime (uint8_t *hour, uint8_t *min, uint8_t *sec, uint8_t *mday, uint8_t *mon, uint16_t *year, uint8_t *wday)

Get date time.

bool setAlarm1 (Alarm1Type alarmType, uint8_t dayDate, uint8_t hours, uint8_t minutes, uint8_t seconds)
 Set Alarm 1.

bool setAlarm2 (Alarm2Type alarmType, uint8_t dayDate, uint8_t hours, uint8_t minutes)

Set Alarm 2.

• bool alarmInterruptEnable (AlarmId alarmId, bool enable)

Enable or disable Alarm 1 or 2 interrupt.

bool getAlarmFlag (AlarmId alarmId)

Get Alarm 1 or 2 flag.

bool clearAlarmFlag (AlarmId alarmId)

Clear alarm flag.

• bool setSquareWave (SquareWave squareWave)

Configure SQW (Square Wave) output pin.

bool outputClockPinEnable (bool enable)

Enable or disable 32kHz output clock pin.

· bool setAgingOffset (int8_t val)

Set aging offset register.

• int8_t getAgingOffset ()

Get aging offset register.

bool startTemperatureConversion ()

Start temperature conversion.

• bool getTemperature (int8_t *temperature, uint8_t *fraction)

Read temperature.

uint8_t bcdToDec (uint8_t bcd)

BCD to decimal conversion.

• uint8 t decToBcd (uint8 t dec)

Decimal to BCD conversion.

uint8_t readRegister (uint8_t reg)

Read register.

• bool writeRegister (uint8_t reg, uint8_t value)

Write register.

• bool readBuffer (uint8_t reg, void *buffer, uint8_t len)

Read buffer from RTC.

• bool writeBuffer (uint8 t reg, void *buffer, uint8 t len)

Write buffer to RTC.

4.1.1 Detailed Description

DS3231 RTC class.

Definition at line 149 of file ErriezDS3231.h.

4.1.2 Member Function Documentation

4.1.2.1 alarmInterruptEnable()

Enable or disable Alarm 1 or 2 interrupt.

Enabling the alarm interrupt will disable the Square Wave output on the INT/SQW pin. The INT pin remains high until an alarm match occurs.

Parameters

alarm← Id	Alarm1 or Alarm2 enum.
enable	true: Enable alarm interrupt. false: Disable alarm interrupt.

Return values

true	Success
false	Alarm interrupt enable failed.

Definition at line 534 of file ErriezDS3231.cpp.

4.1.2.2 bcdToDec()

BCD to decimal conversion.

Parameters

bcd	BCD encoded value.
-----	--------------------

Returns

Decimal value.

Definition at line 799 of file ErriezDS3231.cpp.

4.1.2.3 begin()

```
bool ErriezDS3231::begin ( )
```

Initialize and detect DS3231 RTC.

Call this function from setup().

Return values

true	RTC detected.
false	RTC not detected.

Definition at line 52 of file ErriezDS3231.cpp.

4.1.2.4 clearAlarmFlag()

Clear alarm flag.

This function should be called when the alarm flag has been handled in polling and interrupt mode. The INT pin changes to high when both alarm flags are cleared and alarm interrupts are enabled.

Parameters

alarm←	Alarm1 or Alarm2 enum.
ld	

Return values

true	Success
false	Incorrect alarm ID.

Definition at line 596 of file ErriezDS3231.cpp.

4.1.2.5 clockEnable()

```
bool ErriezDS3231::clockEnable (
          bool enable = true )
```

Enable or disable oscillator when running on V-BAT.

Parameters

enable	true: Enable RTC clock when running on V-BAT.
	false: Stop RTC clock when running on V-BAT. Oscillator Stop Flag (OSF) bit will be set in status
	register which can be read on next power-on.

Return values

true	Success.
false	Oscillator enable failed.

Definition at line 74 of file ErriezDS3231.cpp.

4.1.2.6 decToBcd()

Decimal to BCD conversion.

Parameters

```
dec Decimal value.
```

Returns

BCD encoded value.

Definition at line 811 of file ErriezDS3231.cpp.

4.1.2.7 getAgingOffset()

```
int8_t ErriezDS3231::getAgingOffset ( )
```

Get aging offset register.

The aging offset register capacitance value is added or subtracted from the capacitance value that the device calculates for each temperature compensation.

Returns

val Aging offset value.

Definition at line 714 of file ErriezDS3231.cpp.

4.1.2.8 getAlarmFlag()

Get Alarm 1 or 2 flag.

Call this function to retrieve the alarm status flag. This function can be used in polling as well as with interrupts enabled.

The INT pin changes to low when an Alarm 1 or Alarm 2 match occurs and the interrupt is enabled. The pin remains low until both alarm flags are cleared by the application.

Parameters

alarm←	Alarm1 or Alarm2 enum.
ld	

Return values

true	Alarm interrupt flag set.
false	Alarm interrupt flag cleared.

Definition at line 573 of file ErriezDS3231.cpp.

4.1.2.9 getDateTime()

Get date time.

Parameters

hour	Hours 023
min	Minutes 059
sec	Seconds 059
mday	Day of the month 131
mon	Month 112 (1=January)
year	Year 20002099
wday	Day of the week 06 (0=Sunday, 6=Saturday)

Return values

true	Success.
false	Get date/time failed.

Definition at line 394 of file ErriezDS3231.cpp.

4.1.2.10 getEpoch()

```
time_t ErriezDS3231::getEpoch ( )
```

Read Unix UTC epoch time_t.

Returns

Unix epoch time_t seconds since 1970.

Definition at line 127 of file ErriezDS3231.cpp.

4.1.2.11 getTemperature()

Read temperature.

Parameters

temperature	8-bit signed temperature in degree Celsius.
fraction	Temperature fraction in steps of 0.25 degree Celsius. The returned value is a decimal value to
	prevent floating point usage. The application should divided the fraction by 100.

Return values

true	Success
false	Set get temperature failed.

Definition at line 769 of file ErriezDS3231.cpp.

4.1.2.12 getTime()

Read time from RTC.

Read hour, minute and second registers from RTC.

Parameters

hour	Hours 023.
min	Minutes 059.
sec	Seconds 059.

Return values

true	Success.
false	Invalid second, minute or hour read from RTC. The time is set to zero.

Definition at line 306 of file ErriezDS3231.cpp.

4.1.2.13 isRunning()

```
bool ErriezDS3231::isRunning ( )
```

Read RTC OSF (Oscillator Stop Flag) from status register.

The application is responsible for checking the Oscillator Stop Flag (OSF) before reading date/time date. This function may be used to judge the validity of the date/time registers.

Return values

tru	е	RTC clock is running.
fals	е	RTC oscillator was stopped: The date/time data is invalid. The application should synchronize and
		program a new date/time.

Definition at line 110 of file ErriezDS3231.cpp.

4.1.2.14 outputClockPinEnable()

```
bool ErriezDS3231::outputClockPinEnable (
          bool enable )
```

Enable or disable 32kHz output clock pin.

Parameters

enable	true: Enable 32kHz output clock pin.
	false: Disable 32kHz output clock pin.

Return values

true	Success
false	Set output clock pin failed.

Definition at line 653 of file ErriezDS3231.cpp.

4.1.2.15 read()

```
bool ErriezDS3231::read ( {\tt struct\ tm\ *\ dt\ )}
```

Read date and time from RTC.

Read all RTC registers at once to prevent a time/date register change in the middle of the register read operation.

Parameters

dt	Date and time struct tm.
----	--------------------------

Return values

true	Success
false	Read failed.

Definition at line 187 of file ErriezDS3231.cpp.

4.1.2.16 readBuffer()

Read buffer from RTC.

Parameters

reg	RTC register number 0x000x12.	
buffer	Buffer.	
readLen	Buffer length. Reading is only allowed within valid RTC registers.	

Return values

true	Success
false	I2C read failed.

Definition at line 897 of file ErriezDS3231.cpp.

4.1.2.17 readRegister()

Read register.

Please refer to the RTC datasheet.

Parameters

```
reg RTC register number 0x00..0x12.
```

Returns

value 8-bit unsigned register value.

Definition at line 825 of file ErriezDS3231.cpp.

4.1.2.18 setAgingOffset()

Set aging offset register.

The aging offset register capacitance value is added or subtracted from the capacitance value that the device calculates for each temperature compensation.

Parameters

```
    Val Aging offset value -127..127, 0.1ppm per LSB (Factory default value: 0).
    Negative values increases the RTC oscillator frequency.
```

Return values

true	Success
false	Set aging offset failed.

Definition at line 684 of file ErriezDS3231.cpp.

4.1.2.19 setAlarm1()

```
bool ErriezDS3231::setAlarm1 (
          Alarm1Type alarmType,
          uint8_t dayDate,
          uint8_t hours,
          uint8_t minutes,
          uint8_t seconds )
```

Set Alarm 1.

Alarm 1 contains several alarm modes which can be configured with the alarmType parameter. Unused matches can be set to zero. The alarm interrupt must be enabled after setting the alarm, followed by clearing the alarm interrupt flag.

Parameters

alarmType	Alarm 1 types: Alarm1EverySecond Alarm1MatchSeconds Alarm1MatchMinutes Alarm1MatchHours Alarm1MatchDay Alarm1MatchDay
dayDate	Alarm match day of the week or day of the month. This depends on alarmType.
hours	Alarm match hours.
minutes	Alarm match minutes.
seconds	Alarm match seconds.

Return values

true	Success.
false	Set alarm 1 failed.

Definition at line 444 of file ErriezDS3231.cpp.

4.1.2.20 setAlarm2()

Set Alarm 2.

Alarm 2 contains different alarm modes which can be configured with the alarmType parameter. Unused matches can be set to zero. The alarm interrupt must be enabled after setting the alarm, followed by clearing the alarm interrupt flag.

Parameters

alarmType	Alarm 2 types: Alarm2EveryMinute Alarm2MatchMinutes Alarm2MatchHours Alarm2MatchDay Alarm2MatchDate
dayDate	Alarm match day of the week or day of the month. This depends on alarmType.
hours	Alarm match hours.
minutes	Alarm match minutes.

Return values

true	Success.
false	Set alarm 2 failed.

Definition at line 495 of file ErriezDS3231.cpp.

4.1.2.21 setDateTime()

Set date time.

Parameters

hour	Hours 023
min	Minutes 059
sec	Seconds 059
mday	Day of the month 131
mon	Month 112 (1=January)
year	Year 20002099
wday	Day of the week 06 (0=Sunday, 6=Saturday)

Return values

true	Success.
false	Set date/time failed.

Definition at line 354 of file ErriezDS3231.cpp.

4.1.2.22 setEpoch()

```
bool ErriezDS3231::setEpoch ( time\_t \ t \ )
```

Write Unix epoch UTC time to RTC.

Parameters

```
t time_t time
```

Return values

true	Success.
false	Set epoch failed.

Definition at line 159 of file ErriezDS3231.cpp.

4.1.2.23 setSquareWave()

Configure SQW (Square Wave) output pin.

This will disable or initialize the SQW clock pin. The alarm interrupt INT pin will be disabled.

Parameters

squareWave	SquareWave configuration:
	Disable: SquareWaveDisable
	1Hz: SquareWave1Hz
	1024Hz: SquareWave1024Hz
	4096Hz: SquareWave4096Hz
	8192Hz: SquareWave8192Hz

Return values

true	Success
false	Set squareWave failed.

Definition at line 627 of file ErriezDS3231.cpp.

4.1.2.24 setTime()

Write time to RTC.

Write hour, minute and second registers to RTC.

Parameters

hour	Hours 023.
min	Minutes 059.
sec	Seconds 059.

Return values

true	Success.
false	Set time failed.

Definition at line 280 of file ErriezDS3231.cpp.

4.1.2.25 startTemperatureConversion()

```
bool ErriezDS3231::startTemperatureConversion ( )
```

Start temperature conversion.

Starting a conversion is only needed when the application requires temperature reads within 64 seconds, or changing the aging offset register.

Return values

true	Success
false	Start temperature conversion failed.

Definition at line 741 of file ErriezDS3231.cpp.

4.1.2.26 write()

```
bool ErriezDS3231::write ( {\tt const\ struct\ tm\ *\ dt\ )}
```

Write date and time to RTC.

Write all RTC registers at once to prevent a time/date register change in the middle of the register write operation. This function enables the oscillator and clear the Oscillator Stop Flag (OSF) in the status register.

Parameters

dt Date/time struct tm. Providing invalid date/time data may result in unpredictable behavior.

Return values

true	Success.
false	Write failed.

Definition at line 243 of file ErriezDS3231.cpp.

4.1.2.27 writeBuffer()

Write buffer to RTC.

Please refer to the RTC datasheet.

Parameters

reg	RTC register number 0x000x12.
buffer	Buffer.
writeLen	Buffer length. Writing is only allowed within valid RTC registers.

Return values

true	Success
false	I2C write failed.

Definition at line 869 of file ErriezDS3231.cpp.

4.1.2.28 writeRegister()

Write register.

Please refer to the RTC datasheet.

Parameters

reg	RTC register number 0x000x12.
value	8-bit unsigned register value.

Return values

true	Success
false	Write register failed

Definition at line 848 of file ErriezDS3231.cpp.

The documentation for this class was generated from the following files:

- src/ErriezDS3231.h
- src/ErriezDS3231.cpp

Chapter 5


File Documentation

5.1 src/ErriezDS3231.cpp File Reference

DS3231 high precision RTC library for Arduino.

```
#include <pgmspace.h>
#include <Wire.h>
#include "ErriezDS3231.h"
```

Include dependency graph for ErriezDS3231.cpp:

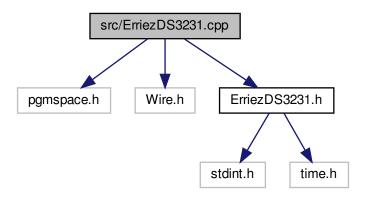

5.1.1 Detailed Description

DS3231 high precision RTC library for Arduino.


Source: https://github.com/Erriez/ErriezDS3231 Documentation: https://erriez. \leftarrow github.io/ErriezDS3231

30 File Documentation


5.2 src/ErriezDS3231.h File Reference

DS3231 high precision RTC library for Arduino.

```
#include <stdint.h>
#include <time.h>
Include dependency graph for ErriezDS3231.h:
```



This graph shows which files directly or indirectly include this file:



Classes

class ErriezDS3231
 DS3231 RTC class.

Macros

• #define DS3231_REG_SECONDS 0x00

DS3231 registers.

• #define DS3231_REG_MINUTES 0x01

Minutes register.

• #define DS3231_REG_HOURS 0x02

Hours register.

• #define DS3231_REG_DAY_WEEK 0x03

Day of the week register.

#define DS3231 REG DAY MONTH 0x04

Day of the month register.

#define DS3231_REG_MONTH 0x05

Month register.

#define DS3231_REG_YEAR 0x06

Year register.

#define DS3231_REG_ALARM1_SEC 0x07

Alarm 1 seconds register.

#define DS3231 REG ALARM1 MIN 0x08

Alarm 1 minutes register.

#define DS3231_REG_ALARM1_HOUR 0x09

Alarm 1 hour register.

#define DS3231 REG ALARM1 DD 0x0A

Alarm 1 day/date register.

#define DS3231_REG_ALARM2_MIN 0x0B

Alarm 2 seconds register.

#define DS3231_REG_ALARM2_HOUR 0x0C

Alarm 2 hour register.

#define DS3231_REG_ALARM2_DD 0x0D

Alarm 2 day/date register.

• #define DS3231_REG_CONTROL 0x0E

Control register.

#define DS3231_REG_STATUS 0x0F

Status register.

#define DS3231_REG_AGING_OFFSET 0x10

Aging offset register.

#define DS3231_REG_TEMP_MSB 0x11

Temperature MSB register.

#define DS3231_REG_TEMP_LSB 0x12

Temperature LSB register.

• #define DS3231_NUM_REGS 19

DS3231 number of registers.

#define DS3231_HOUR_12H_24H 6

DS3231 register bit defines.

#define DS3231_HOUR_AM_PM 5

AM/PM.

#define DS3231_MONTH_CENTURY 7

Century.

• #define DS3231 CTRL EOSC 7

Enable oscillator.

#define DS3231_CTRL_BBSQW 6

Battery-Backed Square-Wave Enable.

• #define DS3231 CTRL CONV 5

Start temperature conversion.

#define DS3231_CTRL_RS2 4

Square wave rate-select 2.

#define DS3231 CTRL RS1 3

Square wave rate-select 1.

• #define DS3231_CTRL_INTCN 2

32 File Documentation

Interrupt control.

#define DS3231_CTRL_A2IE 1

Alarm 2 interrupt enable.

#define DS3231_CTRL_A1IE 0

Alarm 1 interrupt enable.

#define DS3231_STAT_OSF 7

Oscillator Stop Flag.

#define DS3231_STAT_EN32KHZ 3

Enable 32kHz clock output.

• #define DS3231_STAT_BSY 2

Temperature conversion busy flag.

#define DS3231_STAT_A2F 1

Alarm 2 status flag.

• #define DS3231_STAT_A1F 0

Alarm 1 status flag.

#define DS3231_A1M1 7

Alarm 1 bit 7 seconds register.

#define DS3231_A1M2 7

Alarm 1 bit 7 minutes register.

#define DS3231_A1M3 7

Alarm 1 bit 7 hours register.

#define DS3231_A1M4 7

Alarm 1 bit 7 day/date register.

#define DS3231 A2M2 7

Alarm 2 bit 7 minutes register.

#define DS3231_A2M3 7

Alarm 2 bit 7 hours register.

#define DS3231_A2M4 7

Alarm 2 bit 7 day/date register.

#define DS3231_DYDT 6

Alarm 2 bit 6.

#define DS3231_ADDR (0xD0 >> 1)

DS3231 I2C 7-bit address.

#define SECONDS_FROM_1970_TO_2000 946684800

Number of seconds between year 1970 and 2000.

Enumerations

```
• enum AlarmId { Alarm1 = 1, Alarm2 = 2 }
```

Alarm ID.

enum Alarm1Type {

Alarm1EverySecond = 0x0F, Alarm1MatchSeconds = 0x0E, Alarm1MatchMinutes = 0x0C, Alarm1Match \leftrightarrow Hours = 0x08,

Alarm1MatchDay = 0x10, Alarm1MatchDate = 0x00 }

Alarm 1 types enum.

enum Alarm2Type {

Alarm2EveryMinute = 0x0E, Alarm2MatchMinutes = 0x0C, Alarm2MatchHours = 0x08, Alarm2MatchDay = 0x10,

Alarm2MatchDate = 0x00 }

Alarm 2 types enum.

enum SquareWave {
 SquareWaveDisable = (1 << DS3231_CTRL_INTCN), SquareWave1Hz = ((0 << DS3231_CTRL_RS2) | (0 << DS3231_CTRL_RS1)), SquareWave1024Hz = ((0 << DS3231_CTRL_RS2) | (1 << DS3231_CTRL← LS1)), SquareWave4096Hz = ((1 << DS3231_CTRL_RS2) | (0 << DS3231_CTRL_RS1)), SquareWave8192Hz = ((1 << DS3231_CTRL_RS2) | (1 << DS3231_CTRL_RS1)) }
 SquareWave enum.

5.2.1 Detailed Description

DS3231 high precision RTC library for Arduino.

Source: https://github.com/Erriez/ErriezDS3231 Documentation: https://erriez. \leftarrow github.io/ErriezDS3231

5.2.2 Macro Definition Documentation

5.2.2.1 DS3231_HOUR_12H_24H

#define DS3231_HOUR_12H_24H 6

DS3231 register bit defines.

12 or 24 hour mode

Definition at line 66 of file ErriezDS3231.h.

5.2.2.2 DS3231_NUM_REGS

#define DS3231_NUM_REGS 19

DS3231 number of registers.

19 RTC register: 0x00..0x12

Definition at line 63 of file ErriezDS3231.h.

5.2.2.3 DS3231_REG_SECONDS

#define DS3231_REG_SECONDS 0x00

DS3231 registers.

Seconds register

Definition at line 40 of file ErriezDS3231.h.

5.2.3 Enumeration Type Documentation

5.2.3.1 Alarm1Type

enum Alarm1Type

Alarm 1 types enum.

34 File Documentation

Enumerator

Alarm1EverySecond	Alarm once per second.
Alarm1MatchSeconds	Alarm when seconds match.
Alarm1MatchMinutes	Alarm when minutes and seconds match.
Alarm1MatchHours	Alarm when hours, minutes, and seconds match.
Alarm1MatchDay	Alarm when date, hours, minutes, and seconds match.
Alarm1MatchDate	Alarm when day, hours, minutes, and seconds match.

Definition at line 112 of file ErriezDS3231.h.

5.2.3.2 Alarm2Type

enum Alarm2Type

Alarm 2 types enum.

Enumerator

Alarm2EveryMinute	Alarm once per minute (00 seconds of every minute)	
Alarm2MatchMinutes	Alarm when minutes match.	
Alarm2MatchHours	Alarm when hours and minutes match.	
Alarm2MatchDay	Alarm when date, hours, and minutes match.	
Alarm2MatchDate	Alarm when day, hours, and minutes match.	

Definition at line 125 of file ErriezDS3231.h.

5.2.3.3 Alarmid

enum AlarmId

Alarm ID.

Enumerator

Alarm1	Alarm ID 1.
Alarm2	Alarm ID 2.

Definition at line 104 of file ErriezDS3231.h.

5.2.3.4 SquareWave

enum SquareWave

Squarewave enum.

Enumerator

SquareWaveDisable	SQW disable.
SquareWave1Hz	SQW 1Hz.
SquareWave1024Hz	SQW 1024Hz.
SquareWave4096Hz	SQW 4096Hz.
SquareWave8192Hz	SQW 8192Hz.

Definition at line 137 of file ErriezDS3231.h.

36 File Documentation

Index

Alarm1Type	setEpoch, 24
ErriezDS3231.h, 33	setSquareWave, 25
Alarm2Type	setTime, 25
ErriezDS3231.h, 34	startTemperatureConversion, 26
AlarmId	write, 26
ErriezDS3231.h, 34	writeBuffer, 27
alarmInterruptEnable	writeRegister, 27
ErriezDS3231, 14	ErriezDS3231.h
,	Alarm1Type, 33
bcdToDec	Alarm2Type, 34
ErriezDS3231, 15	AlarmId, 34
begin	DS3231 HOUR 12H 24H, 33
ErriezDS3231, 15	DS3231_NUM_REGS, 33
	DS3231_REG_SECONDS, 33
clearAlarmFlag	SquareWave, 34
ErriezDS3231, 16	equal of ture, or
clockEnable	getAgingOffset
ErriezDS3231, 16	ErriezDS3231, 17
211102500201, 10	getAlarmFlag
DS3231_HOUR_12H_24H	ErriezDS3231, 17
ErriezDS3231.h, 33	getDateTime
DS3231_NUM_REGS	ErriezDS3231, 18
ErriezDS3231.h, 33	getEpoch
DS3231_REG_SECONDS	ErriezDS3231, 18
ErriezDS3231.h, 33	getTemperature
decToBcd	ErriezDS3231, 19
	getTime
ErriezDS3231, 16	ErriezDS3231, 19
Errioz D 2001 10	EIIIe2D33231, 19
ErriezDS3231, 13	isRunning
alarmInterruptEnable, 14	ErriezDS3231, 20
bcdToDec, 15	2.1102300201, 20
begin, 15	outputClockPinEnable
clearAlarmFlag, 16	ErriezDS3231, 20
clockEnable, 16	,
decToBcd, 16	read
getAgingOffset, 17	ErriezDS3231, 20
getAlarmFlag, 17	readBuffer
getDateTime, 18	ErriezDS3231, 21
getEpoch, 18	readRegister
getTemperature, 19	ErriezDS3231, 21
getTime, 19	
isRunning, 20	setAgingOffset
outputClockPinEnable, 20	ErriezDS3231, 22
read, 20	setAlarm1
readBuffer, 21	ErriezDS3231, 22
readRegister, 21	setAlarm2
setAgingOffset, 22	ErriezDS3231, 23
setAlarm1, 22	setDateTime
setAlarm2, 23	ErriezDS3231, 24
setDateTime, 24	setEpoch

38 INDEX

ErriezDS3231, 24 setSquareWave ErriezDS3231, 25 set TimeErriezDS3231, 25 SquareWave ErriezDS3231.h, 34 src/ErriezDS3231.cpp, 29 src/ErriezDS3231.h, 30 startTemperatureConversion ErriezDS3231, 26 write ErriezDS3231, 26 writeBuffer ErriezDS3231, 27 writeRegister ErriezDS3231, 27