# Erriez LM35 library for Arduino 1.1.0

Generated by Doxygen 1.8.13

## **Contents**

Index

1	LM3	35 temp	erature sensor library for Arduino	1
2	Clas	ss Index	<b>C</b>	5
	2.1	Class	List	5
3	File	Index		7
	3.1	File Li	st	7
4	Clas	ss Docu	mentation	9
	4.1	LM35	Class Reference	9
		4.1.1	Detailed Description	9
		4.1.2	Constructor & Destructor Documentation	9
			4.1.2.1 LM35()	9
		4.1.3	Member Function Documentation	10
			4.1.3.1 readTemperature()	10
5	File	File Documentation		11
	5.1	src/Eri	riezLM35.cpp File Reference	11
		5.1.1	Detailed Description	11
	5.2	2 src/ErriezLM35.h File Reference		12
		5.2.1	Detailed Description	12
		5.2.2	Macro Definition Documentation	13
			5.2.2.1 LM35_MAX_SAMPLES	13

## LM35 temperature sensor library for Arduino

This is an accurate LM35 analog temperature sensor library for Arduino with noise cancellation.

## **Library features**

- Synchronous 10-bit unsigned temperature read
- Temperature range: 0.0 .. 110.0 degree Celsius
- · Accuracy: 0.1 degree Celsius
- Noise cancellation
- · Small footprint

### Hardware

## Supported hardware

- All ATmega328P MCU (Arduino UNO, Micro, Nano, etc)
- All ATmega32U4 MCU (Arduino Leonardo, Pro Micro, etc)
- · Arduino ATmega2560

### Notes:

- This library changes analog pins to ADC 1.1V internal reference voltage which affects all analog pins.
- The function analogReference() may not be supported with other non-AVR MCU's.

### Arduino UNO - LM35 example

LM35	Arduino UNO
GND	GND
Vs	5V (or 3.3V)
Vout	A0 (ANALOG pin)

#### Notes:

· Keep wires short to prevent noise.

### LM35 pins

### LM35 specifications

Supply voltage: 3.3V .. 30VLow power: Around 65uAAnalog voltage interface

## Examples

Arduino IDE | Examples | Erriez LM35 analog temperature:

• ErriezLM35

#### **Documentation**

- Doxygen online HTML
- Doxygen PDF
- LM35 datasheet

## Usage

#### Initialization

```
{c++}
#include <ErriezLM35.h>

// Connect LM35 data pin to Arduino DIGITAL pin
#define LM35_PIN A0

LM35 1m35 = LM35(LM35_PIN);
```

## Read temperature and humidity

```
{c++}
void loop()
{
    // Read unsigned temperature from sensor
    uint16_t lm35_temp = lm35.readTemperature();

    // Print temperature
    Serial.print(F("LM35: "));
    Serial.print(lm35_temp / 10);
    Serial.print(f("."));
    Serial.print(lm35_temp % 10);
    Serial.println(F("..."));

// Wait some time
    delay(2000);
}
```

### Serial output

```
Analog LM35 temperature sensor example
LM35: 18.1 *C
LM35: 18.2 *C
LM35: 18.2 *C
```

## Library dependencies

• None

## Library installation

Please refer to the Wiki page.

## Other Arduino Libraries and Sketches from Erriez

• Erriez Libraries and Sketches

LM35 temperature	e sensor librar	v for Arduino
------------------	-----------------	---------------

## **Class Index**

2	4		۱.	22	1	
"	Т.	- (	เเล	ee		ICT

Here are the classes, structs	unions and interfaces with brief descriptions:	
-------------------------------	--	--

LM35

6 Class Index

## File Index

## 3.1 File List

Here is a list of all documented files with brief descriptions:

src/ErriezLM35.cpp	
Analog LM35 temperature sensor library for Arduino	11
src/ErriezLM35.h	
Analog I M35 temperature sensor library for Arduino	12

8 File Index

## **Class Documentation**

## 4.1 LM35 Class Reference

LM35 sensor class.

```
#include <ErriezLM35.h>
```

## **Public Member Functions**

• LM35 (uint8\_t pin)

LM35 constructor.

• uint16\_t readTemperature ()

Read unsigned analog temperature.

## 4.1.1 Detailed Description

LM35 sensor class.

Definition at line 49 of file ErriezLM35.h.

### 4.1.2 Constructor & Destructor Documentation

```
4.1.2.1 LM35()
```

```
LM35::LM35 (
uint8_t pin ) [explicit]
```

LM35 constructor.

The constructor changes the ADC to 1.1V internal ADC reference voltage for higher accuracy. This affects all ANALOG pins.

10 Class Documentation

#### **Parameters**

pin LM35 analog pin.

Definition at line 42 of file ErriezLM35.cpp.

### 4.1.3 Member Function Documentation

### 4.1.3.1 readTemperature()

```
uint16_t LM35::readTemperature ( )
```

Read unsigned analog temperature.

Sample LM35 analog pin multiple times to find two identical samples to reduce noise. A maximum number of samples can be configured with macro LM35\_MAX\_SAMPLES. The last sampled temperature will be returned when no identical temperatures found.

Temperature range: 0.0 .. 110 degree Celsius: A negative temperature cannot be measured, because the ADC pin can only sample between positive 0.0 and 1.1 Volt.

### Returns

Divide temperature by 10 to get the temperature integer, temperature modulo 10 results in the fraction, for example: int16\_t temperature = 182 means 18.2 degree Celsius.

Definition at line 75 of file ErriezLM35.cpp.

The documentation for this class was generated from the following files:


- src/ErriezLM35.h
- src/ErriezLM35.cpp

## **File Documentation**

## 5.1 src/ErriezLM35.cpp File Reference

Analog LM35 temperature sensor library for Arduino.

#include "ErriezLM35.h"
Include dependency graph for ErriezLM35.cpp:

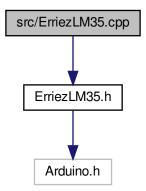

## 5.1.1 Detailed Description


Analog LM35 temperature sensor library for Arduino.

12 File Documentation


## 5.2 src/ErriezLM35.h File Reference

Analog LM35 temperature sensor library for Arduino.

#include <Arduino.h>
Include dependency graph for ErriezLM35.h:

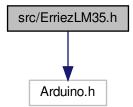

This graph shows which files directly or indirectly include this file:

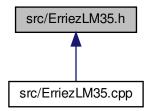

## Classes

• class LM35

LM35 sensor class.

### **Macros**

#define LM35\_MAX\_SAMPLES 10
 Check tested platform.

## 5.2.1 Detailed Description

Analog LM35 temperature sensor library for Arduino.

## 5.2.2 Macro Definition Documentation

## 5.2.2.1 LM35\_MAX\_SAMPLES

#define LM35\_MAX\_SAMPLES 10

Check tested platform.

Maximum number of LM35 ADC samples

Definition at line 45 of file ErriezLM35.h.

14 File Documentation

## Index

```
ErriezLM35.h
LM35_MAX_SAMPLES, 13

LM35, 9
LM35, 9
readTemperature, 10

LM35_MAX_SAMPLES
ErriezLM35.h, 13

readTemperature
LM35, 10

src/ErriezLM35.cpp, 11
src/ErriezLM35.h, 12
```