Erriez RobotDyn 4-digit display library for Arduino 1.0.0

Generated by Doxygen 1.8.11

Contents

1	Rob	otDyn 4	l-digit LEI	O display with TM1637 library for Arduino.	1
2	Hier	archica	l Index		5
	2.1	Class	Hierarchy		5
3	Clas	ss Index	.		7
	3.1	Class	List		7
4	File	Index			9
	4.1	File Lis	st		9
5	Clas	ss Docu	mentation	1	11
	5.1	Robot	Dyn4Digit[Display Class Reference	11
		5.1.1	Detailed	Description	12
		5.1.2	Construc	ctor & Destructor Documentation	12
			5.1.2.1	RobotDyn4DigitDisplay(uint8_t clkPin, uint8_t dioPin, bool displayOn=true, uint8_t brightness=5)	12
		5.1.3	Member	Function Documentation	12
			5.1.3.1	dec(int value, uint8_t pad=1)	12
			5.1.3.2	digit(uint8_t digit, uint8_t value)	12
			5.1.3.3	doubleDots(bool on)	13
			5.1.3.4	hex(unsigned int value, uint8_t pad=4)	13
			5.1.3.5	rawDigit(uint8_t digit, uint8_t value)	13
			5.1.3.6	time(uint8_t hour, uint8_t minute, bool doubleDotsOn=true, bool padHours=true)	13
6	File	Docum	entation		15
	6.1	Erriezl	RobotDyn4	4DigitDisplay.cpp File Reference	15
		6.1.1	Detailed	Description	15
In	dex				17

RobotDyn 4-digit LED display with TM1637 library for Arduino.

This is a RobotDyn 4-digit 7-segment LED display library for Arduino. The PCB contains a two wire TM1637 LED / button controller.

Note: This library uses the double-dot to display a time. The LED dots per segment are not wired and cannot be controlled.

Library features

- Set brightness (0..7)
- Set digit (0..3)
- · Control all individual segments per digit
- · Control double dots (on/off)
- · Display time (hours:minutes)
- Display decimal value (-999..9999) with optional padding
- Display hexadecimal value (0...0xFFFF) with optional padding

Hardware

Connection display with Arduino

Display	Arduino UNO / Nano / Pro Mini / Leonardo / Mega2560 / ESP8266 / Lolin32
GND	GND
VCC	5V (or 3.3V)
CLK	Any DIGITAL pin
DIO	Any DIGITAL pin

Other MCU's may work, but are not tested.

Examples

Arduino IDE | Examples | Erriez RobotDyn 4-digit display:

• 7SegementDisplayDemo

Documentation

- Online HTML
- Download PDF

Usage

Initialization

```
1 {c++}
2 #include <ErriezRobotDyn4DigitDisplay.h>
4 // Connect display pins to the Arduino DIGITAL pins 5 #if defined(ARDUINO_ARCH_AVR)
6 #define TM1637_CLK_PIN
7 #define TM1637_DIO_PIN
8 #elif defined(ARDUINO_ESP8266_WEMOS_D1MINI) || defined(ESP8266_WEMOS_D1MINI) || defined(ARDUINO_ESP8266_NODEMCU)
9 #define TM1637_CLK_PIN
10 #define TM1637_DIO_PIN
11 #elif defined(ARDUINO_LOLIN32)
12 #define TM1637_CLK_PIN
13 #define TM1637_DIO_PIN
                                     4
14 #else
15 #error "May work, but not tested on this target"
16 #endif
18 // Create display object
19 RobotDyn4DigitDisplay display(TM1637_CLK_PIN, TM1637_DIO_PIN);
2.0
21 void setup()
22 {
23
        // Initialize TM1637
24
        display.begin();
25 }
```

Clear display

```
1 {c++}
2 // Clear display
3 display.clear(); // _ _ _ _
```

Set brightness

```
1 {c++}
2 // Set brightness
3 display.setBrightness(0); // Minimum
4 display.setBrightness(7); // Maximum
```

Display time

```
1 {c++}
2 // Display time
3 display.time(11, 59); // 1 1 : 5 9
```

Control time double dot

```
1 {c++}
2 display.doubleDots(true);  // Turn double dot on
3 display.doubleDots(false);  // Turn double dot off
```

Display decimal value

```
1 {c++}
2 // Display decimal values
3 display.dec(-999); // - 9 9 9
4 display.dec(-1); // _ _ - 1
5 display.dec(0); // _ _ _ 0
6 display.dec(1); // _ _ _ 1
7 display.dec(123); // _ 1 2 3
8 display.dec(9999); // 9 9 9
9 display.dec(10000); // - - -
10
11 // Display decimal values with padding
12 display.dec(1); // _ _ _ 1 (Default no padding)
13 display.dec(1, 2); // _ _ 0 1 (2 digits padding)
14 display.dec(1, 3); // _ 0 0 1 (3 digits padding)
15 display.dec(1, 4); // 0 0 0 1 (4 digits padding)
16
17 display.dec(34, 3); // _ 0 3 4 (2 digits padding)
```

Display hexadecimal value

Control individual digits

```
1 {c++}
2 // Display individual digits: 1 2 3 4
3 display.digit(0, 1);
4 display.digit(1, 2);
5 display.digit(2, 3);
6 display.digit(3, 4);
```

Special characters

```
1 {c++}
2 Control individual LED-segments (bit numbers):
3
       - 0 -
       - 6
8
       1
        4
             2
10
         - 3 -
11
13 // Display error: E r r
13 // Display error: E r r _
14 display.rawDigit(0, 0b01111001);
15 display.rawDigit(1, 0b01010000);
16 display.rawDigit(2, 0b01010000);
17 display.rawDigit(3, 0b00000000);
```

```
18
19 // Display H character: _ _ H
20 display.rawDigit(3, 0b01110110);
21
22 // Display negative temperature: - 1 ` C
23 display.rawDigit(0, SEGMENTS_MINUS);
24 display.digit(1, 1);
25 display.rawDigit(2, SEGMENTS_DEGREE);
26 display.rawDigit(3, SEGMENTS_CELSIUS);
27
28 // Display rect
29 display.rawDigit(0, 0b00111001);
30 display.rawDigit(1, 0b00001001);
31 display.rawDigit(2, 0b00001001);
32 display.rawDigit(3, 0b00001111);
```

Library dependencies

• Erriez TM1637 library

Library installation

Please refer to the Wiki page.

Other Arduino Libraries and Sketches from Erriez

• Erriez Libraries and Sketches

Hierarchical Index

2.1	Class	Hiera	rchy
4. I	Glass	HIICHA	II GIIV

This inheritance list is sorted roughly, but not completely, alphabetically:	
TM1637 RobotDyn4DigitDisplay	. 1

6 Hierarchical Index

Class Index

_	_				
3	4	\sim 1	200	1 :04	Ļ
- 5			366	1 161	Г

Here are the classes, structs, unions and interfaces with brief descriptions:	
RobotDyn4DigitDisplay RobotDyn4DigitDisplay class	1

8 Class Index

File Index

Here is a list of all documented files with brief descriptions:

ErriezRobotDyn4DigitDisplay.cpp	
RobotDyn4DigitDisplay library for Arduino	15
ErriezRobotDyn4DigitDisplay.h	??

10 File Index


Class Documentation

5.1 RobotDyn4DigitDisplay Class Reference

RobotDyn4DigitDisplay class.

#include <ErriezRobotDyn4DigitDisplay.h>

Inheritance diagram for RobotDyn4DigitDisplay:

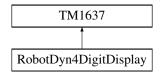

Public Member Functions

- RobotDyn4DigitDisplay (uint8_t clkPin, uint8_t dioPin, bool displayOn=true, uint8_t brightness=5)

 Constructor RobotDyn 4-digit LED display.
- void rawDigit (uint8_t digit, uint8_t value)

Display raw digit.

• void digit (uint8_t digit, uint8_t value)

Display a single digit.

• void doubleDots (bool on)

Display double time dots.

• void time (uint8_t hour, uint8_t minute, bool doubleDotsOn=true, bool padHours=true)

Display time.

void dec (int value, uint8_t pad=1)

Display decimal value.

void hex (unsigned int value, uint8_t pad=4)

Display hexadecimal value with optional padding.

· void overflow ()

Display overflow with four minus digits.

12 Class Documentation

5.1.1 Detailed Description

RobotDyn4DigitDisplay class.

This class

Definition at line 52 of file ErriezRobotDyn4DigitDisplay.h.

5.1.2 Constructor & Destructor Documentation

5.1.2.1 RobotDyn4DigitDisplay::RobotDyn4DigitDisplay (uint8_t clkPin, uint8_t dioPin, bool displayOn = true, uint8_t brightness = 5)

Constructor RobotDyn 4-digit LED display.

Parameters

clkPin	Clock pins.
dioPin	Bi-directional data pin.
displayOn	Optional: Turn display on. Default: true
brightness	Optional: Set brightness 07 Default: 5.

Definition at line 84 of file ErriezRobotDyn4DigitDisplay.cpp.

5.1.3 Member Function Documentation

5.1.3.1 void RobotDyn4DigitDisplay::dec (int value, uint8_t pad = 1)

Display decimal value.

Parameters

value	00009999: Decimal value.
pad	04: Optional: Number of digits to pad with a zero. Default: 1.

Definition at line 170 of file ErriezRobotDyn4DigitDisplay.cpp.

5.1.3.2 void RobotDyn4DigitDisplay::digit (uint8_t digit, uint8_t value)

Display a single digit.

Parameters

digit	Digit number 0 (left digit) 3 (right digit)
value	Digit value 09 or 0x000x0F.

Definition at line 113 of file ErriezRobotDyn4DigitDisplay.cpp.

5.1.3.3 void RobotDyn4DigitDisplay::doubleDots (bool on)

Display double time dots.

Parameters

on	true: Turn double time dots on.
	false: Turn double time dots off.

Definition at line 126 of file ErriezRobotDyn4DigitDisplay.cpp.

5.1.3.4 void RobotDyn4DigitDisplay::hex (unsigned int value, uint8_t pad = 4)

Display hexadecimal value with optional padding.

Parameters

value	0x00000xFFFF: Hexadecimal value
pad	04: Optional: Number of digits to pad with a zero. Default: 4.

Definition at line 224 of file ErriezRobotDyn4DigitDisplay.cpp.

5.1.3.5 void RobotDyn4DigitDisplay::rawDigit (uint8_t digit, uint8_t value)

Display raw digit.

Parameters

digit	Digit number 0 (left digit) 3 (right digit)
value	LED segments

Definition at line 98 of file ErriezRobotDyn4DigitDisplay.cpp.

5.1.3.6 void RobotDyn4DigitDisplay::time (uint8_t hour, uint8_t minute, bool doubleDotsOn = true, bool padHours = true)

Display time.

Parameters

hour	059: Hours
minute	059: Minutes
doubleDotsOn	true: Display double time dots. (Default)
	false: Turn double time dots off.
padHours	true: Display first digit as 0 when hours $<$ 10. false: Turn first digit off when hours $<$ 10.

14 Class Documentation

Definition at line 149 of file ErriezRobotDyn4DigitDisplay.cpp.

The documentation for this class was generated from the following files:

- ErriezRobotDyn4DigitDisplay.h
- ErriezRobotDyn4DigitDisplay.cpp

File Documentation

6.1 ErriezRobotDyn4DigitDisplay.cpp File Reference

RobotDyn4DigitDisplay library for Arduino.

```
#include <pgmspace.h>
#include "ErriezRobotDyn4DigitDisplay.h"
```

6.1.1 Detailed Description

RobotDyn4DigitDisplay library for Arduino.

Source: https://github.com/Erriez/ErriezRobotDyn4DigitDisplay Documentation←: https://erriez.github.io/ErriezRobotDyn4DigitDisplay

16 File Documentation

Index

```
dec
     RobotDyn4DigitDisplay, 12
digit
     RobotDyn4DigitDisplay, 12
doubleDots
     RobotDyn4DigitDisplay, 13
ErriezRobotDyn4DigitDisplay.cpp, 15
hex
     RobotDyn4DigitDisplay, 13
rawDigit
     RobotDyn4DigitDisplay, 13
RobotDyn4DigitDisplay, 11
    dec, 12
    digit, 12
    doubleDots, 13
    hex, 13
    rawDigit, 13
    RobotDyn4DigitDisplay, 12
    time, 13
time
     RobotDyn4DigitDisplay, 13
```