A16	ABS control module
B161	AC refrigerant pressure sensor
B138	Accelerator pedal position (APP) sensor
G1	Alternator
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
B132	Camshaft position (CMP) sensor
S258	Clutch pedal position (CPP) switch
CAN-H	Controller area network (data bus) high
CAN-L	Controller area network (data bus) low
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A207	Electronic stability program (ESP) control module
A35	Engine control module (ECM)
M6	Engine coolant blower motor
K12	Engine coolant blower motor relay
K12-I	Engine coolant blower motor relay 1
K12-II	Engine coolant blower motor relay 2
R46	Engine coolant blower motor resistor
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
Y104	Evaporative emission (EVAP) canister purge valve
Y28	Exhaust gas recirculation (EGR) solenoid
B149	Exhaust gas recirculation (EGR) valve position sensor
M12	Fuel pump (FP)
X28-II	Fuse box/relay plate, engine bay 1
X28-I	Fuse box/relay plate, fascia
F	Fuses
B72-I	Heated oxygen sensor (HO2S) 1
B72-II	Heated oxygen sensor (HO2S) 2
T1	Ignition coil
15	Ignition switch - ignition ON
Y3	Injector
A5	Instrument panel
A75	Instrumentation control module
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
B83	Manifold absolute pressure (MAP) sensor
A11-I	Multifunction control module 1
A11-II	Multifunction control module 2
S231	Power steering pressure (PSP) switch
M73	Secondary air injection (AIR) pump
P7	Tachometer
A177	Throttle control unit
M89	Throttle motor
B169	Throttle motor position sensor
VAN	Vehicle area network (data bus)
P9	Vehicle speedometer

A.D22.120
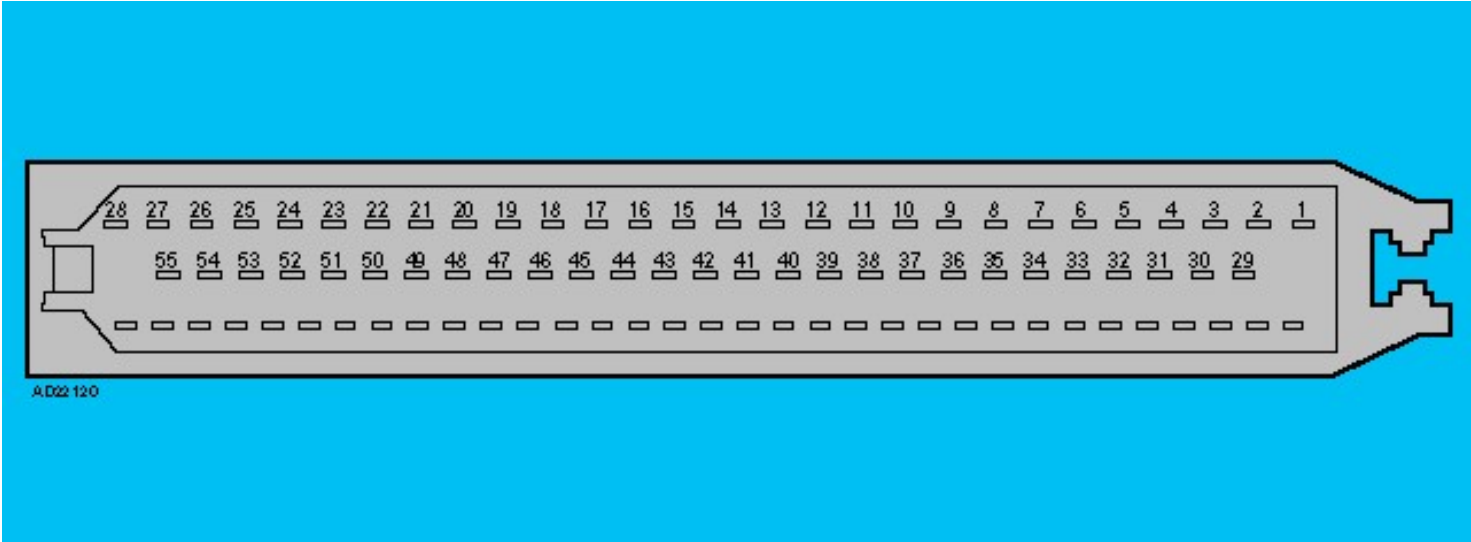
bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

30

15

X28-II

A=16 sw
B=16 gr
C=16 gn
D=10 sw
E=8 sw

F16 30A
F15 30A
F2 15A
A11-II
F8 20A
F4 10A

16 10 1 16 9 11 8 13 3 6 1 5 12 9
B A A A 9 B A A A D D C B

7313 1254 1351 1320 1150 1201 1203 1229 1226 7109 9012 9013 CMD4 CC1

VAN A
VAN B
C

1320A 1320B 1320C 1320D 1355 1150 7109 M7112 CMD4A CC2

Y3-I Y3-II Y3-III Y3-IV Y104 T1 S231 S258 S13

1321 1322 1323 1324 1203 1229 1232 1151 1152 1226 CMD4 6783 7309
A A A A A C f2 f2 C C A b4 f1 m1
h2 g3 g2 h3 h4 f2 f2 g3 h3 f3

A=32 gr B=48 br C=32 sw

A35

b3 a3 e2 d3 e3 d2 b1 b2 g4 e1 f4 f3 a2 a1 a2 b1 k1 c1 a3 c3 a2
A A C C C C A A C A C C A B B B B A C A C

131 130 122 1303 1302 124 1361 1362 1373 1362 1346 1131 M132F 1377 1378 1380 1379 1393 M132E 1363 1341

1362A 1352B M1312 M1240

7313 1201

M73 M12 B72-I B72-II B54 Y28 B132 B138 B83 B25
1 3
M M
2 4

M1241 MC36C 1351A 1351B 1254 6785 M1115 B149 B132

ME10 M1241 MC36C

31

EP2 EP3 306177

30

15

9005

9004

VAN VAN   VAN VAN

X28-I G G   A5 19 22
       10 8

A11-I   A75

                    H63 P7 P9

8 6 2 4 7
C C C C C

C= 40 sw
G= 10 sw

9013 9012 9000 9001 9008

A VAN
B VAN

C

9000 9001

CAN-H CAN-L

X1 11
A207
     7
A16

AC   AC

K12 MG   K12-I K12-II R46 MG

2 5 1   2   2 5   3   1

CAN-H CAN-L

1524 1512A   156 1514 1512A

9010 9011 9006A   1540 1599   1550 1540 1599
B   B   B   B   B   B   B   B

h3 h4 h2   j4   f2   k4   j4   f2

A35

b3 c3   c4 h1 g1 b1 b4 c1 a1   d4 e4   h4 h1   l4 m4   d4 e4 a3
C C   C   C   C   A   B B   C

A=32 gr B=48 br C=32 sw

135 134   104 1335 1334 1367 1219 1220 1218   1367 1366   M1320 M132C   MC11A MC11B   8092 8093 8094

2 1   3 5 6 1 2   2 1   1 2 3

B69   G1   M89   B169   B24   B161
              A177   AC

              4

              1335

31
                              ME01   MC11A   ME01

              306176   EP5   EP2   EP5

Manufacturer: Citroen   **Model:** Xsara Picasso 1,8   © Autodata Limited 2010
Engine code: 6FZ (EW7J4)   **Output:** 85 (115) 5500   **Valid forever.** 27.10.2020
Tuned for: Sagem S2000 PM1   **Year:** 2002-07   V8 500-   Autodata