Homing Procedures

If an incremental encoder is used in closed loop control with motor, it is not possible for the controller to know the absolute position of the motor when the system is initially powered up. To establish a known position, it is necessary to perform a search for a home or index mark. This is referred as initialisation or homing sequence.

The present document comprises the homing sequence design concept and control on TwinCAT 3 Software. To control the different homing sequences it is only needed to control 3 inputs.

Note: The program is thought to work with a NC Homing Sensor and NC Limit Switches.


Inputs:

- nCommand (always =10)
- nCmdData
- fHomePosition (The position we want set after get the Reference Position)
- nHomeRevOffset (Number of Index ...)

Homing Procedure 1: One of the limit switches (L+, L-) as reference position

One of the mechanical limit switches can be chosen as a reference position from where the movement can start.

When the homing sequence starts, motor moves to the chosen limit switch in defined direction and activates the switch. After that it is considered that movement starts from zero position.

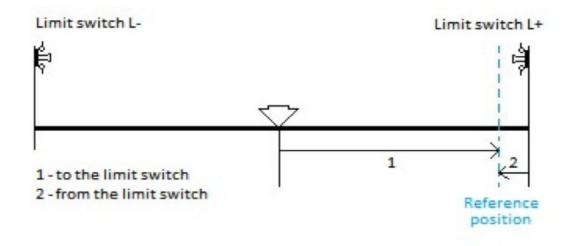

nCommand = 10

nCmdData = 1 (Backward direction (L-))


nCmdData = 2 (Forward direction (L+))

fHomePosition (The position we want set after get the Reference Position)

Homing Procedure 2: Home switch as reference position I

Home switch can be chosen as reference position for the ending of the initialisation sequence and beginning point of the movement sequence.

When the homing sequence starts, motor moves to the chosen limit switch, activates it, and then moves away from it to the home switch. Referencing is done by activating home switch which has push button functionality but only from one direction.

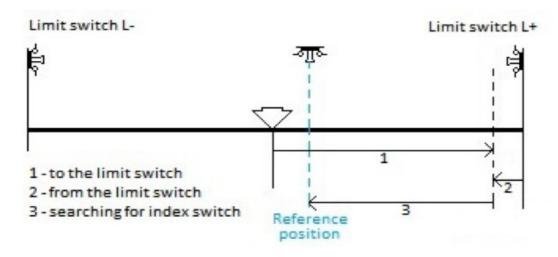

Picture 2: Home switch as reference position I

nCommand = 10

nCmdData = 3 (Backward direction (L-))

nCmdData = 4 (Forward direction (L+))


fHomePosition (The position we want set after get the Reference Position)

Homing Procedure 3: Home switch as reference position II

Home switch can be chosen as reference position for the ending of the initialisation sequence and beginning of the movement sequence.

When the homing sequence starts, motor moves to the chosen limit switch, activates it, and then moves away from it to the home switch.

Referencing is done by approaching home switch from both directions and then calculating the middle or center position. Home switch has a push button functionality.

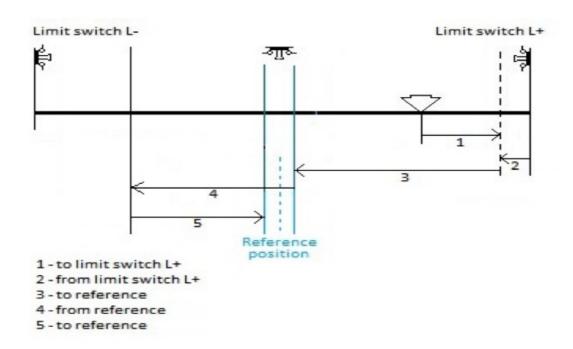


Picture 3: Home switch as reference position II


```
nCommand = 10
nCmdData = 5 (Backward direction (L-))
nCmdData = 6 (Forward direction (L+))
fHomePosition (The position we want set after get the Reference Position)
```

Homing Procedure 4: Home switch as reference position III

Home switch can be chosen as reference position for the ending of the initialisation sequence and beginning of the movement sequence. Referencing is done by activating a home switch which behaves like momentary switch (step function)./Boy/TwinCatAxis.opi

When this type of homing is used, no mechanical limit switches are needed.



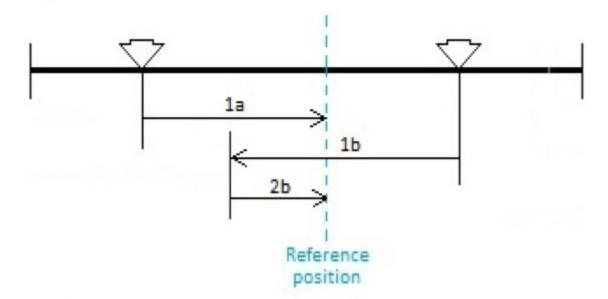

1a - when home switch signal is 0 - search direction is negative

1b - when home switch signal is 1 - search direction is positive

2b - search direction is negative

Picture 4: Home switch as reference position III


nCommand = 10

nCmdData = 7 or 8 (doesn't matter, the direction is the same in both cases because depends on the sensor)

fHomePosition (The position we want set after get the Reference Position)

Homing procedure 5: Index or reference point of an (incremental) encoder as reference position

Index or reference point of an incremental encoder can be chosen as ending point of initialisation sequence and beginning of the movement sequence. Reference is n^{th} index point from one end position defined by limit switch L+ or L-.

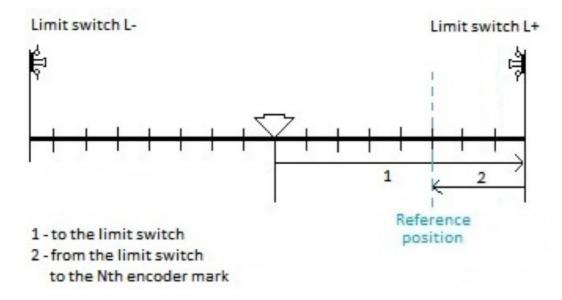

Picture 6. Index or reference position

nCommand = 10

nCmdData = 9 (Backward direction (L-))

nCmdData = 10 (Forward direction (L+))

nHomeRevOffset = Index number (drawing case =3)

fHomePosition (The position we want set after get the Reference Position)