


DIY Temperature Sensor Module User Manual

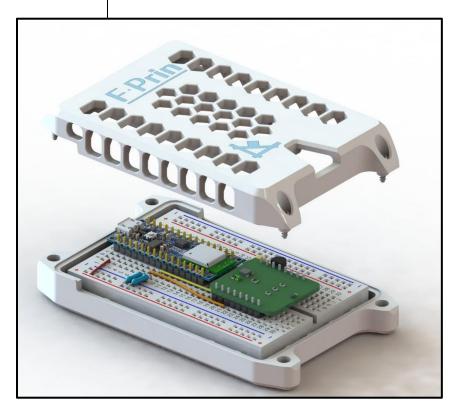

Document No. Type RPT Revision 01

State Released

Authors L Parrish

Project FP05



Contents

1 Introduction	3
2 Assembly	3
 2.1 Solderless Breadboard and Circuit 2.1.1 Materials and Tools 2.1.2 Solderless Breadboard Assembly Instructions 	3 3 5
2.2 Module Housing2.2.1 Materials and Tools2.2.2 Module Housing Assembly Instructions	11 11 13
3 Firmware Installation	14
3.1 Arduino IDE and Nano 33 BLE Board Manager Installation	14
3.2 Firmware Upload	15
4 Datalogging Setup	17
4.1 Using the Arduino IDE Serial Terminal	17
4.2 Using Tera Term Serial Terminal	18
5 Revision History	19
6 Appendix	20
6.1 Bill of Materials	20
6.2 Circuit Diagram	21
6.3 Plastic Part 3D Print Settings	21



1 Introduction

Temperature measurement devices are ubiquitous in engineering and other scientific fields because temperature is a parameter that affects nearly all systems and is often essential to measure and control. Through recent work at FPrin involving temperature measurement and analysis we surveyed a series of temperature sensors and found that many common sensors have a surprisingly large rated accuracy specification. For example, perhaps the most used type of temperature measurement device, the thermocouple, typically has a range of ± 1 -2 °C. For some applications this is an acceptable level of accuracy, but often is insufficient. FPrin aims to provide a cost-effective, easy to build and program, and most importantly highly accurate temperature sensor module that allows the user to measure ambient temperature with a high degree of confidence.

A primary development consideration was the accuracy of the temperature sensor used in the module. To achieve this, we incorporated the AS6221 digital temperature sensor from AMS. The integrated circuit features I^2C communication for data transmission, low power consumption, and most importantly an excellent temperature accuracy rating of ± 0.09 °C. Additionally, all components used to build the module can be easily sourced and assembled with no soldering and minimal hand tools. Finally, a housing for the module can be easily fabricated using FDM 3D printing with PLA. Currently there are two configurations for the module housing, one that joins the upper and lower housing with a plastic snap-fit flexure, and a second configuration that uses thread-forming screws for a more secure connection. The CAD, Code, and documentation for the project are hosted on FPrin's GitHub Repository Here:

https://github.com/FPrinLLC/FPrin_Temperature_Sensor_Module.git

2 Assembly

2.1 Solderless Breadboard and Circuit

2.1.1 Materials and Tools

Description	Quantity	Image
Arduino Nano 33 BLE	1	
MikroE Thermo 28 Click PCBA	1	




Through Hole Resistor 2 kΩ	2	
Through Hole Ceramic Capacitor 0.33 µF	1	334
Through Hole Ceramic Capacitor 0.1 µF	1	104
L878L33 Linear Voltage Regulator	1	6€ 552
Solderless Breadboard	1	a b c d e f g h i j
Breadboard Jumper Wires	~6 inches	

The following tools are required to assemble the solderless breadboard and circuit:

- Flush cutters
- Wire Strippers




2.1.2 Solderless Breadboard Assembly Instructions

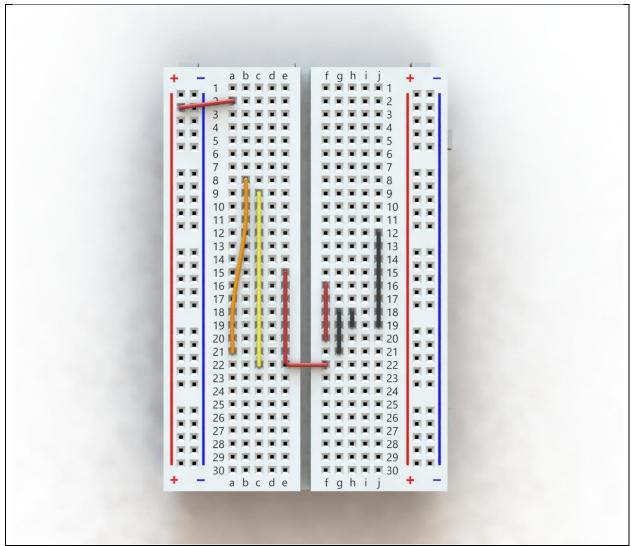


Step 1: Cut prototyping wire to length and insert into the breadboard as shown in the image above.

Note that the wires should be pressed down flush to the top surface of the breadboard.



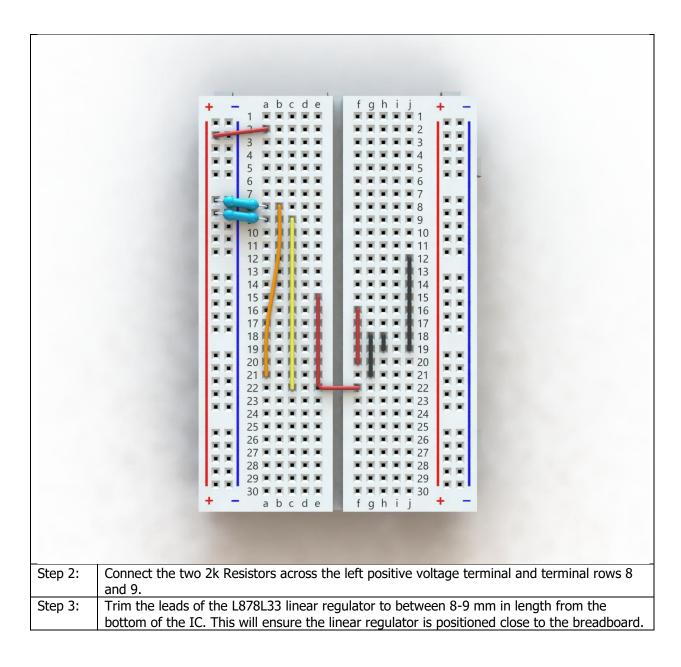




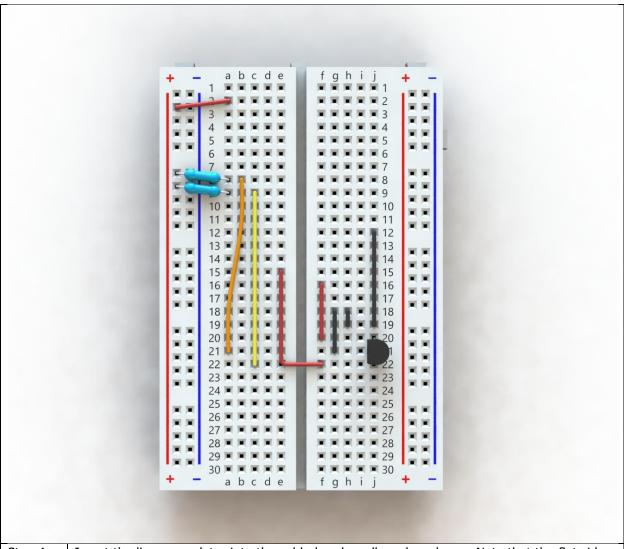


Step 4: Insert the linear regulator into the solderless breadboard as shown. Note that the flat side of the integrated circuit faces towards the center of the breadboard.



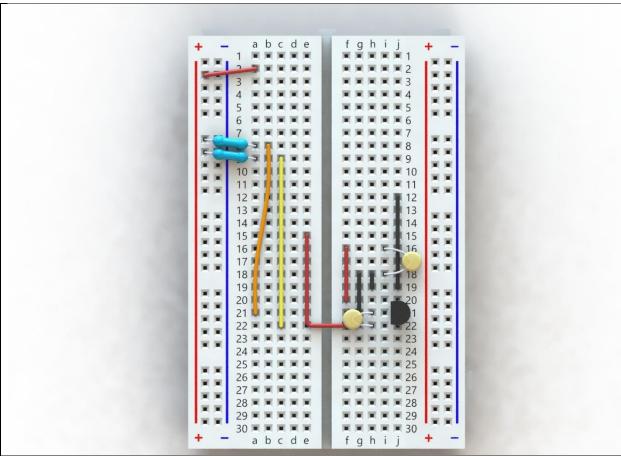


Step 5: Insert the ceramic capacitors into the solderless breadboard as shown. Note that the capacitor across rows 16 and 18 is the 0.1 μ F capacitor and the capacitor across rows 21 and 22 is 0.33 μ F. After inserting the capacitors into the breadboard, bend the capacitors down towards the surface of the breadboard as shown. This will ensure that the rest of the components can assemble without interference.



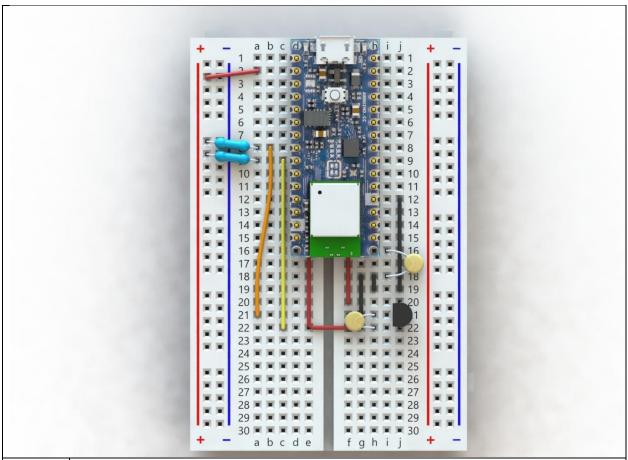

Step 6: Press the Arduino Nano 33 BLE into the breadboard as shown. Note that the upper left pin next to the USB connector is in breadboard position d1.



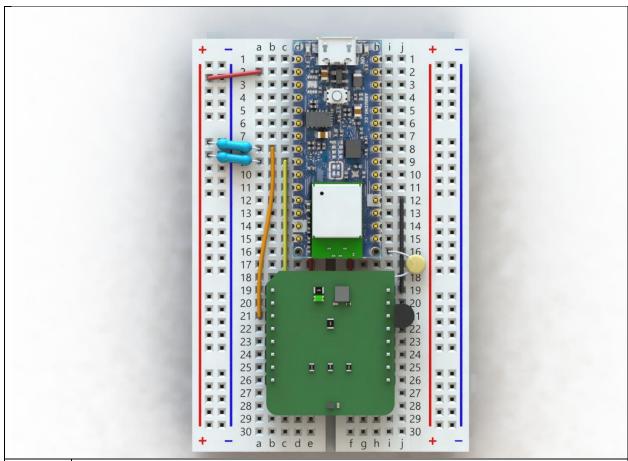

Step 7: Press the MikroE Thermo 28 Click PCBA into the breadboard as shown. Note the pin labeled 3V3 should be in breadboard position i20.




2.2 Module Housing

2.2.1 Materials and Tools

The following parts are required to assemble the module housing:

The following parts are required to ass		
Description Solderless Breadboard Assembly	Quantity 1	Image
Housing Lower Half	1	
Housing Upper Half	1	



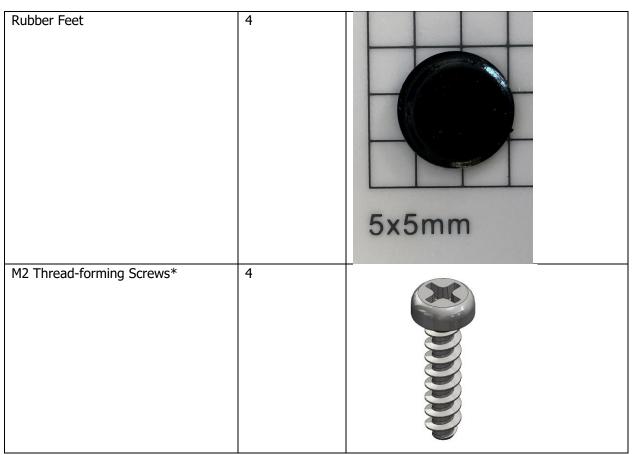


^{*}If building the Screw Boss Configuration.


The following tools are required if building the housing configuration with screw bosses:

• Size J0 Phillips Screw Driver




2.2.2 Module Housing Assembly Instructions

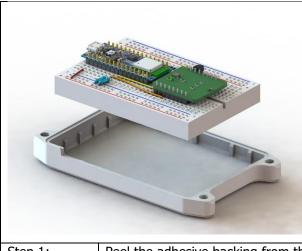

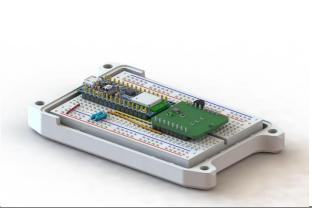

Step 1: Peel the adhesive backing from the bottom of the solderless breadboard, then place the solderless breadboard in the lower housing so the USB connector is on the same side as the raised lip.


Step 2: Press the breadboard down firmly to adhere the breadboard to the lower housing.

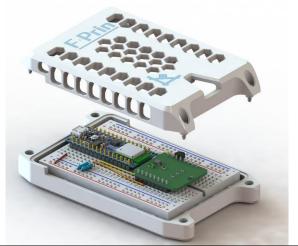



Step 3: Align the upper housing with the lower housing, then press the upper housing down until the locking features click into place. Note: If building the housing configuration with screw bosses, insert the screws into the upper half of the enclosure, then tighten to secure using a Phillips screwdriver.



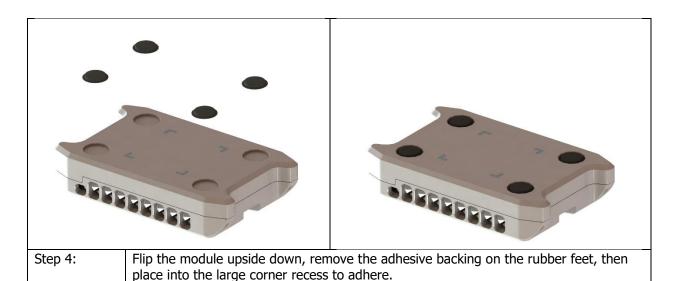


3 Firmware Installation

3.1 Arduino IDE and Nano 33 BLE Board Manager Installation

To download the Arduino IDE required for programming, navigate to the following link and download the latest Arduino IDE version for your operating system: *https://www.arduino.cc/en/software*

After installing the Arduino IDE, launch the IDE and navigate to the boards manager using the following path: Tools > Boards > Boards Manager

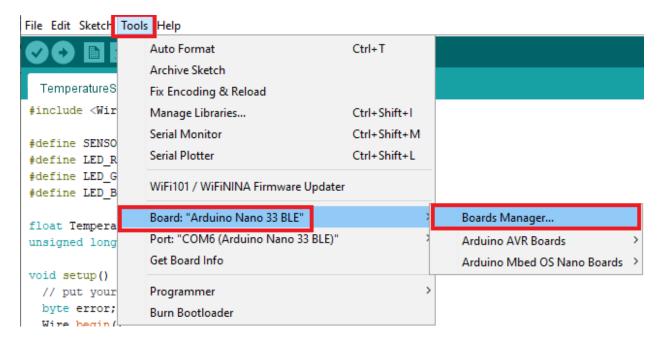




After opening the board manager interface, find the installation for "Arduino Mbed OS Nano Boards" and click the install button to download the board profile.



Finally, navigate to Tools > Boards > Arduino Mbed OS Nano Boards > Arduino Nano 33 BLE

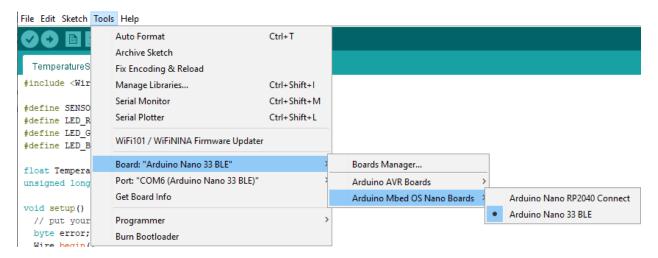


3.2 Firmware Upload

To upload the temperature sensor firmware to the Arduino, first connect the assembled temperature sensor module to the PC using a USB cable. Then open the file "Temperature_Sensor.ino" in the Arduino IDE and select the COM port for the Arduino Nano 33 BLE under the "Tools" tab. The Arduino sketch can be downloaded from the project GitHub Repository here:

https://github.com/FPrinLLC/FPrin_Temperature_Sensor_Module.git



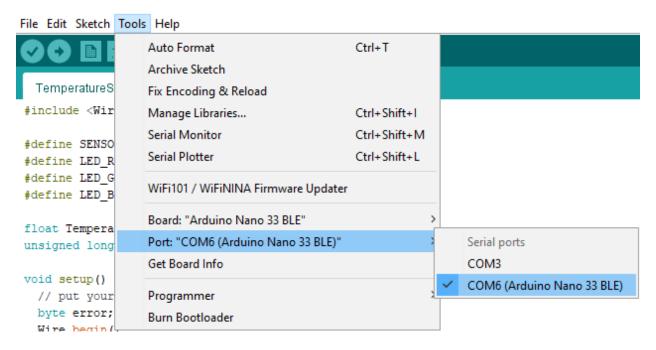

To flash the firmware, click the Blue Arrow Icon at the top of the IDE. When the firmware is flashed, you will see the following message in the command log indicating that the firmware flash was successful.



4 Datalogging Setup

To test the temperature sensor the built-in serial monitor in the Arduino IDE can be used to easily access temperature data and test the module. For longer term temperature measurement and datalogging, we recommend Tera Term, an open-source terminal simulator that can log data to an output file with a timestamp.

To connect to the temperature sensor module, you'll need to connect to your PC using a USB micro to USB Type A cable. After plugging in the module, the green LED on the MikroE PCBA should light up indicating that the PCBA is receiving power.

4.1 Using the Arduino IDE Serial Terminal

After connecting the module to power, open the Arduino IDE and select the COM port for the module using the same procedure in section 3.2. Then click the serial monitor icon in the top right corner of the Arduino IDE:



The serial monitor should open in a new window and request the user for a sampling interval. This is the time interval in seconds between temperature measurements reported by the temperature sensor module.



To enter the sampling interval, type a numeric value into the entry bar at the top of the serial monitor, then, click the send button or press enter.

```
COM6

COM6

Send

Send

Signorm

Signor
```


After the command is sent, the serial monitor will confirm the sampling interval and begin printing temperature data to the serial monitor.




4.2 Using Tera Term Serial Terminal

To download Tera Term, use the following link: https://ttssh2.osdn.jp/index.html.en

After connecting the module to power through the USB cable, launch Tera Term and select 'Serial' for a new connection type followed by the COM port, then press 'OK' to connect.

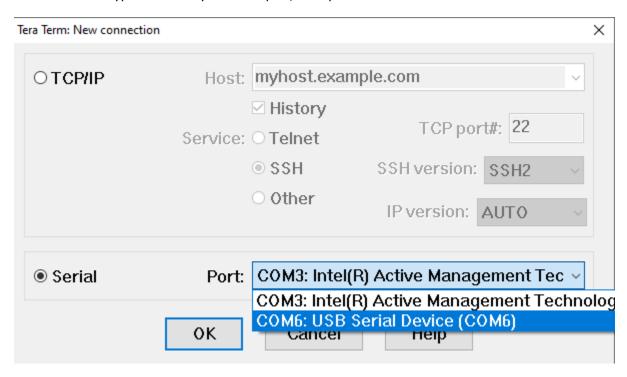


After connecting to the temperature sensor module, a terminal window will pop-up and request a sampling interval in seconds. Enter the sampling interval in seconds and the module will begin acquiring data.

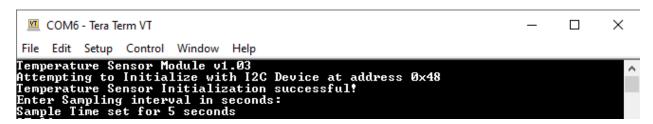

To log data to a file, navigate to File > Log and a pop-up will request a location to save the file as well as a file name. Additionally, there are several check box options for the saved data file, which we recommend selecting Timestamp, Append, and Plain Text.



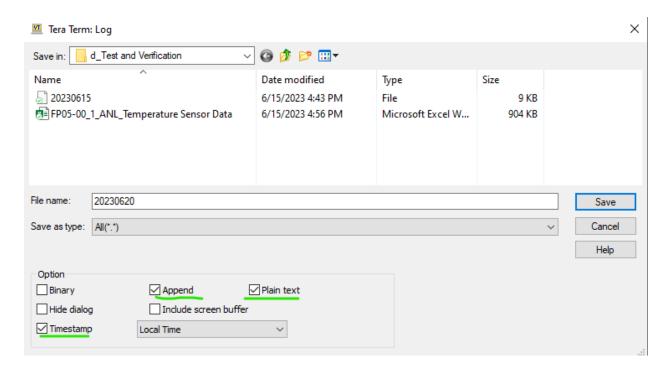

Click Save when ready to begin logging data. Now as long as the terminal is open, any data received will be appended to the datafile that can easily be read using a text editor such as notepad or imported into a spreadsheet or data analysis tool like MS Excel.

To stop logging data, navigate to File > Stop Logging. To disconnect from the temperature sensor module, navigate to File > Exit, this will close the terminal and stop receiving data.

5 Revision History

Rev	Description of Change	Project No.	Originator	Date
01	Initial Draft	FP05	L. Parrish	20 Jun 2023



6 Appendix

6.1 Bill of Materials

ASSY NO: <u>FPR120</u>08

DIY Temperature Sensor

DESCRIPTION: Module

REV: 1

PROJ # FPR05


BOM Cost (USD): \$59.29

		BOW COST (03D).	ŞJ3.23		
Item	Qty	P/N	Title	Vendor	Unit Cost
1	1	B07LFD4LT6	Solderless Breadboard	Amazon	\$7.59
2	1	ABX00034	Arduino Nano 33 BLE	Amazon	\$26.40
3	1	MIKROE-5466	MikroE Thermoclick 28	Mikroelektronika	\$11.00
4	1	FPR12089	Bottom Housing	N/A	\$0.00
5	1	FPR12090	Upper Housing	N/A	\$0.00
6	1	95495K18	Rubber Feet	McMaster-Carr	\$4.13
7	2	2.00KXBK-ND	2k Through-hole Resistor	Digikey	\$0.10
8	1	497-16176-2-ND	3.3V Linear Voltage Regulator	Digikey	\$0.54
9	1	399-9882-2-ND	0.33 μF Ceramic Capacitor	Digikey	\$0.49
10	1	399-9859-2-ND	0.1 μF Ceramic Capacitor	Digikey	\$0.32
11 ¹	1	99461A916	M2 Thread-forming Screws	McMaster-Carr	\$8.62

[1] Only required for the enclosure variation with screw bosses



6.2 Circuit Diagram

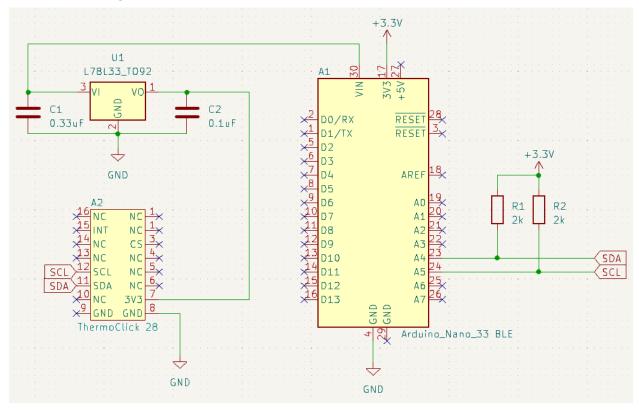

6.3 Plastic Part 3D Print Settings

The 3D printed housing components were fabricated on both a Bambu Lab X1C and Prusa i3MK3S FDM 3D printer with a default 0.4 mm nozzle with Hatchbox PLA and the associated filament profile. The solid models were prepared using Bambu Studio and PrusaSlicer respectively. We have included the slicing setting for PrusaSlicer below:





Horizontal shells	
Solid layers:	Top: ☐ ● 5 Bottom: ☐ ● 4
Minimum shell thickness:	Top: 🔒 • 0.7 mm Bottom: 🔒 • 0.5 mm
	ight 0.2 mm. Minimum top shell thickness is 0.7 mm. yer height 0.2 mm. Minimum bottom shell thickness is 0.5 mm.
Quality (slower slicing)	
Extra perimeters if needed:	₽•□
Ensure vertical shell thickness:	□ • ☑
Avoid crossing perimeters:	□ • □
Detect thin walls:	□ • □
Detect bridging perimeters:	₽•□
Advanced	
Seam position:	■ Nearest ∨
• External perimeters first:	
Infill	
Fill density:	□ • 15% ∨ %
•	
Fill pattern:	
Top fill pattern:	Rectilinear
Bottom fill pattern:	Rectilinear V



Reducing printing time	
Combine infill every:	🔒 • 1 🛊 layers
Only infill where needed:	
Advanced	
Solid infill every:	■ • 0 • layers
• Fill angle:	□ • 45 °
Solid infill threshold area:	□ • 0 mm²
Bridging angle:	□ • 0 °
 Only retract when crossing perimeters: 	
Infill before perimeters:	□ • □
Skirt	
Loops (minimum):	□ • 1 •
Distance from object:	D 2 mm
Skirt height:	□ • 3 • layers
Draft shield:	₽•□
Minimal filament extrusion length:	■ • 4 mm
Brim	
Brim width:	□ • 0 mm