Digital imaging systems

Linus Falk

February 24, 2023

Contents

1	Course concepts	2
2	What is an image	3
3	Photography	10
4	SEM - Scanning Electron Microscopy	13
5	Light microscopy	17
6	Astronomical imaging: Telescopes and Doppler imaging	20
7	Transmission Electron Microscopy - TEM	24
8	Ultrasound	27
9	PET, CT and MRI	31

1 Course concepts

The aim of the course is to give a unified perspective on the variety of digital imaging technologies that have been developed the last decades. Different aspects of the imaging technologies will be discussed such as:

- What they are imaging
- How
- With what quality
- For which applications

After this course you should be able to

- Describe the **physics** and **techniques** behind modern imaging techniques
- Describe the basic principles for sample preparation in relation to the imaging technique.
- Reason and analyze around possibilities and limitations in resolution with regards to:
 - density
 - space
 - time
 - spectrum
- Describe how the techniques affect the image and subsequent interpretation and analysis
- Reason about suitability of different imaging techniques in combination with image processing and machine learning for different applications.

The subject of imaging is interdisciplinary and cover a lot of subjects:

- Physics
 - Optics, wave propagation
 - Solid state sensing principles
- Electronics
 - Circuit designs
 - Sensor technology
 - Signal processing
- Mathematics
 - Geometry
 - Fourier analysis
- Computer science

No one is an expert on all imaging technologies and the course therefore consists of lectures of several guest lecturers. They will try to keep it in the common structure.

2 What is an image

An image is a multidimensional sample of the reality that consists of:

$$D = F(x, y, z, w, t) \tag{1}$$

- Densitometry **D**, signal intensity
- The spatial dimensions x,y,z
- Spectral dimension w wavelength
- ullet time ${f t}$ the temporal dimension

We don't have any 5D sensors so we need to **multiplexing**. Since the subject is digital images, each dimension and the function value must be **quantized** into a limit range of discrete values.

The densiometric aspect **D** or intensity, what physical property is being imaged? is it a reflection, transmission of light, a density distribution of a molecule, a surface topology or an elastic property of an object? How well can we describe this property? and what physical effect do we use to measure: photo resistance, inducted charge or photon counting?

We create images from signals that can be of different types: electromagnetic waves (light, thermal, x-rays), pressure variations (sound) or contact forces (Braille).

We can use more than only the visible part of the electromagnetic spectrum, we can use all of it with different techniques.

Emission, excited emission, transmission or reflection

Imaged physical properties can be categories into: **Emission** (Astronomy, Autoradiography), **Exited emissions** (Flourescense), **transmission** (light microscopy, film scanning, classical x-rays) and **Reflections** (Normal photography, Document scanning, satellite sensors)

Consider where/what is the light source. In case of **emission** we have a well defined spectral properties, coming directly from the source. **Transmitted light** on the other hand is exponentially absorbed with a logarithmic intensity that is directly proportional to the absorbing matter. In the case of **reflection** is the surface orientation as well as the material properties and the direction and the spectral characteristics of the illumination that determines the signal. There is a need to differentiate between diffuse and specular reflection.

The illumination can be controlled in the case of a **Active** sensor system. This can be done either all at once for the whole scene or by scanning a pixel or a line at a time. An important example of a **Active** sensor system is: **LIDAR**: "laser imaging, detection and ranging".

Densitometric aspects: Resolution

It is important to consider what the densitometric resolution is and what is the signal to noise rate SNR. What pixel depth can we get or in other words how

many greylevel do we get and are all of them meaningful. And what is the actual property that is measured?

- Material density
- Density
- Energy
- Photon count
- Topographic elevation

The contrast resolution is another aspect, the image should have a correct exposure time such that we use the most of the dynamic range of the sensor, not blowing up the brighter parts or under expose the image not showing any details in the darker parts of the image. Using most of the dynamic range of the sensor should result in white noise in the least significant bit. The optimal use of bits is therefore where we have about 1 bit of noise. If the conditions for imaging allows it, it can be possible to increase signal to noise ratio by taking the average of multiple exposure according to:

$$\sqrt{\text{number of exposures}}$$
 (2)

We also need to have in mind the spatial consistency and ask: Will all positions in the image give the same density value for the same signal, there could be random or systematic variations where systematic variations can be caused be for example defects or imperfections in the instrument/sensor that can be corrected for by calibration or other methods. One tool for correcting imperfections are: shading correction.

Imperfections is not only present considering spatial consistency where different part of the sensor register differently, we can have non linearity behavior of the registered sensor that must be corrected for with calibration. We need to know if the grey value is linearly or logarithmically related to the physical property we are interested in. In the field of normal photography is the intensity registered by our sensor linearly related to the reflected light and in transmission imaging is the light absorption logarithmically related to the amount of material the light passes through. If calibration is needed then it will be of importance to investigate of stable it is over time.

The spatial dimension (x,y,z)

Questions regarding the spatial dimensions to have in mind: How are the spatial dimensions **x**,**y**,**x** mapped into the image? Is the image a slice, a projection a depth map or something else? Are there any distortions that make the image not geometrically correct? What is the spatial resolution. Is it possible to get more than 2 dimensions with the available technology?

The spatial dimension can be mapped as **projection** that gives a 2D image of reflections from visible surfaces (in 3D) for the sensor or a transmission through the object. A **distance** image give explicit information as seen from a single point $(2\ 1/2\ D)$. With a **slice** we select a slice from a volume. **Tomographic**

reconstruction is a method to compute information about the internal density structure using measurements of numerous line integrals.

The spatial resolution is limited in different ways in analogue and digital images. In Analogue there are constraints of the aperture of the lens and the wavelength of the light while in digital images the limiting factor is the sampling according to the sampling theorem. Under sampling can give problems such as aliasing and when it is caused be poor sampling the result is often worse then when it is because of limited resolution. It is therefore common to have low pass/blurring filters to prevent sharper images than can be digitized. There have been recent inventions that describes the ways of going beyond the resolution limits. example??

Distance images is a wat of representing 3d in 2D by making measurements of the distance to the surface of the object to the sensor for all points in the image. This can be done using either **passive** sensors with: Parallax camera or stereo images. With an **active** it can be done with the measurement of time of flight (lidar, radar, ultrasound, laser) or with triangulation, structured light.

Creating 3D images or image volumes is a rapid growing area in digital imaging mostly driven by medicine. In contrast to the 2D images these can not be viewed directly and it's necessary to use special visualization efforts to interpret the result. These types of imaging system generates very large data sets. Imaging volumes can also be done be psychically slicing (and destroying the sample in the process) and the result would be a 2D image of this thin slice. Another category of volume imaging is **Tomograpy** that includes: x-ray(CT scan, magnetic resonance (MRI), Emission (SPECT and PET), electron microscopic (EMT) and Optical coherence (OCT what is this?)). Confucal microscopy, ultrasound and holography are also volume imaging techniques.

Reconstructed images like tomographic reconstruction is a type of inverse problem with multiple dimensions that estimates a system from a finite number of projections. Examples of where this technique is used are:

- Transmitted X-rays, Computer Tomography (CT)
- Radioactive decay, Emission Tomography
 - PET
 - SPECT
- MRI, emitted excited radio frequency
- SAR (synthetic aperture radar)
 - CARABAS long wave incoherent

The spectral dimension w

In all imaging we need to limit the spectral range we are imaging by choosing a range in a wavelength interval. Different spectral ranges often give different image contrast. The signal in each of the pixels is the result of a convolution between:

• The spectral distribution of the illumination

- The spectral absorption/reflection properties of the object.
- The spectral sensitivity function(s) of the sensor.

The visual perception by the human eye is the result of the application of the three different spectral sensitivity ranges of the cones. Most imaging system are designed to be optimized for human color reproduction fidelity. There are many different illumination and reflection functions that can give the same color experience.

For capturing a color image we need three spectral samples which can be captured in different ways where the **Bayer filter** is the most common. This pattern leads to loss of resolution but is restored by interpolation of some sort. The alternative to having the **Bayer filter** is to have three sensor chips each color, splitting the image with a prism. This solution is expensive and requires also high mechanical precision. A third option is to stack the three sensing layers for the different color channels which have the benefit of not losing resolution/not need of interpolation.



Figure 1: Bayer filter

What limit us to only use three spectral channels in image analysis is conventional thinking and that there are many cost effective camera in this range. When we register more than one spectral channel we need to use multiplexing, switching between channels either spatially or temporally. Ultimately it should be the application that decides how wide the spectral range should be and the number of channels. It is possible to achieve spectral imaging in a method similar to the Bayer filter, there are cameras with $9 (3 \times 3)$ visible light channels and $16 (4 \times 4)$ infrared channels that together can give us 25 channels simultaneously. As the number of channels increase to several hundred we call it **imaging spectroscopy** or hyperspectral imaging. This type of imaging creates a large amount of data and needs effective transmission and compression.

A solution to capture a large number of spectral channels is to have a rotating filter wheel in front of a wide band, single channel sensor/sensing chip. This requires the scene to be stationary since there will be several images registered.

Temporal aspects (t)

Each image will register something for defined time interval and if there is only one single temporal slice we have a still image, while if there are multiple exposures we get a film/movie. For each captured image or exposure we need to define the exposure time, the following questions should be considered:

- Does it give motion blur, how fast is the scene/object moving?
- Can it be varied freely?
- How will the quality of the image be affected by the exposure time? high ISO sensitivity more noise for example.

During the exposure is each pixel, line or image exposed for a certain time, so we need to consider the motion in the scene and of the camera relative to it and the light intensity can by limited. There are however ways to freeze a moving object in the image by using a flash or follow the object in motion with the camera. There are even special solutions with sensors that have electronic object following.

Using sequences of images can be useful when measuring a motion. It is then crucial with timing:

- Repetition time
- Exposure time
- Data transfer and storage time
- Influenced by resolution in all five dimensions.

Sequences can also be used to detect changes in scenes by subtracting the previous stored reference image. For a sequence to be perceived as continuous by the human visual system it is necessary to have a repetition frequency of at least 25 Hz.

Multiplexing is needed since the intensity must be measured for all pixels to get a complete image matrix and we have multiple spectral channels (color RGB) to consider in the integration process. There are no effective sensors that can capture all dimension at once and we need to multiplex the light collection. The amount of parallelism in this light collection is an aspect imaging system and is strongly influenced by how the light is handled (economically) by the system.

Area integration

Area integration in imaging technology that uses a 2D image sensor to register the light for the whole image in parallel is by far the most common. It started of with image tubes and was later replaced with **CCD** (Charge Coupled Device) that are now being replaced with **CMOS** (Complementary Metal Oxide Semiconductor) that could be replaced by new technologies like QIS (photon counting devices) in the future.

Area integrations gives the best light collection efficiency since it collects "all the light". It also have a rigid geometry and gives stable and predictable imaging geometry that don't suffers from a lot of distortions. There is no need for mechanical motions and they can be mass-produced and therefore inexpensive. The drawbacks with area integration is that it need an even illumination of the whole image surface and there may be varying sensor sensitivities that need to be corrected for. It is also difficult to achieve high fill factor since there are other things that competes for space on the 2D area, multispectral scanning can

therefore also be hard to achieve. The image size will be limited by the sensor size

CMOS and CCD matrices/sensors are available in many different version with a variety of megapixel resolutions for special applications. In some applications they can be cooled to very low temperatures that allows for long integration times when the light levels are very low. In contrast they can also be used to capture fast events like laser flashes.

Linewise integration

This kind of sensors are often find in scanners and can be moved to capture an image of the object, or the object can be moved over the sensor. It is also common in remote sensing like satellites that move along the earth surface.

The technical advantages with line integrations are much better pointwise integration but worse economy compered to area. In motion the orthogonal line will be "frozen" which can be useful in some applications. It allows the use of the other dimension in a 2D sensor for the wavelength, for RGB and hyper spectral scanners? read more. It possible to create whats called "intelligent sensors" by having a processor for each pixel. The disadvantages are similar to area integration, it needs an even illumination along the scan line, it needs corrections of sensor sensitivity along the line of pixels. The 1D fill factor is important but not often a problem meaning?. There is also a risk for x-y inhomogeneity because of the widely different methods of scanning.

Point-wise integration

With this methods we register light from one pixel at a time and it requires motion to create the image. Here we most distinguish between what is moving:

- The illumination
- The sensor
- The object

The method is mainly used in stationary conditions such as microscopy or scanning film or paper/document. Examples of applications are Drum scanner which produces very high quality scans of document or film. Other applications:

- Flying spot scanner
- Microscopy
 - Fluorescens
 - Confocal
 - Multi-photon
 - Moving stage

Some of the advantages are that it gives maximal possibilities for optimization of the measurement of each pixel and that i can have optimized optical path and sensor. No differences between the sensor properties of the different pixel sensors, i.e. only one pixel. It also have the advantage of not having a

limit to the image size. The disadvantages are that it uses the incoming light poorly and need some sort of complex mechanical system for scanning which also results in it being very slow compared to the other methods.

Multiplexing for volume imaging

A few words about multiplexing and volume imaging; It is possible to register single voxels, a line, a plane at a time, the whole volume in parallel. Collecting data in the Fourier domain or through other transforms can be done. Today most tomographic systems collect data from the whole volume or from multiple planes simultaneously which is fast and therefore saves time and signal economy.

Wavefront imaging

Is new form of imaging that have high information density. The Wavefront sensing measure the amplitude and phase of the incoming optical field simultaneously. It is still under development but show promising results.

Stored intermediate analogue image

This category is mainly of historic interest and a few example are listed here:

- Photographic film
- Polaroids
- Magnetic tape
- Semiconductor materials (image plates)

3 Photography

The focus of this course are ways of creating images for scientific or medical applications but its worth noting that a majority of all digital images created are digital photography. Digital photography has grown tremendously the last 20 years and analog photography is now limited for some small applications or enthusiast.

Description of digital photography

Digital photography is an optical imaging technology and the aspects of it are the same as for analogue cameras: Lens quality, aperture, depth of focus and focal length.

The lenses come in large variety of sized and qualities and it should be chosen with the application in mind. Some basic guidelines are that: bigger is better and glass is better than plastic. Compact lenses has become better and there is a trend towards more compact lenses such as liquid based lenses that can change focal length and focus very rapidly.

The depth of focus depends on the lens focal length and aperture. A smaller aperture will result in a larger depth of focus but less light is reaching the sensor and therefore need longer exposure time.

Choosing between a fixed focal length or a zoom lens is depending on the application. For general hobby photography is a zoom lens often to prefer since it doesn't require the user to change lenses when the scene or application changes. Zoom lenses are in general not as good as a fixed lens but instead offer the flexibility. Some geometric distortions to the resulting image is caused by the lens and takes the form of **Pincushion** or **Barrel** distortion which can be corrected for in image processing.

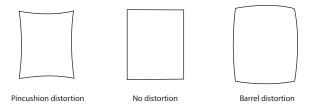


Figure 2: Example of caption

There are two types of sensors domination in the area of digital photography: **CCD** and **CMOS**. CCD sensors are matrices of photosites each comprised by a photodiode which converts light into a charge and region that can hold the charge. The charges are shifted/moved out of the sensor as a bucket brigade and converted to a digital signal at the end of the circuit. In CMOS sensors similar to the CCD are there photodiodes that converts the light into electrons/ a charge but there is also a reset and select transistor with an amplifier section. This mean that the amplification is done at each pixel.

In the **full frame** CCD sensor are the charge holding region integrated with the light sensing region. When the light is collected is happen over the entire imager but it needs to be shut off after that so the charge can be moved through

CCD	CMOS
Power consumption 2-5W	Power consumption 20-50mW
More light sensitive approx 1 lux	Less light sensitive approx 5 lux
Less digital noise	Uses same silicon design as other electronics
Better light sensitivity, up to 85% quantum efficiency	Any subset of pixels can be read out
More color depth, more dynamic range	Younger technology
Requires special chips with higher voltage, higher cost	CMOS pushing CCD:s out of the market

Table 1: Comparison CCD vs CMOS

a horizontal charge transfer register a charge voltage conversion, amplifier and analog to digital (A/D) converter. This results in a almost 100% fill factor of the sensor but there is need for an external shuttering. In the **interline** type of CCD sensor are the charge holding region shielded from the light meaning there is no need for a external shutter to keep light out. This type of sensor architecture results in lower fill factor but can be compensated with micro-lenses what is that?. A third type of CCD sensors are **frame transfer** sensors which have like the **full frame** photosites that cover almost all of the sensor/sensing area. The difference is that the charges are shifted quickly to a equally sized charge holding region that are shielded from the light. Thanks to the high speed is no shutter need and the readout can be done while a the light for a new image is captured.

The **CMOS** sensor is built with the same technique as processors and memory arrays. This architecture allow for readout of the entire array or only parts of it with a simple X-Y address. The fill factor is decreased compared to the full frame CCD since there is more electronic in each pixel. This can be compensated by either Micro-lenses or using thin sensors that can be exposed from the back side. CMOS sensors can ha

For a long time have megapixels been a selling point for sensor, the pitch has been: more is better. But this is not always true. A small sensor size with a high number of pixels can lead to decrease in sensitivity and worse signal/noise.

Comparing priorities between consumer and scientific cameras we can see that consumer cameras generally focus on having good looking pictures while scientific camera priorities correct, quantitative pictures. The increasing use of digital photography has pushed on the development of cameras in the consumer segment, this has also resulted in much value for scientific needs also. Although the trend has now shifted towards smaller sensors since most of them are fitted to mobile phones. This creates a divergence between consumer cameras and scientific cameras that are not faced with the same constraints as mobile phone cameras. As today there is still a wide range of digital cameras for scientific applications. The sensors range from a couple of euros to 10 000 euros in price, but a typical camera can be bought for around 1000 euros.

A paradigm shift might be taking place with **Photon counting** sensors being developed. These sensors count each photon separately and is as sensitive as it is possible to be. This allow for new capabilities such as trade off in sensitivity and resolution that can be dependent on the scene. It will allow for motion blur compensation for multiple targets and high apparent SNT for a low photo flux.

Operational steps

We start of with the lens that most often includes a IR blocking filter and an optical anti-aliasing filter. The focal length is often adjustable (zoom lens) and the focus is controlled by the focus motor. Exposure and focus measuring is done by pressing the shutter button halfway. The lens focuses the light from the scene onto the sensor. The analog signal that is produced by the sensor is then converted to a digital signal (A/D converter). Then the shutter button is fully pressed down the the image is captured and stored on in DRAM. To long exposure times can lead to motion blur in the image which can be solved by active image stabilization, either by moving the lens or the sensor. Exposure control can be used to exposing different parts of the image differently to optimize quality of the image.

The final high-resolution image is processed by a digital image processor in the camera. The first step is to **de-mosaicing** since most cameras use the Bayer color filter array, here is interpolation used to fill in the missing color values for each pixel. An algorithm decides if the "missing" color values are in a smooth area or along an edge to determine the value for each missing color value. This process results in a full-color image but not a perfect one. To improve the result there is need for white balancing to compensate for spectral variations in the illumination of the scene. Both daylight from the sun and indoor lightning provides white light is the daylight more "high energy" in the blue portions while indoor lightning is more "high energy" in the red portion of the spectrum. An algorithm is used to analyze the scene and adjust the red and blue signal strength to match the green signal strength in white and neutral parts of the image. Continuing with color correction that is needed since the sensor has a different sensitivity than our eyes and the colors can for the human eye be perceived as unsaturated without correction. The color correction compensate for this and transform the output image to the output color space (often sRGB) that is ready to be displayed on a monitor.

Densitometric
Geometrical
Spectral
Temporal
History

4 SEM - Scanning Electron Microscopy

The electron microscopy is an instrument that allow us to create images/visualize organic and inorganic structures with impressive magnification. It is an invaluable instrument in the engineering and development of new materials where nano-meter sized imaging is very important. The SEM can also be used in chemical analysis and accessing the crystalline structures of materials. In comparison to light microscopy is the depth of field much larger in scanning electron microscopy thanks to the narrow electron beam. The resulting images get a 3D appearance due to this large field of depth that is very useful when examining the surface structures.

History

Operational steps

The idea behind the technique is to generate a beam of energetic electrons with emission from an electron source. This is typically done by heating up a metal (Tungsten for example) in vacuum and accelerate the electrons with a electric field. The electrons are stopped from leaving the atoms of the metal be an energy barrier between the emission tip and the surrounding vacuum. By adding an electric field in the vacuum the energy barrier is reduced to a "slope", but the electrons still need to perform the "work" W to pass this barrier. Luckily there is an quantum effect called tunneling allowing electrons to tunnel through this barrier out into to vacuum.

Illustration of tunneling

There are several types of electron emitters (cathodes) with different properties being used in electron microscopy today. One of the older and cheaper options are the so called **W Hairpin** made of Tungsten. These are widely used in older SEM and TEM microscopes. Tungsten is used because of its high melting point and low vapor pressure. This makes it possible to electrically heat to make electron emission possible. Another option is **Lanthanum Hexaboride LaBa**6 which has a low work functions, meaning the energy to remove an electron from the metal to a point in the vacuum outside the metal is low. This type of cathode is about 10 times "brighter" then Tungsten cathodes meaning?. A third alternative is FEG **Field Emission gun** which can create a beam that is smaller in diameter and more coherent and up to three times greater magnitude of "brightness/current density" The FEG is sharply pointed with an emitter that is held at several kilovolts of negative potential energy compared to a nearby electrode. This makes the potential gradient sufficient to cause electron field emission.

The energy of the electrons in this beam is measured in 1eV which is equivalent to what a electron in an electric field generated by 1 V would have. This energy is denoted E_0 and is often around 0.1 to 30keV. The electron beam is after acceleration modified/reshaped by lenses and apertures to reduce the diameter of the beam and to scan this beam into a raster of x-y coordinates which it sequentially is placed in. This coordinates are discrete but closely spaced. The lenses are no ordinary glass lenses since the electrons would pass through them or lose to much energy (wouldn't focus them either). Instead are they modified with electrostatic lenses and electromagnetic coils into desired shape

and properties.

When the primary electrons in the electron beam hit the specimen it interacts with it forming a interaction volume. The electron penetrate the specimen material and looses energy by random scattering and absorption this process with all electrons in the beam form a volume of interaction that is teardrop shaped. The interaction results in different types of electrons being emitted/scattered from the specimen.

At each of the raster coordinates in the scan pattern are two types of outgoing electrons from the specimen created: **back-scattered electrons (BSE's)** and **secondary electrons (SE's)**. The BSE's are electrons that emerge from the specimen with a lot of the initial energy after interacting with the atoms electric fields of the atoms in the specimen, scattering and deflection. The SE's are electrons that emerge from the specimen surface after the electron beam have ejected them from the atoms in the sample. These electron escapes with very low energy compered to the typically high energy electron beam. They are in the range of 0-50eV with the majority below 5eV.

The secondary electrons are often measured with a Everhart-Thornley detector that is sensitive for both SE's and BSE's while the BSE's are measured with a dedicated BSE detector that is not sensitive for the SE's. The signal for each of the detectors are measured at each of the coordinates in the x-y raster. The location and the intensity is recorded and correspond to a gray value in the x-y coordinates. Other sensors can also be used to capture for example X-ray signals that also can be emitted from the specimen due do the electron beam.

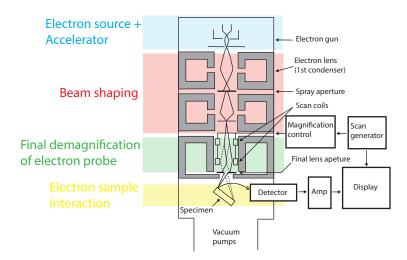


Figure 3: Example of caption

Densitometric

In order to create contrast between the different features of the sample there is need for a signal need to distinguish them. The BSE's and SE's give us different information about the specimen.

The physical property of being depicted in the imaging using BSE's are the

mass of the atoms in the specimen/the chemical composition. Heavier atoms backscatter electron more strongly and they will therefore have more energy. Brighter spots on the image of BSE will therefore indicate areas with more heavier atoms. The contrast in the image is therefore used to identify areas with different chemical composition.

The secondary electron energy is linked to the incline of electron beam into the sample. If the beam enters the sample from an angle <90 degrees the interaction volume will be more exposed to the surface of the sample, making more SE's escape the specimen surface and being picked up by the detector. The SE's are counted and the increased number of them at inclines will give a brighter pixel in the digital image.

Sample preparation is important for non-conductive samples since it is otherwise a risk that the electron beam will build up a charge on the surface of the sample. This charge will start to deflect the incoming electron beam making it impossible to scan the sample properly. By sputter a thin layer of conductive metal onto the specimen this can be avoided. Typically is gold, platinum and iridium.

If an image is noisy or show low contrast then there have not been enough electron probe current to get a smooth noise-free image.

calibration, scanning same "sensor" for all x,y coordinates of the sample,

Geometrical

Scanning electron microscopy relates to the "real world" differently depending on if the information from BSE's or SE's are used. The energy of the BSE's are closely linked with the atomic number of the material the electron hits. The BSE's give an image of how the chemical composition is distributed over the specimen. Depending on the acceleration voltage used on the incoming primary electrons they penetrate differently deep before being backscattered. If the interest lies in the specimen surface it is important to use a acceleration voltage that make the primary electrons interact in the surface of the specimen.

In the case of SE's are the energy of the electrons dependent on the inclination of the point in the sample/specimen were the electron beam is hitting. The different intensities of the SE's give topographic contrast imaging. This is caused by the interaction volume having more escaping electrons in the inclined case than the normal case.

The resolution or the smallest observable feature in a SEM image is typically around 0.5 - 1.5 nanometers. This resolution depends on several things, including electron beam size and the interaction volume with the specimen. The beam size can be controlled with an aperture or with the condenser lenses but this has an negative effect on the beam current resulting in long exposure times. The resolution can be increased by reducing the wavelength by increasing the acceleration voltage. When increasing the acceleration voltage one must keep in mind that the electrons will penetrate deeper into the specimen before reflecting back as BSE's generating more SE's on the way. This will make it impossible to get a detailed image of the surface of the specimen. It is also an increased risk of surface charging if the specimen is not conducting. Building up charge on the surface will deflect the electron beam making it hard to get a clear image. Pre-treatment can be used to avoid this phenomenon. An image with BSE's has lower resolution since they originate from deeper within the sample.

The focus of a scanning electron microscope is intended to where the electron beam has the smallest diameter as it improves the resolution. When making the beam narrower it increases the angle of the cone of where the focal plane is. The increase in this angle makes the depth of field shorter. In SEM imaging the depth of field can be increased from a few microns to several millimeters.

Distortions such as astigmatism in the resulting image is the result of imperfections in the lens system. When increasing the magnification the effect get more apparent. The resulting image distorts round shapes so that they appear elliptical. This can be corrected for by manually (or use the automated correction) adjusting the stigmator control in order to get better results.

Spectral

SE's BSE's X-ray

Temporal

Exposure time, sample size, electron beam diameter,

5 Light microscopy

short intro of light microscopy

History

Operational steps

Compound microscope Parts

Optics - Total magnification Possible resolution Numerical aperture Resolution Oil immersion lenses Objectives Airy disc

Staining H&E staining Immunostaining Primary immunostaining Secondary immunostaining

Densitometric - Light transmission, signal type, electromagnetic waves, physical property Transmission - exponentially absorbed - intensity proportional to absorbing matter. Sample contrast comes from attenuation of light in the sample Active illumination all at once

Spatial/Geometrical - Projection of transmission through the object. Resolution limited by wavelength and \dots oil immersion

Spectral - Wavelength interval visible light.

Temporal - still image, no motion to consider

Dark field microscopy -Parts

-Optics Oil immersion for best scatter light gathering, Illumination of the sample partly blocked

-Staining allows to increase contrast of images of live unstained and uncolored objects sample makes some of the light scatter even if it's transparent, this light is then refocused on the detector

- Densiometric sample contrast comes from light scattered by the sample, Scattered light produces the image, transmitted light not collected. Resulting in an image of the sample superimposed on a dark background. Low light levels in final image. Strongly illuminated sample, can cause damage. Almost totally Halo artifact free technique

"Care must be taken when preparing specimens for darkfield microscopy because the features that lie above and below the plane of focus can scatter light and contribute to image degradation."

Diffraction patterns artifact.

- Spatial/Geometrical Greater care of interpretation needed since some features may not be visible in darkfield that are visible in brightfield. Darkfield images lacks low spatial frequencies and is a high passed version of the underlying structure. May appear to be a negative of brightfield image but different effects/features are visible in each.
- Spectral Can be coupled with hyperspectral imaging with the right kind of light source, most commonly is the visible light spectrum
 - Temporal

Phase contrast microscopy

Parts No staining. "No staining The phase-contrast microscope made it possible for biologists to study living cells and how they proliferate through cell division."

-Optics "In a phase-contrast microscope, image contrast is increased in two ways: by generating constructive interference between scattered and background

light rays in regions of the field of view that contain the specimen, and by reducing the amount of background light that reaches the image plane. First, the background light is phase shifted by - 90 degrees by passing it through a phase-shift ring, which eliminates the phase difference between the background and the scattered light rays. When the light is then focused on the image plane (where a camera or eyepiece is placed), this phase shift causes background and scattered light rays originating from regions of the field of view that contain the sample (i.e., the foreground) to constructively interfere, resulting in an increase in the brightness of these areas compared to regions that do not contain the sample. Finally, the background is dimmed 70 -90 percent by a gray filter ring: this method maximizes the amount of scattered light generated by the illumination light, while minimizing the amount of illumination light that reaches the image plane."

- Densiometric Transmission, Sample contrast comes from interference of different path lengths of light through the sample

"Phase contrast doesn't work well with thick specimens as these can appear distorted."

-Spatial/Geometrical "Phase contrast images often have halos surrounding the outline of details that have a high phase shift. These halos are optical artefacts and can make it hard to see the boundaries of details." "The resolution of phase images can be reduced due to the phase annuli limiting the numerical aperture of the system."

-Spectral

-Temporal

Differential interference contrast microscopy Parts

- Densiometric "Transmission, Contrast created due to difference in path length for two adjacent points in sample. Image small differences in refractive index between neighboring points, Image small differences in refractive index between neighboring points" "The technique produces a monochromatic shadowcast image that effectively displays the gradient of optical paths for both high and low spatial frequencies present in the specimen. Those regions of the specimen where the optical paths increase along a reference direction appear brighter (or darker), while regions where the path differences decrease appear in reverse contrast. As the gradient of optical path difference grows steeper, image contrast is dramatically increased." -Spatial/Geometrical advantage: "There are no confusing halos as may be encountered in phase images." -Spectral

-Temporal

Confocal microscopy Parts

-Densiometric Contrast created "a confocal microscope only focuses a smaller beam of light at one narrow depth level at a time. The CLSM achieves a controlled and highly limited depth of field. "

"confocal microscope uses point illumination (see Point Spread Function) and a pinhole in an optically conjugate plane in front of the detector to eliminate out-of-focus signal – the name "confocal" stems from this configuration. As only light produced by fluorescence very close to the focal plane can be detected, the image's optical resolution, particularly in the sample depth direction, is much better than that of wide-field microscopes. However, a"

"Confocal microscopy provides the capacity for direct, noninvasive, serial optical sectioning of intact, thick, living specimens with a minimum of sample preparation as well as a marginal improvement in lateral resolution compared

to wide-field microscopy.[4] Biological samples are often treated with fluorescent dyes to make selected objects visible. However, the actual dye concentration can be low to minimize the disturbance of biological systems:"

-Spatial/Geometrical "The achievable thickness of the focal plane is defined mostly by the wavelength of the used light divided by the numerical aperture of the objective lens, but also by the optical properties of the specimen. The thin optical sectioning possible makes these types of microscopes particularly good at 3D imaging and surface profiling of samples."

-Spectral

-Temporal "s much of the light from sample fluorescence is blocked at the pinhole, this increased resolution is at the cost of decreased signal intensity – so long exposures are often required."

Reflected light microscopy

- -Densiometric Contrast created
- -Spatial/Geometrical
- -Spectral
- -Temporal

Fluorescence microscopy

- -Densiometric Contrast created
- -Spatial/Geometrical
- -Spectral
- -Temporal

Densitometric

Geometrical

Spectral

Temporal

6 Astronomical imaging: Telescopes and Doppler imaging

Astronomers need telescopes to collect photons from planets, stars and distant galaxies, track the objects on the sky and to create the image of a region on the sky. They strive to limit the FOV "Field of view" which can be done with large primary mirrors in the telescopes. Some examples of large telescopes:

- ELT, 39m
- LBT 2 × 11.8m
- Keck I & II 2×10 m

All newer telescopes are tracking the objects on the sky with the Alt-Azimuth mount. Other mount are:

- German mount
- Fork mount
- English mount

Imaging: the points spread function

An image of a Point Spread Function, "PSF" created by a telescope is not a point due to diffraction. The intensity distribution in the focal plane produced by a point source located at infinity is the PSF. The ideal PSF for a circular mirror takes the shape of the Bessel function.

Image bessel

The resolution or the width of the peak is defined by the ratio of wavelength to the diameter of the telescope. So if we increase the diameter of the mirror it reduces the width of the peak. Using the sampling Theorem:

Whittaker-Nyquist-Kotelnikov-Shannon sampling theorem

The sampling frequency must be at least twice the highest frequency of the signal.

(Which has many names due to many worked with the problem in many different fields) gives us the minimum spacing between two Gaussians with a given width so we can tell them apart.

PSF
$$\propto \frac{-x^2}{e^{2\sigma^2}} = \frac{1}{2} \Rightarrow x \equiv \delta = \sqrt{2\ln 2\sigma}$$
 and the separation $= 2\delta = 2\sqrt{2\ln 2\sigma} \approx 2.355 \cdot \sigma$
(3)

The magical number in astronomy is therefore: 2.355 for sampling. This is important for making sure that we use a sensor that doesn't have to large pixels or smaller than necessary.

Resolution limit

Details that are smaller than the diffraction image of the telescope are smeared out, so after data reduction are anything smaller than $\frac{\lambda}{D}$ an artifact. So, is it possible to do better than the limit set by : $\frac{\lambda}{D}$, can we resolve features of distant objects smaller than the diffraction limit? YES!

- Interferometry
- Doppler imaging

Using data from two telescopes we can try to overlap the images with an adjustable optical path way such the difference in optical path is zero (exact to the fraction of the wavelength). This result in the characteristic interference pattern: fringes which has amplitude and phase that we can analyze and use. By doing this its possible to create larger telescopes (but its not perfect). The fourier harmonics of the data gives us 6 points when using 4 telescopes. When the earth rotates it changes the projected baseline so it must be corrected during the night.

Using this technique made it possible to see the changes of the star Betelgeuse intensity change during 2019 in greater detail. With interferometry is the angular resolution limited by the ratio $\frac{\lambda}{B}$ where B is the distance between the telescopes projected on the line of sight, see figure: fix ref to pic

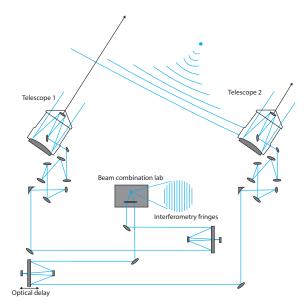


Figure 4: Example of caption

Radio interferometers are easier since the wavelength is longer making it cheaper to build and use. Here we can digitize the signal and transmit it with fiber cables instead of highly accurate mirrors and trolleys. The correlation between the telescopes can be done in supercomputers so its just to move the telescopes around and keep track of the position of them. This means that the array can be made more compact, not loosing a lot of flux.

Doppler imaging

During the 1900 century astronomers discovered a class of stars that we call "Peculiar". They have a chemical compositions of a lot of rare-earth metals which is unusual. The spectra of the star also showed a periodic variability. After systematic observations of these changes, it became clear that it was not only the strength of the spectral lines that changed but also the shape of them. It later became clear that these stars are fast rotating and have chemical spots on the surface.

These spots of chemicals gives a Doppler effect when rotating around the star, blue shift when the cloud moves towards the observer, the spectrum then appears to be broaden. Setting up the **forward problem** some assumptions were made:

- Each observed spectrum is taken during the time that is much shorter than the rotation period
- The surface structure doesn't change during the observing run
- The rotational broadening is resolved by our instrument: spectrometer.
- The star rotates as a solid body

Continuing with setting up the formulation of the forward problem:

• The telescope and spectrometer measure the flux coming from the star at a given wavelength and phase:

$$F(\lambda, \phi) = \oint I(\lambda + \Delta_m^{\text{Dop}}, m) \cos \theta_m d\sigma_m$$
 (4)

- Intensity I can be computed from a physical model of the stellar atmosphere locally parameterized by chemical composition
- Changes in composition along the stellar surface change the emerging I

The algorithm:

- For a given distribution of abundances, compute intensities for each surface element at each phase (non-linear)
- Integrate the intensities over the disk to obtain fluxes while taking into account Doppler shifts for all phases(convolution)
- Compare the synthetic spectra with observations
- Adjust the map(s) of abundance

This is an ill-posed problem and belongs to the class of integral equations: **Fredholm equations**. The properties of the DI kernel makes the problem ill-posed. Take as an example, if we would add a chess pattern to the surface with small/unresolved squares, it would not change the observed spectra? meaning?

Remote sensing problems

Doppler imaging is an example of remote sensing problems. These types of problems arrise when it is impossible or impractical to reach the actual target and measure it properly. What we do instead is to measure other properties that are related to what we want to measure with linear or non-linear transformations. Many of these problems are ill-posed (interferometric image reconstruction is an example). The solution to this is to introduce regularization.

Solving an inverse problem we need:

- Assume an initial guess for the abundance map
- Compute the local line profiles
- integrate over the disk for each of the rotations phases, taking Doppler shifts into account
- Find the correlations to local abundance that minimize the functional:

$$\sum_{\lambda,\phi} \left[F_{\lambda}^{\text{obs}}(Z,\phi - F_{\lambda}^{\text{calc}}(Z,\phi)^2) \right] + \Lambda \cdot R(Z) = \min$$
 (5)

• Loop from the second point until convergence is reached. Example of **R** is Tikhonov regularization:

$$\mathbf{R}(Z)) \sum_{\text{surface}} (\overline{\nabla} Z)^2 \tag{6}$$

Extension of Doppler imaging

Doppler imaging is also used for monitoring active regions on solar-types starts (solar spots) where temperature variation influences line intensity differences. Can also be used for binary systems which is eclipsing (eclipsing binaries) were the geometry becomes more complex due to the eclipses. Can also be used for medical imaging such as computer aided tomography.

Conclusion

The inverse problems are used to infer information about an object that is not possible to measure directly. The solution in these cases are not often unique. For such cases we replace the problem with a regularized inverse problem. There exist various forms of regularization.

7 Transmission Electron Microscopy - TEM

The big data in TEM. A sample is only a couple of mm big and not the whole sample is examined, just tiny parts of it. It is therefore important to remember that what we are observing in TEM is only a small small part of the sample. If we were to examine the whole sample (3mm in diameter) it would generate approximately 29Tb of data.

What is it used for?

When we want to observe something at nanometer level the only way is to use electron microscopy. Other methods may offer some quantitative information but for looking directly we need electron microscopy. Some examples of applications are:

• Biology

- Drug development and quality control
- Diagnosis
- Treatment planning
- Understanding diseases
- localization
- Protein structures, create 3D maps

• Material science

- Chemical compositions
- Structures
- Characterization
- Quality control and material development

TEM systems are bulky

TEM systems are bulky and expensive systems that need expert skilled personnel to prepare the samples and operate the equipment. The facilities are adapted for the system and need many restrictions. Separate cooling and 380-400V 3 phase need for the system, makes it hard to place a system without careful planning. Sensitivity to vibration makes need for special flooring. The maintenance of the system of expensive requiring planned down time. Unplanned downtime increases the cost of the system. With the system comes also the need for careful waste handling since many samples can be toxic or covered with radioactive salts that are typically used to protect the samples during exposure.

The anatomy of a TEM system

Modern TEM system is looking more like a fridge/freezer combo than the previous generations that are illustrated below. Much similarity to an optical microscope, the lenses are replaced with magnetic lenses but the principle stays the same. Field emission is the most common electron source.

Types of TEM

Since the principle stays the same we have Brightfield and Darkfield imaging in TEM also. In Darkfield TEM we get enhancement of inorganic NPs that are easily hidden in Brightfield, Brightfield more used in biology. Mass contrast is another type of imaging from TEM that we dont see in optical microscopy. With mass contrast we can see contrast between regions consisting of different z-number. It is the objective aperture that creates the mass/z-contrast. Low mass gets more electrons through, more mass scatter more electrons which gives contrast.

Sample preparation

Sample preparation is very important since we are blasting electron through the sample to create an image. To to thick sample will now allow any electrons to pass through. Preparing a sample of a hard material often involves making a wedge shaped piece of the material where the thinnest part which is used need to be 5 to a few 100 nanometers thick. For **thin film** samples are the thin film of interest placed on top of a Ni/Ti film which sits on top of a Si substrate. Then is the process (similar with cross sections samples):

- 1. Grind away some of the substrate
- 2. Make a dimple in the substrate
- 3. Bombard the dimple with ions to make it thinner and brake the sample into two pieces
- 4. Image the sample

Stain such as heavy metals salts can be used to cover biological samples that otherwise would collapse of the electron beam. Gives the negative image of the object since we stain the background, improves contrast against the background to the biological sample that is otherwise poor. Unstained specimen is drying and suffers of deterioration which also affect the image. Embedding the specimen with the stain preserves the integrity of the sample.

nsTEM workflow

When working with liquid biological samples the workflow could look like this: Electron microscope grid is placed in a **Glow discharger** which makes the liquid sample able to cover the grid more evenly (reduces surface tension?). The sample is placed on the grid with the excess blotted away, a wash of ultrapure water is applied with excess blotted away after which the stain is applied (excess blotted away). This process requires skill and patience, doing it once might not be that difficult but repeating it equally good each time is an art. Some problems that could arise are: too much or to little stain, dehydrated grid areas, stain deposits or stain crystals.

Ultrathin biological section preparation

When working with biological samples like cells it is important to work fast since it start to deteriorate as soon it comes contact with air. It is therefore fixed with **chemical fixation** after which a heavy metal **stain** is used to increase contrast, it is then **dehydrated** and **resin embedded**. A cell is typically to large to be observed in a TEM whole and must be sliced down using **ultramicrotomy**. When sliced it can be stained using **antibody** stain in combination with heating if needed. A secondary antibody stain connected with gold is then applied before putting it into the TEM system.

CryoTEM workflow

When using cryoTEM it is possible to prepare and observe the sample without using toxic heavy metal stains. The process of preparing the sample starts as the previous with placing the EM holder in a **glow discharger** to make the sample spread better on the grid. Instead of applying the stains it is plunged freezed (to avoid crystals forming). After it is stored in different ways until its observed in a cryoTEM.

Pros and cons nsTEM and cryoTEM

nsTEM

- Straight forward method
- Allow to observe particles in diluted samples
- Debris and background easy to identified
- Grid/sample can be observed at multiple occasions
- Discrimination between filled and empty particles poorly reliable, "don't see inside"
- Preparation of specimen may alter particle morphology and integrity
- Artifacts from preparations common to observe

cryoTEM

- Specimen is observed close to its native state
- Possible to observe internal parts of specimen
- Discrimination between empty and filled particles good
- High resolution of structural information
- Tedious preparation
- The grid can only be imaged once
- Most work with low electron dosage to avoid damaging the specimen

8 Ultrasound

Ultrasound (and all other types of sounds) are acoustic waves, i.e. a mechanical perturbation traveling in a medium. The acoustic frequency range:

• Infrasound: < 20 Hz

• Audible sound: 20 Hz - 20 kHz

• Ultrasound: > 20 kHz

• (Medical ultrasound: 1 - 20 MHz)

Ultrasound is therefore mechanical oscillations with a frequency above 20 kHz that propagates through a medium that is elastic. Used for finding fungus in trees, used by bats to find their prey and in quality control of weld joint for finding cracks to give a few examples. The discovery of the piezoelectric property made this technique possible.

Ultrasound in medical imaging

Ultrasound is one of the most used imaging techniques in medicine and have an annual market growth of 3-4%. Pros for this technique are that is non ionizing, need minimal safety requirements, its real time, can be made portable and is quite low cost. The downside with real time is the need of training personnel to understand/interpret the image while making the examination. Signal to noise ratio is quite low compared to other techniques and it need a acoustic window to operate (can't "see through" bone).

Probe - probing mechanism

Ultrasound is a longitudinal wave, variation of pressure that propagates, this mean that it needs a medium to travel through. The speed of sound is a function of the medium:

$$c = \sqrt{\frac{K}{\rho}} \tag{7}$$

Where K is the stiffness, stiffer the faster and ρ is density: denser the slower. Like electrical circuits with resistance and current, the propagation of sound can be calculated with the Acoustic impedance:

$$Z = \rho c \tag{8}$$

Material	bf Density (kgm $^{-3}$)	Speed of sound	$egin{aligned} extbf{Acoustic impedance} \ extbf{(kgm}^{-2} extbf{s}^{-1} imes 10^6 \ extbf{)} \end{aligned}$
Air	1.3	330	0.000429
Water	1000	1450	1.50
Bone	1500	4000	6.0
Blood	1060	1570	1.59
Muscle (average)	1075	1590	1.70

Table 2: Example of a table with line breaks

The wavelength [m] is determined by: Frequency [Hz] (depends on the source) and Sound-speed [m/s] (depends on medium).

Matter interaction

After the sound wave left the source (probe) it interact with the material with the tissue, being **back-scattered**, **reflected** and **refracted**. The sound wave is attenuated while moving through the tissue.

When the wave travels into a new medium the impedance of the medium and the incidence angle determines what happens to the wave (Huygens principle). If the wavefront is perpendicular to the medium the wavelength will change. If there is an oblique incidence angle it **refracts** giving a **reflection** against the new medium and **transmitted** wave through the new medium. The intensity of each part is dependent on: the **acoustic impedance difference** between the two materials and the **angle of incidence**.

Scattering is the directionless reemission of incident energy caused by local inhomogeneities. Inside tissue, this scattering is caused by "tiny" particles, cells, large proteins, calcifications and so on. The interaction between this scattered waves is what causes the noisy speckle texture pattern in ultrasound images.

Attenuation is the loss of energy of the wave in the material. This energy is lost over distance due to **absorption**, **scattering**, mode conversions? and more. The amplitude decay increases with the depth (z) as a function of **some tissue properties** (a_0) and **acoustic frequency**)(f)

$$A(z) = A_0 e^{-a_0 f^n z} (9)$$

The tradeoff

The higher the frequency, the better the imaging resolution But, the worse the penetration depth

Piezo-electric effect

The purpose of the ultrasound transducer is to convert between electrical signal and acoustic energy. It act as both speaker and a microphone. By first emitting a very short sound pulse and then listen to the returning echoes (for a longer time then the emitting time). It is only possible to to one at a time.

The piezo-electric effect is a property that certain solids can have (some crystals and ceramics). Expose the material for electricity and there will respond

with mechanical stress (like a speaker). Swapping places and expose it for mechanical stress will produce an electrical current (like a microphone)

Image production

Producing the image involves switching between Transmit (Tx) mode: active (speaker) and Receive (Rx) mode: passive (microphone). There are different modes for the imaging also:

- A(mplitude)-mode: one scan line
- B(rightness)-mode: 2D spatial images with multiple neighboring Alines
- M(otion)-mode: sequences of A-modes in time, thus 2D (popular in cardiology)

Beamforming is the technique used to form sensor arrays for directional transmission and reception. By adjusting a time delay between element it is possible to mimic the spatially focus of a curved transducer.

insert US focus illustration here

Image quality

Contrast is what assesses visibility, so by comparing the image appearance between two distinct regions we want to be able to distinguish between object and background. The spatial resolution is the minimum distance at which is possible to distinguish two distinct point individually. The resolution of the ultrasound imaging system can be separated into **Axial resolution** and **Lateral resolution**. Axial resolution in which separating two reflectors or scatterers along the beams axis. This resolution depends on the length of the pulse, which need to be short for good axial resolution but needs to be long to deliver sufficient power for good signal to noise ratio. The lateral resolution separating reflectors side by side. This resolution depends on the focusing/beamforming.

Artifacts in ultrasound images are not uncommon and can even be used to interpret underlying causes some times. Examples of artifacts are: Shadowing, speed-of-sound abberation, mirroring, reverberations and refraction

Safety

In comparison with many other imaging systems in medicine, minimal. There are however four different metrics of safety that is regulated:

- Thermal index (TI): quantifies/limit the acoustic power to avoid overheating the tissue internally
- Surface temperature: limit how hot the probe can be, to avoid burn injuries
- Spatial peak temporal average (SPTA): limit the cumulative power at focus over time
- Mechanical index (MI): limit peak negative acoustic pressure to avoid cavitation and streaming

Other ultrasound imaging techniques

With Harmonic (b-mode) imaging method we transmit a signal at a frequency f and then listen at frequency 2 times f. Comparing this to the fundamental B-mode we here get better resolution and reduced noise. **Doppler** technique uses the shift in of frequency relative to the motion of the object, compare to red and blue light shift in optics. With this technique its possible to quantitatively predict the blood flow velocity for an example. Functional ultrasound (fUS) can be seen as an extension of Doppler imaging and is used to examine brain activity (blood flow in the brain) with high frame-rate. Elastography, due to pathological process there may be changes in stiffness of the tissue, this technique estimate the tissue biomechanical characteristics. Strain imaging, since a stiff tissue compresses less it possible to detect differences inside a tissue by compressing while imaging, then measure local displacement and look at relative values/axial derivative?. Acoustic Radiation Force (ARF) uses focused acoustic energy to exert force in tissue by pushing it, remotely and locally, also known as "remote palpation". Shear-wave Elastography (SWE), here ultrasound is used to generate a **shear-wave** and then the temporal propagation is observed on consecutive ultrasound frames to infer the shear-wave speed. Stiffness difference in tissue can be observed that may indicate pathology. Ultrasound computed tomography. Optoacoustic imaging combines the use of the light pulses and ultrasound. Here is a light pulse transmitted and ultrasound received. The thermal expansion in the tissue creates the sound.

9 PET, CT and MRI

All of these techniques are so called tomography techniques (imaging slices of the sample). They are used in both clinical routine and in research. In common that they are: expensive, risks involved in using them (Radioactivity, Ionizing radiation and strong magnetic fields). The geometrical accuracy is good for all of them with some exceptions for MRI. Can perform both static and dynamic imaging (time series). They share the challenges of tunnel size (PET/MRI and MRI). Much development is ongoing, PET tracers, hardware and software.

PET - Positron Emission Tomography

Uses a **tracer** or radiopharmaceutical that is emitting positrons. This radionuclide isotope is attached on a molecule of interest, glucose for an example in Fluorodeoxyglucose ^{18}F .