SIP IPv6 Conformance Test Tool Reference Manual

Ver. 2.0.0

IPv6 Promotion Council Certification WG SIP SWG

Modification Record

Version	Date	Content
Ver. 1.0.0	Mar. 30, 2004	Initial version (Reference Manual for UA)
Ver. 1.0.1	May. 10, 2004	- 4.7/4.8.1/4.8.2 : Modified example of "config.txt".
		- Modified some typographical errors and
		omissions. (Reference Manual for UA)
Ver. 1.0.2	Jul. 12, 2004	- Added parameters about authentication for
		"config.txt".
		- 4.9/4.10 : Added example of "config.txt" about
		Authentication mechanism non-support setting.
		(Reference Manual for UA)
Ver. 1.1.0	Oct. 7, 2004	- 4.2 : Modified example of "config.txt".
		- 5.2 : Added category "torture-test"
		- fixed some typographical errors and omissions.
		(Reference Manual for UA)
Ver. 1.2.0	Apr. 30, 2005	- 5.2 : Add timer-test and 100rel-test
		(Reference Manual for UA)
Beta Release		First beta version. (Reference Manual for Server)
Beta	lun 2 2005	Second beta version. (Reference Manual for
Release 2	Jun. 3, 2005	Server)
Ver. 1.2.1		(Reference Manual for UA)
Ver. 1.0.0	Oct. 7, 2005	First official release (Reference Manual for Server)
Ver. 1.2.2	Oct. 11, 2005	- 1.2: Added "Notice: for IPv4 test"
		(Reference Manual for UA)
Ver. 1.3.0	Mar. 20, 2006	Renew the whole construction.
		(Reference Manual for UA)
		Second official release.
Ver. 1.1.0		Add RFC3262, RFC4028, TTC test.
vei. 1.1.0		Support TCP and TLS.
		(Reference Manual for Server)
Ver. 1.4.0	Mar. 16, 2007	-Added the function of auto-configuration
		:BIND, rtadvd
		(Reference Manual for UA)
Ver. 1.2.0		Added the function of auto-configuration.
V G1. 1.2.0		(Reference Manual for Server)
Ver. 1.4.1	Apr. 27, 2007	-Modified Setup section.
		-Corrected the title of Table 4.
		- Corrected misspellings.
		(Reference Manual for UA)
		Modified Commands for Conformance test section.
		Modified Setup section.
Ver.1.2.1		Modified Table of Contents
		Changed the list of Test category.
		(Reference Manual for Server)
Ver. 1.4.2	Jul. 31, 2007	-Remove UA-4-2-4 from Table 3.
		(Reference Manual for UA)

\/or 1 0 0		Modified Setup section.
Ver.1.2.2		(Reference Manual for Server)
Ver. 1.4.3	May. 30,2008	-Remove UA-2-2-5 form Table 3.
		(Reference Manual for UA)
Ver. 1.2.3		Removed TS-3-1-3 and modified Table3.
ver. 1.2.3		Fixed some bugs. (Reference Manual for Server)
Ver. 1.4.4	June. 27,2008	- Modified about requirements software.
		(removed "koi-sip", and added "koi")
		(Reference Manual for UA)
		Modified about requirements software.
Ver. 1.2.4		(removed "koi-sip", and added "koi")
		(Reference Manual for Server)
		-Merged UA and Server Reference Manual.
Ver. 2.0.0	Nov. 27,2009	-Modified contents for the new test categories.
		- Modified Appendix.

Table of Contents

1.	Introduct	ion	. 5
	1.1. Abo	out this document	5
	1.2. Defi	inition of terms	5
2.	Setup		6
	2.1. Prep	paring for equipments	6
		uirements (Software)	
	2.2.1.	UA/EP/B2BUA	6
	2.2.2.	RG/ PX	
	2.3. Netv	work Architecture	8
	2.3.1.	UA / EP / B2BUA	8
	2.3.2.	RG / PX	10
	2.4. Lim	itation 1	11
3.	Configur	ation process1	12
	3.1. Con	nect NUT and TN	12
	3.1.1.	IP addresses and parameters	12
	3.2. Con	figuration in TN	
	3.2.1.	v6eval	12
	3.2.2. koj	i	13
	3.2.3.	SIP-CT parameters (TN)	14
	3.2.3.1.	UA / EP / B2BUA	14
	3.2.3.2.	RG / PX	20
	3.3. Con	figuration in NUT2	
	3.3.1.	Check Interface name and MAC address	27
	3.3.2.	Default route (NUT)	27
	3.3.3.	DNS server (NUT)	28
	3.3.4.	SIP parameters (NUT)	28
4.	How to r	un the SIP Conformance test	29
	4.1. Run	Auto-configuration Tool	29
	4.2. Run	koi	30
	4.3. Test	categories3	30
	4.3.1.	UA	30
	4.3.2.	EP	34
	4.3.3.	B2BUA	37
	4.3.4.	RG	11
	4.3.5.	PX	13
	4.4. Test	Profiles2	16
	4.5. Con	nmands for Conformance test	17
	Appen	dix: ortp5	50

1. Introduction

1.1. About this document

This document describes installation and operation procedure for "SIP Conformance Test Tool for SIP UA / Endpoint / B2BUA / Registrar / Proxy". SIP Conformance Test Tool checks SIP equipment based on RFC3261: Session Initiation Protocol (SIP). Previously please read "INSTALL" file that describes the additional information.

1.2. Definition of terms

Tester Node (TN) : PC which SIP Conformance Test Tool is installed in.
Node Under Test (NUT) : Target SIP equipment that the SIP conformance is

checked.

UA : User Agent EP : Endpoint

B2BUA : Back-to-back User Agent

RG : Registrar PX : Proxy

2. Setup

2.1. Preparing for equipments

You have to prepare the following equipments:

- a PC for TN
- a PC/equipment for NUT
- a LAN cable (crossover)

2.2. Requirements (Software)

You need to install the software below in TN. SIP-CT shall run properly on the following software requirements:

2.2.1. UA/EP/B2BUA

Table 1. The requirements to get Conformance Tester to work properly

Software	Version	URL
FreeBSD (OS)	6.0 or higher	-
BIND	9.0.0 or higher	-
Perl	5.8.5	-
v6eval	3.0.10 or higher	http://www.tahi.org/release/
koi	2.0.0 or higher	http://www.tahi.org/release/
ortp	0.12.0 or higher	http://freshmeat.net/projects
		<u>/ortp/</u>
Tester tool	UA: 2.0.0	http://cert.v6pc.jp/sip-ipv6/
	EP: 2.0.0	
	B2BUA: 2.0.0	

2.2.2. RG/PX

Table 2. The requirements to get Conformance Tester to work properly

Software	Version	URL
FreeBSD (OS)	6.0 or higher	-
BIND	9.0.0 or higher	-
Perl	5.8.5	-
v6eval	3.0.10 or higher	http://www.tahi.org/release/
koi	2.0.0 or higher	http://www.tahi.org/release/
Tester tool	RG: 2.0.0	http://cert.v6pc.jp/sip-ipv6/
	PX: 2.0.0	

< v6eval >

"v6eval" is the IPv6 Conformance Test Tool released by TAHI project. For detailed information on "v6eval", such as how to install it, please refer to the documents (ex. *INSTALL.v6eval*) included in "v6eval" package. You also need to make "tn.def" and "nut.def" for installing "koi" package into TN. Please refer to "INSTALL.v6eval" included in "v6eval" package, before install "koi" package.

< koi >

You also need to install "koi" package into TN. "koi" is an extended package for v6eval. For detailed information on "koi", such as how to install it, please refer to the documents (ex. *README*) included in "koi" package.

2.3. Network Architecture

2.3.1. UA / EP / B2BUA

Test network consists of two nodes, TN and NUT. Although a physical network consists of two nodes, TN provides SIP server (Proxy/Registrar), DNS Server (BIND9), SIP-UA, etc., as follows:


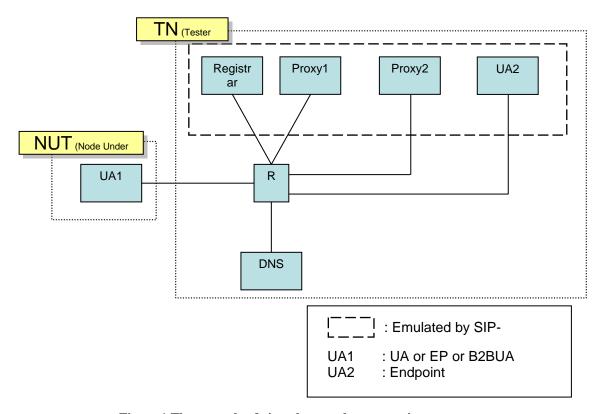


Figure 1 The example of virtual network construction

The following is two examples of the Test network. As described section 1.5., it is assumed that Test network consists of TN and NUT.

Case A) NUT consists of analog phone and SIP-TA (Terminal Adapter)

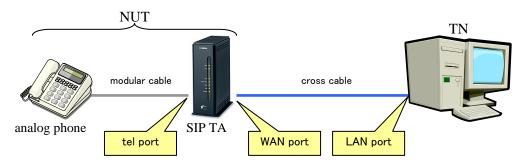

Case B) NUT is a PC (SIP-UA is a software)

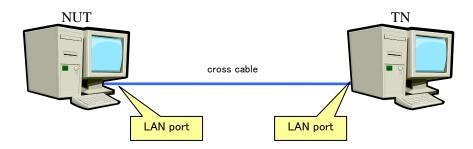


Figure 2 The example of physical network construction

The test network must be formed by connecting NUT and TN directly in order not to make TN receive packets from nodes except NUT that aren't related to the test.

This document provides an example of configuration on Case B. In this case, a SIP soft-phone (ex. ekiga) needs to be installed in NUT in advance.

2.3.2. RG/PX

Test network consists of two nodes, TN and NUT. Although a physical network consists of two nodes, TN provides SIP User Agent, DNS Server (BIND9), SIP-Proxy server, etc., as follows:


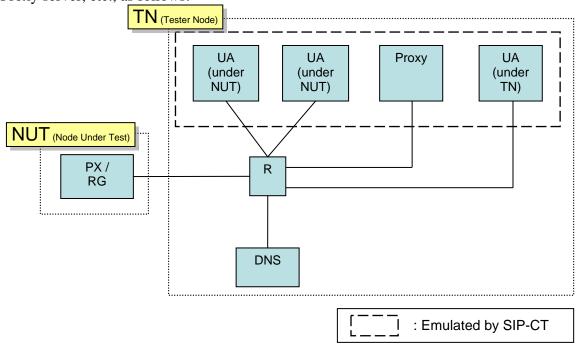


Figure 3. Virtual Network Construction

The following is an example of the Test network.

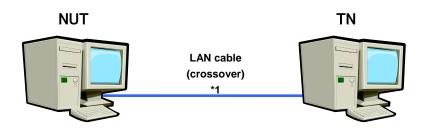

*1: HUB and two LAN cables (straight) can be substituted.

TN: Tester Node NUT: Node Under Test

Figure 4. connective TN and NUT

2.4. Limitation

SIP-CT is based on the following requirements:

- the path MTU is 1500 Byte.
- support only "application/sdp" as a media type.
- not support multipart MIME type.
- not support S/MIME.
- not support multicast stream.
- not support IPsec as secure communication scheme.
- not support DNS NAPTR record.
- not support media stream creation. (ex. RTP/RTCP packets)
- not support RFC3041. (Privacy Extensions for Stateless Address Autoconfiguration in IPv6)
- not support MD5-Sess as Digest Authentication Algorithm. (support only MD5.)
- not support package fragmentation.
- not support the change of the port number (SIP and media) in a test.
- not support the change of the transport protocol in a test.
- not support the Mutual TLS Authentication. (support only Server Authentication.)
- all SIP packets go through proxies.

 (ACK and BYE also go through proxies according to loose source route.)
- unless otherwise stated, all proxies are stateful proxies.

3. Configuration process

This section describes how to connect between nodes and configure on each node generally.

3.1. Connect NUT and TN

Connect TN and NUT with a crossover cable as Figure 2 in Section 2.3.1 or Figure 4 in Section 2.3.2. You can replace the crossover cable with two straight cables and a HUB.

3.1.1. IP addresses and parameters

Check IP address and MAC address in each node to configure for conformance test.

3.2. Configuration in TN

3.2.1. v6eval

To get SIP-CT to work properly, you have to configure v6eval correctly. If you have already finished configuring v6eval when it is installed, you can skip this section.

(1) tn.def

Edit the following line ("Link0" parameter) in <u>/usr/local/v6eval/etc/tn.def</u> as follows. If there is no tn.def, you have to make a tn.def file by copying tn.def.sample in the same directory.

LinkO: emO AA:AA:AA:AA	
------------------------	--

The syntax is:

LinkX <interface name of the TN> <MAC address of the TN>

Please DO NOT CHANGE OTHER parameters in tn.def. Tester couldn't work properly if you do. For detailed information, please refer to the documents included in v6eval.

(2) nut.def

Edit the following line ("Link0" parameter) in <u>/usr/local/v6eval/etc/nut.def</u> as follows. If there is no nut.def, you have to make a nut.def file by copying nut.def.sample in the directory.

Link0: e	emO	BB:BB:BB:BB:BB	
----------	-----	----------------	--

The syntax is:

LinkX <interface name of the NUT> <MAC address of the NUT>

Both interface name in nut.def and one in tn.def should be same and the interface name on TN.

Please DO NOT CHANGE OTHER parameters in nut.def. Tester couldn't work properly if you do. For detailed information, please refer to the documents included in v6eval.

3.2.2. koi

To get SIP-CT to work properly, you have to configure "koi" correctly. If you have already finished configuring v6eval when it is installed, you can skip this section.

(1) tn.def

Edit the following line ("Link0" parameter) in <u>/usr/local/koi/etc/tn.def</u> as follows. If there is no tn.def, you have to make a tn.def file by copying tn.def.sample in the same directory.

LinkO: <u>emO</u>

The syntax is:

LinkX <interface name of the TN>

Please DO NOT CHANGE OTHER parameters in tn.def. Tester couldn't work properly if you do. For detailed information, please refer to the documents included in "koi".

(2) nut.def

Edit the following line ("Link0" parameter) in <u>/usr/local/koi/etc/nut.def</u> as follows. If there is no nut.def, you have to make a nut.def file by copying nut.def.sample in the directory.

Link0: em0

The syntax is:

LinkX <interface name of the NUT>

Both interface name in nut.def and one in tn.def should be same and the interface name on TN.

Please DO NOT CHANGE OTHER parameters in nut.def. Tester couldn't work properly if you do. For detailed information, please refer to the documents included in "koi".

3.2.3. SIP-CT parameters (TN)

3.2.3.1. UA / EP / B2BUA

Please **DO NOT CHANGE** SIP-CT parameters in the configuration file ("config.txt"), except when configuring a fixed address for NUT. Only when configuring a fixed address for NUT, you can change only the parameter ("UA-ADDRESS"). You can find the file in the following directory:

UA: \$SOMEWHERE/ct-sip-ipv6-ua/sip-ipv6-ua/config.txt

EP: \$SOMEWHERE/ct-sip-ipv6-ep/sip-ipv6-ep/config.txt

B2BUA: \$SOMEWHERE/ct-sip-ipv6-b2bua/sip-ipv6-b2bua/config.txt

\$SOMEWHERE is the directory where SIP-CT package was copied when installed (See INSTALL file).

The following is the parameters in config.txt:

Table 3. SIP-CT parameters

Item	Description
UA: your SIP app	olicant implementation (NUT)
UA-ADDRESS	IP address of NUT.
	※ This value is used as IPv6 address of NUT.
	If "UA-ADDRESS" is commented out, the IPv6
	address of NUT is automatically assigned by
	receiving RA. (The "ROUTER-PREFIX-ADDRESS" which
	is specified in config.txt and the "MAC address"
	witch is specified in nut.def are required for
	this auto-configuration using EUI64.)
UA (emulated by	TN)
PUA-USER	Username of UA emulated by TN.
PUA-ADDRESS	IP address of UA emulated by TN.
PUA-HOSTNAME	AoR-URI of UA emulated by TN.
PUA-HOSTNAME-	AoR-URI of UA for 1 proxy, emulated by TN.
FOR-1PX	
PUA-CONTACT-	Contact-URI of UA emulated by TN.
HOSTNAME	

PUA-CONTACT-	Contact-URI of UA for 1 proxy, emulated by TN.
HOSTNAME-FOR-	onedet on on on in proxy, smarated by in.
1PX	
Registrar (emula	ated by TN)
	IP address of Registrar emulated by TN.
	Hostname of Registrar emulated by TN.
SIP Proxy1 (emu	
PX1-ADDRESS	IP address of a SIP Proxy1 emulated by TN.
PX1-HOSTNAME	Hostname (FQDN) of a SIP Proxy1 emulated by TN.
OT1-ADDRESS	IP address of a secondary DNS server emulated by TN.
SIP Proxy2 (emu	lated by TN)
PX2-ADDRESS	IP address of a SIP Proxy2 emulated by TN.
PX2-HOSTNAME	Hostname (FQDN) of a SIP Proxy2 emulated by TN.
Authentication	
AUTH-USERNAME	Authentication username of NUT.
AUTH-PASSWD	Authentication password of NUT.
AUTH-REALM-RG	Authentication realm of registration emulated by TN.
AUTH-REALM-PX1	Authentication realm of SIP Proxy1 emulated by TN.
AUTH-REALM-PX2	Authentication realm of SIP Proxy2 emulated by TN.
UA (NUT)	
UA-USER	Username of NUT.
UA-HOSTNAME	AoR-URI of NUT.
UA-CONTACT-	Contact-URI of NUT.
HOSTNAME	
Default Router	(emulated by TN)
ROUTER-PREFIX-	IPv6 prefix which is provided in RA (Router
ADDRESS	Advertisement).
	※ This item is valid only in IPv6.
DNS server (emu	
	IP address of a primary DNS server emulated by TN.
Other setting	
PLATFORM	Protocols to use.
	V6:UDP:UA
UA-PORT	Port number which NUT open for receiving SIP
	messages. (TN sends SIP messages to this port
	number.)
TIMER-T1	The value of T1. (sec.)
TIMER-T2	The value of T2. (sec.)
TIMER-MAGIN	The timer check margin for TN. (sec.)
HOLD-MEDIA	The number of hold media of TN.
MAX-FORWARDS	The initial value of "Max-Forwards" header field
	which UA emulated by TN use.

EXPIRES	The value of "Expires" header field which Registrar emulated by TN returns.
TIME-STAMP	The value of "Timestamp" header field which nodes emulated by TN use.
AUTH-SUPPORT	If you set "F" (False), no authentication mode. (Set "T" (True) or "F" (False).)
AUTH-SUPPORT- AFTER-DIALOG	If you set "F" (False), no authentication in dialog. (Set "T" (True) or "F" (False).)
DNS-TTL	The ttl value of DNS. (sec.)
INITIALIZE	In IPv6, if you set "NO", no IPv6 address
	autoconfiguration.
SPECIFICATION	If you set "RFC", judgments of conformance tests are based on only RFC.
	If you set "TTC", they are based on RFC and TTC (the
	Telecommunication Technology Committee)
	specification. About TTC, please refer to
	http://www.ttc.or.jp/e/index.html.
	If you set "IG", they are based on RFC and
	Implementation Guideline specified by IPv6 Promotion
	Council. About IPv6 Promotion Council, please refer
	to http://www.v6pc.jp/en/index.phtml
	(Set "RFC" or "TTC" or "IG".)

The following is the default configuration of config.txt file. You can change UA-ADDRESS parameter ONLY WHEN you configure a fixed address for NUT.

```
<For IPv6 (config.txt)>
```

```
#=======#
## SIP UA(Tester emulating) username
PUA-USER
                        1111
## SIP UA(Tester emulating) IPv6 address
PUA-ADDRESS
                       3ffe:501:ffff:1::1
## SIP UA(Tester emulating) hostname
PUA-HOSTNAME
                       atlanta. example. com
PUA-HOSTNAME-FOR-1PX under.test.com
## SIP UA(Tester emulating) Contact hostpart
PUA-CONTACT-HOSTNAME client.atlanta.example.com
PUA-CONTACT-HOSTNAME-FOR-1PX client under test com
# Registrar (emulated by Tester)
## Registrar(Tester emulating) IPv6 address
REG-ADDRESS
                        3ffe:501:ffff:50::50
## Registrar(Tester emulating) hostname
REG-HOSTNAME
                       reg. under. test. com
#======#
# SIP Proxy1 (emulated by Tester)
## Outbound Proxy(Tester emulating) IPv6 address
PX1-ADDRESS
                        3ffe:501:ffff:50::50
## Outbound Proxy(Tester emulating) hostname
PX1-HOSTNAME
                       ss. under. test. com
OT1-ADDRESS
                       3ffe:501:ffff:50::51
#======#
# SIP Proxy2 (emulated by Tester)
#======#
## Second Proxy(Tester emulating) IPv6 address
PX2-ADDRESS
                   3ffe:501:ffff:20::20
## Second Proxy (Tester emulating) hostname
PX2-HOSTNAME ss1. atlanta. example. com
```

```
# Authentication
## username for Authentication
AUTH-USERNAME
## password for Authentication
AUTH-PASSWD
                        nutsip
## Authorization realm about Registrar(Tester emulating)
AUTH-REALM-RG
                        under, test, com
## Authorization realm about Outbound Proxy(Tester emulating)
AUTH-REALM-PX1
                       under, test, com
## Authorization realm about second Proxy(Tester emulating)
AUTH-REALM-PX2 atlanta.example.com
 UA: your SIP applicant implementation #
#
  param (NUT)
## Your SIP UA username
UA-USER
                  NUT
## Your SIP UA hostname
UA-HOSTNAME
                       under. test. com
## Your SIP UA Contact hostpart
UA-CONTACT-HOSTNAME node. under. test. com
# Router(Tester emulating) IPv6 Address Prefix
## Router (Tester emulating) IPv6 Address Prefix
ROUTER-PREFIX-ADDRESS 3ffe:501:ffff:5::
# DNS Server settings
```

```
## IPv6 DNS Server(Tester emulating) IPv6 address
DNS ADDRESS
                             3ffe:501:ffff:4::1
# Other settings
PLATFORM V6:UDP:UA
## your SIP applicant implementation message send port No
UA-PORT
                             5060
## Timer T1 value(second) defined in RFC3261
TIMER-T1
                             0.5
## Timer T2 value(second) defined in RFC3261
TIMER-T2
## Tester check margin value(second)
TIMER-MAGIN
                             0.2
## The number of media which Tester checks re-INVITE(hold)
HOLD-MEDIA
## Initial Max-Forwards header value which Tester sends
MAX-FORWARDS
## Expires header value which Tester sends
EXPIRES
                             3600
## Timestamp header value(Tester sends)
TIME-STAMP
                             1000
## Whether your SIP applicant implementation supports Authentication mechanism
(T) or not (F)
AUTH-SUPPORT
                             Τ
## Whether your SIP applicant implementaion supports Authentication mechanism
## after dialog established (T) or not(F)
AUTH-SUPPORT-AFTER-DIALOG
## DNS TTL (second)
DNS-TTL
                             30
## INITIALIZE v6ADDR
INITIALIZE
                             F
                             RFC
SPECIFICATION
```

3.2.3.2. RG

Please **DO NOT CHANGE** any SIP-CT parameters in the configuration file ("config.txt").

Following the configuration in "config.txt", configure each node. You can find the file in the following directory:

RG: \$SOMEWHERE/ct-sip-ipv6-rg/sip-ipv6-rg/config.txt

\$SOMEWHERE is the directory where SIP-CT package was copied when installed (See INSTALL file).

The following is the parameters in config.txt:

Table 4. SIP-CT parameters

Item	Description	
[model] :pla	tform	
ip	IP version specified on platform :v6	
Transport	Transport protocol specified on platform :UDP	
Target	Tester type :PX	
[target] :Tar	get server	
uri	URI of a target server.	
address	IP address of a target server.	
port	Port number of a target server.	
prefix	Prefix of a target server.	
[target.user1] :UA	in the same domain as NUT's (emulated by TN)	
aor-uri	URI of UA emulated by TN.	
conract-uri	Contact-URI of UA emulated by TN.	
address	IP address of UA emulated by TN.	
port	Port number of UA emulated by TN.	
authorization_user	User name for authorization of UA emulated by TN.	
authorization_password	Password for authorization of UA emulated by TN.	
authorization_realm	Authorization realm of UA emulated by TN.	
[target.user2] :UA	(UA2) for 1 proxy (emulated by TN)	
aor-uri	URI of UA emulated by TN.	
conract-uri	Contact-URI of UA emulated by TN.	
address	IP address of UA emulated by TN.	
port	Port number of UA emulated by TN.	
authorization_user	User name for authorization of UA emulated by TN.	
authorization_password	Password for authorization of UA emulated by TN.	
authorization_realm	Authorization realm of UA emulated by TN.	

[target.user3] :UA	(UA3) for forking (emulated by TN)	
aor-uri	URI of UA emulated by TN.	
conract-uri	Contact-URI of UA emulated by TN.	
address	IP address of UA emulated by TN.	
port	Port number of UA emulated by TN.	
authorization_user	User name for authorization of UA emulated by TN.	
authorization_password	Password for authorization of UA emulated by TN.	
authorization_realm	Authorization realm of UA emulated by TN.	
[target.user4] : UA	(UA4) for forking (emulated by TN)	
aor-uri	URI of UA emulated by TN.	
conract-uri	Contact-URI of UA emulated by TN.	
address	IP address of UA emulated by TN.	
port	Port number of UA emulated by TN.	
authorization_user	User name for authorization of UA emulated by TN.	
authorization_password	Password for authorization of UA emulated by TN.	
authorization_realm	Authorization realm of UA emulated by TN.	
[proxy] :pro	xy (emulated by TN)	
uri	URI of proxy emulated by TN.	
address	IP address of proxy emulated by TN.	
authorization_realm	Authorization realm of proxy emulated by TN.	
[proxy2] :pr	oxy2 (emulated by TN)	
uri	URI of proxy emulated by TN.	
address	IP address of proxy emulated by TN.	
authorization_realm	Authorization realm of proxy emulated by TN.	
[proxy. user1] :UA	in other domain for 2-proxy (emulated by TN)	
aor-uri	URI of UA emulated by TN.	
conract-uri	Contact-URI of UA emulated by TN.	
address	IP address of UA emulated by TN.	
authorization_realm	Authorization realm of UA emulated by TN.	
[dns] :DNS server (emulated by TN)		
address	DNS address emulated by TN.	
[others] :Other settings		
use_authorization	Whether to execute authorization :yes	
supported_extension	Value in Supported header of a request. :none	
expires	Expired time of registration. :default	
specification	Specification that Tester bases on. :RFC	

The following is the default configuration of config.txt file.

<For IPv6 (config.txt)>

_	i of it vo (configurate)								
	[model]								
	ip	V6							

```
UDP
transport
              PX
target
[target]
uri
                                     sip:ss.under.test.com
                                     3ffe:501:ffff:50::50
address
port
                                     5060
prefix
                                     3ffe:501:ffff:50::
# user for test (exist in test-suites)
[target.user1]
                                     sip:UA11@under.test.com
aor-uri
contact-uri
                                     sip:UA11@node.under.test.com
address
                                     3ffe:501:ffff:1::1
authorization_user
                                     UA11
authorization_password
                                     nutsip
authorization_realm
                                     under. test. com
[target.user2]
aor-uri
                                     sip:UA12@under.test.com
contact-uri
                                     sip:UA12@node11.under.test.com
                                     3ffe:501:ffff:2::2
address
authorization user
                                     UA12
authorization_password
                                     nutsip
authorization_realm
                                     under. test. com
[target.user3]
aor-uri
                                     sip:UA13@under.test.com
                                     sip:UA13@node12.under.test.com
contact-uri
                                     3ffe:501:ffff:3::3
address
authorization_user
                                     UA13
authorization_password
                                     nutsip
authorization_realm
                                     under. test. com
[target.user4]
                                     sip:UA14@under.test.com
aor-uri
contact-uri
                                     sip:UA14@node13.under.test.com
                                     3ffe:501:ffff:4::4
address
authorization_user
                                     UA14
authorization_password
                                     nutsip
authorization_realm
                                     under. test. com
# proxy-server for test (exist in test-suites)
[proxy]
uri
                                     sip:ss.biloxi.example.com
```

```
3ffe:501:ffff:20::20
address
authorization_realm
                                     under. test. com
[proxy2]
uri
                                     sip: ss. biloxi. example. com
                                     3ffe:501:ffff:20::21
address
authorization_realm
                                     under. test. com
# user for test (exist in test-suites)
[proxy. user1]
aor-uri
                                     sip:UA21@biloxi.example.com
                                     sip:UA21@client.biloxi.example.com
contact-uri
address
                                     3ffe:501:ffff:2::2
authorization_realm
                                     biloxi. example. com
[dns]
address
                                     3ffe:501:ffff:4::1
# don't change followings
[others]
use authorization
                              yes
supported_extension
                              none
expires
                              default
                              RFC
specification
```

3.2.3.3. PX

Please **DO NOT CHANGE** any SIP-CT parameters in the configuration file ("config.txt"), except when NUT needs to use a registrar server.

Only when NUT needs to use a registrar server, you can change only the parameter ("[registrar]-address").

Following the configuration in "config.txt", configure each node.

You can find the file in the following directory:

PX: \$SOMEWHERE/ct-sip-ipv6-px/sip-ipv6-px/config.txt

\$SOMEWHERE is the directory where SIP-CT package was copied when installed (See INSTALL file).

The following is the parameters in config.txt:

Table 5. SIP-CT parameters

Item	Description
[model] :pla	tform
ip	IP version specified on platform :v6
Transport	Transport protocol specified on platform :UDP
Target	Tester type :PX
[target] :Tar	get server
uri	URI of a target server.
address	IP address of a target server.
port	Port number of a target server.
prefix	Prefix of a target server.
[target.user1] :UA	in the same domain as NUT's (emulated by TN)
aor-uri	URI of UA emulated by TN.
conract-uri	Contact-URI of UA emulated by TN.
address	IP address of UA emulated by TN.
port	Port number of UA emulated by TN.
authorization_user	User name for authorization of UA emulated by TN.
authorization_password	Password for authorization of UA emulated by TN.
authorization_realm	Authorization realm of UA emulated by TN.
[target.user2] :UA	(UA2) for 1 proxy (emulated by TN)
aor-uri	URI of UA emulated by TN.
conract-uri	Contact-URI of UA emulated by TN.
address	IP address of UA emulated by TN.
port	Port number of UA emulated by TN.
authorization_user	User name for authorization of UA emulated by TN.
authorization_password	Password for authorization of UA emulated by TN.
authorization_realm	Authorization realm of UA emulated by TN.
[target.user3] :UA	(UA3) for forking (emulated by TN)
aor-uri	URI of UA emulated by TN.
conract-uri	Contact-URI of UA emulated by TN.
address	IP address of UA emulated by TN.
port	Port number of UA emulated by TN.
authorization_user	User name for authorization of UA emulated by TN.
authorization_password	Password for authorization of UA emulated by TN.
authorization_realm	Authorization realm of UA emulated by TN.
[target.user4] : UA	(UA4) for forking (emulated by TN)
aor-uri	URI of UA emulated by TN.
conract-uri	Contact-URI of UA emulated by TN.
address	IP address of UA emulated by TN.
port	Port number of UA emulated by TN.
authorization_user	User name for authorization of UA emulated by TN.

authorization_password Password for authorization of UA emulated by TM						
authorization_realm	Authorization realm of UA emulated by TN.					
[proxy] :proxy (emulated by TN)						
uri	URI of proxy emulated by TN.					
address	IP address of proxy emulated by TN.					
authorization_realm	Authorization realm of proxy emulated by	/ TN				
	oxy2 (emulated by TN)					
uri	URI of proxy emulated by TN.					
address	IP address of proxy emulated by TN.					
authorization_realm	Authorization realm of proxy emulated by	/ TN.				
[proxy.user1] :UA	in other domain for 2-proxy (emulated by	TN)				
aor-uri	URI of UA emulated by TN.					
conract-uri	Contact-URI of UA emulated by TN.					
address	IP address of UA emulated by TN.					
authorization_realm	Authorization realm of UA emulated by TM	٧.				
[registrar] :reg	istrar server (emulated by TN or connected	ed RG)				
uri	URI emulated by TN when 2-proxy.					
address	IP address of registrar server.					
	※ This value is used for registrar ser	ver				
	address. Only when NUT needs to use a registrar					
	server, you can change this parameter.					
authorization_realm	Authorization realm emulated by TN when	2-proxy.				
[dns] :DNS s	erver (emulated by TN)					
address	DNS address emulated by TN.					
	settings					
use_authorization	Whether to execute authorization	:yes				
supported_extension	Value in Supported header of a request.	:none				
expires	Expired time of registration.	∶default				
specification	Specification that Tester bases on.	:RFC				

The following is the default configuration of config.txt file.

<For IPv6 (config.txt)>

10111100	11119.1210)	
[model]		
ip	V6	
transport	UDP	
target	PX	
[target]		
uri		sip∶ss.under.test.com
address		3ffe:501:ffff:50::50
port		5060
prefix		3ffe:501:ffff:50::

```
# user for test (exist in test-suites)
[target.user1]
                                     sip:UA11@under.test.com
aor-uri
contact-uri
                                     sip:UA11@node.under.test.com
address
                                     3ffe:501:ffff:1::1
authorization user
                                     UA11
authorization_password
                                     nutsip
authorization_realm
                                     under. test. com
[target.user2]
                                     sip:UA12@under.test.com
aor-uri
contact-uri
                                     sip:UA12@node11.under.test.com
                                     3ffe:501:ffff:2::2
address
authorization_user
                                     UA12
authorization_password
                                     nutsip
authorization_realm
                                     under. test. com
[target.user3]
aor-uri
                                     sip:UA13@under.test.com
contact-uri
                                     sip:UA13@node12.under.test.com
                                     3ffe:501:ffff:3::3
address
                                     UA13
authorization user
authorization_password
                                     nutsip
authorization_realm
                                     under. test. com
[target.user4]
aor-uri
                                     sip:UA14@under.test.com
                                     sip:UA14@node13.under.test.com
contact-uri
                                     3ffe:501:ffff:4::4
address
authorization_user
                                     UA14
authorization_password
                                     nutsip
authorization_realm
                                     under. test. com
# proxy-server for test (exist in test-suites)
[proxy]
uri
                                     sip:ss2.biloxi.example.com
address
                                     3ffe:501:ffff:20::20
authorization_realm
                                     under. test. com
[proxy2]
                                     sip:ss2.biloxi.example.com
uri
address
                                     3ffe:501:ffff:20::21
authorization_realm
                                     under. test. com
```

```
# user for test (exist in test-suites)
[proxy. user1]
aor-uri
                                     sip:UA21@biloxi.example.com
                                     sip:UA21@client.biloxi.example.com
contact-uri
address
                                     3ffe:501:ffff:2::2
authorization_realm
                                     biloxi. example. com
[registrar]
uri
                                     sip:reg.under.test.com
                                     3ffe:501:ffff:50::50
address
                                     under. test. com
authorization_realm
[dns]
address
                                     3ffe:501:ffff:4::1
# don't change followings
[others]
use_authorization
                             yes
supported_extension
                             none
                             default
expires
                             RFC
specification
```

3.3. Configuration in NUT

3.3.1. Check Interface name and MAC address

Check whether or not MAC address in NUT is the same as MAC address configured in nut.def in TN. If that is different, please correct the addresses in nut.def.

3.3.2. Default route (NUT)

Set a default route the value that is put "1" to the last of ROUTER-PREFIX-ADDRESS in config.txt in TN.

For example;

UA / EP / B2BUA

If ROUTER-PREFIX-ADDRESS is "3ffe:501:ffff:5::", the default route should be "3ffe:501:ffff:5::1".

RG/PX

If prefix of [target] is "3ffe:501:ffff:50::", the default route should be "3ffe:501:ffff:50::1".

The default route of NUT is set by receiving RA (router advertisement). However, when a fixed default route is used, you can also set it manually.

3.3.3. DNS server (NUT)

Because a DNS server is provided by TN in the test network, only NUT needs to set a DNS server.

DNS server address provided by TN is described as "DNS-ADDRESS" in a configuration file of SIP-CT (config.txt). For details of config.txt, see Section 3.2.3.

3.3.4. SIP parameters (NUT)

Depending on what kind of SIP applicant implementation that you use, setting methods and naming of a parameter are different.

4. How to run the SIP Conformance test

In the section, the explanation of how to run SIP-CT goes on based on completing the configuration properly.

<NOTE! About Log Files>

Test log files are created after each single test. And then if you execute the same test again, you need to delete these log files. If necessary, make back-up files of them. How to delete log files is described in Section 4.4 (1).

Before running tests, change your current directory to the directory that you run the tests.

UA:

\$ cd \$SOMEWHERE/ct-sip-ipv6-ua/sip-ipv6-ua/

EP:

\$ cd \bigseleft\{ \sqrt{s0MEWHERE/ct-sip-ipv6-ep/sip-ipv6-ep/} \}

B2BUA:

\$ cd \$SOMEWHERE/ct-sip-ipv6-b2bua/sip-ipv6-b2bua/

RG:

\$ cd \$SOMEWHERE/ct-sip-ipv6-rg/sip-ipv6-rg/

PX:

\$ cd \$SOMEWHERE/ct-sip-ipv6-px/sip-ipv6-px/

\$SOMEWHERE is the directory which SIP-CT package was copied to during installation phase (See INSTALL file).

4.1. Run Auto-configuration Tool

In the same directory, run the auto-configuration tool by hitting the following command.

\$ make init

By this tool, the following processes are executed automatically.

- Check if OS, BIND, and Perl are recommended software and version or not.
- Configure OS settings for IPv6
- Configure from values in Configuration file (config.txt)
- Configure from interface names and MAC addresses in nut.def and tn.def

- Run rtadvd
- Run BIND
- [UA / EP / B2BUA]
 - Refer to UA address in config.txt (ONLY WHEN a fixed address is specified in config.txt); or
 - Auto-configuration of IPv6 Address of NUT (ONLY WHEN no fixed address is specified in config.txt)
- Connection check by ping
- Check by dig

If there are some errors, the tool displays the error message and quit the processing. In this case, please check the configuration of NUT or TN according to the message. If it is done, you can see the results of ping and dig on the screen. If there is "[NG]", please check the connection or configuration and fix it, and then run the Auto-configuration again. If all check items are "[OK]", you can start SIP-CT.

4.2. Run koi

Execute koi to work Tester properly. Hit the following command.

\$ /usr/local/koi/bin/koid

4.3. Test categories

4.3.1. UA

Using the current version of SIP-CT, you can test the following test categories (The total number of test scenarios is 107.) In Table 6, test numbers 1 to 81 are BASIC, mandatory tests, and numbers 82 to 107 are ADVANCED, executed depending on the function a NUT supports.

Table 6 Test category and number

Test rank	Test category	No	Profile No	Profile title
BASIC	Session Establishme nt	1	UA-2-1-1	Session Establishment Through Two Proxies (Caller hung up by Callee)
		2	UA-2-1-2	Session Establishment Through Two Proxies (Callee hung up by Caller)
		3	UA-2-1-3	Session Establishment Through Two Proxies (Caller hanging up)
		4	UA-2-1-4	Session Establishment Through Two Proxies (Callee hanging up)
		5	UA-2-1-5	Session Establishment Through One Proxy (Caller hung up by Callee)

Test rank	Test category	No	Profile No	Profile title
		6	UA-2-1-6	Session Establishment Through One Proxy (Callee hung up by Caller)
		7	UA-2-1-7	Unsuccessful No Answer [CANCEL] (Caller)
		8	UA-2-1-8	Unsuccessful No Answer [CANCEL] (Callee)
		9	UA-2-2-1	Unsuccessful Busy (Caller)
		10	UA-2-2-2	Unsuccessful Busy (Callee)
		11	UA-2-2-3	Unsuccessful No Response from User Agent (Caller)
		12	UA-2-2-4	Unsuccessful Temporarily Unavailable (Caller)
	Transaction	13	UA-4-1-1	INVITE Client Transaction (retransmission)
		14	UA-4-1-2	INVITE Client Transaction (Receipt of 180 Ringing and Stop of retransmission)
		15	UA-4-1-3	INVITE Client Transaction (Stop of ACK upon Timer D fired)
		16	UA-4-1-4	Non-INVITE Client Transaction (Stop of retransmission of CANCEL upon Timer F fired)
		17	UA-4-1-5	Non-INVITE Client Transaction (Stop of retransmission of BYE upon Timer F fired)
		18	UA-4-1-7	Non-INVITE Client Transaction (receipt of 100 response to CANCEL and reset of Timer E with T2)
		19	UA-4-1-8	Non-INVITE Client Transaction (receipt of 100 response to BYE and reset of Timer E with T2)
		20	UA-4-1-10	INVITE Server Transaction (Stop retransmission after Timer H fired)
		21	UA-4-1-11	INVITE Server Transaction (Response after Timer H fired)
		22	UA-4-1-12	INVITE Server Transaction (Stop of retransmission of 4xx-6xx response upon receipt of ACK)
		23	UA-4-1-13	Non-INVITE Server Transaction (stop of retransmission of CANCEL after Timer J fired)
		24	UA-4-1-14	Non-INVITE Server Transaction (Stop of retransmission of BYE)
		25	UA-4-2-1	487 to CANCEL for INVITE request after 64*T1 fired
		26	UA-4-2-6	BYE for no response to retransmitted 200 (UAS)
		27	UA-4-2-7	No Record-Route in negative replies (caller)
		28	UA-4-2-8	No Record-Route in negative replies (callee)
	Mid-dialog control	29	UA-5-1-1	Session with re-INVITE (Receiving re-INVITE for Hold) (Caller)
		30	UA-5-2-1	Receipt of re-INVITE before sending the final response to the first INVITE
		31	UA-5-2-3	Unacceptable re-INVITE (Caller)
		32	UA-5-2-4	Unacceptable re-INVITE (Callee)
		33	UA-5-2-5	No ACK is received for re-INVITE (Caller)
		34	UA-5-2-6	No ACK is received for re-INVITE (Callee)
		35	UA-5-2-7	re-INVITE without offer (Caller)
		36	UA-5-2-8	re-INVITE without offer (Callee)
	Authenticati	37	UA-6-1-8	INVITE with Digest Authentication without qop

Test rank	Test category	No	Profile No	Profile title
	on	38	UA-6-1-9	BYE with Digest Authentication without qop
	Header	39	UA-7-1-2	URI including a comma, question mark or semicolon
	parameter	40	UA-7-2-1	Receipt of BYE with an unacceptable header field
		41	UA-7-2-2	Receipt of CANCEL with an unacceptable header field
		42	UA-7-2-3	Receipt of 200 with an unacceptable header field
	Routing	43	UA-8-1-2	Detection of Merged Requests
		44	UA-8-1-3	sent-by of Via in response not inserted into request
		45	UA-8-1-4	sent-by in Via with IP address that differs from the packet source address and port
		46	UA-8-1-5	Via with "maddr" parameter and port in the "sent-by"
		47	UA-8-1-6	Via with "maddr" parameter and without port in "sent-by"
		48	UA-8-1-7	sent-by in Via with a domain name and a port
		49	UA-8-1-8	sent-by in Via with a domain name and without a port
	Request	50	UA-9-2-1	Unrecognized type of body
	message	51	UA-9-2-2	Unrecognized encoding of body
		52	UA-9-2-3	Body in unrecognized language
		53	UA-9-2-4	Request with a tag in To header field
		54	UA-9-2-5	BYE with value of the lower CSeq
		55	UA-9-2-6	Rejection of an offer
	Response	56	UA-10-1-1	Session Progress response
	message	57	UA-10-2-1	Non-Forwarding of request upon receipt of 503
		58	UA-10-2-2	Receipt of SDP answer in a provisional response
		59	UA-10-2-3	Unrecognized response code (2xx)
		60	UA-10-2-4	Unrecognized response code (4xx)
		61	UA-10-2-5	Unrecognized response code (5xx)
		62	UA-10-2-6	Unrecognized response code (6xx)
		63	UA-10-2-7	Provisional response other than a 100 response
		64	UA-10-2-8	Omission or abbriviation of body upon receipt of 413(Request Entity Too Large) response
		65	UA-10-2-9	Processing request without credencials after receipt of 403 (Forbidden) response
		66	UA-10-2- 10	Unsupported Require header field
	Dialog	67	UA-11-1-1	CANCEL for unmatched requests
		68	UA-11-1-2	Request without a tag in a From header field
		69	UA-11-1-3	Response without a tag in a To header field
		70	UA-11-1-5	Provisional response for the need to ask for an "extension"
		71	UA-11-1-6	BYE not matching an existing dialog
		72	UA-11-1-7	Write-once Record-routing
		73	UA-11-1-8	Returning of correct Record-Route parameter
		74	UA-11-1- 10	Failed re-INVITE not changing the dialog
		75	UA-11-1- 11	Construction of a correct Route set

Test rank	Test category	No	Profile No	Profile title
	Transport	76	UA-14-2-1	Receipt of INVITE with additional bytes in the transport packet
		77	UA-14-2-2	Transport packet of a response ending before the end of the message body
		78	UA-14-2-3	Transport packet of request ending before the end of the message body
	ICMP	79	UA-15-2-1	Receipt of "ICMP destination unreachable" for a previously sent request
		80	UA-15-2-2	Receipt of "ICMP time exceeded" for a previously sent request
		81	UA-15-2-3	Receipt of "ICMP time exceeded" for a previously sent response
ADVA	Registration	82	UA-1-1-1	Successful New Registration
NCED		83	UA-1-1-2	Update of Contact List (Refresh)
		84	UA-1-1-4	Cancellation of Registration
		85	UA-1-1-5	Unsuccessful Registration
		86	UA-1-2-1	Record-Route in REGISTER response
		87	UA-4-1-6	Non-INVITE Client Transaction (Stop of retransmission of REGISTER upon Timer F fired)
		88	UA-4-1-9	Non-INVITE Client Transaction (receipt of 100 response to REGISTER and reset of Timer E with T2)
		89	UA-6-1-7	REGISTER with Digest Authentication without qop
	Authenticati	90	UA-6-1-5	BYE request with user authentication
	on	91	UA-6-1-6	re-INVITE with user authentication
	Mid-dialog control	92	UA-5-1-2	Session with re-INVITE (Sending re-INVITE for Hold) (Callee)
		93	UA-5-2-2	Receipt of re-INVITE before receiving the final response to another re-INVITE
		94	UA-5-2-9	Receipt of 491 response to re-INVITE (Caller)
		95	UA-5-2-10	Receipt of 491 response for re-INVITE (Callee)
	DNS	96	UA-13-2-1	Successful Session with Proxy Failure (Caller)
		97	UA-13-2-2	Forwarding of INVITE to an alternative server upon receipt of 503
	Transaction	98	UA-4-2-5	Time in Expires in INVITE is up (UAS)
	Request message	99	UA-9-2-7	INVITE with RFC2543 syntax
		100	UA-11-1-4	Multiple 2xx responses
	Dialog	101	UA-11-1-9	Proper processing upon receipt of multiple 18x from multiple downstream branches
	OPTIONS	102	UA-12-1-1	Receipt of OPTIONS when the UAS is ready to accept a call
	method	103	UA-12-1-2	Receipt of OPTIONS within a dialog
	mounou	104	UA-12-2-1	Receipt of OPTIONS when a UAS is busy over a dialog
	Routing	105	UA-8-1-1	Proxy performing strict routing
	Twuting	106	UA-8-1-9	Correct Strict Routing
	Header	107	UA-7-1-1	Timestamp header in 100 response

Test rank	Test category	No	Profile No	Profile title
	parameter			

4.3.2. EP

Using the current version of SIP-CT, you can test the following test categories (The total number of test scenarios is 107.) In Table 7, test numbers 1 to 89 are BASIC, mandatory tests, and numbers 90 to 107 are ADVANCED, executed depending on the function a NUT supports.

Table 7 Test category and number

Test rank	Test category	No	Profile No	Profile title
BASIC	Registration	1	UA-1-1-1	Successful New Registration
		2	UA-1-1-2	Update of Contact List (Refresh)
		3	UA-1-1-4	Cancellation of Registration
		4	UA-1-1-5	Unsuccessful Registration
		5	UA-1-2-1	Record-Route in REGISTER response
		6	UA-4-1-6	Non-INVITE Client Transaction (Stop of retransmission of REGISTER upon Timer F fired)
		7	UA-4-1-9	Non-INVITE Client Transaction (receipt of 100 response to REGISTER and reset of Timer E with T2)
		8	UA-6-1-7	REGISTER with Digest Authentication without qop
	Session Establishment	9	UA-2-1-1	Session Establishment Through Two Proxies (Caller hung up by Callee)
		10	UA-2-1-2	Session Establishment Through Two Proxies (Callee hung up by Caller)
		11	UA-2-1-3	Session Establishment Through Two Proxies (Caller hanging up)
		12	UA-2-1-4	Session Establishment Through Two Proxies (Callee hanging up)
		13	UA-2-1-5	Session Establishment Through One Proxy (Caller hung up by Callee)
		14	UA-2-1-6	Session Establishment Through One Proxy (Callee hung up by Caller)
		15	UA-2-1-7	Unsuccessful No Answer [CANCEL] (Caller)
		16	UA-2-1-8	Unsuccessful No Answer [CANCEL] (Callee)
		17	UA-2-2-1	Unsuccessful Busy (Caller)
		18	UA-2-2-2	Unsuccessful Busy (Callee)
		19	UA-2-2-3	Unsuccessful No Response from User Agent (Caller)
		20	UA-2-2-4	Unsuccessful Temporarily Unavailable (Caller)

Test rank	Test category	No	Profile No	Profile title
	Transaction	21	UA-4-1-1	INVITE Client Transaction (retransmission)
		22	UA-4-1-2	INVITE Client Transaction (Receipt of 180 Ringing and Stop of retransmission)
		23	UA-4-1-3	INVITE Client Transaction (Stop of ACK upon Timer D fired)
		24	UA-4-1-4	Non-INVITE Client Transaction (Stop of retransmission of CANCEL upon Timer F fired)
		25	UA-4-1-5	Non-INVITE Client Transaction (Stop of retransmission of BYE upon Timer F fired)
		26	UA-4-1-7	Non-INVITE Client Transaction (receipt of 100 response to CANCEL and reset of Timer E with T2)
		27	UA-4-1-8	Non-INVITE Client Transaction (receipt of 100 response to BYE and reset of Timer E with T2)
		28	UA-4-1-10	INVITE Server Transaction (Stop retransmission after Timer H fired)
		29	UA-4-1-11	INVITE Server Transaction (Response after Timer H fired)
		30	UA-4-1-12	INVITE Server Transaction (Stop of retransmission of 4xx-6xx response upon receipt of ACK)
		31	UA-4-1-13	Non-INVITE Server Transaction (stop of retransmission of CANCEL after Timer J fired)
		32	UA-4-1-14	Non-INVITE Server Transaction (Stop of retransmission of BYE)
		33	UA-4-2-1	487 to CANCEL for INVITE request after 64*T1 fired
		34	UA-4-2-6	BYE for no response to retransmitted 200 (UAS)
		35	UA-4-2-7	No Record-Route in negative replies (caller)
		36	UA-4-2-8	No Record-Route in negative replies (callee)
	Mid-dialog control	37	UA-5-1-1	Session with re-INVITE (Receiving re-INVITE for Hold) (Caller)
		38	UA-5-2-1	Receipt of re-INVITE before sending the final response to the first INVITE
		39	UA-5-2-3	Unacceptable re-INVITE (Caller)
		40	UA-5-2-4	Unacceptable re-INVITE (Callee)
		41	UA-5-2-5	No ACK is received for re-INVITE (Caller)
		42	UA-5-2-6	No ACK is received for re-INVITE (Callee)
		43	UA-5-2-7	re-INVITE without offer (Caller)
		44	UA-5-2-8	re-INVITE without offer (Callee)
	Authenticatio	45	UA-6-1-8	INVITE with Digest Authentication without qop
	n	46	UA-6-1-9	BYE with Digest Authentication without qop
	Header parameter	47	UA-7-1-2	URI including a comma, question mark or semicolon
		48	UA-7-2-1	Receipt of BYE with an unacceptable header field

Test rank	Test category	No	Profile No	Profile title
		49	UA-7-2-2	Receipt of CANCEL with an unacceptable header field
		50	UA-7-2-3	Receipt of 200 with an unacceptable header field
	Routing	51	UA-8-1-2	Detection of Merged Requests
		52	UA-8-1-3	sent-by of Via in response not inserted into request
		53	UA-8-1-4	sent-by in Via with IP address that differs from the packet source address and port
		54	UA-8-1-5	Via with "maddr" parameter and port in the "sent-by"
		55	UA-8-1-6	Via with "maddr" parameter and without port in "sent-by"
		56	UA-8-1-7	sent-by in Via with a domain name and a port
		57	UA-8-1-8	sent-by in Via with a domain name and without a port
	Request	58	UA-9-2-1	Unrecognized type of body
	message	59	UA-9-2-2	Unrecognized encoding of body
		60	UA-9-2-3	Body in unrecognized language
		61	UA-9-2-4	Request with a tag in To header field
		62	UA-9-2-5	BYE with value of the lower CSeq
		63	UA-9-2-6	Rejection of an offer
	Response message	64	UA-10-1-1	Session Progress response
		65	UA-10-2-1	Non-Forwarding of request upon receipt of 503
		66	UA-10-2-2	Receipt of SDP answer in a provisional response
		67	UA-10-2-3	Unrecognized response code (2xx)
		68	UA-10-2-4	Unrecognized response code (4xx)
		69	UA-10-2-5	Unrecognized response code (5xx)
		70	UA-10-2-6	Unrecognized response code (6xx)
		71	UA-10-2-7	Provisional response other than a 100 response
		72	UA-10-2-8	Omission or abbriviation of body upon receipt of 413(Request Entity Too Large) response
		73	UA-10-2-9	Processing request without credencials after receipt of 403 (Forbidden) response
		74	UA-10-2- 10	Unsupported Require header field
	Dialog	75	UA-11-1-1	CANCEL for unmatched requests
		76	UA-11-1-2	Request without a tag in a From header field
		77	UA-11-1-3	Response without a tag in a To header field
		78	UA-11-1-5	Provisional response for the need to ask for an "extension"
		79	UA-11-1-6	BYE not matching an existing dialog
		80	UA-11-1-7	Write-once Record-routing
		81	UA-11-1-8	Returning of correct Record-Route parameter
		82	UA-11-1- 10	Failed re-INVITE not changing the dialog
		83	UA-11-1- 11	Construction of a correct Route set

Test rank	Test category	No	Profile No	Profile title	
	Transport	84	UA-14-2-1	Receipt of INVITE with additional bytes in the transport packet	
			UA-14-2-2	Transport packet of a response ending before the end of the message body	
			UA-14-2-3	Transport packet of request ending before the end of the message body	
	ICMP	87	UA-15-2-1	Receipt of "ICMP destination unreachable" for a previously sent request	
		88	UA-15-2-2	Receipt of "ICMP time exceeded" for a previously sent request	
		89	UA-15-2-3	Receipt of "ICMP time exceeded" for a previously sent response	
ADVAN	Authenticatio	90	UA-6-1-5	BYE request with user authentication	
CED	n	91	UA-6-1-6	re-INVITE with user authentication	
	Mid-dialog control	92	UA-5-1-2	Session with re-INVITE (Sending re-INVITE for Hold) (Callee)	
			UA-5-2-2	Receipt of re-INVITE before receiving the final response to another re-INVITE	
		94	UA-5-2-9	Receipt of 491 response to re-INVITE (Caller)	
		95	UA-5-2-10	Receipt of 491 response for re-INVITE (Callee)	
	DNS	96	UA-13-2-1	Successful Session with Proxy Failure (Caller)	
		97	UA-13-2-2	Forwarding of INVITE to an alternative server upon receipt of 503	
	Transaction	Γransaction 98 UA-4-2		Time in Expires in INVITE is up (UAS)	
	Request message	99	UA-9-2-7	INVITE with RFC2543 syntax	
	Dialog	100	UA-11-1-4	Multiple 2xx responses	
		101	UA-11-1-9	Proper processing upon receipt of multiple 18x from multiple downstream branches	
	OPTIONS method	102	UA-12-1-1	Receipt of OPTIONS when the UAS is ready to accept a call	
		103	UA-12-1-2	Receipt of OPTIONS within a dialog	
		104	UA-12-2-1	Receipt of OPTIONS when a UAS is busy over a dialog	
	Routing	105	UA-8-1-1	Proxy performing strict routing	
		106	UA-8-1-9	Correct Strict Routing	
	Header parameter	107	UA-7-1-1	Timestamp header in 100 response	

4.3.3. B2BUA

Using the current version of SIP-CT, you can test the following test categories (The total number of test scenarios is 107.) In Table 8, test numbers 1 to 85 are BASIC, mandatory tests, and numbers 86 to 108 are ADVANCED, executed depending on the function a NUT supports.

Table 8 Test category and number

Test rank	Test category	<u>No</u>	Profile No	Profile title
BASIC	Session Establishment	1	UA-2-1-1	Session Establishment Through Two Proxies (Caller hung up by Callee)
		2	UA-2-1-2	Session Establishment Through Two Proxies (Callee hung up by Caller)
		3	UA-2-1-3	Session Establishment Through Two Proxies (Caller hanging up)
		4	UA-2-1-4	Session Establishment Through Two Proxies (Callee hanging up)
			UA-2-1-5	Session Establishment Through One Proxy (Caller hung up by Callee)
			UA-2-1-6	Session Establishment Through One Proxy (Callee hung up by Caller)
ı		7	UA-2-1-7	Unsuccessful No Answer [CANCEL] (Caller)
ı		8	UA-2-1-8	Unsuccessful No Answer [CANCEL] (Callee)
ı		9	UA-2-2-1	Unsuccessful Busy (Caller)
ı		10	UA-2-2-2	Unsuccessful Busy (Callee)
ı		11	UA-2-2-3	Unsuccessful No Response from User Agent (Caller)
ı		12	UA-2-2-4	Unsuccessful Temporarily Unavailable (Caller)
ı	Transaction	13	UA-4-1-1	INVITE Client Transaction (retransmission)
			UA-4-1-2	INVITE Client Transaction (Receipt of 180 Ringing and Stop of retransmission)
			UA-4-1-3	INVITE Client Transaction (Stop of ACK upon Timer D fired)
		16	UA-4-1-4	Non-INVITE Client Transaction (Stop of retransmission of CANCEL upon Timer F fired)
		17	UA-4-1-5	Non-INVITE Client Transaction (Stop of retransmission of BYE upon Timer F fired)
			UA-4-1-7	Non-INVITE Client Transaction (receipt of 100 response to CANCEL and reset of Timer E with T2)
		19	UA-4-1-8	Non-INVITE Client Transaction (receipt of 100 response to BYE and reset of Timer E with T2)
		20	UA-4-1-10	INVITE Server Transaction (Stop retransmission after Timer H fired)
		21	UA-4-1-11	INVITE Server Transaction (Response after Timer H fired)
		22	UA-4-1-12	INVITE Server Transaction (Stop of retransmission of 4xx-6xx response upon receipt of ACK)
		23	UA-4-1-13	Non-INVITE Server Transaction (stop of retransmission of CANCEL after Timer J fired)
		24	UA-4-1-14	Non-INVITE Server Transaction (Stop of retransmission of BYE)
		25	UA-4-2-1	487 to CANCEL for INVITE request after 64*T1 fired
		26	UA-4-2-6	BYE for no response to retransmitted 200 (UAS)
		27	UA-4-2-7	No Record-Route in negative replies (caller)
		28	UA-4-2-8	No Record-Route in negative replies (callee)

Test rank	Test category	No	Profile No	Profile title	
Tallx	Middialan				
	Mid-dialog control	29	UA-5-1-1	Session with re-INVITE (Receiving re-INVITE for Hold) (Caller)	
			UA-5-1-2	Session with re-INVITE (Sending re-INVITE for Hold) (Callee)	
		31	UA-5-2-1	Receipt of re-INVITE before sending the final response to the first INVITE	
		32	UA-5-2-2	Receipt of re-INVITE before receiving the final response to another re-INVITE	
			UA-5-2-3	Unacceptable re-INVITE (Caller)	
			UA-5-2-4	Unacceptable re-INVITE (Callee)	
		35	UA-5-2-5	No ACK is received for re-INVITE (Caller)	
		36	UA-5-2-6	No ACK is received for re-INVITE (Callee)	
		37	UA-5-2-7	re-INVITE without offer (Caller)	
		38	UA-5-2-8	re-INVITE without offer (Callee)	
		39	UA-5-2-9	Receipt of 491 response to re-INVITE (Caller)	
		40	UA-5-2-10	Receipt of 491 response for re-INVITE (Callee)	
	Authenticatio	41	UA-6-1-8	INVITE with Digest Authentication without qop	
	n	42	UA-6-1-9	BYE with Digest Authentication without gop	
	Header	43	UA-7-1-2	URI including a comma, question mark or semicolon	
	parameter	44	UA-7-2-1	Receipt of BYE with an unacceptable header field	
			UA-7-2-2	Receipt of CANCEL with an unacceptable header field	
		46	UA-7-2-3	Receipt of 200 with an unacceptable header field	
	Routing	47	UA-8-1-2	Detection of Merged Requests	
			UA-8-1-3	sent-by of Via in response not inserted into request	
		40 IIA-8-1-4 sent-by in		sent-by in Via with IP address that differs from the packet source address and port	
		50	UA-8-1-5	Via with "maddr" parameter and port in the "sent-by"	
		51	UA-8-1-6	Via with "maddr" parameter and without port in "sent-by"	
		52	UA-8-1-7	sent-by in Via with a domain name and a port	
		53	UA-8-1-8	sent-by in Via with a domain name and without a port	
	Request	54	UA-9-2-1	Unrecognized type of body	
	message	55	UA-9-2-2	Unrecognized encoding of body	
		56	UA-9-2-3	Body in unrecognized language	
		57	UA-9-2-4	Request with a tag in To header field	
		58	UA-9-2-5	BYE with value of the lower CSeq	
		59	UA-9-2-6	Rejection of an offer	
	Response message	60	UA-10-1-1	Session Progress response	
		61	UA-10-2-1	Non-Forwarding of request upon receipt of 503	
		62	UA-10-2-2	Receipt of SDP answer in a provisional response	

Test rank	Test category	No	Profile No	Profile title	
		63	UA-10-2-3	Unrecognized response code (2xx)	
		64	UA-10-2-4	Unrecognized response code (4xx)	
		65	UA-10-2-5	Unrecognized response code (5xx)	
		66	UA-10-2-6	Unrecognized response code (6xx)	
		67	UA-10-2-7	Provisional response other than a 100 response	
		68	UA-10-2-8	Omission or abbriviation of body upon receipt of 413(Request Entity Too Large) response	
		69	UA-10-2-9	Processing request without credencials after receipt of 403 (Forbidden) response	
		70	UA-10-2- 10	Unsupported Require header field	
	Dialog	71	UA-11-1-1	CANCEL for unmatched requests	
		72	UA-11-1-2	Request without a tag in a From header field	
		73	UA-11-1-3	Response without a tag in a To header field	
			UA-11-1-5	Provisional response for the need to ask for an "extension"	
		75	UA-11-1-6	BYE not matching an existing dialog	
		76	UA-11-1-7	Write-once Record-routing	
		77	UA-11-1-8	Returning of correct Record-Route parameter	
		78	UA-11-1- 10	Failed re-INVITE not changing the dialog	
		79	UA-11-1- 11	Construction of a correct Route set	
	Transport	80	UA-14-2-1	Receipt of INVITE with additional bytes in the transport packet	
			UA-14-2-2	Transport packet of a response ending before the end of the message body	
		82	UA-14-2-3	Transport packet of request ending before the end of the message body	
	ICMP	83	UA-15-2-1	Receipt of "ICMP destination unreachable" for a previously sent request	
		84	UA-15-2-2	Receipt of "ICMP time exceeded" for a previously sent request	
		85	UA-15-2-3	Receipt of "ICMP time exceeded" for a previously sent response	

Test rank	Test category	No	Profile No	Profile title	
ADVAN	Registration	86	UA-1-1-1	Successful New Registration	
CED		87	UA-1-1-2	Update of Contact List (Refresh)	
			UA-1-1-4	Cancellation of Registration	
		89	UA-1-1-5	Unsuccessful Registration	
			UA-1-2-1	Record-Route in REGISTER response	
		91	UA-4-1-6	Non-INVITE Client Transaction (Stop of retransmission of REGISTER upon Timer F fired)	
		92	UA-4-1-9	Non-INVITE Client Transaction (receipt of 100 response to REGISTER and reset of Timer E with T2)	
		93	UA-6-1-7	REGISTER with Digest Authentication without qop	
	Authenticatio	94	UA-6-1-5	BYE request with user authentication	
	n	95	UA-6-1-6	re-INVITE with user authentication	
	DNS	96	UA-13-2-1	Successful Session with Proxy Failure (Caller)	
			UA-13-2-2	Forwarding of INVITE to an alternative server upon receipt of 503	
	Transaction	98	UA-4-2-5	Time in Expires in INVITE is up (UAS)	
	Request message	99	UA-9-2-7	INVITE with RFC2543 syntax	
	Dialog	100	UA-11-1-4	Multiple 2xx responses	
		101	UA-11-1-9	Proper processing upon receipt of multiple 18x from multiple downstream branches	
	OPTIONS method	102	UA-12-1-1	Receipt of OPTIONS when the UAS is ready to accept a call	
		103	UA-12-1-2	Receipt of OPTIONS within a dialog	
		104	UA-12-2-1	Receipt of OPTIONS when a UAS is busy over a dialog	
	Routing	105	UA-8-1-1	Proxy performing strict routing	
		106	UA-8-1-9	Correct Strict Routing	
	Header parameter	107	UA-7-1-1	Timestamp header in 100 response	

4.3.4. RG

Using the current version of SIP-CT, you can test the following test categories (The total number of test scenarios is 107.) In Table 9, test numbers 1 to 21 are BASIC, mandatory tests, and number 22 is ADVANCED, executed depending on the function a NUT supports.

Table 9 Test category and number

Test rank	Test category	No	Profile No	Profile title
BASIC	Registration			
DASIC	Negistration	1	RG-1-1-1	SIP Registrar- Successful New Registration
		2	RG-1-1-2	SIP Registrar- Update of Contact List
		3	RG-1-1-3	SIP Registrar- Request for Current Contact List
		4	RG-1-1-4	SIP Registrar- Cancellation of Registration
		5	RG-1-1-5	SIP Registrar- REGISTER without Expires header field
		6	RG-1-1-6	SIP Registrar- processing of REGISTER requests in the correct order.
		7	RG-1-1-7	SIP Registrar REGISTER with two Contact header fields with separate expires parameters
		8	RG-1-2-1	SIP Registrar- Unsuccessful Registration (wrong user ID / password)
		9	RG-1-2-2	SIP Registrar- Expiration of REGISTER less than a registrar-configured minimum
	10		RG-1-2-3	SIP Registrar- REGISTER with the equal CSeq value to or lower than the last value of CSeq
	11		RG-1-2-4	SIP Registrar- Sending of 400 upon CSeq value of "*" in Contact header field
	12		RG-2-1-1	SIP Registrar- Record-Route in REGISTER request
		13	RG-2-1-2	SIP Registrar- REGISTER with the different Call-ID value
		14	RG-2-1-3	SIP Registrar- Sequence Number is not Incremented
		15	RG-2-1-4	SIP Registrar- URI with user-param in To header in REGISTER
		16	RG-2-1-5	SIP Registrar- URI with escaped characters in To header in REGISTER
		17	RG-2-2-1	SIP Registrar- REGISTER with an invalid AoR
		18	RG-2-2-2	SIP Registrar- Illegal parameter value in Contact header field
		19	RG-2-2-3	SIP Registrar- REGISTER request with two Contact header values and update failure
		20	RG-4-1-1	SIP Registrar- Future extension about new header field

Test rank	Test category	No	Profile No	Profile title
		21	RG-4-1-2	SIP Registrar- Non-supported option-tag in Require field
ADVAN CED	Registration	22	RG-3-1-1	SIP Registrar- Forwarded REGISTER request

4.3.5. PX

Using the current version of SIP-CT, you can test the following test categories (The total number of test scenarios is 87.) In Table 10, test numbers 1 to 59 are BASIC, mandatory tests, and numbers 60 to 87 are ADVANCED, executed depending on the function a NUT supports.

Table 10 Test category and number

Test	Test category	No	Profile No	Profile title		
rank						
BASIC	Session Establishment on One Proxy	1	PX-1-1-1	SIP Proxy- Session Establishment Through One Proxy in the same domain		
		2	PX-1-1-2	SIP Proxy- Unsuccessful No Answer [CANCEL]		
		3	PX-1-1-3	SIP Proxy- Session establishment and holding with re-INVITE		
		4	PX-1-2-1	SIP Proxy- Unsuccessful Busy		
		5	PX-1-2-2	SIP Proxy- Unsuccessful No Response from User Agent		
		6	PX-1-2-3	SIP Proxy- Unsuccessful Temporarily Unavailable		
	Routing	7	FW-1-1-1	SIP Proxy- Request-URI with escaped characters		
		8	FW-1-1-2	SIP Proxy- Non-allowed parameters in Request-URI		
		9	FW-1-2-1	SIP Proxy- Request-URI with an unknown scheme		
	1			10	FW-1-2-2	SIP Proxy- Request with an inexistent entity at the proxy
		11 12	FW-1-2-3	SIP Proxy- An unsupported option-tag in a Proxy- Require		
			FW-1-2-4	SIP Proxy- Max-Forwards header field with a value of zero(0)		
			FW-1-2-5	SIP Proxy- Request without Max-Forwards header field		
		14	FW-1-2-6	SIP Proxy- Timestamp header field in a 100 response		
		15	FW-2-1-1	SIP Proxy- "sent-by" in Via with a domain name and a port		
			FW-2-1-2	SIP Proxy- "sent-by" in Via with a domain name and without a port		
			FW-2-2-2	SIP Proxy- Receipt of 503 (Service Unavailable) response without Retry-After		
		18	FW-4-1-1	SIP Proxy- Unsuccessful No Answer with Proxy-Require [CANCEL]		

Test rank	Test category	No	Profile No	Profile title	
		19	FW-4-1-2	SIP Proxy- processing of CANCEL upon no provisional response	
	Forwarding Request	20	RQ-2-1-1	SIP Proxy- Future extension about new header fields	
		21	RQ-2-1-2	SIP Proxy- Request without a tag in From field	
		22	RQ-2-1-3	SIP Proxy- Response without a tag in To field	
		23	RQ-2-1-4	SIP Proxy- Unrecognized type of body	
		24	RQ-2-1-5	SIP Proxy- Unrecognized encoding of body	
		25	RQ-2-1-6	SIP Proxy- Unrecognized language of body	
		26	RQ-3-1-1	SIP Proxy- Receipt of BYE with an unacceptable header field	
		27	RQ-3-1-2	SIP Proxy- BYE not matching an existing dialog	
		28	RS-1-1-1	SIP Proxy- Unrecognized response code (2xx)	
		29	RS-1-1-2	SIP Proxy- Unrecognized response code (4xx)	
		30	RS-1-1-3	SIP Proxy- Unrecognized response code (5xx)	
		31	RS-1-1-4	SIP Proxy- Unrecognized response code (6xx)	
		32	RS-1-1-5	SIP Proxy- Provisional response other than 100 response	
		33	RS-1-1-6	SIP Proxy- Receipt of 200 with an unacceptable header field	
	Transaction	34	TS-1-1-1	SIP Proxy- INVITE client transaction (Stop of retransmission of INVITE upon Timer B fired)	
		35	TS-1-1-2	SIP Proxy- INVITE client transaction (Stop of retransmission upon Receipt of 180 Ringing)	
		36	TS-1-1-3	SIP Proxy- INVITE client transaction (Stop of ACK upon Timer D fired)	
		37	TS-2-1-1	SIP Proxy- Non-INVITE Client Transaction (Stop of retransmission of CANCEL upon Timer F fired)	
		38	TS-2-1-2	SIP Proxy- Non-INVITE Client Transaction (Stop of retransmission of BYE upon Timer F fired)	
		39	TS-2-1-3	SIP Proxy- Non-INVITE Client Transaction (receipt of 100 response to CANCEL and reset of Timer E with T2)	
		40	TS-2-1-4	SIP Proxy- Non-INVITE Client Transaction (receipt of 100 response to BYE and reset of Timer E with T2)	
		41	TS-3-1-1	SIP Proxy- INVITE Server Transaction (Response after Timer H fired)	
		42	TS-3-1-2	SIP Proxy- INVITE Server Transaction (Stop of retransmission after Timer H fired)	
		43	TS-3-1-4	SIP Proxy- INVITE Server Transaction (Stop of retransmission of 4xx-6xx response upon receipt of ACK)	
		44	TS-3-1-5	SIP Proxy- 487 to CANCEL for INVITE request after 64*T1 fired	
		45	TS-4-1-1	SIP Proxy- Non-INVITE Server Transaction (response for CANCEL after Timer J fired)	

Test rank	Test category	No	Profile No	Profile title	
		46	TS-4-1-2	SIP Proxy- Non-INVITE Server Transaction (forwarding of BYE upon Timer J fired)	
		47	TS-5-1-1	SIP Proxy- Session Establishment Through One Proxy without Provisional Response in the same domain	
		48	TS-5-1-2	SIP Proxy- Session Establishment Through One Proxy with Multiple Provisional Responses in the same domain	
	Session	49	TS-5-1-3	SIP Proxy- Retransmission of INVITE Request Before Session Establishment Through One Proxy	
		50	PG-1-1-1	SIP Proxy- Session Progress response	
	Progress	51	PG-1-1-2	SIP Proxy- INVITE Client Transaction (extension of Timer C)	
		52	PG-1-2-1	SIP Proxy- INVITE Client Transaction (Reset of Timer C)	
		53	PG-1-2-2	SIP Proxy- INVITE Client Transaction (no provisional response after Timer C fired)	
	Transport	54	TP-1-1-1	SIP Proxy- Receiving INVITE with additional bytes in a transport packet	
		55	TP-1-2-1	SIP Proxy- Transport packet of response ending before the end of the message body	
		56	TP-1-2-2	SIP Proxy- Transport packet of request ending before the end of the message body	
			TP-2-1-1	SIP Proxy- Receipt of "ICMP time exceeded" for a sent request	
			TP-2-1-2	SIP Proxy- Receipt of "ICMP time exceeded" for a sent response	
		59	TP-2-2-1	SIP Proxy- Receiving the "ICMP destination unreachable" message for a sent request	
ADVAN	Authenticatio	60	AU-1-1-1	SIP Proxy- BYE request with user authentication	
CED	n	61	AU-1-1-2	SIP Proxy- re-INVITE with user authentication	
	Forking	62	FK-1-1-1	SIP Proxy- Forked request with different Via branch parameters	
		63	FK-1-1-2	SIP Proxy- Choice of response to forked request (6xx response)	
		64	FK-1-1-3	SIP Proxy- Choice of response to forked request (The lowest response class)	
		65	FK-1-1-4	SIP Proxy- Stateful proxy receiving a CANCEL request	
		66	FK-1-1-5	SIP Proxy- Forked request	
	Routing	67	FW-2-2-3	SIP Proxy- Forwarding of INVITE to an alternate server upon receipt of 503 response	
	Forwarding	68	RQ-1-1-1	SIP Proxy- Receipt of OPTIONS from UAC	
	Request	69	RQ-1-1-2	SIP Proxy- Receipt of OPTIONS when a UAS is ready to accept a call	
	Registration	70	RQ-4-1-2	SIP Registrar- Forwarding REGISTER request	

Test rank	Test category	No	Profile No	Profile title	
	Session Establishment on Two	71	PX-2-1-1	SIP Proxy- Session Establishment Through Two Proxies - Callee hanging up [another domain] (Caller)	
	Proxies	72	PX-2-1-2	SIP Proxy- Session Establishment Through Two Proxies - Callee hanging up [another domain] (Callee)	
		73	PX-2-1-3	SIP Proxy- Unsuccessful No Answer [CANCEL] (Caller)	
		74	PX-2-1-4	SIP Proxy- Unsuccessful No Answer [CANCEL] (Callee)	
		75	PX-2-1-5	SIP Proxy- Session establishment and call hold by re-INVITE (Caller)	
		76	PX-2-1-6	SIP Proxy- Session establishment and call hold by re-INVITE (Callee)	
		77	PX-2-2-1	SIP Proxy- Unsuccessful Busy (Caller)	
		78	PX-2-2-2	SIP Proxy- Unsuccessful Busy (Callee)	
		79	PX-2-2-3	SIP Proxy- Unsuccessful No Response from the UA through the other proxy	
		80	PX-2-2-4	SIP Proxy- Unsuccessful No Response from UA (Callee)	
		81	PX-2-2-5	SIP Proxy- Unsuccessful Temporarily Unavailable (Callee)	
	Routing	82	FW-2-2-1	SIP Proxy- Receipt of 503 (Service Unavailable) response	
		83	FW-2-2-4	SIP Proxy- Forwarding of INVITE to an alternate server upon receipt of 503 response	
		84	FW-3-1-1	SIP Proxy- Session Establishment Through Two Proxies with a strict router in separate domains (Callee)	
		85	FW-3-1-2	SIP Proxy- Session Establishment Through Two Proxies with strict router in separate domains (Caller)	
		86	FW-1-1-3	SIP Proxy- Update of a Request-URI scheme	
		87	FW-2-1-3	SIP Proxy- Multiple 2xx responses	

4.4. Test Profiles

A test profile is a document that title, purpose, addresses and parameters, procedure, judgment and reference of a test are described. Please check them, especially the test title, the test procedure, sample packets, and judgments, before starting tests.

Please refer to the document, *IPv6 Ready Logo Phase 2 for SIP Conformance Test Profile (UA EP B2BUA / RG / PX)*:

http://cert.v6pc.jp/sip-ipv6/ipv6ready/

4.5. Commands for Conformance test

The test procedure is as follows:

(1) Remove the existing HTML logs You need to delete log files in order to execute a test.

There are two ways to delete log files.

(a) Delete all log files

\$ make clean

NOTE!

This command ("make clean") deletes all log files in the directory. That means that it deletes all results of tests you executed. If necessary, make back-up files of them.

(b) Delete "index.html", "report.html", and "summary.html" You can execute a test by deleting "index.html", "report.html", and "summary.html".

\$ rm index.html

\$ rm report.html

\$ rm summary.html

If you run a test even though there are any HTML logs, the following message is displayed and the test is canceled. Delete log files according to the above indication, and run the test again.

Error: Already exist index.html
please run after delete index.html or run with -f option.
*** Error code 2

(2) Run tests

If you need to run the tests by number, you execute the following command:

make simple

For example, when executing test number from 51 to 52, hit the following command:

\$ make simple

\$ start: <u>51</u>

\$ end: <u>52</u>

Operate the test following the instructions on the screen.

(3) Confirm the results with HTML logs

After all the tests finish, you can make a list of the test results outputted as HTML files ("results.html"), and follow the list to each test results.

\$ make result

With a web browser, you can see the following table.

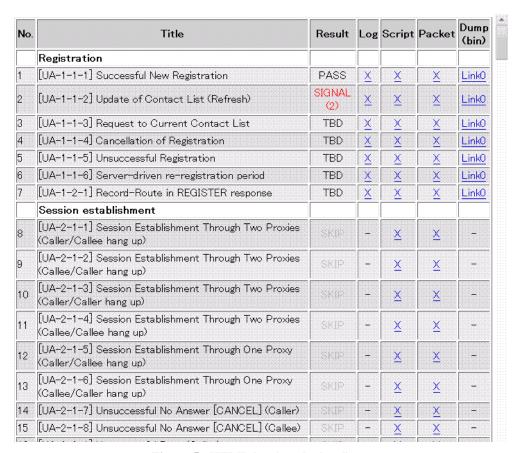


Figure 5. HTML log (results.html)

If you click "X" of the "Log" column in the test you executed above, you can see the detailed information about the test result.

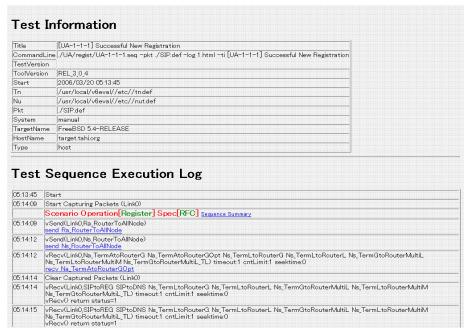


Figure 6. The detailed information about the test result (1)

Scroll down and please check the details of packets and judgments.

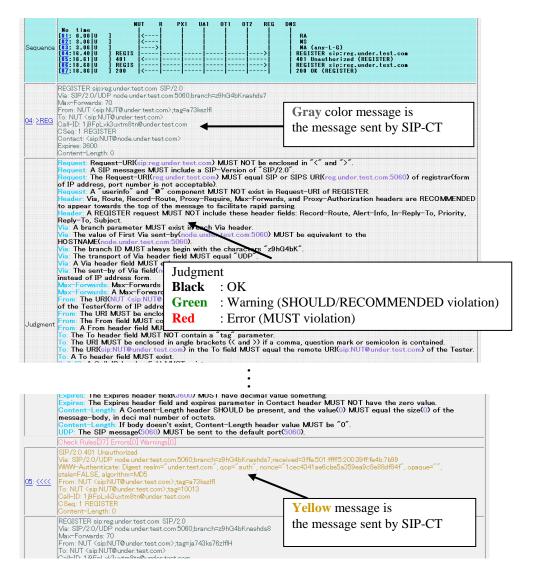


Figure 7. The detailed information about the test results (2)

Appendix: ortp

If you mind to get many logs that are generated during session establishment test, you can change the ortp libraryaccording to the following indication.

- Open the following library:

ortp-x-x-x/src/posixtimer.c

- Comment out two lines as follows:

```
:
    void posixtimer_do()
    :
    :
    // ortp_warning ( "....." );    /* comment out */
    :
    :
    :
    void win_timer_do(void)
    :
    :
    // ortp_warning ( "....." );    /* comment out */
    :
    :
    // ortp_warning ( "....." );    /* comment out */
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    // ortp_warning ( "....." );    /* comment out */
    :
    :
    :
    :
    :
    :
    :
    :
    // ortp_warning ( "....." );    /* comment out */
    :
    :
    :
    :
    :
    :
    :
    :
    :
    // ortp_warning ( "....." );    /* comment out */
    :
    :
    :
    :
    :
    :
    :
    :
    // ortp_warning ( "....." );    /* comment out */
    :
    :
    :
    :
    :
    :
    :
    :
    // ortp_warning ( "....." );    /* comment out */
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    // ortp_warning ( "....." );    /* comment out */
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    // ortp_warning ( "....." );    /* comment out */
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
    :
```

SIP IPv6 Conf	formance	Test Tool
	Reference	e Manual

Copyright(C) IPv6 Promotion Council (2004-2009). All Rights Reserved.

This documentation is produced by SIP SWG members of Certification WG in IPv6 Promotion Council.

The SWG members currently include NIPPON TELEGRAPH AND TELEPHONE CORPORATION (NTT), Yokogawa Electric Corporation and NTT Advanced Technology Corporation (NTT-AT).

No part of this documentation may be reproduced for any purpose without prior approval of IPv6 Promotion Council.