

Embedded Processors

01266212 CYBER PHYSICAL SYSTEM DESIGN SEMESTER 1-2022

Original contents from Edward A. Lee and Prabal Dutta, UC Berkeley, EECS 149/249A

Objective

- To understand Embedded systems and Processors.
- To understand the options and critically evaluate the features of processors.


Topics


- Embedded Systems
- **Computer Components**
- Embedded Processors

Embedded Systems



- A computer system with a small software that is embedded into a larger product,
- ☐ Designed to perform a dedicated function, either as an independent system or as a part of a large system.
- a microcontroller or microprocessor-based system.

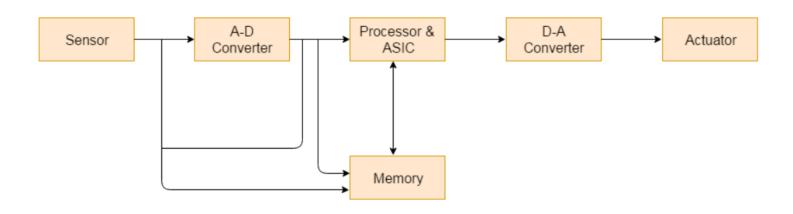

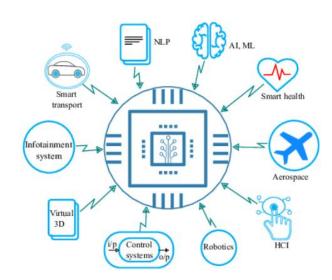

Source: https://www.javatpoint.com/designing-of-an-embedded-system

Embedded Software

- A program to control devices that runs on an embedded computer and has time and memory constraints.
- > Also known as firmware.
- Stored in ROM/Flash memory.

```
/*prepocessor directive */
#include<reg51.h>
void main()
   unsigned int i;
                                /*local variable*/
   P0=0x00;
   while(1)
                                /*statements*/
    P0=oxff;
   for(i=0;i<255;i++);
   P0=0x00;
   for(i=0;i<255;i++);
```

Examples of Embedded System



- ➤ Automobiles: consist of 10~100 embedded systems designed to perform different tasks.
- Mobile phones:
- Industrial robots or machines:
- Medical equipment.
- Household application
- Etc.




6

Characteristics of an Embedded System


- ✓ **Designed for a specific task**. E.g., to detect the smoke in fire alarm system.
- ✓ Tightly constrained as need to embed it inside another product.
- ✓ **Reactive and Real time**: must continually react to changes in the system's physical environment and must compute certain results in real time without any delay. E.g., Car braking System.
- ✓ Microcontroller or microprocessor based.
- ✓ Memory: its software (firmware) is embedded in the memory (ROM).
- ✓ No user interface but attached I/O
- ✓ Low power hardware

IoT vs Embedded System

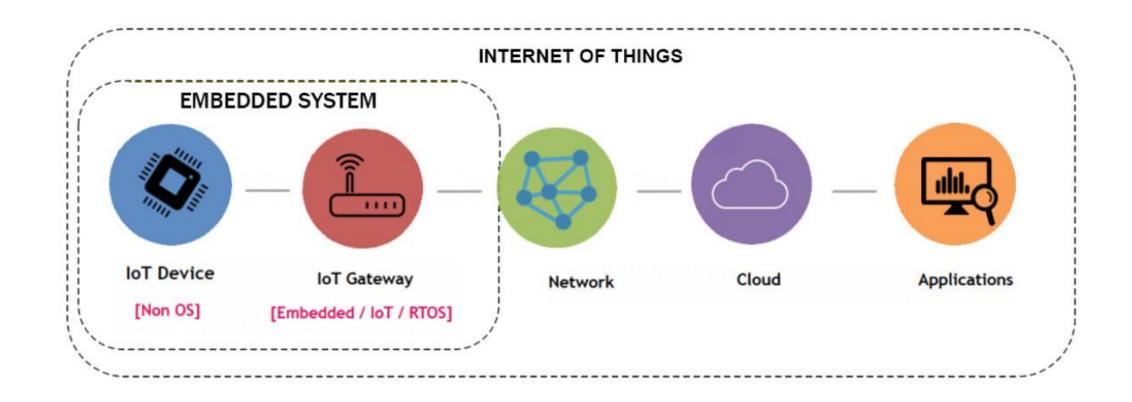

Embedded Systems vs CPS

CPS = ES + physical environment

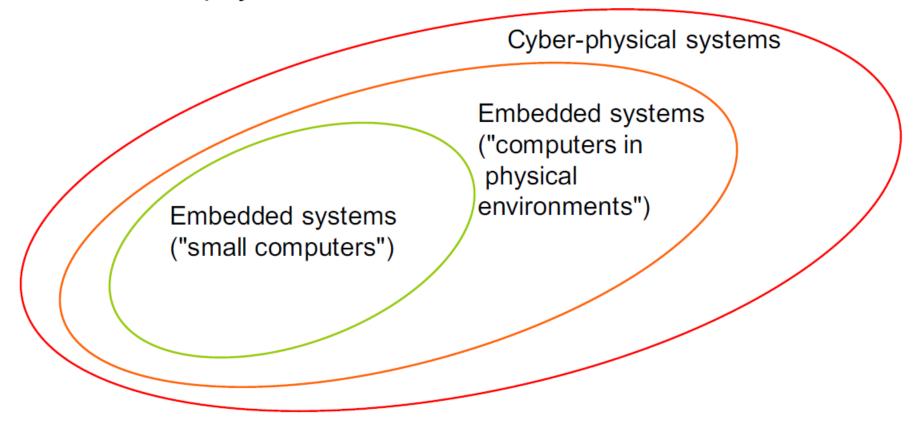

Computer Components


At the most basic level, a computer is a device consisting of three

pieces:

A <u>processor</u> to interpret and execute programs


A memory to store both data and programs

A mechanism for transferring data to and from the outside world Or Input/Output mechanism.

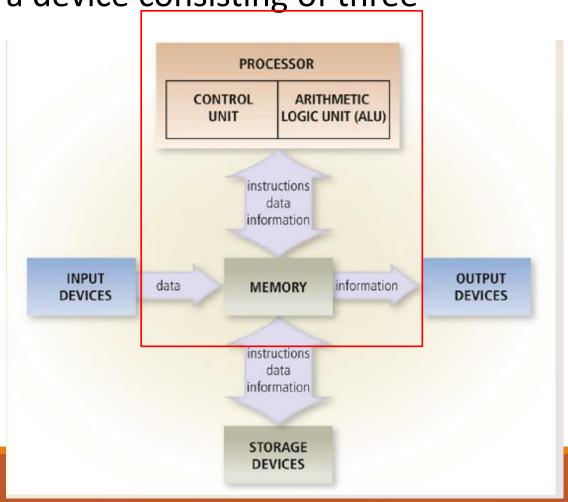

Central Processing Unit (CPU)/Microprocessor

- CPU consists of a variety of circuitry and components (an ALU, register array, and a control unit) that are packaged together and connected directly to the motherboard.
- > ALU performs arithmetical and logical operations on the data received.
- ➤ Register array consists of registers (word-size memory) using D flip-flop . □
- Control unit (CU) controls the flow of data and instructions within the computer.

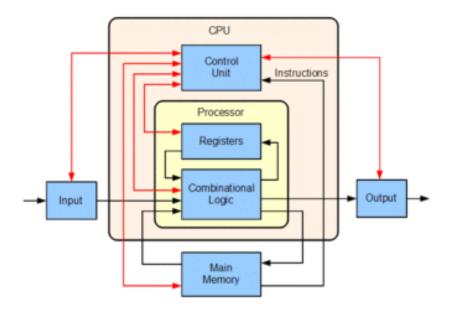

General Purpose Processor


		NUMBER		TOTA	L CACHE ME	·····OICI
TYPE OF PROCESSOR	NAME	OF CORES	CLOCK SPEED	LEVEL 1	LEVEL 2	LEVE 3
DESKTOP	Intel Core i7 AMD Phenom II	4 2-4	2.66-3.33 GHz 2.4-3.2 GHz	64 KB* 128 KB*	256 KB* 512 KB*	8 MB 4-6 ME
SERVER/ WORKSTATION	Intel Xeon (5500 series) AMD Opteron (3rd generation)	2 or 4 4 or 6	1.86-3.2 GHz 2.0-3.1 GHz	64 KB* 128 KB*	256 KB* 512 KB*	4-8 ME 6 MB
NOTEBOOK	Intel Core 2 Mobile AMD Turion X2 Mobile	1, 2, or 4 2	1.06-3.06 GHz 2.0-2.5 GHz	64 KB* 128 KB*	1-12 MB 1-2 MB*	none
NETBOOK	Intel Atom AMD Athlon Neo	1-2	800 MHz-2 GHz 1.6 MHz	56 KB* 128 KB*	512 KB* 512 KB*	none none

Machine Cycle




The main activity performed by the CPU is


to execute the program instructions stored in the memory together with data.

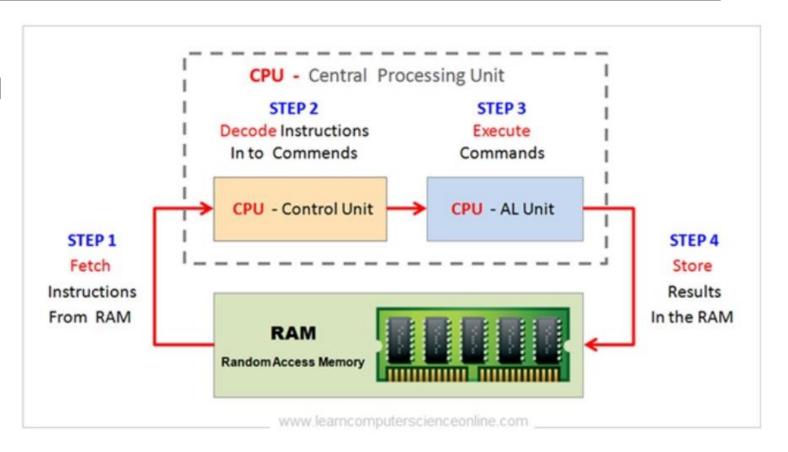


Program in Computer

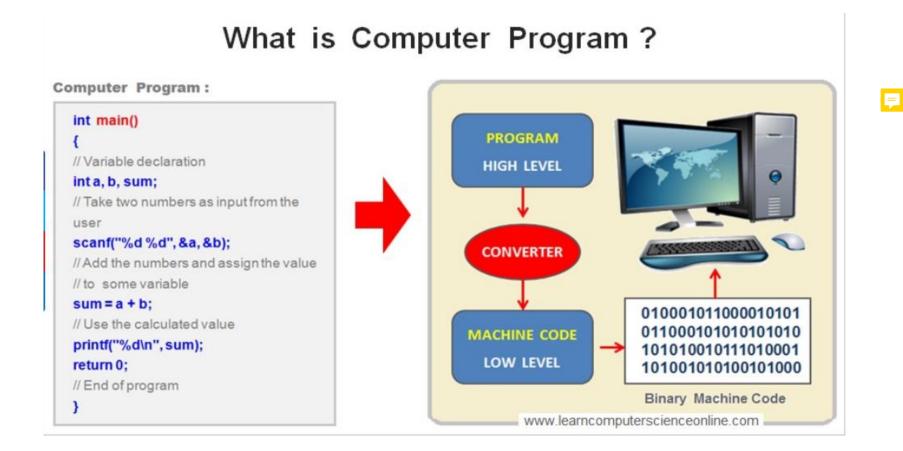


Executing A Program in Computer

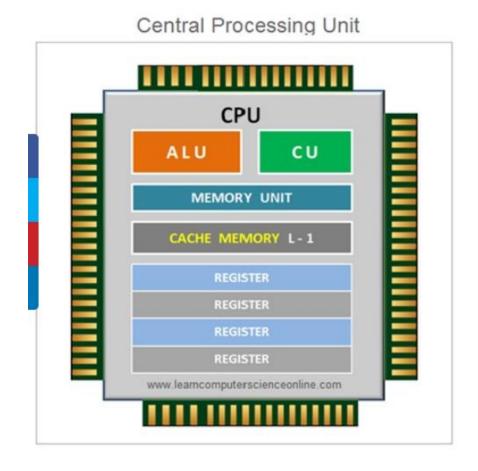

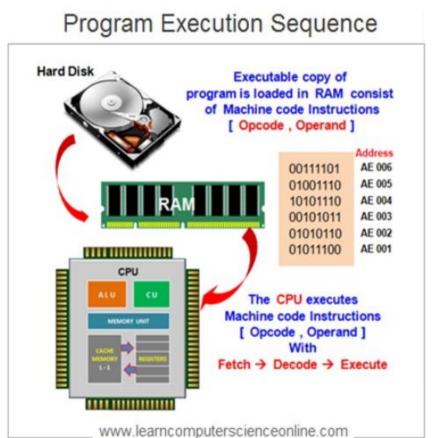

Instruction Set Architecture (ISA)



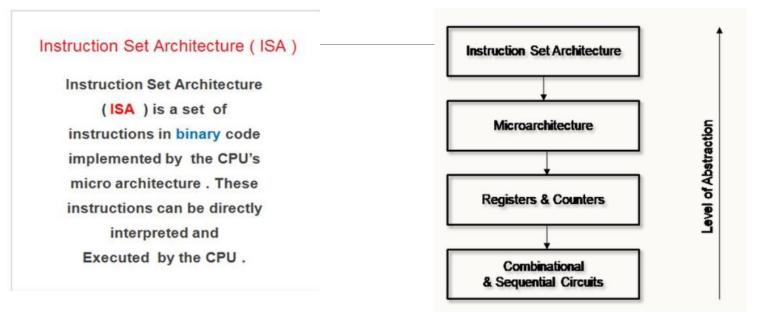


- An ISA specifies the format of its instructions and the primitive operations that the machine can perform.
- An ISA defines the supported <u>data types</u>, the <u>registers</u>, the hardware support for managing <u>main memory</u>, and the <u>input/output</u> model of a family of implementations of the ISA.

Instruction Set Architecture (ISA)

- ISA is an interface between HW and SW.
- High-level Programs are compiled into a set of low-level instructions (ISA), Assembly language and Machine language.

MIPS32 Add Immediate Instruction

	001000	00001	00010	0000000101011110
	OP Code	Addr 1	Addr 2	Immediate value
Equivalent mnemonic:			onic:	addi \$r1 \$r2 350

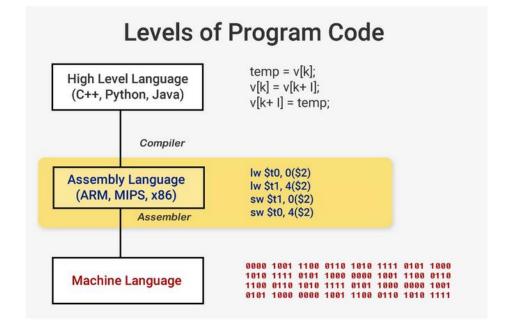

Assembly Language

- a type of low-level programming language that is intended to communicate directly with a computer's hardware.
- designed to be readable by humans.

Assembly Language

ST 1,[801] ST 0,[802] TOP: BEQ [802],10,BOT INCR [802] MUL [801],2,[803] ST [803],[801] JMP TOP BOT: LD A,[801] CALL PRINT

Machine Language

```
00100101 11010011

00100100 11010100

10001010 01001001 11110000

01000100 01010100

01001000 10100111 10100011

11100101 10101011 00000010

00101001

11010100 10101000

10010001 01000100
```

Processor Speed/Clock Speed in Processor

Processor speed in Hartz (Hz) is one of the most important parameters for performance.


A "cycle" is technically a pulse synchronized by an internal crystal oscillator in a computer.

During each cycle, billions of transistors within the processor open and close.

E.g., a processor with a clock of 2 MHz or 2 million cycles per second.

A higher clock speed means a faster processor but needs to consider many factors.



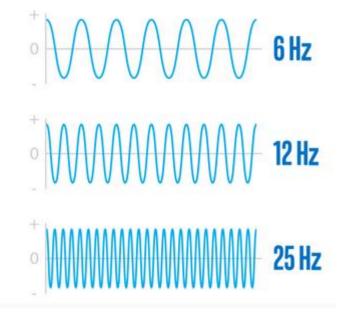




Instruction Cycle and Clock Speed





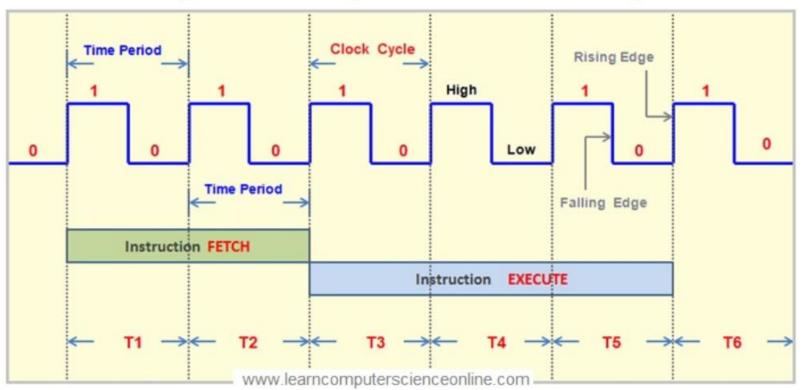

CPU's clock speed: the clock cycle which is the amount of time between two pulses of an oscillator.

Instruction cycle: the process to execute one single program instruction.

Depending upon the type of instruction, a single instruction might need one or more machine cycles.

Problem Statem

Suppose a program (or a program task) takes 1 billion instructions to execute on a processor running at 2 GHz. Suppose also that 50% of the instructions execute in 3 clock cycles, 30% execute in 4 clock cycles, and 20% execute in 5 clock cycles. What is the execution time for the program or task?


- 10⁹ instructions per one program
- clock cycle: 0.5 x 10⁻⁹ seconds
- Number of cycles per Instruction: 3 * 0.5 + 4 * 0.3 + 5 * 0.2 = 3.7
- Execution time: 3.7*10^-9*0.5*10^9


Processors for Embedded Systems







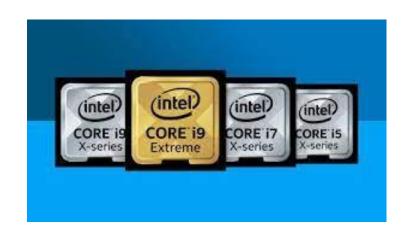

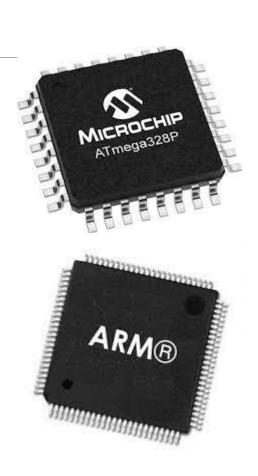

Special-purpose Processor


They range from very small, slow, inexpensive, low-power devices, to high-performance, special-purpose devices

- Microcontrollers integrate a microprocessor with <u>peripheral devices</u> in <u>embedded</u> systems.
- A <u>digital signal processor</u> (DSP) is specialized for <u>signal processing</u>.
- Graphics processing units (GPUs) are processors designed primarily for realtime rendering of images.
- Other specialized units exist for <u>video processing</u> and <u>machine vision</u>. (See: <u>Hardware acceleration</u>.)
- Systems on chip (SoCs) often integrate one or more microprocessor or microcontroller cores.

SOURCE: WIKIPEDIA 23

Microcontrollers (μ C) or MCU

- A small computer on a single integrated circuit consisting of a relatively simple **CPU** combined with peripheral devices such as memories, I/O devices, and timers.
- ➤ By some accounts, more than half of all CPUs sold worldwide are microcontrollers.
- The difference between microcontrollers and general-purpose processors is getting indistinct.

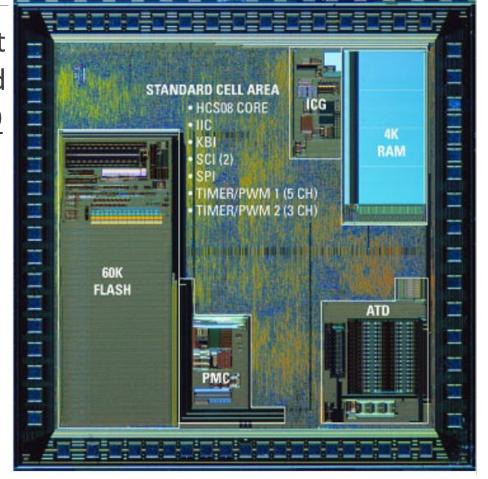


Microcontrollers (μ C) or MCU

- > An Embedded Computer System on a Chip
 - > A CPU
 - Memory (Volatile and Non-Volatile)
 - > Timers
 - > I/O Devices
- > Typically intended for limited energy usage
 - Low power when operating plus sleep modes
- Where might you use a microcontroller?

Examples MCU

The simplest microcontrollers operate on 8-bit/16-bits words and are suitable for applications that require small amounts of memory and simple logical functions (vs. performance-intensive arithmetic functions).

They may consume extremely small amounts of energy, and often include a sleep mode that reduces the power consumption to nanowatts.

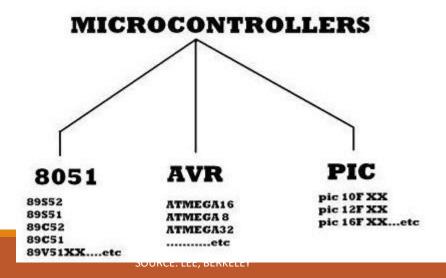

Atmel's AVR ATmega328 MCU




Parameter	Value
CPU type	8-bit AVR
Maximum CPU speed	20 MHz
Performance	20 MIPS at 20 MHz ^[3]
Flash memory	32 KB
SRAM	2 KB
EEPROM	1 KB
Package pin count	28 or 32
Capacitive touch sensing channels	16
Maximum I/O pins	23
External interrupts	2
USB interface	No


Have you seen or used it before? Where?



Atmel's AVR ATmega328 MCU

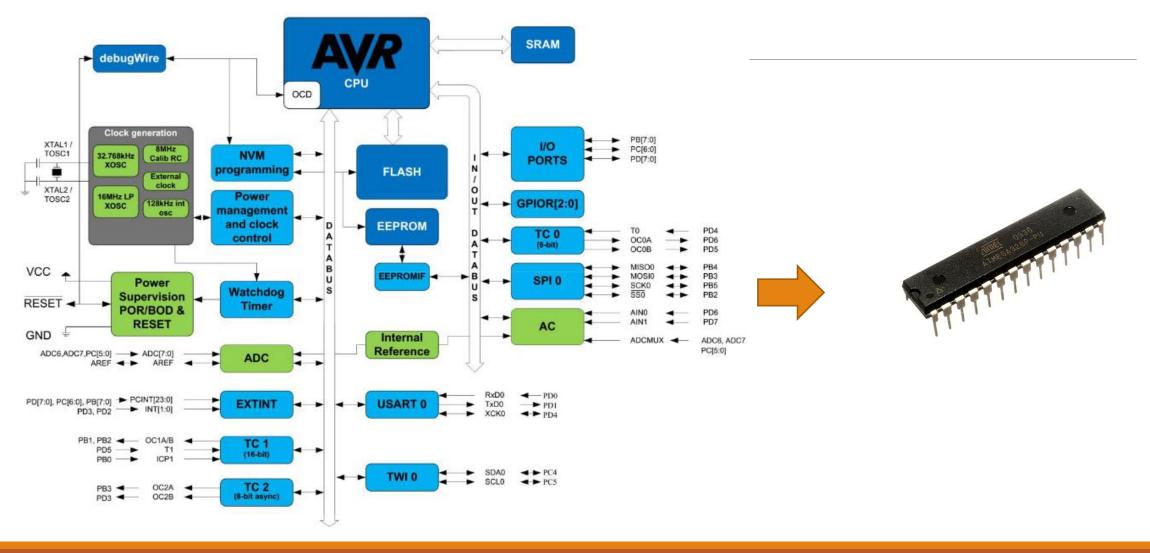

Microcontroller vs Microprocessor

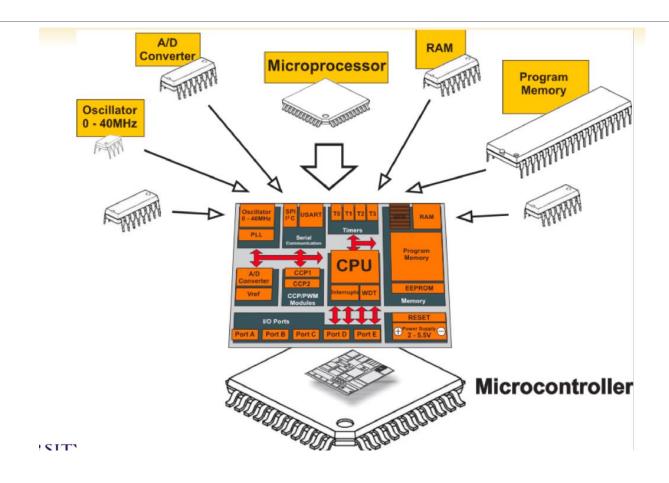

Microprocessor	Microcontroller
It is used for big applications.	It is used to execute a single task within an application.
Microprocessor is the heart of computer system.	It is the heart of the embedded system.
It is just a processor. Memory and I/O	Microcontroller contains external processor
components have to be having to be connected	along with internal memory and I/O
externally.	components.
Since I/O and memory connected externally, the	Since I/O and memory present internally, the
circuit becomes large.	circuit is small.
Can't be used in compact systems and hence	Can be used in compact systems and
inefficient.	microcontroller is an efficient technique.
Cost of entire system increases.	Cost of entire system is low.
Power consumption is high.	Power consumption is low.
Most of the microprocessors do not have power	Most of the microcontrollers have power saving
saving modes.	mode.
Difficult to replace.	Easy to replace.

ARM Cortex Processors

ARM Cortex-A family:

Applications processors
Support OS and high-performance applications
Such as Smartphones, Smart TV



Real-time processors with high performance and high reliability

Support real-time processing and mission-critical control

ARM Cortex-M family:


Microcontroller Cost-sensitive, support SoC









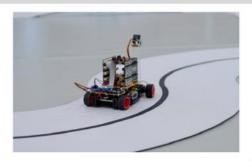

31


How to choose micro-processors/controllers?

Things that matter

- Peripherals (I/O)
- Concurrency & Timing
- Clock Rates
- Memory sizes (SRAM & flash)
- Package sizes

Parameter	Value
CPU type	8-bit AVR
Maximum CPU speed	20 MHz
Performance	20 MIPS at 20 MHz ^[3]
Flash memory	32 KB
SRAM	2 KB
EEPROM	1 KB
Package pin count	28 or 32
Capacitive touch sensing channels	16
Maximum I/O pins	23
External interrupts	2
USB interface	No

Types of Microcontrollers

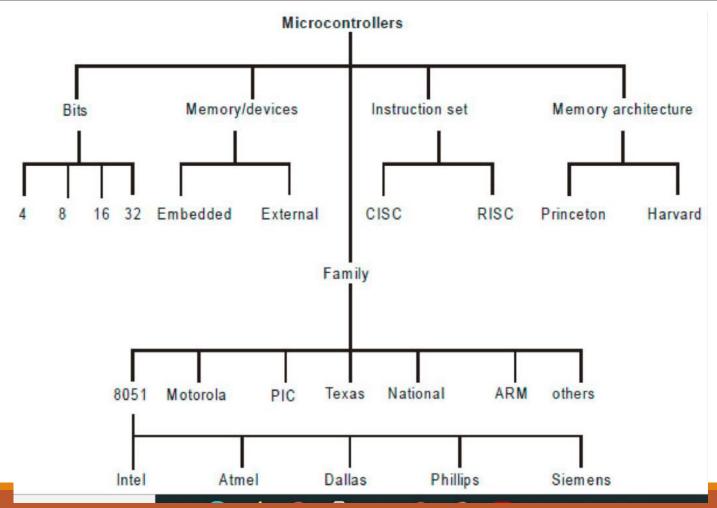

SOURCE: LEE, BERKELEY

33

Digital Signal Processing (DSP) Processors

- Many embedded applications do quite a bit of signal processing.
- > Processors designed specifically to support numerically intensive signal processing applications are called DSP processors, or DSPs (digital signal processors).
- Signal Processing Applications: interactive games; radar, sonar, and LIDAR (light detection and ranging) imaging systems; video analytics (the extraction of information from video, for example for surveillance); driver-assist systems for cars; medical electronics; and scientific instrumentation.
- They typically perform sophisticated mathematical operations on the data, including **filtering**, system identification, frequency analysis, machine learning, and feature extraction. These operations are mathematically intensive.

Sample Rate

A signal is a collection of sampled measurements of the physical world, typically taken at a regular rate called the sample rate (how many sample per second).

Examples:



Motion Control Application with sensor: a few Hertz to a few hundred Hertz. Audio signals: 8 kHz (telephone for voice signals) to 44.1 kHz (CD) Ultrasonic application (medical image) and HIFI audio: at much higher rate.

Sample rate 1 Hz \leftrightarrow 1 sample every one second Sample rate 10 Hz \leftrightarrow 10 samples every second (1 sample every 0.1 second)

Graphics Processors or GPUs




- A graphics processing unit (GPU) is a specialized processor designed specially to perform the calculations required in graphics rendering.
- Most used for Gaming (earlier days)
- Common programming language: CUDA
- Modern GPUs support 3D graphics, shading, and digital video. Dominant providers of GPUs today are Intel, NVIDIA and AMD.
- GPUs are typically quite power hungry, and therefore today are not a good match for energy constrained embedded applications.

Parallelism vs Concurrency

- > An embedded program often needs to monitor and react to multiple concurrent sources of stimulus, and simultaneously control multiple output devices that affect the physical world.
- Embedded programs are almost always concurrent programs,
- > Tasks are said to be "concurrent" if they conceptually execute simultaneously
- > Tasks are said to be "parallel" if they physically execute simultaneously on distinct hardware (such as on multicore machine/ multiprocessor/ servers on a server farm).



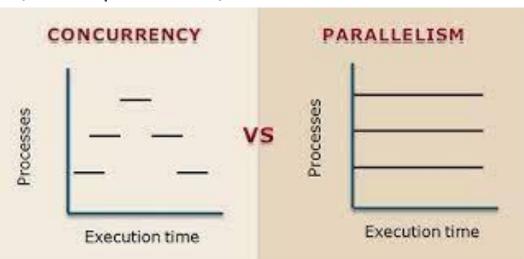

Imperative Language

- Non-concurrent programs specify a sequence of instructions to execute.
- Imperative (procedural) Language expresses a computation as a sequence of operations
- Example: C, C++, Java programming language

```
int total = 0;
int number1 = 5;
int number2 = 10;
int number3 = 15;
total = number1 + number2 + number3;
```

How to write concurrent programs in imperative language? Thread Library


A thread library uses facilities provided not by C, but rather provided by the operating system and/or the hardware.

Multicore Architectures

- A multicore machine is a combination of several processors on a single chip.
- For embedded applications, multicore architectures have a significant potential advantage over single-core architectures because real-time and safety-critical tasks can have a dedicated processor.


This is the reason for the heterogeneous architectures used for cell phones, since the radio and speech processing functions are hard real-time functions with considerable


computational load.

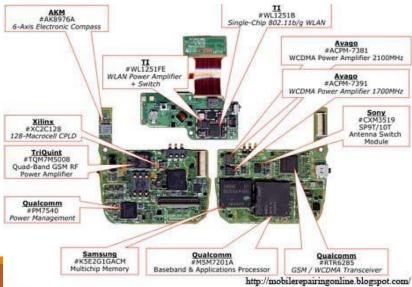

An Example: Multi-Core Systems

Multi-Core Chip

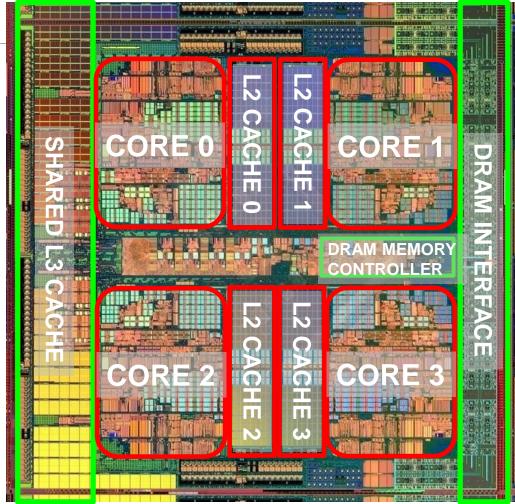

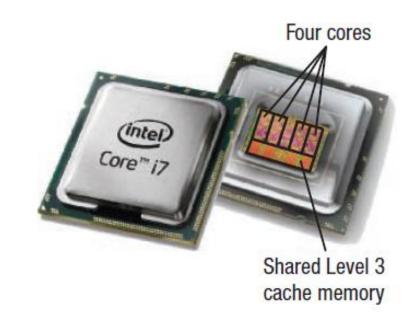

Reference

- Lee, Edward & Seshia, Sanjit. (2011). Introduction to Embedded Systems A Cyber-Physical Systems Approach.
- Lecture Note Slides from EECS 149/249A: Introduction to Embedded Systems (UC Berkeley) by Prof. Prabal Dutta and Sanjit A. Seshia
- https://www.learncomputerscienceonline.com/what-is-machine-cycle/