



# **DeltaPValve® System Design Manual**

The Complete Variable Flow System Approach for HVAC Hydronics

Revision F, October 2015

### **Abstract**

This system design manual illustrates the proper way to apply DeltaPValves and optimize systems with their application. DeltaPValves, introduced to the HVAC market in 1992, are the original pressure-independent, modulating 2-way control valve designed for hydronics applications. Using the approach defined in this manual assures that only the necessary amount (no more – no less) of chilled or heating water is delivered to the cooling and/or heating loads at all times. In turn, this saves energy, increases available plant capacity, minimizes capital expense for additional capacity, and simplifies system design and control.

By: Paul K. Skoglund, P.E. © 2003 - Flow Control Industries, Inc.

Phone: 425-483-1297 Fax: 425-486-5672

Website: www.flowcontrol.com

#### **About the Author:**

Paul Skoglund is the founder and president of Flow Control Industries, Inc. (Woodinville, WA). He is a mechanical engineering graduate of the University of Washington (1968) and a licensed professional engineer in the states of Alaska, Washington, and Oregon. He has over 35 years experience in the HVAC industry and holds over 15 active U.S. patents.

Many thanks to Dave Rogers P.E. of Rogers and Associates Inc. in Sacramento, CA (916-920-5965) for his thoughtful input and support in review of this effort.





# Scope

- 1. This manual is provided as an aid to assist in the design of hydronic systems using DeltaPValves. It will briefly discuss controls, illustrating how proper application of these industrial-quality pressure-independent modulating 2-way control valves saves energy, increases capacity, minimizes capital cost, and simplifies system design and control.
- 2. This manual is not intended to serve as a guide for selection of other specific components such things as where to place isolation valves, how to size an expansion tank, when to use thermal storage, how much flow through a chiller, etc. (refer to manufactures recommendations for those details).
- 3. This manual applies only to the proper piping, coil connections, and control schemes to apply DeltaPValves and capture the resulting benefits. The connections do not vary significantly from conventional design with the application of DeltaPValves. The main differences are 1) balancing valves are no longer required for DeltaPValves in hydronic systems, 2) pressure/temperature ports are standard features on DeltaPValves.
- 4. The DeltaPValve® has the proven track record to back up the design approaches recommended in this manual. **DO NOT USE** this manual as a guide for the application of any other valves.
- 5. A number of articles are listed in the back of this manual. These reference highlight issues and expenses related to low delta T operations. In addition, they will offer additional insights into piping and pumping systems. Below is our list of existing and growing customers.

### **Partial Customer List (for reference)**

John F. Kennedy International Airport, Midway International Airport, Phoenix Sky Harbor International Airport, Portland International Airport, SeaTac International Airport, 1700 Seventh Ave (Nordstrom Building), Amgen Corporate Campus, AT&T, Bank of America, Boeing Corporate Campus, Chase Tower, Microsoft Corporate Campus, 1201 Third Avenue Tower, British Library, Dirksen Federal Building, Elgin Air Force Base, NASA, North Carolina Department of Administrations, Seattle Justice Center or Seattle Center, Travis Air Force Base, Washington Capital Campus, Children's Hospital Los Angeles, Good Samaritan Hospitals, Kaiser Permanente, Mercy Medical Centers, National Institute of Health (NIH), Providence Health & Services Hospitals, University of California Davis Medical Center (UCDMC), Franciscan Health Systems Hospitals, VA Medical Centers / US, Department of Veteran Affairs Medical Centers, Boeing, DuPont, Intel, Jaguar, Mercedes-Benz, Motorola, Seagate Manufacturing, Adelphi Laboratories Center (US Army Research Laboratory), Hewlett Packard, JP Morgan Chase Data Center, Pacific Northwest National Laboratories (PNNL), Duke University, Massachusetts Institute of Technology (MIT), Princeton University, University of California San Diego (UCSD), University of Colorado at Boulder, University of Iowa, University of Missouri at Columbia, University of Southern California (USC), University of Virginia, University of Washington (UW)





| Table of Contents  | Page |
|--|------|
| Abstract   | 1    |
| Scope  | 2    |
| Partial Customer List (for Reference)                                    | 2    |
| What is Good Performance?  | 4    |
| DeltaPValve® Benefits  | 5    |
| DeltaPValve® Features  | 6    |
| Hydronics Distribution Systems Key Considerations and Observations       | 7    |
| Keys to High Delta T   | 10   |
| Pumping Systems  | 11   |
| DeltaPValve® System Design Principles                                    | 13   |
| DeltaPValve® Theory of Operation   | 14   |
| DeltaPValve® Coil Piping Schematics                                      | 16   |
| DeltaPValve® System Pipe Sizing  | 17   |
| DeltaPValve® Selection Procedure   | 19   |
| Articles on Systems, Hardware, and Low Delta T                           | 20   |
| Appendix A - DeltaPValve® System Piping Schematics                       |      |
| Figure A1: Small Heating System – Constant Speed Pump                    | 21   |
| Figure A2: Heating System – Variable Speed Pump                          | 22   |
| Figure A3: Buildings on Large Heating or Cooling Distribution System     | 23   |
| Figure A4: Small Chiller System – Constant Speed Pump                    | 24   |
| Figure A5: Small Chiller System – Variable Speed Pump                    | 25   |
| Figure A6: Large Chiller Plant – Primary/Secondary Pumping               | 26   |
| Figure A7: Large Chiller Plant – Primary Variable Flow                   | 27   |
| Figure A8: Typical Campus Piping Schematic – Decoupled Buildings         | 28   |
| Figure A9: Two-Pipe Changeover System – Excellent for Schools            | 29   |
| Figure A10: To Address Humidity Issues in Decoupled Labs, Hospitals, Etc | 30   |





# What is Good Performance?

It is imperative for any prospective DeltaPValve® customer to quickly recognize the difference between poor and good system performance. The following two charts illustrate chilled water system performance expected with DeltaPValves. The first chart also illustrates the poor performance typically seen in most systems.

# **Chilled Water System Performance**

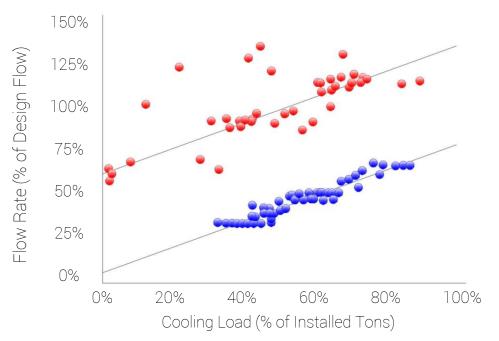


Figure 1: % Cooling Load vs. % Flow Rate

Note that substantially less flow is required when DeltaPValves are installed. In contrast between 70% and 120% flow is used to address 40% of the cooling load in a conventional system.

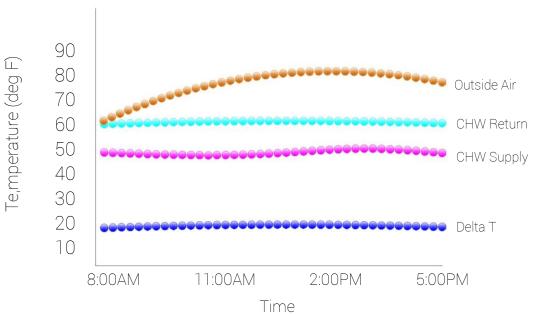


Figure 2: Building Chilled Water Performance Trend

In this system the coils are selected for both 10 to 12 degrees delta T yet with DeltaPValves it delivers between 16 and 19 degrees delta T as the outside air temperature varies between 60 and 80 degrees. This level of performance is very rare in most systems.

PO Box 848 Woodinville, WA 98072 P: 425.483.1297 F: 425.486.5672 www.flowcontrol.com





# **DeltaPValve® Benefits**

### Minimize capital expenses

- Full diversity permits less capacity investment
- Minimum flow per ton reduces pipe size
- Reverse return piping not required
- · Fewer pumps and less installed pump horsepower
- · Variable primary flow easily achieved
- Simplified design and control
- Performance risk minimized at startup

### Minimize maintenance and operating expenses

- Cut power demand and energy consumption
   raising delta T reduces gpm/ton cooling, decreases pump head and flow, eliminates
   return water blending, fully loads chillers, minimizes accessory energy, reduces air-side
   fan energy
- · Eliminate ongoing system balancing
- Minimize excess flow and operation of hydronic equipment
- Permit reduced air flow through air handling equipment

### **Tackle outstanding issues**

- Control valve hunting
- Low delta T
- Excess flow
- Wasted energy
- Limited capacity (flow limited plant, building coils)
- Poor temperature and humidity control

#### Visualize the results

Measure as well as control flow





# DeltaPValve® Features

DeltaPValves are available for hot water, chilled water, and glycol in design flows from 1 to 5500 gpm and sizes between ½" and 16."

### **Standard Features**

Pressure Independent Operation
Automatic Dynamic System Balancing
Adjustable Cv
100:1 Rangeability
+/- 3% Flow Variation at Each Position through Operating Pressure Range
Full Pressure Rating Shutoff
Low Torque Operation
5 Year Warrantee
3 P/T Ports (for system measurement, VFD control, and troubleshooting)
Flow Tag with Measured Flow vs. Position
No Plastic Parts

# **Available Options**

5-70 psi or 10-90 psi Differential Pressure Operating Range 150 or 300 psi Rating Electric, Pneumatic or Manual Control 3-point, Modulating, and Fail Safe Operation Weather Covers P/T Port Extensions Metric Adapters





# **Hydronics Distribution Systems Key Considerations and Observations**

**Steady Flow is Better than Unsteady Flow.** Heat transfer effectiveness for a cooling coil is greatest with steady flow. Wide swings in flow in support of a given cooling or heating load reduce effectiveness and cause the control valves to command more flow. Standard, commercial-quality control valves and controls cannot sustain steady flow, particularly at part load.

Control Valves, Not the Coil, Set the Delta T. Delta T is the temperature difference between supply and return water across a cooling or heating coil. The only point where the coil sets the water delta T is at design conditions – at all other loads the control valve sets the delta T. Most coils are oversized – they are only available in so many rows, fins/inch, etc. The designer usually selects a cooling or heating coil with excess capacity to insure the design load is satisfied and, as a result, the coil has excess capacity.

High Chilled Water Supply Temperature (CHWST) Increases both Pump and Fan Energy. When the CHWST is allowed to rise (either from chiller reset or return water blending) delta T decreases and both pump and fan energy rise to address the cooling load. This increase in energy consumption per ton cooling commonly overwhelms any savings in chiller energy and may lead to temperature/humidity control problems and system capacity issues.

**High Delta T Minimizes Energy Consumption.** For a given heating or cooling load, when flow is excessive,  $\Delta T$  is low. A well functioning system should demonstrate low flow and high  $\Delta T$  at all system loads to minimize the energy consumed in producing and distributing hot and chilled water.

$$GPM = \frac{Tons*24}{\Delta T}$$

**Example 1**: 1000 ton installed capacity, 800 ton cooling load,  $12^{\circ}F \Delta T$  design (with 8 and 16 degree system delta T performance)

$$\frac{800*24}{8} = 2400GPM \qquad \qquad \frac{800*24}{16} = 1200GPM$$

High Delta T Increases Available System Capacity in a Flow Limited Plant. Chillers have a maximum flow limit typically designed to deter evaporator tube erosion. Primary pumps are commonly sized to this flow limit. As shown below, for a fixed maximum evaporator flow, low  $\Delta T$  limits the available capacity (Flow Limited Plant).

$$Tons = \frac{GPM * \Delta T}{24}$$

PO Box 848 Woodinville, WA 98072 P: 425.483.1297 F: 425.486.5672






**Example 2:** 1000 tons installed capacity, 2000 gpm max flow, 12°F  $\Delta$ T design (with 9 and 12 degree system delta T performance)

$$\frac{2000*9}{24} = 750 tons \qquad \frac{2000*12}{24} = 1000 tons$$

**50% Flow = 80% Heat Transfer.** The theoretical performance of a coiling coil is illustrated in Figure 3 below. Note that half the chilled water flow addresses 80% of the cooling load. Hot water coils demonstrate similar trends. This proves to be the actual case when DeltaPValves are used. Since many coils are 10-20% oversized, and loads are typically less than 80%, flow should seldom exceed 50% of design. Delta T should rise, not fall, at loads less than 100% reducing the gpm/ton required for cooling.

### Theoretical Cooling Coil Performance for 12° F Delta T Coil

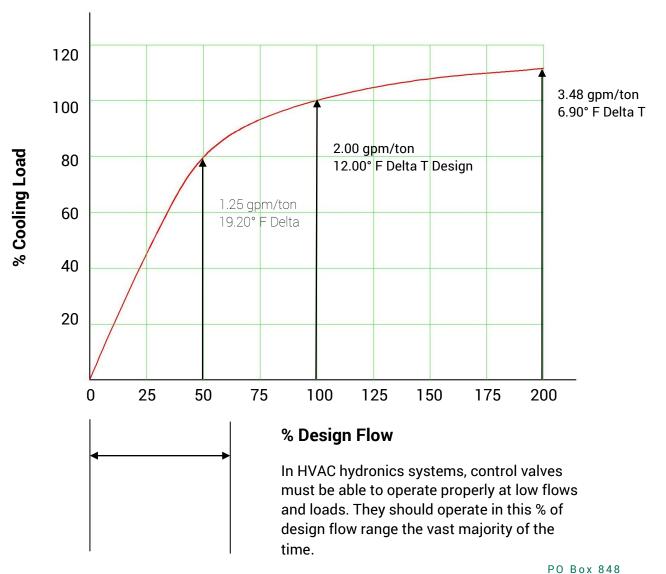





High Delta T Minimizes Flow and Decreases Pump Energy. As the pump affinity laws below illustrate, horsepower is a cube root function of the flow. Bear in mind that pump affinity laws apply to pumps only and not directly to systems.

**Pump Affinity Laws** 

$$\frac{P_2}{P_1} = \left(\frac{Q_2}{Q_1}\right)^2 \qquad \frac{HP_2}{HP_1} = \left(\frac{Q_2}{Q_1}\right)^3$$

where: Q = Flow (qpm), N = Pump Speed (rpm), P = Pressure (psi), HP = Power (horsepower)

**Example 3:** Assume  $Q_1 = 3000$  gpm,  $P_1 = 40$  psi,  $HP_1 = 100$  hp and that flow has been successfully reduced to address a given cooling or heating load.  $Q_2 = 1500$  gpm.

$$P_2 = \left(\frac{Q_2}{Q_1}\right)^2 P_1$$

1/2 flow = 1/4 pump head

$$P_2 = \left(\frac{1500}{3000}\right)^2 * 40 = 10 \, psi$$

head reduced by 30 psi

$$HP_2 = \left(\frac{Q_2}{Q_1}\right)^3 HP_1$$

1/2 flow = 1/8 pump hp

$$HP_2 = \left(\frac{1500}{3000}\right)^3 100 = 12.5hp$$

pump power reduced by 87.5 hp

The example above is for pumps only and is not a systems calculation. As such, it does not take into account the additional reduction in condenser pump energy that results from achieving design delta T or greater. High delta T eliminates the excess operation of additional chillers and their accessories (no flow limit), and excess flow through "dead" chillers or flow through primary/secondary or secondary/tertiary bypass piping.

Page 9 of 31





# Keys to High Delta T with Minimum Energy, Operation, & Capital Investments

Facilities owners should always correct low  $\Delta T$  issues before unnecessarily investing in new capacity. Many systems are modified (more pumps, larger pipes, additional chillers, thermal energy storage, added controls, etc.) when simply applying DeltaPValve® principles will address the issues at a far lower cost and provide added long term energy and operational savings.

High chilled water  $\Delta T$  is the key to outstanding chilled water system performance. While much is written about addressing energy and capacity problems related to low  $\Delta T$ , few recommendations are as simple and effective as the following:

#### DO'S:

- 1) Remove 3-way valves and unnecessary bypasses in all variable flow distribution systems.
- 2) Ensure that heat transfer surfaces are clean replace bad coils and heat exchangers select coils at design conditions for a minimum of 4 fps tube velocity on varying load applications.
- 3) Steady the flow with DeltaPValves to maximize the heat transfer.
- 4) Select modulating electronic (vs. pneumatic) actuators whenever possible for best control.
- 5) Simplify controls.
  - a. Maintain the minimum required pressure (typ. 5 psi) across the hydraulically most remote valve(s).
  - b. Use thermostat (typically room or supply air) to control flow through DeltaPValves in most installations.
- 6) Use VFD's or mechanical speed adjustment with DeltaPValve® systems to minimize pump energy. In small systems, ride the constant speed pump curve with DeltaPValves.
- 7) Remove excess system pumping horsepower use a check valve in a bypass line to bypass building pumps that are not required at part load pump coils for freeze protection only.
- 8) Protect chilled water supply temperature and leaving air temperature setpoints. Heat transfer is more effective with a higher spread between entering water and supply air temperature.
- 9) Close control valves when AHU fans are off unless required for freeze protection.
- 10) Specify and monitor coil return water temperature and corresponding system delta T it should never be less than design delta T under any load condition when the above steps are taken.

#### DONT'S:

- 1) Permit reset of supply air temperatures below design conditions
- 2) Permit reset of supply chilled water temperatures above design leaving water temperature from the plant when more than one chiller is running and temperature or humidity control is an issue. Pump and fan energy consumption per ton cooling will commonly rise in excess of any chiller energy savings. Chiller and coil capacity will decrease.
- 3) Permit significant return water blending with supply.
- 4) Pump coils to try to raise delta T back to the central plant.
- 5) Make a practice of using coils in series to raise delta T this wastes fan energy, costs more initially, and is unnecessary.
- 6) Decouple buildings to raise delta T.

PO Box 848 Woodinville, WA 98072 P: 425.483.1297 F: 425.486.5672 www.flowcontrol.com





# **Pumping Systems**

As shown in Figure 4, in constant speed pumping systems, additional pressure must be absorbed across the control valve at partial flow. At full design flow, the control valve pressure drop is minimal. Conventional commercial-quality, low rangeability 2-way globe valves modulate poorly below 40% of full rated flow and tend to operate as a two-position (on-off) valve at low percentage flows.

Remember that 50% flow = 80% heat transfer; therefore, flow should be below 50% for the majority of heating and cooling load conditions.

### **Constant Speed Pumping System**

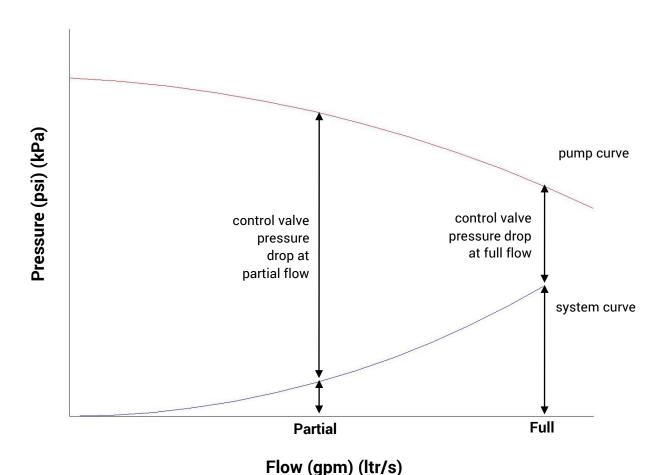


Figure 4: Constant Speed Pumping

DeltaPValves work very well on constant speed pumping systems. Flow is not affected by changing pressure and the valves modulate accurately from 0 to 100% full rated flow.





### **Variable Speed Pumping System**

Variable speed pumping is recommended when loads vary and pumps run below full rated flow most of the time. Large piping systems see wide fluctuations in pressure even when variable speed pumping systems are utilized. Variable speed pumping used in conjunction with DeltaPValves optimize system performance and minimize energy consumption. At full flow, the pressure drop across all valves is the same for constant and variable speed pumping systems. The valves near the pump still see high differential pressure. Good Delta T performance allows the pump to move down the control curve.

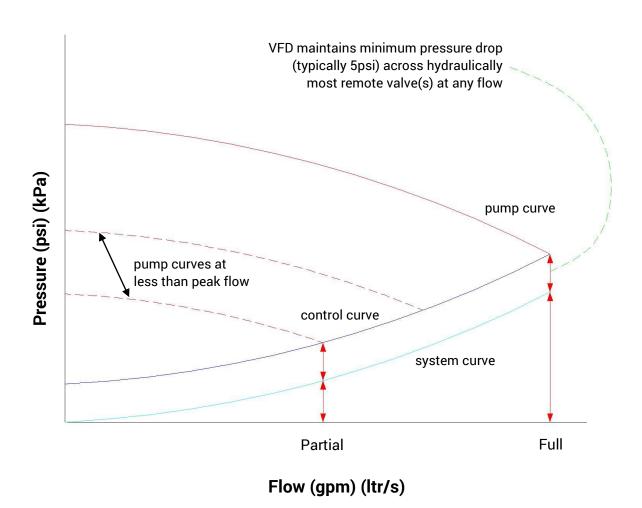


Figure 5: Variable Speed Pumping

Note: Most systems, even with VFD and other sophisticated controls, suffer from low delta T. This is because none of these components is designed to precisely match flow to the cooling load at each individual coil at all load conditions.





# **DeltaPValve® System Design Principles**

### **Downsize and Eliminate Excess Equipment**

- 1. No balancing valves for DeltaPValve® applications.
- 2. No reverse return piping.
- 3. Minimize installed and utilized system pumping horsepower.
- 4. No unnecessarily complicated controls (tuned PID loops, etc.).
- 5. Smaller pipes with high delta T and less circulated water.
- 6. Full installed capacity delivered (no Flow Limited Plant).

#### **Minimize Capital Costs**

In existing systems, don't purchase additional equipment capacity until low delta T issues are addressed and the additional capacity is really required. DeltaPValve® retrofits are far more cost effective than new pumps, chillers, thermal energy storage, sophisticated controls, and bigger piping and lead to long term operational cost savings.

### Minimize Installed and Utilized System Pumping Horsepower

Minimize the use of pumps. They require space, power, maintenance etc. There is no longer a requirement to use a lot of pumps to distribute the pressure gradients of hydronic systems. The DeltaPValve® performance is not affected by high differential pressures across it or varying pressures in that occur dynamically all the time that they operate.

This manual doesn't recommend the actual number of pumps other than to keep them to a minimum. Load profiles need to be considered to determine pump staging and sizing. Each system must be evaluated on it's own merits.

Design the piping system. Our old rules-of-thumb are too expensive. Today's piping installations are in general is larger than required. Later in this manual we give recommended rule of thumb pipe sizing when applying DeltaPValves.

### Maximize Delta T in Design and Operation – Minimize Operating Costs

Continued excess energy costs are incurred with systems operations that are producing low delta T. The life cycle costs for these applications are high with no added benefit for the facility owner. Low system delta T also limits available system capacity (Flow Limited Plant). The following are recommended **system** design delta T's for heating and cooling applications.

- a. Design for 40 to 60°F delta T in heating systems.
- b. Design for 18 to 24°F delta T in cooling systems. Even higher in some applications.
- c. Measure and monitor system and coil delta T's during system operation seek 1.25 times design coil delta T or better for part load performance.





# **DeltaPValve® Theory of Operation**

The DeltaPValve® is a high-performance modulating two-way hydronic control valve. The DeltaPValve® is completely pressure independent meaning that the flow rate remains constant independent of pressure fluctuations in the system.

The principle of operation involves two sections of the valve body; the Cv section and the pressure regulation section (ref Fig. 1). The Cv section controls the flow rate through the valve according to the stem position. The stem may be rotated either manually or with an electric/pneumatic actuator. The Cv section is similar to any two-way modulating valve. The pressure regulation section of the valve has a spring-balanced piston, which acts to maintain a constant differential pressure across the control surfaces in the Cv section, using only the internal fluid pressures in the valve. Thus, the flow rate through the Cv section is unaffected by pressure changes upstream or downstream of the valve.

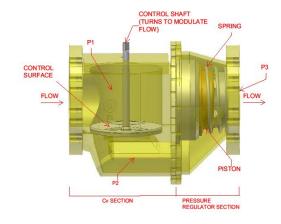


Figure 6: DeltaPValve® Schematic

Flow through a control valve is calculated by the formula shown in Fig 2. Flow rate "Q" is affected by the Cv of the valve, the  $\Delta P$  across the valve, and the specific gravity of the fluid, which remains constant. In the DeltaPValve®, the  $\Delta P$  across the Cv section control surfaces also remains constant, so the DeltaPValve® flow rate is only affected by a change in the Cv (rotation of the valve stem) and not by pressure fluctuations in the system.

When the system pressure changes, the flow through a normal modulating control valve will increase or decrease accordingly. The flow rate will move away from the set point of the controller, further changing the pressures in the system. The controller will attempt to compensate and eventually bring the flow back to the desired rate. This creates flow and pressure fluctuation in the system which often continues indefinitely as the other valves in the system attempt to compensate.

The DeltaPValve® operates in a pressure independent manner through the range of the spring in the differential pressure section. The standard range is 5 - 70 psi (35 - 480 kPa) differential pressure across the entire valve (P1-P3). An optional range of 10 - 90 psid (69 - 621 kPa) is also available at higher flow rates.

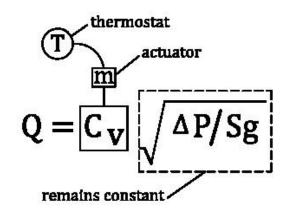


Figure 7





The flow curves for a typical DeltaPValve® are shown in Fig 3. At differential pressures below 5 psi (35 kPa), the DeltaPValve® acts as a normal modulating control valve (i.e. the flow through the valve increases as the differential pressure across the valve increases). Above 5 psi (35 kPa), the flow through the DeltaPValve® does NOT increase with an increase in the differential pressure. The various curves shown in Fig. 3 represent the flow at different settings of the DeltaPValve® (set by rotating the valve stem). The DeltaPValve® eliminates these fluctuations.

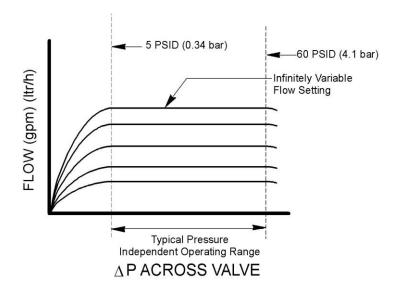


Figure 8: DeltaPValve® Performance


Page 15 of 31

P: 425.483.1297 F: 425.486.5672 www.flowcontrol.com






# **DeltaPValve® Coil Piping Schematics**

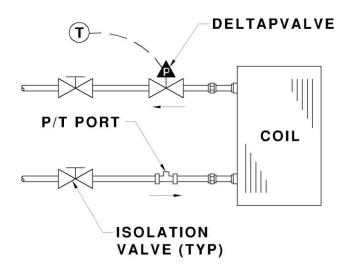

Return water temperature sensing to building management system (BMS) is recommended. Flow is directly related to actuator rotation position and is recorded on the valve tag.

Figure 9: DeltaPValve® with Typical Coil

DeltaPValves guarantee design  $\Delta T$  through coil, provided "Keys to High Delta T" on Page 10 are followed.

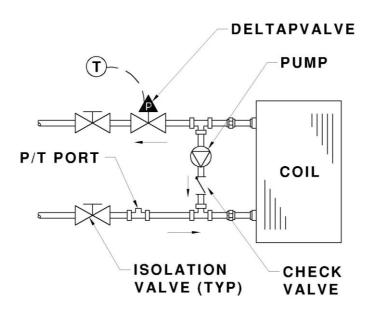

FOR FREEZE PROTECTION ONLY

Figure 10: Pumped Coil Schematic

Pump 25% of coil design flow for freeze protection.





# DeltaPValve® System Pipe Sizing

First cost (piping) and system operating cost (from friction head loss) should be considered together. Using DeltaPValves considerably reduces the flow required to address heating and cooling at part loads; therefore, higher pipe velocities at design conditions may be considered to reduce first cost. Part loads constitute the vast majority of operating hours in most systems. Engineers typically have a 10 to 20% safety factor built into their designs. Therefore the chances of ever requiring design flows are slim. Remember 50% flow = 80% heat transfer.

Tables 1 and 2 show the recommended flow rates, velocity, and pressure drop for copper and schedule 40 iron pipe at the conventional and higher fluid velocities.

Typical current practice is to size smaller pipe at 4.5 ft/100 ft pressure drop and larger pipes to a maximum fluid velocity of 10 ft/sec. This is shown in Table 2. ASHRAE Research Project RP-450, Water Flow Rate Limitations, investigated current industry practice and found that much higher velocities (17 ft/sec) can be used without erosion, corrosion, or noise problems – provided that effective air control is maintained.

Table 1: Pipe Sizing Table (1/2" to 1-1/2" L-Type Copper)

|           |     | Y      | <u> </u> | <i>,</i> |        |          |
|-----------|-----|--------|----------|----------|--------|----------|
| Nominal   | Low |        |          | High     |        |          |
| Pipe Size | GPM | Ft/Sec | Ft/100Ft | GPM      | Ft/Sec | Ft/100Ft |
| 1/2"      | 1.5 | 2.1    | 5.5      | 3        | 4.1    | 20       |
| 3/4"      | 4   | 2.7    | 5.5      | 7        | 4.6    | 16       |
| 1"        | 8   | 3.1    | 5.0      | 15       | 5.8    | 16       |
| 1-1/4"    | 14  | 3.6    | 5.0      | 25       | 6.4    | 15       |
| 1-1/2"    | 22  | 4.0    | 5.0      | 40       | 7.2    | 15       |

Table 2: Pipe Sizing Table (2" to 24" Schedule 40 Iron Pipe)

| Nominal   | <b>3</b> | Low    |          |       | High   |          |
|-----------|----------|--------|----------|-------|--------|----------|
| Pipe Size | GPM      | Ft/Sec | Ft/100Ft | GPM   | Ft/Sec | Ft/100Ft |
| 2"        | 44       | 4      | 3.2      | 80    | 8      | 13.5     |
| 2-1/2"    | 78       | 5      | 4.3      | 125   | 9      | 10.5     |
| 3"        | 135      | 6      | 4.6      | 235   | 10     | 13.0     |
| 4"        | 240      | 6      | 3.6      | 470   | 12     | 12.2     |
| 5"        | 510      | 8      | 4.6      | 900   | 15     | 14.0     |
| 6"        | 810      | 9      | 4.2      | 1500  | 17     | 14.0     |
| 8"        | 1600     | 10     | 3.8      | 2700  | 17     | 10.5     |
| 10"       | 2400     | 10     | 2.8      | 4050  | 17     | 7.5      |
| 12"       | 3500     | 10     | 2.7      | 5700  | 17     | 6.0      |
| 14"       | 4200     | 10     | 2.2      | 7000  | 17     | 5.5      |
| 16"       | 5500     | 10     | 1.8      | 9500  | 17     | 4.5      |
| 18"       | 7100     | 10     | 1.5      | 12500 | 17     | 4.1      |
| 20"       | 9000     | 10     | 1.3      | 14000 | 17     | 3.6      |
| 24"       | 12700    | 10     | 1.1      | 22000 | 17     | 2.8      |

PO Box 848 Woodinville, WA 98072 P: 425.483.1297

F: 425.486.5672 www.flowcontrol.com





## **Pipe-Sizing Notes**

- 1. These piping charts are guidelines only. For example, if you have a campus system with long runs of pipe connecting the buildings you would:
  - a. Size the piping inside the building smaller (on the high side of Tables 1 and 2, page 16).
  - b. On large campuses, size the long piping runs connecting the buildings larger (on the low side of Table 2, page 16) to reduce the pressure drop in the mains so you won't have to use additional pumps in the buildings – this also retains capacity in the mains to serve additional connected loads in the future.
- 2. On existing large systems it is a good practice to create a system model using a piping program. This topic is far larger than represented here. Keep in mind that these programs model systems relatively well when they are performing as designed but seldom address excess flow and low delta T at part load.

While there are many piping programs available, the program we have used successfully is Pipe-Flo® (Engineered Software, Olympia, WA, 1-800-786-8545).

Page 18 of 31 F: 425.486.5672 www.flowcontrol.com





# **DeltaPValve® Selection Procedure**

#### **Valve Selection**

- 1. Determine the max. flow rate (gpm) required (usually design from coil schedule).
- 2. Determine the maximum differential pressure that the valve will work against (normally the design head of the pump serving that circuit).

The standard DeltaPValve operates in the range from 5 to 70 psi differential using a 5 psi spring. Higher spring ranges (10 and 15 pounds) are available that will handle up to a 150 psi differential. If the valve is close to the pump and will always have a minimum of 10 psi across it to drive it, you can sometimes get by with a smaller valve (because higher spring rates allow higher flow for the same size valve) to serve the load.

- 3. Determine the maximum static pressure the valve will encounter to establish the required body pressure rating (150 or 300 psi).
- 4. Go to the catalog to determine the size and model number of the valve.
- 5. Determine coil tag description (i.e. AHU-1, FCU-3) for the valve tag.

#### **Actuator Selection**

- 1. Determine what type of actuator you require. All valves take 0 to 90 degree rotating electronic actuators.
- 2. Using the DeltaPValve® catalog, size the actuator for the maximum differential pressure (#2 above) plus a 50% safety margin.
- 3. Determine if you want fail safe operation. Standard modulating (proportional) actuators are recommended for all chilled water applications. We recommend that electronic proportional actuators on chilled water valves fail in place as opposed to fail open or fail closed.
- 4. Determine the action (normally open or normally close) for all actuators and the fail position (open or closed) for pneumatic and electronic fail safe actuators.
- 5. Choose the control signal for the actuators. Typically 2-10 VDC and 4-20 mA.

### **Accessory Selection**

1. Determine if weather covers, P/T plug extensions, metric adaptors, or any other special features are desired.





## **Articles and Publications**

The following articles are intended to provide additional information related to the topics presented in this manual. A number of these articles illustrate the issues with substandard delta T performance. Some of these articles, although deficient in providing a simple and comprehensive approach to address specific low delta T issues, are provided to illustrate the contrast of the DeltaPValve approach.

- 1. Rishel, James B., "Is Your Chilled Water System Ready For Adaptive Control," Engineered Systems, February 2003.
- 2. Skoglund, Paul K., "Control Your Chilled Water Save Energy, Increase Capacity," IDEA Conference Paper, Austin, TX, February 13, 2003.
- 3. Kreutzmann, Jim, "Campus Cooling: Retrofitting Systems," HPAC Engineering, July 2002.
- 4. Taylor, Steven T., "Primary-Only vs. Primary-Secondary Variable Flow Systems," ASHRAE Journal, February 2002.
- 5. Rogers, David A. and Lewis, Michael S., "A New Cogeneration Plant The University of California Davis Medical Center Sacramento A Case Study," IDEA Conference Paper presented in Denver, CO February 28, 2002.
- 6. Mazurkiewicz, Greg, "Manufacturer Improves Absenteeism, IAQ with HVAC Retrofit," ACHR News, published January 7, 2002.
- 7. Lunneberg, Tom, "Varying Chilled Water Flow with Constant Success," E-Source Article ER-01-11, July 2001.
- 8. Fiorino, Donald P., "Achieving High Chilled-Water Delta T's," ASHRAE Journal, November 1999, vol. 41, no. 11.
- 9. Brown, Brian, "Klamath Falls Geothermal District Heating Systems Evaluation," <a href="http://geoheat.oit.edu/bulletin/bull17-3/art22.htm">http://geoheat.oit.edu/bulletin/bull17-3/art22.htm</a> downloaded January 21, 2003.
- 10. Skoglund, Paul K., "Hydronic Systems Benefit from Pressure Independent Flow Control Valves," District Energy, First Quarter 1995.
- 11. Rishel, James B., Durkin, Thomas H., Kincaid, Benny L. (2006). HVAC Pump Handbook Second Edition. New York, NY: McGraw-Hill.
- 12. IDEA (2008). District Cooling Best Practice Guide. Westborough, MA: International District Energy Association.





### Appendix A: DeltaPValve System Piping Schematics

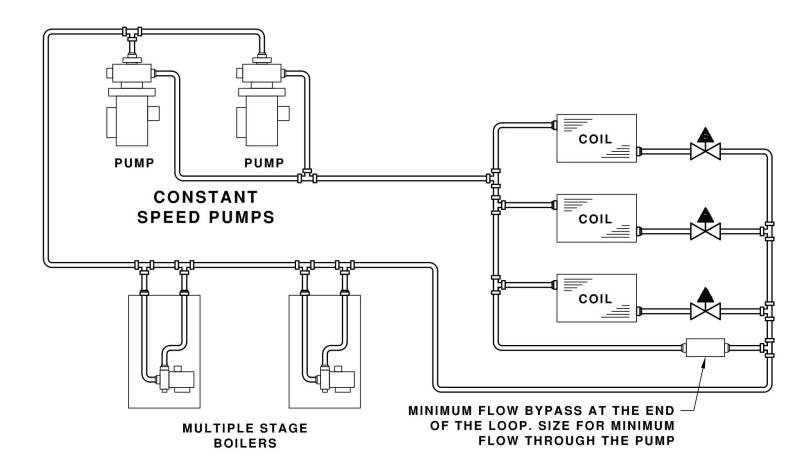


Figure A1: Small Heating System - Constant Speed Pump

<u>SEQUENCE</u>: Upon a requirement for heat, boiler circulating pump(s) are started to assure full flow and stages of heat are enabled to maintain loop temperature setpoint. The constant flow pump is operated and the system head follows pump curve as load varies. HW loop setpoint could be reset with outside air temperature.

#### Notes:

- (1) Typically, the reset temperature can be kept higher than with the conventional control valves due to shutoff capabilities and 100:1 DeltaPValve rangeability.
- (2) If long runs exist, you may wish to install a bypass line at the end of the loop to assure hot water available at all times.





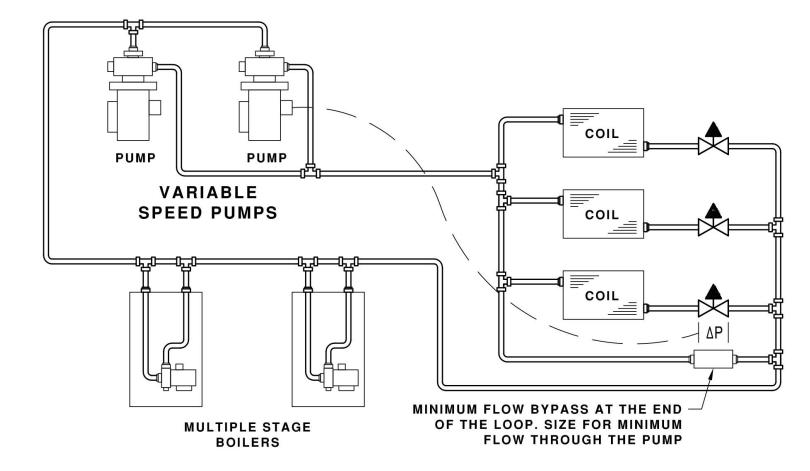


Figure A2: Heating System - Variable Speed Pump

<u>SEQUENCE</u>: Upon a requirement for heat, a HW source provides an adequate source of hot water. The variable flow pump is operated to maintain minimum pressure (typ. 5 psi) across the hydraulically most remote valve. HW source could be reset with outside air temperature.

#### Notes:

- (1) Typically, the reset temperature can be kept higher than with conventional control valves due to shutoff capabilities and 100:1 DeltaPValve rangeability.
- (2) If long runs exist, you may wish to install a bypass line at the end of the loop to assure hot water available at all times.

Page 22 of 31

F: 425.483.1297 F: 425.486.5672 www.flowcontrol.com





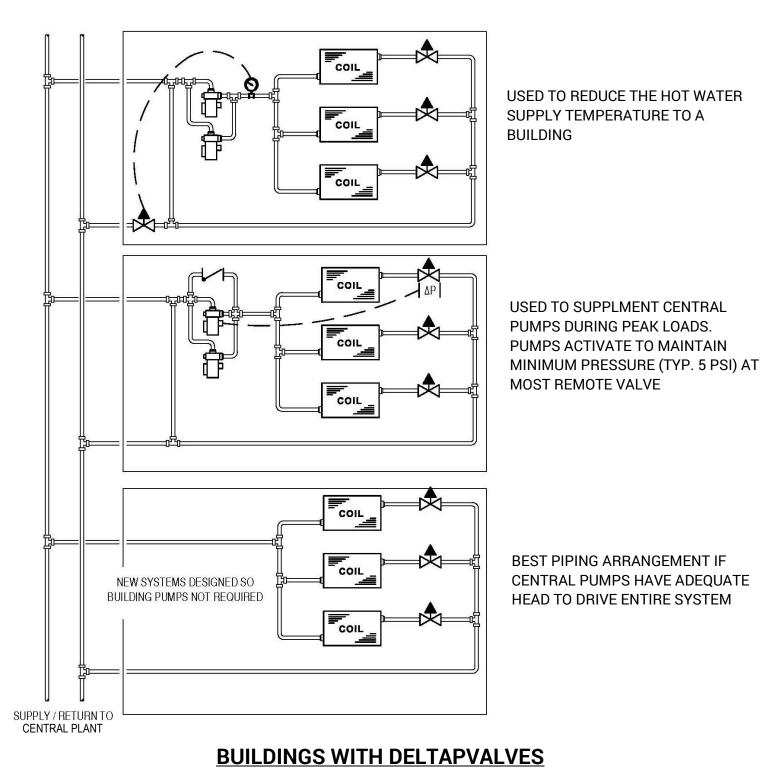


Figure A3: Buildings on Large Heating or Cooling Distribution System

PO Box 848 Woodinville, WA 98072 P: 425.483.1297 F: 425.486.5672





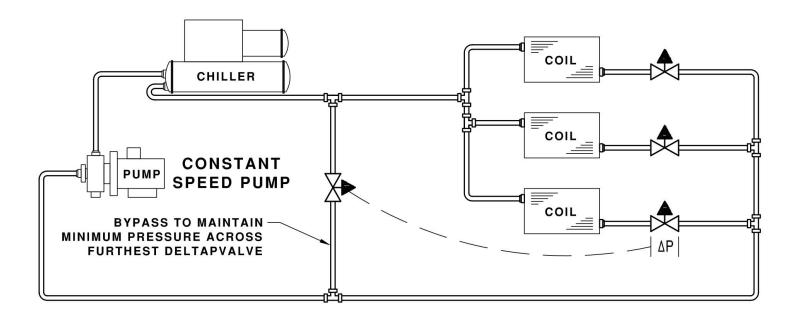


Figure A4: Small Chiller System - Constant Speed Pump

<u>SEQUENCE</u>: Upon a requirement for cooling, the pump is started. The bypass valve should be open when chiller starts and should close to maintain minimum pressure (typ. 5 psi) across the hydraulically most remote point.

F: 425.486.5672 www.flowcontrol.com





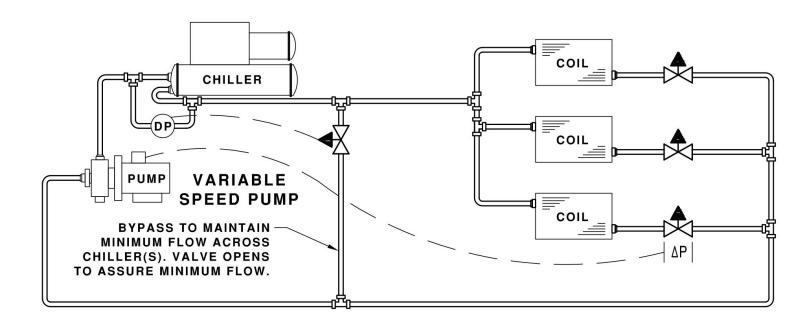


Figure A5: Small Chiller System - Variable Speed Pump

<u>SEQUENCE</u>: Upon a requirement for cooling, the pump is started. The variable speed drive ramps up to maintain minimum pressure (typ. 5 psi) across the hydraulically most remote valve(s). The bypass valve opens (if required) to maintain minimum flow through the chiller(s).

Note: Bypass valve is sized to maintain the minimum flow as determined by the chiller manufacturer.

F: 425.486.5672 www.flowcontrol.com





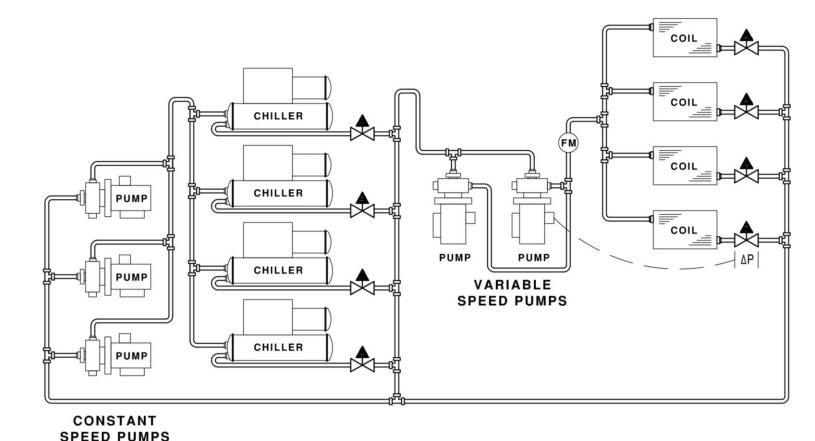


Figure A6: Large Chiller Plant - Primary/Secondary Pumping

<u>SEQUENCE</u>: Upon a requirement for cooling, open the DeltaPValve on the lead chiller, start one of the primary pumps and then start the lead chiller. The valve will set the maximum design flow through the chiller. The valves on the chillers can be modulated to control flow through the chillers when they are running at part load. Sequence the chillers and primary pumps by measuring the flow to the system. Secondary variable speed pumps maintain minimum pressure (typ. 5 psi) across hydraulically most remote valve(s).

Note: Multiple delta P sensors may be required on large systems to establish the hydraulically most remote point.

F: 425.483.1297 F: 425.486.5672 www.flowcontrol.com





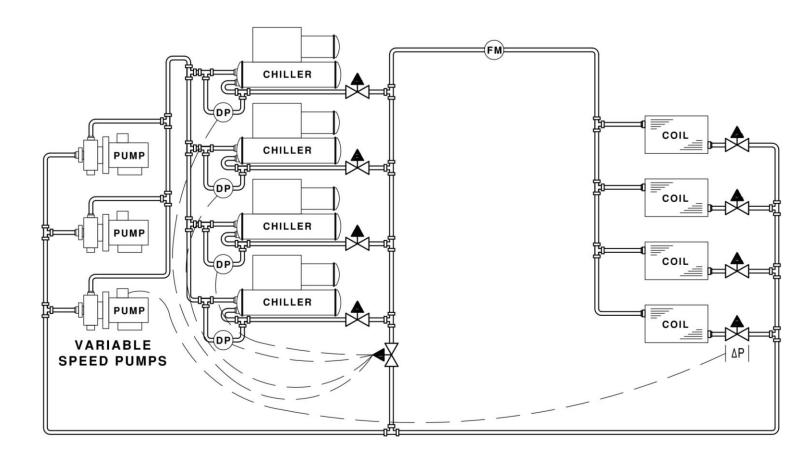


Figure A7: Large Chiller Plant - Primary Variable Flow

<u>SEQUENCE</u>: Upon a requirement for cooling, open the DeltaPValve on the lead chiller to wide open position and start the lead pump. Measure flow to system with flow meter. Start and stop pumps and chillers as required to maintain flow to meet load with minimum pressure (typ. 5 psi) across the hydraulically most remote valve(s). At any load, the bypass valve is used to maintain minimum flow through any of the chillers.

Note: A high quality, accurate flow meter is essential to system performance and operation.





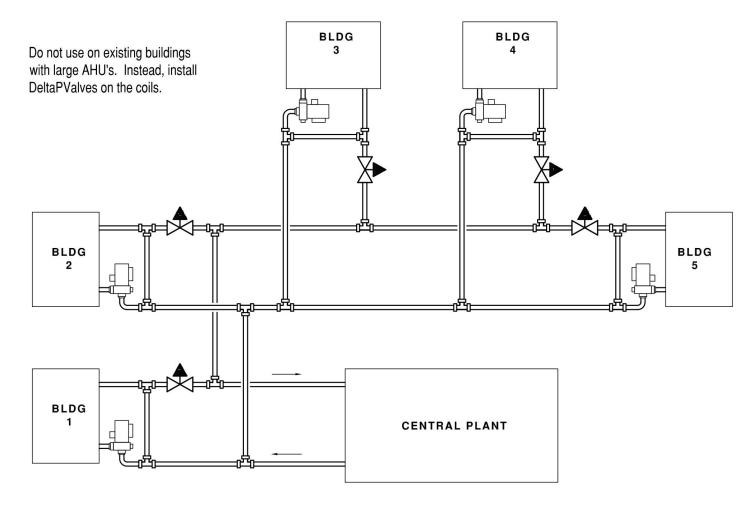


Figure A8: Typical Campus Piping Schematic – Decoupled Buildings – With Many Small FCUs

For the highest delta T, the ideal application of DeltaPValves is on the terminal units in the buildings.

This is a good tool to fix low delta T's in buildings in existing systems that have scores of small terminal units (eg. Dormitories with FCU's). New buildings should install DeltaPValves on the terminal units. NEW BUILDINGS SHOULD NOT BE DECOUPLED.






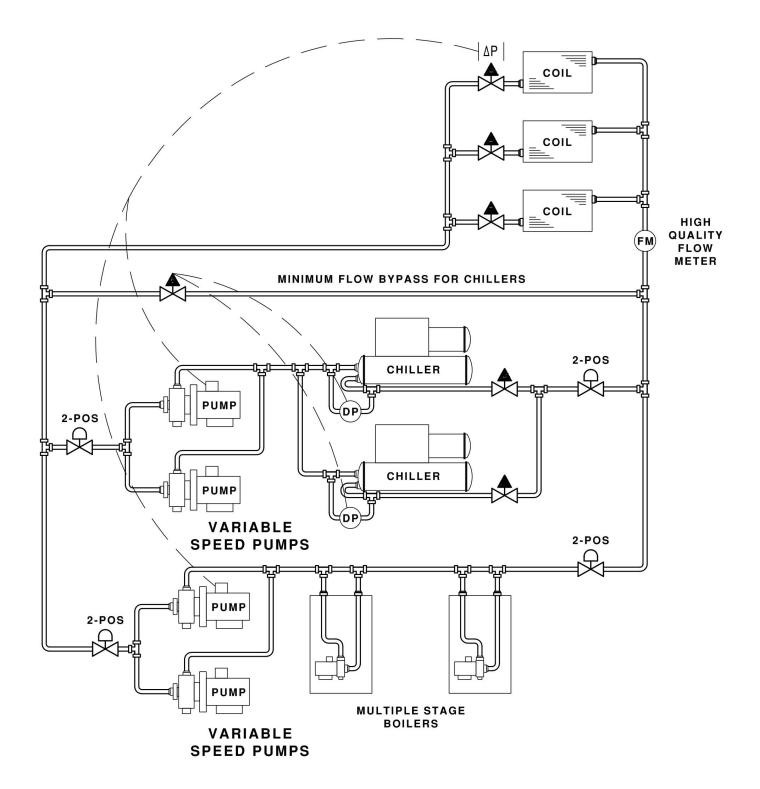


Figure A9: Two-Pipe Changeover System - Excellent System for Schools

PO Box 848 Woodinville, WA 98072 P: 425.483.1297 F: 425.486.5672






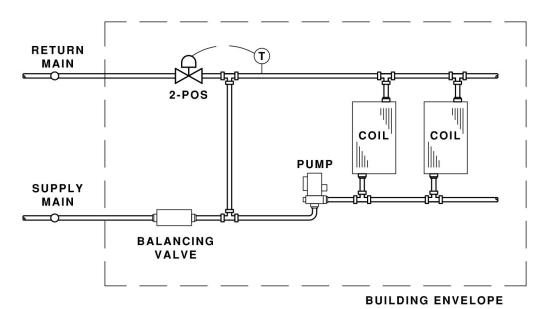

#### **EXISTING CONFIGURATION:**

Excess flow and low delta T due to in-line pump and chilled water return blending with supply. This method wastes pump energy and creates humidity problems in the building.

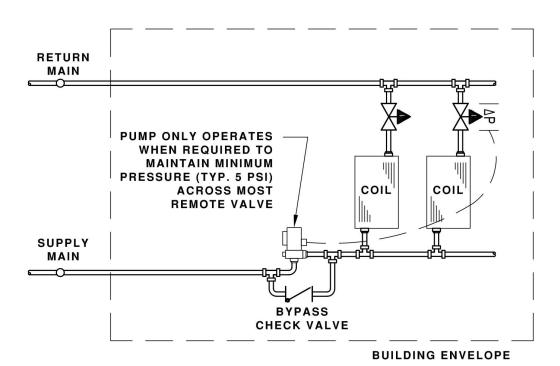

#### **NEW CONFIGURATION:**

Minimum flow and design delta T are guaranteed higher at all load conditions (when chilled water is supplied at design or below and supply air temperature is set at design or above). Pump energy is dramatically reduced due to bypass and high delta T. DeltaPValve flow is controlled by thermostat. Humidity issues are solved.

Figure A10: To Address Humidity Issues in Decoupled Laboratory, Hospital, and Other Building

PO Box 848

Woodinville, WA 98072

P: 425.483.1297

F: 425.486.5672







P.O. Box 848 18715 141st Ave NE Woodinville, Washington 98072

P: 866-454-1288 | F: 425-486-5672

PO Box 848 Woodinville, WA 98072

P: 425.483.1297 F: 425.486.5672