MSP430 BSL Programmer FCD-PRG01

Highlights

- Supports all MSP430 device families supported by TI example "Bootstrap Loader Hardware" in SLAU319¹
- Standard 6 pin, 0.1" header interface
- USB bus powered
- 3.3V target supply output (up to 400mA)

- Cross platform driver support for Windows, Linux, and Mac OS
- Full Python MSP430 Tools support
- Full TinyOS support
- Fully Open-Source hardware design²

Product Description

The FCD-PRG01 is a USB bootstrap loader³ (BSL) programmer for the Texas Instruments MSP430 microcontroller. For designs where low cost or small form factor prohibit the integration of custom programming logic or a large JTAG header, the FCD-PRG01 enables in-system programming by including a single 6 pin header in the target device design.



Originally designed to work with the cross platform TinyOS toolchain, the FCD-PRG01 provides an open source, cross platform alternative to platform dependent development tools for the MSP430 microcontroller.



The FCD-PRG01 integrates a USB-to-serial converter and on board regulated power supply into a small USB dongle, allowing programming and test capability over a single interface. It exposes a standard 6 pin, 0.1" header which can be used to interface to the target board via a device specific cable harness. This modular approach provides designers with the flexibility to select the optimal physical programming interface for the unique design constraints of each target platform.

Ordering Information

FCD-PRG01 MSP430 BSL Programmer FCD-CBL01 Programming interface cable (6x1, 0.1" ↔ 3x2, 2mm)

FCD-PRG01 does not include inverting buffers as shown in the TI reference hardware. Requires PC software to support specific MSP430 device families. Not all MSP430 devices have been tested for hardware compatibility. See page 5 for device family support.

Design files available at http://www.flyingcampdesign.com/msp430-bsl-programmer.html

^{3 &}quot;MSP430 Programming Via the Bootstrap Loader (SLAU319)" Application Note (http://www.ti.com/lit/pdf/SLAU319)

Programming Interface

The FCD-PRG01 provides a standard 6×1 , 0.1" programming header for powering and communicating with the target device.

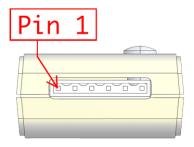


Figure 1: 6x1, 0.1" Header

Pinout

FCD-PRG01 Signal	FCD-PRG01 Pin	MSP430 devices with TEST pin	MSP430 devices without TEST pin
DTR	1	TEST	TCK
RXD	2	UART_TX	UART_TX
TXD	3	UART_RX	UART_RX
VCC	4	VDD	VDD
RTS	5	RST	RST
GND	6	GND	GND

Electrical Characteristics

VCC Target Supply Output (Pin 4)

Parameter	Minimum	Typical	Maximum	Units	Conditions
Output Voltage	-	3.3	-	V	
Output Current	_	-	0.4	Α	
Short Circuit Current	-	450	-	mA	Vout = 0 V
Dropout Voltage	-	75	200	mV	lout = 400 mA
Accuracy	-	1	-	%	

UART and I/O (Pins 1,2,3,5)

Parameter	Minimum	Typical	Maximum	Units	Conditions
DC Input Voltage	-0.5	-	3.8	V	
Output Drive Strength	-	12	-	mΑ	
Output Voltage High	2.2	2.8	3.2	V	Isource = 3 mA
Output Voltage Low	0.3	0.4	0.6	V	Isink = 8 mA
Input Switching Threshold	1.0	1.2	1.5	V	
Input Switching Hysteresis	20	25	30	mV	

Programming Cables

FCD-CBL01

A programming cable harness which mates with standard 3x2, 2mm PCB headers is available from Flying Camp Design for use with the FCD-PRG01. Pinout for this cable is available in schematic form at FCD-CBL01.



Figure 2: FLYING CAMP DESIGN FCD-CBL01

Flying Camp Design recommends using the following through hole and surface mount headers for use with the FCD-CBL01:



Figure 3: Recommended headers for use with the FCD-CBL01 cable

A Cadsoft Eagle CAD library which contains land pattern footprints for these headers is available for download on the FCD-PRG01 product page: http://www.flyingcampdesign.com/msp430-bsl-programmer.html

Custom Programming Cables

For those customers wishing to design their own custom programming cables, Flying Camp Design recommends the following mating connector for use with the 6 pin BSL programming interface:



Figure 4: Molex 50-57-9006

Installation

The FCD-PRG01 uses a USB \leftrightarrow Serial interface chip (FTDI Chip FT232R) and corresponding operating system driver to provide a Virtual COM Port (VCP) interface layer to the BSL programming software. The BSL programming software depends upon this VCP interface layer to control the communication pins on the programmer.

1. **Before plugging in the FCD-PRG01 to your computer**, install the appropriate driver for your operating system by following the corresponding installation guide available online at: http://ftdichip.com/Documents/InstallGuides.htm

A full listing of the latest VCP drivers for all supported operating systems is available online at: http://ftdichip.com/Drivers/VCP.htm

Note: A Linux driver for the FT232R is included in most newer kernels (> 2.4.20 or greater). However, on some kernels an older F232BM driver may be used which is compatible with the FT232R.

- 2. After installing the appropriate driver for your operating system, insert the FCD-PRG01 into a free USB port on your computer.
- 3. If installation was successful, the FCD-PRG01 should appear as a VCP on your computer:

Windows COM[X]

Linux /dev/ttyUSB[X]
Mac OS X /dev/tty.usbserial-[...]

MSP430 Device Family Support

Any MSP430 device family that is supported by the example hardware described in SLAU319 section 4.1 "Hardware Description" should also be compatible with the FCD-PRG01. The following table provides information about MSP430 device families that are not compatible with the FCD-PRG01 hardware.

Device Family	Summary
MSP430F543xA	FCD-PRG01 is incompatible with MSP430F543xA family devices. There is a bug in the
	MSP430F543xA family which requires that the second low pulse on TEST must be shorter
	than 15us, which the VCP drivers for the FCD-PRG01 are unable to achieve. Please reference
	SYS10 in http://www.ti.com/litv/pdf/slaz290b for more details.

Software Support

The Virtual COM Port (VCP) drivers provide a serial port interface to the BSL control software. This generic software interface enables the use of third party BSL tools, as well as provides a simple abstraction to those users wishing to write their own BSL tools. The mapping between the VCP signal and the programmer pins is shown in the table on page 2. The following examples show how to use the FCD-PRG01 with the BSL tools available from TI and a couple popular MSP430 toolchains.

TinyOS

The TinyOS toolchain includes built in support for the FCD-PRG01. The following example can be used to compile a TinyOS application and install it onto an MSP430 based TinyOS "platform":

```
make [platform] install miniprog
```

More information about the TinyOS toolchain is available online at: TinyOS

SLAU319

The TI support files for SLAU319 include a command line demo utility for communication with 1/2/4xx BSLs. This utility is called "BSLDEMO2.exe" and is designed to work with the example hardware described in SLAU319 section 4.1 "Hardware Description". The FCD-PRG01 mimics this hardware by providing a VCP interface to the BSL control software. However, the FCD-PRG01 does not include inverting buffers on RST and TCK as shown in the TI reference hardware. Furthermore, the FCD-CBL01 swaps the RST and TCK pins (with respect to the virtual COM port RTS and DTR pins). Therefore, the BSLDEMO2.exe utility source code provided by TI must be patched and recompiled to work correctly with the FCD-PRG01 + FCD-CBL01 combination. A patched version of BSLDEMO2.exe can be downloaded from http://www.flyingcampdesign.com/msp430-bsl-programmer.html while the source can be obtained from https://github.com/FlyingCampDesign. The following example programs the target with the TI-TXT firmware file "firmware.txt":

```
BSLDEMO2.exe -s2 -cCOMx firmware.txt
```

Python MSP430 Tools

The Python MSP430 Tools project includes built in support for the FCD-PRG01. The Python MSP430 Tools can be installed from http://pypi.python.org/pypi/python-msp430-tools/ via "pip" by running:

```
pip install pyserial python-msp430-tools
```

The following example clears all flash memory, programs the target with the Intel HEX firmware file "firmware.hex", and then resets the target:

```
msp430-bsl-fcdprog.py -p /dev/path-to-msp430-bsl-programmer -r -e path/to/firmware.hex
```

MSP430 BSL Utility (no longer under development)

The Flying Camp Design MSP430 BSL Utility is a Windows GUI utility which was designed to be fully compatible with the FCD-PRG01. More information about using the FCD-PRG01 with this software is available on the MSP430 BSL Utility product page:

http://www.flyingcampdesign.com/msp430-bsl-utility.html

⁴ http://www.ti.com/lit/zip/slau319

Questions?	
Contact support@flyingcampdesign.com or visit http://www.flyingcampdesign.com/support.html	

Revision History

Revision	Summary
С	- Add MSP430 Device Support page
	- Add Revision History page
	- Add SLAU319 software section
	- Update links to Python MSP430 Tools
	- Add note saying MSP430 BSL Utility is no longer under active development

Legal

Flying Camp Design reserves all rights to this document and the information contained herein. Product names, trademarks, or logos described or displayed herein may be subject to Flying Camp Design or third-party intellectual property rights. Permission to use, copy, and distribute this document, without fee, and without written agreement, is hereby granted, provided that the document is not modified in any manner.

In no event shall Flying Camp Design be liable to any party for direct, indirect, special, incidental, or consequential damages arising out of the use of this information or the hardware and software that this document describes, even if Flying Camp Design has been advised of the possibility of such damage.

Flying Camp Design specifically disclaims any warranties, including, but not limited to, the implied warranties of mechantability and fitness for a particular purpose. The information contained herein is provided on an "as is" basis, and Flying Camp Design has no obligation to provide maintenance, support, updates, enhancements, or modifications. This document may be revised by Flying Camp Design at any time.

Copyright © 2012, Flying Camp Design. All Rights Reserved.