


Introduction to FRC Control System

Team 4919 LeoDroids



2017 FRC® Control System Layout

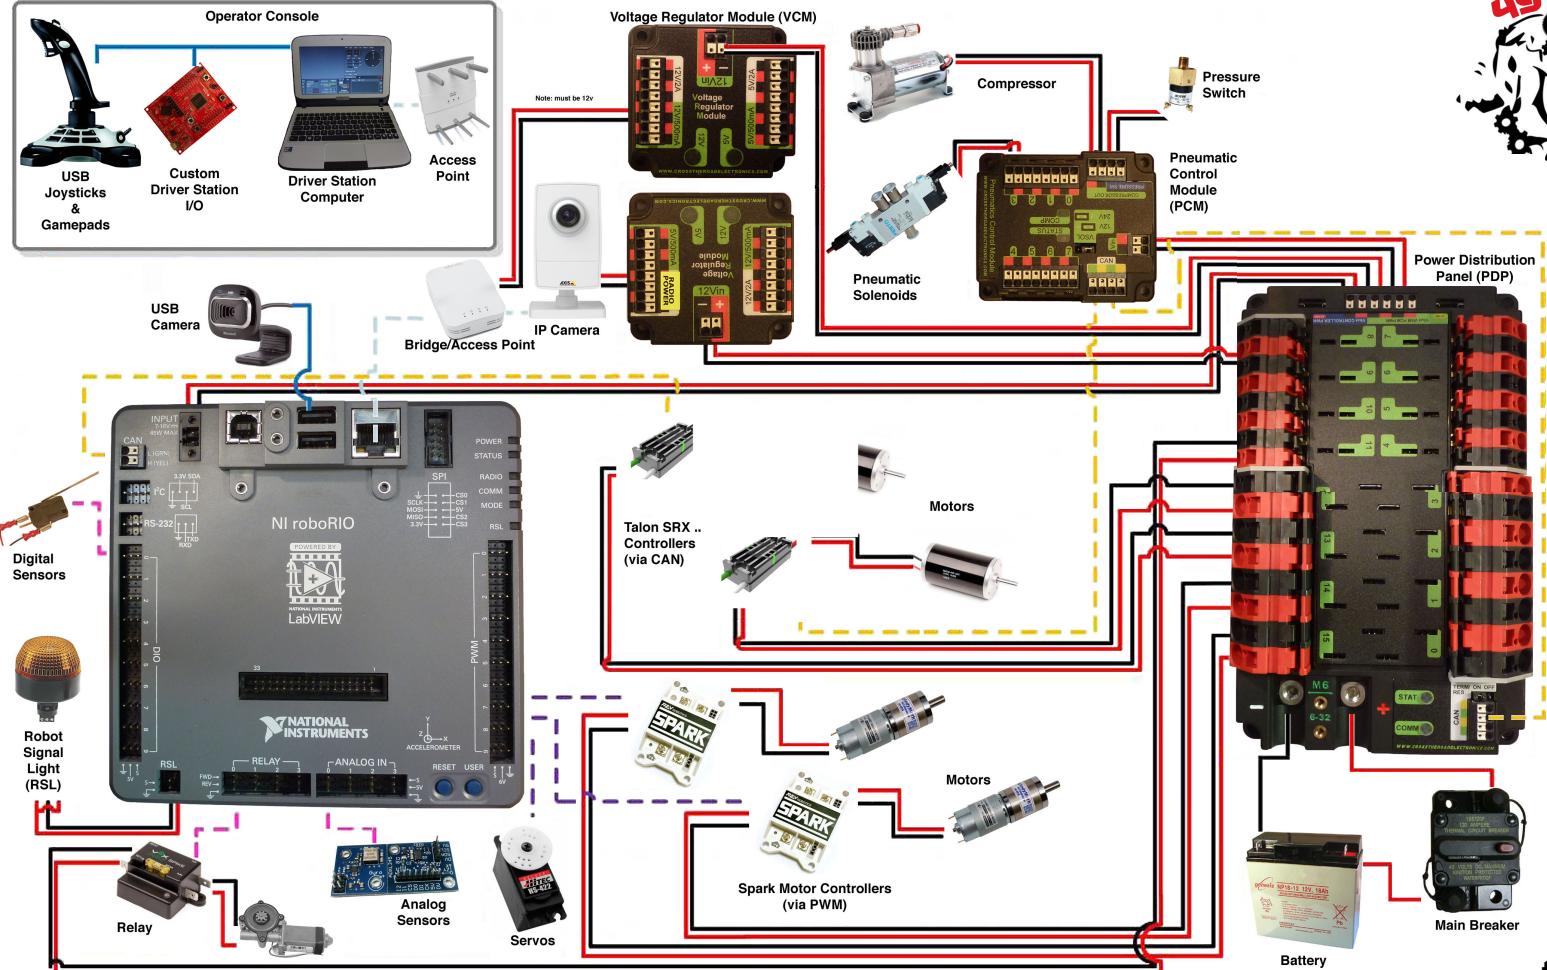


Cabling Legend	
	+12v
	Ground
	CAN
	Ethernet
	PWM
	Signal
	USB

National Instruments roboRIO



- Main robot controller used for FRC.
- Dual-core ARM Cortex-A9 processor
- Integrated I/O controller
 - connections to robot for sensing and control: Ethernet, USB, CAN, SPI, I2C, serial, PWM, servo, digital I/O, and analog I/O channels
- Connect to the dedicated 12V port on the Power Distribution Panel for power
- Wired communication via USB or Ethernet

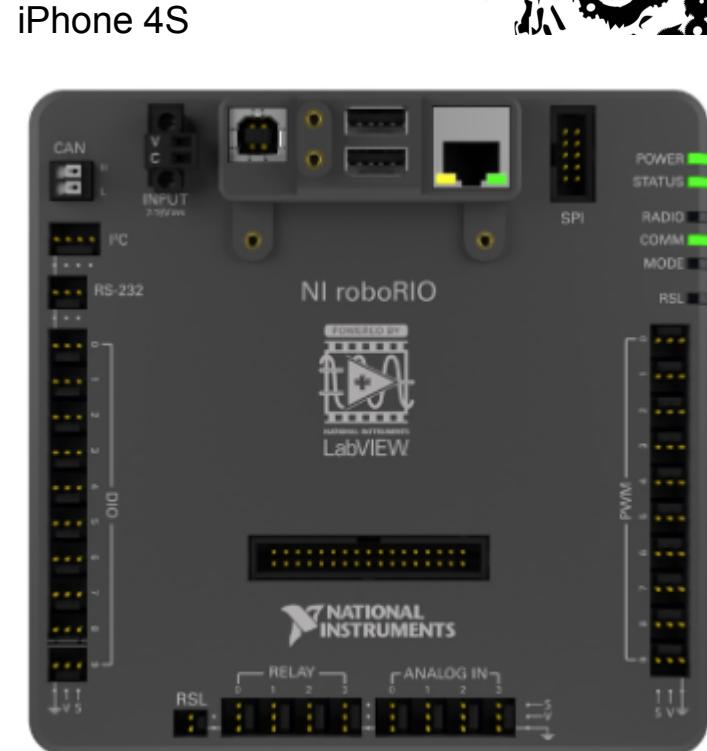

Power Distribution Panel (PDP)




- PDP distributes power from 12VDC battery to robot components through auto-resetting circuit breakers & fused connections.
 - 8 pairs rated for 40A continuous current
 - 8 pairs rated for 30A continuous current.
- 12V connectors for the roboRIO, Voltage Regulator Module and Pneumatics Control Module.
- Can measure current to each device:
Calculate torque developed by motors







Pneumatics Control Module (PCM)

- PCM has inputs and outputs for pressure switch, compressor, and 12V or 24V pneumatic solenoid valves
- Automatic compressor control when robot is enabled when a solenoid has been created in the code.
- Controlled by the roboRIO using CAN interface
- Collects diagnostic information such as solenoid states, pressure switch state, and compressor state.
 - Includes diagnostic LED's for both CAN and the individual solenoid channels.

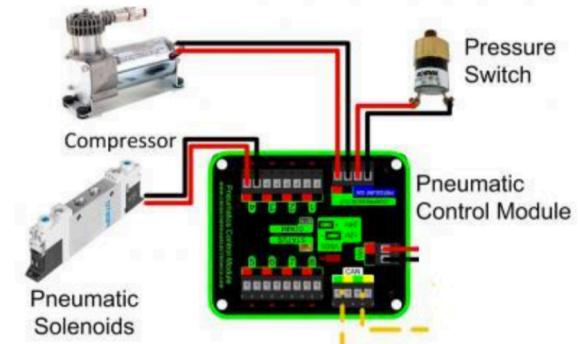



Pneumatics

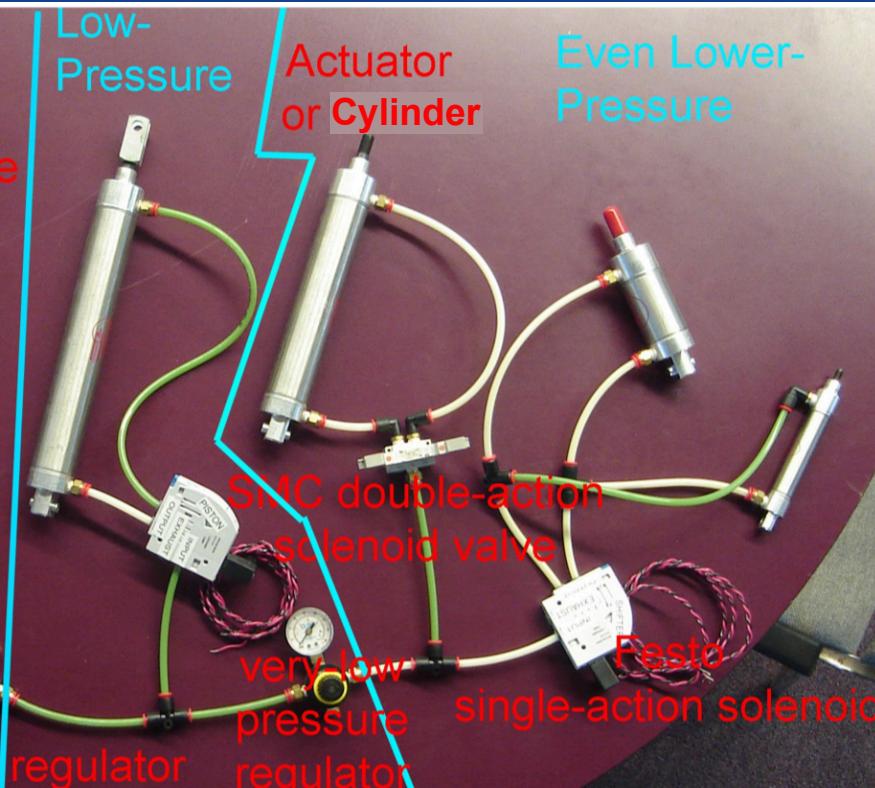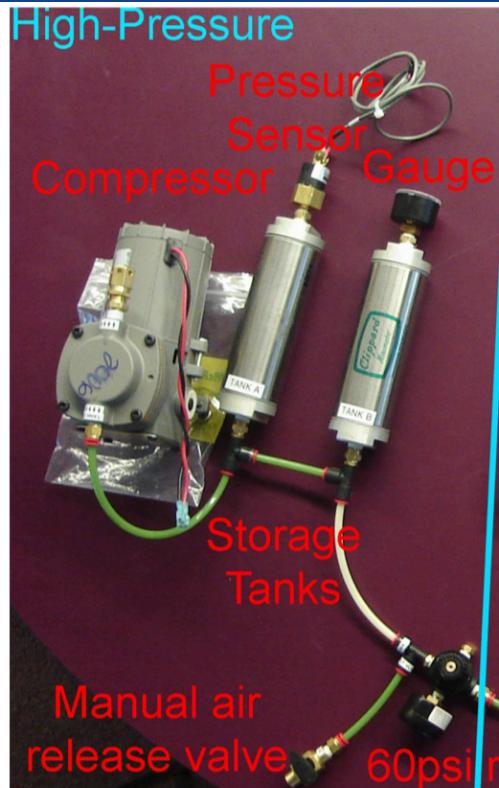

Parts:

- Compressor
- Tanks
- Release Valve
- Regulator
- Solenoid
- Cylinder/Actuator

Pressures

- Stored <120PSI,
- Working < 60 PSI


Compared to motors:

Lighter, simpler, rugged, but not as fine control

Voltage Regulator Module



- VRM an independent module powered by 12 VDC wired to a dedicated connector on the PDP.
- Multiple regulated 12V and 5V outputs
 - regulated power for the robot radio, custom circuits, and IP vision cameras.
- Connector pairs have combined rating of label indication (5V/500mA total for both pairs not each pair).
- The 12V/2A limit is a peak rating, should not be loaded with more than 1.5A continuous current draw.

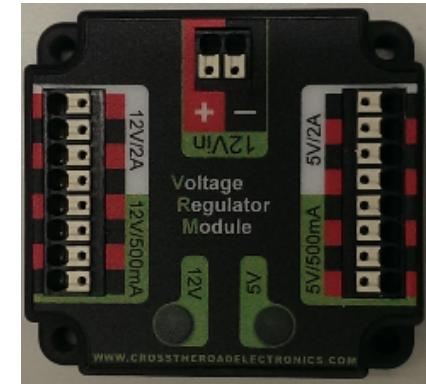


Motor Controllers



- PWM variable speed motor controllers:
 - SPARK Motor Controller from REV Robotics
 - Talon Motor Controller from Cross the Road Electronics
 - Victor 888 from VEX Robotics
 - Victor SP, from Cross The Road Electronics/VEX Robotics
- Jaguar is CAN-enabled "smart motor controller" or PWM controlled from VEX Robotics



Talon

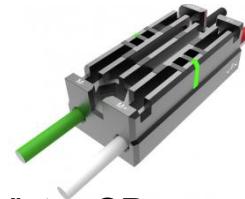

Victor SP



Spark



Jaguar



Victor 888



Spike H-Bridge Relay

- Controls power to motors or other custom robot electronics.
- On/Off control in both the forward and reverse directions.
- Independently controlled outputs: can provide power to up to 2 custom electronic circuits
- Connections:
 - relay output of the roboRIO and
 - power from PDP
 - power to device being controlled





Microsoft Lifecam HD3000

- The Microsoft Lifecam HD3000
 - USB webcam
 - plugged directly into the roboRIO
- Capable of capturing up to 1280x720 video at 30 FPS
- Video Stream can be displayed on Driver Station dashboard
- Can be used for Computer Vision (CV)





OpenMesh Radio


- OpenMesh OM5P-AN or OM5P-AC radio
 - provides wireless communication on the robot to Driver Station
- Can be configured as:
 - Access Point for “home” use during build season
 - Bridge for use on the field
- Powered by 12V outputs on the VRM
- Connected to roboRIO over Ethernet
 - Can use POE injector for secure power connection



120A Circuit Breaker



- Turn OFF Power to Robot Before Work
- Announce When Turning on Robot
- Serves as main robot power switch
- Also as protection for downstream robot wiring and components.
- Wired between the positive terminals of the robot battery and Power Distribution boards.

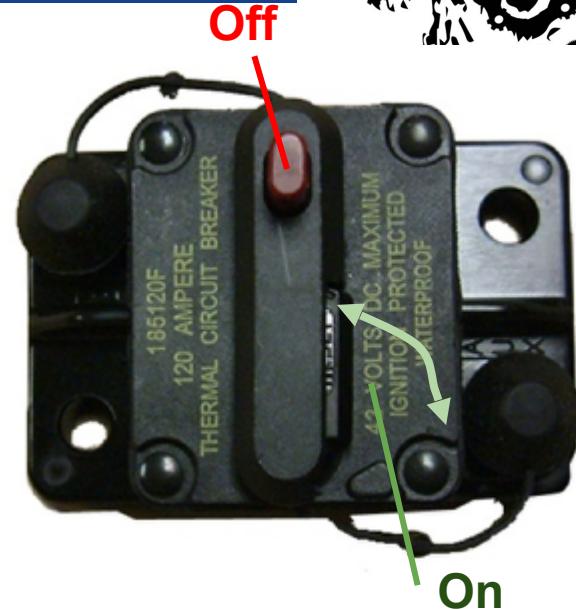



Snap Action Circuit Breakers


- The Snap Action circuit breakers used with PDP to limit current to branch circuits
- MX5-A40 40A MAXI circuit breaker used with larger channels on PDP to power loads which draw current up to 40A continuous
- VB3 series used with smaller channels on PDP to power loads which draw current of 30A or less continuous



Robot Battery



- The power supply for an FRC robot is a single 12V 18Ah battery
- Sealed lead acid batteries capable of meeting the **high current** demands
- **Never** lift the battery by the cables
- Neutralize Leaking Battery by pouring the sodium bicarbonate on all wetted surfaces. Notify mentor.

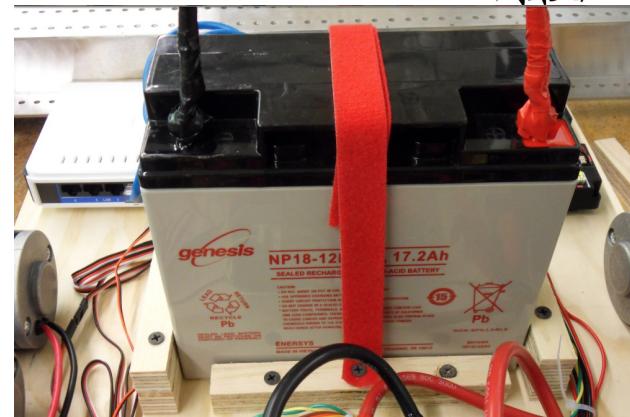

Never cause a direct short circuit.
This may cause high heat to develop in the battery terminal/part/tool area and the battery could explode

Motors



CIM, Mini-CIM, Bag

CIM motors are used in drive train. Rules only allow 6 CIMS per bot.

Mini CIM can be used in place of CIM but its less powerful



775, 9015, 550

Useful for shooters and such, where they can run at high rpm



Throttle

Not that fast or powerful. The location of the electrical inputs makes them hard to locate or use.



Window, Seat, Snowblower

Has torque at lower speed



Servo


For moving camera

For more Motor info see VEX Robotics DC Motor Information: <http://motors.vex.com/introduction>





Drive Trains

Tank/West Coast

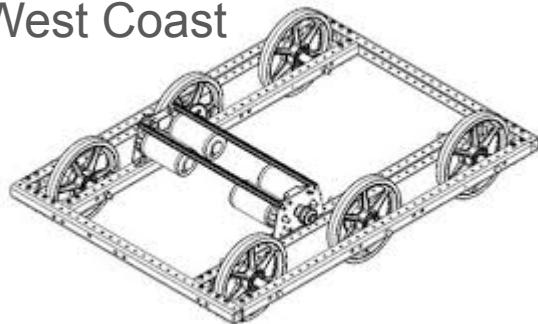

Mecanum

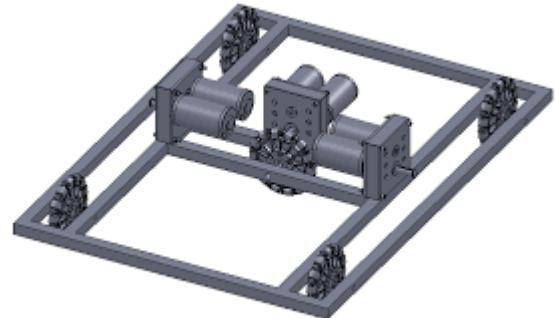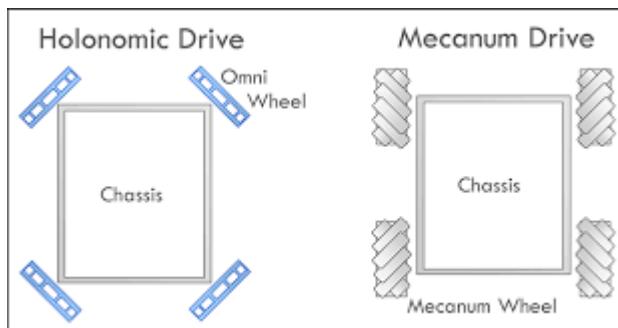

Others

Practice: The best drivetrain is no match for an unskilled driver



Robot Sensors

How do I do _____?


Selecting the right sensor for the job



Robot Sensors Overview

Sensors categories:

- Wheel/motor position measurement -
 - Gear-tooth counters, encoders, analog encoders, and potentiometers
- Robot orientation -
 - Compass, gyro, accelerometer, ultrasonic rangefinder
- Generic -
 - Pulse output Counters, analog, I2C, SPI, Serial, Digital input

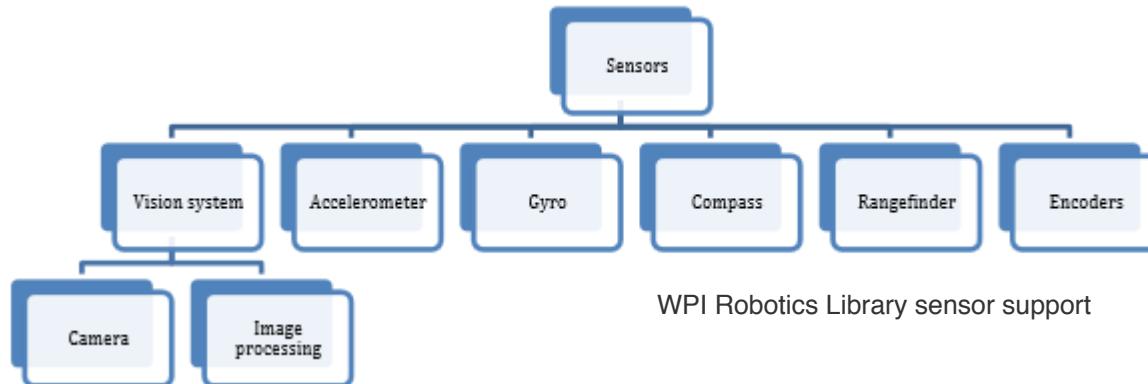



Detecting 1 or 2 positions of a mechanism

Limit Switches

- Common solution for this scenario.
- To defining limits of mechanism, set switches in position where they can't be missed and won't get damaged
- Simple to implement, fairly cheap, and can be used in a large variety of situations.
- Have "normally opened" or "normally closed" outputs.
- Wire the switch between a digital input signal connection and ground.





Detecting position at many different points

Examples:

- how high up is your elevator,
- how high up an arm is from its starting position,
- what angle your shooter head is pointed at,
- how far is the robot from the field element

Sensors to use:

- **Gyros** - Measuring rotation and controlling robot driving direction
- **Counters and Encoders** - Measuring rotation, counting pulses and more
- **Ultrasonic Sensors** - Measuring robot distance to a surface
- **Infrared Distance Sensors** - Measuring robot distance to a surface
- **Camera** - Computer Vision and operator view
- **Potentiometers** - Measuring joint angle or linear motion
- **Accelerometers** - Measuring acceleration and tilt



Driving Straight

For robot to drive itself straight in autonomous, you have a couple sensors that will work to get the job done.

(Gyroscope) **Gyros** - sensor pointing in a direction, telling when you deviate from that direction, and how far.

- Correct for one motor being slightly slower than the other,
- or an accurate measurement of how far we have turned in autonomous
- measures off an initial point, if robot is put in wrong place, it will not know that

Encoders - sensor for measuring the rotation of a spinning shaft

- on drive motors, measures how far the wheels have turned
- if one measures further than the other, you can correct for it
- not as effective when turning because wheels can slip



How far have I gone?

In autonomous program, you will most likely need to drive, but it wont know how far it's gone or how far it needs to go without sensors.

Encoders - measures number of rotations a motor has gone since last reset

- calculate rotations to distance for the different gear and pulley ratios
- gets a little less accurate the further away from your wheels

Distance Sensors (Ultrasonic, Infrared)

- not very common due hard to set up the robot on the field
- can tell how far you have gone if you have a point to measure from.
- usually not possible to tell how far you have gone after a turn, or how far you have gone if its too far away from a static object.





Cameras and Vision

Why use vision? Vision is a very powerful tool:

- it can give you an idea of how far you are from something,
- how many items you have in front of you,
- where you are pointing, and
- how fast you are moving, all from one sensor.

All this from knowing the viewing angle of the camera, resolution, and size of a known object

To use vision, you need to have a few things:

1. A good quality camera,
2. a way to process the visual information into meaningful data,
3. and someone willing to learn advanced visual identification & libraries.

More advanced vision may require a separate processor and a better camera than KOP



How fast is that wheel spinning?

Why? With shooters, you may want to know how fast a wheel is spinning to know when to shoot.

Counters and **Encoders** - measure the number of rotations

When measured over a given period of time you get the speed of the wheel



Other Sensors and Problems

Sometimes available sensors are not good enough:

- encoders not able to read at the speeds you need
- ultrasonic sensors too inaccurate after a certain distance

These are all challenges to solve, and is the reason you are really here. This is when some of the best and most creative solutions to problems are created.