

Getting Started

It is recommended to first read **Tutorial.pdf** in the unzipped folder you created.

Get Support and Offer Input

Freenove provides free and responsive product and technical support, including but not limited to:

- Product quality issues
- Product use and build issues
- Questions regarding the technology employed in our products for learning and education
- Your input and opinions are always welcome
- We also encourage your ideas and suggestions for new products and product improvements

For any of the above, you may send us an email to:

support@freenove.com

Safety and Precautions

Please follow the following safety precautions when using or storing this product:

- Keep this product out of the reach of children under 6 years old.
- This product should be **used only when there is adult supervision present** as young children lack necessary judgment regarding safety and the consequences of product misuse.
- This product contains small parts and parts, which are sharp. This product contains electrically conductive parts. **Use caution with electrically conductive parts near or around power supplies, batteries and powered (live) circuits.**
- When the product is turned ON, activated or tested, some parts will move or rotate. **To avoid injuries to hands and fingers keep them away from any moving parts!**
- It is possible that an improperly connected or shorted circuit may cause overheating. **Should this happen, immediately disconnect the power supply or remove the batteries and do not touch anything until it cools down!** When everything is safe and cool, review the product tutorial to identify the cause.
- Only operate the product in accordance with the instructions and guidelines of this tutorial, otherwise parts may be damaged or you could be injured.
- Store the product in a cool dry place and avoid exposing the product to direct sunlight.
- After use, always turn the power OFF and remove or unplug the batteries before storing.

About Freenove

Freenove provides open source electronic products and services worldwide.

Freenove is committed to assist customers in their education of robotics, programming and electronic circuits so that they may transform their creative ideas into prototypes and new and innovative products. To this end, our services include but are not limited to:

- Educational and Entertaining Project Kits for Robots, Smart Cars and Drones
- Educational Kits to Learn Robotic Software Systems for Arduino, Raspberry Pi and micro:bit
- Electronic Component Assortments, Electronic Modules and Specialized Tools
- **Product Development and Customization Services**

You can find more about Freenove and get our latest news and updates through our website:

<http://www.freenove.com>

Copyright

All the files, materials and instructional guides provided are released under [Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License](#). A copy of this license can be found in the folder containing the Tutorial and software files associated with this product.



This means you can use these resources in your own derived works, in part or completely but **NOT for the intent or purpose of commercial use.**

Freenove brand and logo are copyright of Freenove Creative Technology Co., Ltd. and cannot be used without written permission.



Raspberry Pi® is a trademark of Raspberry Pi Foundation (<https://www.raspberrypi.org/>).

Contents

Contents	I
Chapter 0 Processing	1
Install Processing Software	1
First Use	3
Chapter 1 LED	5
Project 1.1 Blink.....	5
Project 1.2 MouseLED.....	11
Chapter 2 LED Bar Graph	13
Project 2.1 FollowLight	13
Chapter 3 PWM	17
Project 3.1 BreathingLED.....	17
Chapter 4 RGBLED	23
Project 4.1 Multicolored LED	23
Chapter 5 Buzzer.....	30
Project 5.1 ActiveBuzzer	30
Chapter 6 ADC Module	34
Project 6.1 Voltmeter	34
Chapter 7 ADC & LED	43
Project 7.1 SoftLight.....	43
Project 7.2 NightLamp.....	49
Chapter 8 Thermistor	52
Project 8.1 Thermometer	52
Chapter 9 I2C-LCD1602	58
Project 9.1 LCD.....	58
App 1 Oscilloscope.....	64
App 1.1 Oscilloscope	64
App 2 Snake Game.....	68
App 2.1 Snake Game.....	68
App 3 Tetris Game.....	73
App 3.1 Tetris Game.....	73
What's Next?	78

Chapter 0 Processing

Processing is a software used to write programs that can run on computers. Processing software is free and open source running on the Mac, Windows, and GNU/Linux platforms, which is the same as Arduino software. In fact, the development of Arduino software is based on Processing software, and they still have similar interface.


Programs written with Processing are also called sketches, and Java is the default language. Java language and C++ language have many similarities, so readers who have learned our basic tutorial are able to understand and write simple Processing sketches quickly.

This tutorial will introduce how to install and use processing software on Raspberry Pi through some electronic circuit projects. Chapters and sequence in this tutorial are basically the same as those in the C and python language tutorial. Our elaborate electronic circuits and interactive project with Processing are attached at the end, including virtual instruments, games (2D and 3D versions), etc.

Install Processing Software

Processing software / Processing Development Environment (PDE) makes it easy to write Processing programs. First install Processing software: type the following command in the terminal to start installation:


```
curl https://processing.org/download/install-arm.sh | sudo sh
```

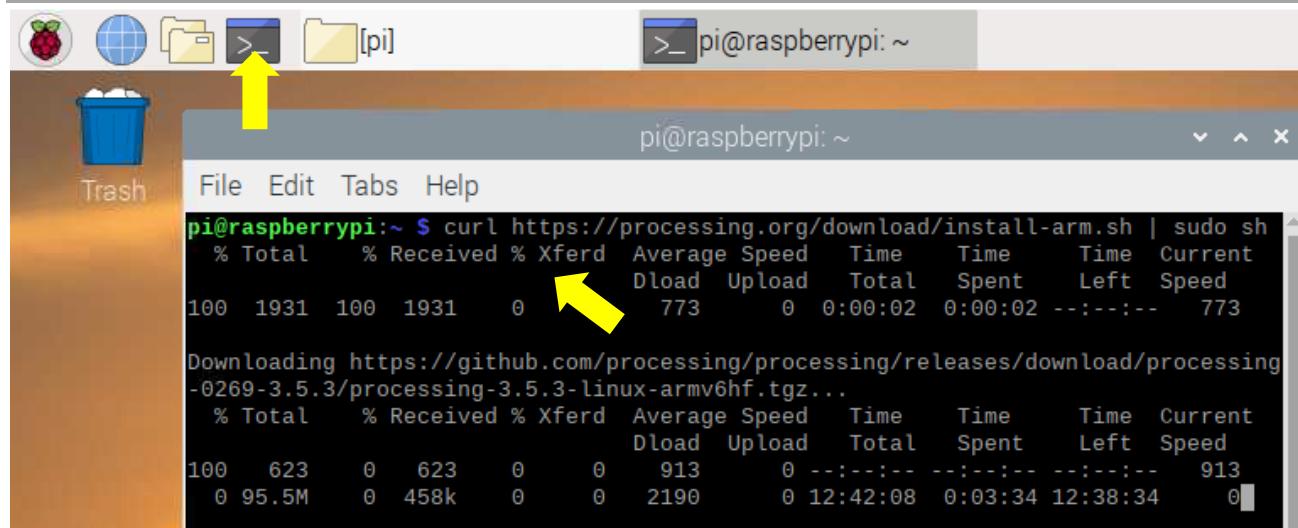


Ensure that your RPi always has the Internet to access during the installation process.

You can also download and install the software by visiting the official website <https://processing.org/>.

After the installation is completed, you can enter the "processing" to open processing software in any directory of the terminal, or open the software processing in the start menu of the system, as shown below:

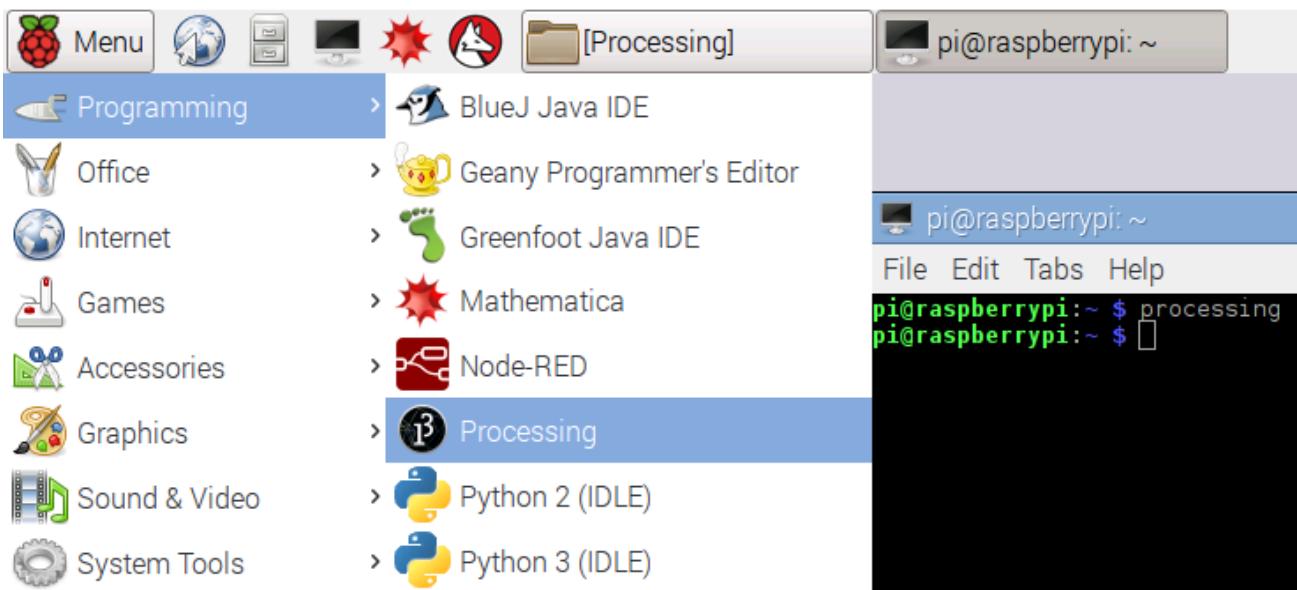

Interface of processing software is shown below:

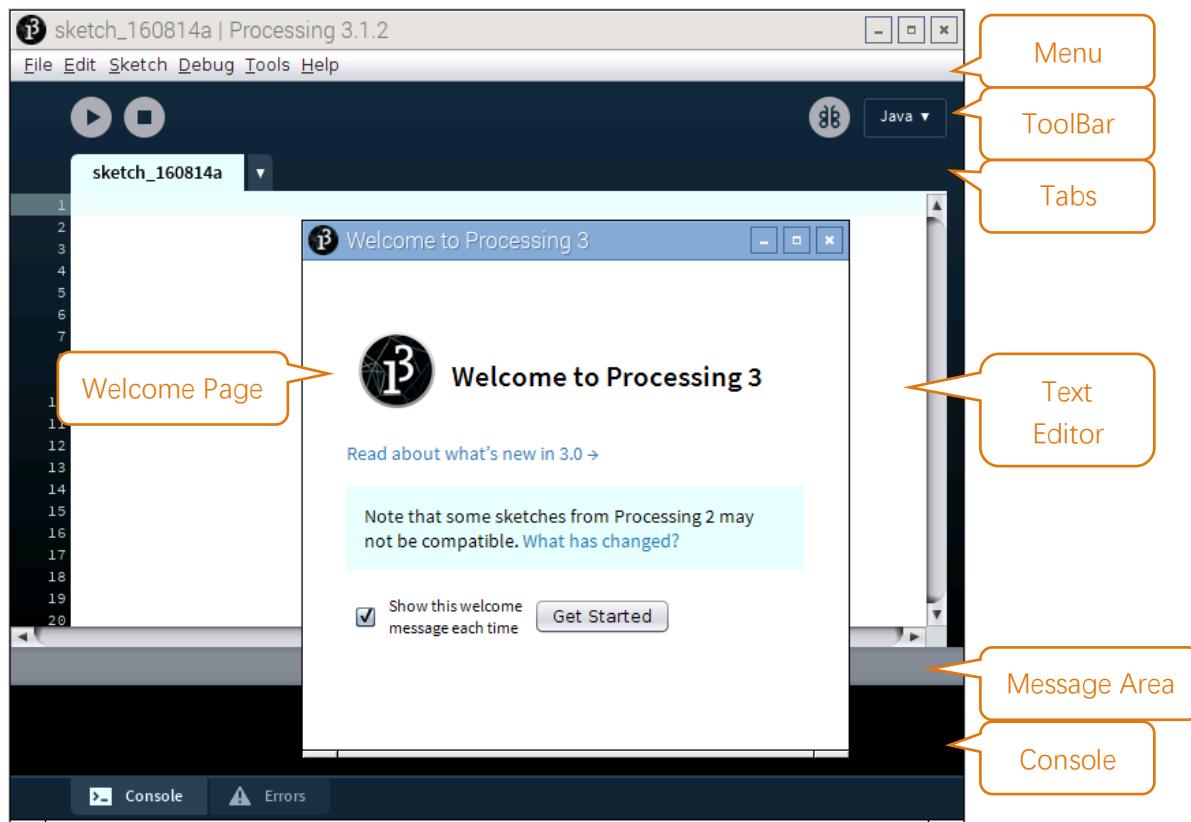


You're now running the Processing Development Environment (or PDE). There's not much to it; the large area is the Text Editor, and there's a row of buttons across the top; this is the toolbar. Below the editor is the Message Area, and below that is the Console. The Message Area is used for one line messages, and the Console is used for more technical details.

First Use


In the editor, type the following:

```
1 ellipse(50, 50, 80, 80);
```

This line of code means "draw an ellipse, with the center 50 pixels over from the left and 50 pixels down from the top, with a width and height of 80 pixels." Click the Run button (the triangle button in the Toolbar).

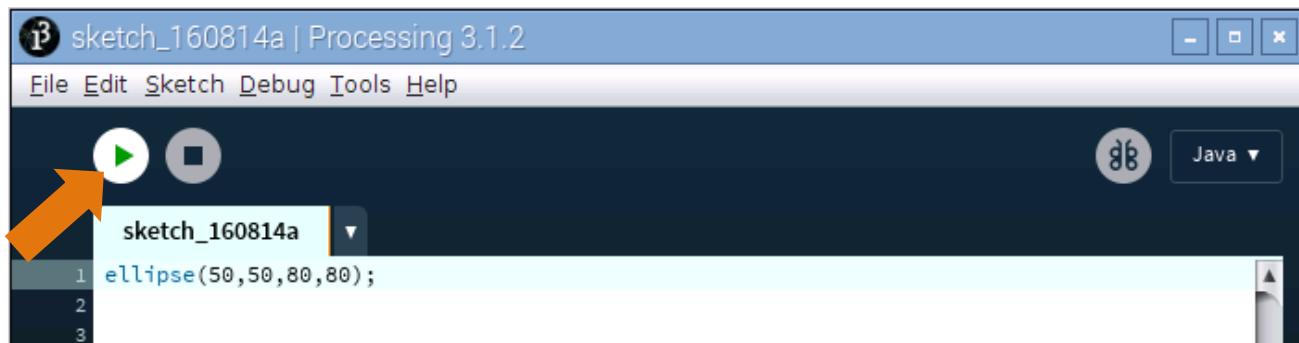

If you've typed everything correctly, you'll see a circle on your screen.

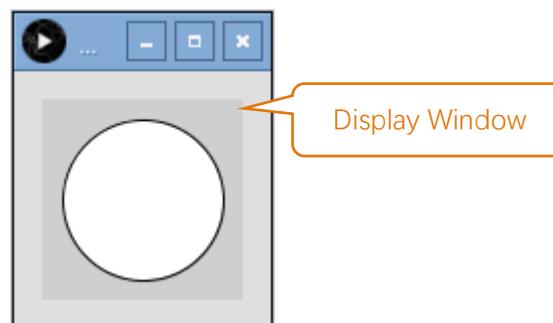


Click on "Stop" (the rectangle button in the Toolbar) or "Close" on Display Window to stop running the program.

If you didn't type it correctly, the Message Area will turn red and report an error. If this happens, make sure that you've copied the example code exactly: the numbers should be contained within parentheses and have commas between each of them, and each line should end with a semicolon.



You can export this sketch to an application to run it directly without opening the Processing. To export the sketch to the application, you must first save it.

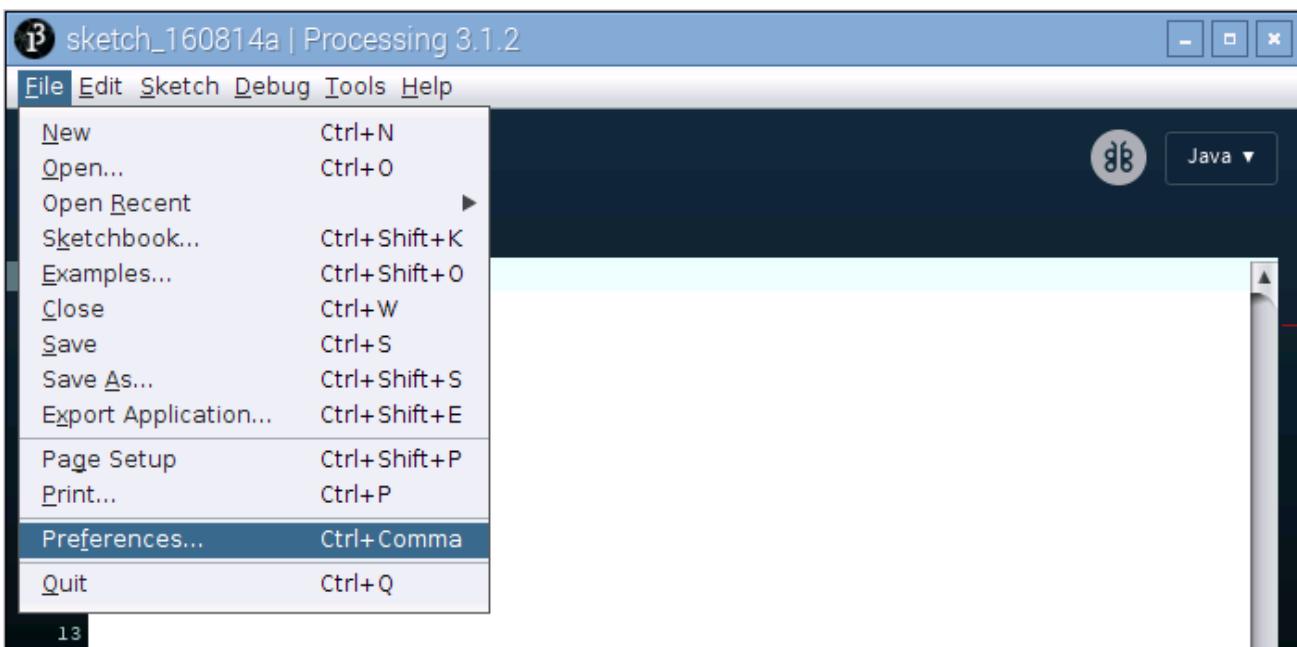

So far, we have completed the first use. I believe you have felt the joy of it.



Chapter 1 LED

We will still start from Blink LED in this chapter, and also learn the usage of some commonly used functions of Processing Software.

Project 1.1 Blink

In this project, we will make a Blink LED and let Display window of Processing Blink at the same time.

Component List

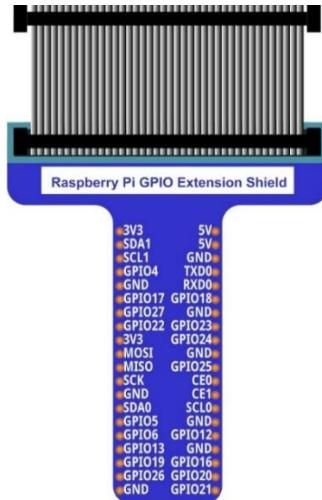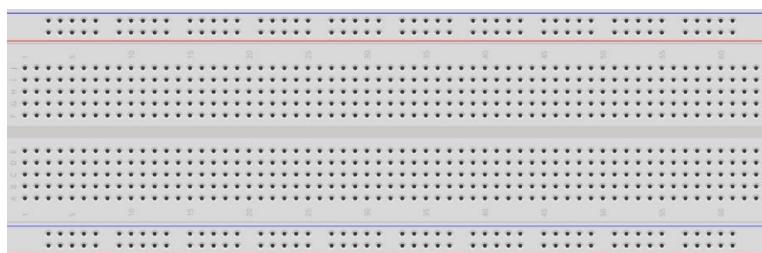Raspberry Pi x1		GPIO Extension Board & Wire x1  <table border="1"><tr><td>3V3</td><td>5V</td></tr><tr><td>SDA1</td><td>GND</td></tr><tr><td>SCL1</td><td>TXD0</td></tr><tr><td>GPIO4</td><td>RXD0</td></tr><tr><td>GND</td><td>GPIO17</td></tr><tr><td>GPIO10</td><td>GPIO18</td></tr><tr><td>GPIO27</td><td>GND</td></tr><tr><td>GPIO22</td><td>GPIO23</td></tr><tr><td>3V3</td><td>GPIO24</td></tr><tr><td>MOSI</td><td>GND</td></tr><tr><td>MISO</td><td>GPIO25</td></tr><tr><td>SCK</td><td>CE0</td></tr><tr><td>GND</td><td>CE1</td></tr><tr><td>SDA0</td><td>SCL0</td></tr><tr><td>GPIO5</td><td>GND</td></tr><tr><td>GPIO6</td><td>GPIO12</td></tr><tr><td>GPIO13</td><td>GND</td></tr><tr><td>GPIO19</td><td>GPIO16</td></tr><tr><td>GPIO26</td><td>GPIO20</td></tr><tr><td>GND</td><td>GPIO21</td></tr></table>	3V3	5V	SDA1	GND	SCL1	TXD0	GPIO4	RXD0	GND	GPIO17	GPIO10	GPIO18	GPIO27	GND	GPIO22	GPIO23	3V3	GPIO24	MOSI	GND	MISO	GPIO25	SCK	CE0	GND	CE1	SDA0	SCL0	GPIO5	GND	GPIO6	GPIO12	GPIO13	GND	GPIO19	GPIO16	GPIO26	GPIO20	GND	GPIO21
3V3	5V																																									
SDA1	GND																																									
SCL1	TXD0																																									
GPIO4	RXD0																																									
GND	GPIO17																																									
GPIO10	GPIO18																																									
GPIO27	GND																																									
GPIO22	GPIO23																																									
3V3	GPIO24																																									
MOSI	GND																																									
MISO	GPIO25																																									
SCK	CE0																																									
GND	CE1																																									
SDA0	SCL0																																									
GPIO5	GND																																									
GPIO6	GPIO12																																									
GPIO13	GND																																									
GPIO19	GPIO16																																									
GPIO26	GPIO20																																									
GND	GPIO21																																									
Breadboard x1																																										
LED x1		Resistor 220Ω x1  Jumper Wire M/M x2 																																								


In the components list, Raspberry Pi, GPIO Extension Shield and Breadboard are necessary for each experiment. They will be listed only in text form.

Circuit


Build the circuit according to the circuit and hardware diagrams. After the circuit is built and verified correct, connect the RPi to GPIO Extension Shield. CAUTION: Avoid any possible short circuits (especially connecting 5V or GND, 3.3V and GND)!

WARNING: A short circuit can cause high current in your circuit, create excessive component heat and cause permanent damage to your RPi!

Schematic diagram

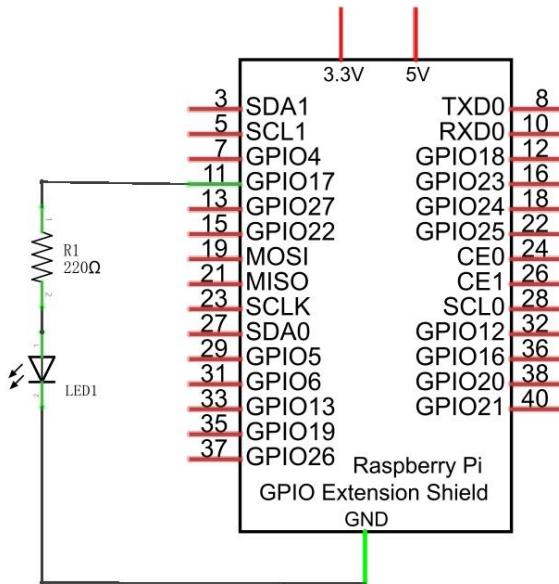

Hardware connection

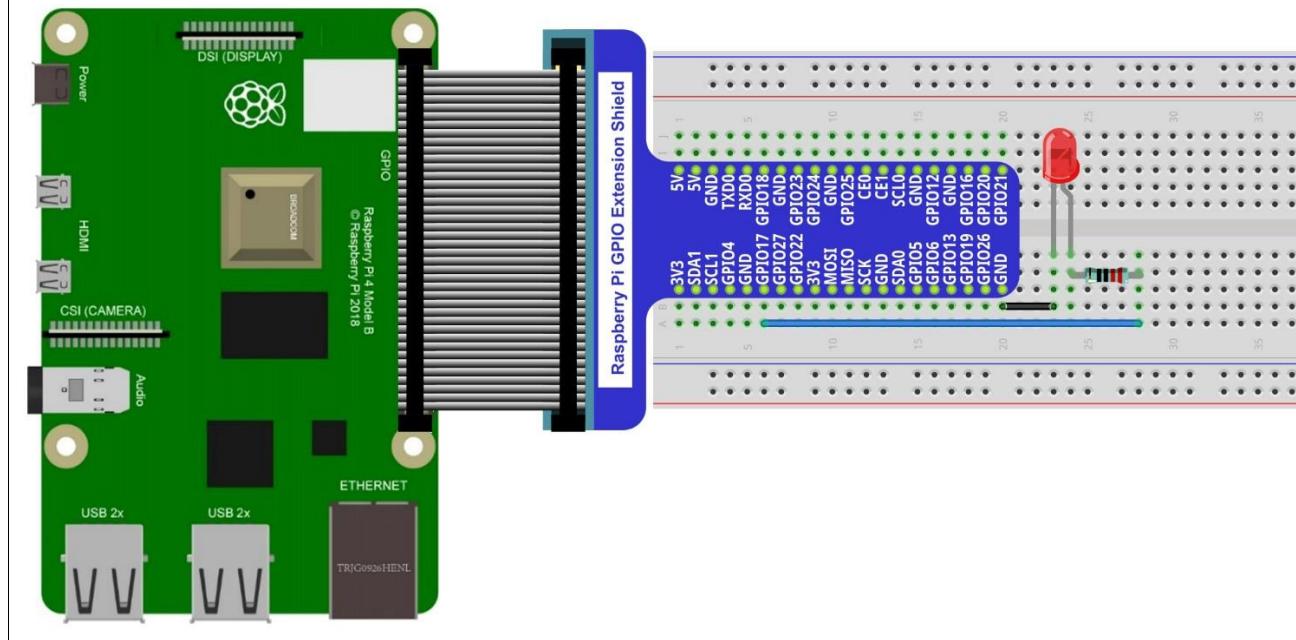

Because the numbering of the GPIO Extension Shield is the same as that of the RPi GPIO, future hardware connection diagrams will only show that part of breadboard and GPIO Extension Shield.

Sketch

Sketch 1.1.1 Blink

Because the resource folder name is too long, for convenience, the folder will be named as "Freenove_Kit". If you have already renamed it, skip this command. Assume the absolute path is "/ home / pi" or "~ /", execute the following command in the user directory.

```
mv Freenove_LCD1602_Starter_Kit_for_Raspberry_Pi/ Freenove_Kit/
```

First, observe the result after running the sketch, and then learn about the code in detail.

1. Use Processing to open the file Sketch_01_1_1_Blink. (The following is only one line of command. There is a Space after Processing.)

```
Processing ~/Freenove_Kit/Processing/Sketches/Sketch_01_1_1_Blink/Sketch_01_1_1_Blink.pde
```


2. Click on "RUN" to run the code.

You can also open it as follows.

Click Raspberry Pi file manager. Find the file under path:


/home/pi/Freenove_Kit/Processing/Sketches/Sketch_01_1_1_Blink

And then right-click it and select Processing.

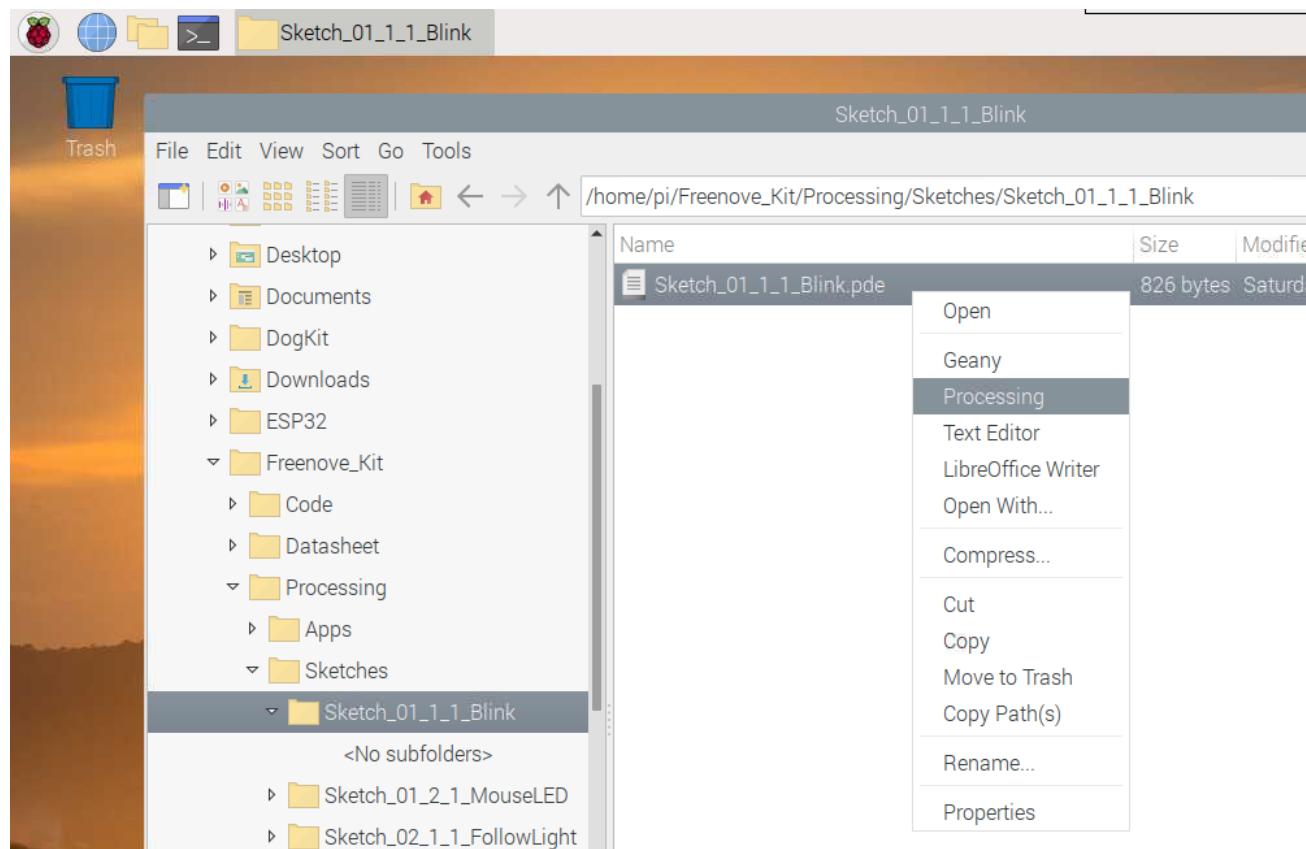

After the program is executed, LED will start Blinking and the background of Display window will change with

the change of LED state.

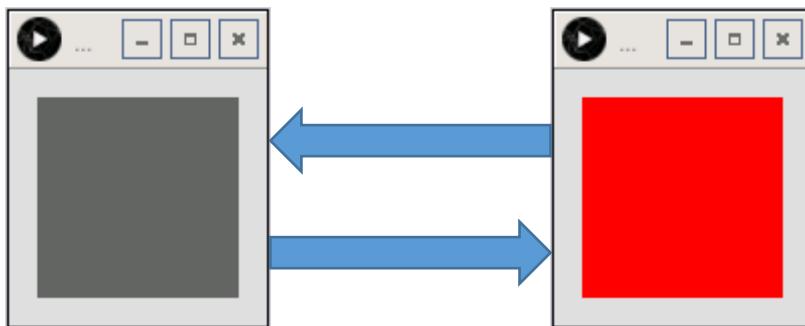

The following is program code:

```

1 import processing.io.*;
2
3 int ledPin = 17;      //define ledPin
4 boolean ledState = false;    //define ledState
5
6 void setup() {
7     size(100, 100);
8     frameRate(1);        //set frame rate
9     GPIO.pinMode(ledPin, GPIO.OUTPUT);    //set the ledPin to output mode
10 }
11
12 void draw() {
13     ledState = !ledState;
14     if (ledState) {
15         GPIO.digitalWrite(ledPin, GPIO.HIGH);    //led on
16         background(255, 0, 0); //set the fill color of led on
17     } else {
18         GPIO.digitalWrite(ledPin, GPIO.LOW);    //led off
19         background(102); //set the fill color of led off
20     }
21 }
```

Processing code usually have two functions: `setup()` and `draw()`, where the function `setup()` is only executed once while the function `draw()` will be executed repeatedly. In the function `setup()`, `size(100, 100)` specifies the size of the Display Window to 100x100pixel. `FrameRate(1)` specifies the refresh rate of Display Window to once per second, which means the `draw()` function will be executed once per second. `GPIO.pinMode (ledPin, GPIO.OUTPUT)` is used to set ledPin to output mode.

```

void setup() {
    size(100, 100);
    frameRate(1);        //set frame rate
    GPIO.pinMode(ledPin, GPIO.OUTPUT);    //set the ledPin to output mode
}
```

In `draw()` function, each execution will invert the variable "ledState". When "ledState" is true, LED is turned ON,

and the background color of display window is set to red. And when the “ledState” is false, the LED is turned OFF and the background color of display window is set to gray. Since the function draw() is executed once per second, the background color of Display Window and the state of LED will also change once per second. This process will repeat in an endless loop to achieve the effect of blinking.

```
void draw() {  
    ledState = !ledState;  
    if (ledState) {  
        GPIO.digitalWrite(ledPin, GPIO.HIGH); //led on  
        background(255, 0, 0); //set the fill color of led on  
    } else {  
        GPIO.digitalWrite(ledPin, GPIO.LOW); //led off  
        background(102); //set the fill color of led off  
    }  
}
```

The following is brief descriptions of some functions:

setup()

The setup() function is run once when the program starts.

draw()

It is called directly after the setup() function. The draw() function continuously executes the lines of code within its block until the program stops or noLoop() is called. draw() is called automatically and should never be called explicitly.

size()

Defines width and height of the display window in pixels.

frameRate()

Specifies the number of frames to be displayed every second.

background()

Set the color of the background of the display window.


GPIO.pinMode()

Configures a pin to act either as input or output.

GPIO.digitalWrite()

Sets an output pin to be either high or low.

All functions used in this code can be found in the Reference of Processing Software, in which built-in functions are described in details, and there are some sample programs. It is recommended that beginners learn more about usage and function of those functions. The localization of Reference can be opened with the following steps: click the menu bar "Help"→"Reference".

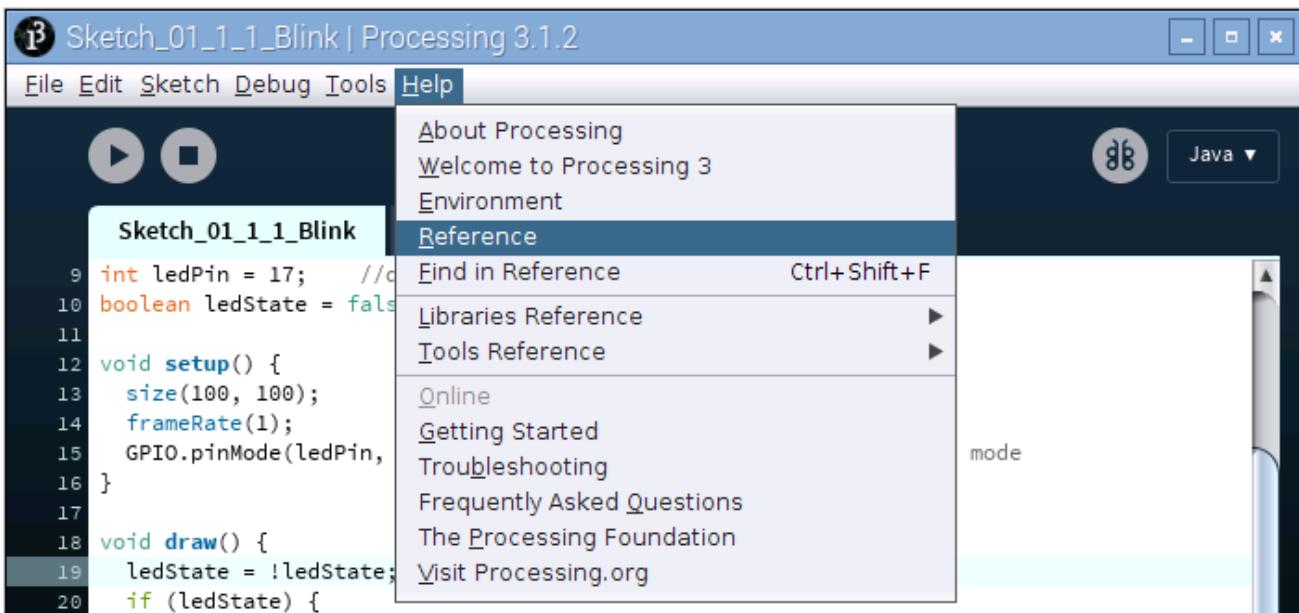

Then the following page will be displayed in the web browser:

Reference. Processing was designed to be a flexible software sketchbook.			
	Structure	Shape	Color
Language	0 (parentheses) , (comma) . (dot) /* */ (multiline comment) /** */ (doc comment) // (comment) ; (semicolon) = (assign) [] (array access)	createShape() loadShape() PShape 2D Primitives arc() ellipse() line() point()	Setting background() clear() colorMode() fill() noFill() noStroke() stroke()
Libraries			
Tools			
Environment			

Or you can directly access to the official website for reference:<http://processing.org/reference/>

Project 1.2 MouseLED

In this project, we will use the mouse to control the state of LED.

The components and circuits of this project are the same as the previous section.

Sketch

Sketch 1.2.1 MouseLED


First, observe the result after running the sketch, and then learn the code in detail.

1. Use Processing to open the file Sketch_01_2_1_MouseLED.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_01_2_1_MouseLED/Sketch_01_2_1_MouseL  
ED.pde
```

2. Click on "RUN" to run the code.

After the program is executed, the LED is in OFF-state, and background color of Display window is gray. Click the grey area of the Display Window with the mouse, LED is turned ON and Display window background color becomes red. Click on the Display Window again, the LED is turned OFF and the background color becomes gray, as shown below.

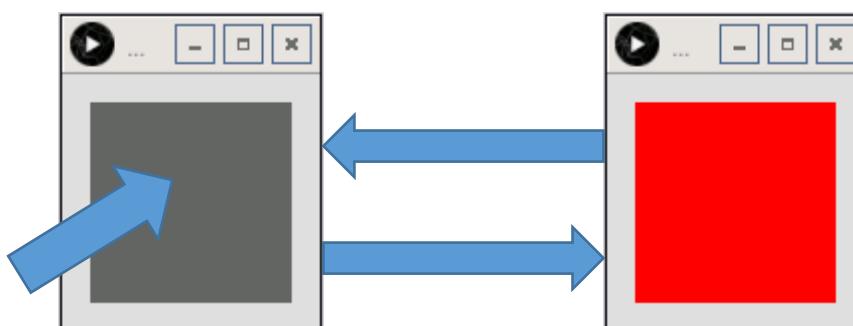

The following is program code:

```
1 import processing.io.*;  
2  
3 int ledPin = 17;  
4 boolean ledState = false;  
5 void setup() {  
6     size(100, 100);  
7     GPIO.pinMode(ledPin, GPIO.OUTPUT);  
8     background(102);  
9 }  
10  
11 void draw() {  
12     if (ledState) {  
13         GPIO.digitalWrite(ledPin, GPIO.HIGH);  
14         background(255, 0, 0);  
15     } else {
```



```
16     GPIO.digitalWrite(ledPin, GPIO.LOW);
17     background(102);
18 }
19 }
20
21 void mouseClicked() { //if the mouse Clicked
22     ledState = !ledState; //Change the led State
23 }
```

The function `mouseClicked()` in this code is used to capture the mouse click events. Once the mouse is clicked, the function will be executed. We can change the state of the variable “`ledState`” in this function to realize controlling LED by clicking on the mouse.

```
void mouseClicked() { //if the mouse Clicked
    ledState = !ledState; //Change the led State
}
```

Chapter 2 LED Bar Graph

We have learned how to control an LED to blink. Next we will learn how to control a number of LEDs.

Project 2.1 FollowLight

In this project, we will use the mouse to control the LED Bar Graph

Component List


Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	LED bar graph x1 	Resistor 220Ω x10 
Jumper M/M x11 		




Circuit

A reference system of labels is used in the circuit diagram below, and the pins with the same network label are connected together.

Schematic diagram

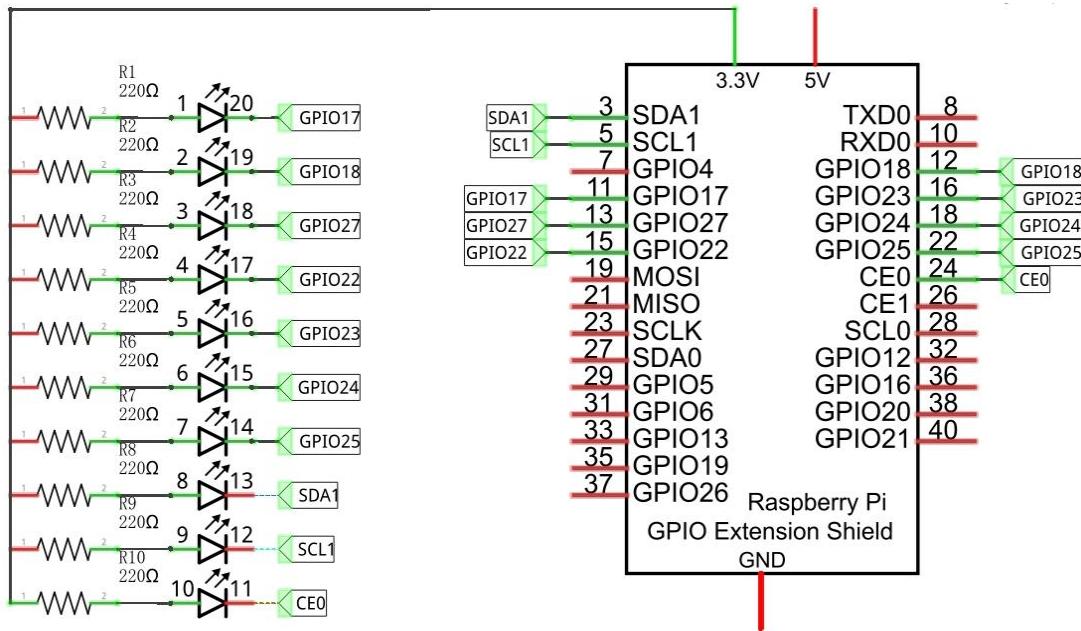

Hardware connection

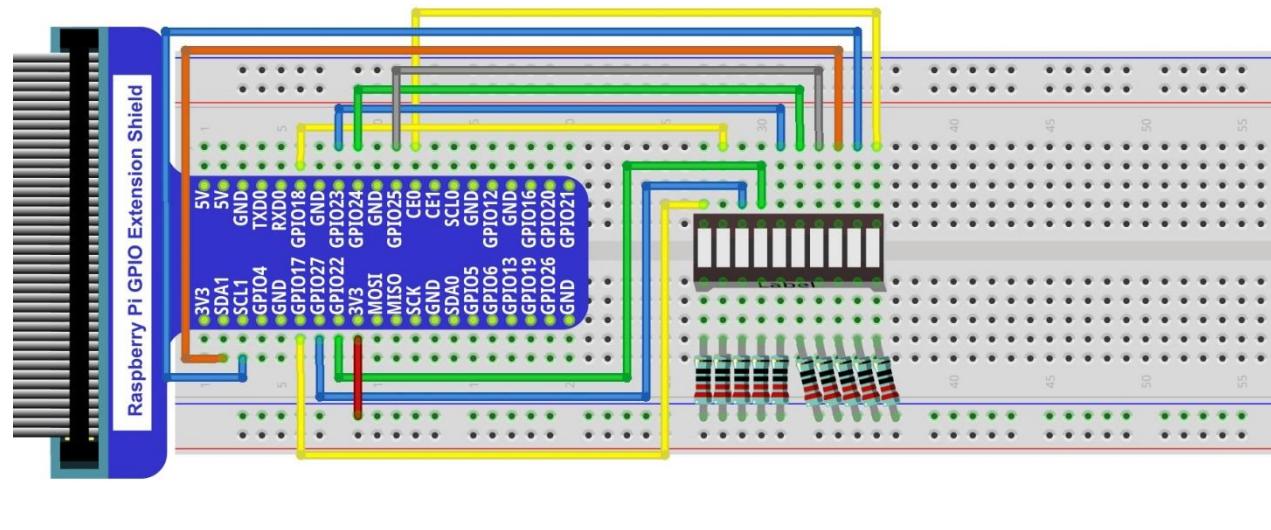

In this circuit, the cathodes of LEDs are connected to the GPIO, which is different from the previous circuit. Therefore, the LEDs turn ON when the GPIO outputs low level in the program.

Sketch

Sketch 2.1.1 FollowLight


First, observe the result after running the sketch, and then learn about the code in detail.

1. Use Processing to open the file Sketch_02_1_1_FollowLight.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_02_1_1_FollowLight/Sketch_02_1_1_FollowLi  
ght.pde
```

2. Click on "RUN" to run the code.

After the program is executed, slide the mouse in the Display Window, then the state of LED Bar Graph will be changed, as shown below.

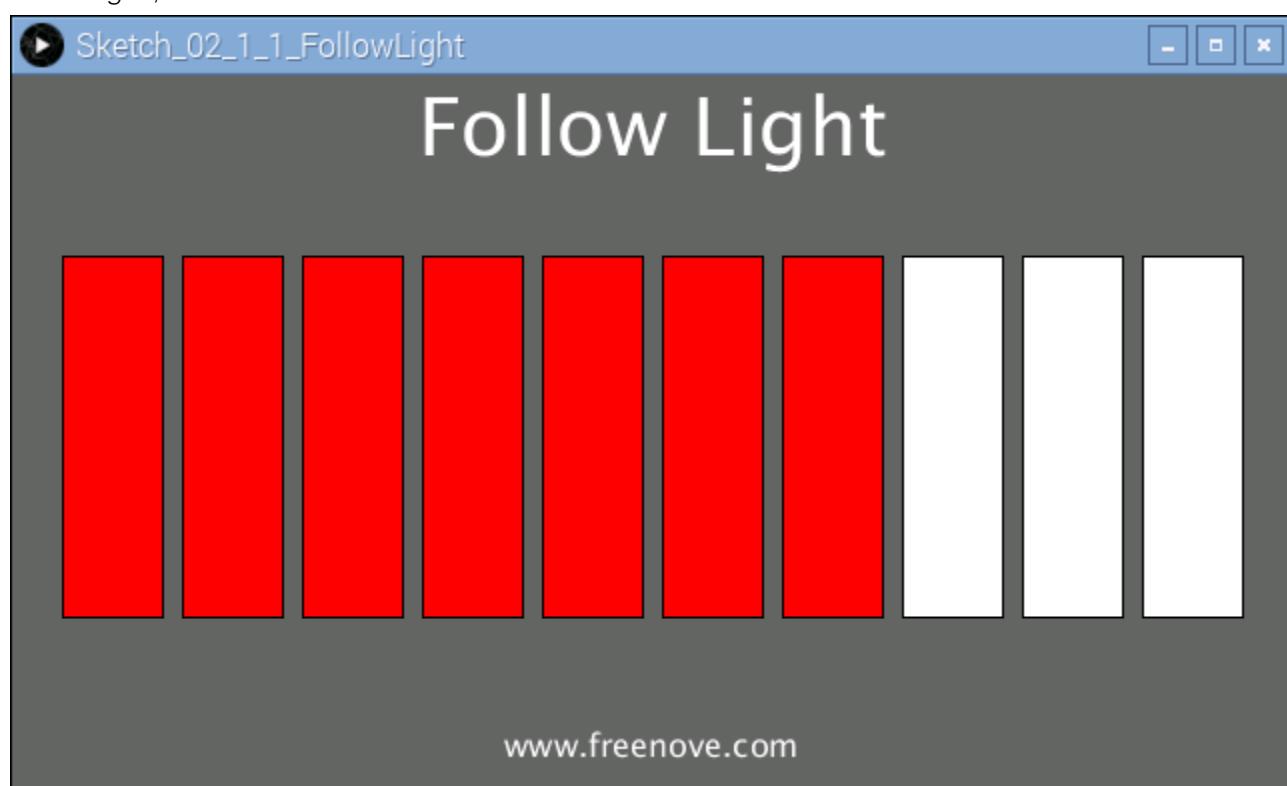

The following is program code:

```
1 import processing.io.*;  
2  
3 int leds[]={17, 18, 27, 22, 23, 24, 25, 2, 3, 8}; //define ledPins  
4  
5 void setup() {  
6     size(640, 360); //display window size  
7     for (int i=0; i<10; i++) { //set led Pins to output mode  
8         GPIO.pinMode(leds[i], GPIO.OUTPUT);  
9     }  
10    background(102);
```

```

11   textAlign(CENTER);    //set the text centered
12   textSize(40);        //set text size
13   text("Follow Light", width / 2, 40);    //title
14   textSize(16);
15   text("www. freenove. com", width / 2, height - 20);    //site
16 }
17
18 void draw() {
19   for (int i=0; i<10; i++) {    //draw 10 rectangular box
20     if (mouseX>(25+60*i)) {    //if the mouse cursor on the right of rectangular box
21       fill(255, 0, 0);          //fill the rectangular box in red color
22       GPIO.digitalWrite(leds[i], GPIO.LOW); //turn on the corresponding led
23     } else {
24       fill(255, 255, 255);    //else fill the rectangular box in white color
25       GPIO.digitalWrite(leds[i], GPIO.HIGH); //and turn off the led
26     }
27     rect(25+60*i, 90, 50, 180);    //draw a rectangular box
28   }
29 }
```

In the function draw(), we draw 10 rectangles to represent 10 LEDs of LED Bar Graph. We make rectangles on the left of mouse filled with red, corresponding LEDs turned ON. And make We make rectangles on the right of mouse filled with red, corresponding LEDs turned OFF. In this way, when slide the mouse to right, the more LEDs on the left of mouse will be turned ON. When to the left, the reverse is the case.

```

void draw() {
  for (int i=0; i<10; i++) {    //draw 10 rectangular box
    if (mouseX>(25+60*i)) {    //if the mouse cursor on the right of rectangular box
      fill (255, 0, 0);          //fill the rectangular box in red color
      GPIO.digitalWrite(leds[i], GPIO.LOW); //turn on the corresponding led
    } else {
      fill(255, 255, 255);    //else fill the rectangular box in white color
      GPIO.digitalWrite(leds[i], GPIO.HIGH); //and turn off the led
    }
    rect(25+60*i, 90, 50, 180);    //draw a rectangular box
  }
}
```

Chapter 3 PWM

In this chapter, we will learn how to use PWM.

Project 3.1 BreathingLED


In this project, we will make a breathing LED, which means that an LED that is OFF will then turn ON gradually and then gradually turn OFF like "breathing". and the Display Window will show a breathing LED pattern and a progress bar at the same time.

Component List


Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	LED x1	Resistor 220Ω x1
Jumper M/M x2		

Circuit

Schematic diagram

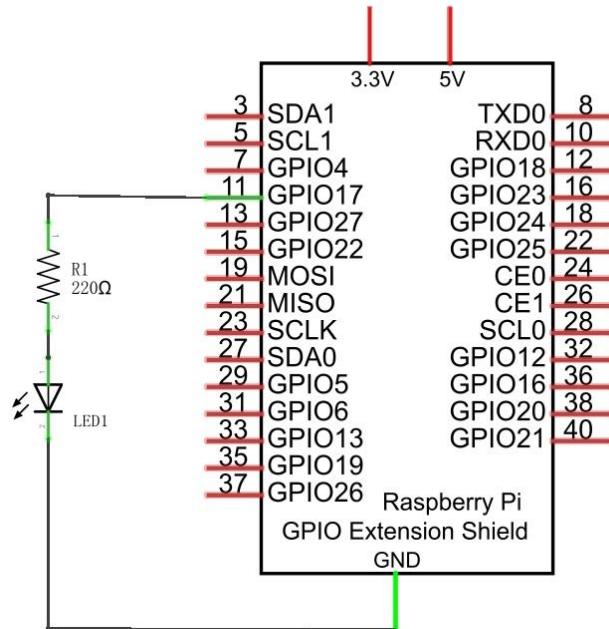

Hardware connection

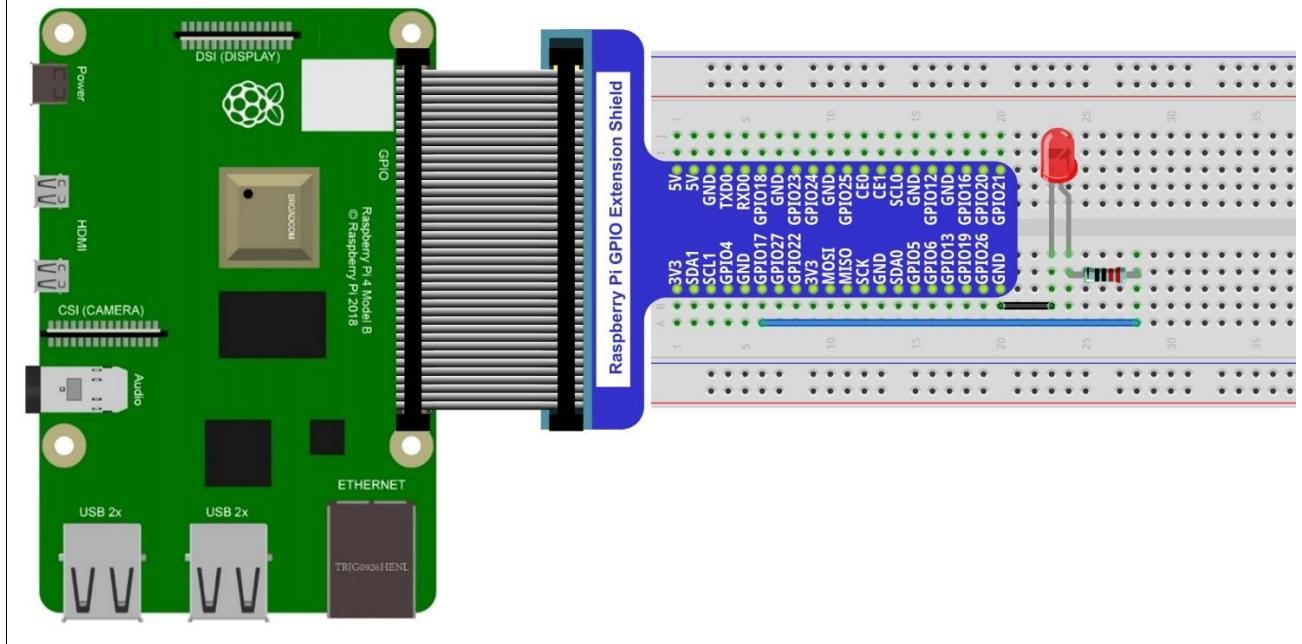

Sketch

Sketch 3.1.1 BreathingLED


First, observe the result after running the sketch, and then learn about the code in detail.

1. Use Processing to open the file Sketch_03_1_1_BreathingLED.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_03_1_1_BreathingLED/Sketch_03_1_1_BreathingLED.pde
```

2. Click on "RUN" to run the code.

After the program is executed, the LED in the circuit will be brightened gradually, and the color of LED pattern in Display Window will deepen gradually at the same time. The progress bar under the pattern shows the percentage of completion, and clicking on the inside of window with the mouse can change the progress.

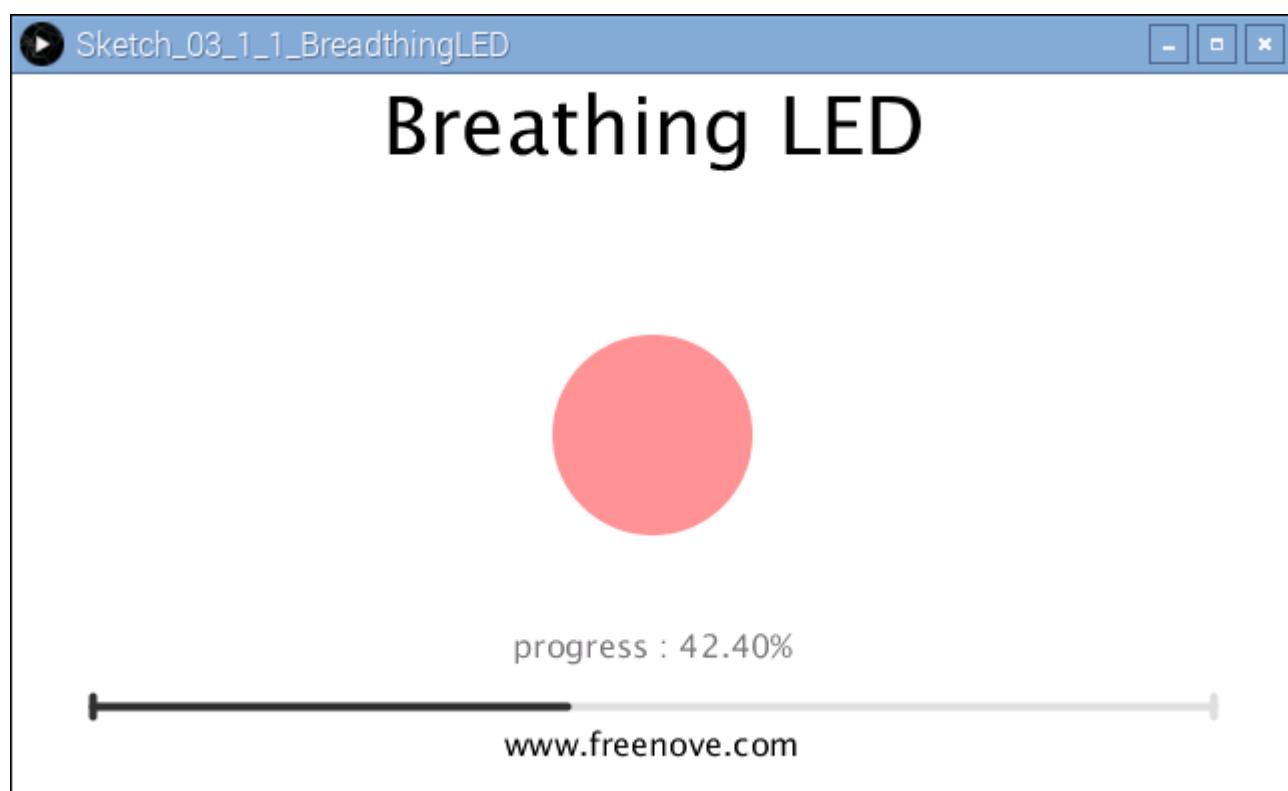

The following is program code:

```
1 import processing.io.*;  
2  
3 int ledPin = 17; //led Pin  
4 int borderSize = 40; //  
5 float t = 0.0; //progress percent  
6 float tStep = 0.004; // speed  
7 SOFTPWM p = new SOFTPWM(ledPin, 10, 100); //Create a PWM pin, initialize the duty cycle  
8 and period  
9 void setup() {
```



```
10    size(640, 360); //display window size
11    strokeWeight(4); //stroke Weight
12 }
13
14 void draw() {
15     // Show static value when mouse is pressed, animate otherwise
16     if (mousePressed) {
17         int a = constrain(mouseX, borderSize, width - borderSize);
18         t = map(a, borderSize, width - borderSize, 0.0, 1.0);
19     } else {
20         t += tStep;
21         if (t > 1.0) t = 0.0;
22     }
23     p.softPwmWrite((int)(t*100)); //write the duty cycle according to t
24     background(255); //A white background
25     titleAndSiteInfo(); //title and Site information
26
27     fill(255, 255-t*255, 255-t*255); //cycle
28     ellipse(width/2, height/2, 100, 100);
29
30     pushMatrix();
31     translate(borderSize, height - 45);
32     int barLength = width - 2*borderSize;
33
34     barBgStyle(); //progressbar bg
35     line(0, 0, barLength, 0);
36     line(barLength, -5, barLength, 5);
37
38     barStyle(); //progressbar
39     line(0, -5, 0, 5);
40     line(0, 0, t*barLength, 0);
41
42     barLabelStyle(); //progressbar label
43     text("progress : "+nf(t*100, 2, 2), barLength/2, -25);
44     popMatrix();
45 }
46
47 void titleAndSiteInfo() {
48     fill(0);
49     textAlign(CENTER); //set the text centered
50     textSize(40); //set text size
51     text("Breathing Light", width / 2, 40); //title
52     textSize(16);
53     text("www.freenove.com", width / 2, height - 20); //site
```

```

54 }
55 void barBgStyle() {
56   stroke(220);
57   noFill();
58 }
59
60 void barStyle() {
61   stroke(50);
62   noFill();
63 }
64
65 void barLabelStyle() {
66   noStroke();
67   fill(120);
68 }

```

First, use SOFTPWM class to create a PWM pin, which is used to control the brightness of LED. Then define a variable “t” and a variable “tStep” to control the PWM duty cycle and the rate at which “t” increases.

```

float t = 0.0;      //progress percent
float tStep = 0.004;    // speed
SOFTPWM p = new SOFTPWM(ledPin, 10, 100);

```

In the function draw, if there is a click detected, the coordinate in X direction of the mouse will be mapped into the duty cycle “t”; Otherwise, duty cycle “t” will be increased gradually and PWM with the duty cycle will be output.

```

if (mousePressed) {
  int a = constrain(mouseX, borderSize, width - borderSize);
  t = map(a, borderSize, width - borderSize, 0.0, 1.0);
} else {
  t += tStep;
  if (t > 1.0) t = 0.0;
}
p.softPwmWrite((int)(t*100)); //write the duty cycle according to t

```

The next code is designed to draw a circle filled with colors in different depth according to the “t” value, which is used to simulate LEDs with different brightness.

```

fill(255, 255-t*255, 255-t*255); //cycle
ellipse(width/2, height/2, 100, 100);

```

The last code is designed to draw the progress bar and the percentage of the progress.


```

barBgStyle(); //progressbar bg
line(0, 0, barLength, 0);
line(barLength, -5, barLength, 5);

```

```
barStyle(); //progressbar  
line(0, -5, 0, 5);  
line(0, 0, t*barLength, 0);  
  
barLabelStyle(); //progressbar label  
text("progress : "+nf(t*100, 2, 2), barLength/2, -25);
```

In processing software, you will see a tag page "SOFTPWM" in addition to the above code.

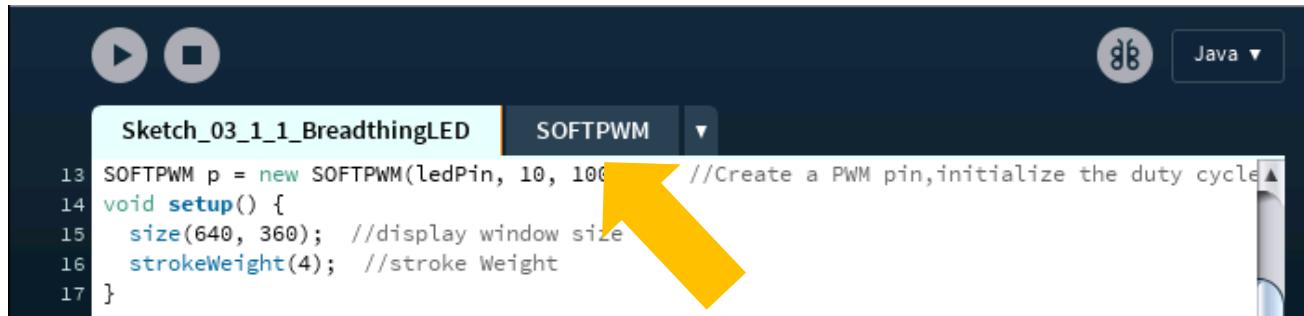

Reference

class SOFTPWM

```
public SOFTPWM(int iPin, int dc, int pwmRange):
```

Constructor, used to create a PWM pin, set the pwmRange and initial duty cycle. The minimum of pwmRange is 0.1ms. So pwmRange=100 means that the PWM duty cycle is 0.1ms*100=10ms.

```
public void softPwmWrite(int value)
```

Set PMW duty cycle.

```
public void softPwmStop()
```

Stop outputting PWM.

Chapter 4 RGBLED

In this chapter, we will learn how to use RGBLED.

Project 4.1 Multicolored LED

This project will make a Multicolored LED, namely, use Processing to control the color of RGBLED.


Component List

Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	RGBLED x1	Resistor 220Ω x3
Jumper M/M x4 		




Circuit

Schematic diagram

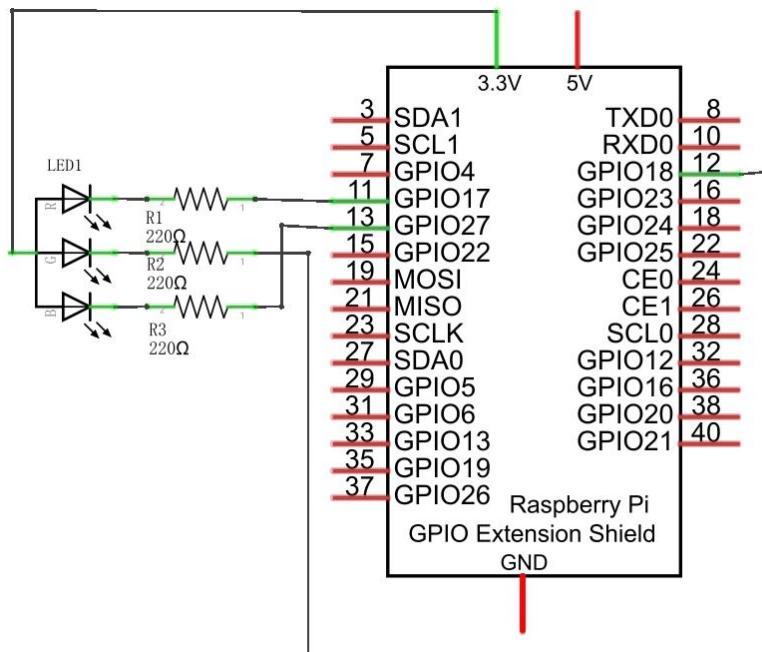

Hardware connection

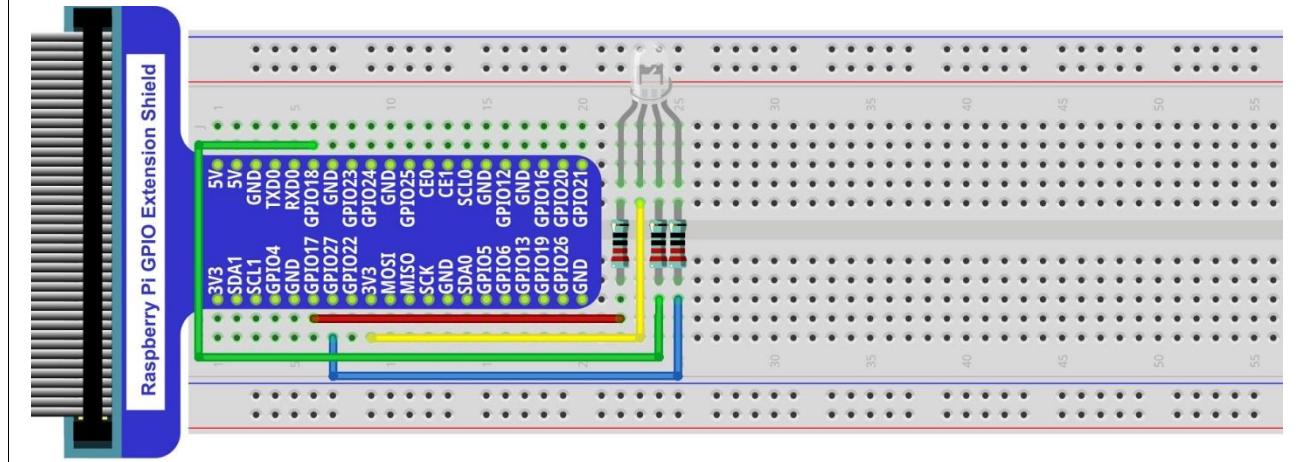

Sketch

Sketch 2.1.1 ColorfullLED


First, observe the result after running the sketch, and then learn about the code in detail.

1. Use Processing to open the file Sketch_02_1_1_ColorfullLED.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_02_1_1_ColorfullLED/Sketch_02_1_1_ColorfullLED.pde
```

2. Click on "RUN" to run the code.

After the program is executed, RGBLED is in OFF-state. And in Display Window, the pattern used to simulate LED is black. Red, Green and Blue progress bars are at 0%. By using mouse to click on and drag any progress bar, you can set the PWM duty cycle of color channels, and then RGBLED in the circuit will show corresponding colors. At the same time, the pattern in Display Window will show the same color.

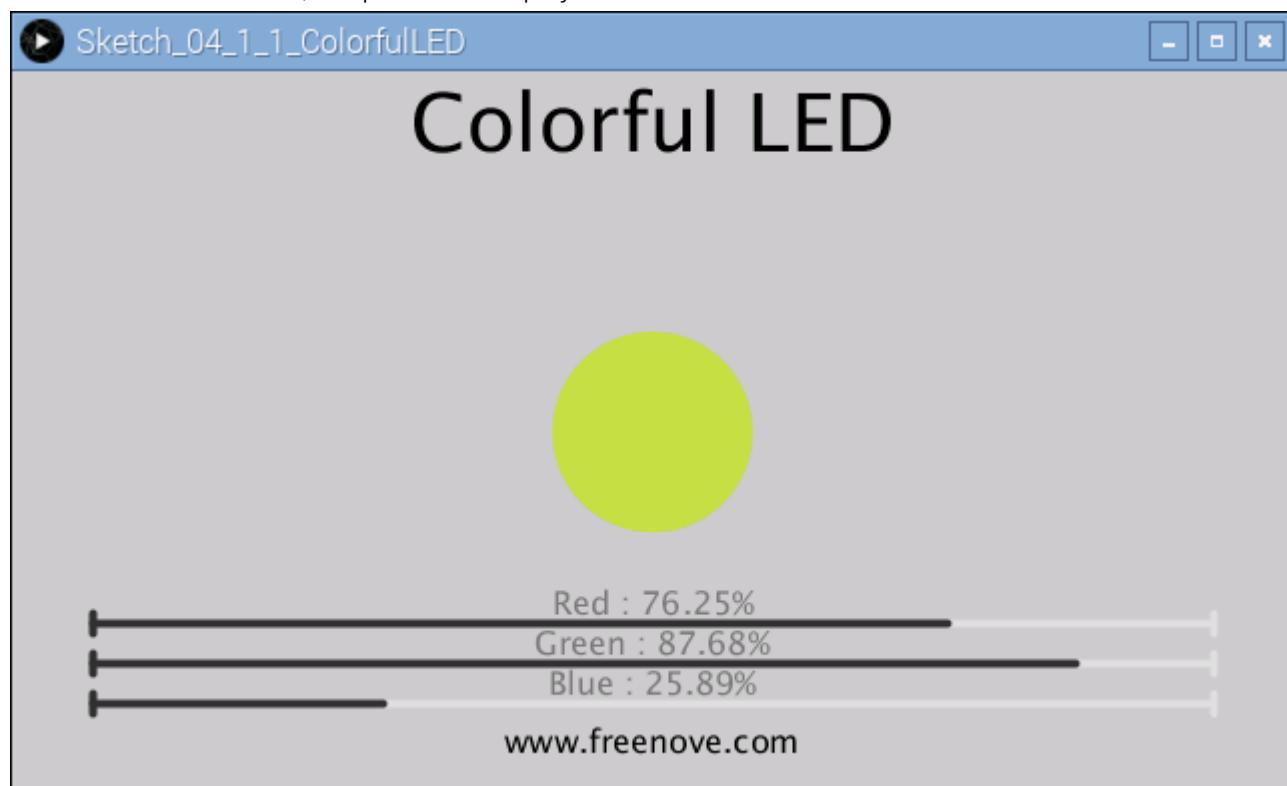

This project contains a lot of code files, and the core code is contained in the file Sketch_02_1_1_ColorfullLED. The other files only contain some custom classes.





The following is program code:

```
1 import processing.io.*;
2
3 int bluePin = 17;      //blue Pin
4 int greenPin = 18;    //green Pin
5 int redPin = 27;      //red Pin
6 int borderSize = 40;   //picture border size
7 //Create a PWM pin, initialize the duty cycle and period
8 SOFTPWM pRed = new SOFTPWM(redPin, 100, 100);
9 SOFTPWM pGreen = new SOFTPWM(greenPin, 100, 100);
10 SOFTPWM pBlue = new SOFTPWM(bluePin, 100, 100);
11 //instantiate three ProgressBar Object
12 ProgressBar rBar, gBar, bBar;
13 boolean rMouse = false, gMouse = false, bMouse = false;
14 void setup() {
15     size(640, 360); //display window size
16     strokeWeight(4); //stroke Weight
17     //define the ProgressBar length
18     int barLength = width - 2*borderSize;
19     //Create ProgressBar Object
20     rBar = new ProgressBar(borderSize, height - 85, barLength);
21     gBar = new ProgressBar(borderSize, height - 65, barLength);
22     bBar = new ProgressBar(borderSize, height - 45, barLength);
23     //Set ProgressBar's title
24     rBar.setTitle("Red");gBar.setTitle("Green");bBar.setTitle("Blue");
25 }
26
27 void draw() {
28     background(200); //A white background
29     titleAndSiteInfo(); //title and Site information
30
31     fill(rBar.progress*255, gBar.progress*255, bBar.progress*255); //cycle color
32     ellipse(width/2, height/2, 100, 100); //show cycle
33
34     rBar.create(); //Show progressBar
35     gBar.create();
36     bBar.create();
37 }
38
39 void mousePressed() {
40     if ( (mouseY< rBar.y+5) && (mouseY>rBar.y-5) ) {
41         rMouse = true;
42     } else if ( (mouseY< gBar.y+5) && (mouseY>gBar.y-5) ) {
43         gMouse = true;
```

```

44 } else if ( (mouseY < bBar.y+5) && (mouseY > bBar.y-5) ) {
45     bMouse = true;
46 }
47 }
48 void mouseReleased() {
49     rMouse = false;
50     bMouse = false;
51     gMouse = false;
52 }
53 void mouseDragged() {
54     int a = constrain(mouseX, borderSize, width - borderSize);
55     float t = map(a, borderSize, width - borderSize, 0.0, 1.0);
56     if (rMouse) {
57         pRed.softPwmWrite((int)(100-t*100)); //write the duty cycle according to t
58         rBar.setProgress(t);
59     } else if (gMouse) {
60         pGreen.softPwmWrite((int)(100-t*100)); //write the duty cycle according to t
61         gBar.setProgress(t);
62     } else if (bMouse) {
63         pBlue.softPwmWrite((int)(100-t*100)); //write the duty cycle according to t
64         bBar.setProgress(t);
65     }
66 }
67
68 void titleAndSiteInfo() {
69     fill(0);
70     textAlign(CENTER);    //set the text centered
71     textSize(40);        //set text size
72     text("Colorful LED", width / 2, 40);    //title
73     textSize(16);
74     text("www.freenove.com", width / 2, height - 20);    //site
75 }
```

In the code, first create three PWM pins and three progress bars to control RGBLED.

```

SOFTPWM pRed = new SOFTPWM(redPin, 100, 100);
SOFTPWM pGreen = new SOFTPWM(greenPin, 100, 100);
SOFTPWM pBlue = new SOFTPWM(bluePin, 100, 100);
//instantiate three ProgressBar Object
ProgressBar rBar, gBar, bBar;
```

And then in function setup(), define position and length of progress bar according to the size of Display Window, and set the name of each progress bar.

```

void setup() {
    size(640, 360); //display window size
```

```

strokeWeight(4); //stroke Weight
//define the ProgressBar length
int barLength = width - 2*borderSize;
//Create ProgressBar Object
rBar = new ProgressBar(borderSize, height - 85, barLength);
gBar = new ProgressBar(borderSize, height - 65, barLength);
bBar = new ProgressBar(borderSize, height - 45, barLength);
//Set ProgressBar's title
rBar.setTitle("Red");gBar.setTitle("Green");bBar.setTitle("Blue");
}

```

In function draw(), first set background, header and other basic information. Then draw a circle and set its color according to the duty cycle of three channels of RGB. Finally draw three progress bars.

```

void draw() {
background(200); //A white background
titleAndSiteInfo(); //title and Site information

fill(rBar.progress*255, gBar.progress*255, bBar.progress*255); //cycle color
ellipse(width/2, height/2, 100, 100); //show cycle

rBar.create(); //Show progressBar
gBar.create();
bBar.create();
}

```

System functions mousePressed(), mouseReleased() and mouseDragged() are used to determine whether the mouse drags the progress bar and set the schedule. If the mouse button is pressed in a progress bar, then the mousePressed () sets the progress flag rgbMouse to true, mouseDragged (mouseX) maps progress value to set corresponding PWM. When the mouse is released, mouseReleased() sets the progress flag rgbMouse to false..

```

void mousePressed() {
if ( (mouseY< rBar.y+5) && (mouseY>rBar.y-5) ) {
rMouse = true;
} else if ( (mouseY< gBar.y+5) && (mouseY>gBar.y-5) ) {
gMouse = true;
} else if ( (mouseY< bBar.y+5) && (mouseY>bBar.y-5) ) {
bMouse = true;
}
}

void mouseReleased() {
rMouse = false;
bMouse = false;
gMouse = false;
}

```

```
void mouseDragged() {
    int a = constrain(mouseX, borderSize, width - borderSize);
    float t = map(a, borderSize, width - borderSize, 0.0, 1.0);
    if (rMouse) {
        pRed.softPwmWrite((int)(100-t*100)); //write the duty cycle according to t
        rBar.setProgress(t);
    } else if (gMouse) {
        pGreen.softPwmWrite((int)(100-t*100)); //write the duty cycle according to t
        gBar.setProgress(t);
    } else if (bMouse) {
        pBlue.softPwmWrite((int)(100-t*100)); //write the duty cycle according to t
        bBar.setProgress(t);
    }
}
```

Reference

class ProgressBar

This is a custom class that is used to create a progress bar.

```
public ProgressBar(int ix, int iy, int barlen)
```

Constructor, used to create ProgressBar, the parameters for coordinates X, Y and length of ProgressBar.

```
public void setTitle(String str)
```

Used to set the name of progress bar, which will be displayed in the middle of the progress bar.

```
public void setProgress(float pgress)
```

Used to set the progress of progress bar. The parameter: 0<pgress<1.0.

```
public void create() & public void create(float pgress)
```

Used to draw progress bar.



Chapter 5 Buzzer

In this chapter we will learn how to use a buzzer.

Project 5.1 ActiveBuzzer


In this project, we will use the mouse to control an active buzzer.

Component List


Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	NPN transistor x1 	Active buzzer x1 	Jumper M/M x7 	Push button x1 	Resistor 1kΩ x1 	Resistor 10kΩ x2 
--	--	---	---	---	--	---

Circuit

Schematic diagram

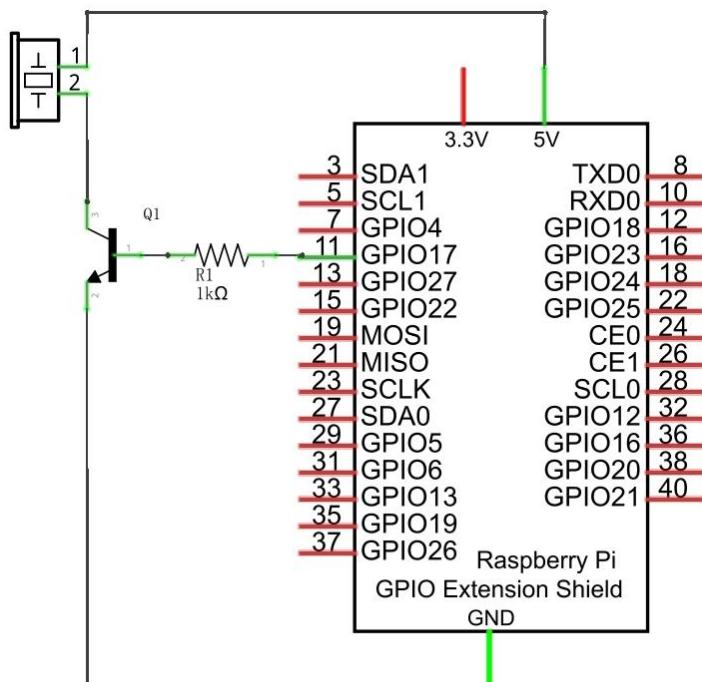

Hardware connection

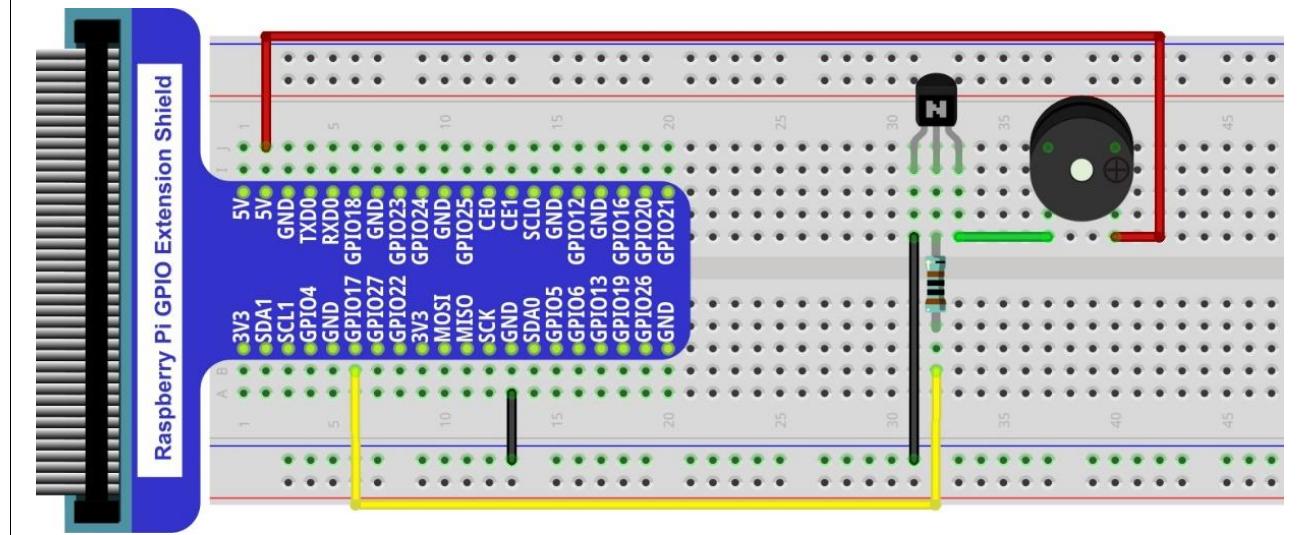

Note: in this circuit, the power supply for the buzzer is 5V, and pull-up resistor of the push button switch is connected to the 3.3V power feed. Actually, the buzzer can work when connected to the 3.3V power feed but this will produce a weak sound from the buzzer (not very loud).

Sketch

Sketch 3.1.1 ActiveBuzzer

First, observe the result after running the sketch, and then learn about the code in detail.

1. Use Processing to open the file Sketch_03_1_1_ActiveBuzzer.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_03_1_1_ActiveBuzzer/Sketch_03_1_1_ActiveBuzzer.pde
```

2. Click on "RUN" to run the code.

After the program is executed, use the mouse to click on any position of the Display Window, then Active Buzzer begins to sound and arc graphics (Schematic of sounding) will appear next to the buzzer pattern on Display Window. Click the mouse again, then Active Buzzer stops sounding and arc graphics disappear.



The following is program code:

```
import processing.io.*;  
  
int buzzerPin = 17;  
boolean buzzerState = false;  
void setup() {  
    size(640, 360);  
    GPIO.pinMode(buzzerPin, GPIO.OUTPUT);  
}  
  
void draw() {
```

```
background(255);
titleAndSiteInfo(); //title and site information
drawBuzzer(); //buzzer img
if (buzzerState) {
    GPIO.digitalWrite(buzzerPin, GPIO.HIGH);
    drawArc(); //Sounds waves img
} else {
    GPIO.digitalWrite(buzzerPin, GPIO.LOW);
}
}

void mouseClicked() { //if the mouse Clicked
    buzzerState = !buzzerState; //Change the buzzer State
}
void drawBuzzer() {
    strokeWeight(1);
    fill(0);
    ellipse(width/2, height/2, 50, 50);
    fill(255);
    ellipse(width/2, height/2, 10, 10);
}
void drawArc() {
    noFill();
    strokeWeight(8);
    for (int i=0; i<3; i++) {
        arc(width/2, height/2, 100*(1+i), 100*(1+i), -PI/4, PI/4, OPEN);
    }
}
void titleAndSiteInfo() {
    fill(0);
    textAlign(CENTER); //set the text centered
    textSize(40); //set text size
    text("Active Buzzer", width / 2, 40); //title
    textSize(16);
    text("www. freenove. com", width / 2, height - 20); //site
}
```

Code in this project is logically the same as previous "MouseLED" project. And the difference is that this project needs to draw the buzzer pattern and arc graphics after the buzzer sounding.





Chapter 6 ADC Module

In this chapter we will learn how to use an ADC module.



Project 6.1 Voltmeter

This project uses an ADC module to read potentiometer voltage value and display the value on Display Window.

Component List

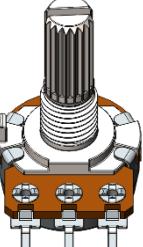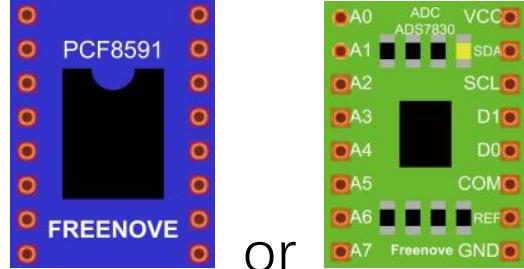
Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	Jumper M/M x16 
Rotary potentiometer x1 	ADC module x1 Or  Resistor 10kΩ x2 

This product contains only one ADC module, there are two types, PCF8591 and ADS7830. For the projects described in this tutorial, they function the same. Please build corresponding circuits according to the ADC module found in your Kit.

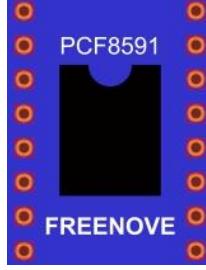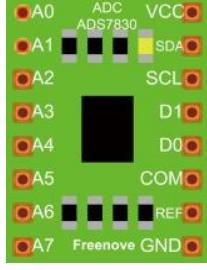
ADC module : PCF8591	ADC module : ADS7830
	

Circuit with PCF8591

Schematic diagram

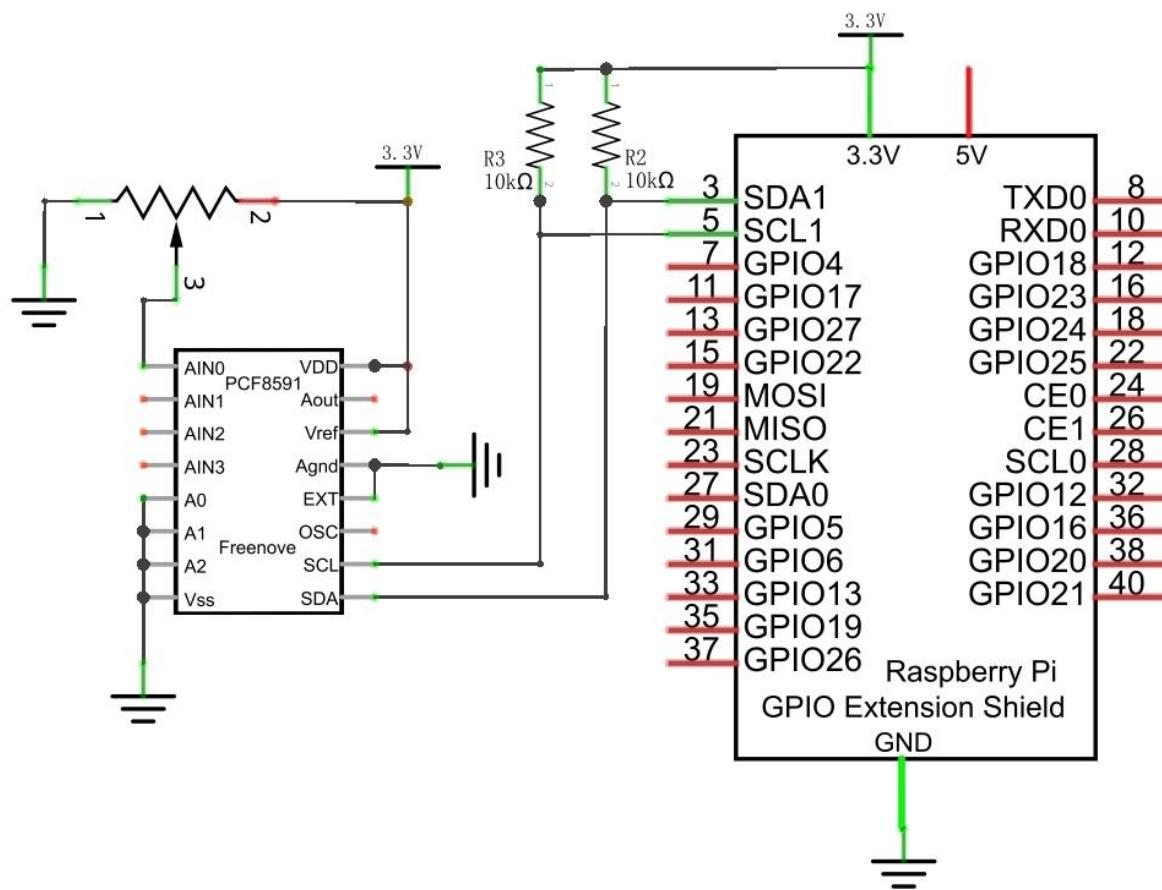


Hardware connection

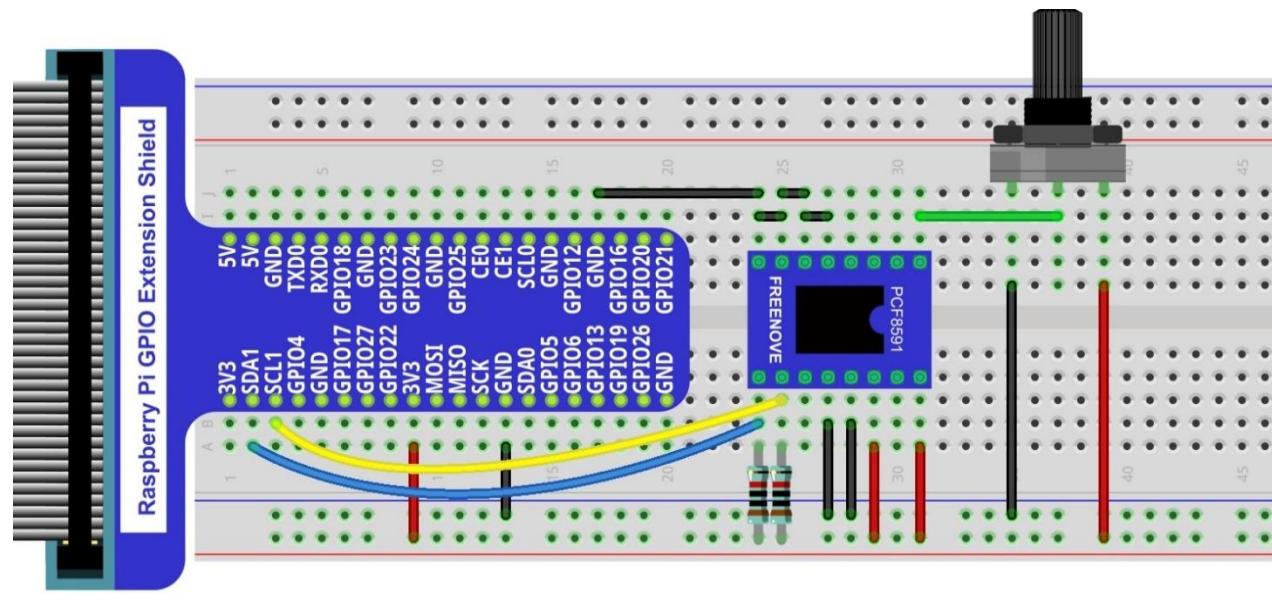


Circuit with ADS7830

Schematic diagram

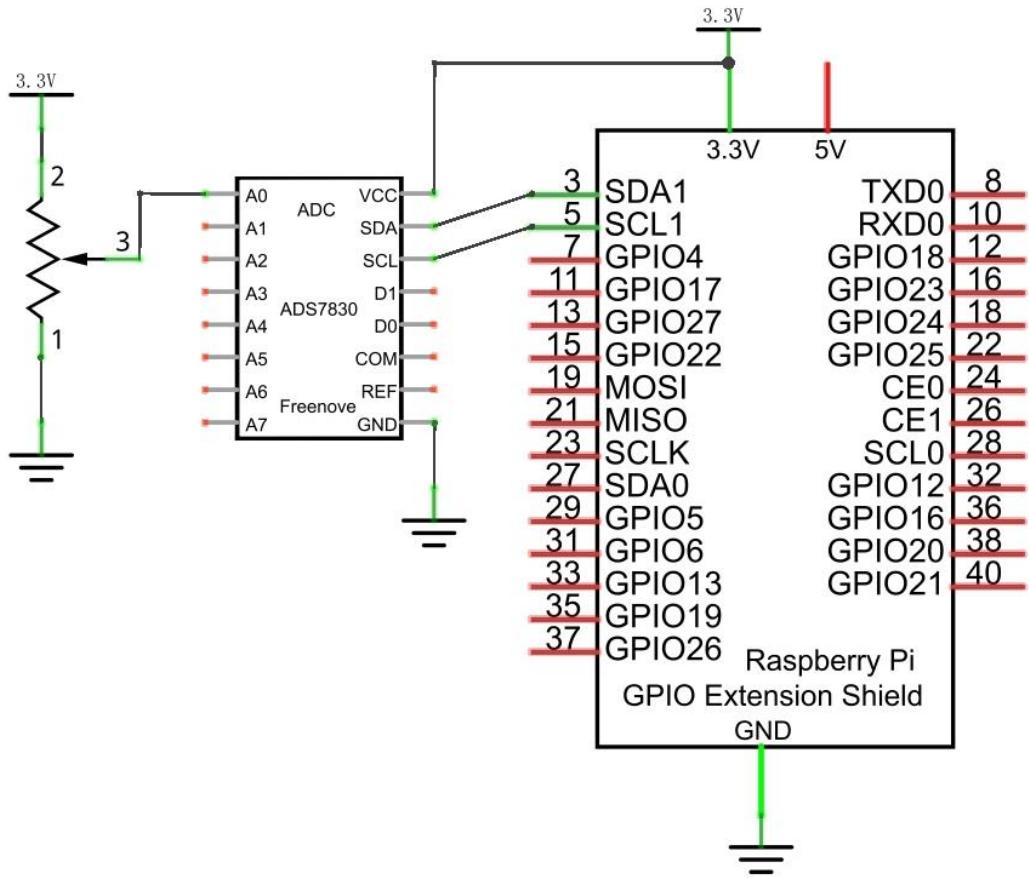

Hardware connection

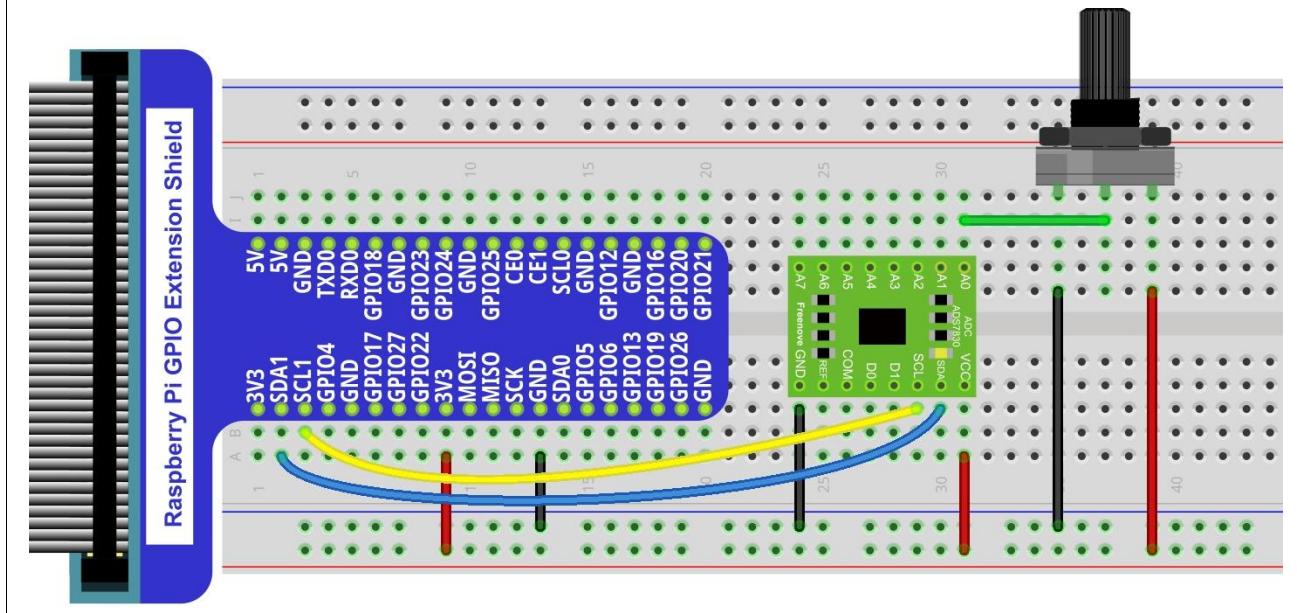

Sketch

Configure I2C (required)


Enable I2C

There are some I2C chips in this kit like ADC module. The I2C interface of Raspberry Pi is closed by default. You need to open it manually as follows:

Type command in the terminal:

```
sudo raspi-config
```

Then open the following dialog box:

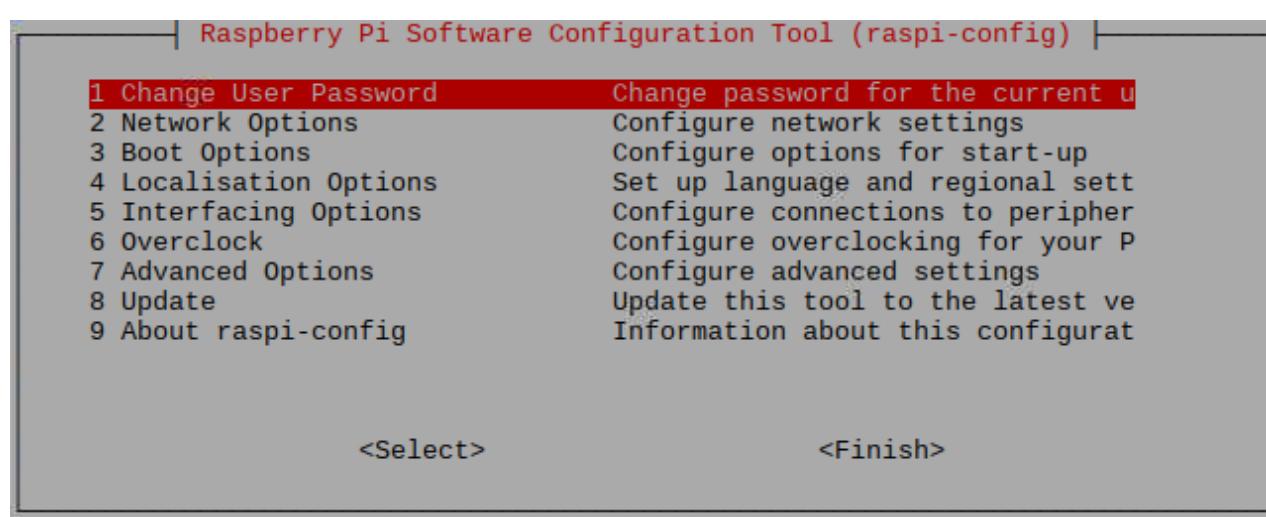

Choose “5 Interfacing Options” → “P5 I2C” → “Yes” → “Finish” in order and restart your RPi later. Then the I2C module is started.

Type a command to check whether the I2C module is started:

```
lsmod | grep i2c
```

If the I2C module has been started, the following content will be shown:

```
pi@raspberrypi:~ $ lsmod | grep i2c
i2c_bcm2708          4770  0
i2c_dev              5859  0
pi@raspberrypi:~ $
```

Install I2C-Tools

Type the command to install I2C-Tools.

```
sudo apt-get install i2c-tools
```

Detect the address of I2C device with the following command:

```
i2cdetect -y 1
```



When you are using PCF8591, the result is as below:

```
pi@raspberrypi:~ $ i2cdetect -y 1
  0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00: -----
10: -----
20: -----
30: -----
40:          48
50: -----
60: -----
70: -----
```

Here, 48 (HEX) is the I2C address of ADC Module(PCF8591).

When you are using ADS, the result is as below:

```
pi@raspberrypi:~ $ i2cdetect -y 1
  0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00: -----
10: -----
20: -----
30: -----
40:          -- 4b --
50: -----
60: -----
70: -----
```

Here, 4b (HEX) is the I2C address of ADC Module (ADS7830).



Sketch 6.1.1 ADC

First, observe the result after running the sketch, and then learn about the code in detail.


1. Use Processing to open the file Sketch_06_1_1_ADC.

```
processing
```

```
~/Freenove_Kit/Processing/Sketches/Sketch_06_1_1_ADC/Sketch_06_1_1_ADC.pde
```

2. Click on "RUN" to run the code.

After the program is executed, Display Window shows the voltage value of the potentiometer and the ADC value. Rotate the potentiometer to change the voltage output by potentiometer.

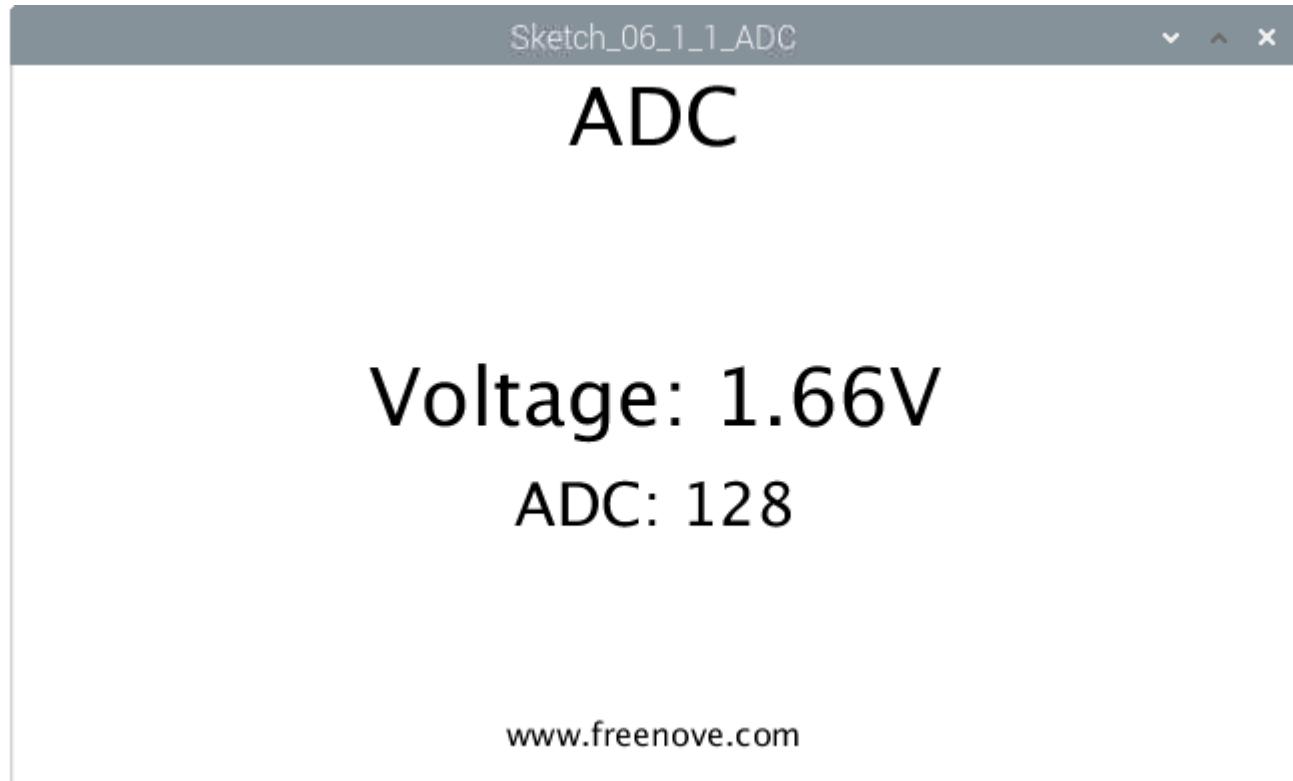

This project contains a lot of code files, and the core code is contained in the file Sketch_06_1_1_ADC. The other files only contain some custom classes.



The following is program code:

```
1 import processing.io.*;
2 //Create an object of class ADCDevice
3 ADCDevice adc = new ADCDevice();
4 void setup() {
5     size(640, 360);
6     if (adc.detectI2C(0x48)) {
7         adc = new PCF8591(0x48);
8     } else if (adc.detectI2C(0x4b)) {
9         adc = new ADS7830(0x4b);
10    } else {
11        println("Not found ADC Module!");
12        System.exit(-1);
13    }
14}
15 void draw() {
16    int adcValue = adc.analogRead(0);      //Read the ADC value of channel 0
17    float volt = adcValue*3.3/255.0;      //calculate the voltage
18    background(255);
19    titleAndSiteInfo();
20
21    fill(0);
22    textAlign(CENTER);      //set the text centered
23    textSize(30);
24    text("ADC: "+nf(adcValue, 3, 0), width / 2, height/2+50);
25    textSize(40);          //set text size
26    text("Voltage: "+nf(volt, 0, 2)+"V", width / 2, height/2);    //
27}
28 void titleAndSiteInfo() {
29    fill(0);
30    textAlign(CENTER);      //set the text centered
31    textSize(40);          //set text size
32    text("ADC", width / 2, 40);    //title
33    textSize(16);
34    text("www.freenove.com", width / 2, height - 20);    //site
35 }
```

The code of this project mainly uses PCF8591 class member function analogRead() to read ADC.

```
int adcValue = adc.analogRead(0); //Read the ADC value of channel 0  
float volt = adcValue*3.3/255.0; //calculate the voltage
```

About class ADCDevice, PCF8591, ADS7830:

class ADCDevice

This is a base class, and all ADC module classes are subclasses of it. It provides two basic member functions.

```
public int analogRead(int chn)
```

This is a unified function name. Different chips have different implement methods. Therefore, specific method is implemented in subclasses.

```
public boolean detectI2C(int addr)
```

Used to detect I2C device with a given address. If it exists, it returns true, otherwise it returns false.

class PCF8591 extends ADCDevice

This is a custom class that is used to operate the ADC and DAC of PCF8591.

```
public PCF8591(int addr)
```

Constructor, used to create a PCF8591 class object, parameters for the I2C PCF8591 device address.

```
public int analogRead(int chn)
```

Used to read ADC value of one channel of PCF8591, the parameter CHN indicates the channel number: 0,1,2,3.

```
public byte[] analogRead()
```

To read ADC values of all channels of PCF8591.

```
public void analogWrite(int data)
```

Write a DAC value to PCF8591.

class ADS7830 extends ADCDevice

This is a custom class that is used to operate the ADC of ADS7830.

```
public ADS7830(int addr)
```

Constructor, used to create a ADS7830 class object, parameters for the I2C ADS7830 device address.

```
public int analogRead(int chn)
```

Used to read ADC value of one channel of ADS7830, the parameter CHN indicates the channel number: 0,1,2,3,4,5,6,7.




Chapter 7 ADC & LED

In this chapter, we will combine ADC and PWM to control the brightness of LED.

Project 7.1 SoftLight

In this project, we will make a softlight, which uses a potentiometer to control the brightness of LED.


Component List

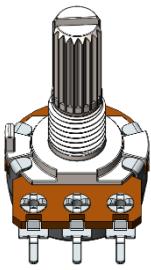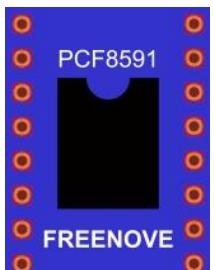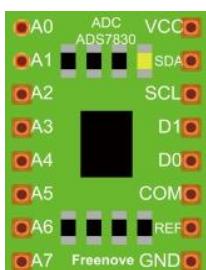Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	Jumper M/M x17 			
Rotary potentiometer x1 	ADC module x1  Or 	10kΩ x2 	220Ω x1 	LED x1 




Circuit with PCF8591

Schematic diagram

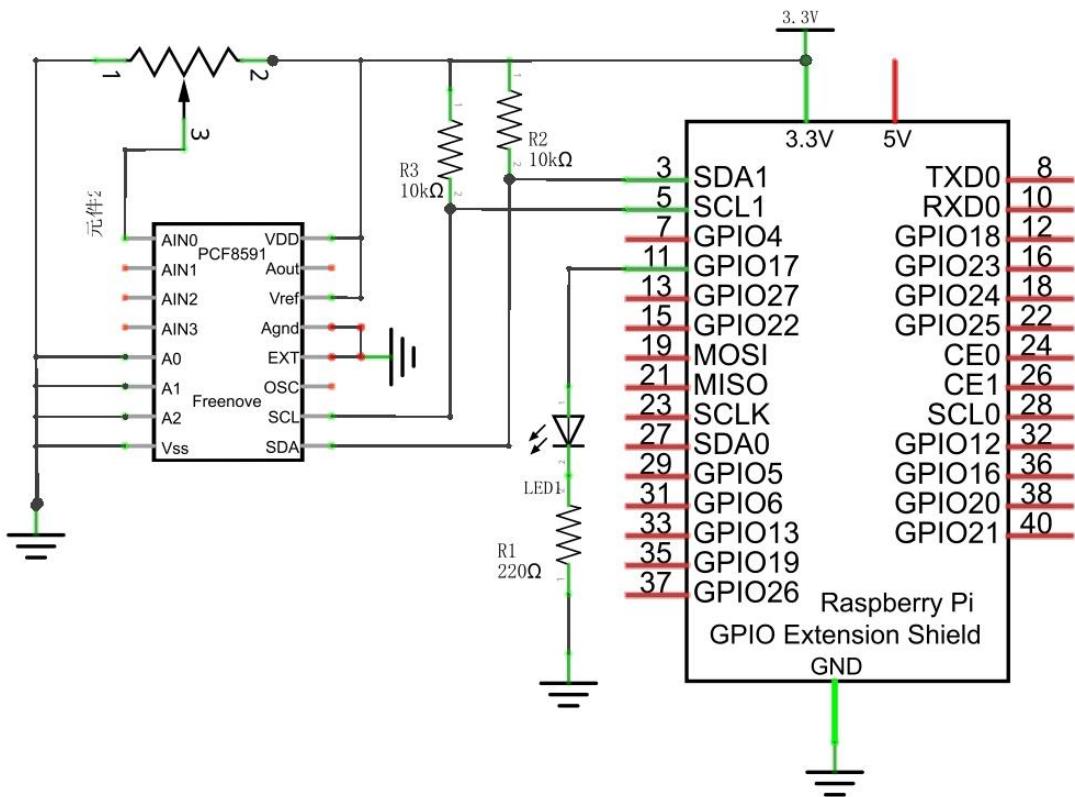


Hardware connection

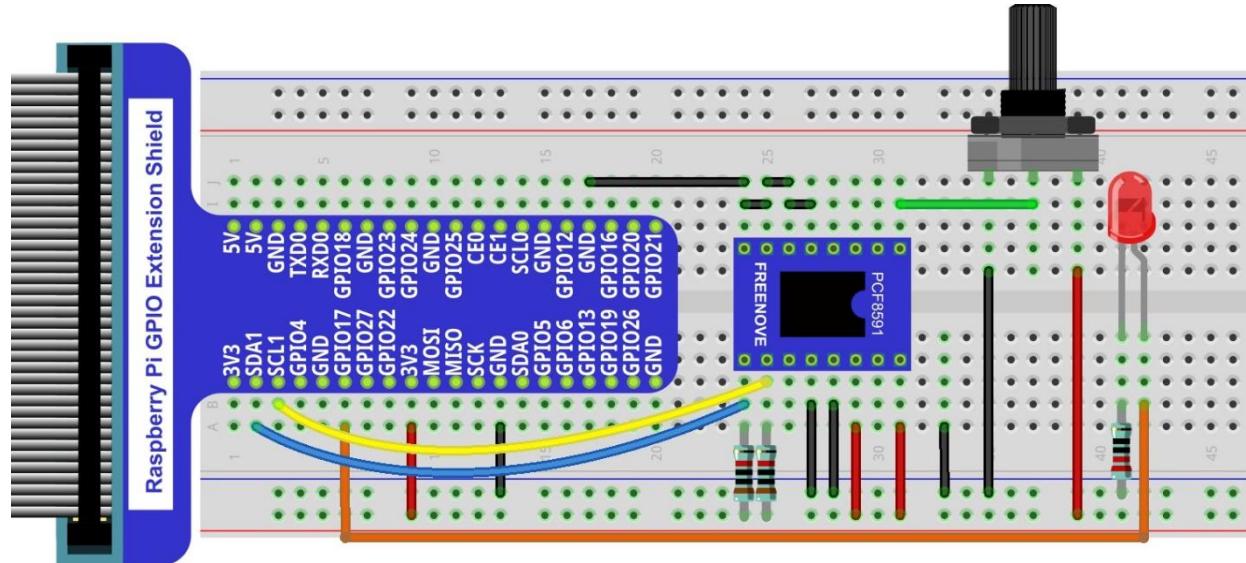


Circuit with ADS7830

Schematic diagram

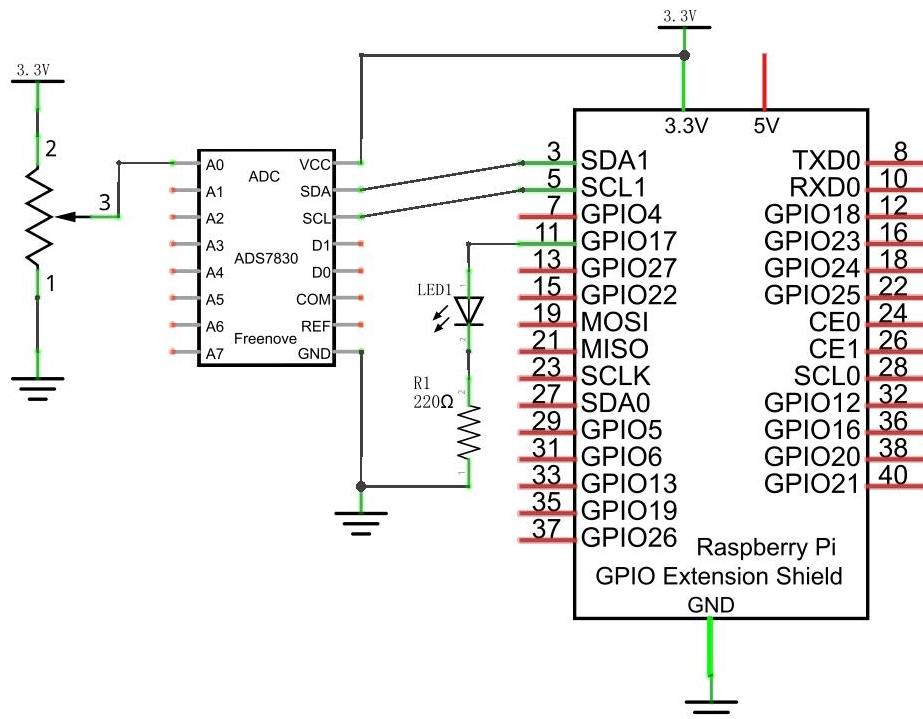

Hardware connection

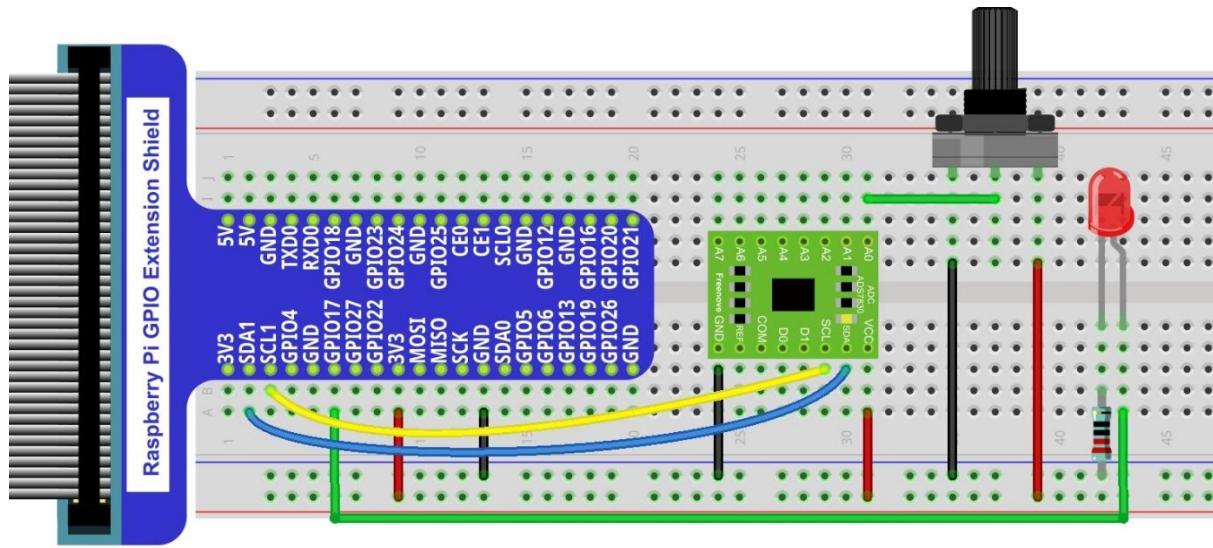



Sketch

If you did not [configure I2C](#), please refer to Chapter 6. If you did, please move on.

Sketch 7.1.1 SoftLight


First, observe the result after running the sketch, and then learn about the code in detail.

1. Use Processing to open the file Sketch_07_1_1_SoftLight.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_07_1_1_SoftLight/Sketch_07_1_1_SoftLi  
ght.pde
```

2. Click on "RUN" to run the code.

After the program is executed, the Display Window will show the voltage value of potentiometer, the ADC value and an LED pattern. Rotate potentiometer to change the voltage value and the brightness of the LED.

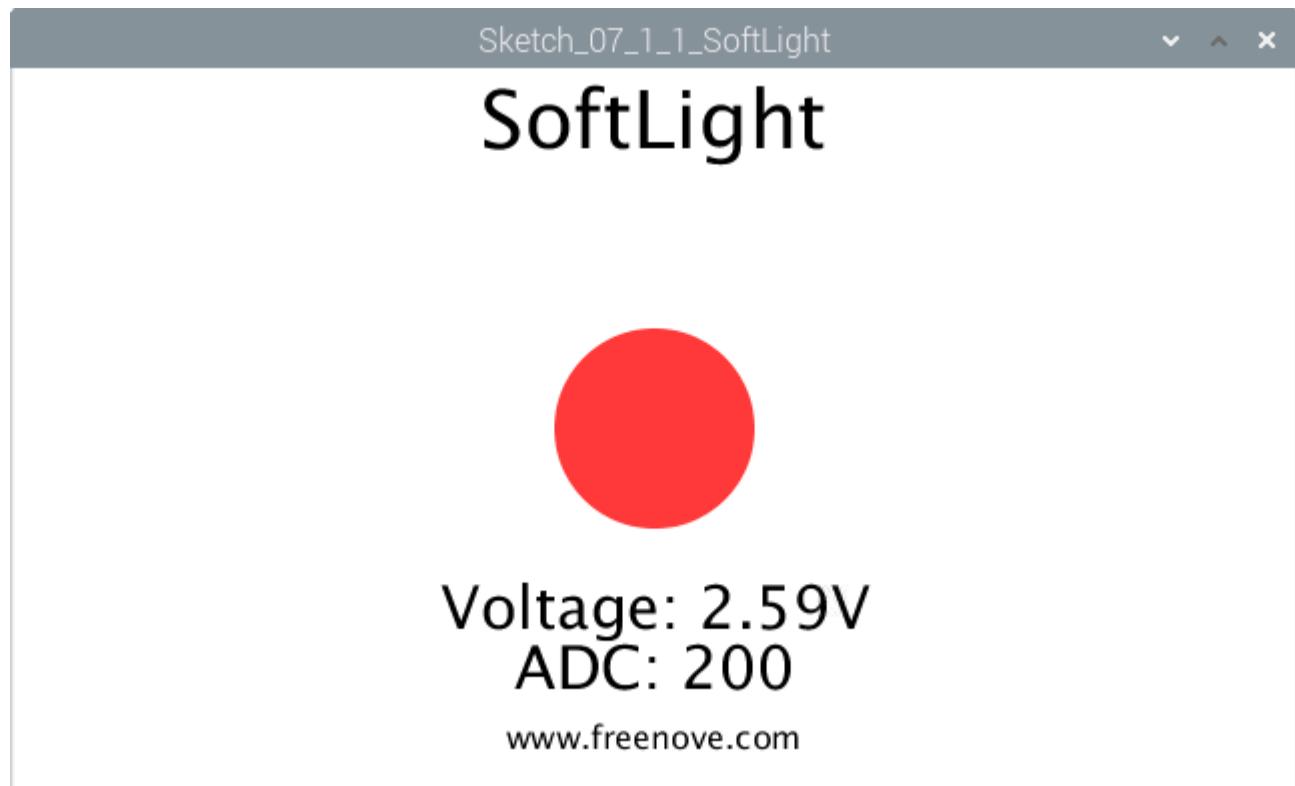

This project contains a lot of code files, and the core code is contained in the file Sketch_07_1_1_SoftLight. The other files only contain some custom classes.



The following is program code:

```

1 import processing.io.*;
2
3 int ledPin = 17;      //led
4 //Create an object of class ADCDevice
5 ADCDevice adc = new ADCDevice();
6 SOFTPWM p = new SOFTPWM(ledPin, 0, 100);
7 void setup() {
8     size(640, 360);
9     if (adc.detectI2C(0x48)) {
10         adc = new PCF8591(0x48);
11     } else if (adc.detectI2C(0x4b)) {
12         adc = new ADS7830(0x4b);
13     } else {
14         println("Not found ADC Module!");
15         System.exit(-1);
16     }
17 }
18 void draw() {
19     int adcValue = adc.analogRead(0);      //Read the ADC value of channel 0
20     float volt = adcValue*3.3/255.0;      //calculate the voltage
21     float dt = adcValue/255.0;
22     p.softPwmWrite((int)(dt*100)); //output the pwm
23     background(255);
24     titleAndSiteInfo();
25
26     fill(255, 255-dt*255, 255-dt*255); //cycle
27     noStroke(); //no border
28     ellipse(width/2, height/2, 100, 100);
29
30     fill(0);

```



```
31   textAlign(CENTER);    //set the text centered
32   textSize(30);
33   text("ADC: "+nfadcValue, 3, 0), width / 2, height/2+130);
34   text("Voltage: "+nfvolt, 0, 2)+"V", width / 2, height/2+100);    //
35 }
36 void titleAndSiteInfo() {
37   fill(0);
38   textAlign(CENTER);    //set the text centered
39   textSize(40);        //set text size
40   text("SoftLight", width / 2, 40);    //title
41   textSize(16);
42   text("www. freenove. com", width / 2, height - 20);    //site
43 }
```



In this project code, get the ADC value of the potentiometer, then map it into the PWM duty cycle of LED to control its brightness. In Display Window, the color filled in LED pattern changes to simulate the brightness change of LED.

```
int adcValue = adc.analogRead(0);    //Read the ADC value of channel 0
float volt = adcValue*3.3/255.0;    //calculate the voltage
float dt = adcValue/255.0;
p.softPwmWrite((int)(dt*100));    //output the pwm
```

Project 7.2 NightLamp

A Photoresistor is very sensitive to the amount of light present. We can take advantage of the characteristic to make a nightlight with the following function. When the ambient light is less (darker environment), the LED will automatically become brighter to compensate and when the ambient light is greater (brighter environment) the LED will automatically dim to compensate.


Component List

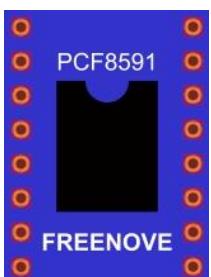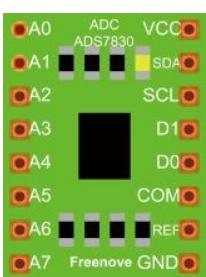Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	Jumper M/M
Photoresistor x1  ADC module x1   Or	10kΩ x3  220Ω x1  LED x1 


Circuit with PCF8591

The circuit of this experiment is similar to the one in the previous chapter. The only difference is that the input signal of the AIN0 pin of ADC is changed from a potentiometer to a combination of a photoresistor and a resistor.

Schematic diagram

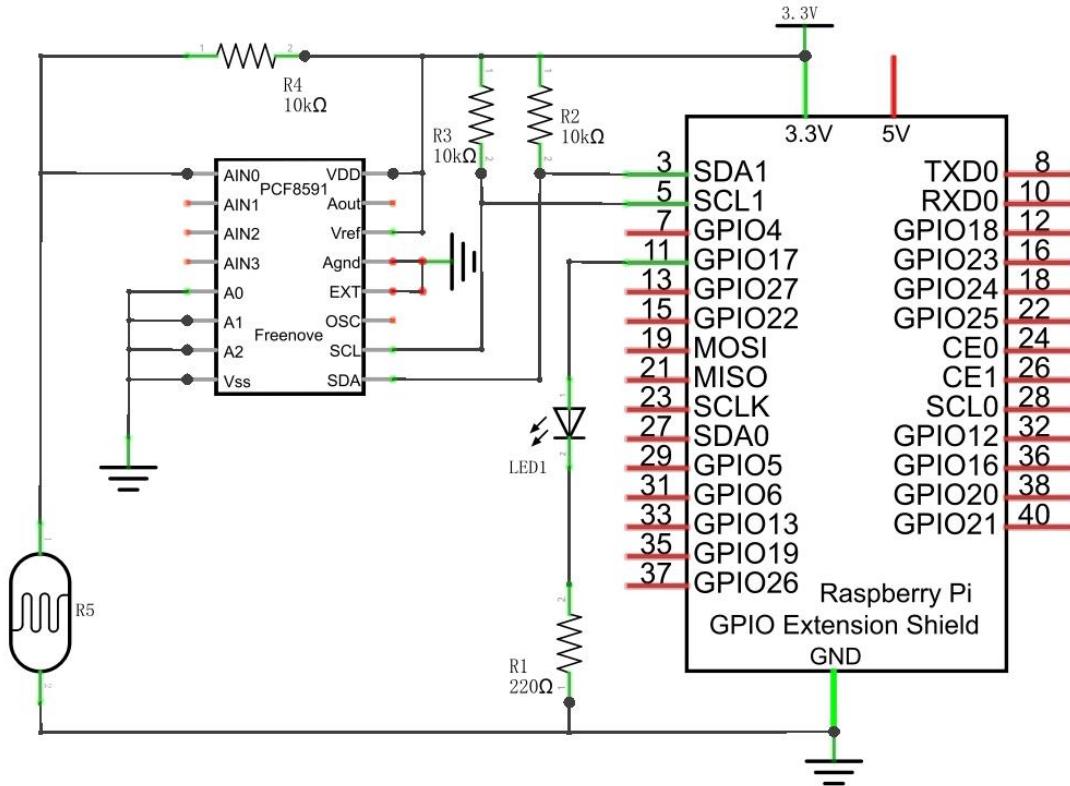


Hardware connection

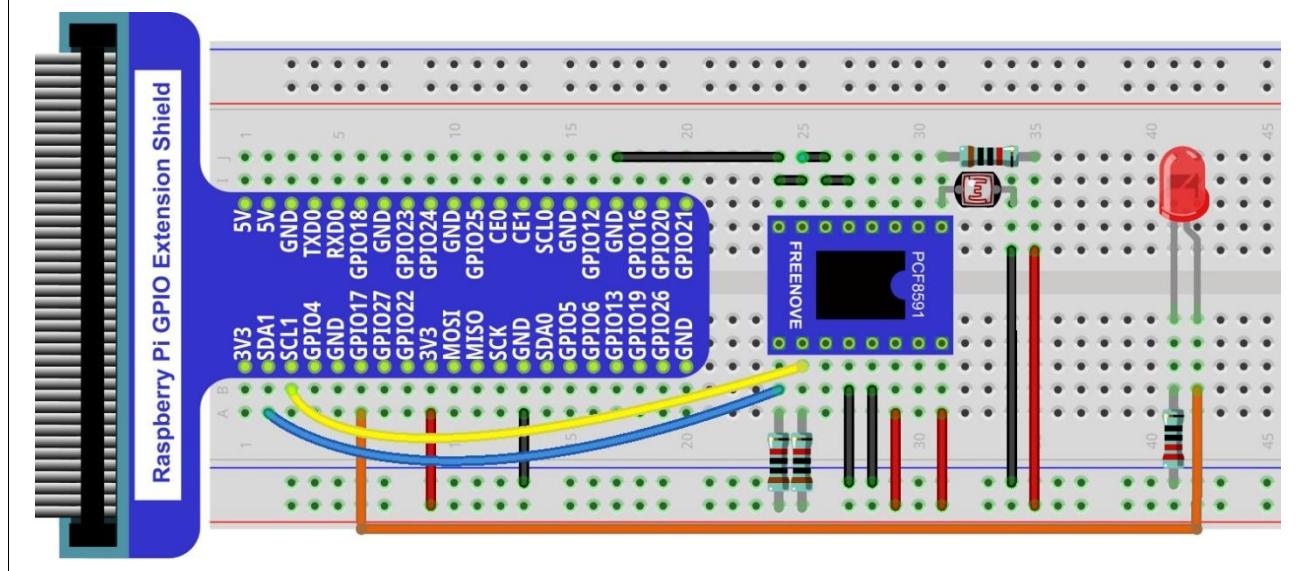


Circuit with ADS7830

The circuit of this experiment is similar to the one in last chapter. The only difference is that the input signal of the AIN0 pin of ADC is changed from a potentiometer to a combination of a photoresistor and a resistor.

Schematic diagram

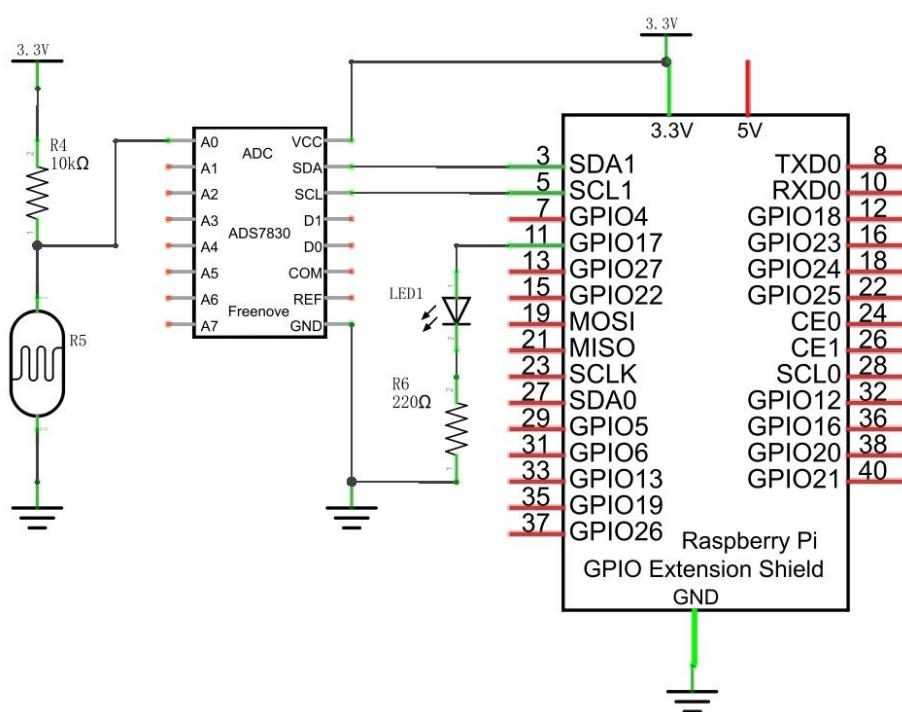

Hardware connection

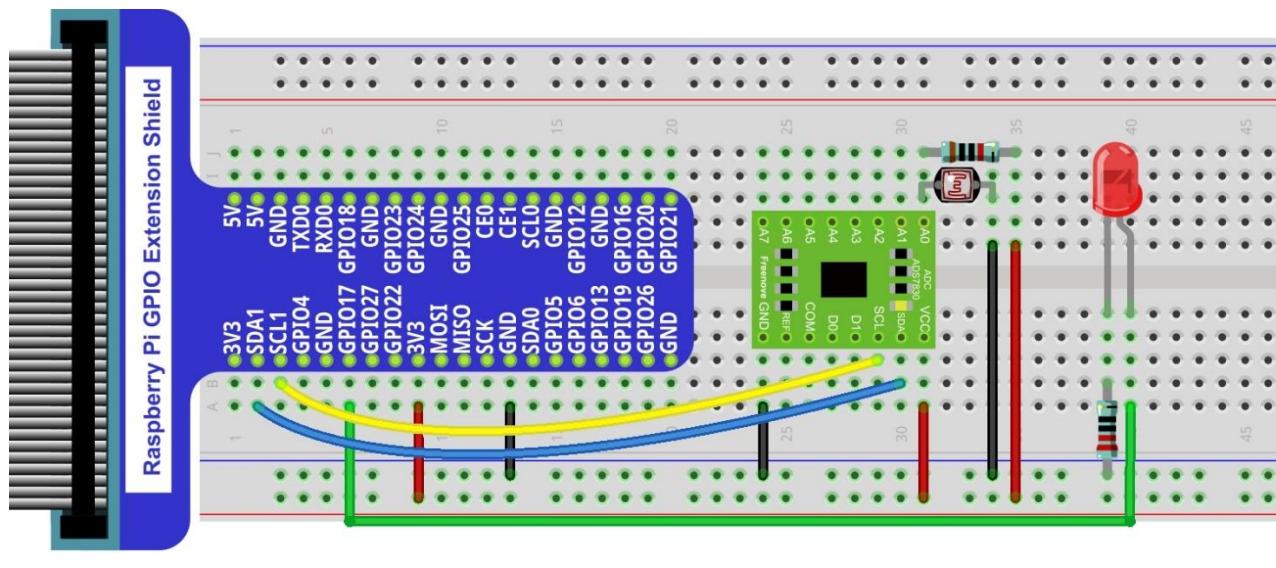

Sketch

The project code is the same as the previous section "SoftLight" except for the title.



Chapter 8 Thermistor

In this chapter, we will learn how to use a thermistor.

Project 8.1 Thermometer

In this project, we will use a thermistor to make a thermometer.

Component List

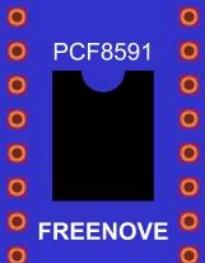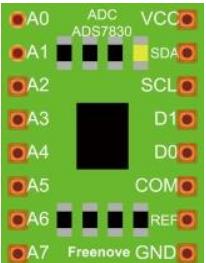Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	Jumper M/M
Thermistor x1	ADC module x1
	 <p>Or</p> 
	Resistor 10kΩ x3

Component knowledge

First Review the knowledge of thermistor. The relationship between resistance value and temperature of thermistor is:

$$R_t = R_n \cdot e^{(B \cdot (1/T - 1/T_n))}$$

Where:

R_t is the thermistor resistance under T₂ temperature;

R is the nominal resistance of thermistor under T₁ temperature;

EXP[n] is nth power of e;

B is for thermal index;


T₁, T₂ is Kelvin temperature (absolute temperature). Kelvin temperature=273.15+celsius temperature.

Parameters of the thermistor we use is: B=3950, R=10k, T₁=25.


Circuit with PCF8591

The circuit of this experiment is similar to the one in the previous chapter. The only difference is that the photoresistor is replaced by a thermistor.

Schematic diagram

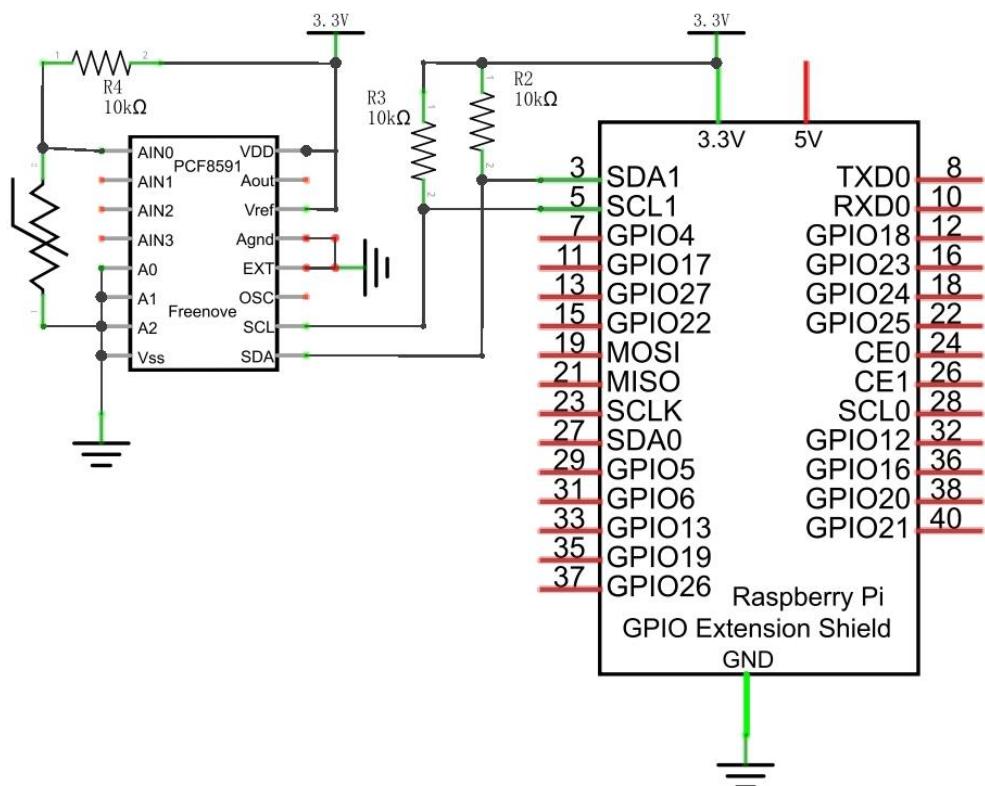

Hardware connection

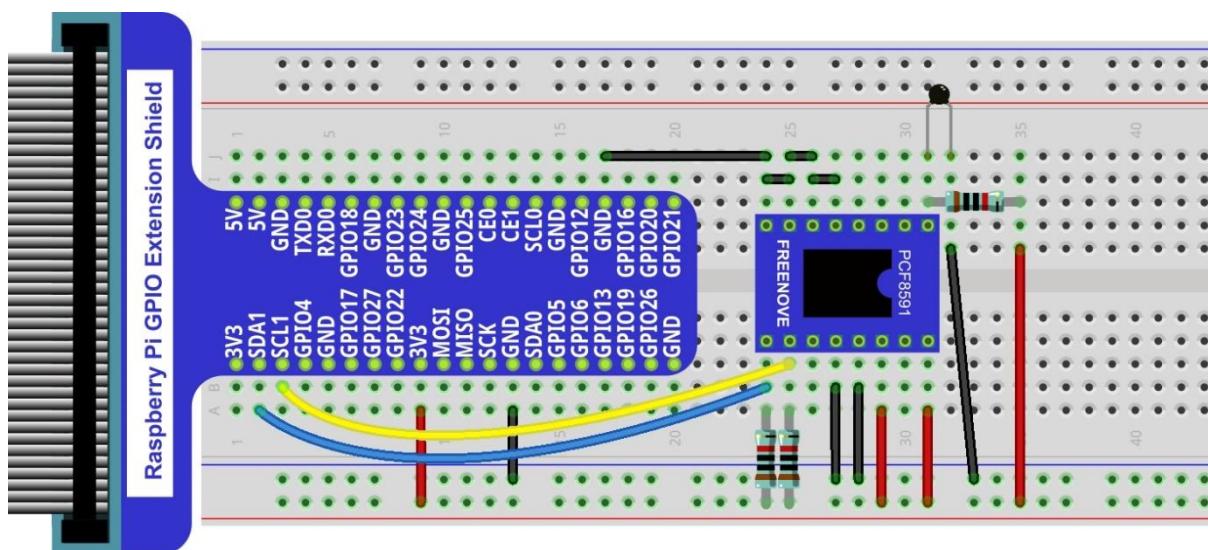


The formula for calculating temperature according to the circuit is shown below:

$$T_2 = 1/(1/T_1 + \ln(R_t/R)/B)$$


Circuit with ADS7830

The circuit of this project is similar to the one in the previous chapter. The only difference is that the photoresistor is replaced by a thermistor.

Schematic diagram

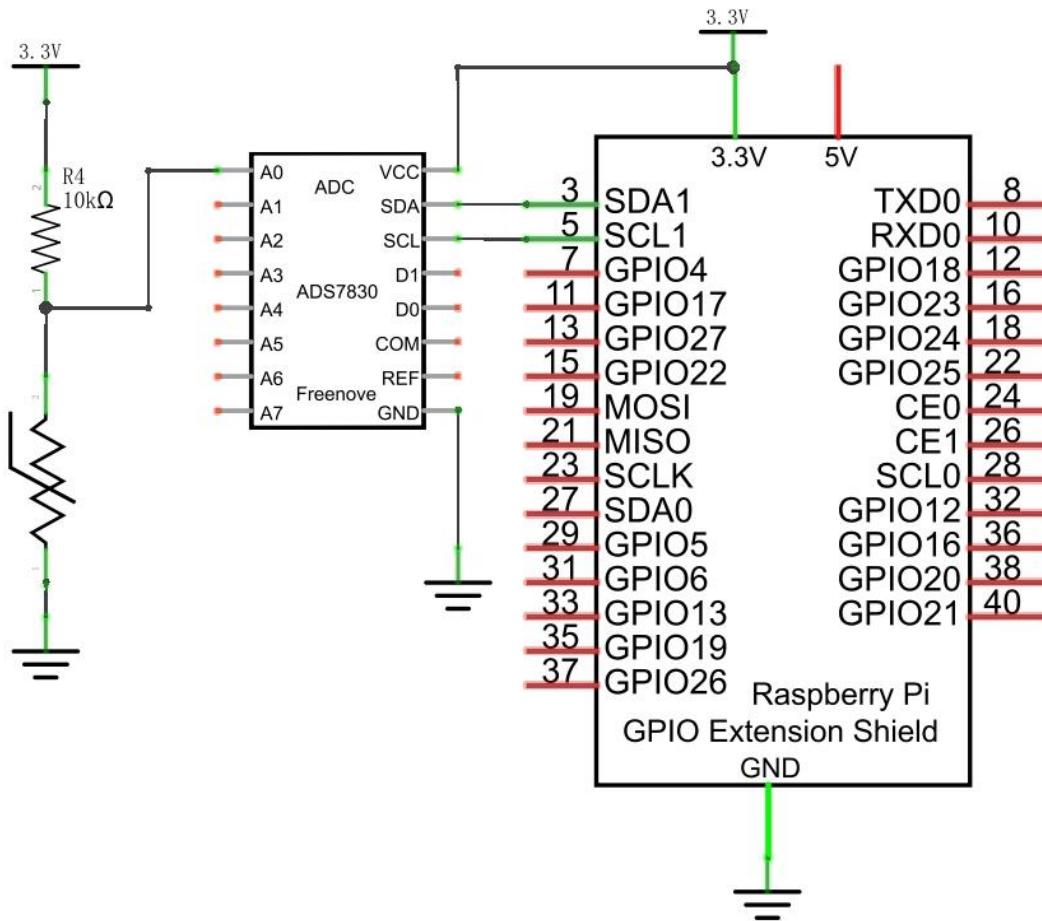

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

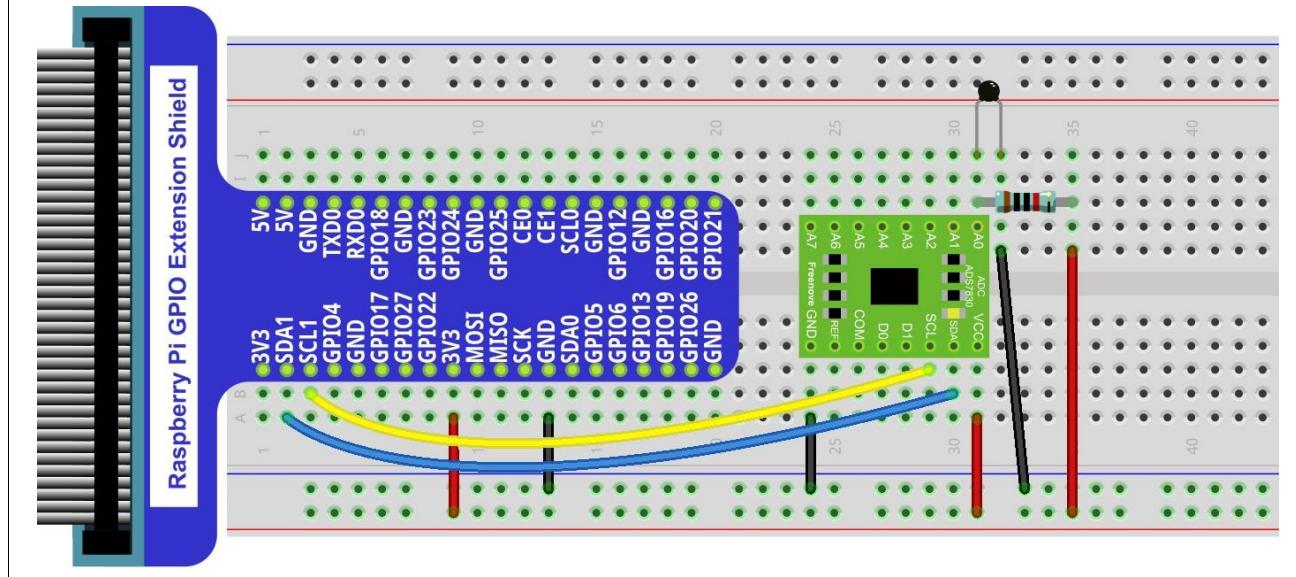

Sketch

Sketch 8.1.1 Thermometer


First, observe the result after running the sketch, and then learn about the code in detail.

1. Use Processing to open the file Sketch_08_1_1_Thermometer.


```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_08_1_1_Thermometer/Sketch_08_1_1_Thermometer.pde
```

2. Click on "RUN" to run the code.

After the program is executed, the Display Window will show the current temperature, the ADC value and the voltage value.

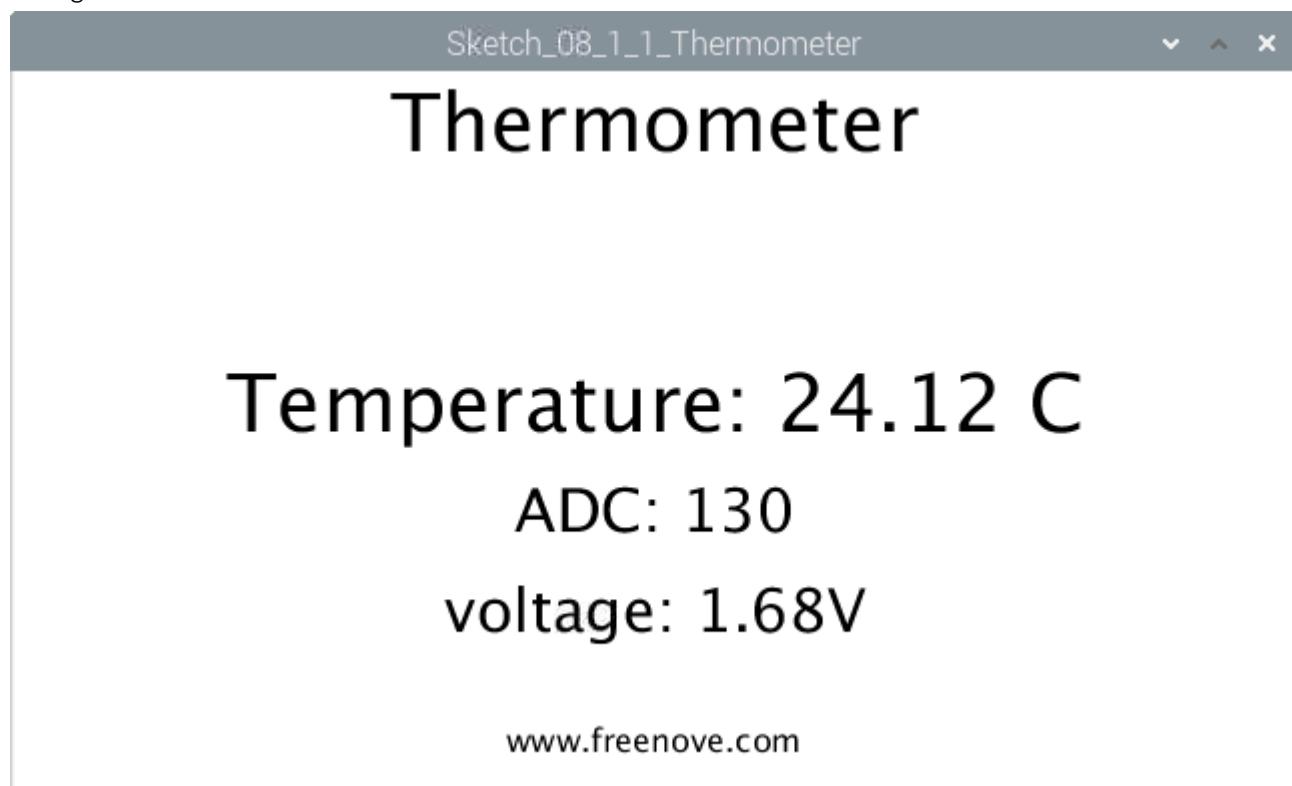

This project contains a lot of code files, and the core code is contained in the file Sketch_08_1_1_Thermometer. The other files only contain some custom classes.

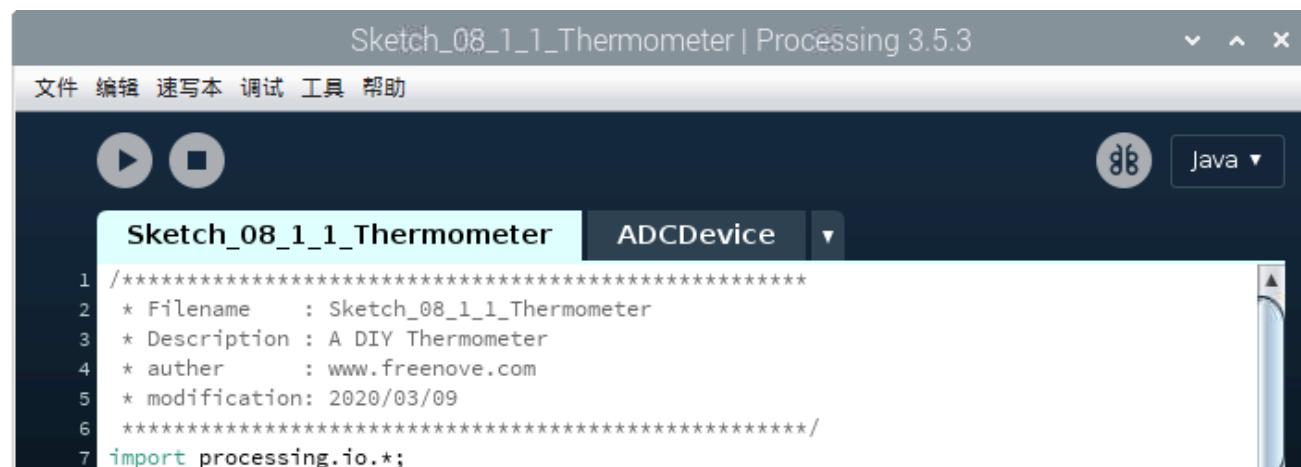

The following is program code:

```
1 import processing.io.*;
2 //Create an object of class ADCDevice
3 ADCDevice adc = new ADCDevice();
4 void setup() {
5     size(640, 360);
6     if (adc.detectI2C(0x48)) {
7         adc = new PCF8591(0x48);
8     } else if (adc.detectI2C(0x4b)) {
9         adc = new ADS7830(0x4b);
10    } else {
11        println("Not found ADC Module!");
12        System.exit(-1);
13    }
14}
15 void draw() {
16    int adcValue = adc.analogRead(0);      //Read the ADC value of channel 0
17    float volt = adcValue*3.3/255.0;      //calculate the voltage
18    float tempK, tempC, Rt;              //
19    Rt = 10*volt / (3.3-volt);          //calculate the resistance value of thermistor
20    tempK = 1/(1/(273.15+25) + log(Rt/10)/3950); //calculate temperature(Kelvin)
21    tempC = tempK - 273.15;             // calculate temperature(Celsius)
22
23    background(255);
24    titleAndSiteInfo();
25
26    fill(0);
27    textAlign(CENTER);    //set the text centered
28    textSize(30);
29    text("ADC: "+nf(adcValue, 0, 0), width / 2, height/2+50);
30    textSize(30);
31    text("voltage: "+nf(volt, 0, 2)+"V", width / 2, height/2+100);
32    textSize(40);           //set text size
33    text("Temperature: "+nf(tempC, 0, 2)+" C", width / 2, height/2);   //
34}
35 void titleAndSiteInfo() {
36    fill(0);
37    textAlign(CENTER);    //set the text centered
38    textSize(40);         //set text size
39    text("Thermometer", width / 2, 40);    //title
40    textSize(16);
41    text("www.freenove.com", width / 2, height - 20); //site
42}
```

In this project code, first read ADC, and then calculate the current temperature according to the Ohm's law and temperature formula mentioned before, finally display them on Display Window.

```
int adc = pcf.analogRead(0);      //Read the ADC value of channel 0
float volt = adc*3.3/255.0;      //calculate the voltage
float tempK, tempC, Rt;          // 
Rt = 10*volt / (3.3-volt);      //calculate the resistance value of thermistor
tempK = 1/(1/(273.15+25) + log(Rt/10)/3950); //calculate temperature(Kelvin)
tempC = tempK - 273.15;         //calculate temperature(Celsius)
```


Chapter 9 I2C-LCD1602

In this chapter, we will learn a display screen, LCD1602.

Project 9.1 LCD

In the project, the current time and date will be displayed on the LCD1602 and Display Window.


Component List

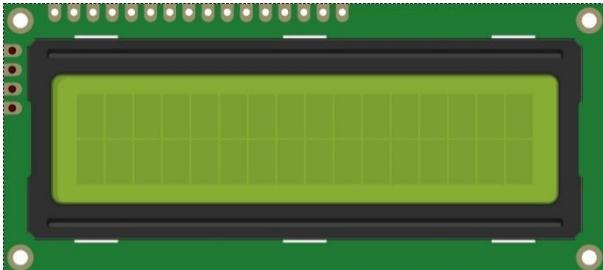Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1 I2C LCD1602 Module x1	Jumper M/M x4
	


Circuit

Note that the power supply for I2CLCD1602 in this circuit is 5V.

Schematic diagram

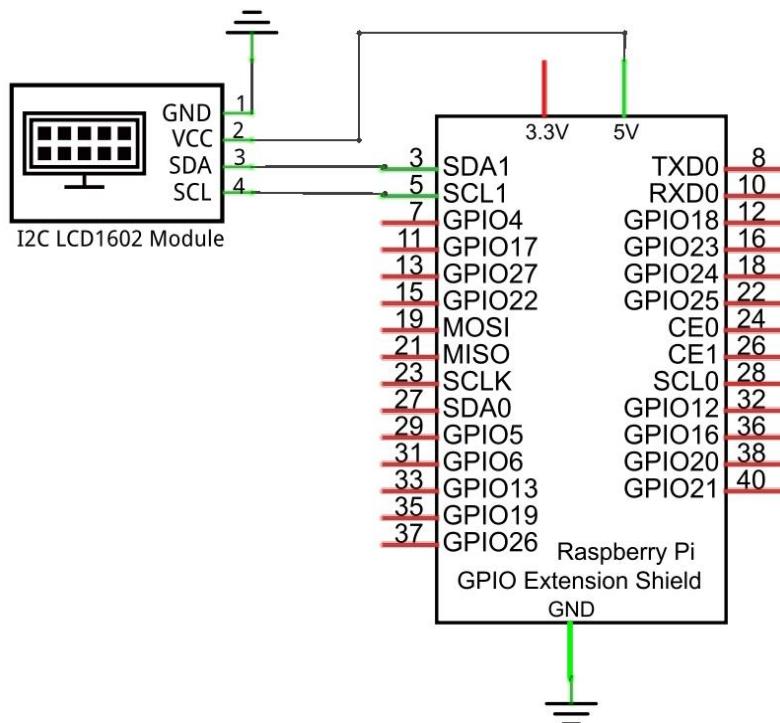

Hardware connection

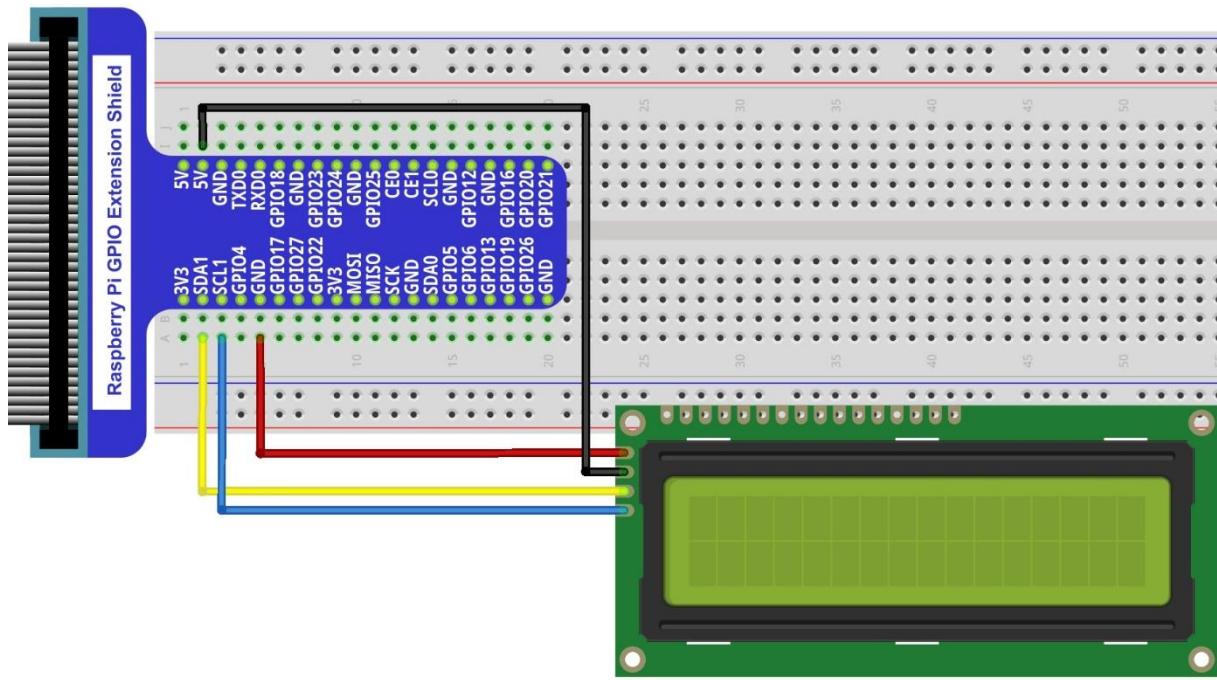



Sketch

Sketch 9.1.1 LCD

First observe the results of the code and the phenomenon, and then learn the code in detail.

1. Use Processing to open the file Sketch_09_1_1_LCD.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_09_1_1_LCD/Sketch_09_1_1_LCD.pde
```

2. Click on "RUN" to run the code.

After the program is executed, both LCD in the circuit and the Display Window will show the current time and date.



This project contains a lot of code files, and the core code is contained in the file Sketch_09_1_1_LCD. The other files only contain some custom classes.



The following is program code:

```
1 import processing.io.*;
2 //Create a object of class PCF8574
3 PCF8574 pcf = new PCF8574(0x27);
4 Freenove_LCD1602 lcd; //Create a lcd object
5 String time = "";
6 String date = "";
7 void setup() {
8     size(640, 360);
9     lcd = new Freenove_LCD1602(pcf);
10    frameRate(2); //set display window frame rate for 2 HZ
11 }
12 void draw() {
13     background(255);
14     titleAndSiteInfo();
15     //get current time
16     time = nf(hour(), 2, 0) + ":" + nf(minute(), 2, 0) + ":" + nf(second(), 2, 0);
17     //get current date
18     date = nf(day(), 2, 0)+"/"+nf(month(), 2, 0)+"/"+nf(year(), 2, 0);
19     lcd.position(4, 0); //show time on the lcd display
20     lcd.puts(time);
21     lcd.position(3, 1); //show date on the lcd display
22     lcd.puts(date);
23     showTime(time, date); //show time/date on the display window
24 }
25 void showTime(String time, String date) {
26     fill(0);
27     textAlign(CENTER, CENTER);
28     textSize(50);
29     text(time, width/2, height/2);
30     textSize(30);
31     text(date, width/2, height/2+50);
32 }
33 void titleAndSiteInfo() {
34     fill(0);
35     textAlign(CENTER); //set the text centered
36     textSize(40); //set text size
37     text("I2C-LCD1602", width / 2, 40); //title
38     textSize(16);
39     text("www.freenove.com", width / 2, height - 20); //site
40 }
```



First create a PCF8574 class object “pcf”, and take “pcf” as a parameter to create an LCD1602 class object. And then define the variable “time” to store date and time. Display window needs not refresh frequently. Therefore, the frame rate can be set to 1Hz or 2Hz.

```
PCF8574 pcf = new PCF8574(0x27);
Freenove_LCD1602 lcd; //Create a lcd object
String time = "";
String date = "";
void setup() {
    size(640, 360);
    lcd = new Freenove_LCD1602(pcf);
    frameRate(2); //set display window frame rate for 2 HZ
}
```

In the function draw(), get the current time and date, and display them on the LCD1602 and Display Window.

```
void draw() {
    background(255);
    titleAndSiteInfo();
    //get current time
    time = nf(hour(), 2, 0) + ":" + nf(minute(), 2, 0) + ":" + nf(second(), 2, 0);
    //get current date
    date = nf(day(), 2, 0) + "/" + nf(month(), 2, 0) + "/" + nf(year(), 2, 0);
    lcd.position(4, 0); //show time on the lcd display
    lcd.puts(time);
    lcd.position(3, 1); //show date on the lcd display
    lcd.puts(date);
    showTime(time, date); //show time/date on the display window
}
```

Reference

class PCF8574

This is a custom class that is used to control the integrated circuit PCF8574.

```
public PCF8574(int addr)
```

Constructor, used to create a PCF8574 class object. The parameter represents the I2C device address of PCF8574.

```
public int digitalRead(int pin)
```

Used to read the value(HIGH/LOW) of one of the ports.

```
public int readByte()
```

Used to read values of all ports.

```
public void digitalWrite(int pin, int val)
```

Write data(HIGH/LOW) to a port.

```
public void writeByte(int data)
```

Write data to all ports.

class Freenove LCD

This is a custom class that is currently only used to control the I2C-LCD1602 connected to PCF8574.

```
public Freenove_LCD1602(PCF8574 ipcf)
```

Constructor, used to create Freenove_LCD1602 class object. The parameter is for PCF8574 class object.

```
public void putChar(char data)
```

Write a character to the LCD screen.

```
public void puts(String str)
```

Write a string to the LCD screen.

```
public void display(boolean state)
```

Turn on/off LCD.

```
public void lcdCursor(boolean state)
```

Turn on/off Cursor.

```
public void cursorBlink(boolean state)
```

Turn on/off Cursor Blink.

```
public void position(int x, int y)
```

Set the location of Cursor.

```
public void home()
```

Set the Cursor to home.

```
public void lcdClear()
```

Clear the screen.

```
public void backLightON() & public void backLightOFF()
```

Turn on/off the backlight.

```
public void scrollDisplayLeft() & public void scrollDisplayRight()
```

Shift screen of a unit to left/right.

```
public void leftToRight() & public void rightToLeft()
```

Set text direction to be from left to right / from right to left.

```
public void autoScroll() & public void noAutoScroll()
```

Automatic shifting screen/turn off automatic shifting screen.






App 1 Oscilloscope

We have used the ADC module to read the voltage of potentiometer to achieve the function of a voltmeter before. In this chapter, we will make a more complex virtual instrument, oscilloscope. Oscilloscope is a widely used electronic measuring instrument. It can get the electrical signals that cannot be observed directly into visible images to facilitate the analysis and study of various electrical signals changing process.

App 1.1 Oscilloscope

Now, let's make an oscilloscope.


Component List

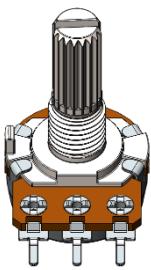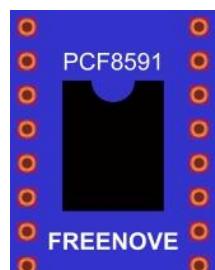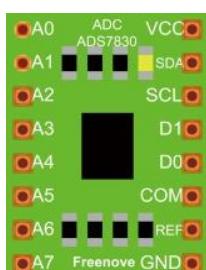Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	Jumper M/M 
Rotary potentiometer x1 	ADC module x1  or  Resistor 10kΩ x2 


Circuit with PCF8591

Note that the power supply voltage of ADC module in this circuit is 5V.

Schematic diagram

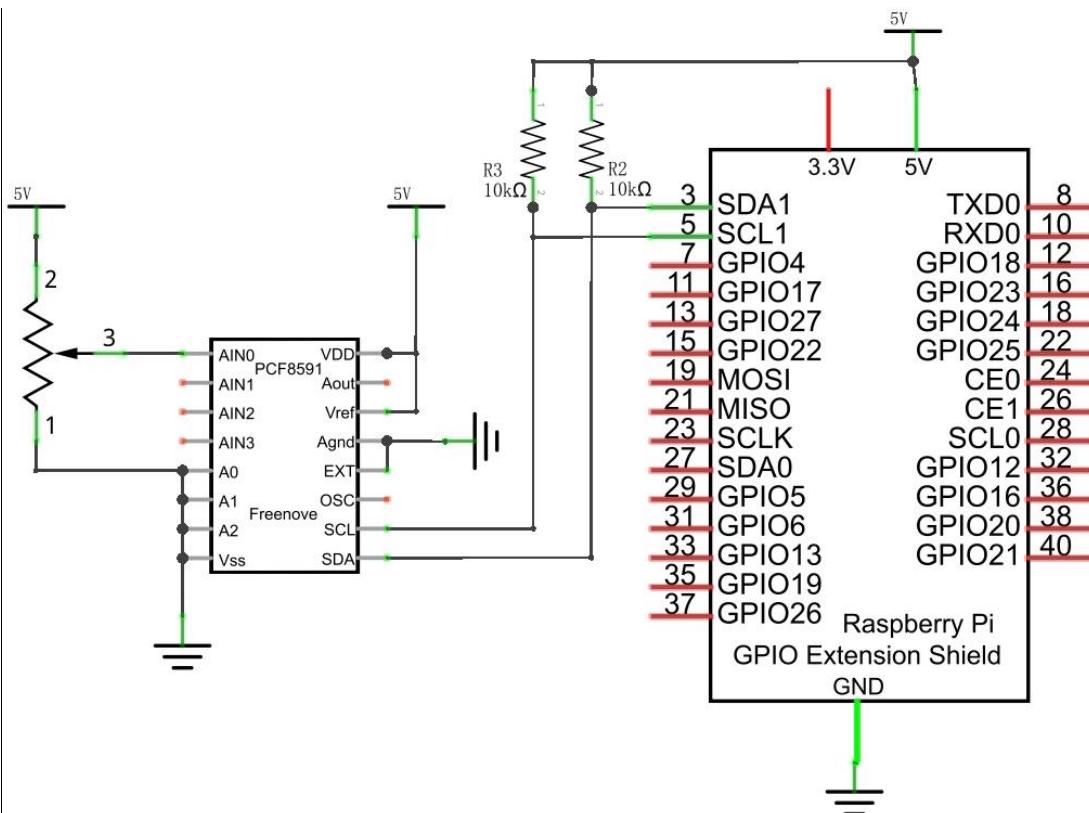


Hardware connection

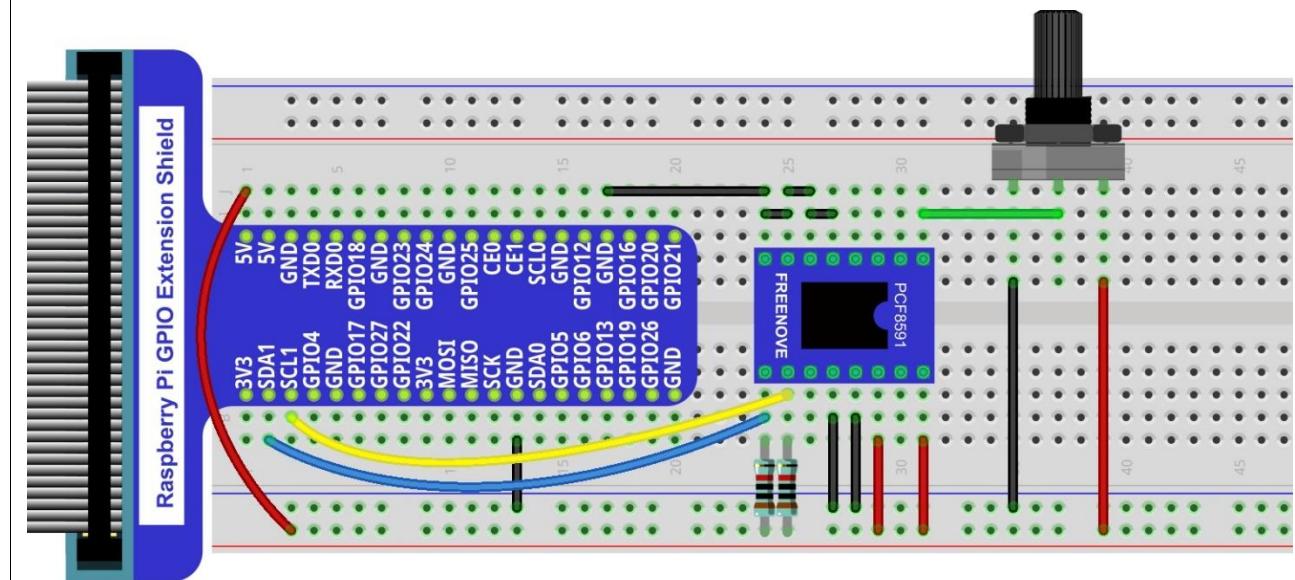


Circuit with ADS7830

Note that the power supply voltage of ADC module in this circuit is 5V.

Schematic diagram

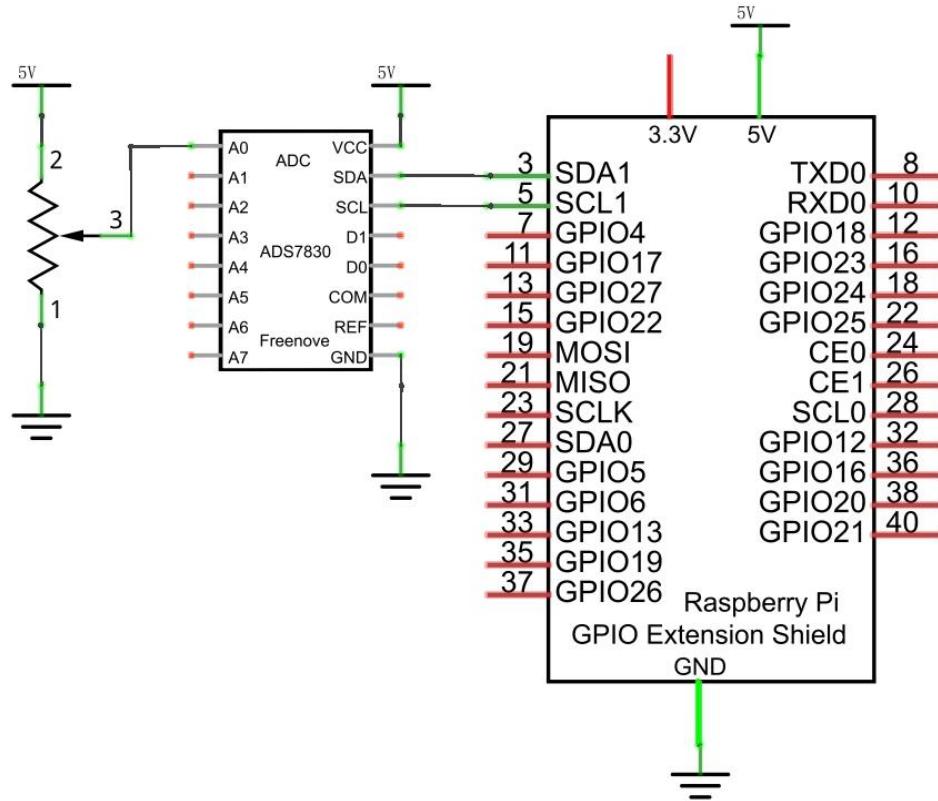

Hardware connection

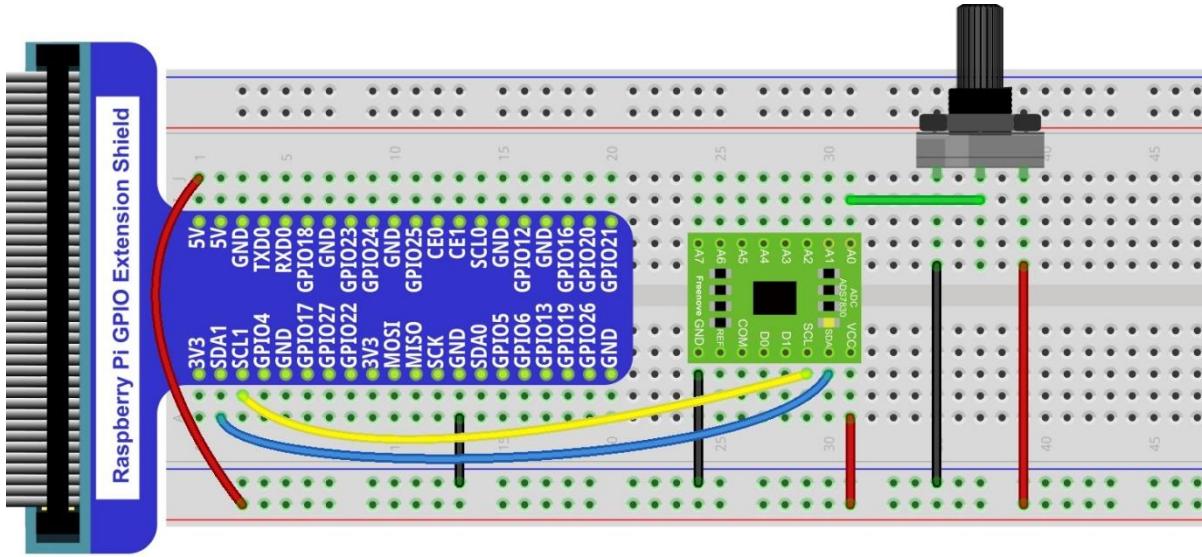

Sketch


Sketch 1.1.1 Oscilloscope

1. Use Processing to open the file Sketch_01_1_1_Oscilloscope.

```
processing  
~/Freenove_Kit/Processing/Apps/App_01_1_1_Oscilloscope/App_01_1_1_Oscilloscope.  
pde
```

2. Click on "RUN" to run the code.

After the program is executed, Display Window displays as follows. Rotating potentiometer can make the following waveform.

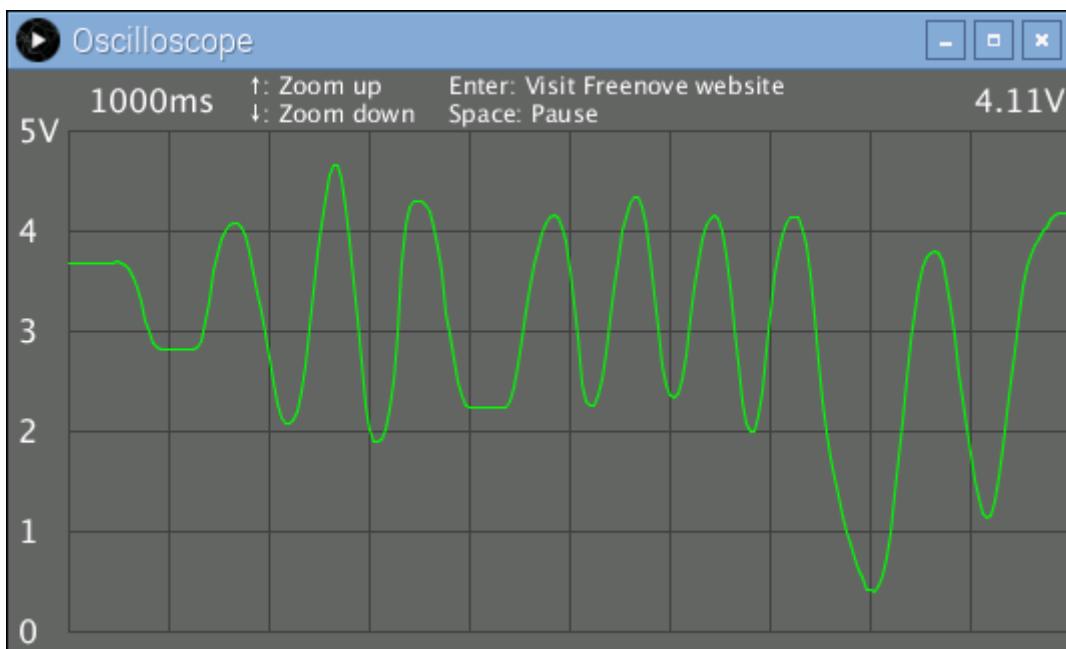

The left side of the software interface is a voltage scale, which is used to indicate the voltage of the waveform. The "1000ms" on top left corner is the time of a square, and you can press " \uparrow " and " \downarrow " key on keyboard to adjust it.

The "0.00V" on top right corner is the voltage value of current signal.

You can press the space bar on keyboard to pause the display of waveform, which is easy to view and analysis.

We believe that with the help of this oscilloscope, you can have a more intuitive understanding of the actual work of some electronic circuits. It will help you complete the project and facilitate troubleshooting.. You can export this sketch to an application used as a tool.



App 2 Snake Game

In this chapter, we will play a classic game, snake.

App 2.1 Snake Game


Now, let's create and experience our own game.

Component List


Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	Resistor 10KΩ x4	Push button x4
Jumper M/M x12		

Circuit

Schematic diagram

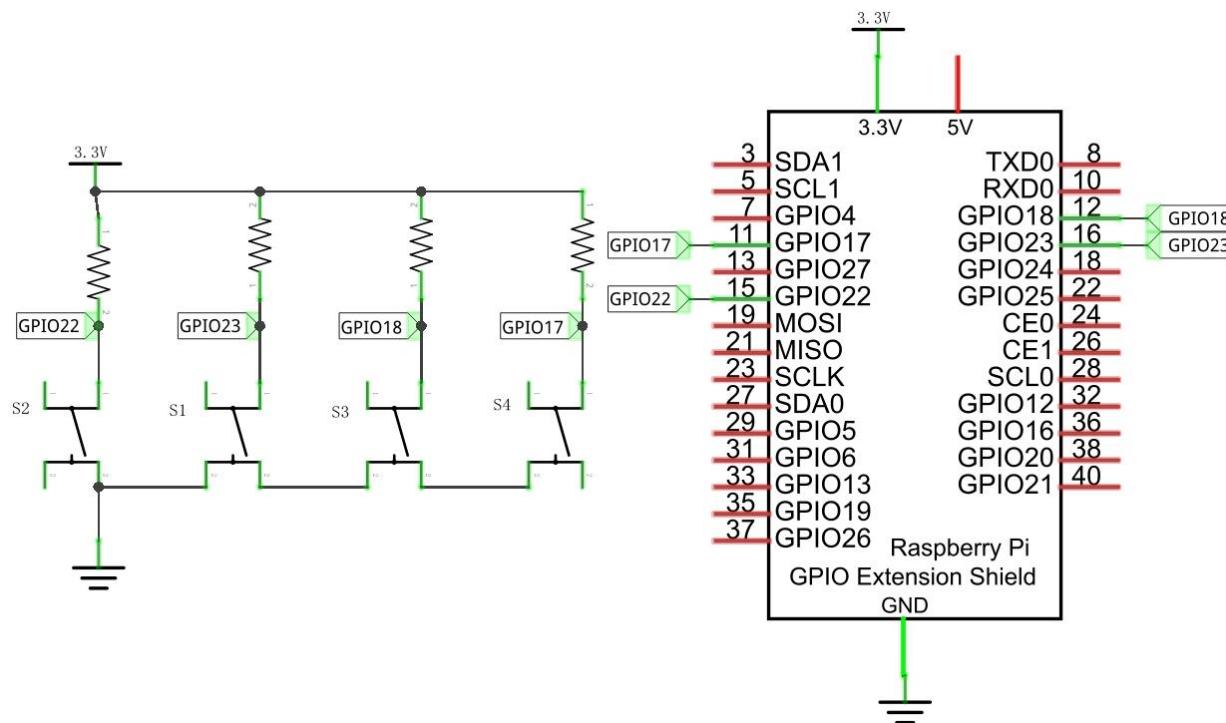

Hardware connection

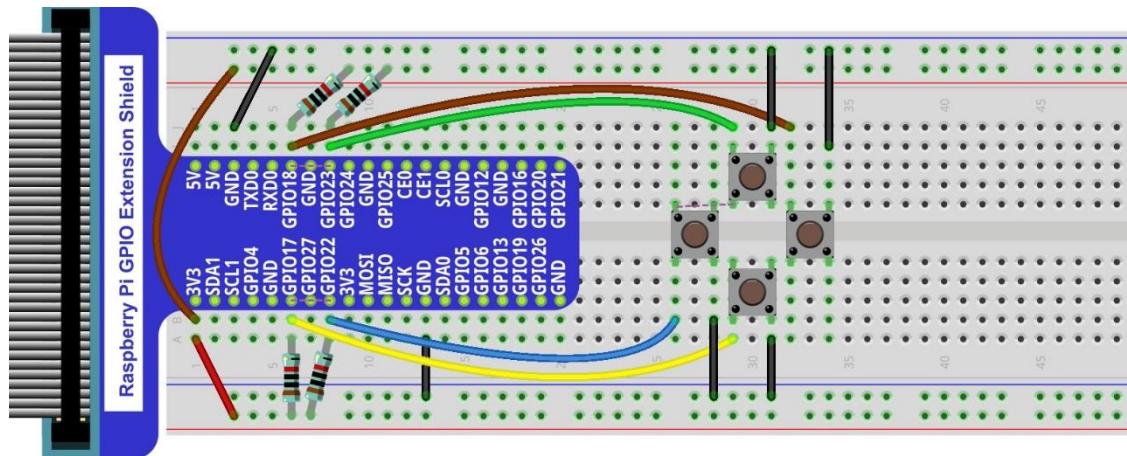



Sketch

Sketch 2.1.1 SnakeGame


1. Use Processing to open the file Sketch_02_1_1_SnakeGame.

```
processing
```


```
~/Freenove_Kit/Processing/Apps/App_02_1_1_SnakeGame/App_02_1_1_SnakeGame.pde
```

2. Click on "RUN" to run the code.


After the program is executed, Display Window displays as below.

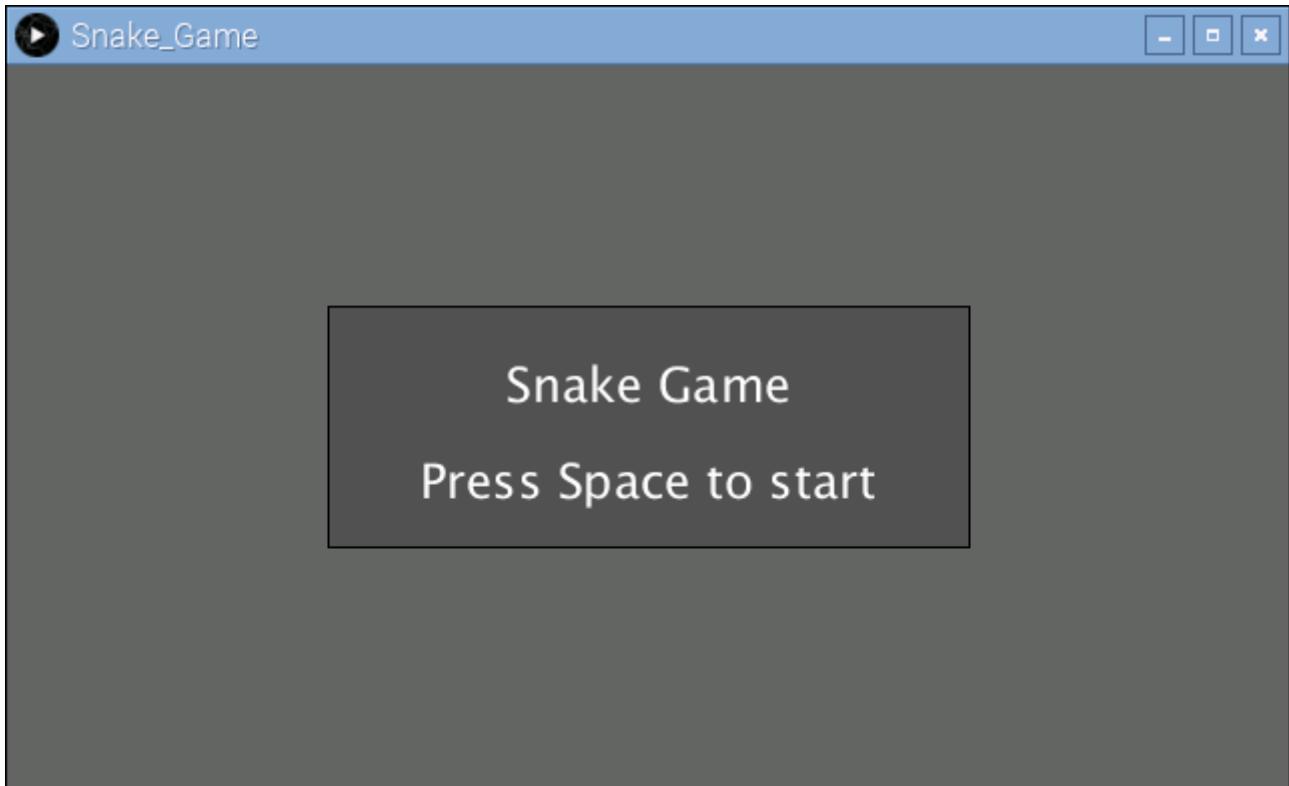


Pressing the space can start the game:

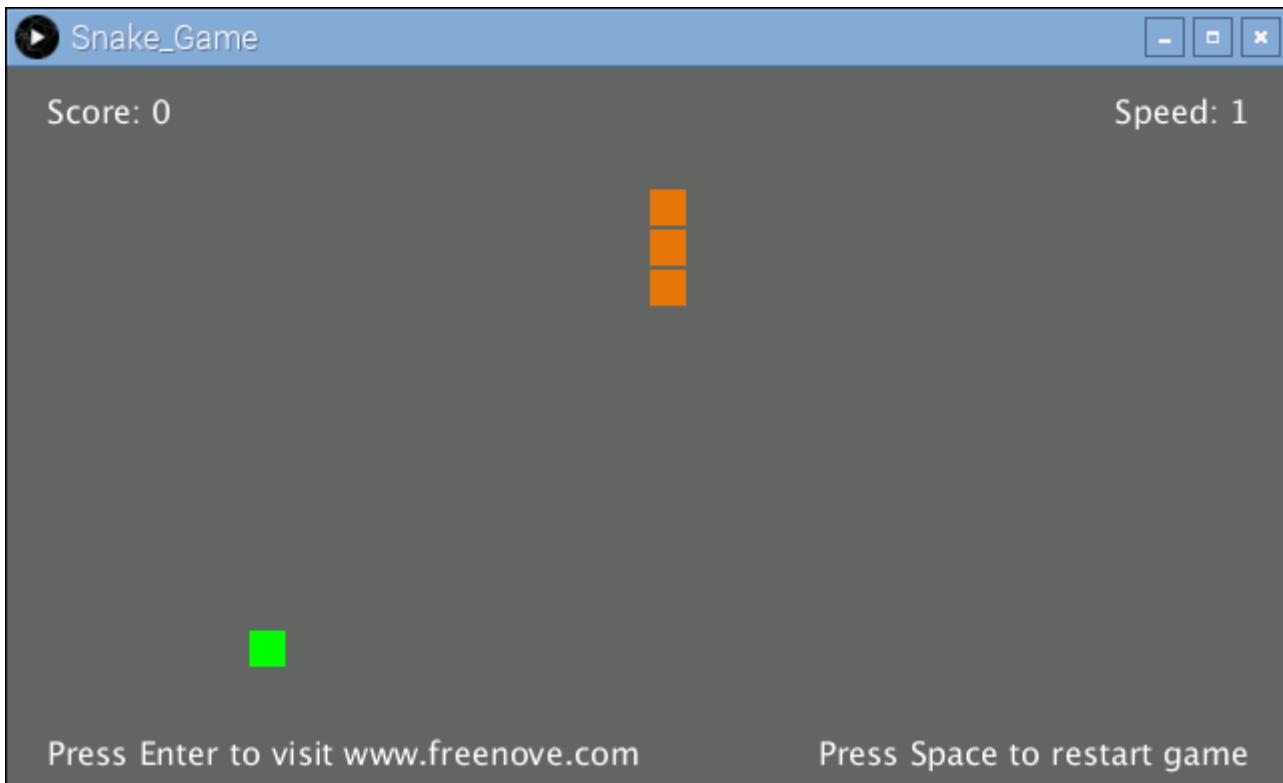

You can control the movement direction of the snake through the four buttons in circuit or four arrow keys on the keyboard. The rules are the same as the classic Snake game:

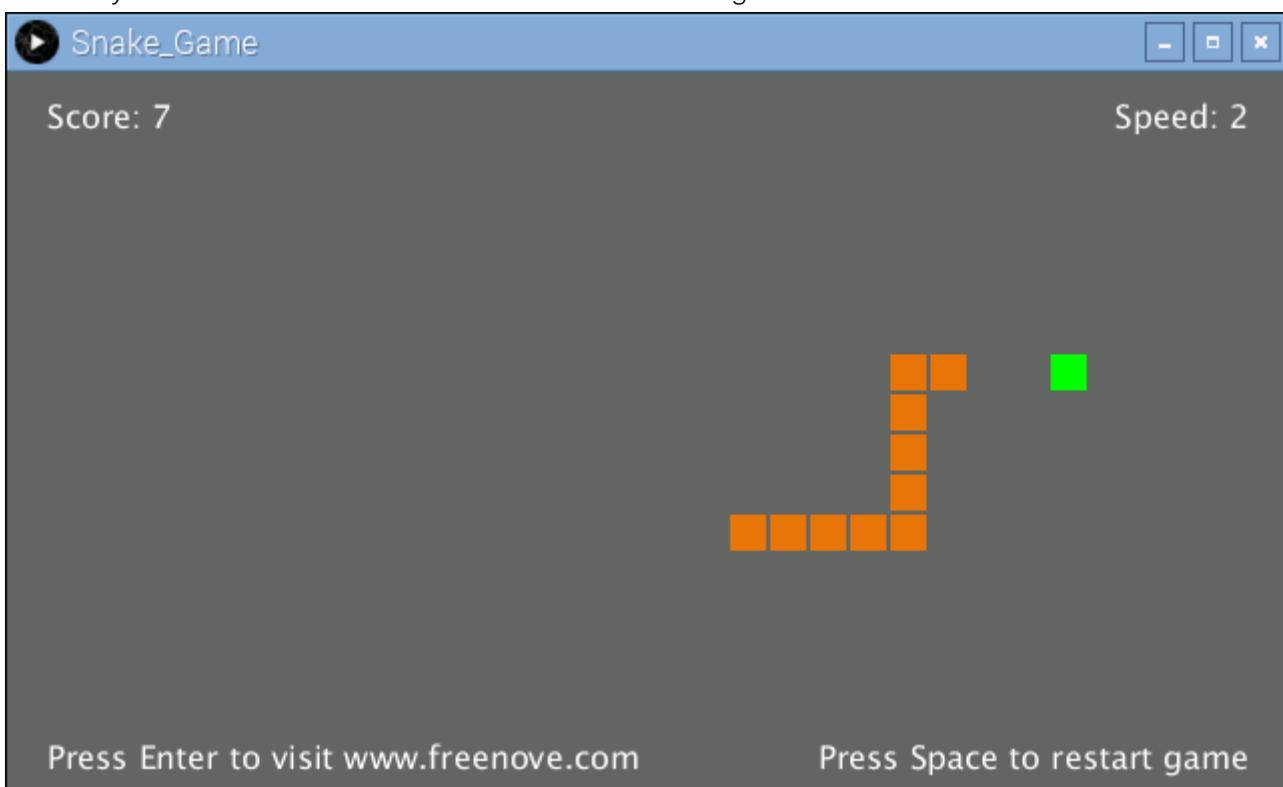

When game is over, pressing the space can restart the game:

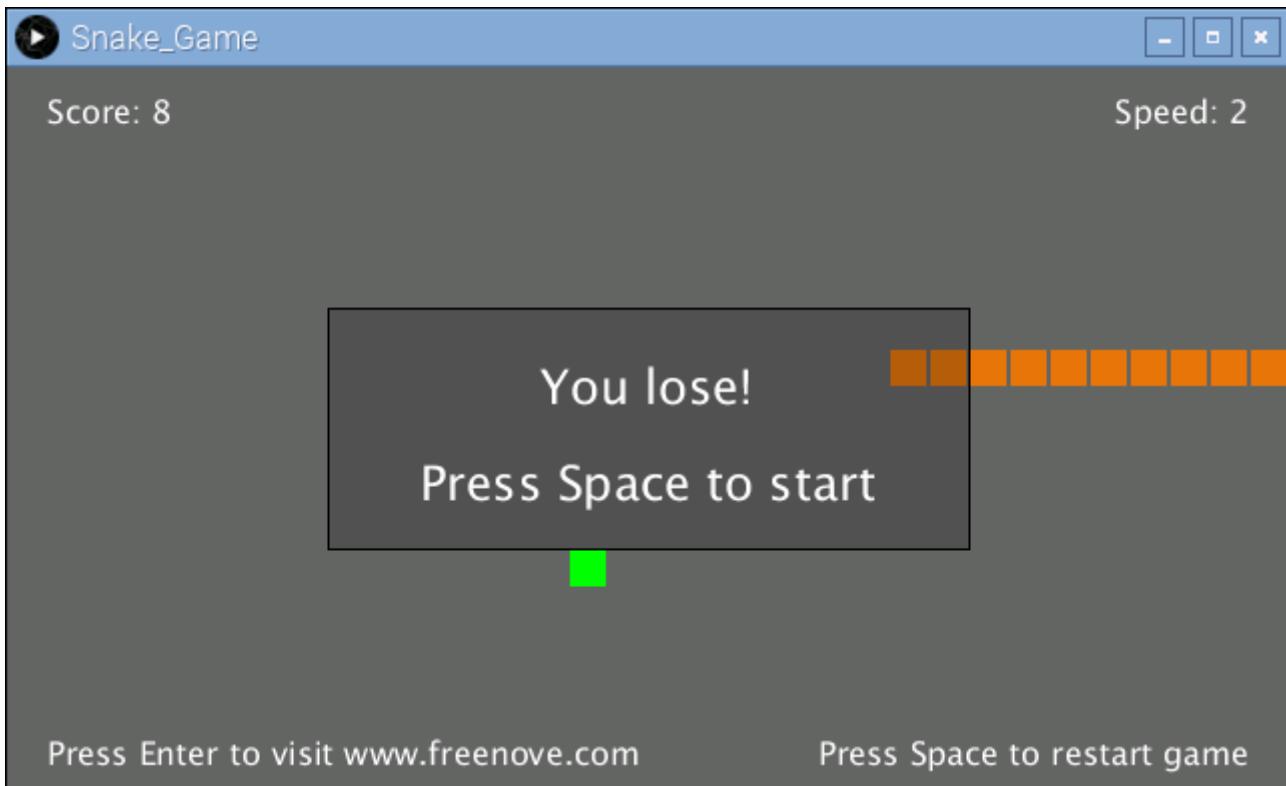

You can restart the game by pressing the space bar at any time during the game.

App 3 Tetris Game

In this chapter, we will play a game, Tetris game.

App 3.1 Tetris Game

Now, let's create and experience our own game.


Component List

Raspberry Pi x1 GPIO Extension Board & Wire x1 Breadboard x1	Resistor 10KΩ x4	Push button x4
Jumper M/M x12		




Circuit

Schematic diagram

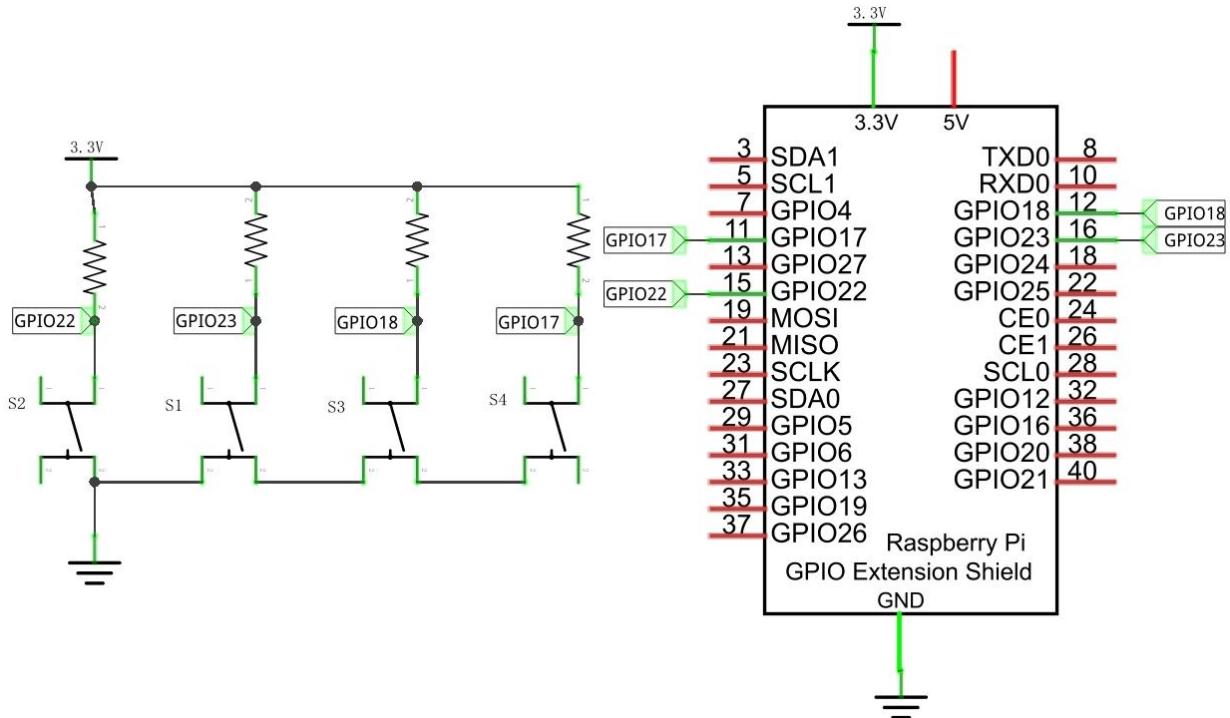

Hardware connection

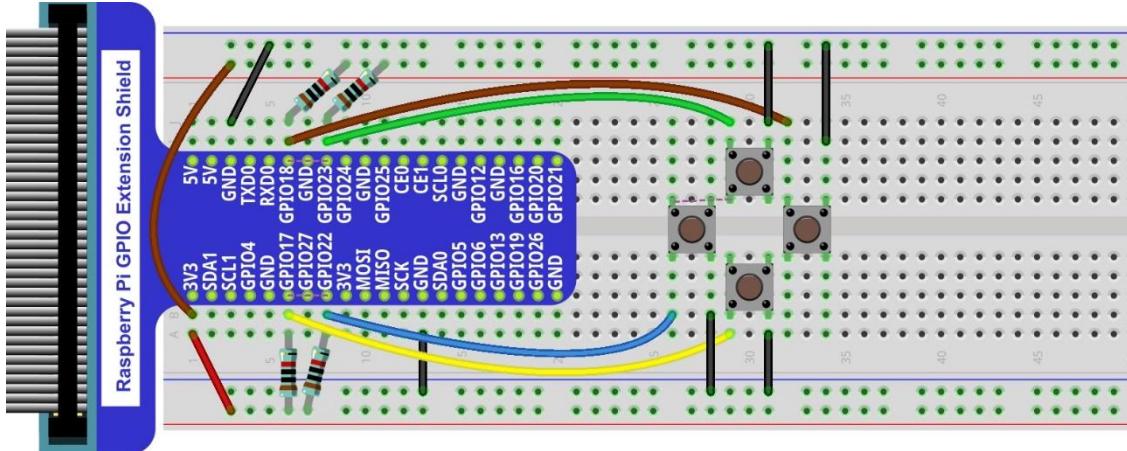

Sketch



Sketch 3.1.1 TetrisGame

1. Use Processing to open the file Sketch_03_1_1_TetrisGame.



```
processing  
~/Freenove_Kit/Processing/Apps/App_03_1_1_TetrisGame/App_03_1_1_TetrisGame.pde
```

2. Click on "RUN" to run the code.



After the program is executed, Display Window displays as below.

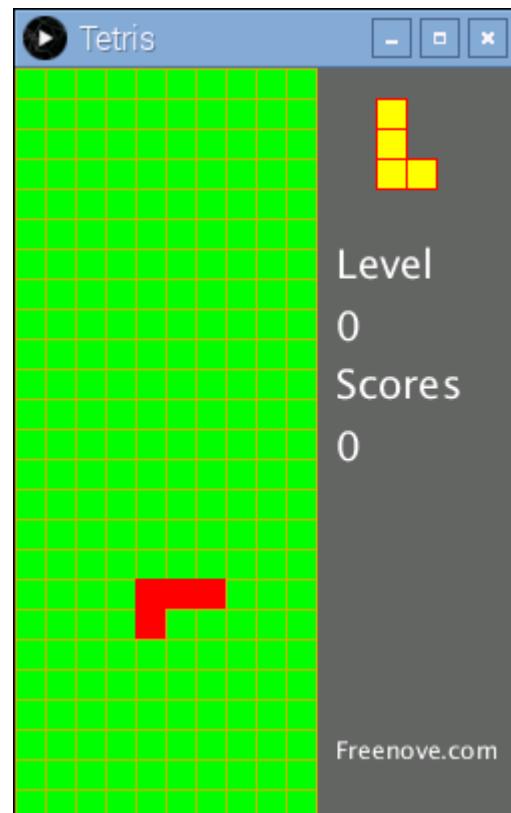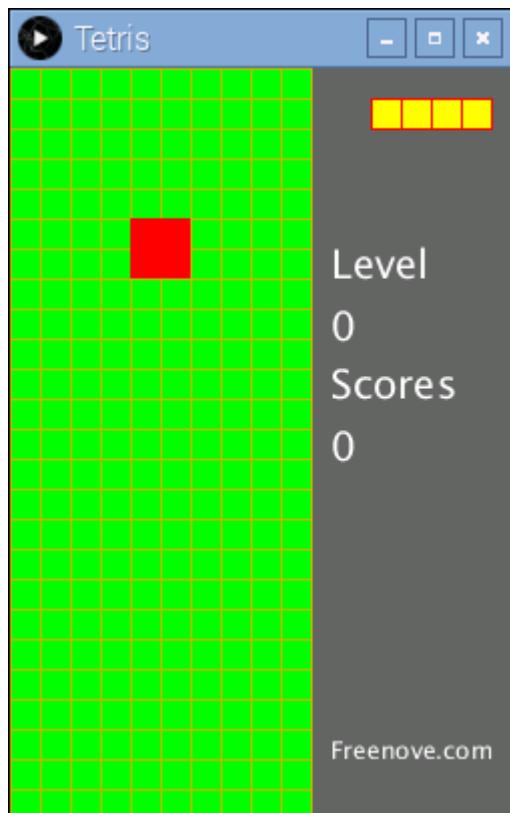


The left and right button in the circuit can control the movement of the falling block to left or right. And the button below can accelerate falling of the block. The button above is used for rotating of the block. Four direction keys on keyboard can also be used to play the game.

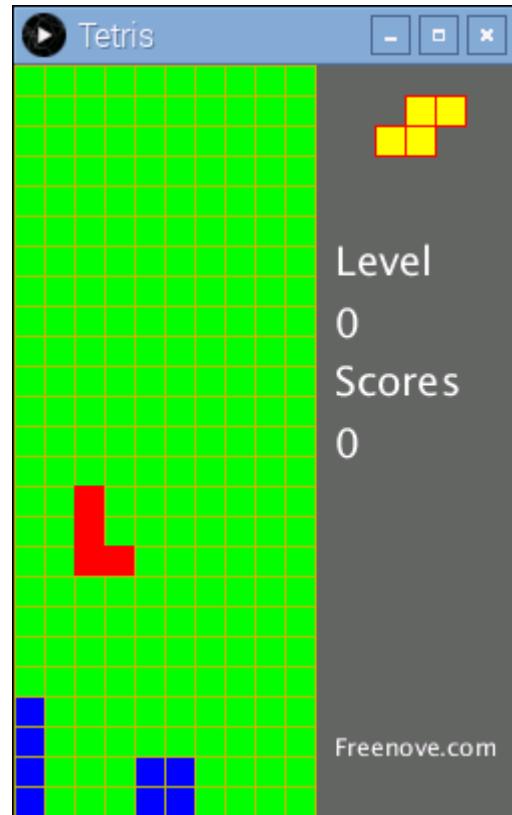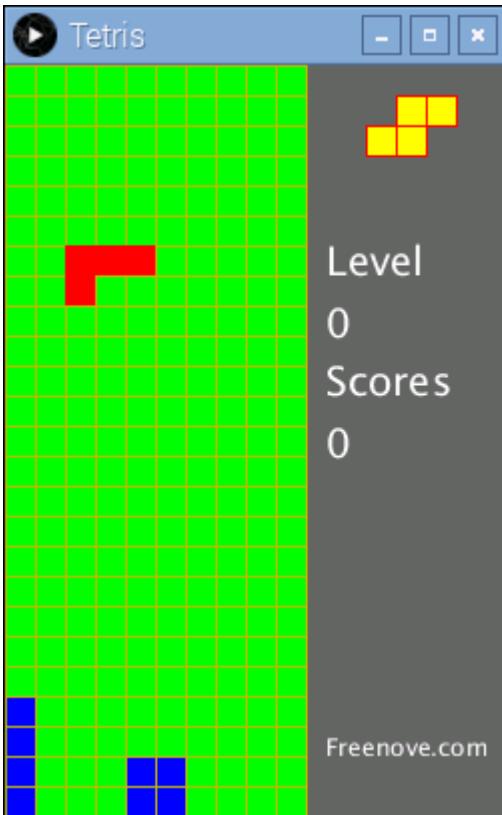

In the process of game, pressing the space bar on the keyboard can pause the game. The right side of the Display Window shows the upcoming block, the current game speed and the current score. The more lines you eliminate once, the higher the scores you will get. If you eliminate one line once, you will get 10 points. If you eliminate 4 lines once, you will get 70 points.

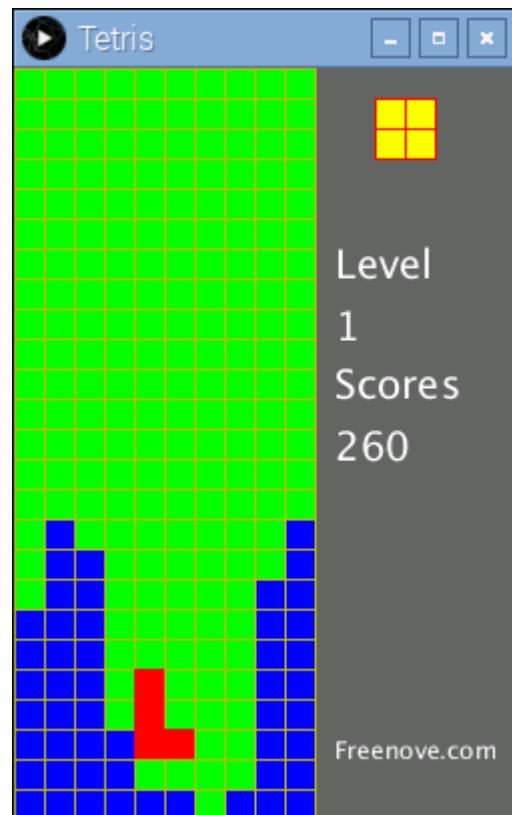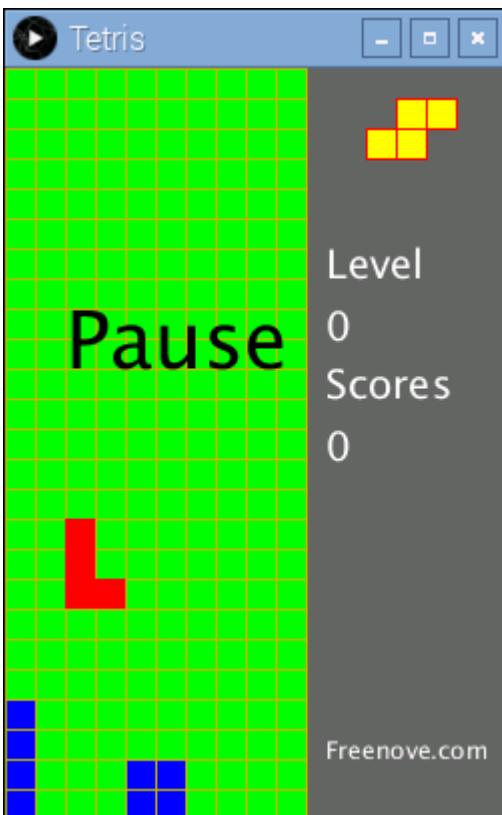

When the blocks are beyond the screen, the game is over. After the game is over, press the space bar to start a new game.

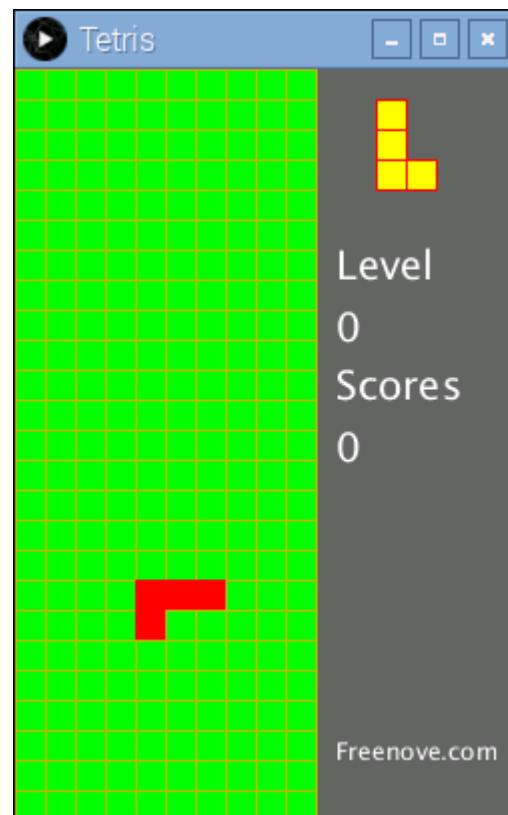



What's Next?

THANK YOU for participating in this learning experience!

We have reached the end of this Tutorial. If you find errors, omissions or you have suggestions and/or questions about the Tutorial or component contents of this Kit, please feel free to contact us:
support@freenove.com

We will make every effort to make changes and correct errors as soon as feasibly possible and publish a revised version.

If you want to learn more about Arduino, Raspberry Pi, Smart Cars, Robotics and other interesting products in science and technology, please continue to visit our website. We will continue to launch fun, cost -effective, innovative and exciting products.

<http://www.freenove.com/>

Thank you again for choosing Freenove products.