

FREENOVE

FREE YOUR INNOVATION

Freenove is an open-source electronics platform.

www.freenove.com

About

Freenove is an open-source electronics platform. Freenove is committed to helping customer quickly realize the creative idea and product prototypes, making it easy to get started for enthusiasts of programing and electronics and launching innovative open source products. Our services include:

- Electronic components and modules
- Learning kits for Arduino
- Learning kits for Raspberry Pi
- Learning kits for Technology
- Robot kits
- Auxiliary tools for creations

Our code and circuit are open source. You can obtain the details and the latest information through visiting the following web sites:

<http://www.freenove.com>

<https://github.com/freenove>

Your comments and suggestions are warmly welcomed, please send them to the following email address:
support@freenove.com

Support

Freenove provides free and quick technical support, including but not limited to:

- Quality problems of products
- Problems in using products
- Questions for learning and technology
- Opinions and suggestions
- Ideas and thoughts

Please send email to:

support@freenove.com

On working day, we usually reply to you within 24 hours.

Copyright

Freenove reserves all rights to this book. No copies or plagiarizations are allowed for the purpose of commercial use.

The code and circuit involved in this product are released as Creative Commons Attribution ShareAlike 3.0. This means you can use them on your own derived works, in part or completely, as long as you also adopt the same license. Freenove brand and Freenove logo are copyright of Freenove Creative Technology Co., Ltd and cannot be used without formal permission.

Contents

Contents	1
Chapter 0 Procesing	1
Install Processing Software	1
First Use	3
Chapter 1 LED	5
Project 1.1 Blink	5
Project 1.2 MouseLED.....	12
Chapter 2 LEDBar Graph	14
Project 2.1 FollowLight.....	14
Chapter 3 PWM	18
Project 3.1 BreathingLED	18
Chapter 4 RGBLED	24
Project 4.1 ColorfullLED	24
Chapter 5 Buzzer	31
Project 5.1 ActiveBuzzer	31
Chapter 6 ADC Module	35
Project 6.1 Voltmeter.....	35
Chapter 7 ADC & LED	43
Project 7.1 SoftLight.....	43
Project 7.2 NightLamp.....	49
Chapter 8 Thermistor	52
Project 8.1 Thermometer.....	52
Chapter 9 Motor & Driver	58
Project 9.1 Motor	58
Chapter 10 74HC595 & LEDBar Graph.....	67
Project 10.1 FollowLight.....	67
Chapter 11 74HC595 & Seven-segment display ..	73
Project 11.1 Seven -segment display.....	73

Project 11.2 4-digit Seven-segment display.....	79
Chapter 12 74HC595 & LED Matrix	86
Project 12.1 LED Matrix.....	86
Chapter 13 I2C-LCD1602.....	95
Project 13.1 LCD.....	95
App 1 Oscilloscope.....	101
App 1.1 Oscilloscope	101
App 2 Control Graphics	105
App 2.1 Ellipse.....	105
App 3 Pong Game.....	109
App 3.1 Pong Game.....	109
App 4 Snake Game.....	115
App 4.1 Snake Game	115
App 5 Tetris Game.....	120
App 5.1 Tetris Game	120
What's next?	125

Chapter 0 Processing

Processing software is used to write programs that can run on computers. Processing software is free and open source, and runs on the Mac, Windows, and GNU/Linux platforms, which is the same with Arduino software. In fact, the development of Arduino software is based on Processing software, and they still have similar interface.


Programs written using Processing are also called sketches, and Java is the default language. Java language and C++ language has many similarities, so the readers who have learned our basic tutorial are able to understand and write simple Processing sketches quickly.

This tutorial will introduce how to install and use processing software on Raspberry Pi through some electronic circuit projects. Chapters and sequence is similar to C and python tutorial. Equally, detailed description and explanation is arranged for the sketch in each project. Our elaborate electronic circuits and interactive project with Processing are attached in the end, including virtual instruments, games (2D and 3D versions), etc.

Install Processing Software

Processing software / Processing Development Environment (PDE) makes it easy to write Processing programs. First install Processing software: type following command in the terminal to start installation:


```
curl https://processing.org/download/install-arm.sh | sudo sh
```

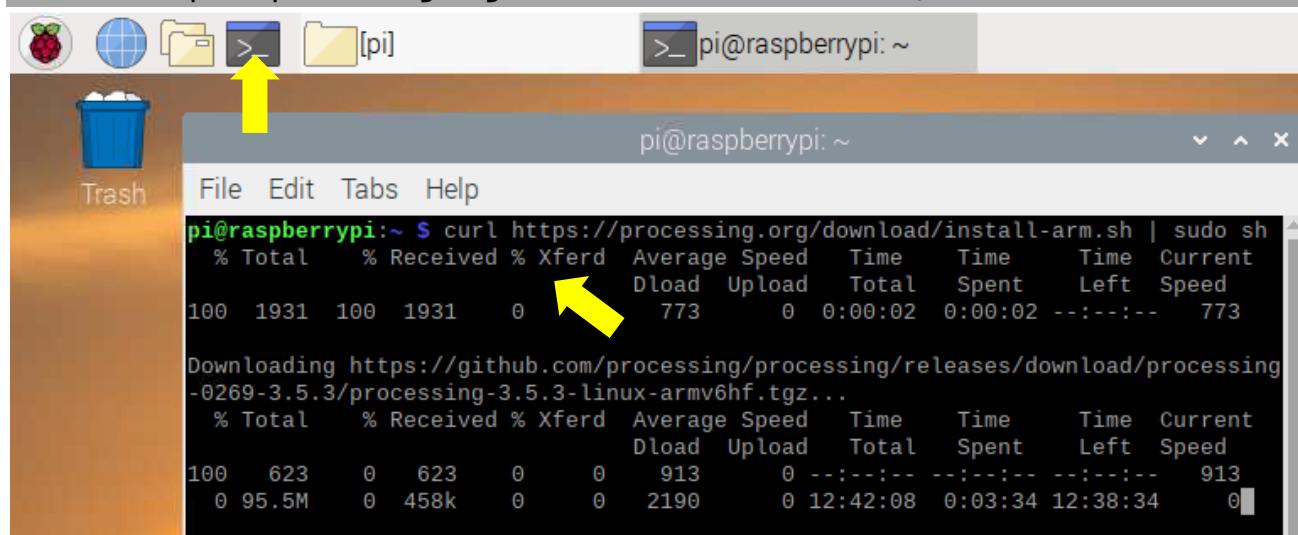


Ensures that your RPi always has the Internet to access in the installation process.

You can also download and install the software by visiting the official website <https://processing.org/>.

After the installation is completed, you can enter the "processing" to open processing software in any directory of the terminal, or open the software processing in the start menu of the system, as shown below:

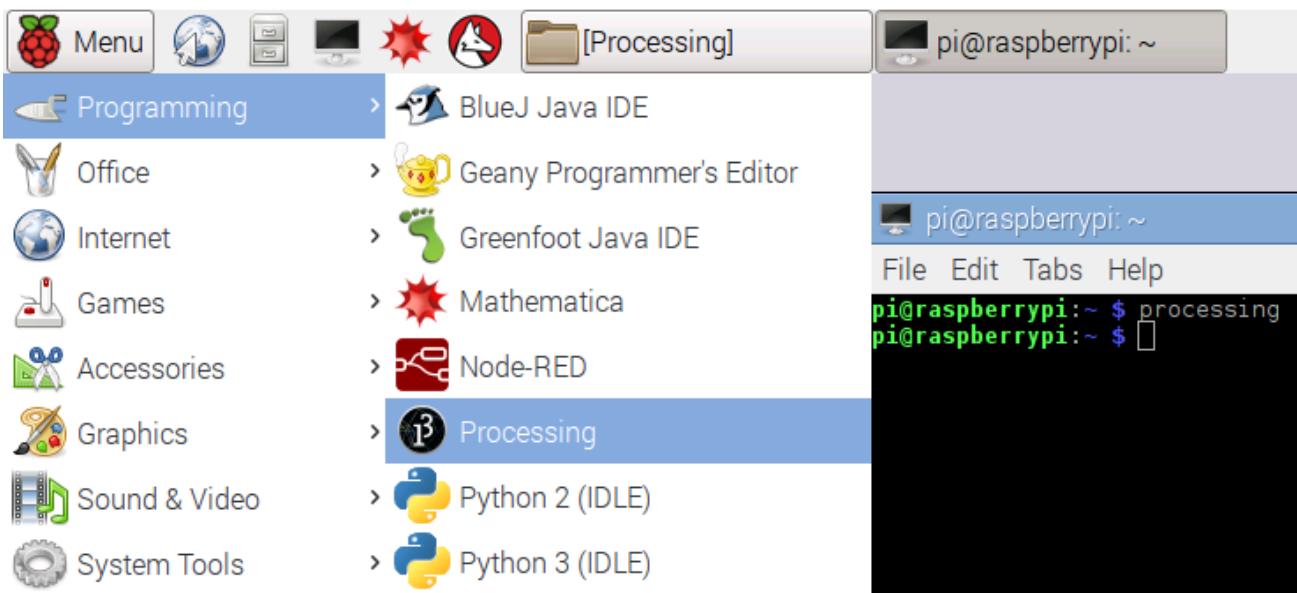

Interface of processing software is shown below:

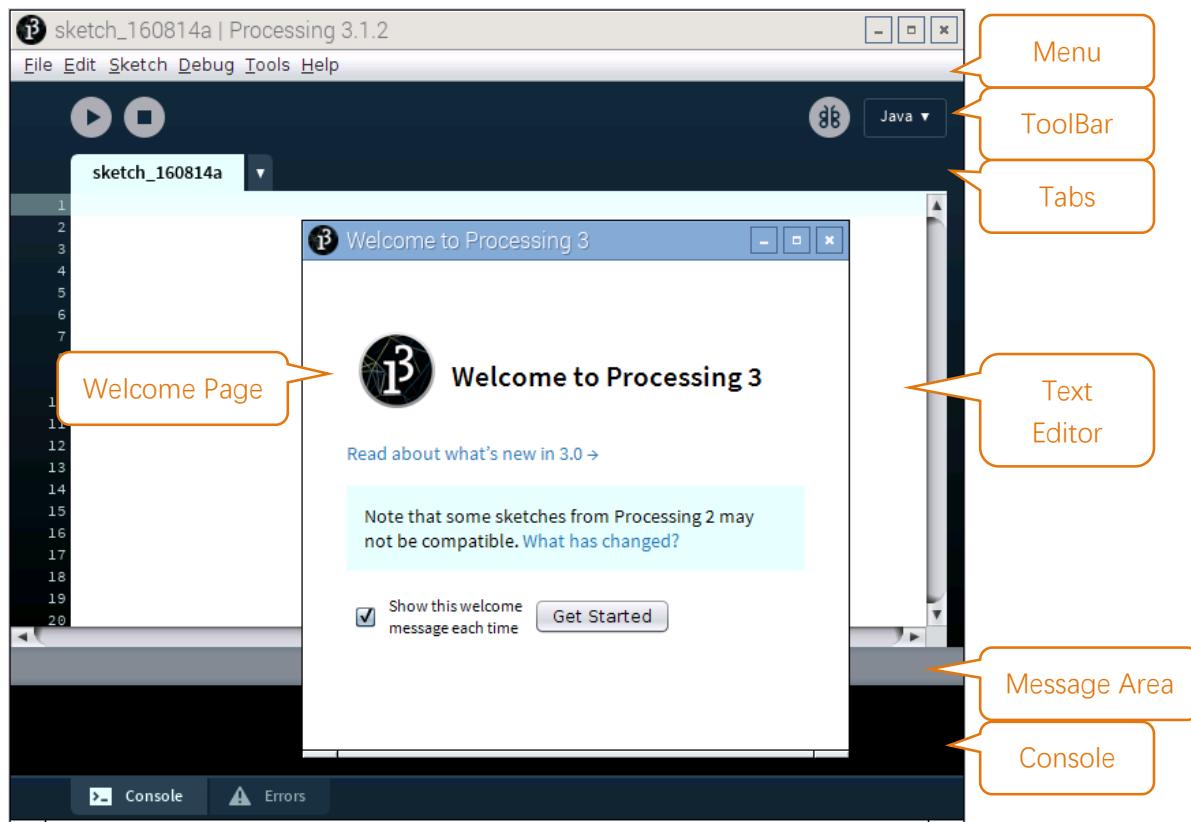


You're now running the Processing Development Environment (or PDE). There's not much to it; the large area is the Text Editor, and there's a row of buttons across the top; this is the toolbar. Below the editor is the Message Area, and below that is the Console. The Message Area is used for one line messages, and the Console is used for more technical details.

First Use


In the editor, type the following:

```
1 ellipse(50, 50, 80, 80);
```

This line of code means "draw an ellipse, with the center 50 pixels over from the left and 50 pixels down from the top, with a width and height of 80 pixels." Click the Run button (the triangle button in the Toolbar).

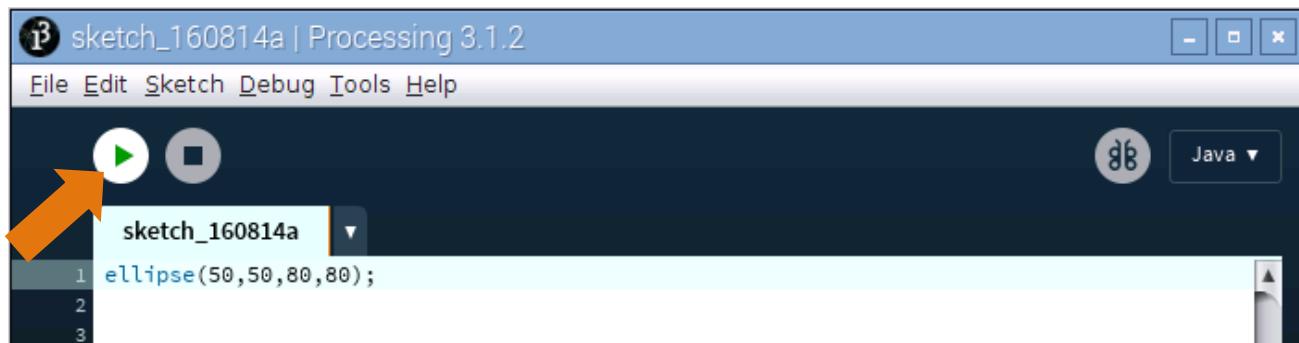

If you've typed everything correctly, you'll see a circle on your screen.

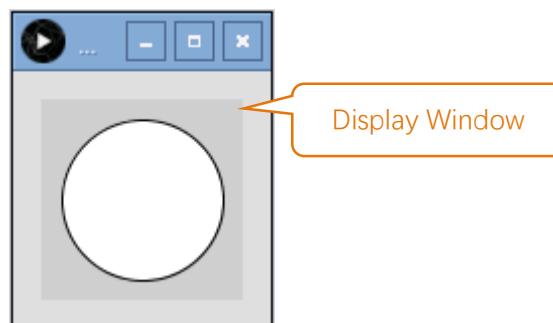


Click on "Stop" (the rectangle button in the Toolbar) or "Close" on Display Window to stop running the program.

If you didn't type it correctly, the Message Area will turn red and complain about an error. If this happens, make sure that you've copied the example code exactly: the numbers should be contained within parentheses and have commas between each of them, and the line should end with a semicolon.



You can export this sketch to an application to run it directly without opening the Processing.

To export the sketch to the application, you must first save it.

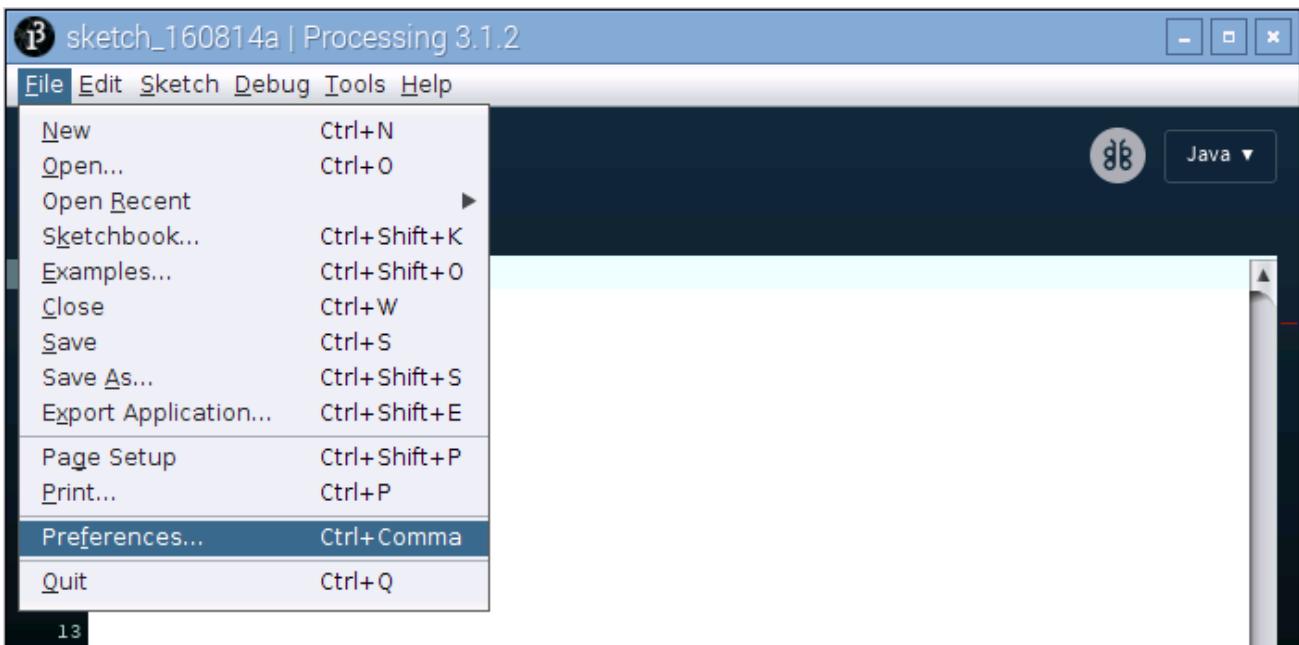

So far, we have completed the first use. I believe you have felt the joy of it.

Chapter 1 LED


We will still start from Blink LED in this chapter, and also learn the usage of some commonly used functions of Processing Software.

Project 1.1 Blink


In this project, we will make a Blink LED and let Display window of Processing Blink at the same time.

Component List


Raspberry Pi x1

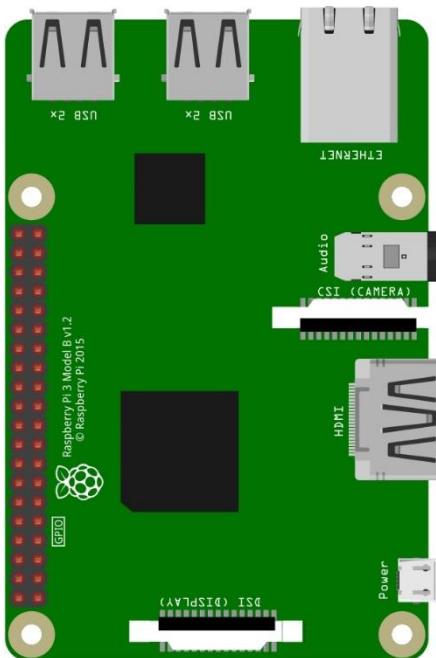

GPIO Extension Board & Wire x1

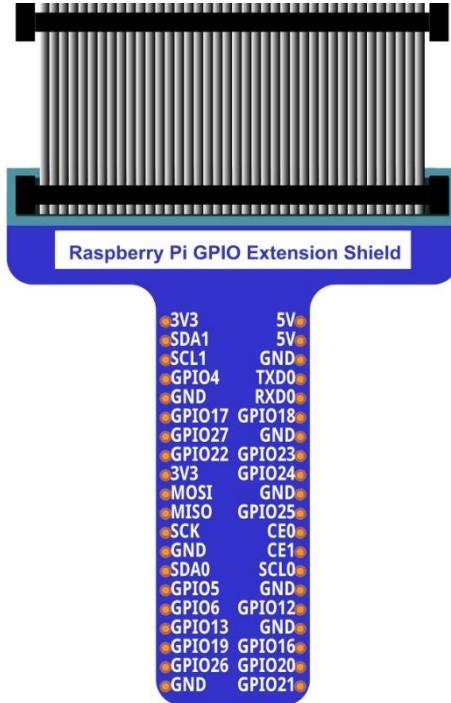

BreadBoard x1

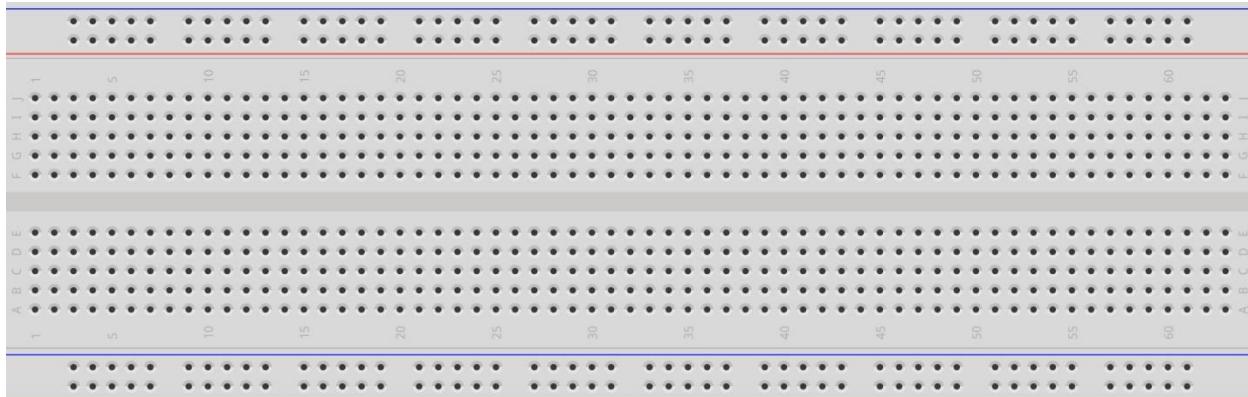

LED x1



Resistor 220Ω x1



Jumper Wire M/M x2




In the components list, Raspberry Pi, GPIO Extension Shield and Breadboard are necessary for each experiment. They will be listed only in text form.


Circuit

Disconnect RPi from GPIO Extension Shield first. Then build the circuit according to the circuit diagram and the hardware connection diagram. After the circuit is built and confirmed, connect RPi to GPIO Extension Shield. In addition, short circuit (especially 5V and GND, 3.3V and GND) should be avoid, because short circuit may cause abnormal circuit work, or even damage to RPi.

Schematic diagram

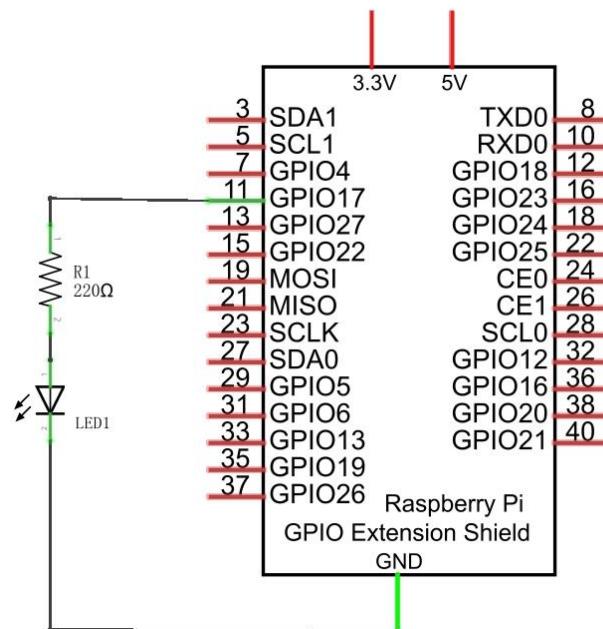

Hardware connection

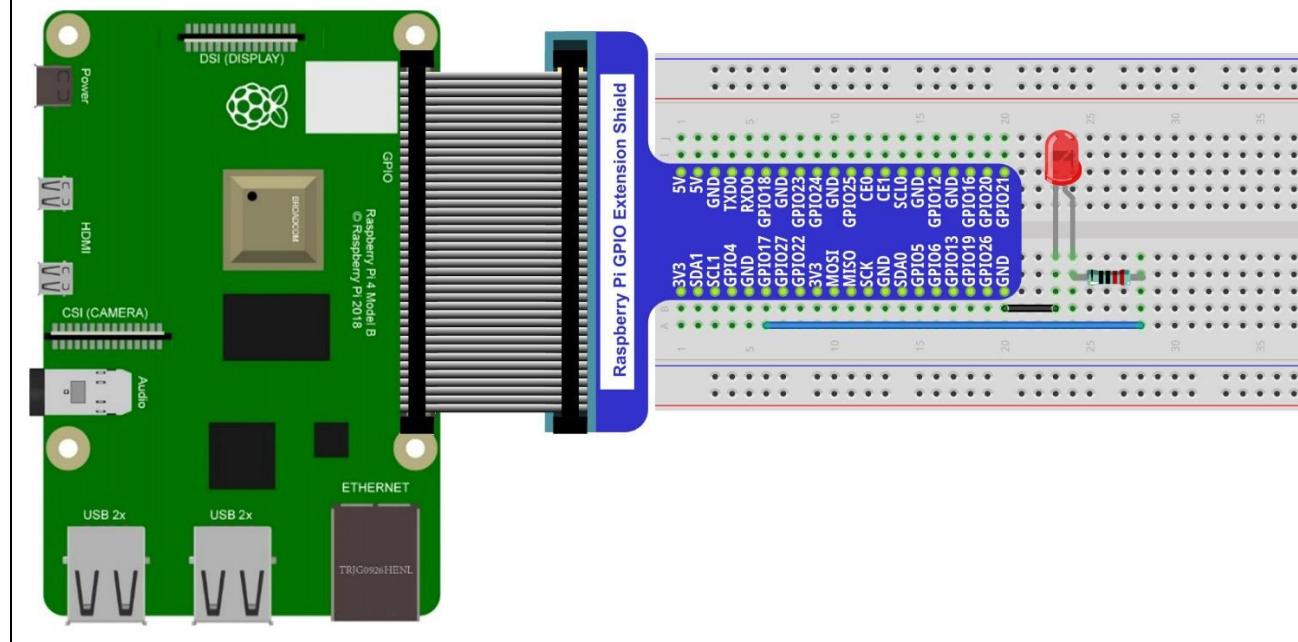

Because Numbering of GPIO Extension Shield is the same as RPi GPIO, latter Hardware connection diagram will only show the part of breadboard and GPIO Extension Shield.

Sketch

Sketch 1.1.1 Blink

Because the resource folder name is too long. For convenience, the folder will be named to "Freenove_Kit". If you have already renamed it, skip this command. Assume the absolute path is "/ home / pi" or "~ /". Execute the following command in the user directory.

```
mv Freenove_Ultimate_Starter_Kit_for_Raspberry_Pi/ Freenove_Kit/
```

First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_01_1_1_Blink. (Following is only one line of command. There is a Space after processing.)

Processing

```
~/Freenove_Kit/Processing/Sketches/Sketch_01_1_1_Blink/Sketch_01_1_1_Blink.pde
```


2. Click on "RUN" to run the code.

You can also open it as below.


Click Raspberry Pi file manager. Find the file under path below:

/home/pi/Freenove_Kit/Processing/Sketches/Sketch_01_1_1_Blink

Then right click and choose Processing.

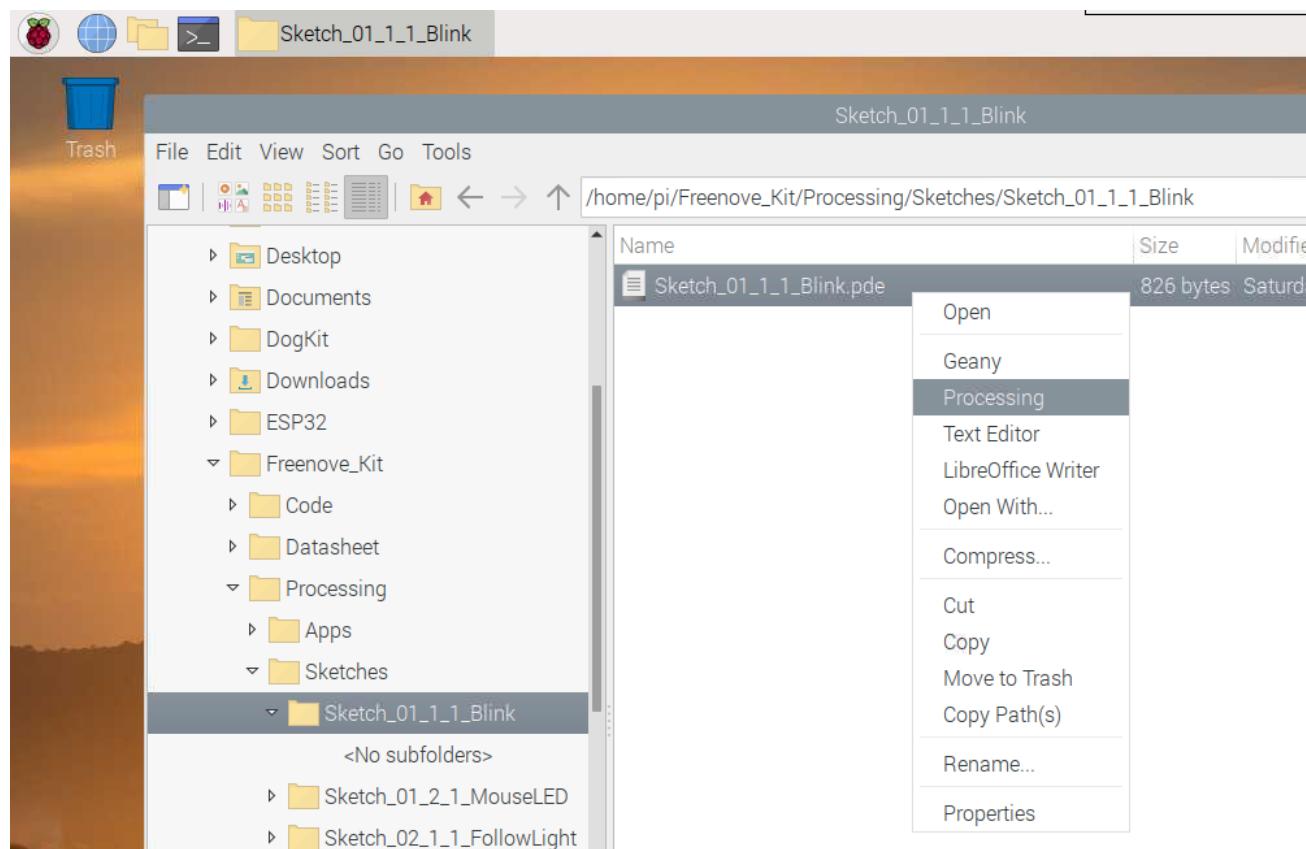

After the program is executed, LED will start Blinking and background of Display window will change with the change of LED state.

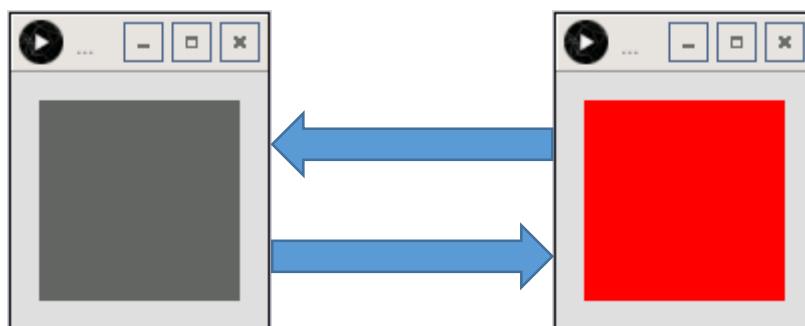

The following is program code:

```

1 import processing.io.*;
2
3 int ledPin = 17;      //define ledPin
4 boolean ledState = false;    //define ledState
5
6 void setup() {
7     size(100, 100);
8     frameRate(1);          //set frame rate
9     GPIO.pinMode(ledPin, GPIO.OUTPUT);    //set the ledPin to output mode
10 }
11
12 void draw() {
13     ledState = !ledState;
14     if (ledState) {
15         GPIO.digitalWrite(ledPin, GPIO.HIGH);    //led on
16         background(255, 0, 0); //set the fill color of led on
17     } else {
18         GPIO.digitalWrite(ledPin, GPIO.LOW);    //led off
19         background(102); //set the fill color of led off
20     }
21 }
```

Processing code usually have two functions: `setup()` and `draw()`, where the function `setup()` is only executed once, but the function `draw()` will be executed circularly. In the function `setup()`, `size(100, 100)` specifies the size of the Display Window to 100x100pixel. `frameRate(1)` specifies the refresh rate of Display Window to once per second, namely, the `draw()` function will be executed once per second. `GPIO.pinMode (ledPin, GPIO.OUTPUT)` is used to set ledPin to output mode.

```

void setup() {
    size(100, 100);
    frameRate(1);          //set frame rate
    GPIO.pinMode(ledPin, GPIO.OUTPUT);    //set the ledPin to output mode
}
```



In draw() function, each execution will invert the variable "ledState". When "ledState" is true, LED is turned on, and the background color of display window is set to red. And when the "ledState" is false, the LED will be turned off and the background color of display window is set to gray. Since the function draw() is executed once per second, the background color of Display Window and the state of LED will also change once per second. Such cycle repeats itself to achieve the effect of blink.

```
void draw() {
    ledState = !ledState;
    if (ledState) {
        GPIO.digitalWrite(ledPin, GPIO.HIGH);      //led on
        background(255, 0, 0); //set the fill color of led on
    } else {
        GPIO.digitalWrite(ledPin, GPIO.LOW);      //led off
        background(102); //set the fill color of led off
    }
}
```

The following is simple description of some functions:

setup()

The setup() function is run once, when the program starts.

draw()

Called directly after setup(), the draw() function continuously executes the lines of code contained inside its block until the program is stopped or noLoop() is called. draw() is called automatically and should never be called explicitly.

size()

Defines the dimension of the display window width and height in units of pixels

frameRate()

Specifies the number of frames to be displayed every second

background()

Set the color used for the background of the Processing window.


GPIO.pinMode()

Configures a pin to act either as input or output

GPIO.digitalWrite()

Sets an output pin to be either high or low

All functions used in this code can be found in the Reference of Processing Software, in which built-in functions are described in details, and there are some sample programs. It is recommended for beginners to view more usage and functions of the function. The localization of Reference can be opened by the following steps: click the menu bar "Help"→"Reference".

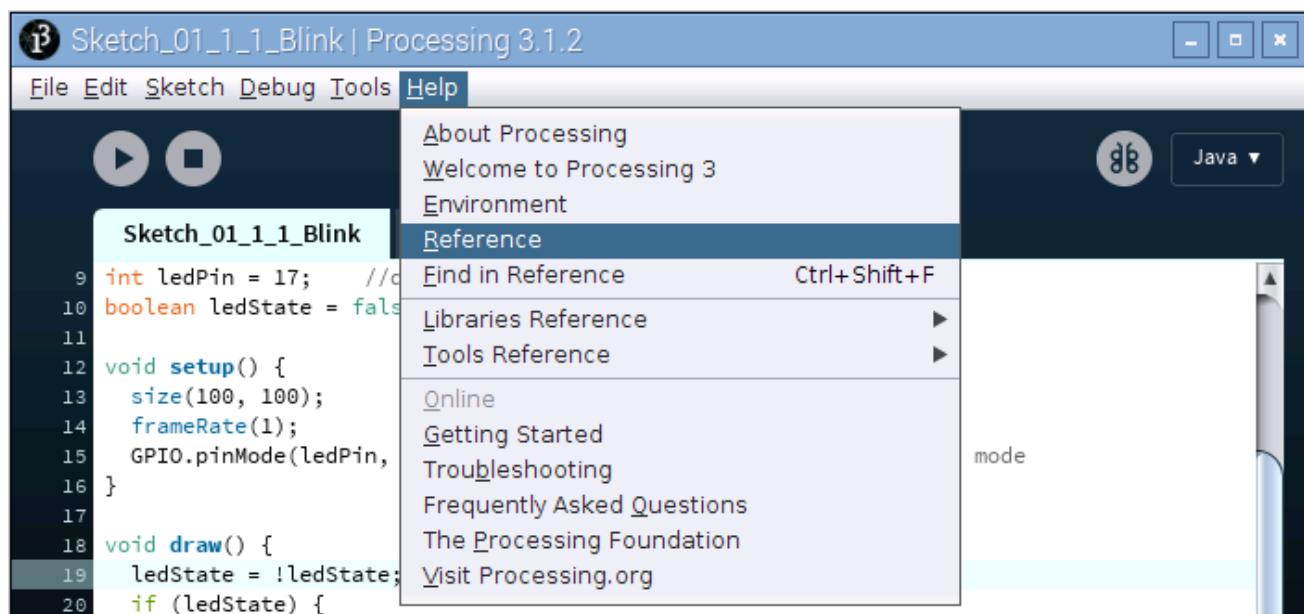

Then the following page will be displayed in the web browser:

Structure	Shape	Color
() (parentheses)	createShape()	Setting
, (comma)	loadShape()	background()
. (dot)	PShape	clear()
/* */ (multiline comment)		colorMode()
/** */ (doc comment)	2D Primitives	fill()
// (comment)	arc()	noFill()
; (semicolon)	ellipse()	noStroke()
= (assign)	line()	stroke()
[] (array access)	point()	

Or directly access to the official website for reference:<http://processing.org/reference/>



Project 1.2 MouseLED

In this project, we will use the mouse to control the state of LED.

The components and circuits of this project are the same as the last section.

Sketch

Sketch 1.2.1 MouseLED


First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_01_2_1_MouseLED.

```
processing
~/Freenove_Kit/Processing/Sketches/Sketch_01_2_1_MouseLED/Sketch_01_2_1_MouseL
ED.pde
```

2. Click on "RUN" to run the code.

After the program is executed, the LED is under off state, and background color of Display window is gray. Click on Display Window with the mouse, then LED is turned on and Display window background color become red. Click on the Display Window again, then the LED is turned off and the background color become gray, as shown below.

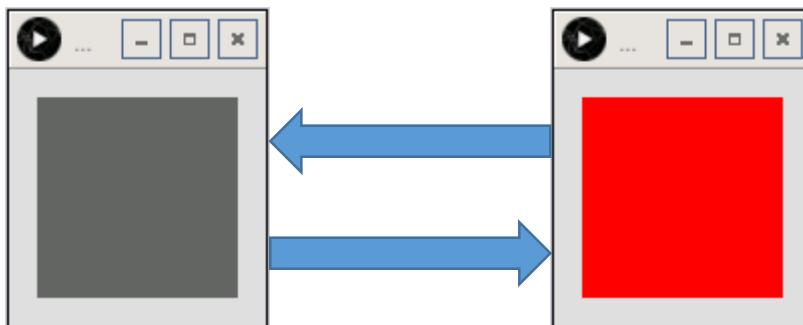

The following is program code:

1	<code>import processing.io.*;</code>
2	
3	<code>int ledPin = 17;</code>
4	<code>boolean ledState = false;</code>
5	<code>void setup() {</code>
6	<code>size(100, 100);</code>
7	<code>GPIO.pinMode(ledPin, GPIO.OUTPUT);</code>
8	<code>background(102);</code>
9	<code>}</code>
10	
11	<code>void draw() {</code>
12	<code>if (ledState) {</code>
13	<code>GPIO.digitalWrite(ledPin, GPIO.HIGH);</code>
14	<code>background(255, 0, 0);</code>
15	<code>} else {</code>

```
16     GPIO.digitalWrite(ledPin, GPIO.LOW);
17     background(102);
18 }
19 }
20
21 void mouseClicked() { //if the mouse Clicked
22     ledState = !ledState; //Change the led State
23 }
```

The function `mouseClicked()` is used in this code. The function is used to capture the mouse click events, which is executed when the mouse is clicked on. We can change the state of the variable “`ledState`” in this function, to realize controlling LED through clicking on the mouse.

```
void mouseClicked() { //if the mouse Clicked
    ledState = !ledState; //Change the led State
}
```



Chapter 2 LEDBar Graph

We have learned how to control a LED, and next we will learn how to control a number of LED.

Project 2.1 FollowLight

In this project, we will use the mouse to control the LEDBar Graph


Component List

Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	LED bar graph x1 	Resistor 220Ω x10 
Jumper M/M x11 		


Circuit

The network label is used in the circuit diagram below, and the pins with the same network label are connected together.

Schematic diagram

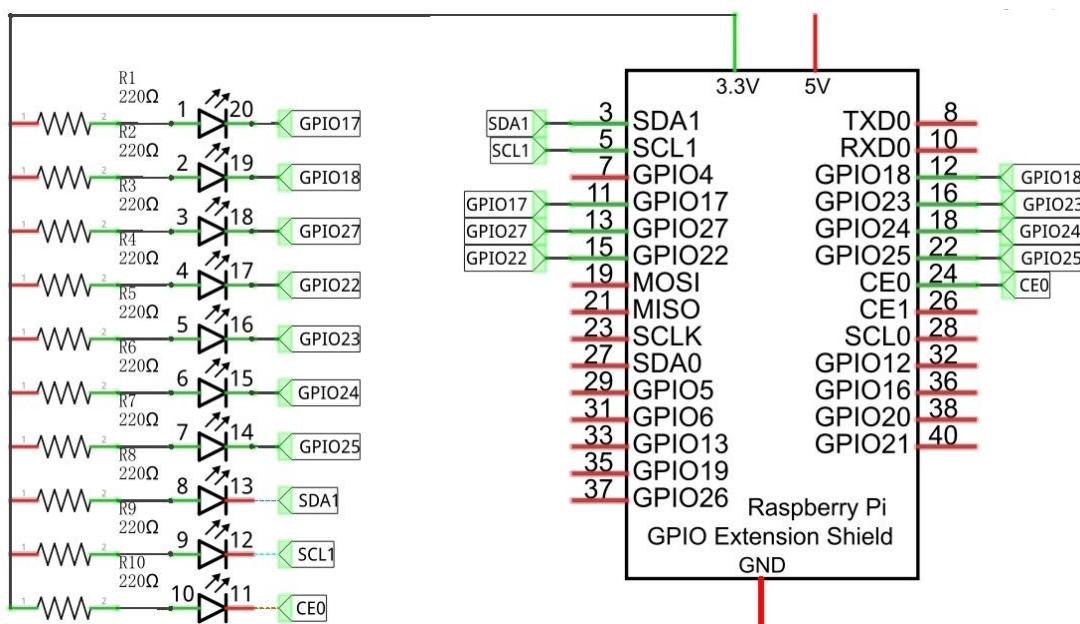

Hardware connection

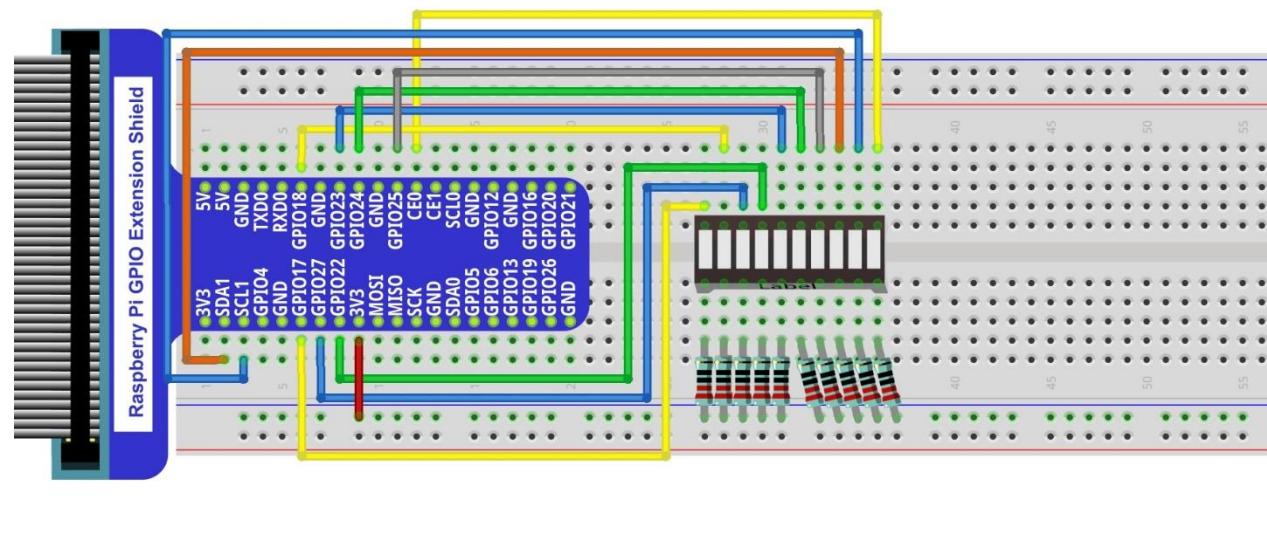

In this circuit, the cathode of LED is connected to GPIO, which is the different from the front circuit. So, LED will be turned on when GPIO output low level in the program.

Sketch

Sketch 2.1.1 FollowLight


First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_02_1_1_FollowLight.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_02_1_1_FollowLight/Sketch_02_1_1_FollowLight.pde
```

2. Click on "RUN" to run the code.

After the program is executed, slide the mouse in the Display Window, then the state of LEDBar Graph will be changed, as shown below.

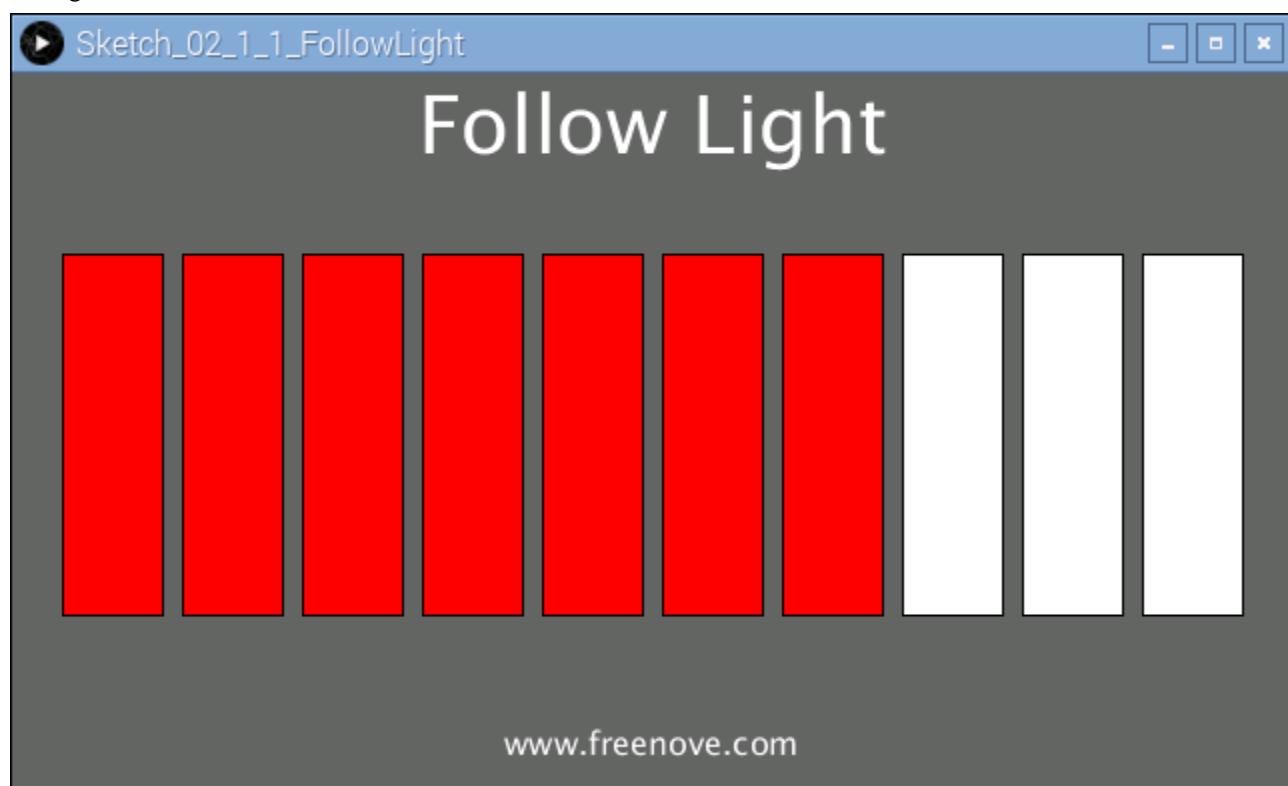

The following is program code:

```
1 import processing.io.*;  
2  
3 int leds[]={17, 18, 27, 22, 23, 24, 25, 2, 3, 8}; //define ledPins  
4  
5 void setup() {  
6     size(640, 360); //display window size  
7     for (int i=0; i<10; i++) { //set led Pins to output mode  
8         GPIO.pinMode(leds[i], GPIO.OUTPUT);  
9     }  
10    background(102);
```

```
11   textAlign(CENTER);    //set the text centered
12   textSize(40);        //set text size
13   text("Follow Light", width / 2, 40);    //title
14   textSize(16);
15   text("www. freenove. com", width / 2, height - 20);    //site
16 }
17
18 void draw() {
19   for (int i=0; i<10; i++) {    //draw 10 rectangular box
20     if (mouseX>(25+60*i)) {    //if the mouse cursor on the right of rectangular box
21       fill(255, 0, 0);          //fill the rectangular box in red color
22       GPIO.digitalWrite(leds[i], GPIO.LOW); //turn on the corresponding led
23     } else {
24       fill(255, 255, 255);    //else fill the rectangular box in white color
25       GPIO.digitalWrite(leds[i], GPIO.HIGH); //and turn off the led
26     }
27     rect(25+60*i, 90, 50, 180);    //draw a rectangular box
28   }
29 }
```

In the function draw(), we draw 10 rectangles to represent 10 LEDs of LEDBar Graph. We make rectangles on the left of mouse filled with red, corresponding LEDs turned on. And make rectangles on the right of mouse filled with red, corresponding LEDs turned off. In this way, when slide the mouse to right, the more LEDs on the left of mouse will be turned on. When to the left, the reverse is the case.

```
void draw() {
  for (int i=0; i<10; i++) {    //draw 10 rectangular box
    if (mouseX>(25+60*i)) {    //if the mouse cursor on the right of rectangular box
      fill(255, 0, 0);          //fill the rectangular box in red color
      GPIO.digitalWrite(leds[i], GPIO.LOW); //turn on the corresponding led
    } else {
      fill(255, 255, 255);    //else fill the rectangular box in white color
      GPIO.digitalWrite(leds[i], GPIO.HIGH); //and turn off the led
    }
    rect(25+60*i, 90, 50, 180);    //draw a rectangular box
  }
}
```



Chapter 3 PWM

In this chapter, we will learn how to use PWM.

Project 3.1 BreathingLED


In this project, we will make a breathing LED, and the Display Window will show a breathing LED pattern and a progress bar, at the same time.

Component List


Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	LED x1	Resistor 220Ω x1
Jumper M/M x2		

Circuit

Schematic diagram

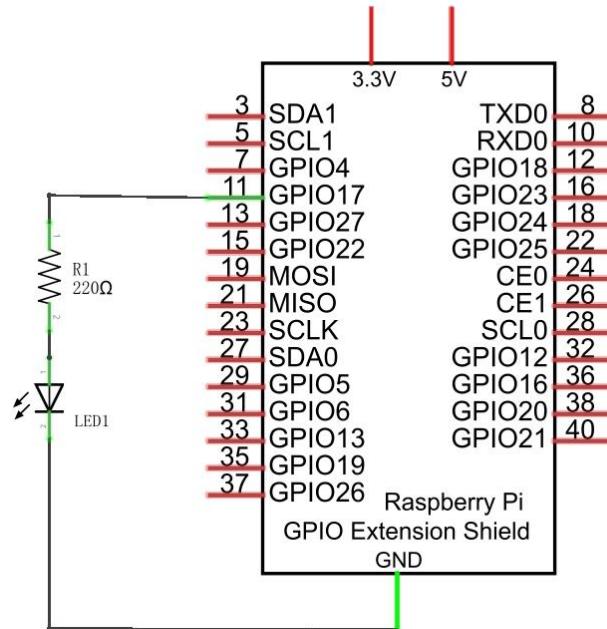

Hardware connection

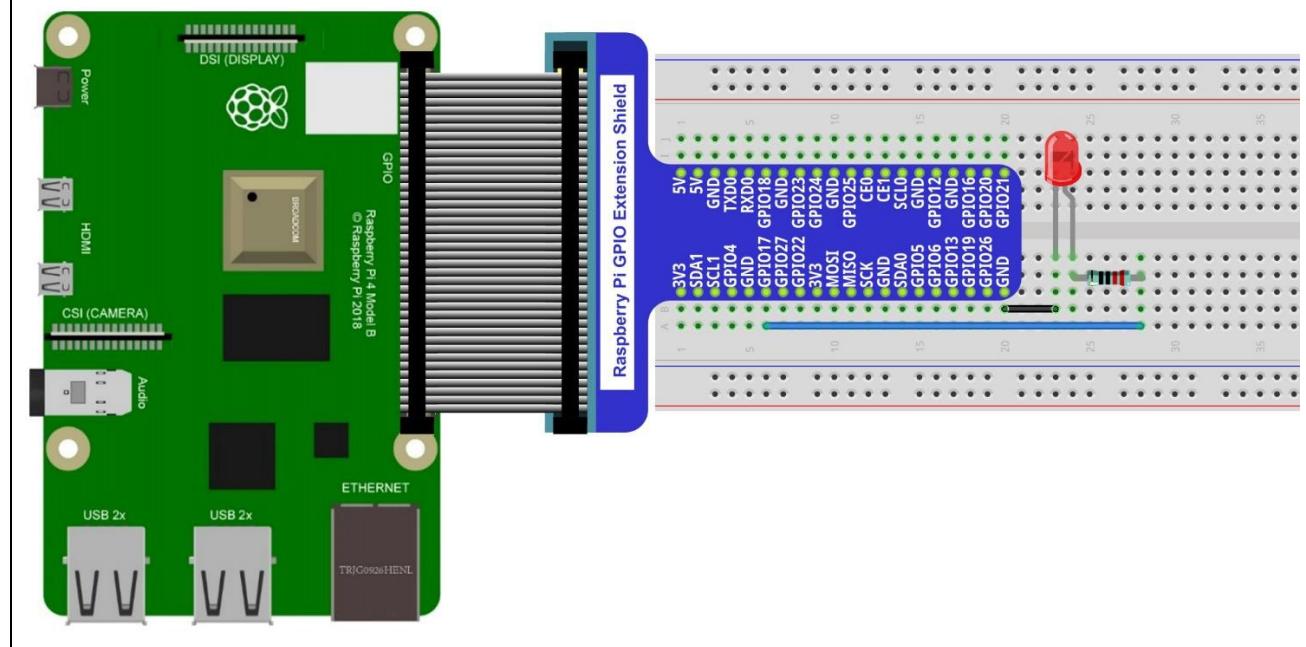



Sketch

Sketch 3.1.1 BreathingLED


First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_03_1_1_BreathingLED.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_03_1_1_BreathingLED/Sketch_03_1_1_BreathingLED.pde
```

2. Click on "RUN" to run the code.

After the program is executed, the LED in circuit will be brightened gradually, and the color of LED pattern in Display Window will be deepen gradually at the same time. The progress bar under the pattern shows the percentage of completion, and clicking on the inside of window with the mouse can change the progress.

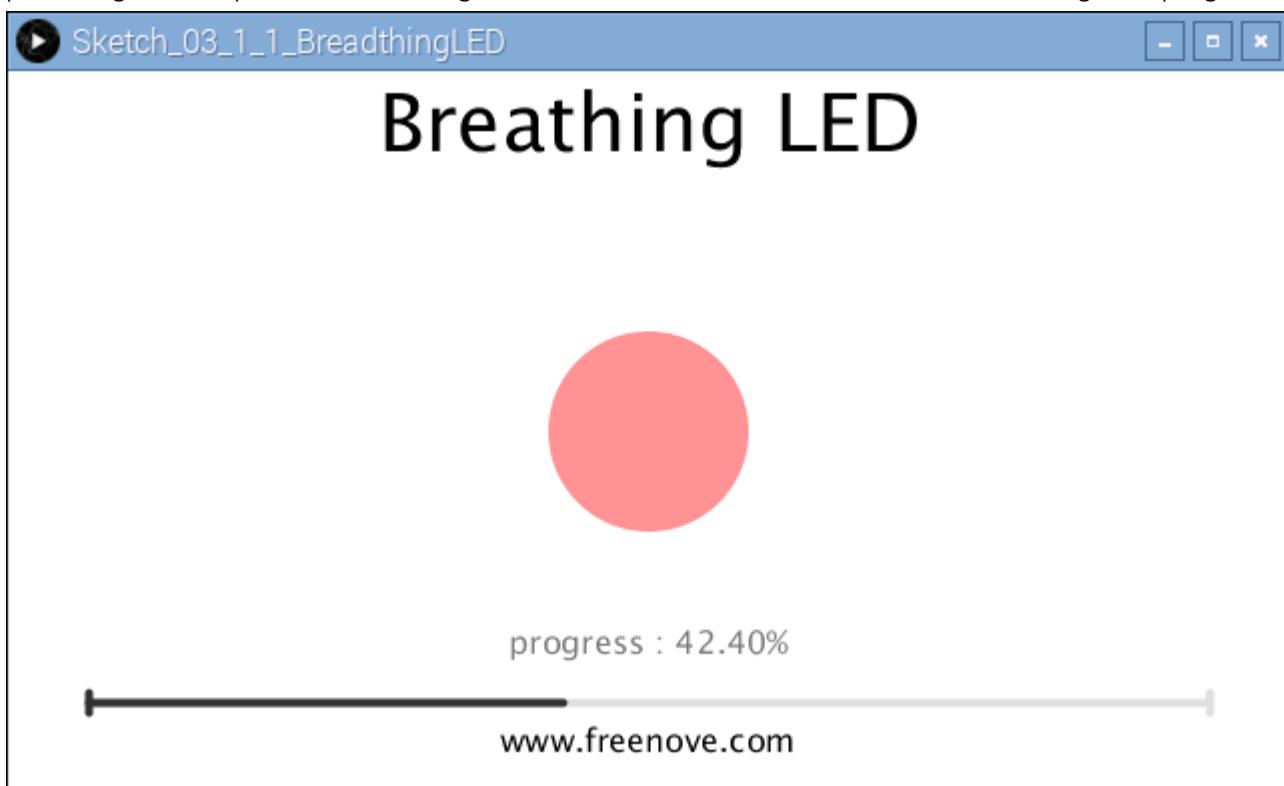

The following is program code:

```
1 import processing.io.*;  
2  
3 int ledPin = 17; //led Pin  
4 int borderSize = 40; //  
5 float t = 0.0; //progress percent  
6 float tStep = 0.004; // speed  
7 SOFTPWM p = new SOFTPWM(ledPin, 10, 100); //Create a PWM pin, initialize the duty cycle  
8 and period  
9 void setup() {  
10   size(640, 360); //display window size
```

```
11     strokeWeight(4); //stroke Weight
12 }
13
14 void draw() {
15     // Show static value when mouse is pressed, animate otherwise
16     if (mousePressed) {
17         int a = constrain(mouseX, borderSize, width - borderSize);
18         t = map(a, borderSize, width - borderSize, 0.0, 1.0);
19     } else {
20         t += tStep;
21         if (t > 1.0) t = 0.0;
22     }
23     p.softPwmWrite((int)(t*100)); //wirte the duty cycle according to t
24     background(255); //A white background
25     titleAndSiteInfo(); //title and Site infomation
26
27     fill(255, 255-t*255, 255-t*255); //cycle
28     ellipse(width/2, height/2, 100, 100);
29
30     pushMatrix();
31     translate(borderSize, height - 45);
32     int barLength = width - 2*borderSize;
33
34     barBgStyle(); //progressbar bg
35     line(0, 0, barLength, 0);
36     line(barLength, -5, barLength, 5);
37
38     barStyle(); //progressbar
39     line(0, -5, 0, 5);
40     line(0, 0, t*barLength, 0);
41
42     barLabelStyle(); //progressbar label
43     text("progress : "+nf(t*100, 2, 2), barLength/2, -25);
44     popMatrix();
45 }
46
47 void titleAndSiteInfo() {
48     fill(0);
49     textAlign(CENTER); //set the text centered
50     textSize(40); //set text size
51     text("Breathing Light", width / 2, 40); //title
52     textSize(16);
53     text("www. freenove. com", width / 2, height - 20); //site
54 }
```

```

55 void barBgStyle() {
56     stroke(220);
57     noFill();
58 }
59
60 void barStyle() {
61     stroke(50);
62     noFill();
63 }
64
65 void barLabelStyle() {
66     noStroke();
67     fill(120);
68 }
```

First, use SOFTPWM class to create a PWM pin, which is used to control the brightness of LED. Then define a variable “t” and variable “tStep” to control the PWM duty cycle and add-self rate.

```

float t = 0.0;      //progress percent
float tStep = 0.004; // speed
SOFTPWM p = new SOFTPWM(ledPin, 10, 100);
```

In the function draw, if there is a click, the coordinate in X direction of mouse will be mapped into the duty cycle “t”, otherwise, duty cycle “t” will be increased gradually. Then output PWM with the duty cycle.

```

if (mousePressed) {
    int a = constrain(mouseX, borderSize, width - borderSize);
    t = map(a, borderSize, width - borderSize, 0.0, 1.0);
} else {
    t += tStep;
    if (t > 1.0) t = 0.0;
}
p.softPwmWrite((int)(t*100)); //wirte the duty cycle according to t
```

The next code is designed to draw a circle filled colors with different depth according to the “t” value, which is used to simulate the of LED with different brightness.

```

fill(255, 255-t*255, 255-t*255); //cycle
ellipse(width/2, height/2, 100, 100);
```

The last code is designed to draw the progress bar and the percentage of the progress.

```

barBgStyle(); //progressbar bg
line(0, 0, barLength, 0);
line(barLength, -5, barLength, 5);

barStyle(); //progressbar
line(0, -5, 0, 5);
```

```
line(0, 0, t*barLength, 0);  
  
barLabelStyle(); //progressbar label  
text("progress : "+nf(t*100, 2, 2), barLength/2, -25);
```

In processing software, you will see a tag page "SOFTPWM" in addition to above code.



The file contains some information about the SOFTPWM class.

```
class SOFTPWM  
  
public SOFTPWM(int iPin, int dc, int pwmRange):  
Constructor, used to create a PWM pin, set the pwmRange and initial duty cycle. The minimum of  
pwmRange is 0.1ms. So pwmRange=100 means that the PWM cycle is 0.1ms*100=10ms.  
public void softPwmWrite(int value)  
Set PMW duty cycle.  
public void softPwmStop()  
Stop outputting PMW.
```



Chapter 4 RGBLED

In this chapter, we will learn how to use RGBLED.

Project 4.1 ColorfulLED


This project will make a ColorfulLED, namely, use Processing to control the color of RGBLED.

Component List


Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	RGBLED x1	Resistor 220Ω x3
Jumper M/M x4		

Circuit

Schematic diagram

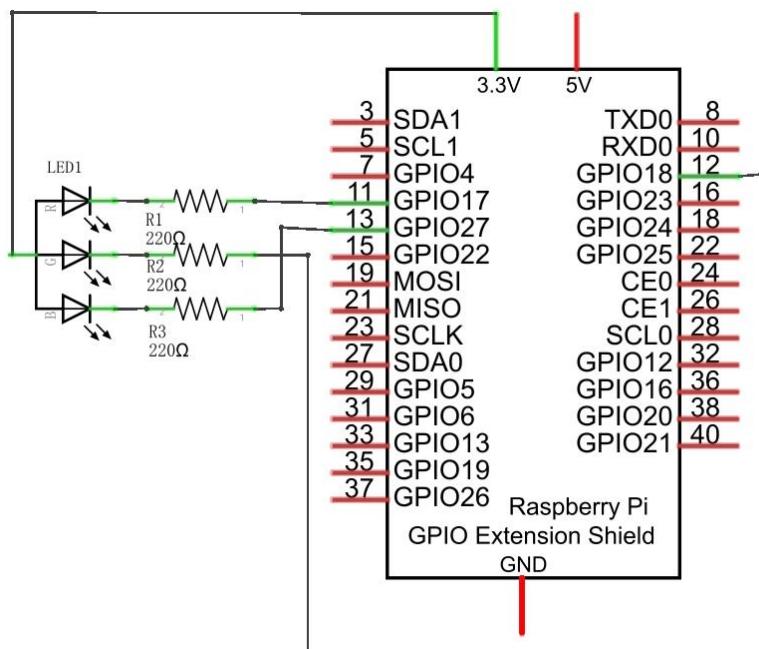

Hardware connection

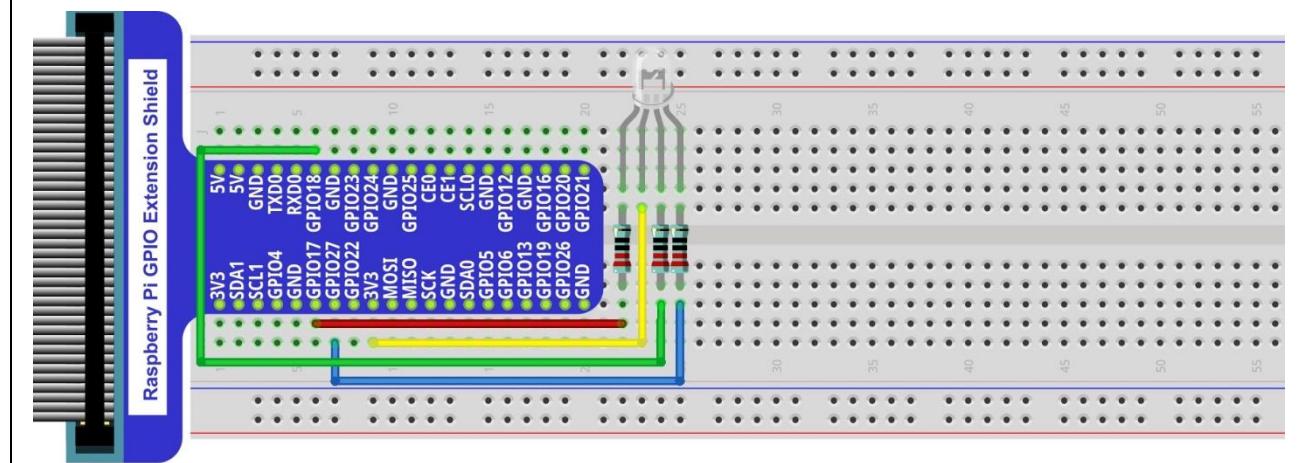



Sketch

Sketch 4.1.1 ColorfullLED


First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_03_1_1_BreathingLED.

```
processing
~/Freenove_Kit/Processing/Sketches/Sketch_04_1_1_ColorfullLED/Sketch_04_1_1_Colo
rfulLED.pde
```

2. Click on "RUN" to run the code.

After the program is executed, RGBLED is under off state. And in Display Window, the pattern used to simulate LED is in black. Red, Green and Blue progress are in 0. By using mouse to click on and drag any progress bar, you can set the PWM duty cycle of color channels, and then RGBLED used in the circuit will show corresponding color. At the same time, the pattern in Display Window will show the same color.

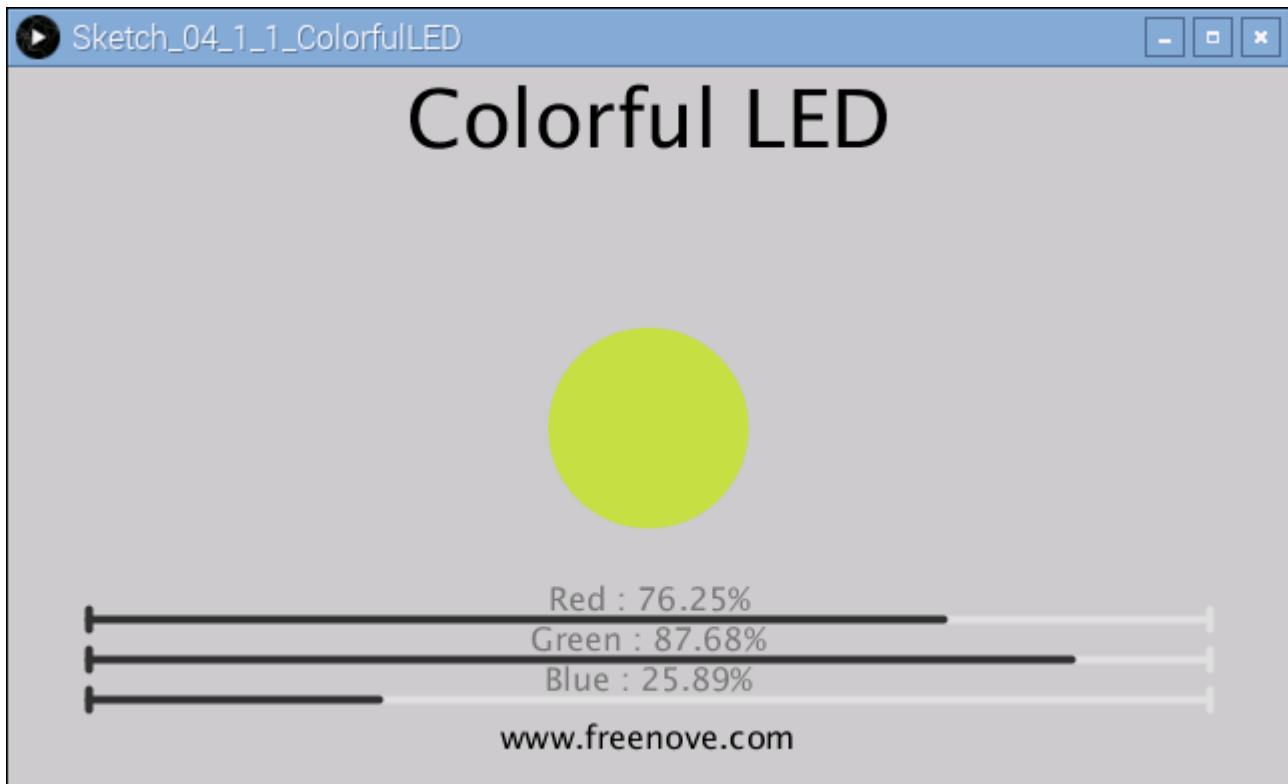

This project contains a lot of code files, and the core code is contained in the file Sketch_04_1_1_ColorfullLED. The other files only contain some custom classes.



The following is program code:

```
1 import processing.io.*;
2
3 int bluePin = 17;      //blue Pin
4 int greenPin = 18;    //green Pin
5 int redPin = 27;      //red Pin
6 int borderSize = 40;   //picture border size
7 //Create a PWM pin, initialize the duty cycle and period
8 SOFTPWM pRed = new SOFTPWM(redPin, 100, 100);
9 SOFTPWM pGreen = new SOFTPWM(greenPin, 100, 100);
10 SOFTPWM pBlue = new SOFTPWM(bluePin, 100, 100);
11 //instantiate three ProgressBar Object
12 ProgressBar rBar, gBar, bBar;
13 boolean rMouse = false, gMouse = false, bMouse = false;
14 void setup() {
15     size(640, 360); //display window size
16     strokeWeight(4); //stroke Weight
17     //define the ProgressBar length
18     int barLength = width - 2*borderSize;
19     //Create ProgressBar Object
20     rBar = new ProgressBar(borderSize, height - 85, barLength);
21     gBar = new ProgressBar(borderSize, height - 65, barLength);
22     bBar = new ProgressBar(borderSize, height - 45, barLength);
23     //Set ProgressBar's title
24     rBar.setTitle("Red");gBar.setTitle("Green");bBar.setTitle("Blue");
25 }
26
27 void draw() {
28     background(200); //A white background
29     titleAndSiteInfo(); //title and Site infomation
30
31     fill(rBar.progress*255, gBar.progress*255, bBar.progress*255); //cycle color
32     ellipse(width/2, height/2, 100, 100); //show cycle
33
34     rBar.create(); //Show progressBar
35     gBar.create();
36     bBar.create();
37 }
38
39 void mousePressed() {
40     if ( (mouseY< rBar.y+5) && (mouseY>rBar.y-5) ) {
41         rMouse = true;
42     } else if ( (mouseY< gBar.y+5) && (mouseY>gBar.y-5) ) {
43         gMouse = true;
```

```

44 } else if ( (mouseY < bBar.y+5) && (mouseY > bBar.y-5) ) {
45     bMouse = true;
46 }
47 }
48 void mouseReleased() {
49     rMouse = false;
50     bMouse = false;
51     gMouse = false;
52 }
53 void mouseDragged() {
54     int a = constrain(mouseX, borderSize, width - borderSize);
55     float t = map(a, borderSize, width - borderSize, 0.0, 1.0);
56     if (rMouse) {
57         pRed.softPwmWrite((int)(100-t*100)); //write the duty cycle according to t
58         rBar.setProgress(t);
59     } else if (gMouse) {
60         pGreen.softPwmWrite((int)(100-t*100)); //write the duty cycle according to t
61         gBar.setProgress(t);
62     } else if (bMouse) {
63         pBlue.softPwmWrite((int)(100-t*100)); //write the duty cycle according to t
64         bBar.setProgress(t);
65     }
66 }
67
68 void titleAndSiteInfo() {
69     fill(0);
70     textAlign(CENTER);    //set the text centered
71     textSize(40);        //set text size
72     text("Colorful LED", width / 2, 40);    //title
73     textSize(16);
74     text("www.freenove.com", width / 2, height - 20);    //site
75 }
```

In the code, first create three PWM pins and three progress bars to control RGBLED.

```

SOFTPWM pRed = new SOFTPWM(redPin, 100, 100);
SOFTPWM pGreen = new SOFTPWM(greenPin, 100, 100);
SOFTPWM pBlue = new SOFTPWM(bluePin, 100, 100);
//instantiate three ProgressBar Object
ProgressBar rBar, gBar, bBar;
```

And then in function setup(), define position and length of progress bar according to the size of Display Window, and set the name of each progress bar.

```

void setup() {
    size(640, 360); //display window size
```

```

strokeWeight(4); //stroke Weight
//define the ProgressBar length
int barLength = width - 2*borderSize;
//Create ProgressBar Object
rBar = new ProgressBar(borderSize, height - 85, barLength);
gBar = new ProgressBar(borderSize, height - 65, barLength);
bBar = new ProgressBar(borderSize, height - 45, barLength);
//Set ProgressBar's title
rBar.setTitle("Red");gBar.setTitle("Green");bBar.setTitle("Blue");
}

```

In function draw(), first set background, header and other basic information. Then draw a circle and set its color according to the duty cycle of three channel of RGB. Finally draw three progress bars.

```

void draw() {
background(200); //A white background
titleAndSiteInfo(); //title and Site infomation

fill(rBar.progress*255, gBar.progress*255, bBar.progress*255); //cycle color
ellipse(width/2, height/2, 100, 100); //show cycle

rBar.create(); //Show progressBar
gBar.create();
bBar.create();
}

```

System function mousePressed(), mouseReleased() and mouseDragged() are used to determine whether the mouse drag the progress bar and set the schedule. If the mouse button is pressed in a progress bar, then the mousePressed () the progress of a flag *Mouse is set to true, mouseDragged (mouseX), in the mapping progress value set at the same time, the progress of the corresponding schedule and PWM. When the mouse is released, empty all the flags in the mouseReleased ().

```

void mousePressed() {
if ( (mouseY< rBar.y+5) && (mouseY>rBar.y-5) ) {
rMouse = true;
} else if ( (mouseY< gBar.y+5) && (mouseY>gBar.y-5) ) {
gMouse = true;
} else if ( (mouseY< bBar.y+5) && (mouseY>bBar.y-5) ) {
bMouse = true;
}
}

void mouseReleased() {
rMouse = false;
bMouse = false;
gMouse = false;
}

```

```
void mouseDragged() {
    int a = constrain(mouseX, borderSize, width - borderSize);
    float t = map(a, borderSize, width - borderSize, 0.0, 1.0);
    if (rMouse) {
        pRed.softPwmWrite((int)(100-t*100)); //wirte the duty cycle according to t
        rBar.setProgress(t);
    } else if (gMouse) {
        pGreen.softPwmWrite((int)(100-t*100)); //wirte the duty cycle according to t
        gBar.setProgress(t);
    } else if (bMouse) {
        pBlue.softPwmWrite((int)(100-t*100)); //wirte the duty cycle according to t
        bBar.setProgress(t);
    }
}
```

About class ProgressBar:

class ProgressBar

This is a custom class that is used to create a progress bar.

```
public ProgressBar(int ix, int iy, int barlen)
```

Constructor used create ProgressBar, the parameters for coordinates X , Y and length of ProgressBar.

```
public void setTitle(String str)
```

Used to set the name of progress bar, which will be displayed in middle of the progress bar.

```
public void setProgress(float pgress)
```

Used to set the progress of progress bar. The parameter: 0<pgress<1.0.

```
public void create() & public void create(float pgress)
```

Used to draw progress bar.


Chapter 5 Buzzer

In this chapter we will learn how to use buzzer.

Project 5.1 ActiveBuzzer


This project will use the mouse to control an active buzzer.

Component List

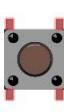
Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	NPN transistorx1 	Active buzzer x1 	Jumper M/M x7 	Push button x1 	Resistor 1kΩ x1 	Resistor 10kΩ x2 
--	---	---	---	---	--	---

Circuit

Schematic diagram

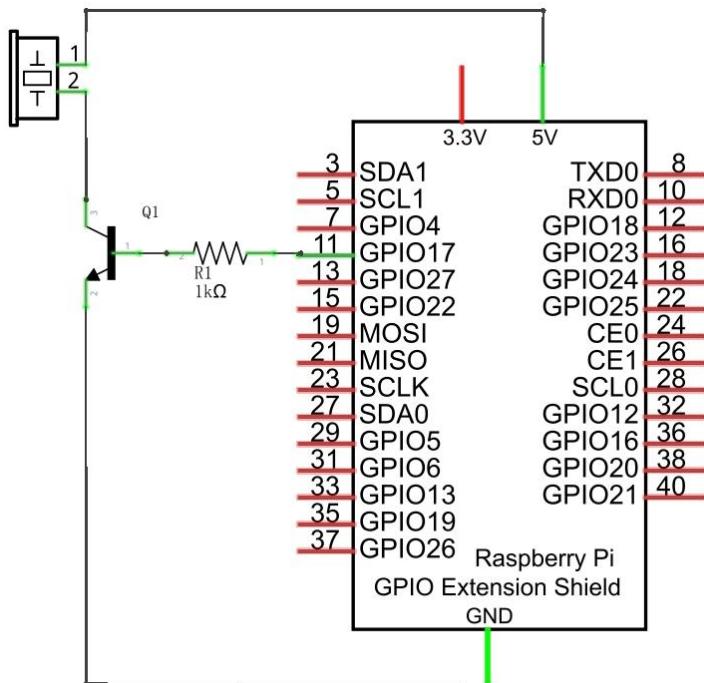

Hardware connection

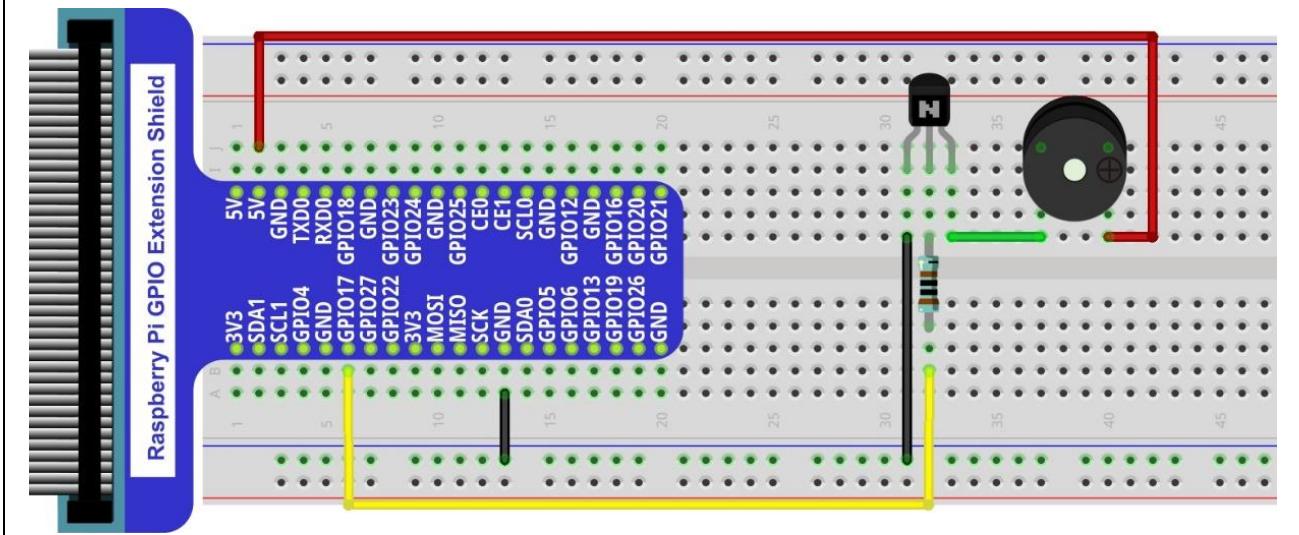

Note: in this circuit, the power supply for buzzer is 5V, and pull-up resistor of the button connected to the power 3.3V. The buzzer can work when connected to power 3.3V, but it will reduce the loudness.

Sketch

Sketch 5.1.1 ActiveBuzzer

First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_05_1_1_ActiveBuzzer.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_05_1_1_ActiveBuzzer/Sketch_05_1_1_ActiveBuzzer.pde
```

2. Click on "RUN" to run the code.

After the program is executed, use the mouse to click on any position of the Display Window, then Active Buzzer begins to sound and arc graphics(Schematic of sounding) will appear next to the buzzer pattern in Display Window. Click the mouse again, then Active Buzzer stops sounding and arc graphics disappear.



The following is program code:

```
import processing.io.*;  
  
int buzzerPin = 17;  
boolean buzzerState = false;  
void setup() {  
    size(640, 360);  
    GPIO.pinMode(buzzerPin, GPIO.OUTPUT);  
}
```

```
void draw() {
    background(255);
    titleAndSiteInfo(); //title and site infomation
    drawBuzzer(); //buzzer img
    if (buzzerState) {
        GPIO.digitalWrite(buzzerPin, GPIO.HIGH);
        drawArc(); //Sounds waves img
    } else {
        GPIO.digitalWrite(buzzerPin, GPIO.LOW);
    }
}

void mouseClicked() { //if the mouse Clicked
    buzzerState = !buzzerState; //Change the buzzer State
}
void drawBuzzer() {
    strokeWeight(1);
    fill(0);
    ellipse(width/2, height/2, 50, 50);
    fill(255);
    ellipse(width/2, height/2, 10, 10);
}
void drawArc() {
    noFill();
    strokeWeight(8);
    for (int i=0; i<3; i++) {
        arc(width/2, height/2, 100*(1+i), 100*(1+i), -PI/4, PI/4, OPEN);
    }
}
void titleAndSiteInfo() {
    fill(0);
    textAlign(CENTER); //set the text centered
    textSize(40); //set text size
    text("Active Buzzer", width / 2, 40); //title
    textSize(16);
    text("www.freenove.com", width / 2, height - 20); //site
}
```

Code in this project is based on similar logic with the previous "MouseLED". And the difference is that this project needs to draw the buzzer pattern and arc graphics after the buzzer sounding.




Chapter 6 ADC Module

In this chapter we will learn how to use ADC module.



Project 6.1 Voltmeter

This project uses ADC module to read potentiometer voltage value and display the value on Display Window.

Component List

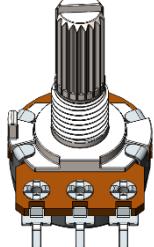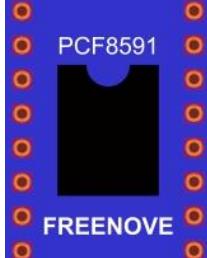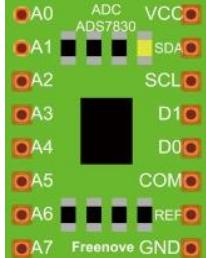
Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M x16
Rotary potentiometer x1	ADC module x1
	  Or
Resistor 10kΩ x2	

This product contains **only one ADC module**, which has two different types, PCF8591 and ADS7830. The functions involved in this tutorial are the same. Please build corresponding circuits according to different ADC module in your kit.

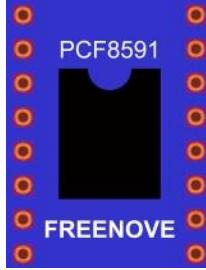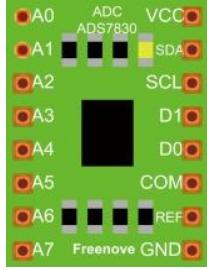
ADC module : PCF8591	ADC module : ADS7830
	

Circuit with PCF8591

Schematic diagram

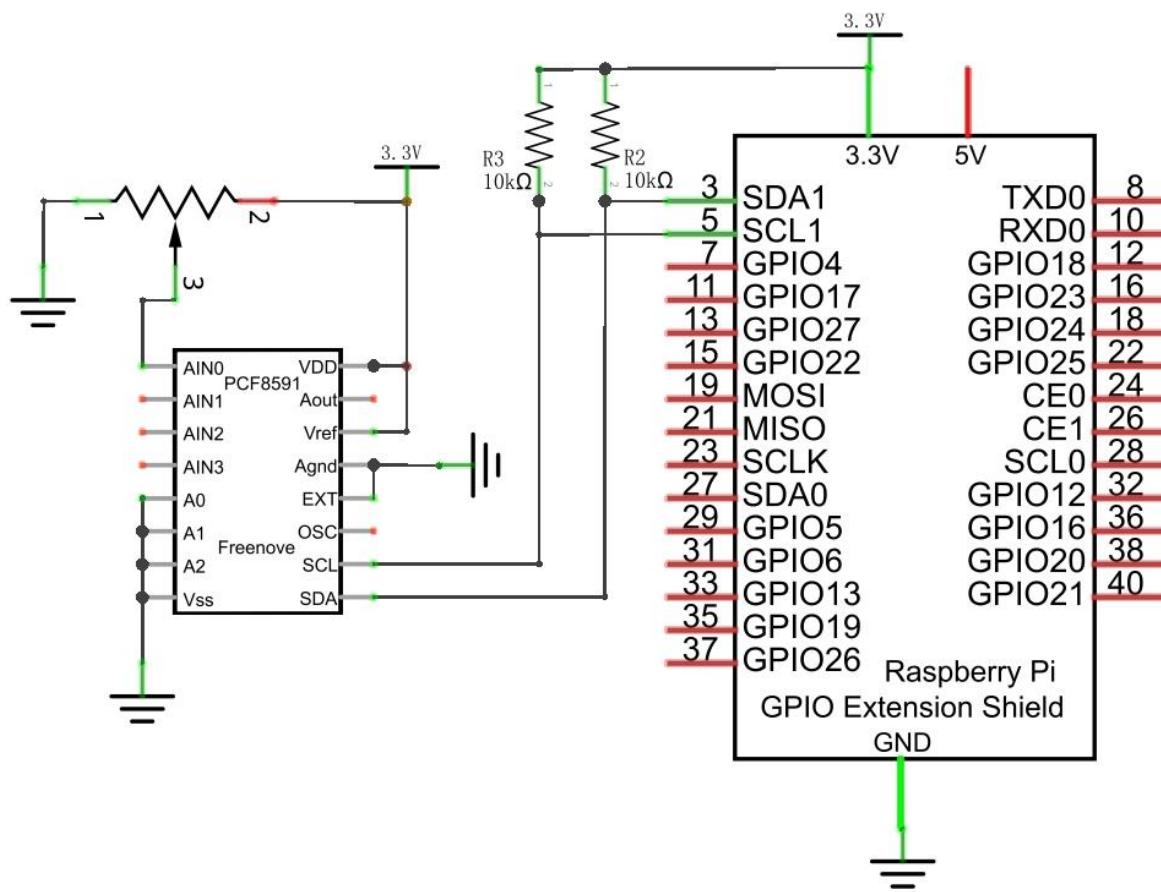


Hardware connection

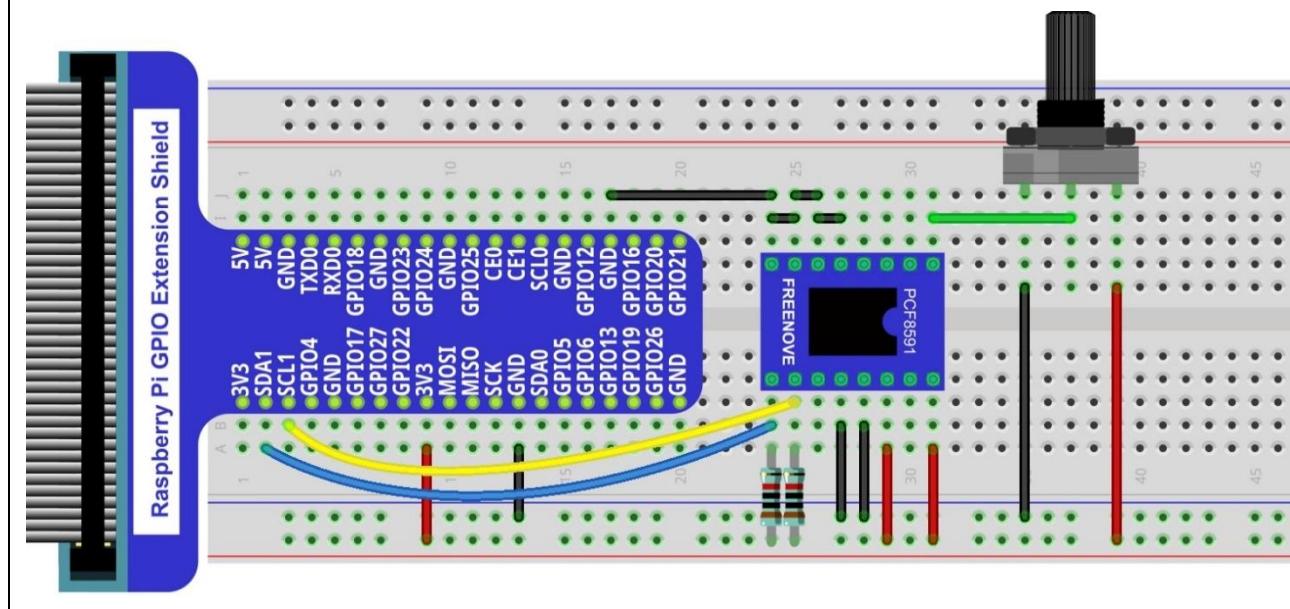


Circuit with ADS7830

Schematic diagram

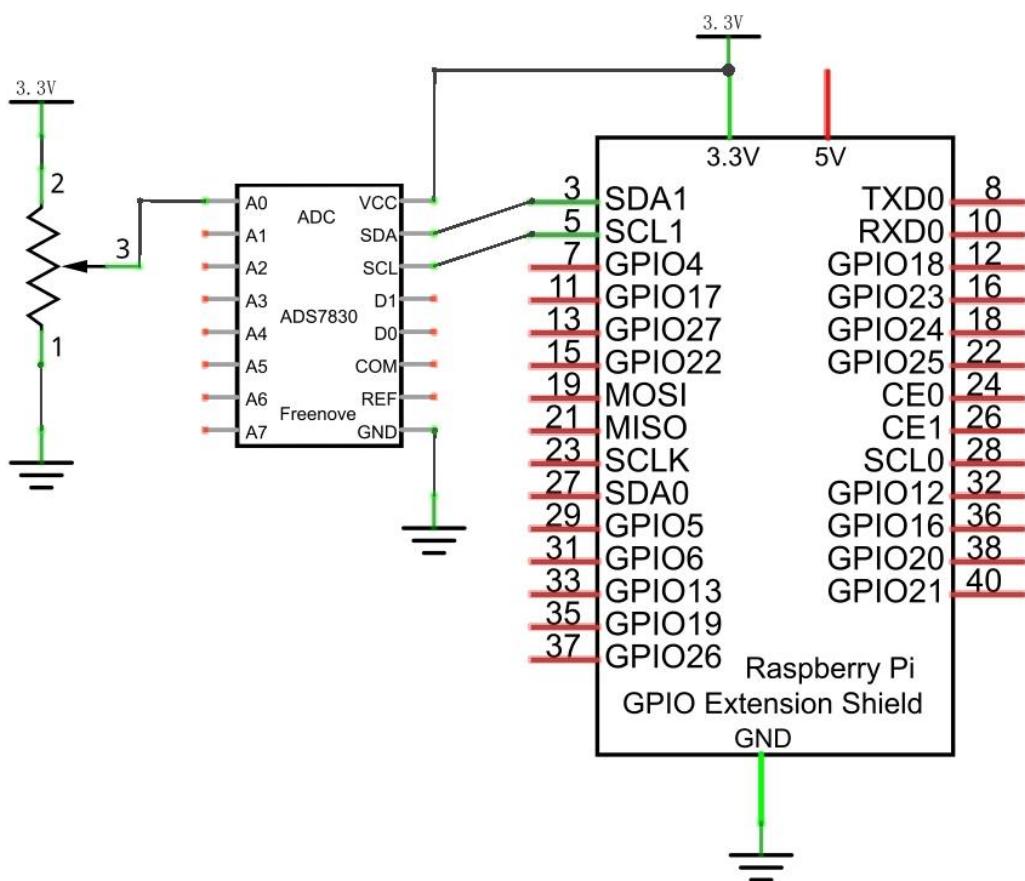

Hardware connection

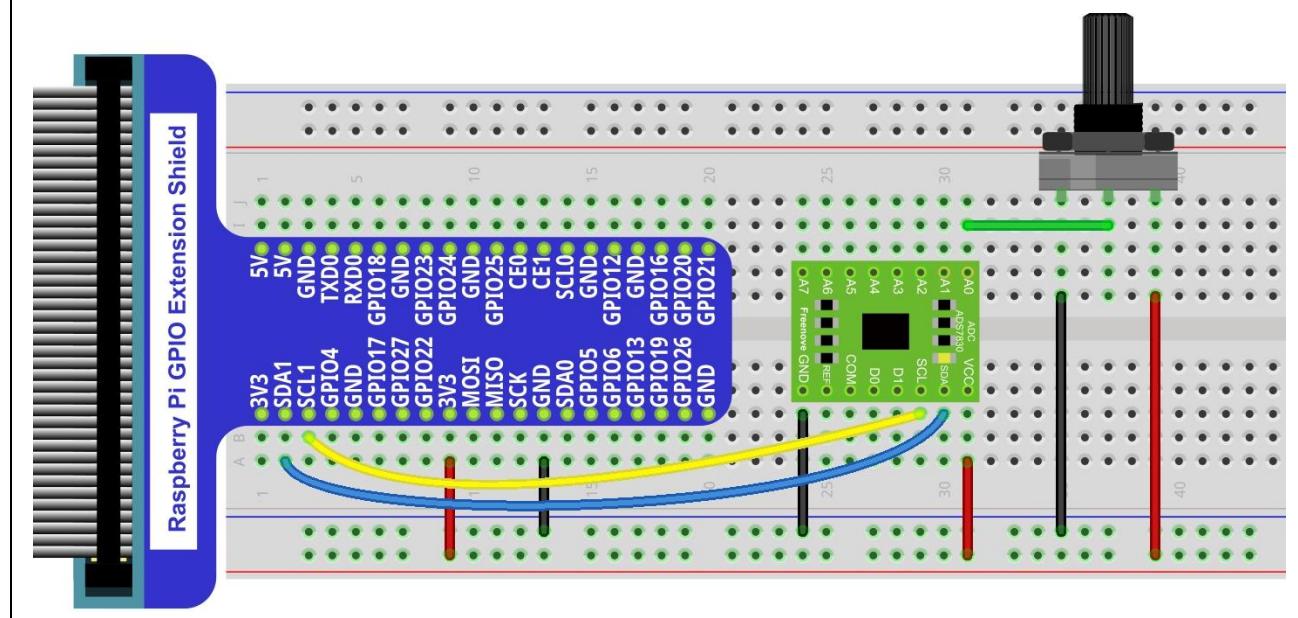

Sketch

Configure I2C (Necessary)


Enable I2C

There are some I2C chips in this kit like ADC module. The I2C interface of raspberry pi is closed in default. You need to open it manually as below:

Type command in the terminal:

```
sudo raspi-config
```

Then open the following dialog box:

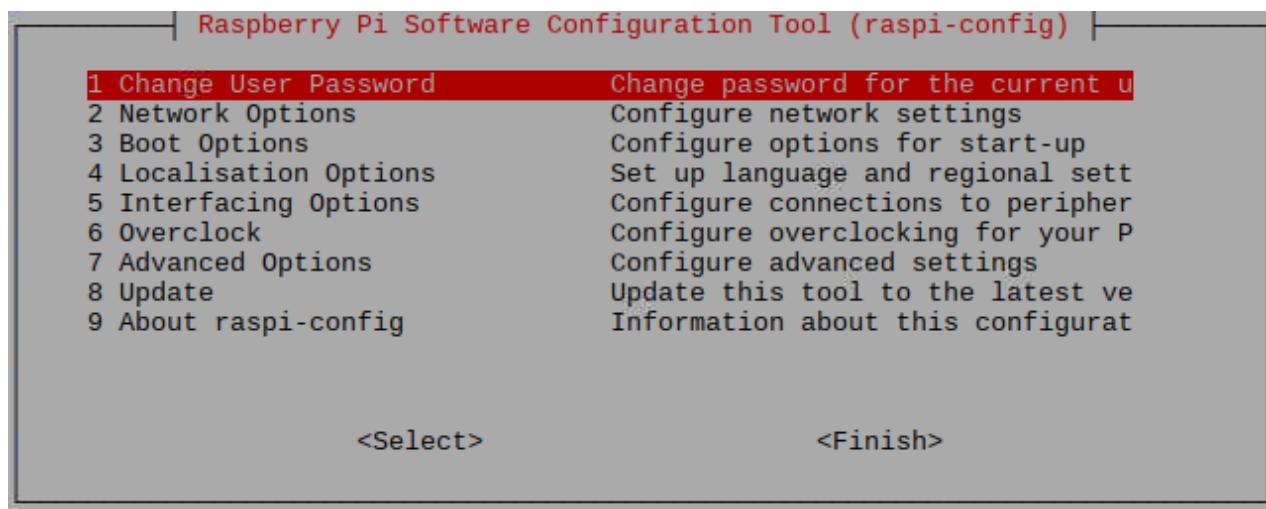

Choose “5 Interfacing Options” → “P5 I2C” → “Yes” → “Finish” in order and restart your RPi later. Then the I2C module is started.

Type a command to check whether the I2C module is started:

```
lsmod | grep i2c
```

If the I2C module has been started, the following content will be shown:

```
pi@raspberrypi:~ $ lsmod | grep i2c
i2c_bcm2708          4770  0
i2c_dev              5859  0
pi@raspberrypi:~ $
```

Install I2C-Tools

Type the command to install I2C-Tools.

```
sudo apt-get install i2c-tools
```

I2C device address detection:

```
i2cdetect -y 1
```

When you are using PCF8591, the result is below:

```
pi@raspberrypi:~ $ i2cdetect -y 1
  0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00: -----
10: -----
20: -----
30: -----
40:          48 -----
50: -----
60: -----
70: -----
```

Here, 48 (HEX) is the I2C address of ADC Module(PCF8591).

When you are using ADS, the result is below:

```
pi@raspberrypi:~ $ i2cdetect -y 1
  0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00: -----
10: -----
20: -----
30: -----
40:          -- 4b -----
50: -----
60: -----
70: -----
```

Here, 4b (HEX) is the I2C address of ADC Module (ADS7830).

Sketch 6.1.1 ADC

First observe the running result of the sketch, and then analyze the code.


1. Use Processing to open the file Sketch_06_1_1_ADC.

```
processing
```

```
~/Freenove_Kit/Processing/Sketches/Sketch_06_1_1_ADC/Sketch_06_1_1_ADC.pde
```

2. Click on "RUN" to run the code.

After the program is executed, Display Window shows the voltage value of the potentiometer, and the ADC value. Rotate the potentiometer to change the voltage output by potentiometer.

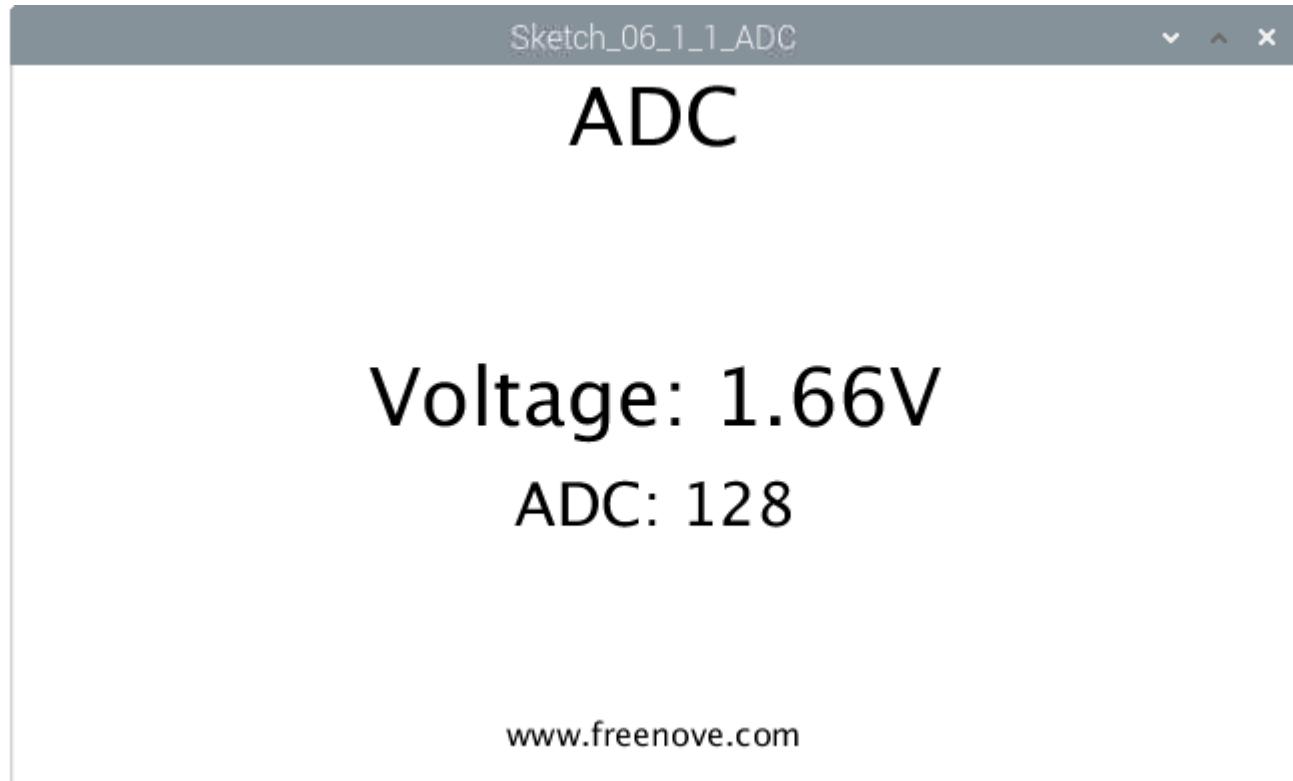

This project contains a lot of code files, and the core code is contained in the file Sketch_06_1_1_ADC. The other files only contain some custom classes.

```

Sketch_06_1_1_ADC | Processing 3.5.3
文件 编辑 速写本 调试 工具 帮助
Sketch_06_1_1_ADC ADCDevice ▾
1 //*****
2 * Filename    : Sketch_06_1_1_ADC
3 * Description : Making a voltmeter with Freenove ADC module.
4 * auther      : www.freenove.com
5 * modification: 2020/03/09
6 ****
7 import processing.io.*;
8 //Create a object of class ADCDevice
9 ADCDevice adc = new ADCDevice();

```

The following is program code:

```
1 import processing.io.*;
2 //Create a object of class ADCDevice
3 ADCDevice adc = new ADCDevice();
4 void setup() {
5     size(640, 360);
6     if (adc.detectI2C(0x48)) {
7         adc = new PCF8591(0x48);
8     } else if (adc.detectI2C(0x4b)) {
9         adc = new ADS7830(0x4b);
10    } else {
11        println("Not found ADC Module!");
12        System.exit(-1);
13    }
14}
15 void draw() {
16    int adcValue = adc.analogRead(0);      //Read the ADC value of channel 0
17    float volt = adcValue*3.3/255.0;      //calculate the voltage
18    background(255);
19    titleAndSiteInfo();
20
21    fill(0);
22    textAlign(CENTER);      //set the text centered
23    textSize(30);
24    text("ADC: "+nf(adcValue, 3, 0), width / 2, height/2+50);
25    textSize(40);          //set text size
26    text("Voltage: "+nf(volt, 0, 2)+"V", width / 2, height/2);    //
27}
28 void titleAndSiteInfo() {
29    fill(0);
30    textAlign(CENTER);      //set the text centered
31    textSize(40);          //set text size
32    text("ADC", width / 2, 40);    //title
33    textSize(16);
34    text("www. freenove. com", width / 2, height - 20);    //site
35 }
```

The project code mainly use PCF8591 class member function analogRead() to read ADC.

```
int adcValue = adc.analogRead(0); //Read the ADC value of channel 0
float volt = adcValue*3.3/255.0; //calculate the voltage
```

About class ADCDevice, PCF8591, ADS7830:

class ADCDevice

This is a base class, and all ADC module classes are subclasses of it. It provides two basic member functions.

```
public int analogRead(int chn)
```

This is a unified function name. Different chips have different implement methods. Therefore, specific method is implemented in subclasses.

```
public boolean detectI2C(int addr)
```

Used to detect I2C device with a given address. If it exists, it returns true, otherwise it returns false.

class PCF8591 extends ADCDevice

This is a custom class that is used to operate the ADC and DAC of PCF8591.

```
public PCF8591(int addr)
```

Constructor, used to create a PCF8591 class object, parameters for the I2C PCF8591 device address.

```
public int analogRead(int chn)
```

Used to read ADC value of one channel of PCF8591, the parameter CHN indicates the channel number: 0,1,2,3.

```
public byte[] analogRead()
```

Read ADC values of all channels of PCF8591.

```
public void analogWrite(int data)
```

Write a DAC value to PCF8591.

class ADS7830 extends ADCDevice

This is a custom class that is used to operate the ADC of ADS7830.

```
public ADS7830(int addr)
```

Constructor, used to create a ADS7830 class object, parameters for the I2C ADS7830 device address.

```
public int analogRead(int chn)
```

Used to read ADC value of one channel of ADS7830, the parameter CHN indicates the channel number: 0,1,2,3,4,5,6,7.




Chapter 7 ADC & LED

In this chapter, we will combine ADC and PWM to control the brightness of LED.

Project 7.1 SoftLight


In this project, we will make a softlight, namely, using a potentiometer to control the brightness of LED.

Component List

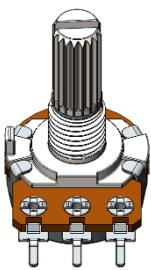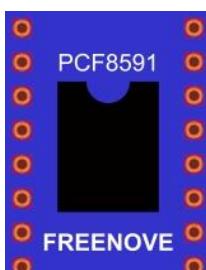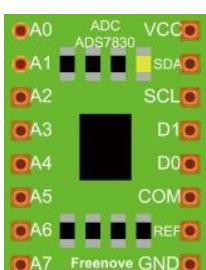
Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M x17 			
Rotary potentiometer x1 	ADC module x1  Or 	10kΩ x2 	220Ω x1 	LED x1 

Circuit with PCF8591

Schematic diagram

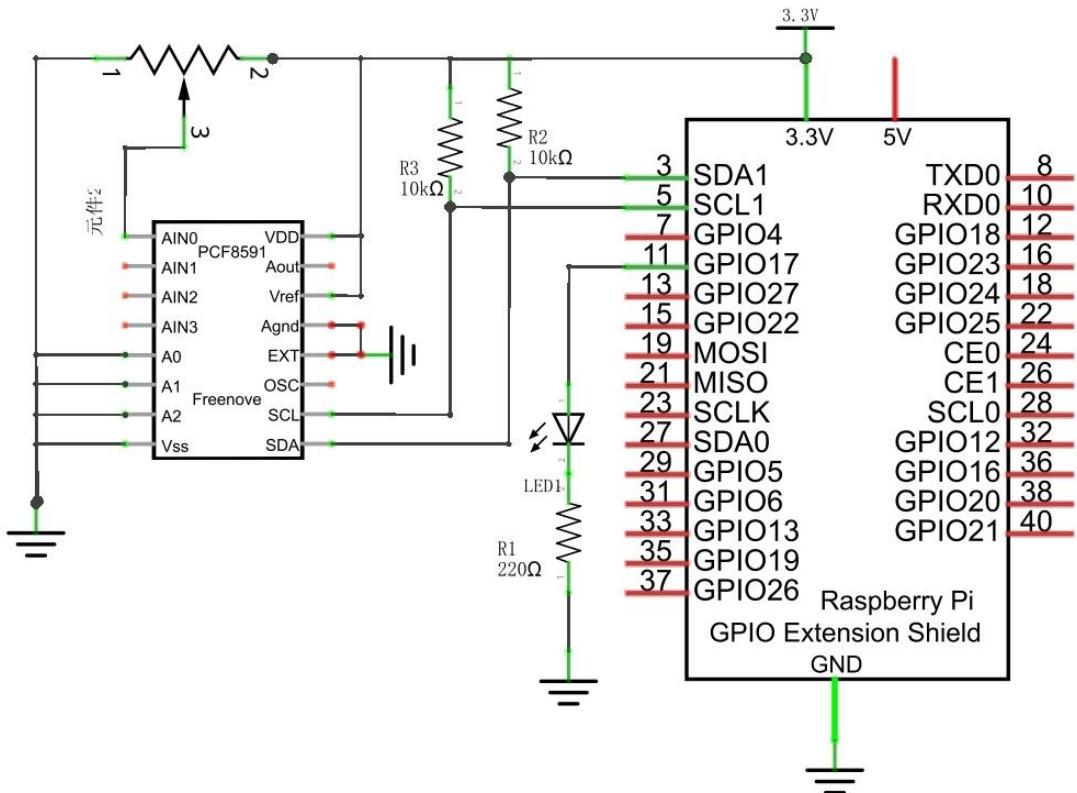


Hardware connection

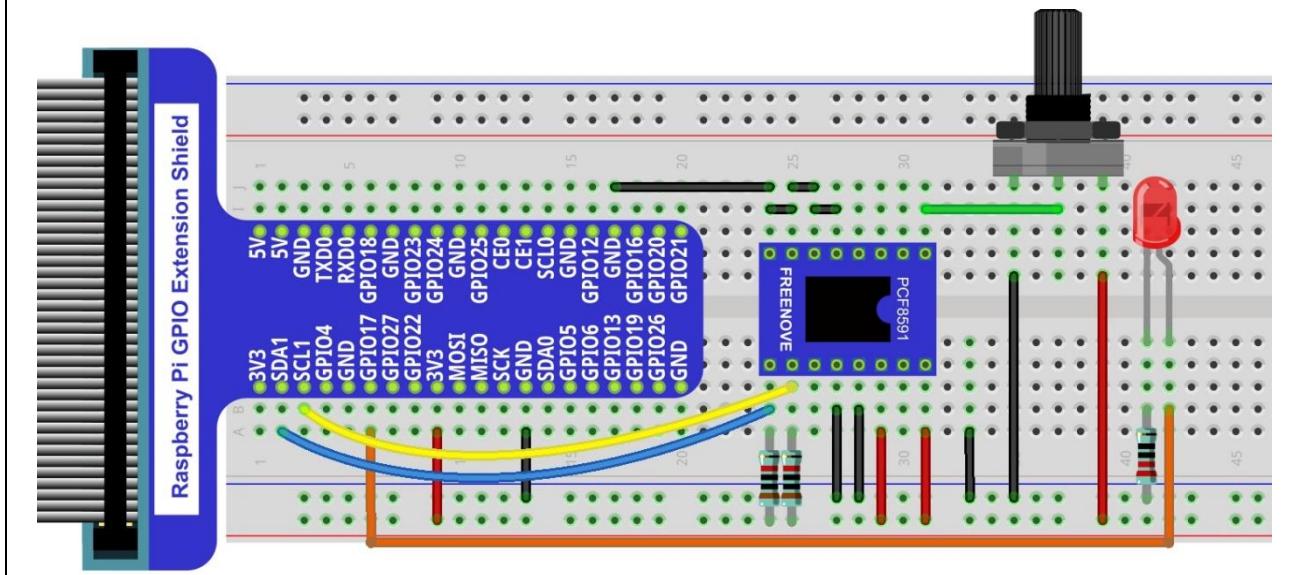


Circuit with ADS7830

Schematic diagram

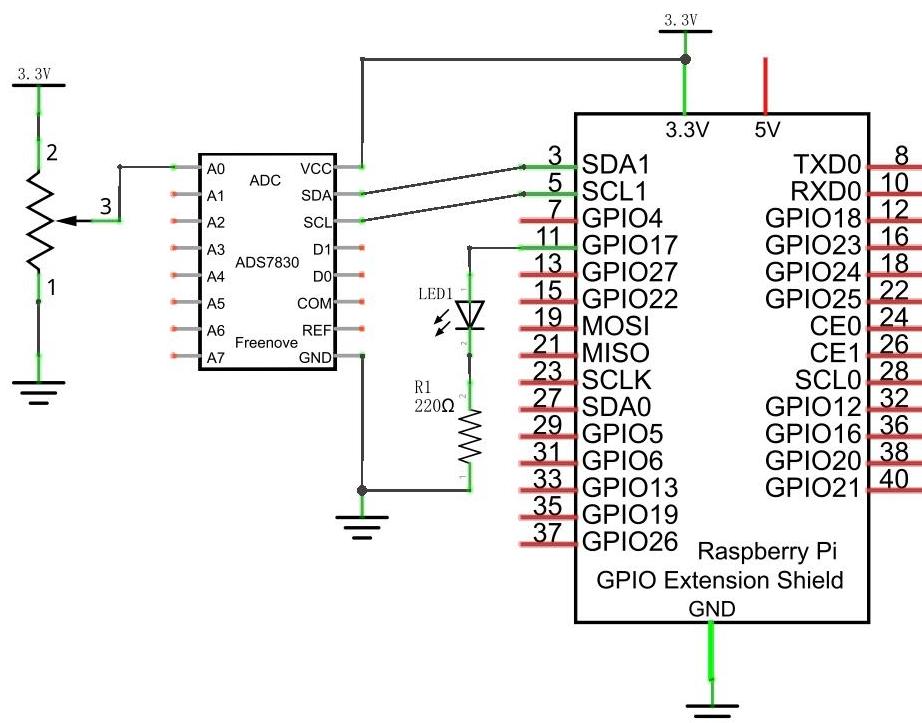

Hardware connection

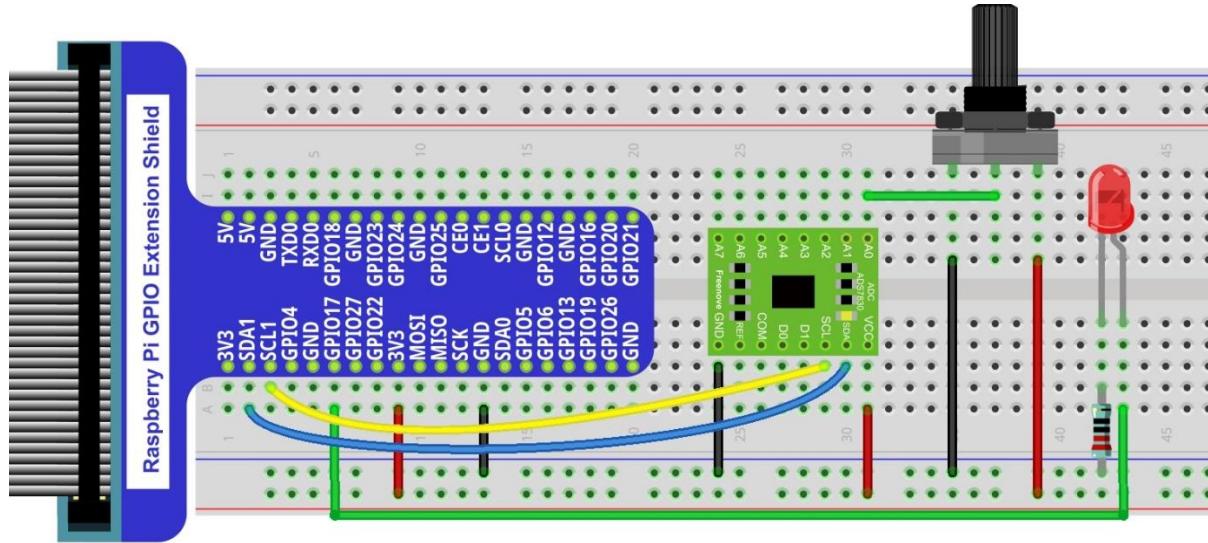



Sketch

If you did not [configure I2C](#), please refer to Chapter 6. If you did, please move on.

Sketch 7.1.1 SoftLight


First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_07_1_1_SoftLight.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_07_1_1_SoftLight/Sketch_07_1_1_SoftLi  
ght.pde
```

2. Click on "RUN" to run the code.

After the program is executed, the Display Window will show the voltage value of potentiometer, the ADC value and a LED pattern. Rotate potentiometer to change the voltage value and the brightness of the LED.

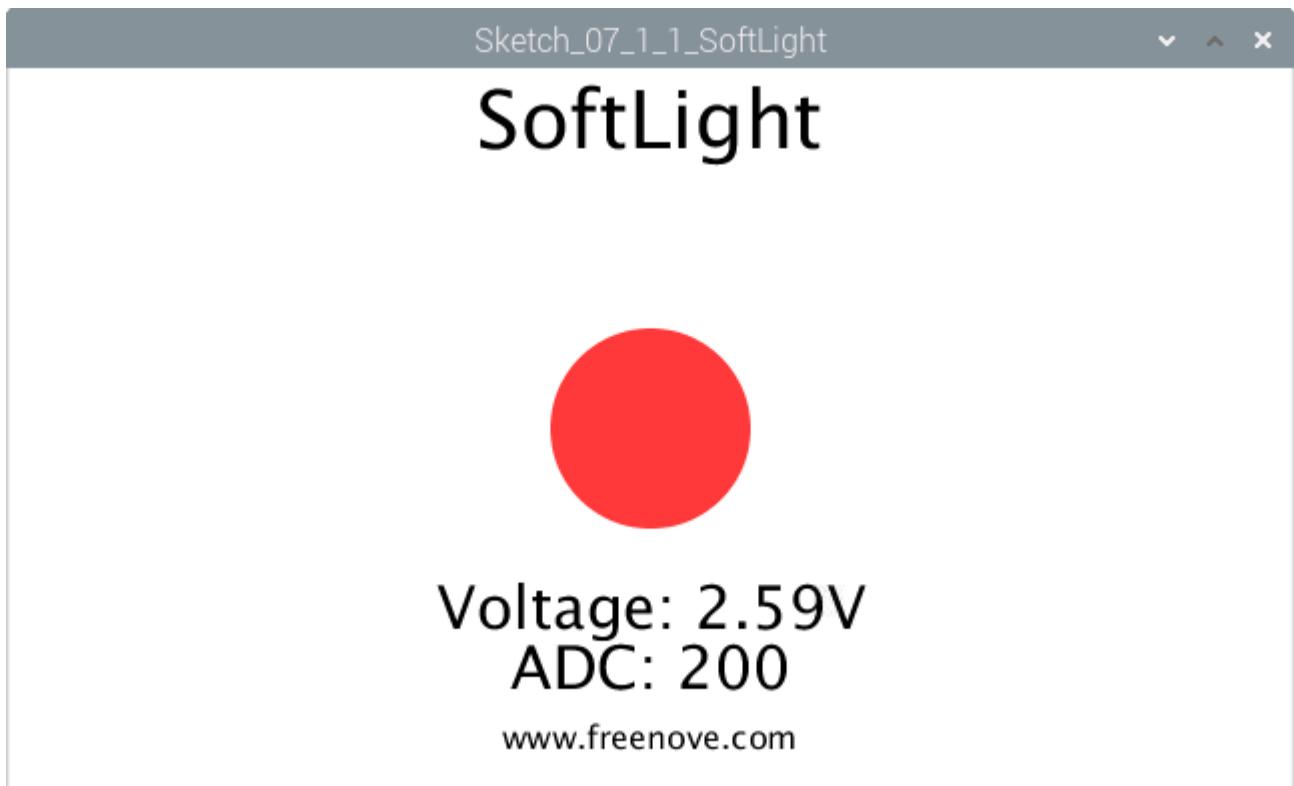

This project contains a lot of code files, and the core code is contained in the file Sketch_07_1_1_SoftLight. The other files only contain some custom classes.



The following is program code:

```
1 import processing.io.*;

2

3 int ledPin = 17; //led
4 //Create a object of class ADCDevice
5 ADCDevice adc = new ADCDevice();
6 SOFTPWM p = new SOFTPWM(ledPin, 0, 100);
7 void setup() {
8     size(640, 360);
9     if (adc.detectI2C(0x48)) {
10         adc = new PCF8591(0x48);
11     } else if (adc.detectI2C(0x4b)) {
12         adc = new ADS7830(0x4b);
13     } else {
14         println("Not found ADC Module!");
15         System.exit(-1);
16     }
17 }
18 void draw() {
19     int adcValue = adc.analogRead(0); //Read the ADC value of channel 0
20     float volt = adcValue*3.3/255.0; //calculate the voltage
21     float dt = adcValue/255.0;
22     p.softPwmWrite((int)(dt*100)); //output the pwm
23     background(255);
24     titleAndSiteInfo();
25
26     fill(255, 255-dt*255, 255-dt*255); //cycle
27     noStroke(); //no border
28     ellipse(width/2, height/2, 100, 100);
29
30     fill(0);
```

```
31   textAlign(CENTER);    //set the text centered
32   textSize(30);
33   text("ADC: "+nfadcValue, 3, 0), width / 2, height/2+130);
34   text("Voltage: "+nfvolt, 0, 2)+"V", width / 2, height/2+100);    //
35 }
36 void titleAndSiteInfo() {
37   fill(0);
38   textAlign(CENTER);    //set the text centered
39   textSize(40);        //set text size
40   text("SoftLight", width / 2, 40);    //title
41   textSize(16);
42   text("www. freenove. com", width / 2, height - 20);    //site
43 }
```



In this project code, get the ADC value of the potentiometer, then map it into the PWM duty cycle of LED to control its brightness. In Display Window, the color filled in LED pattern changes to simulate the brightness change of LED.

```
int adcValue = adc.analogRead(0);    //Read the ADC value of channel 0
float volt = adcValue*3.3/255.0;    //calculate the voltage
float dt = adcValue/255.0;
p.softPwmWrite((int)(dt*100));    //output the pwm
```

Project 7.2 NightLamp

In this project, we will use Photoresistor, used to intense ambient light, to make a NightLamp. When the ambient light get dark, LED brightness wil be enhanced automatically. Conversely, the LED brightness will be weakened automatically.


Component List

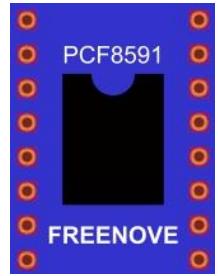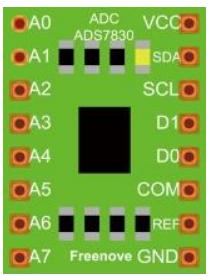Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M			
Photoresistor x1 	ADC module x1  Or 	10kΩ x3 	220Ω x1 	LED x1 


Circuit with PCF8591

The circuit of this experiment is similar to the one in last chapter. The only difference is that the input signal of the AIN0 pin of ADC is changed from a potentiometer to combination of a photoresistor and a resistor.

Schematic diagram

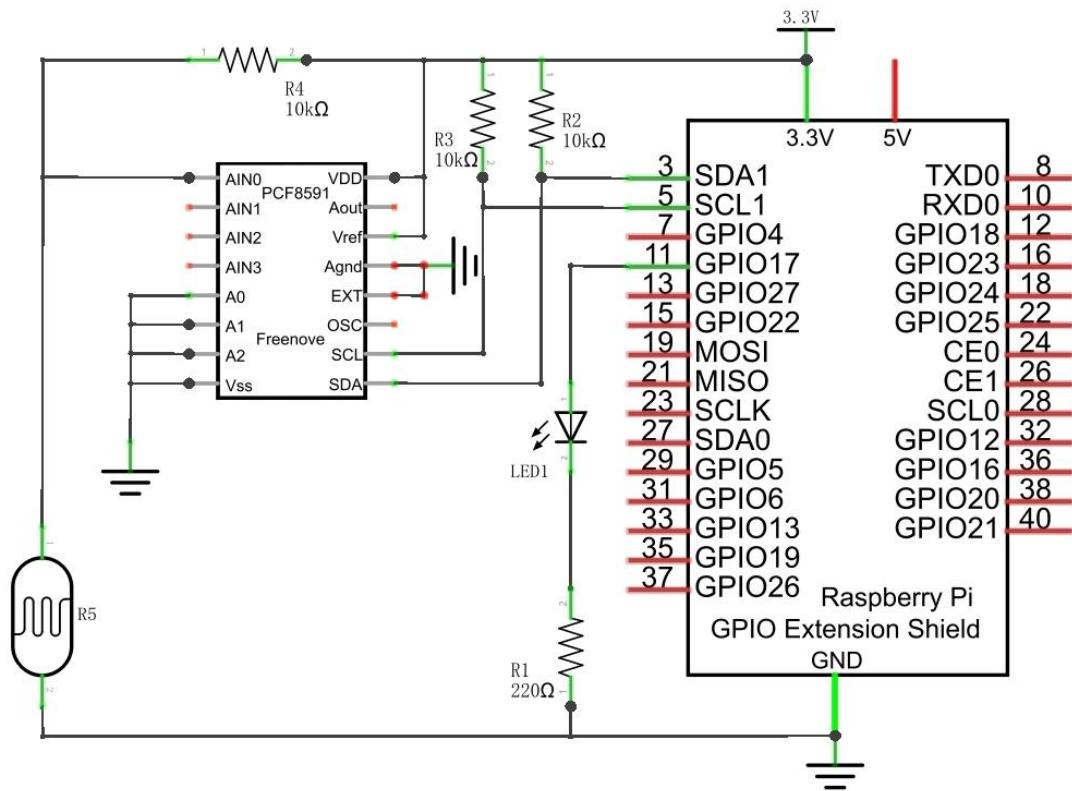


Hardware connection

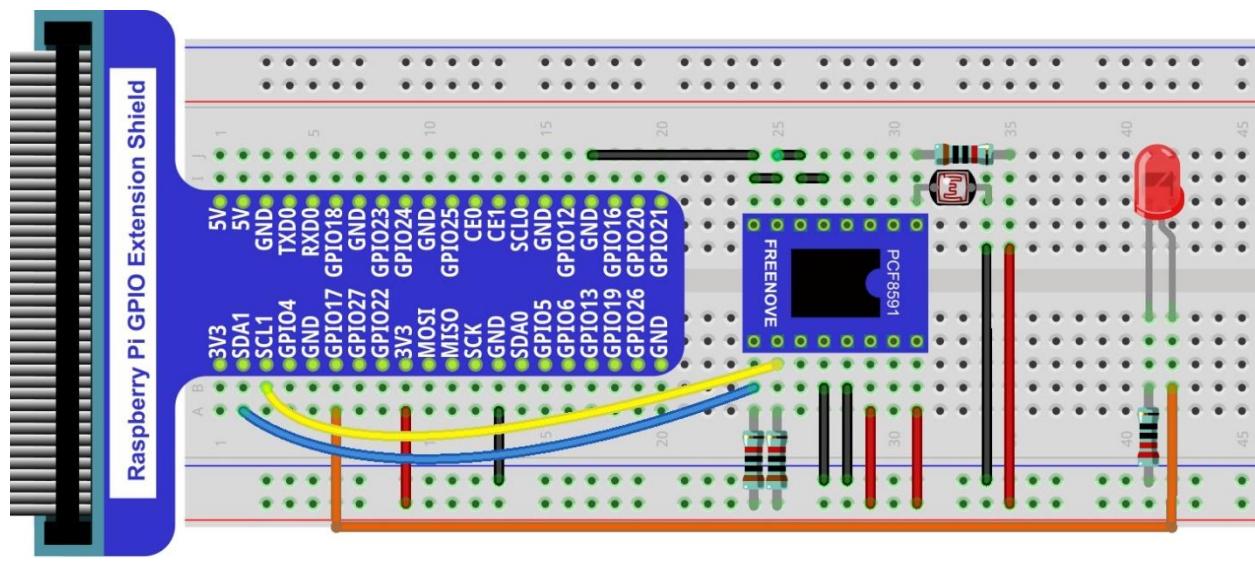


Circuit with ADS7830

The circuit of this experiment is similar to the one in last chapter. The only difference is that the input signal of the AIN0 pin of ADC is changed from a potentiometer to combination of a photoresistor and a resistor.

Schematic diagram

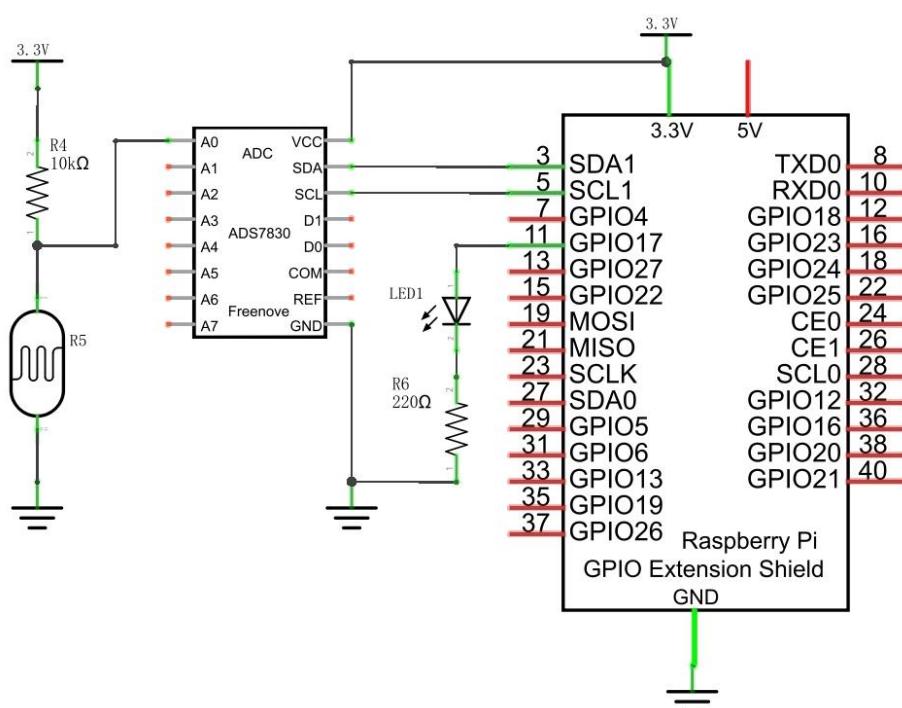

Hardware connection

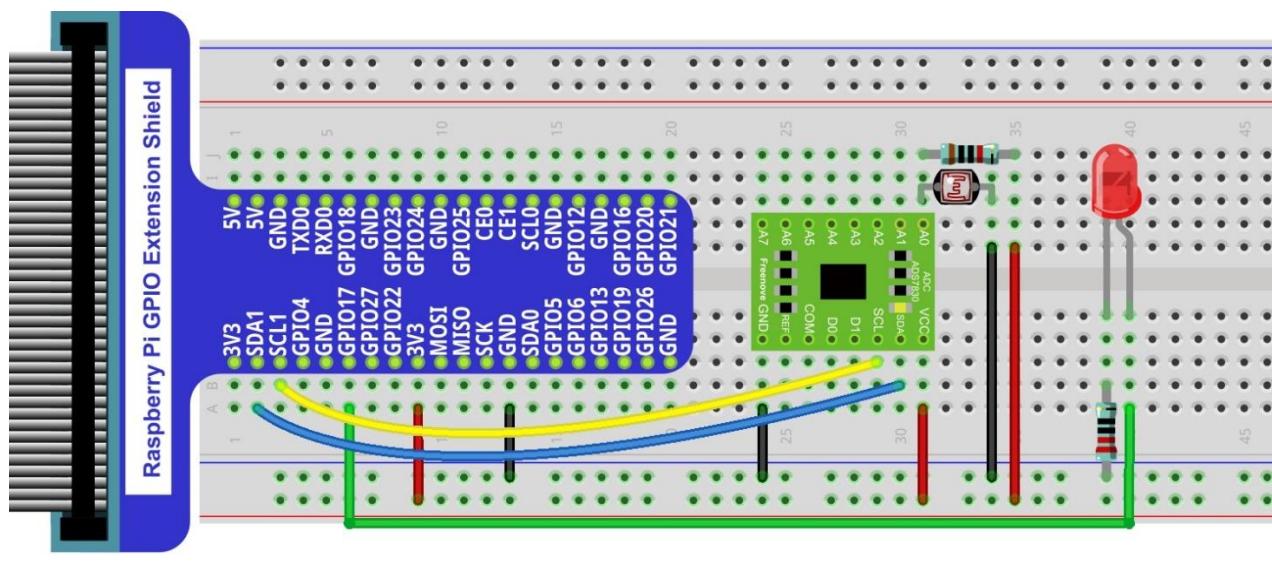

Sketch

The project code is the same as the last section "SoftLight" in addition to the title.



Chapter 8 Thermistor

In this chapter, we will learn how to use thermistor.

Project 8.1 Thermometer

In this project, we will use a thermistor to make a thermometer.

Component List

Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M
Thermistor x1	ADC module x1
A small black cylindrical component with two wires extending from it.	A blue PCB labeled "PCF8591" with "FREENOVE" printed on it. It has 16 pins around the perimeter. Below it is a green PCB labeled "ADS7830" with various pins labeled A0-A7, VCC, GND, SDA, SCL, D0-D1, COM, and REF. Or A green PCB labeled "ADS7830" with various pins labeled A0-A7, VCC, GND, SDA, SCL, D0-D1, COM, and REF.
	Resistor 10kΩ x3

Component knowledge

First Review the knowledge of thermistor. The relationship between resistance value and temperature of thermistor is:

$$R_t = R_n \cdot e^{B \cdot (1/T - 1/T_n)}$$

Where:

R_t is the thermistor resistance under T₂ temperature;

R is in the nominal resistance of thermistor under T₁ temperature;

EXP[n] is nth power of E;

B is for thermal index;


T₁, T₂ is Kelvin temperature (absolute temperature). Kelvin temperature=273.15+celsius temperature.

Parameters of the thermistor we use is: B=3950, R=10k, T₁=25.


Circuit with PCF8591

The circuit of this experiment is similar to the one in the last chapter. The only difference is that the photoresistor is replaced by the thermistor.

Schematic diagram

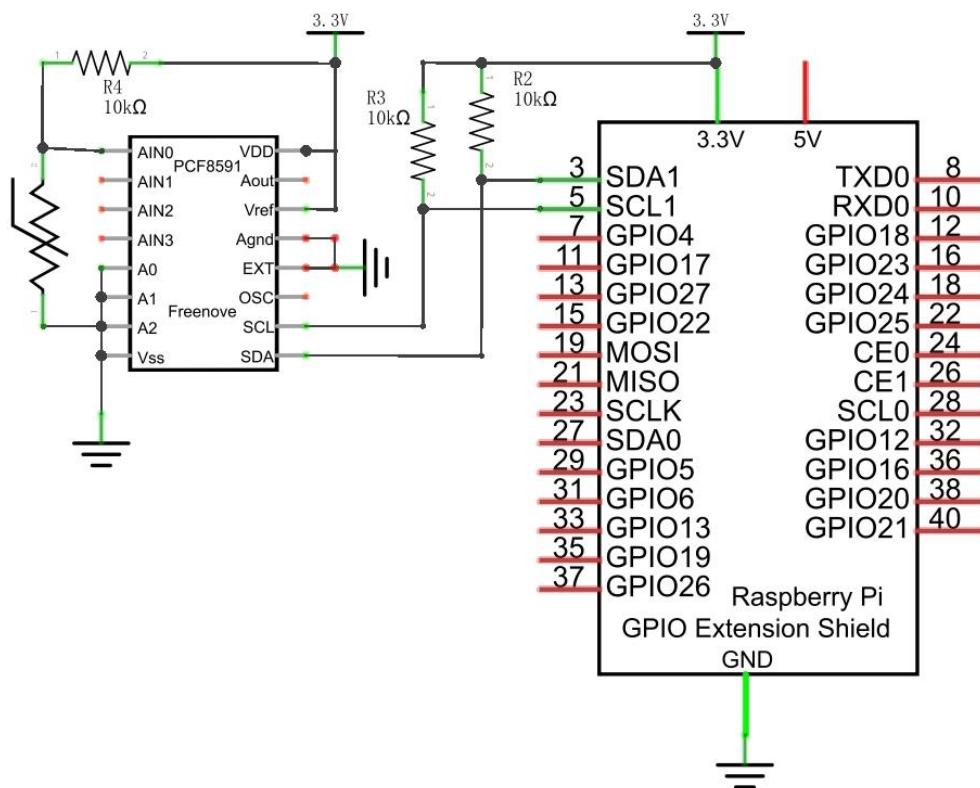

Hardware connection

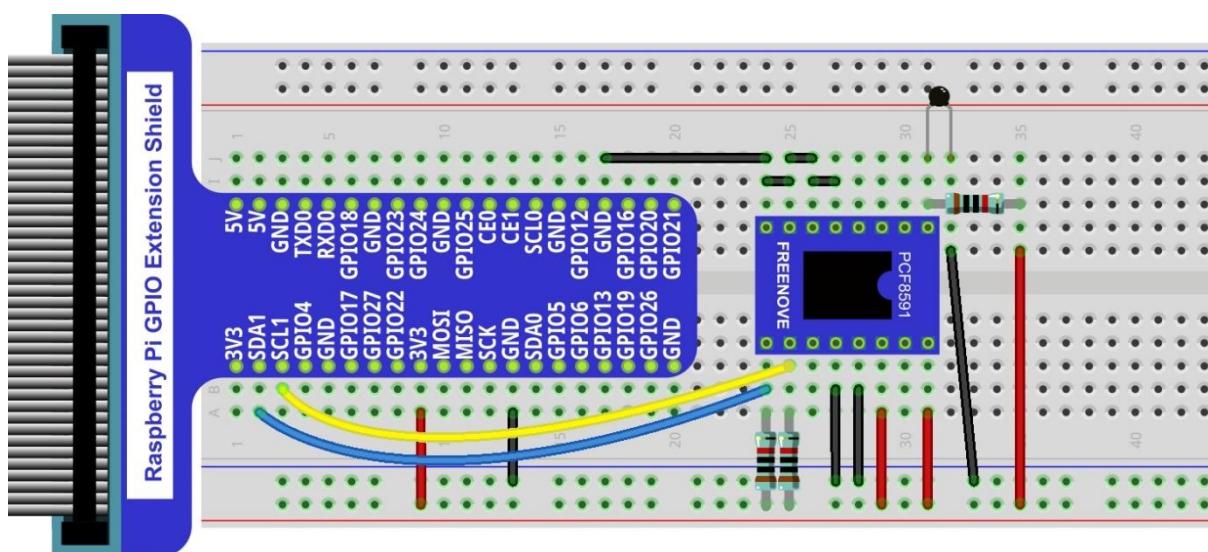


The formula for calculating temperature according to the circuit is shown below:

$$T_2 = 1/(1/T_1 + \ln(R_t/R)/B)$$


Circuit with ADS7830

The circuit of this project is similar to the one in last chapter. The only difference is that the photoresistor is replaced by the thermistor.

Schematic diagram

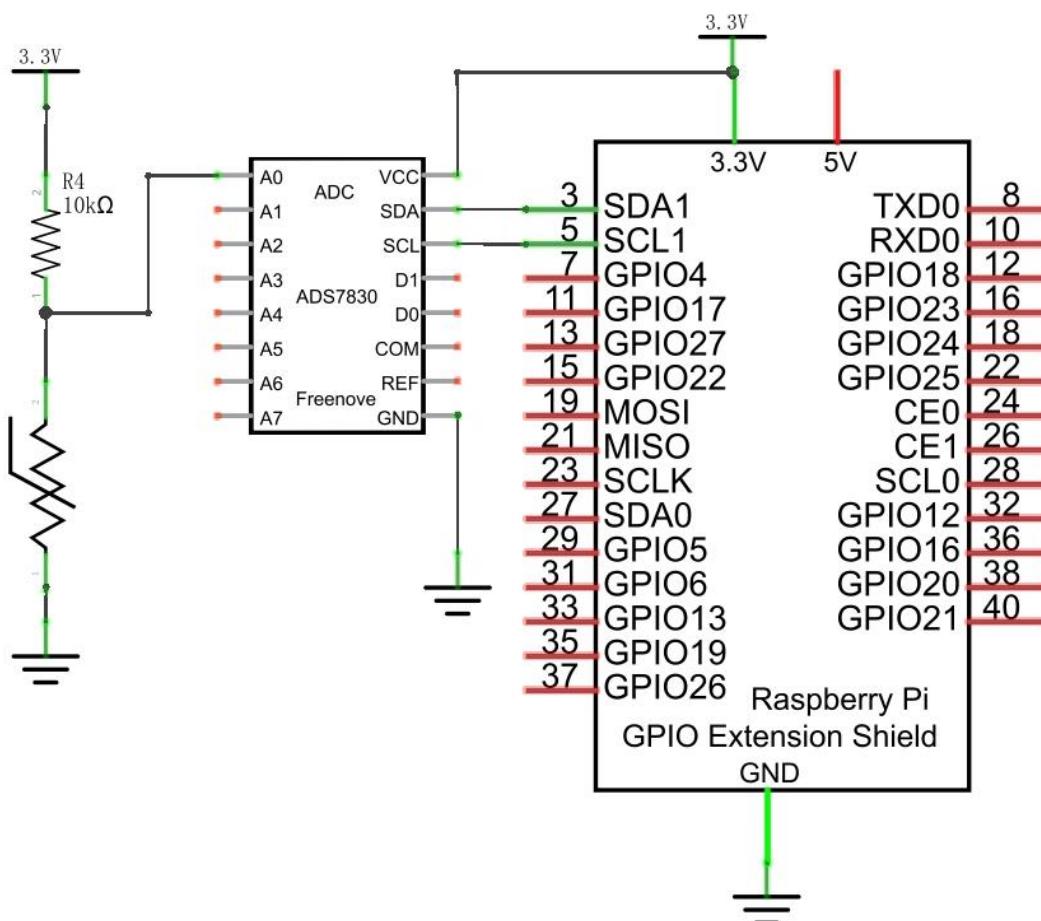

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

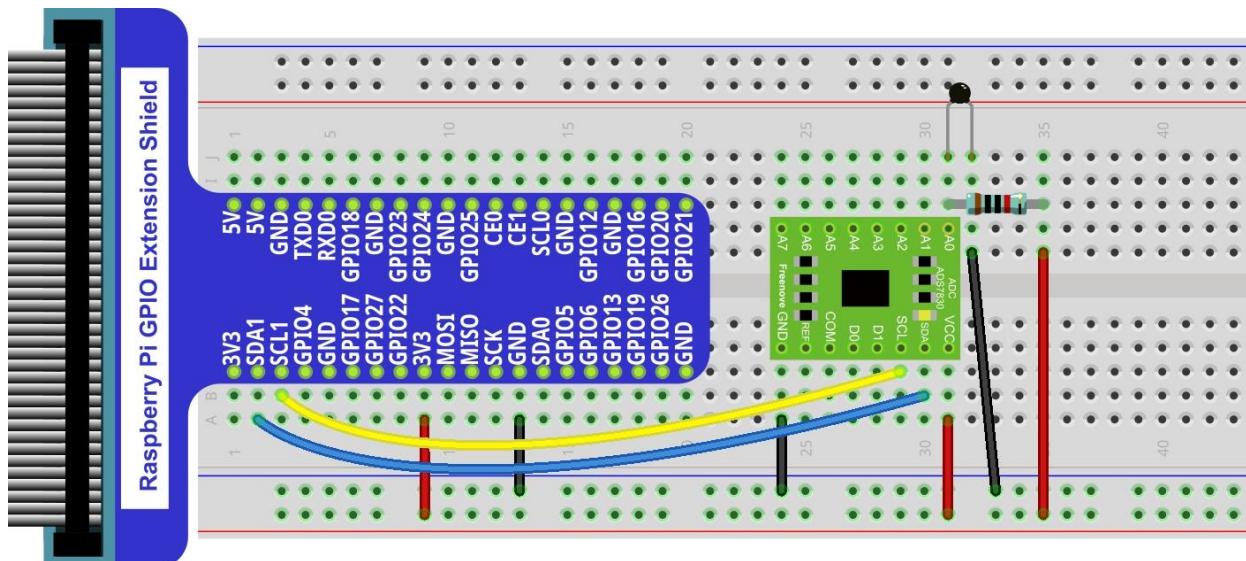

Sketch

Sketch 8.1.1 Thermometer


First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_08_1_1_Thermometer.


```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_08_1_1_Thermometer/Sketch_08_1_1_Thermometer.pde
```

2. Click on "RUN" to run the code.

After the program is executed, the Display Window will show the current temperature, the ADC value and the voltage value.

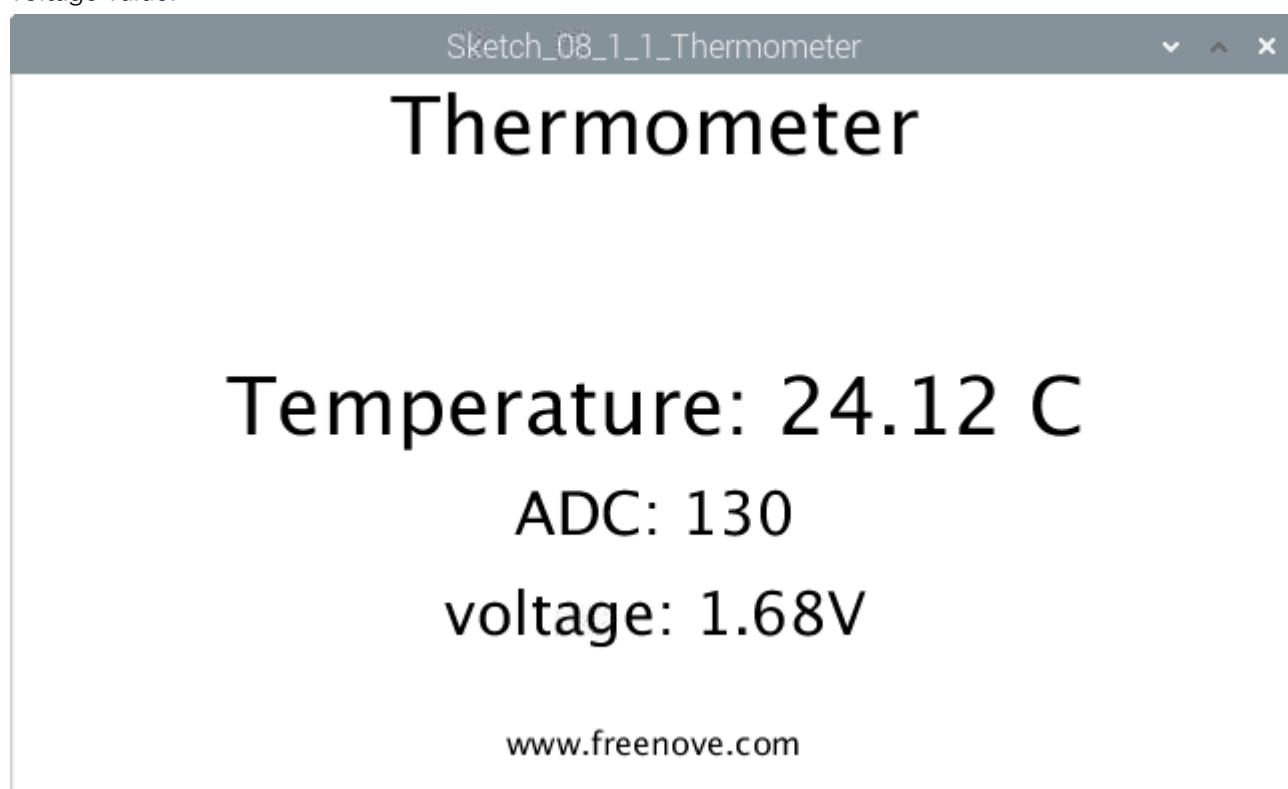

This project contains a lot of code files, and the core code is contained in the file Sketch_08_1_1_Thermometer. The other files only contain some custom classes.

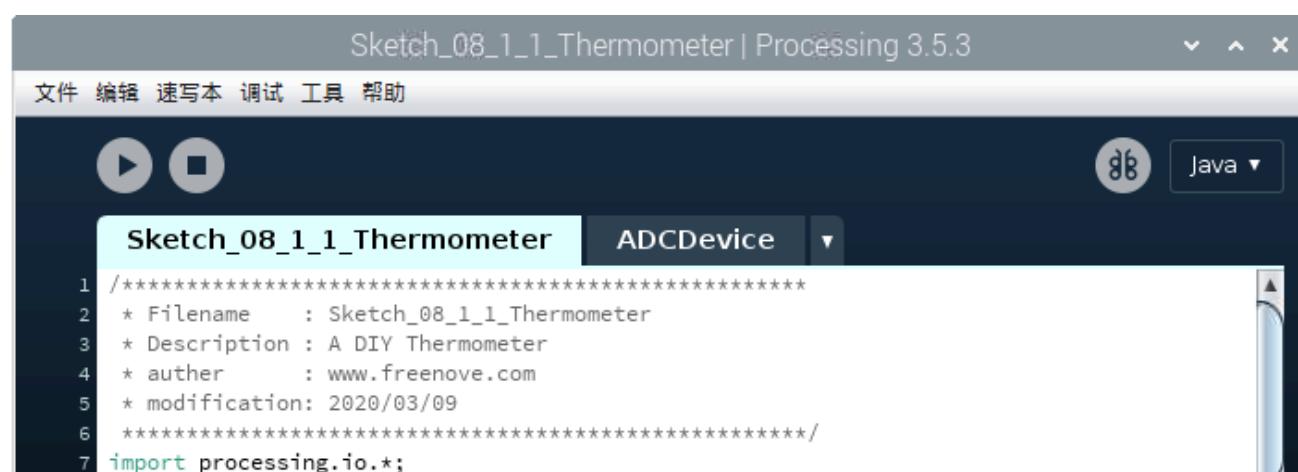

The following is program code:

```
1 import processing.io.*;
2 //Create a object of class ADCDevice
3 ADCDevice adc = new ADCDevice();
4 void setup() {
5     size(640, 360);
6     if (adc.detectI2C(0x48)) {
7         adc = new PCF8591(0x48);
8     } else if (adc.detectI2C(0x4b)) {
9         adc = new ADS7830(0x4b);
10    } else {
11        println("Not found ADC Module!");
12        System.exit(-1);
13    }
14}
15 void draw() {
16    int adcValue = adc.analogRead(0);      //Read the ADC value of channel 0
17    float volt = adcValue*3.3/255.0;      //calculate the voltage
18    float tempK, tempC, Rt;              //
19    Rt = 10*volt / (3.3-volt);          //calculate the resistance value of thermistor
20    tempK = 1/(1/(273.15+25) + log(Rt/10)/3950); //calauulate temperature(Kelvin)
21    tempC = tempK - 273.15;             //calauulate temperature(Celsius)
22
23    background(255);
24    titleAndSiteInfo();
25
26    fill(0);
27    textAlign(CENTER);    //set the text centered
28    textSize(30);
29    text("ADC: "+nf(adcValue, 0, 0), width / 2, height/2+50);
30    textSize(30);
31    text("voltage: "+nf(volt, 0, 2)+"V", width / 2, height/2+100);
32    textSize(40);           //set text size
33    text("Temperature: "+nf(tempC, 0, 2)+" C", width / 2, height/2);   //
34}
35 void titleAndSiteInfo() {
36    fill(0);
37    textAlign(CENTER);    //set the text centered
38    textSize(40);         //set text size
39    text("Thermometer", width / 2, 40);    //title
40    textSize(16);
41    text("www.freenove.com", width / 2, height - 20); //site
42}
```

In this project code, first read ADC, and then calculate the current temperature according to the Ohm's law and temperature formula mentioned before, finally display them on Display Window.

```
int adc = pcf.analogRead(0);      //Read the ADC value of channel 0
float volt = adc*3.3/255.0;      //calculate the voltage
float tempK, tempC, Rt;          //
Rt = 10*volt / (3.3-volt);      //calculate the resistance value of thermistor
tempK = 1/(1/(273.15+25) + log(Rt/10)/3950); //calaulate temperature(Kelvin)
tempC = tempK - 273.15;         //calaulate temperature(Celsius)
```





Chapter 9 Motor & Driver

In this chapter, we will learn how to use DC motor, including how to control the speed and direction of the motor.

Project 9.1 Motor

In this project, we use L293D to drive the DC motor. We can click on the button in the Processing Display Window to control motor direction, and drag the progress bar to control the motor speed.


Component List

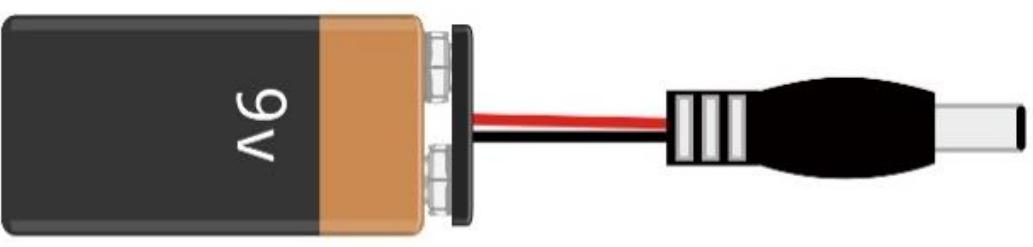Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M x22	
Breadboard power module x1	 Motor x1	 L293D
9V Battery (provided by yourself) & battery cable		
		


Circuit

When connecting the circuit, pay attention to that because the motor is a high-power component, do not use the power provided by the RPi, which may do damage to your RPi. the logic circuit can be powered by RPi power or external power supply which should have the common ground with RPi.

Schematic diagram

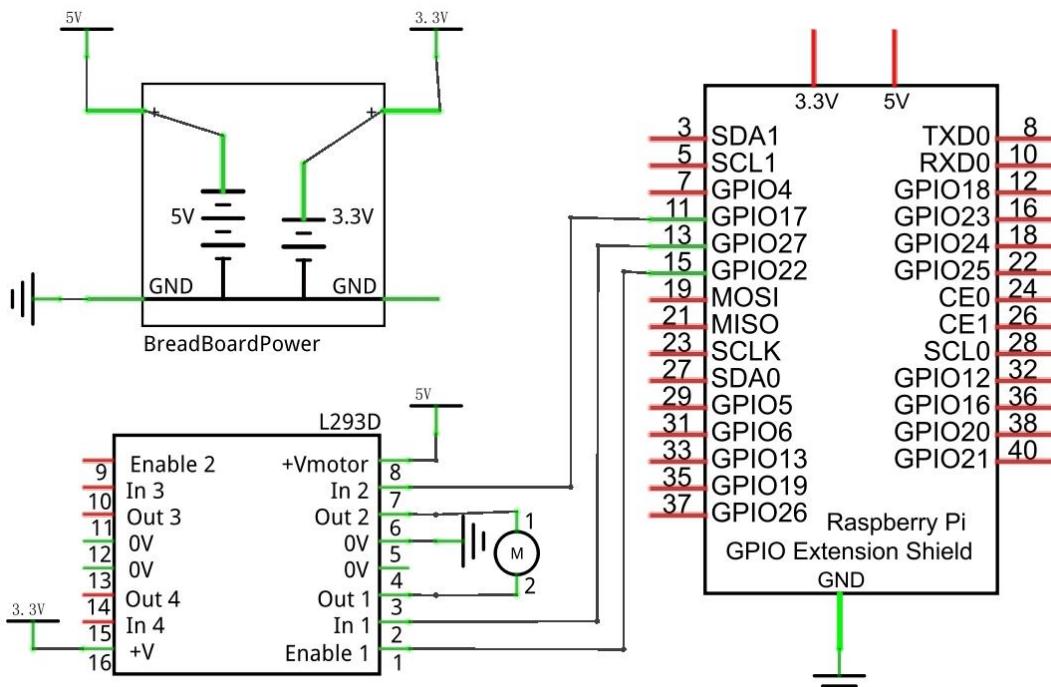

Hardware connection

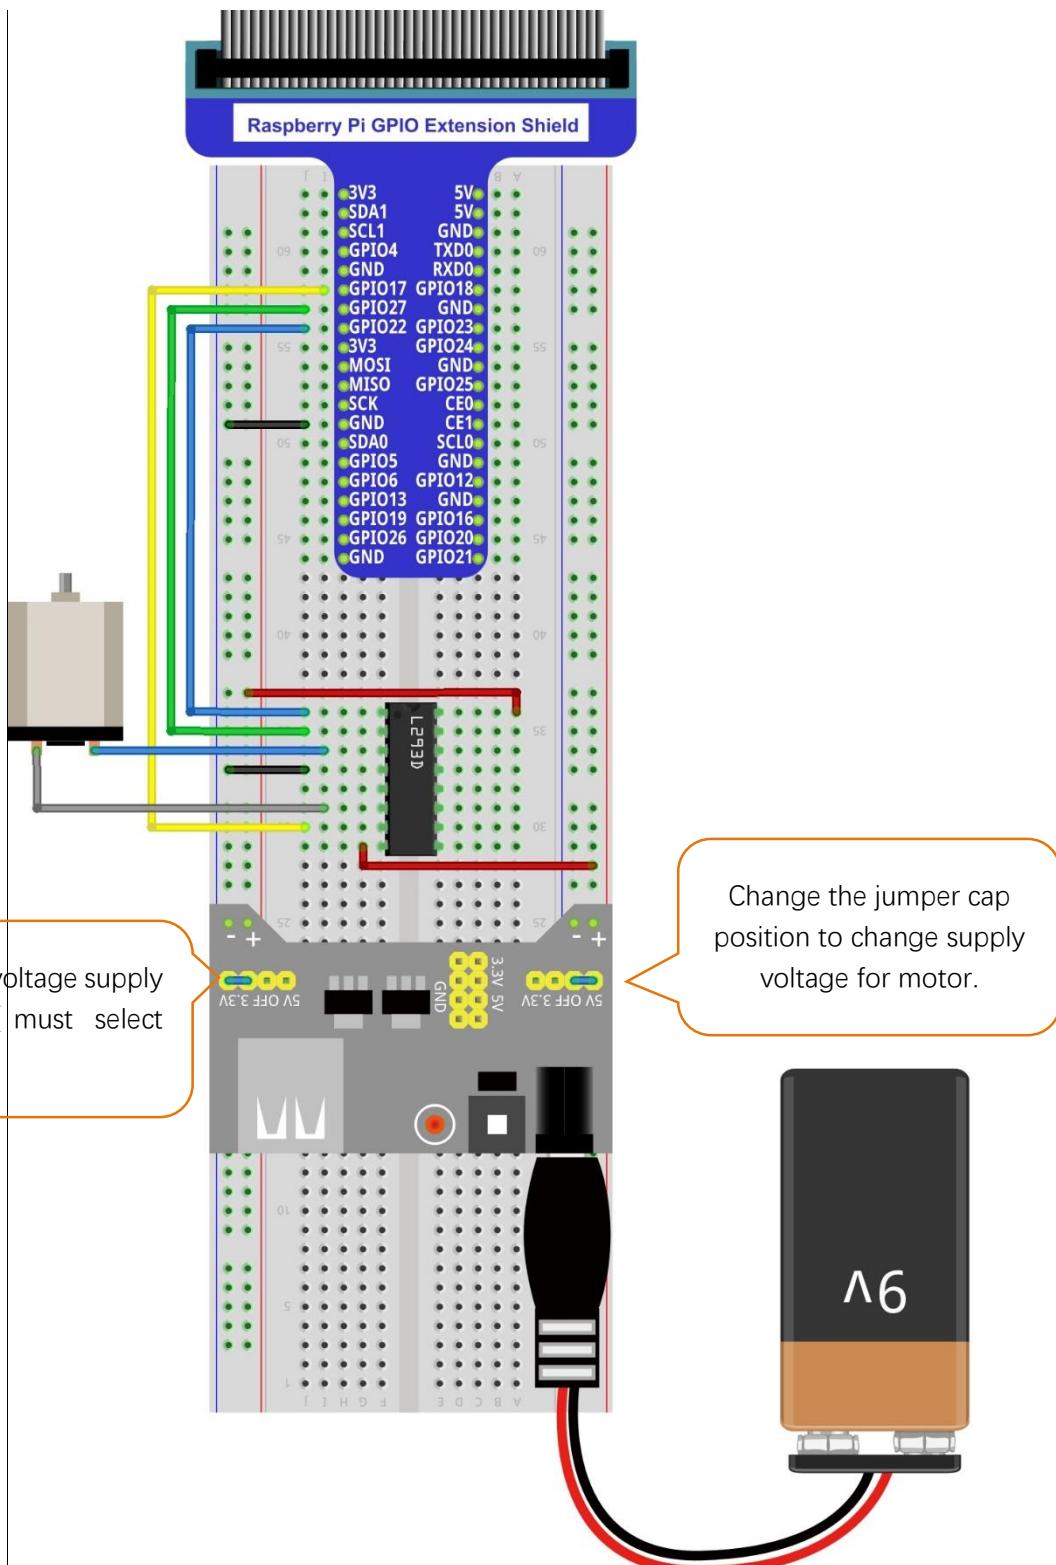

Sketch

Sketch 9.1.1 Motor


First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_09_1_1_Motor.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_09_1_1_Motor/Sketch_09_1_1_Motor.pde
```

2. Click on "RUN" to run the code.

After the program is executed, a virtual fan, a button and a progress bar are shown in Display Window. Dragging the progress bar can change the motor speed, and the virtual fan will rotate with different speed accordingly. Clicking Button with mouse can change the motor rotation direction.

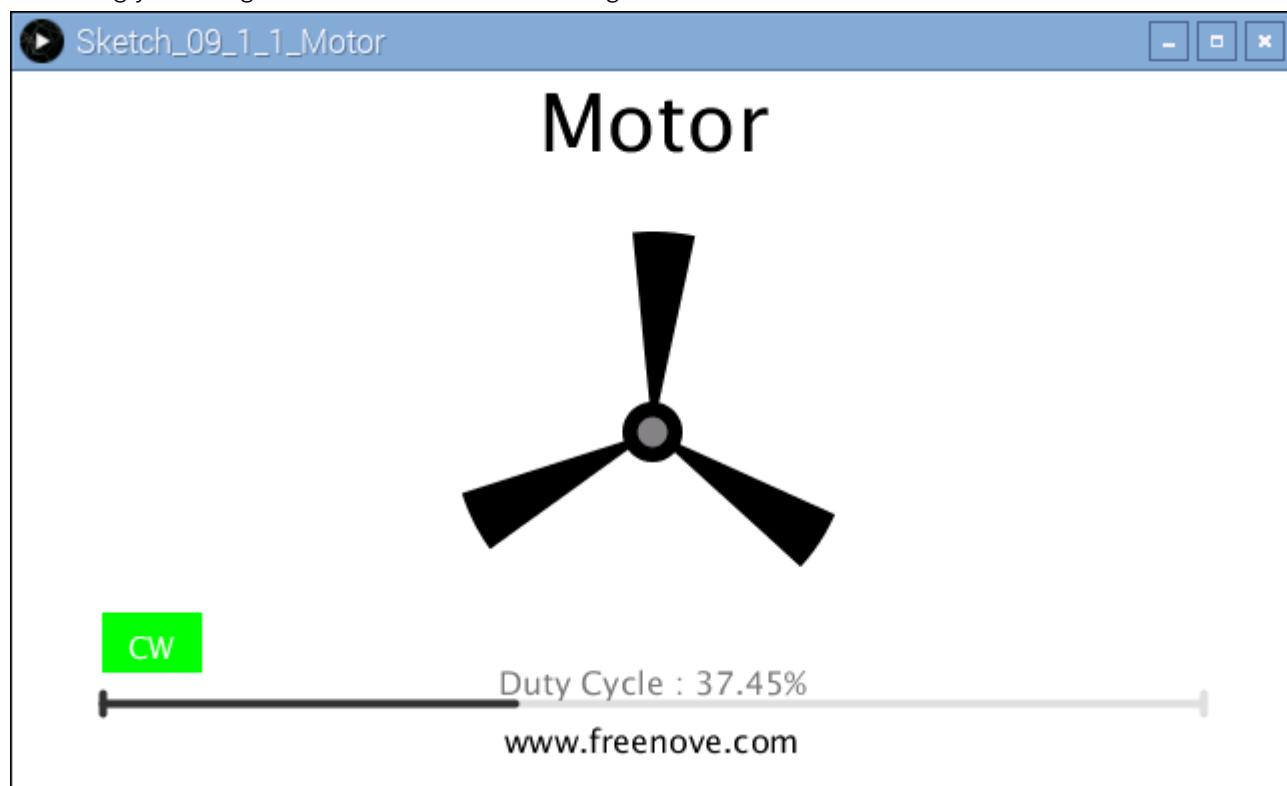

This project contains a lot of code files, and the core code is contained in the file Sketch_09_1_1_Motor. The other files only contain some custom classes.



The following is program code:

```
1 import processing.io.*;
2
3 int motorPin1 = 17;      //connect to the L293D
4 int motorPin2 = 27;
5 int enablePin = 22;
6 final int borderSize = 45;    //border size
7 //MOTOR Object
8 MOTOR motor = new MOTOR(motorPin1, motorPin2, enablePin);
9 ProgressBar mBar;    //ProgressBar Object
10 boolean mMouse = false;   //determined whether a mouse click the ProgressBar
11 BUTTON btn;    //BUTTON Object, For controlling the direction of motor
12 int motorDir = motor.CW;   //motor direction
13 float rotaSpeed = 0, rotaPosition = 0; //motor speed
14 void setup() {
15     size(640, 360);
16     mBar = new ProgressBar(borderSize, height-borderSize, width-borderSize*2);
17     mBar.setTitle("Duty Cycle");    //set the ProgressBar's title
18     btn = new BUTTON(45, height - 90, 50, 30); //define the button
19     btn.setBgColor(0, 255, 0); //set button color
20     btn.setText("CW");        //set button text
21 }
22
23 void draw() {
24     background(255);
25     titleAndSiteInfo(); //title and site information
26     strokeWeight(4);    //border weight
27     mBar.create();       //create the ProgressBar
28     motor.start(motorDir, (int)(mBar.progress*100)); //control the motor starts to rotate
29     btn.create();       //create the button
30     rotaSpeed = mBar.progress * 0.02 * PI; //virtual fan's rotating speed
31     if (motorDir == motor.CW) {
32         rotaPosition += rotaSpeed;
33         if (rotaPosition >= 2*PI) {
34             rotaPosition = 0;
35         }
36     } else {
37         rotaPosition -= rotaSpeed;
38         if (rotaPosition <= -2*PI) {
39             rotaPosition = 0;
40         }
41     }
42     drawFan(rotaPosition); //show the virtual fan in Display window
43 }
```

```
44 //Draw a clover fan according to the stating angle
45 void drawFan(float angle) {
46     constrain(angle, 0, 2*PI);
47     fill(0);
48     for (int i=0; i<3; i++) {
49         arc(width/2, height/2, 200, 200, 2*i*PI/3+angle, (2*i+0.3)*PI/3+angle, PIE);
50     }
51     fill(0);
52     ellipse(width/2, height/2, 30, 30);
53     fill(128);
54     ellipse(width/2, height/2, 15, 15);
55 }
56
57 void mousePressed() {
58     if ( (mouseY< mBar.y+5) && (mouseY>mBar.y-5) ) {
59         mMous
e = true;      //the mouse click the progressBar
60     } else if ((mouseY< btn.y+btn.h) && (mouseY>btn.y)
61     && (mouseX< btn.x+btn.w) && (mouseX>btn.x)) { // the mouse click the button
62         if (motorDir == motor.CW) {      //change the direction of rotation of motor
63             motorDir = motor.CCW;
64             btn.setBgColor(255, 0, 0);
65             btn.setText("CCW");
66         } else if (motorDir == motor.CCW) {
67             motorDir = motor.CW;
68             btn.setBgColor(0, 255, 0);
69             btn.setText("CW");
70         }
71     }
72 }
73 void mouseReleased() {
74     mMous
e = false;
75 }
76 void mouseDragged() {
77     int a = constrain(mouseX, borderSize, width - borderSize);
78     float t = map(a, borderSize, width - borderSize, 0.0, 1.0);
79     if (mMous
e) {
80         mBar.setProgress(t);
81     }
82 }
83 void titleAndSiteInfo() {
84     fill(0);
85     textAlign(CENTER);      //set the text centered
86     textSize(40);          //set text size
87     text("Motor", width / 2, 40);    //title
```

```

88   textSize(16);
89   text("www. freenove. com", width / 2, height - 20); //site
90 }
```

First define the GPIO pin connected to the Motor, motor class object, the L293D class object, the ProgressBar class object, the Button class object, and some variables.

```

int motorPin1 = 17; //connect to the L293D
int motorPin2 = 27;
int enablePin = 22;
final int borderSize = 45; //border size
//MOTOR Object
MOTOR motor = new MOTOR(motorPin1, motorPin2, enablePin);
ProgressBar mBar; //ProgressBar Object
boolean mMouse = false; //determined whether a mouse click the ProgressBar
BUTTON btn; //BUTTON Object, For controlling the direction of motor
int motorDir = motor.CW; //motor direction
float rotaSpeed = 0, rotaPosition = 0; //motor speed
```

Initialize the ProgressBar and Button in setup().

```

mBar = new ProgressBar(borderSize, height-borderSize, width-borderSize*2);
mBar.setTitle("Duty Cycle"); //set the ProgressBar's title
btn = new BUTTON(45, height - 90, 50, 30); //define the button
btn.setBgColor(0, 255, 0); //set button color
btn.setText("CW"); //set button text
```

In function draw(), draw all the contents to be displayed. Then set the motor speed, as well as the speed of virtual fan according to the progress of progress bar. And set the motor direction according to the button flag.

```

void draw() {
  background(255);
  titleAndSiteInfo(); //title and site information
  strokeWeight(4); //border weight
  mBar.create(); //create the ProgressBar
  motor.start(motorDir, (int)(mBar.progress*100)); //control the motor starts to rotate
  btn.create(); //create the button
  rotaSpeed = mBar.progress * 0.02 * PI; //virtual fan's rotating speed
  if (motorDir == motor.CW) {
    rotaPosition += rotaSpeed;
    if (rotaPosition >= 2*PI) {
      rotaPosition = 0;
    }
  } else {
    rotaPosition -= rotaSpeed;
    if (rotaPosition <= -2*PI) {
```

```

        rotaPosition = 0;
    }
}
drawFan(rotaPosition); //show the virtual fan in Display window
}

```

In the mousePressed(), judge if the Button is clicked on. If the mouse clicked on the Button, then change the motor direction and the text and color of Button. We have learned how to drag ProgressBarBar before, so here is no representation.

```

else if ((mouseY< btn.y+btn.h) && (mouseY>btn.y)
&& (mouseX< btn.x+btn.w) && (mouseX>btn.x)) { // the mouse click the button
if (motorDir == motor.CW) { //change the direction of rotation of motor
    motorDir = motor.CCW;
    btn.setBgColor(255, 0, 0);
    btn.setText("CCW");
} else if (motorDir == motor.CCW) {
    motorDir = motor.CW;
    btn.setBgColor(0, 255, 0);
    btn.setText("CW");
}
}

```

Subfunction drawFan(float angle) is used to draw a three leaf fan, based on an initial angle angle. And the angle between each two leaf is 120°. Changing the value of "angle" can make the fan rotate to different angle.

```

void drawFan(float angle) {
    constrain(angle, 0, 2*PI);
    fill(0);
    for (int i=0; i<3; i++) {
        arc(width/2, height/2, 200, 200, 2*i*PI/3+angle, (2*i+0.3)*PI/3+angle, PIE);
    }
    fill(0);
    ellipse(width/2, height/2, 30, 30);
    fill(128);
    ellipse(width/2, height/2, 15, 15);
}

```

About class MOTOR:

class MOTOR

This is a custom class that is used to operate the motor controlled by L293D.

```
public MOTOR(int pin1, int pin2, int enablePin)
```

Constructor, the parameter for the GPIO connected to the L293D pin, the enablePin used to create a PWM pin within range of 0-100 and with frequency of 100Hz.

```
public void start(int dir, int speed)
```

Used to drive motor, parameter dir for the rotation direction, the value is CW, CCW, STOP. Parameter speed is used to decide the duty cycle of PWM. Its value is within range of 0-100.

About class BUTTON:

class BUTTON

This is a custom class that is used to creat a Button.

```
public BUTTON(int ix, int iy, int iw, int ih)
```

Constructor, used to create a BUTTON class object. The parameters is for the location and size of the button to be created.

```
public void create()
```

Used to draw Button.

```
public void setBgColor(int ir, int ig, int ib)
```

Used to set Button color.

```
public void setText(String str)
```

Used to set Button text.

```
public void setTextColor(int ir, int ig, int ib)
```

Used to set text color.


Chapter 10 74HC595 & LEDBar Graph

In this chapter, we will learn how to use 74HC595, and use it to control Graph LEDBar.

Project 10.1 FollowLight


In this chapter, we will use 74HC595 and LEDBar Graph to recreate a FollowLight.

Component List

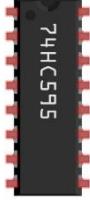
Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M x17 	
74HC595 x1 	LEDBar Graph x1 	Resistor 220Ω x8 

Circuit

Schematic diagram

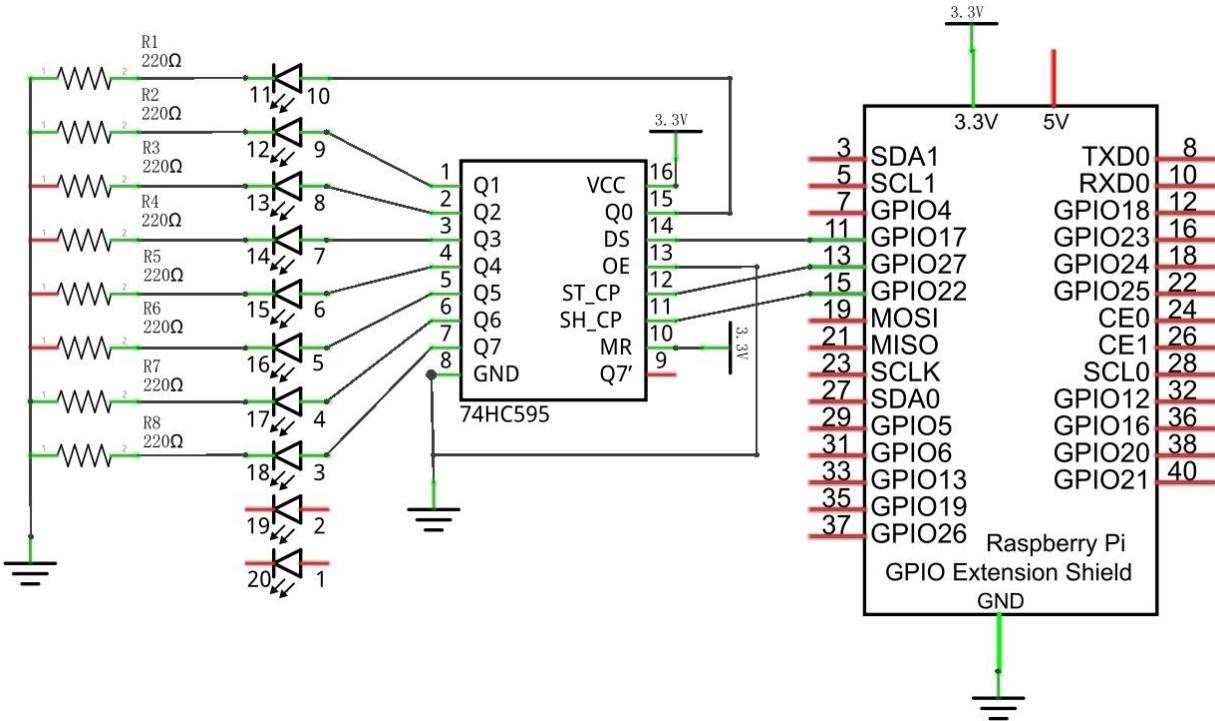

Hardware connection

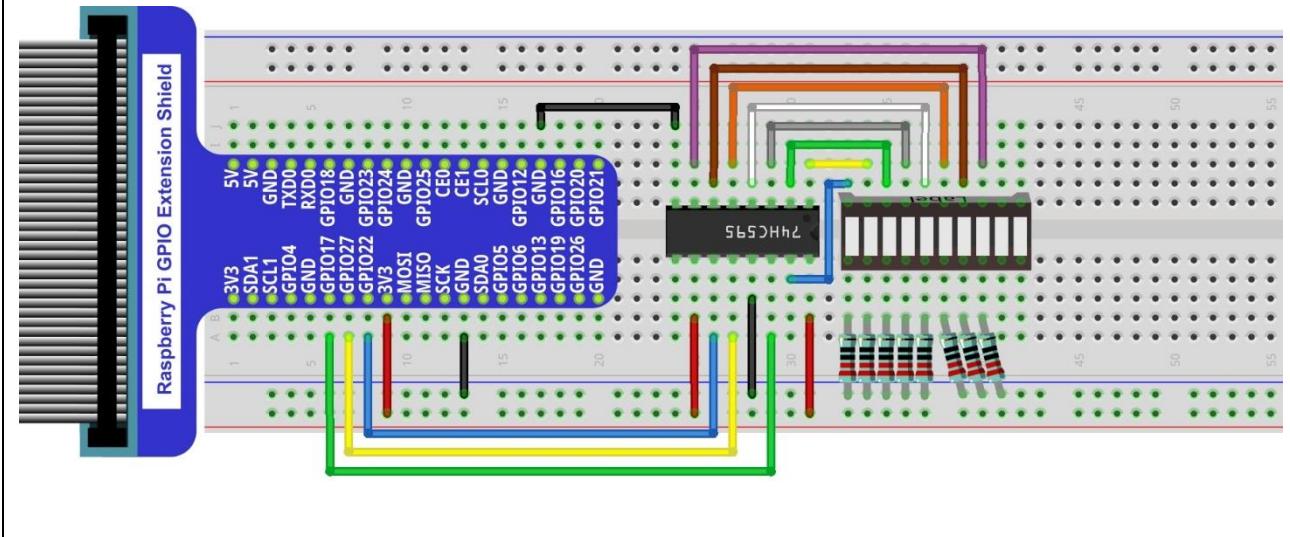

Sketch

Sketch 10.1.1 LightWater


First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_10_1_1_LightWater.


```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_10_1_1_LightWater/Sketch_10_1_1_Light  
Water.pde
```

2. Click on "RUN" to run the code.

After the program is executed, Display Window shows a virtual LEDBar Graph, which will bright at the same rate and same way with LEDBar Graph in the circuit. Dragging the progress bar can adjust the flow rate of light water.

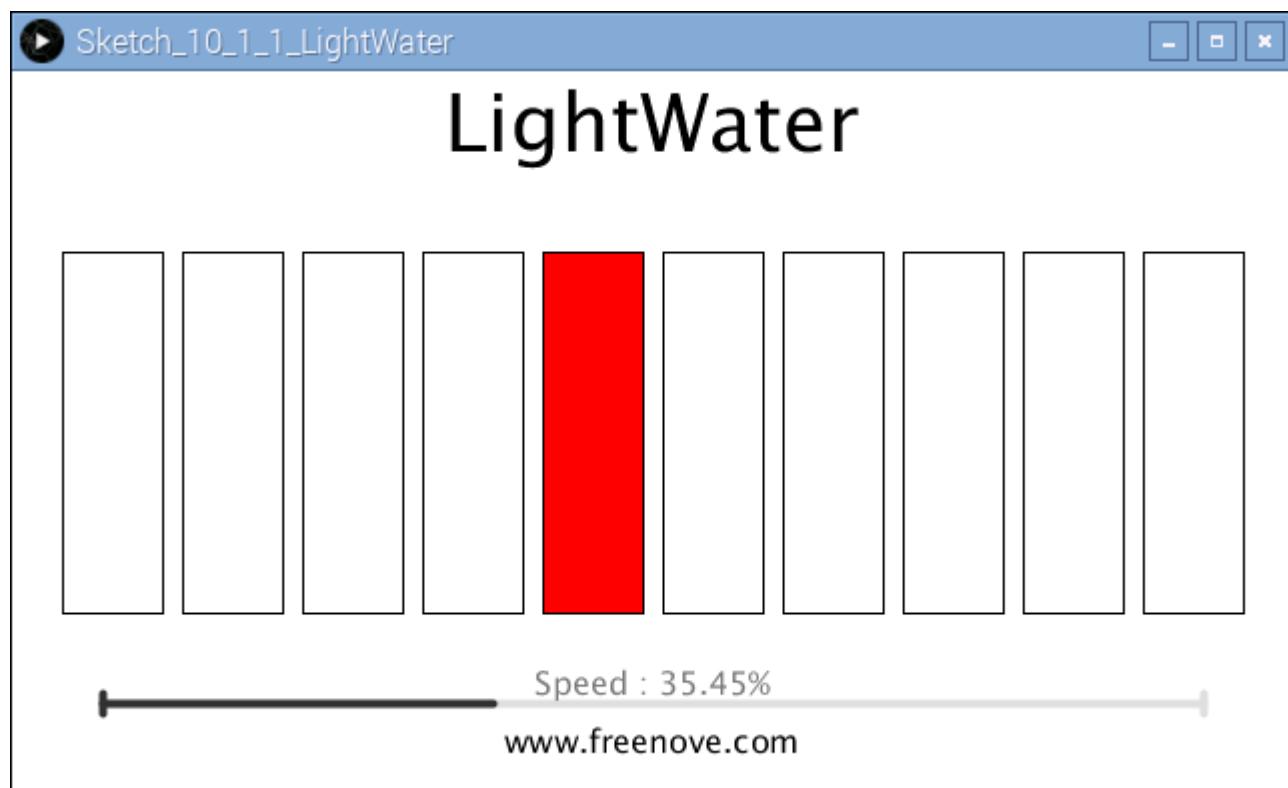

This project contains a lot of code files, and the core code is contained in the file Sketch_10_1_1_LightWater. The other files only contain some custom classes.

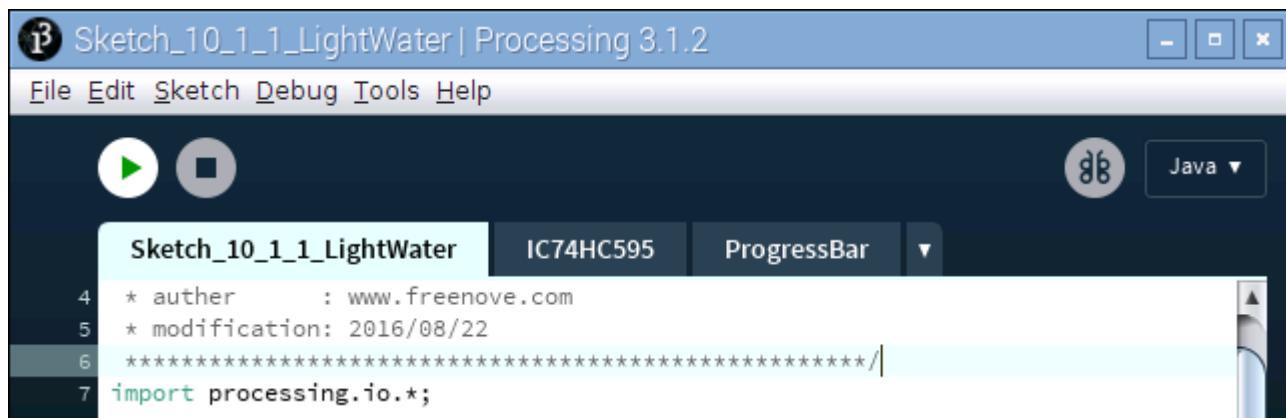

The following is program code:

```
1 import processing.io.*;
2
3 int dataPin = 17;      //connect to the 74HC595
4 int latchPin = 27;
5 int clockPin = 22;
6 final int borderSize = 45;      //border size
7 ProgressBar mBar;      //ProgressBar Object
8 IC74HC595 ic;      //IC74HC595 Object
9 boolean mMouse = false;      //determined whether a mouse click the ProgressBar
10 int leds = 0x01;      //number of led on
11 int lastMoveTime = 0;      //led last move time point
12 void setup() {
13     size(640, 360);
14     mBar = new ProgressBar(borderSize, height-borderSize, width-borderSize*2);
15     mBar.setTitle("Speed");      //set the ProgressBar's title
16     ic = new IC74HC595(dataPin, latchPin, clockPin);
17 }
18
19 void draw() {
20     background(255);
21     titleAndSiteInfo();      //title and site information
22     strokeWeight(4);      //border weight
23     mBar.create();      //create the ProgressBar
24     //control the speed of lightwater
25     if (millis() - lastMoveTime > 50/(0.05+mBar.progress)) {
26         lastMoveTime = millis();
27         leds<<=1;
28         if (leds == 0x100)
29             leds = 0x01;
30     }
31     ic.write(ic.LSBFIRST, leds);      //write 74HC595
32
33     stroke(0);
```

```

34   strokeWeight(1);
35   for (int i=0; i<10; i++) {    //draw 10 rectangular box
36     if (leds == (1<<i)) {    //
37       fill(255, 0, 0);        //fill the rectangular box in red color
38     } else {
39       fill(255, 255, 255);  //else fill the rectangular box in white color
40     }
41     rect(25+60*i, 90, 50, 180); //draw a rectangular box
42   }
43 }
44
45 void mousePressed() {
46   if ( (mouseY< mBar.y+5) && (mouseY>mBar.y-5) ) {
47     mMouse = true;    //the mouse click the progressBar
48   }
49 }
50 void mouseReleased() {
51   mMouse = false;
52 }
53 void mouseDragged() {
54   int a = constrain(mouseX, borderSize, width - borderSize);
55   float t = map(a, borderSize, width - borderSize, 0.0, 1.0);
56   if (mMouse) {
57     mBar.setProgress(t);
58   }
59 }
60 void titleAndSiteInfo() {
61   fill(0);
62   textAlign(CENTER);    //set the text centered
63   textSize(40);        //set text size
64   text("LightWater", width / 2, 40);    //title
65   textSize(16);
66   text("www. freenove. com", width / 2, height - 20); //site
67 }
```

First define the GPIO pin connected to 74HC595, the ProgressBar class object, IC74HC595 class object, and some variables.

```

int dataPin = 17;    //connect to the 74HC595
int latchPin = 27;
int clockPin = 22;
final int borderSize = 45;    //border size
ProgressBar mBar;    //ProgressBar Object
IC74HC595 ic;        //IC74HC595 Object
boolean mMouse = false; //determined whether a mouse click the ProgressBar
```

```
int leds = 0x01;           //number of led on
int lastMoveTime = 0;       //led last move time point
```

In the function setup(), instantiate ProgressBar class object and IC74HC595 class object.

```
mBar = new ProgressBar(borderSize, height-borderSize, width-borderSize*2);
mBar.setTitle("Speed");    //set the ProgressBar's title
ic = new IC74HC595(dataPin, latchPin, clockPin);
```

In the function draw(), set the background, text, and other information and draw the progress bar.

```
background(255);
titleAndSiteInfo(); //title and site information
strokeWeight(4);   //border weight
mBar.create();      //create the ProgressBar
```

Then according to the speed of followlight, calculate the data "leds" for 74HC595, and make it written to 74HC595, then LEDBar Graph is turned on.

```
if (millis() - lastMoveTime > 50/(0.05+mBar.progress)) {
    lastMoveTime = millis();
    leds<<=1;
    if (leds == 0x100)
        leds = 0x01;
}
ic.write(ic.LSBFIRST, leds); //write 74HC595
```

Finally, according to the variable leds, draw the virtual LEDBar Graph in Display Window.

```
stroke(0);
strokeWeight(1);
for (int i=0; i<10; i++) { //draw 10 rectangular box
    if (leds == (1<<i)) { //
        fill(255, 0, 0); //fill the rectangular box in red color
    } else {
        fill(255, 255, 255); //else fill the rectangular box in white color
    }
    rect(25+60*i, 90, 50, 180); //draw a rectangular box
}
```

About class IC74HC595:

class IC74HC595

This is a custom class that is used to operate integrated circuit 74HC595.

```
public IC74HC595(int dPin, int lPin, int cPin)
```

Constructor, the parameter for the GPIO pin connected to 74HC595.

```
public void write(int order,int value)
```

Used to write data to 74HC595, and the 74HC595 output port will output these data immediately.

Chapter 11 74HC595 & Seven-segment display.

In this chapter, we will learn a new component, Seven-segment display (SSD).

Project 11.1 Seven -segment display.


We will use 74HC595 to control Seven-segment display (SSD). And make it display decimal character "0-9".

Component List


Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M x18
74HC595 x1	7-segment display x1
	

Circuit

Schematic diagram

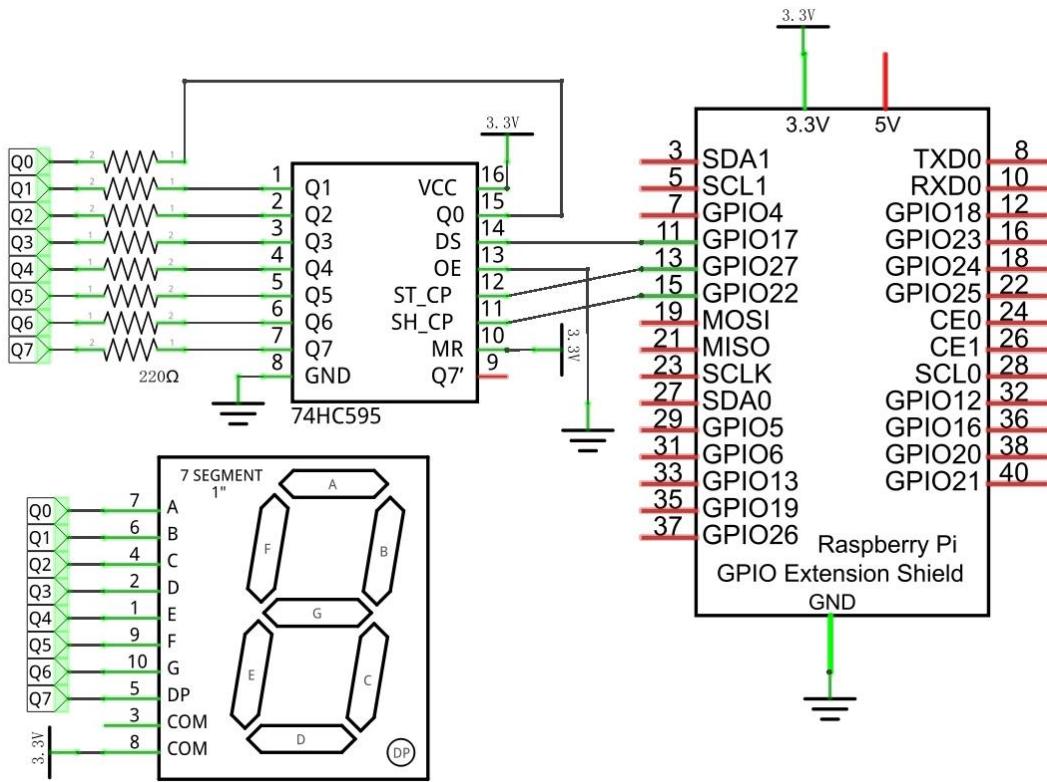

Hardware connection

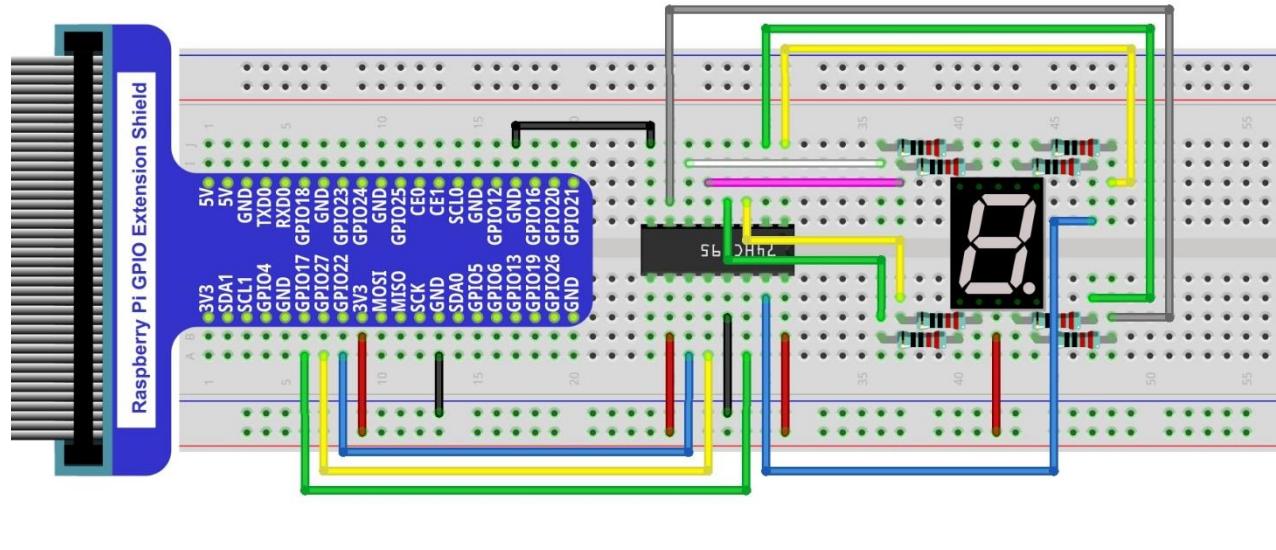

Sketch

Sketch 11.1.1 SSD


First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_11_1_1_SSD.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_11_1_1_SSD/Sketch_11_1_1_SSD.pde
```

2. Click on "RUN" to run the code.

After the program is executed, both Display Window and SSD in the circuit show the same number. And they have the same add-self rate to display number "0-9" constantly. Dragging the progress bar can adjust the add-self rate.

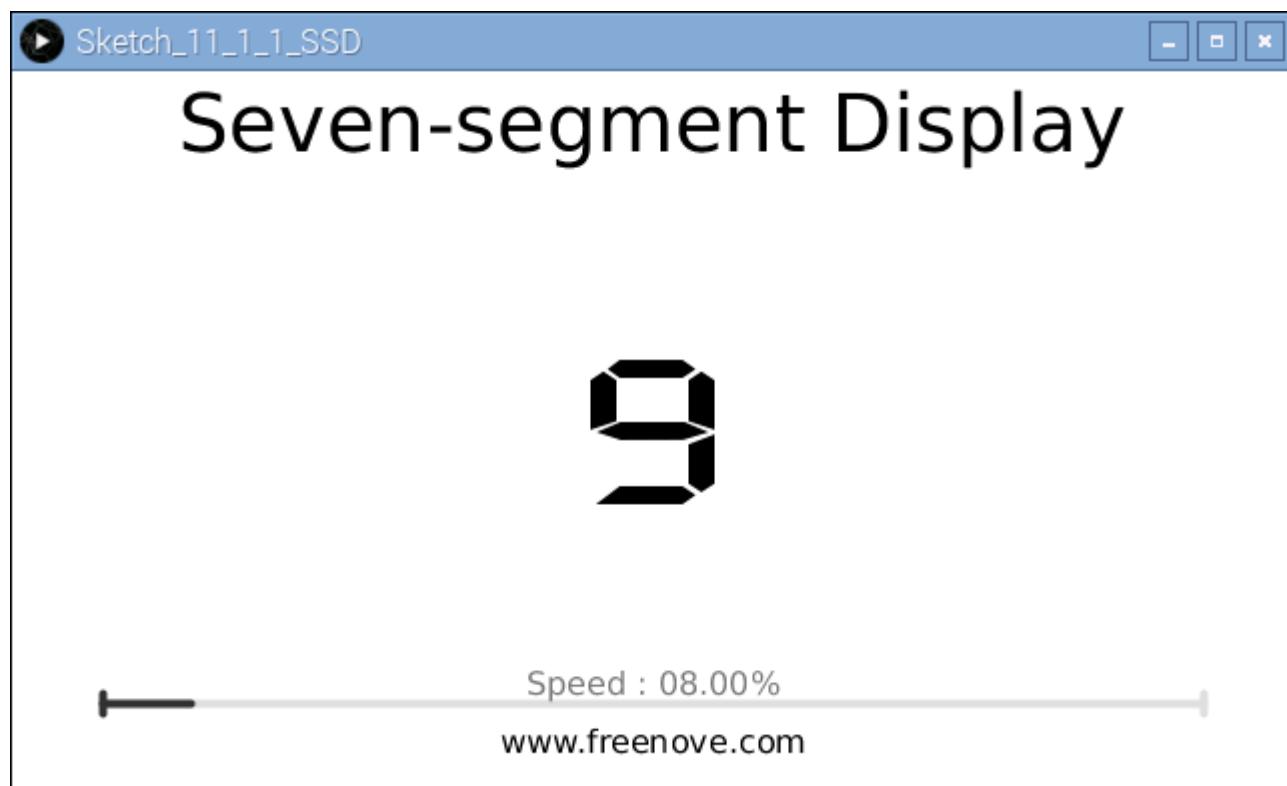

This project contains a lot of code files, and the core code is contained in the file Sketch_11_1_1_SSD. The other files only contain some custom classes.



The following is program code:

```
1 import processing.io.*;
2
3 int dataPin = 17;      //connect to the 74HC595
4 int latchPin = 27;
5 int clockPin = 22;
6 final int borderSize = 45;      //border size
7 ProgressBar mBar;      //ProgressBar Object
8 IC74HC595 ic;          //IC74HC595 Object
9 boolean mMouse = false;    //determined whether a mouse click the ProgressBar
10 int index = 0;           // index of number
11 int lastMoveTime = 0;     //led last move time point
12 //encoding for character 0~9 of common anode SevenSegmentDisplay
13 final int[] numCode = {0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8, 0x80, 0x90};
14 PFont mFont;
15
16 void setup() {
17     size(640, 360);
18     mBar = new ProgressBar(borderSize, height-borderSize, width-borderSize*2);
19     mBar.setTitle("Speed");    //set the ProgressBar's title
20     ic = new IC74HC595(dataPin, latchPin, clockPin);
21     mFont = loadFont("DigifaceWide-100.vlw"); //create DigifaceWide font
22 }
23
24 void draw() {
25     background(255);
26     titleAndSiteInfo(); //title and site information
27     strokeWeight(4);   //border weight
28     mBar.create();     //create the ProgressBar
29     //control the speed of number change
30     if (millis() - lastMoveTime > 50/(0.05+mBar.progress)) {
31         lastMoveTime = millis();
32         index++;
33         if (index > 9) {
34             index = 0;
35         }
36     }
37     ic.write(ic.MSBFIRST, numCode[index]); //write 74HC595
38     showNum(index); //show the number in dispaly window
39 }
40 void showNum(int num) {
41     fill(0);
42     textSize(100);
43     textAlign(mFont); //digiface font
```

```

44     textAlign(CENTER, CENTER);
45     text(num, width/2, height/2);
46   }
47   void mousePressed() {
48     if ( (mouseY< mBar.y+5) && (mouseY>mBar.y-5) ) {
49       mMous = true; //the mouse click the progressBar
50     }
51   }
52   void mouseReleased() {
53     mMous = false;
54   }
55   void mouseDragged() {
56     int a = constrain(mouseX, borderSize, width - borderSize);
57     float t = map(a, borderSize, width - borderSize, 0.0, 1.0);
58     if (mMous) {
59       mBar.setProgress(t);
60     }
61   }
62   void titleAndSiteInfo() {
63     fill(0);
64     textAlign(CENTER); //set the text centered
65     textFont(createFont("", 100)); //default font
66     textSize(40); //set text size
67     text("Seven-segment Display", width / 2, 40); //title
68     textSize(16);
69     text("www. freenove. com", width / 2, height - 20); //site
}

```

The project code is similar to the last chapter. The difference is that in this project the data output by 74HC595 is the fixed coding information of SSD. First, the character "0-9" is defined as code of common anode SSD.

```
final int[] numCode = {0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8, 0x80, 0x90};
```

In the function draw(), the data is output at a certain speed. At the same time the Display Window outputs the same character.

```

if (millis() - lastMoveTime > 50/(0.05+mBar.progress)) {
  lastMoveTime = millis();
  index++;
  if (index > 9) {
    index = 0;
  }
  ic.write(ic.MSBFIRST, numCode[index]); //write 74HC595
  showNum(index); //show the number in dispaly window
}

```

By creating the font "mFont", we change the font of the characters in Display Window. The font ".vlw" file is created by clicking the "Create Font" of the menu bar, which is saved in the data folder of current Sketch.

```
PFont mFont;  
.....  
mFont = loadFont("DigifaceWide-100.vlw"); //create DigifaceWide font
```

About more details about `loadFont()`, please refer to "Help→Reference→`loadFont()`" or the official website:
https://processing.org/reference/loadFont_.html


By creating an empty font, you can reset the font to default font.

```
textFont(createFont("", 100)); //default font
```

Project 11.2 4-digit Seven-segment display.


Now, let's learn to use 4-digit 7-segment display(FDSSD).

Component List


Raspberry Pi x1 GPIO Expansion Board & Wire x1 BreadBoard x1	Jumper M/M x27
74HC595 x1	PNP transistor x4
	
4-Digit 7-segment display x1	Resistor 220Ω x8
	
	Resistor 1KΩ x4
	

Circuit

Schematic diagram

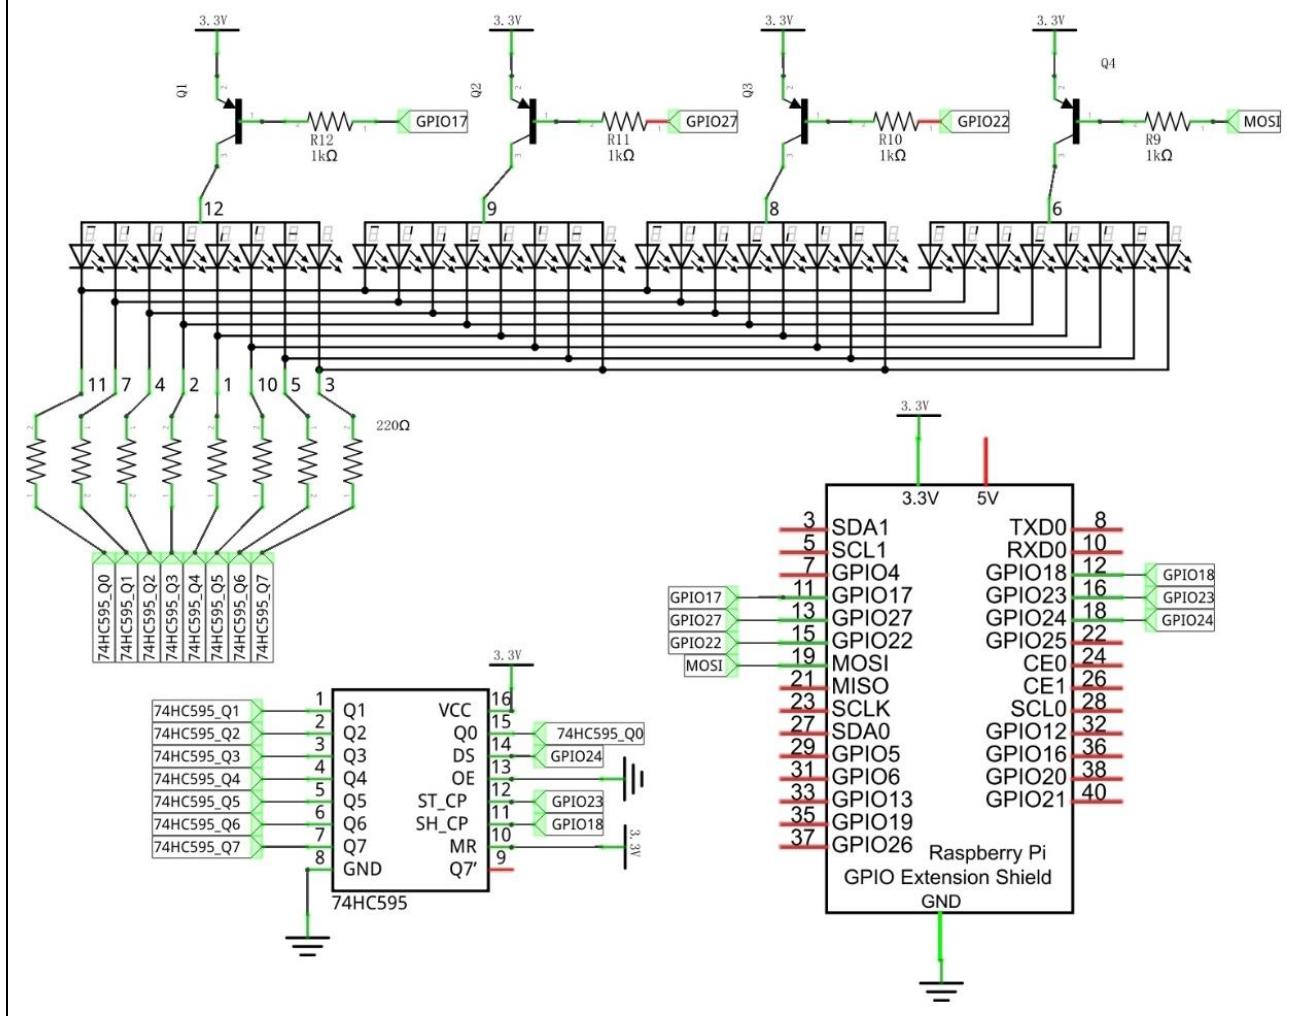

Hardware connection

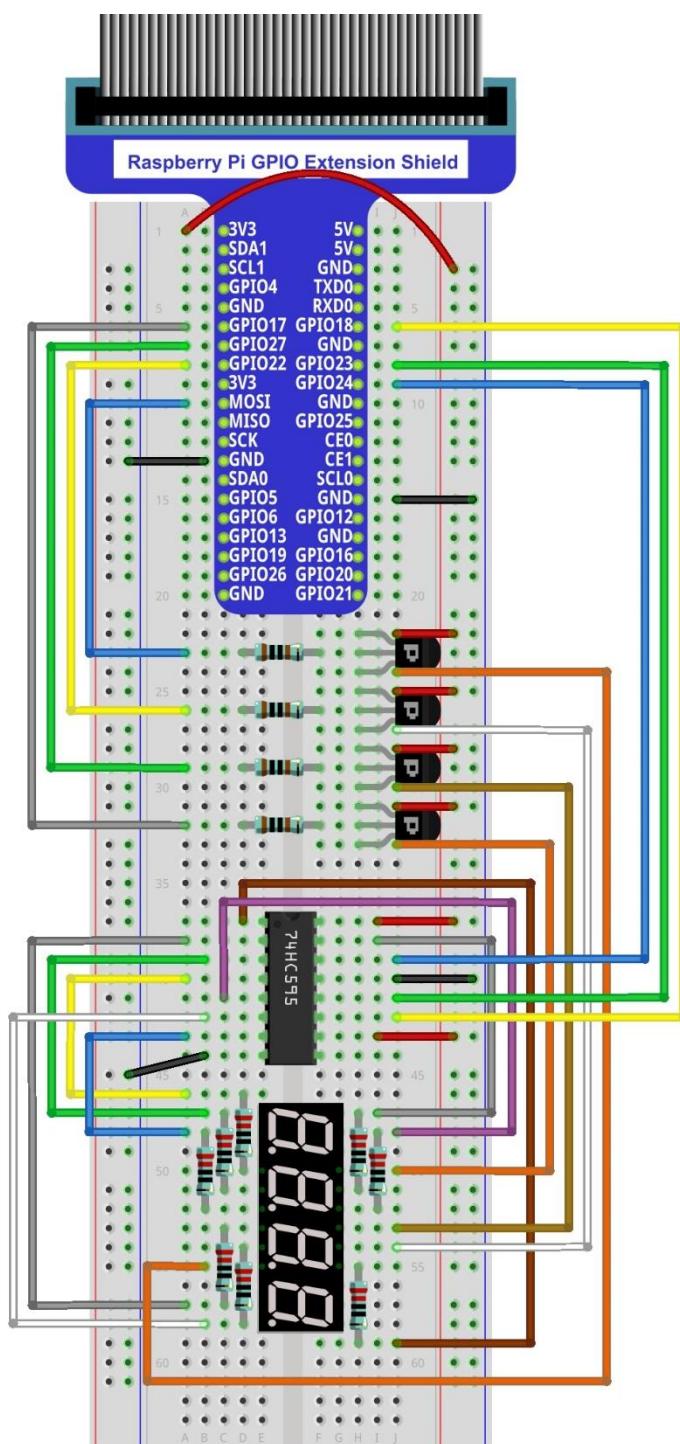

Sketch

In this project, open an independent thread to control the FDSSD. The uncertainty of the system time slice allocation may lead to FDSSD flashing in the display, which is a normal phenomenon. For details about display principle of FDSSD, please refer to our C and Python manual.

Sketch 11.2.1 FDSSD


First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_11_2_1_FDSSD.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_11_2_1_FDSSD/Sketch_11_2_1_FDSSD.pde
```

2. Click on "RUN" to run the code.

After the program is executed, Display Window and FDSSD in the circuit will show same figures, and they have the same add-self rate. They will constantly show the number of "0-9999" circularly. And dragging the progress bar can change the rate.

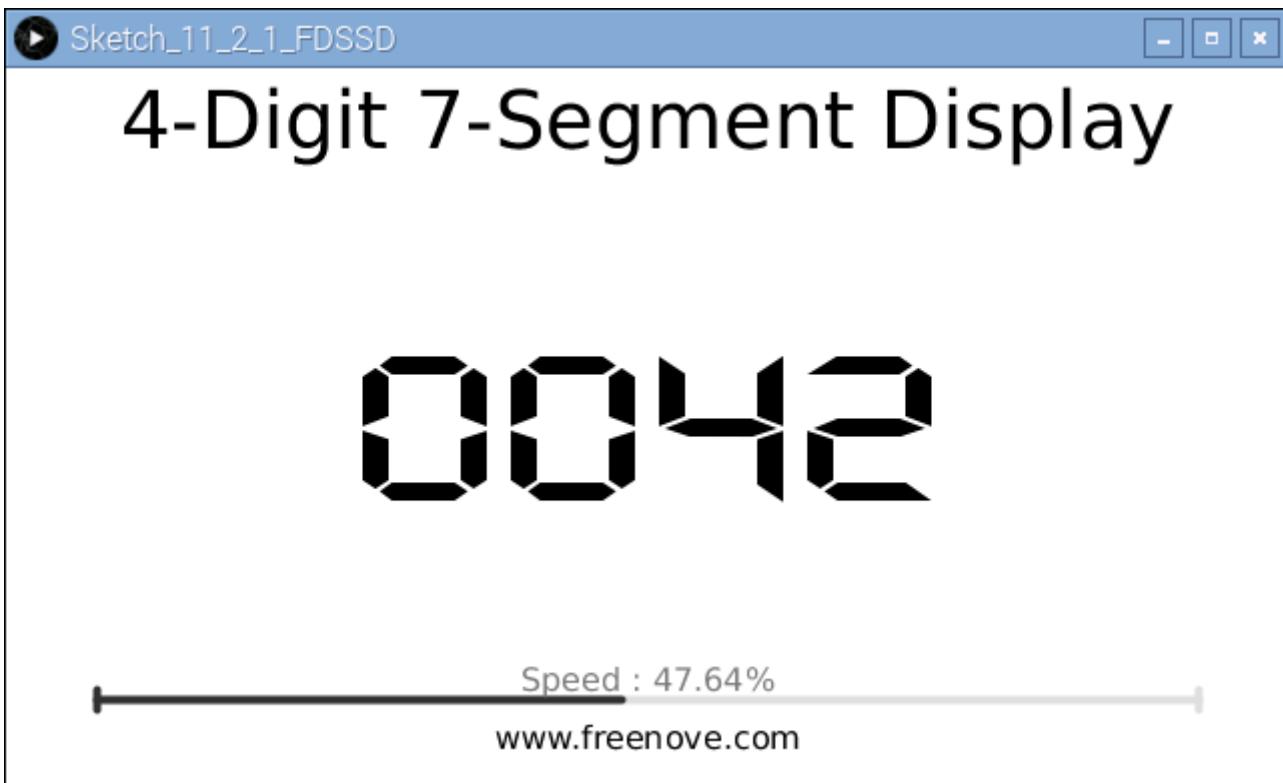

This project contains several code files, as shown below:



The following is program code:

```
1 import processing.io.*;
2
3 int dataPin = 24;      //connect to the 74HC595
4 int latchPin = 23;
5 int clockPin = 18;
6 int[] digitPin = {17, 27, 22, 10}; //Connected to a common anode SSDthrough the transistor
7 final int borderSize = 45;      //border size
8 ProgressBar mBar;      //ProgressBar Object
9 IC74HC595 ic;        //IC74HC595 Object
10 boolean mMouse = false;    //determined whether a mouse click the ProgressBar
11 int index = 0;          // index of number
12 int lastMoveTime = 0;    //led last move time point
13 //encoding for character 0~9 of common anode SevenSegmentDisplay
14 final int[] numCode = {0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8, 0x80, 0x90};
15 PFont mFont;
16
17 void setup() {
18     size(640, 360);
19     for (int i = 0; i < 4; i++) {
20         GPIO.pinMode(digitPin[i], GPIO.OUTPUT);
21     }
22     mBar = new ProgressBar(borderSize, height - borderSize, width - borderSize * 2);
23     mBar.setTitle("Speed"); //set the ProgressBar's title
24     ic = new IC74HC595(dataPin, latchPin, clockPin);
25     mFont = loadFont("DigifaceWide-100.vlw"); //create DigifaceWide font
26     thread("displaySSD");
27 }
28
29 void draw() {
30     background(255);
31     titleAndSiteInfo(); //title and site information
32     strokeWeight(4); //border weight
33     mBar.create(); //create the ProgressBar
34     //control the speed of number change
35     if (millis() - lastMoveTime > 50 / (0.05 + mBar.progress)) {
36         lastMoveTime = millis();
37         index++;
38         if (index > 9999) {
39             index = 0;
40         }
41     }
42     showNum(index); //show the number in dispaly window
43 }
```



```
44 void showNum(int num) {
45     fill(0);
46     textSize(100);
47     textFont(mFont);    //digiface font
48     textAlign(CENTER, CENTER);
49     text(nf(num, 4, 0), width/2, height/2);
50 }
51
52 void displaySSD() {
53     while (true) {
54         display(index);
55     }
56 }
57 void selectDigit(int digit) {
58     GPIO.digitalWrite(digitPin[0], ((digit&0x08) == 0x08) ? GPIO.LOW : GPIO.HIGH);
59     GPIO.digitalWrite(digitPin[1], ((digit&0x04) == 0x04) ? GPIO.LOW : GPIO.HIGH);
60     GPIO.digitalWrite(digitPin[2], ((digit&0x02) == 0x02) ? GPIO.LOW : GPIO.HIGH);
61     GPIO.digitalWrite(digitPin[3], ((digit&0x01) == 0x01) ? GPIO.LOW : GPIO.HIGH);
62 }
63 void display(int dec) {
64     selectDigit(0x00);
65     ic.write(ic.MSBFIRST, numCode[dec%10]);
66     selectDigit(0x01);      //select the first, and display the single digit
67     delay(1);              //display duration
68     selectDigit(0x00);
69     ic.write(ic.MSBFIRST, numCode[dec%100/10]);
70     selectDigit(0x02);      //select the second, and display the tens digit
71     delay(1);
72     selectDigit(0x00);
73     ic.write(ic.MSBFIRST, numCode[dec%1000/100]);
74     selectDigit(0x04);      //select the third, and display the hundreds digit
75     delay(1);
76     selectDigit(0x00);
77     ic.write(ic.MSBFIRST, numCode[dec%10000/1000]);
78     selectDigit(0x08);      //select the fourth, and display the thousands digit
79     delay(1);
80 }
81 void mousePressed() {
82     if ( (mouseY< mBar.y+5) && (mouseY>mBar.y-5) ) {
83         mMouse = true;    //the mouse click the progressBar
84     }
85 }
86 void mouseReleased() {
87     mMouse = false;
```

```
88 }
89 void mouseDragged() {
90     int a = constrain(mouseX, borderSize, width - borderSize);
91     float t = map(a, borderSize, width - borderSize, 0.0, 1.0);
92     if (mMouse) {
93         mBar.setProgress(t);
94     }
95 }
96 void titleAndSiteInfo() {
97     fill(0);
98     textAlign(CENTER); //set the text centered
99     textFont(createFont("", 100)); //default font
100    textSize(40); //set text size
101    text("4-Digit 7-Segment Display", width / 2, 40); //title
102    textSize(16);
103    text("www.freenove.com", width / 2, height - 20); //site
104 }
```

This project code is similar to the last section "SSD". The difference is that this project needs to control four SSD. The four coanodes of four SSD is controlled by four GPIO through 4 transistors. First, the four GPIO is defined.

```
int[] digitPin = {17, 27, 22, 10};
```

In a separate thread, make the FDSSD display numbers in scan mode. Subfunction display() is used to make FDSSD display a four-digit number.

```
thread("displaySSD");
.....
void displaySSD() {
    while (true) {
        display(index);
    }
}
```

Other contents of the program are the same as the last section "SSD".


Chapter 12 74HC595 & LED Matrix

In this chapter, we will learn how to use 74HC959 to control more LEDs, LED Matrix.

Project 12.1 LED Matrix

In this project, we will use two 74HC595 to control a monochrome LEDMatrix (8*8) to make it display some graphics and characters.


Component List

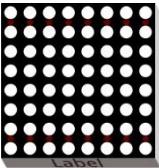Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M x41
74HC595 x2	8*8 LEDMatrix x1
	

Circuit

In this experimental circuit, the power pin of 74HC595 is connected to 3.3V. It can also be connected to 5V to make LEDMatrix brighter.


Schematic diagram

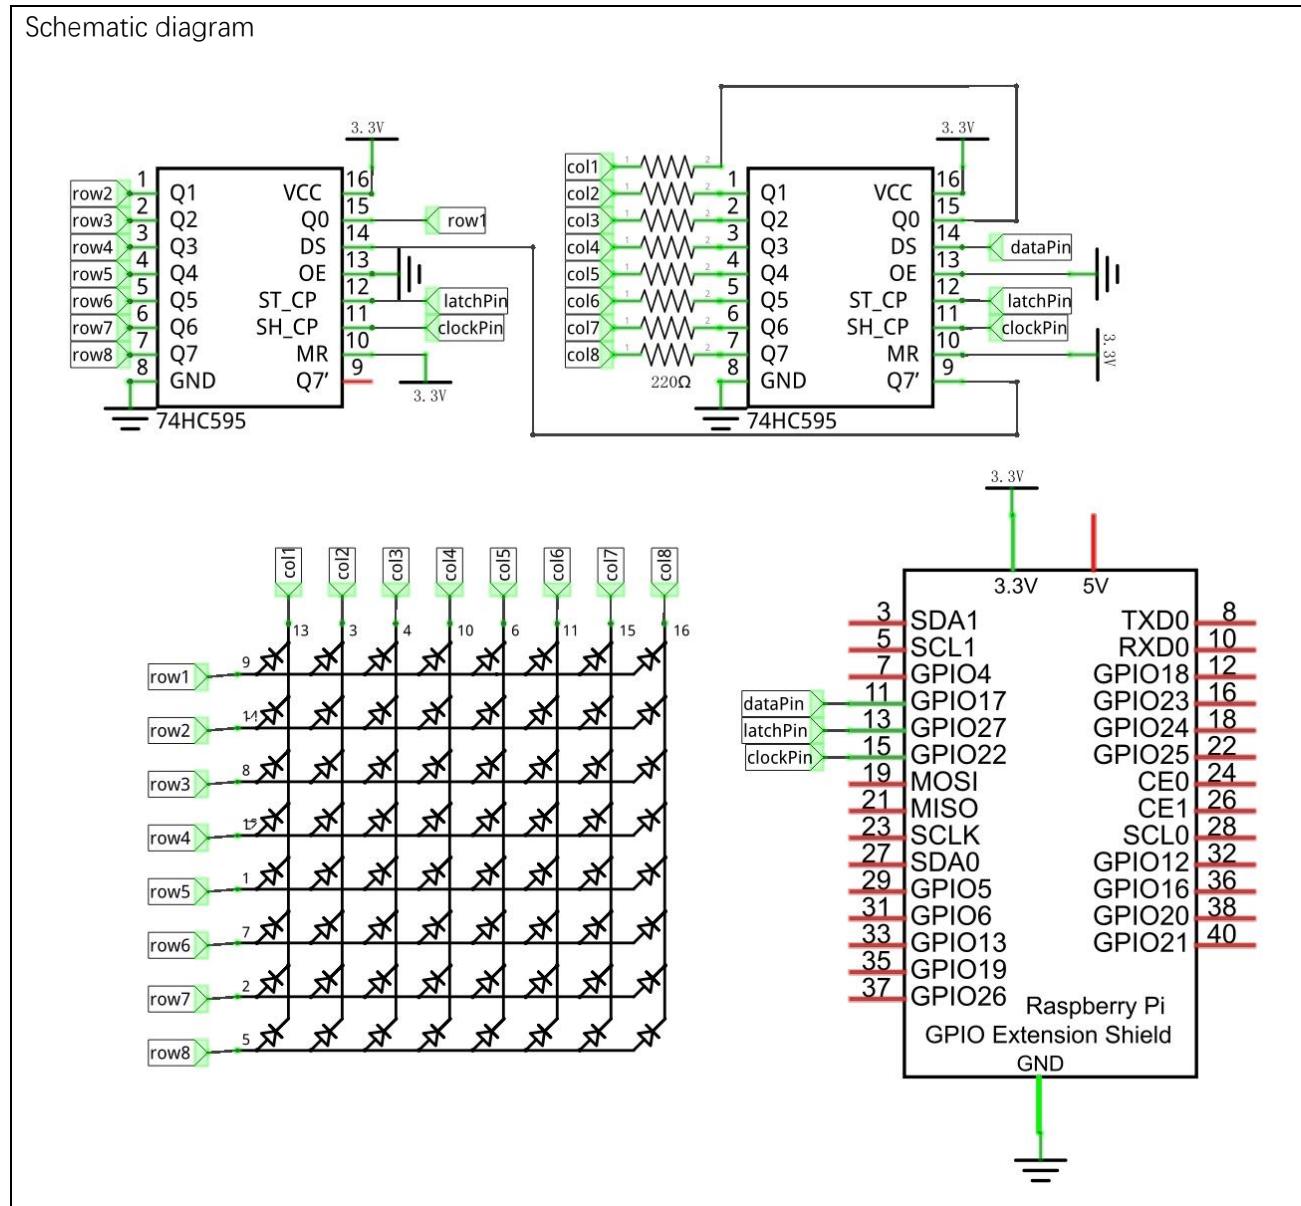

Hardware connection

Second stage
74HC595: B

First stage
74HC595: A

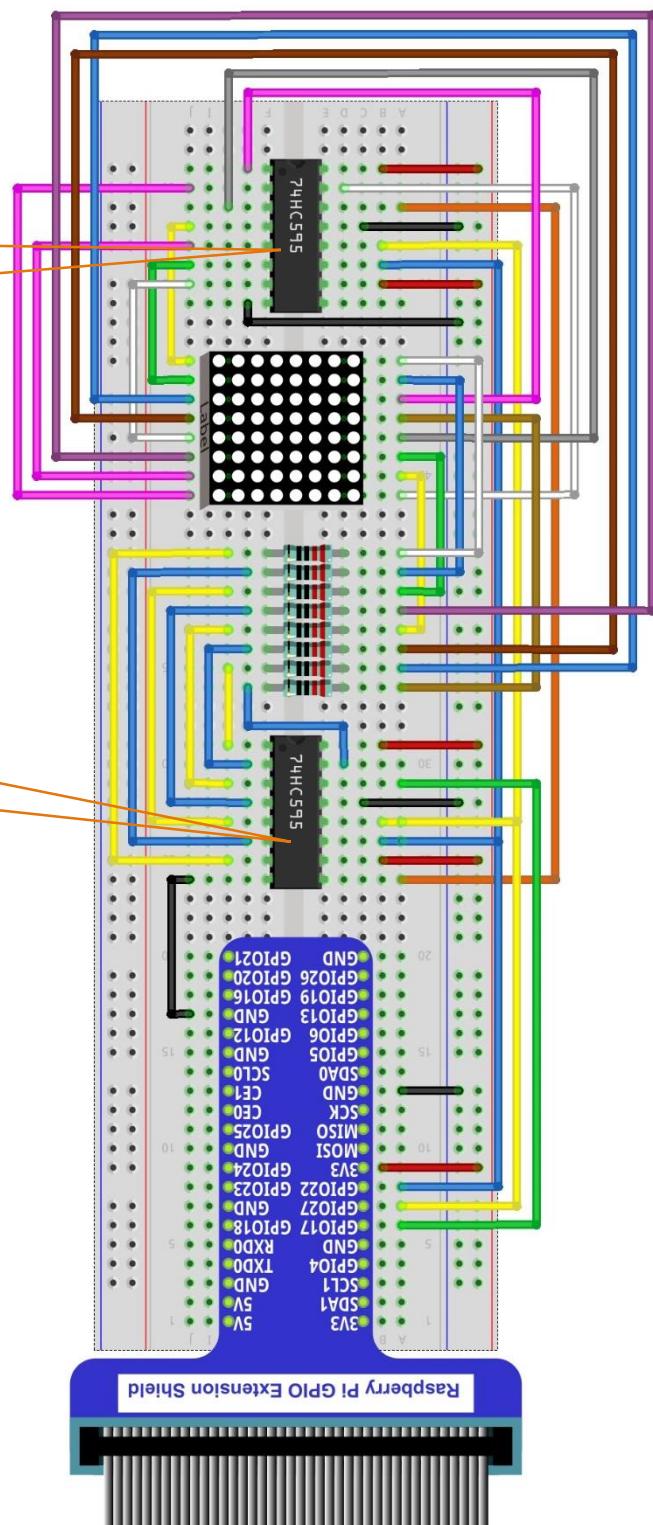

Sketch

Sketch 12.1.1 LEDMatrix

First observe the running result of the sketch, and then analyze the code.

1. Use Processing to open the file Sketch_12_1_1_LEDMatrix.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_12_1_1_LEDMatrix/Sketch_12_1_1_LEDMatrix.pde
```

2. Click on "RUN" to run the code.

After the program is executed, LEDMatrix will show a smiling face pattern, then start scrolling display of character "0-F". Display Window will display the characters "0-F" synchronously. Dragging the progress bar can change the rolling speed of character on LEDMatrix. (The project code in the LEDMatrix is operate with scanning method in a separate thread. The uncertainty of the CPU time slice may cause LEDMatrix display flashing.)



This project contains a lot of code files, and the core code is contained in the file Sketch_12_1_1_LEDMatrix. The other files only contain some custom classes.



The following is program code:

```
1 import processing.io.*;
2
3 int dataPin = 17;      //connect to the 74HC595
4 int latchPin = 27;
5 int clockPin = 22;
6 final int borderSize = 45;      //border size
7 ProgressBar mBar;      //ProgressBar Object
8 IC74HC595 ic;        //IC74HC595 Object
9 boolean mMoue = false;    //determined whether a mouse click the ProgressBar
10 int index = 0;           // index of number
11 //encoding for smile face
12 final int[] pic = {0x1c, 0x22, 0x51, 0x45, 0x45, 0x51, 0x22, 0x1c};
13 //encoding for character 0-9 of ledmatrix
14 final int[] numCode={
15     0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, // " "
16     0x00, 0x00, 0x3E, 0x41, 0x41, 0x3E, 0x00, 0x00, // "0"
17     0x00, 0x00, 0x21, 0x7F, 0x01, 0x00, 0x00, 0x00, // "1"
18     0x00, 0x00, 0x23, 0x45, 0x49, 0x31, 0x00, 0x00, // "2"
19     0x00, 0x00, 0x22, 0x49, 0x49, 0x36, 0x00, 0x00, // "3"
20     0x00, 0x00, 0x0E, 0x32, 0x7F, 0x02, 0x00, 0x00, // "4"
21     0x00, 0x00, 0x79, 0x49, 0x49, 0x46, 0x00, 0x00, // "5"
22     0x00, 0x00, 0x3E, 0x49, 0x49, 0x26, 0x00, 0x00, // "6"
23     0x00, 0x00, 0x60, 0x47, 0x48, 0x70, 0x00, 0x00, // "7"
24     0x00, 0x00, 0x36, 0x49, 0x49, 0x36, 0x00, 0x00, // "8"
25     0x00, 0x00, 0x32, 0x49, 0x49, 0x3E, 0x00, 0x00, // "9"
26     0x00, 0x00, 0x3F, 0x44, 0x44, 0x3F, 0x00, 0x00, // "A"
27     0x00, 0x00, 0x7F, 0x49, 0x49, 0x36, 0x00, 0x00, // "B"
28     0x00, 0x00, 0x3E, 0x41, 0x41, 0x22, 0x00, 0x00, // "C"
29     0x00, 0x00, 0x7F, 0x41, 0x41, 0x3E, 0x00, 0x00, // "D"
30     0x00, 0x00, 0x7F, 0x49, 0x49, 0x41, 0x00, 0x00, // "E"
31     0x00, 0x00, 0x7F, 0x48, 0x48, 0x40, 0x00, 0x00, // "F"
32     0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, // " "
33 };
34 myThread t = new myThread();    //create a new thread for ledmatrix
35 void setup() {
36     size(640, 360);
37     mBar = new ProgressBar(borderSize, height-borderSize, width-borderSize*2);
38     mBar.setTitle("Speed");    //set the ProgressBar's title
39     ic = new IC74HC595(dataPin, latchPin, clockPin);
40     t.start();    //thread start
41 }
42 }
```

```
43 void draw() {
44     background(255);
45     titleAndSiteInfo(); //title and site information
46     strokeWeight(4); //border weight
47     mBar.create(); //create the ProgressBar
48     displayNum(hex(index, 1)); //show the number in dispaly window
49 }
50 class myThread extends Thread {
51     public void run() {
52         while (true) {
53             showMatrix(); //show smile picture
54             showNum(); //show the character "0-F"
55         }
56     }
57 }
58 void showMatrix() {
59     for (int j=0; j<100; j++) { //picture show time
60         int x=0x80;
61         for (int i=0; i<8; i++) { //display a frame picture
62             GPIO.digitalWrite(latchPin, GPIO.LOW);
63             ic.shiftOut(ic.MSBFIRST, pic[i]);
64             ic.shiftOut(ic.MSBFIRST, ~x);
65             GPIO.digitalWrite(latchPin, GPIO.HIGH);
66             x>>=1;
67         }
68     }
69 }
70 void showNum() {
71     for (int j=0; j<numCode.length-8; j++) { //where to start showing
72         index = j/8;
73         for (int k =0; k<10*(1.2-mBar.progress); k++) { //speed
74             int x=0x80;
75             for (int i=0; i<8; i++) { //display a frame picture
76                 GPIO.digitalWrite(latchPin, GPIO.LOW);
77                 ic.shiftOut(ic.MSBFIRST, numCode[j+i]);
78                 ic.shiftOut(ic.MSBFIRST, ~x);
79                 GPIO.digitalWrite(latchPin, GPIO.HIGH);
80                 x>>=1;
81             }
82         }
83     }
84 }
85 void displayNum(String num) {
86     fill(0);
```

```

87   textSize(100);
88   textAlign(CENTER, CENTER);
89   text(num, width/2, height/2);
90 }
91 void mousePressed() {
92   if ( (mouseY< mBar.y+5) && (mouseY>mBar.y-5) ) {
93     mMous = true; //the mouse click the progressBar
94   }
95 }
96 void mouseReleased() {
97   mMous = false;
98 }
99 void mouseDragged() {
100   int a = constrain(mouseX, borderSize, width - borderSize);
101   float t = map(a, borderSize, width - borderSize, 0.0, 1.0);
102   if (mMous) {
103     mBar.setProgress(t);
104   }
105 }
106 void titleAndSiteInfo() {
107   fill(0);
108   textAlign(CENTER); //set the text centered
109   font(createFont("", 100)); //default font
110   textSize(40); //set text size
111   text("LEDMatrix Display", width / 2, 40); //title
112   textSize(16);
113   text("www. freenove. com", width / 2, height - 20); //site
114 }
```

In the code, first define the data of smiling face and characters "0-F".

```

//encoding for smile face
final int[] pic = {0x1c, 0x22, 0x51, 0x45, 0x45, 0x51, 0x22, 0x1c};
//encoding for character 0-9 of ledmatrix
final int[] numCode={
.....
};
```

Then create a new thread t. LEDMatrix scan display code will be executed in run() of this thread.

```

myThread t = new myThread(); //create a new thread for ledmatrix
.....
class myThread extends Thread {
  public void run() {
    while (true) {
      showMatrix(); //show smile picture
    }
  }
}
```

```
    showNum(0); //show the character "0-F"  
}  
}  
}
```

The function setup(), define size of Display Window, ProgressBar class objects and IC75HC595 class object, and start the thread t.

```
void setup() {  
    size(640, 360);  
    mBar = new ProgressBar(borderSize, height-borderSize, width-borderSize*2);  
    mBar.setTitle("Speed"); //set the ProgressBar's title  
    ic = new IC74HC595(dataPin, latchPin, clockPin);  
    t.start(); //thread start  
}
```

In draw(), draw the relevant information and the current number to display.

```
void draw() {  
    background(255);  
    titleAndSiteInfo(); //title and site information  
    strokeWeight(4); //border weight  
    mBar.create(); //create the ProgressBar  
    displayNum(hex(index, 1)); //show the number in dispaly window  
}
```

Subfunction `showMatrix()` makes `LEDMatrix` display a smiling face patterns, and last for a period of time.

```
void showMatrix() {
    for (int j=0; j<100; j++) {      //picture show time
        int x=0x80;
        for (int i=0; i<8; i++) {      //display a frame picture
            GPIO.digitalWrite(latchPin, GPIO.LOW);
            ic.shiftOut(ic.MSBFIRST, pic[i]);
            ic.shiftOut(ic.MSBFIRST, ~x);
            GPIO.digitalWrite(latchPin, GPIO.HIGH);
            x>>=1;
        }
    }
}
```

Subfunction showNum() makes LEDMatrix scroll display of character "0-F", in which the variable k is used to adjust the scrolling speed.

```
void showNum() {  
    for (int j=0; j<numCode.length-8; j++) { //where to start showing  
        index = j/8;  
        for (int k =0; k<10*(1.2-mBar.progress); k++) { //speed  
            int x=0x80;  
            for (int i=0; i<8; i++) { //display a frame picture  
                GPIO.digitalWrite(latchPin, GPIO.LOW);  
                ic.shiftOut(ic.MSBFIRST, numCode[j+i]);  
                ic.shiftOut(ic.MSBFIRST, ~x);  
                GPIO.digitalWrite(latchPin, GPIO.HIGH);  
                x>>=1;  
            }  
        }  
    }  
}
```

If you have more interests about LED matrix, you can download an interesting app to explore.

<https://play.google.com/store/apps/details?id=com.vitogusmano.arduinoledmatrixanimator>

If you have any concerns about the app, please contact with Vito Gusmano (vigus9000@gmail.com).


Chapter 13 I2C-LCD1602

In this chapter, we will learn a display screen, LCD1602.

Project 13.1 LCD

In the project, the current time and date will be displayed on the LCD1602 and Display Window.


Component List

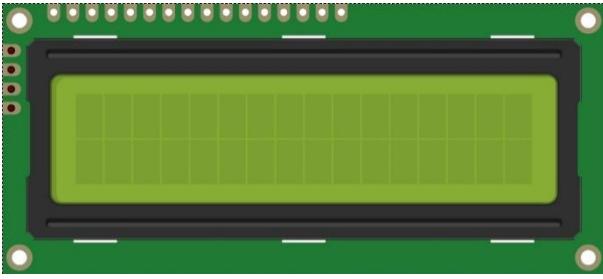Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M x4
I2C LCD1602 Module x1	 A photograph of an I2C LCD1602 module. It features a green PCB with a black plastic housing. A green LCD screen is centered within the housing, which has a grid pattern. The module has several pins on its top edge and four gold-colored pins on its bottom edge.


Circuit

Note that the power supply for I2CLCD1602 in this circuit is 5V.

Schematic diagram

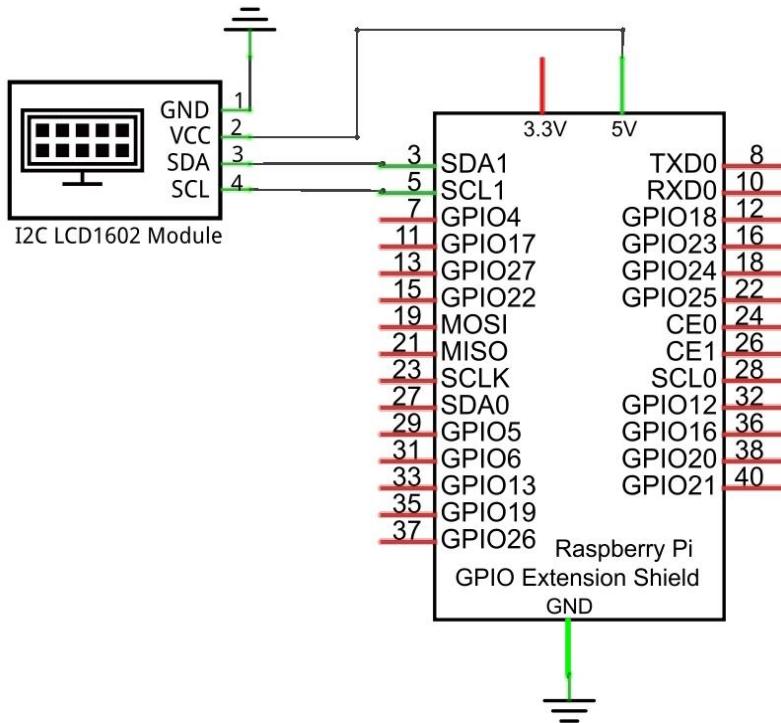

Hardware connection

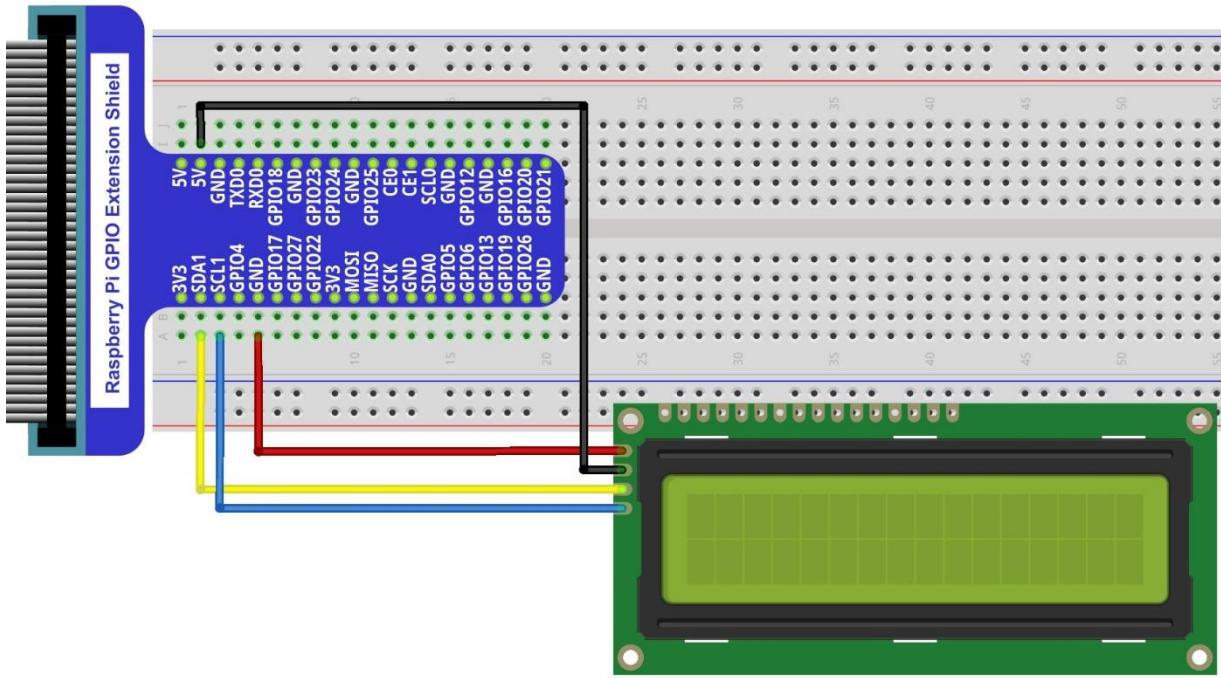

Sketch

Sketch 13.1.1 LCD


First observe the results of the code and the phenomenon, and then analyze the code.

1. Use Processing to open the file Sketch_13_1_1_LCD.

```
processing  
~/Freenove_Kit/Processing/Sketches/Sketch_13_1_1_LCD/Sketch_13_1_1_LCD.pde
```

2. Click on "RUN" to run the code.

After the program is executed, both LCD in the circuit and the Display Window will show the current time and date.

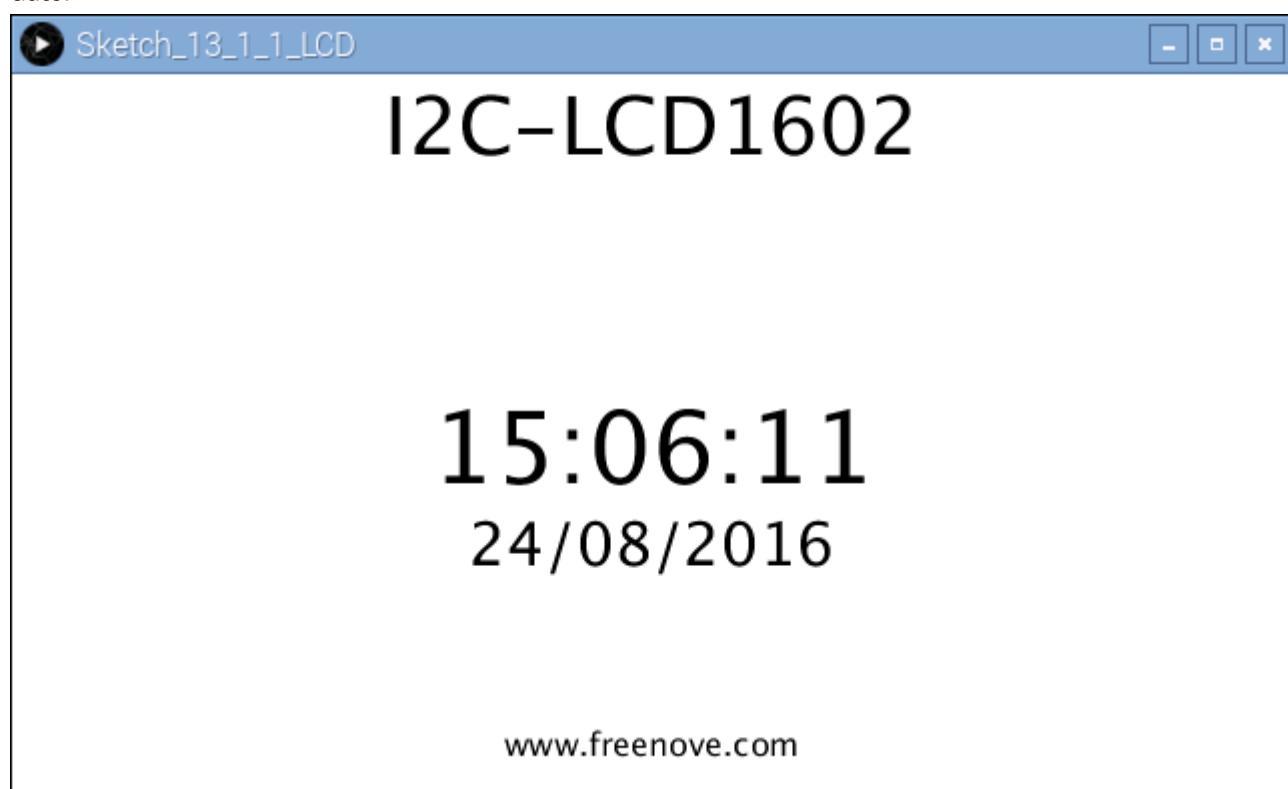

This project contains a lot of code files, and the core code is contained in the file Sketch_13_1_1_LCD. The other files only contain some custom classes.



The following is program code:

```
1 import processing.io.*;
2 //Create a object of class PCF8574
3 PCF8574 pcf = new PCF8574(0x27);
4 Freenove_LCD1602 lcd; //Create a lcd object
5 String time = "";
6 String date = "";
7 void setup() {
8     size(640, 360);
9     lcd = new Freenove_LCD1602(pcf);
10    frameRate(2); //set display window frame rate for 2 HZ
11 }
12 void draw() {
13     background(255);
14     titleAndSiteInfo();
15     //get current time
16     time = nf(hour(), 2, 0) + ":" + nf(minute(), 2, 0) + ":" + nf(second(), 2, 0);
17     //get current date
18     date = nf(day(), 2, 0)+"/"+nf(month(), 2, 0)+"/"+nf(year(), 2, 0);
19     lcd.position(4, 0); //show time on the lcd display
20     lcd.puts(time);
21     lcd.position(3, 1); //show date on the lcd display
22     lcd.puts(date);
23     showTime(time, date); //show time/date on the display window
24 }
25 void showTime(String time, String date) {
26     fill(0);
27     textAlign(CENTER, CENTER);
28     textSize(50);
29     text(time, width/2, height/2);
30     textSize(30);
31     text(date, width/2, height/2+50);
32 }
33 void titleAndSiteInfo() {
34     fill(0);
35     textAlign(CENTER); //set the text centered
36     textSize(40); //set text size
37     text("I2C-LCD1602", width / 2, 40); //title
38     textSize(16);
39     text("www.freenove.com", width / 2, height - 20); //site
40 }
```

First create a PCF8574 class object “pcf”, and take “pcf” as a parameter to create a LCD1602 class object. And then define the variable time to store date and time. Display window need not refresh frequently. Therefore, the frame rate can be set to 1Hz or 2Hz.

```
PCF8574 pcf = new PCF8574(0x27);
Freenove_LCD1602 lcd; //Create a lcd object
String time = "";
String date = "";
void setup() {
    size(640, 360);
    lcd = new Freenove_LCD1602(pcf);
    frameRate(2); //set display window frame rate for 2 HZ
}
```

In the function draw(), get the current time and date, and display them on the LCD1602 and Display Window.

```
void draw() {
    background(255);
    titleAndSiteInfo();
    //get current time
    time = nf(hour(), 2, 0) + ":" + nf(minute(), 2, 0) + ":" + nf(second(), 2, 0);
    //get current date
    date = nf(day(), 2, 0) + "/" + nf(month(), 2, 0) + "/" + nf(year(), 2, 0);
    lcd.position(4, 0); //show time on the lcd display
    lcd.puts(time);
    lcd.position(3, 1); //show date on the lcd display
    lcd.puts(date);
    showTime(time, date); //show time/date on the display window
}
```

About class PCF8574:

class PCF8574

This is a custom class that is used to control the integrated circuit PCF8574.

`public PCF8574(int addr)`

Constructor, used to create a PCF8574 class object, parameters for the I2C device address of PCF8574.

`public int digitalRead(int pin)`

Used to read the value(HIGH/LOW) of one of the ports.

`public int readByte()`

Used to read values of all ports.

`public void digitalWrite(int pin, int val)`

Write data(HIGH/LOW) to a port.

`public void writeByte(int data)`

Write data to all ports.

About class Freenove_LCD:

class Freenove_LCD

This is a custom class that is currently only used to control the I2C-LCD1602 connected to PCF8574.

```
public Freenove_LCD1602(PCF8574 ipcf)
```

Constructor, used to create Freenove_LCD1602 class object, the parameter for PCF8574 class object.

```
public void putChar(char data)
```

Write a character to the LCD screen.

```
public void puts(String str)
```

Write a string to the LCD screen.

```
public void display(boolean state)
```

Turn on/off LCD.

```
public void lcdCursor(boolean state)
```

Turn on/off Cursor.

```
public void cursorBlink(boolean state)
```

Turn on/off Cursor Blink.

```
public void position(int x, int y)
```

Set the location of Cursor.

```
public void home()
```

Set the Cursor to home.

```
public void lcdClear()
```

Clear the screen.

```
public void backLightON() & public void backLightOFF()
```

Turn on/off the backlight.

```
public void scrollDisplayLeft() & public void scrollDisplayRight()
```

Shift screen of a unit to left/right.

```
public void leftToRight() & public void rightToLeft()
```

Set text direction as form left to right / from right to left.

```
public void autoScroll() & public void noAutoScroll()
```

Automatic shifting screen/turn off automatic shifting screen.




App 1 Oscilloscope

We have used the ADC module to read the voltage of potentiometer to realize function of the voltmeter, before. In this chapter, we will make a more complex virtual instrument, oscilloscope. Oscilloscope is a widely used electronic measuring instrument. It can get the electrical signals not directly observed into visible image to facilitate the analysis and study of various electrical signals change process.

App 1.1 Oscilloscope

Now, let's make an oscilloscope.


Component List

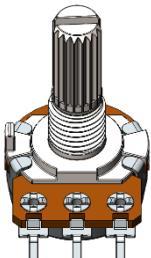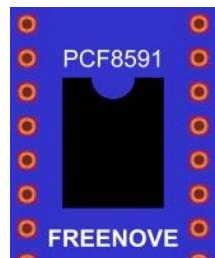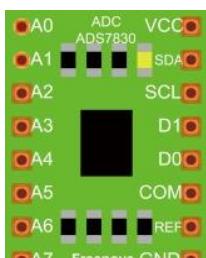Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M
Rotary potentiometer x1	ADC module x1
	  Or


Circuit with PCF8591

Note that the power supply voltage of ADC module in this circuit is 5V.

Schematic diagram

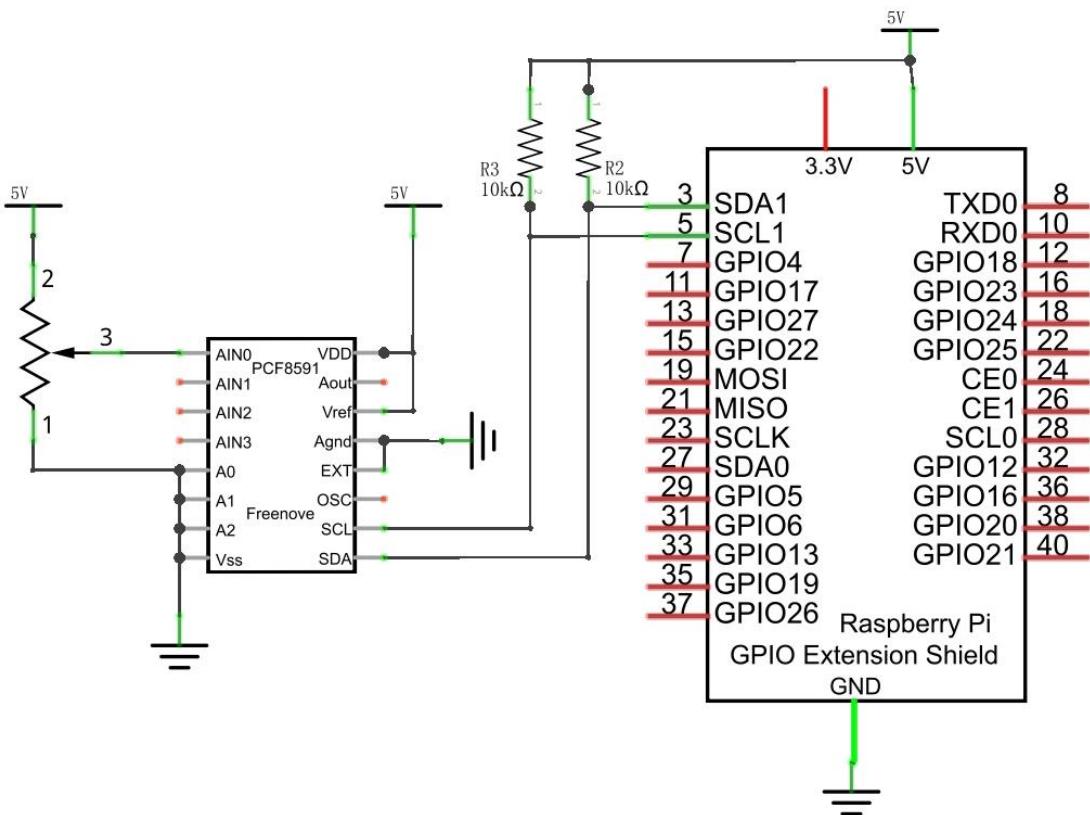


Hardware connection

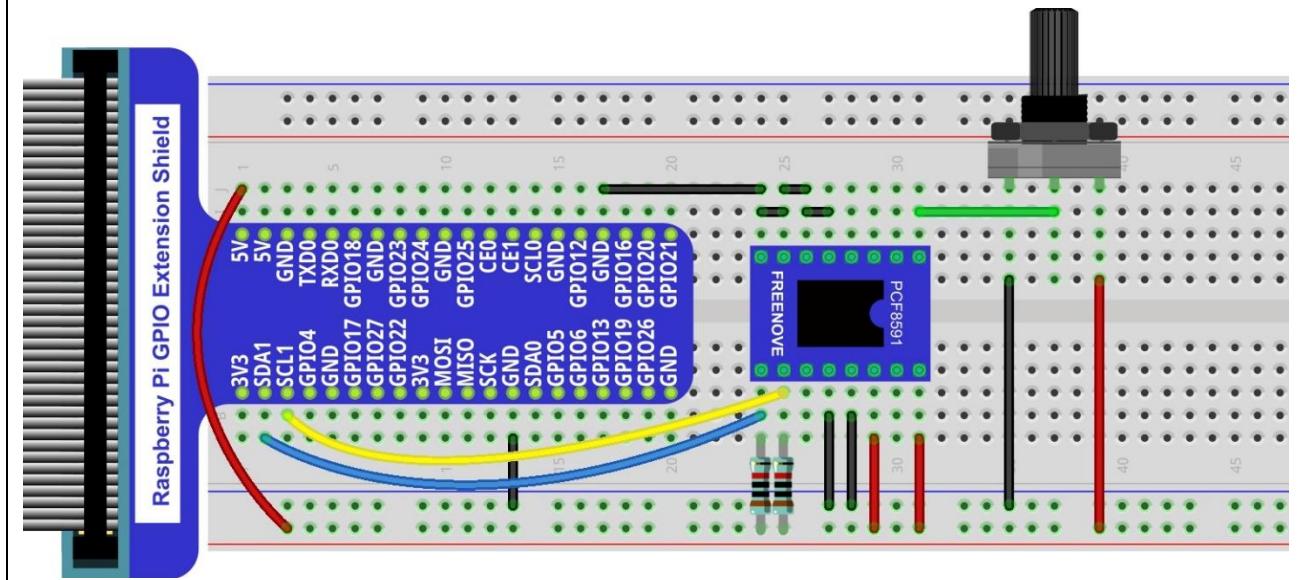


Circuit with ADS7830

Note that the power supply voltage of ADC module in this circuit is 5V.

Schematic diagram

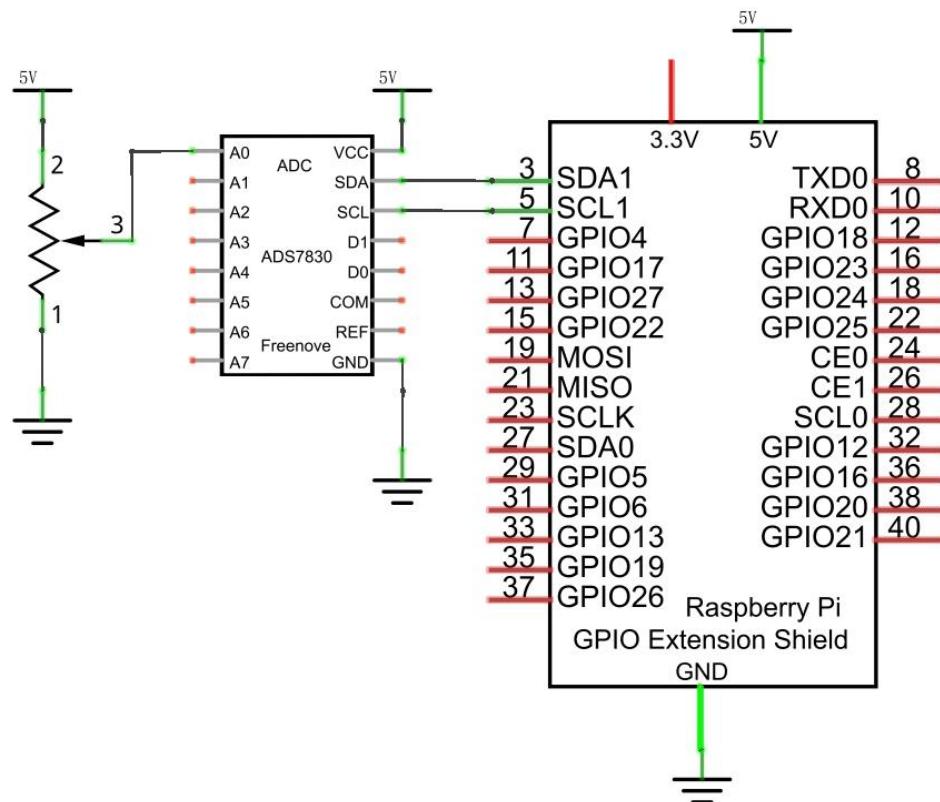

Hardware connection

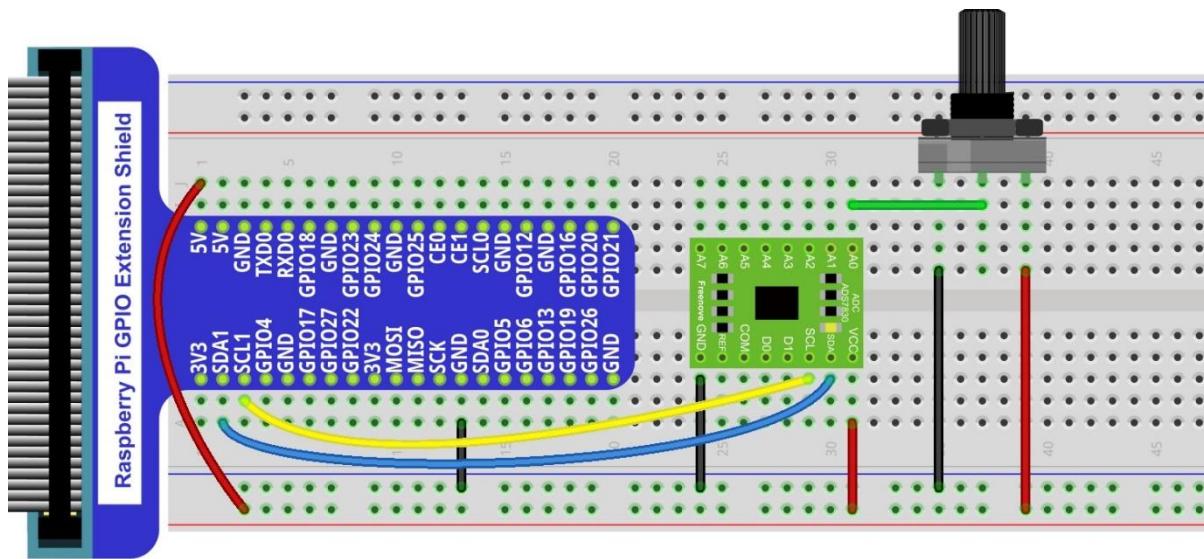

App


App 1.1.1 Oscilloscope

1. Use Processing to open the file App_01_1_1_Oscilloscope.

```
processing  
~/Freenove_Kit/Processing/Apps/App_01_1_1_Oscilloscope/App_01_1_1_Oscilloscope.  
pde
```

2. Click on "RUN" to run the code.

After the program is executed, Display Window display as below. Rotating potentiometer can make following waveform.

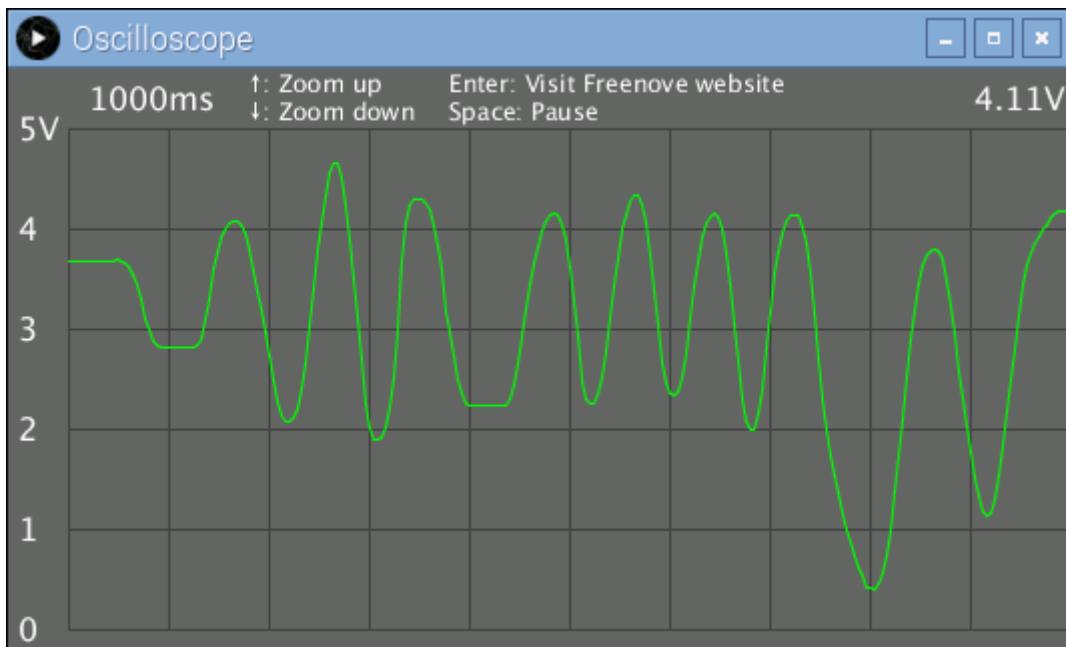

The left side of the software interface is a voltage scale, which is used to indicate the voltage of the waveform. The "1000ms" on top left corner is the time of a square, and you can press " \uparrow " and " \downarrow " key on keyboard to adjust it.

The "0.00V" on top right corner is the voltage value of current signal.

You can press the space bar on keyboard to pause the display waveform, which is easy to view and analysis.

We believe that with the help of this oscilloscope, you can obtain more intuitive understanding of the actual work of some electronic circuits. It will help you complete the project and eliminate the trouble. You can export this App to an application used as a tool.




App 2 Control Graphics

In this chapter, we will use potentiometer to make the graphics change in Processing.

App 2.1 Ellipse


This project uses two potentiometers to control the size and shape of an ellipse respectively.

Component List

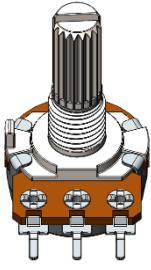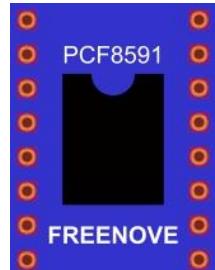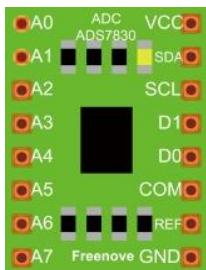
Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M 
Rotary potentiometer x2 	ADC module x1  or 

Circuit with PCF8591

Schematic diagram

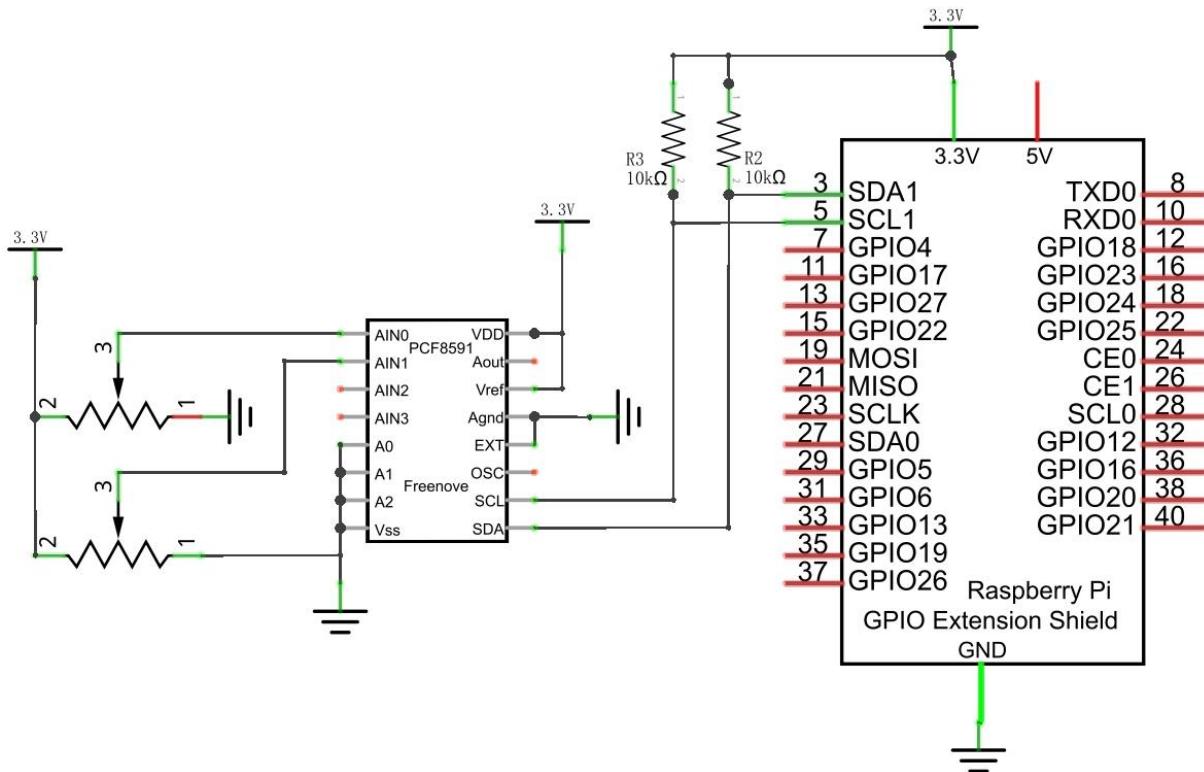


Hardware connection

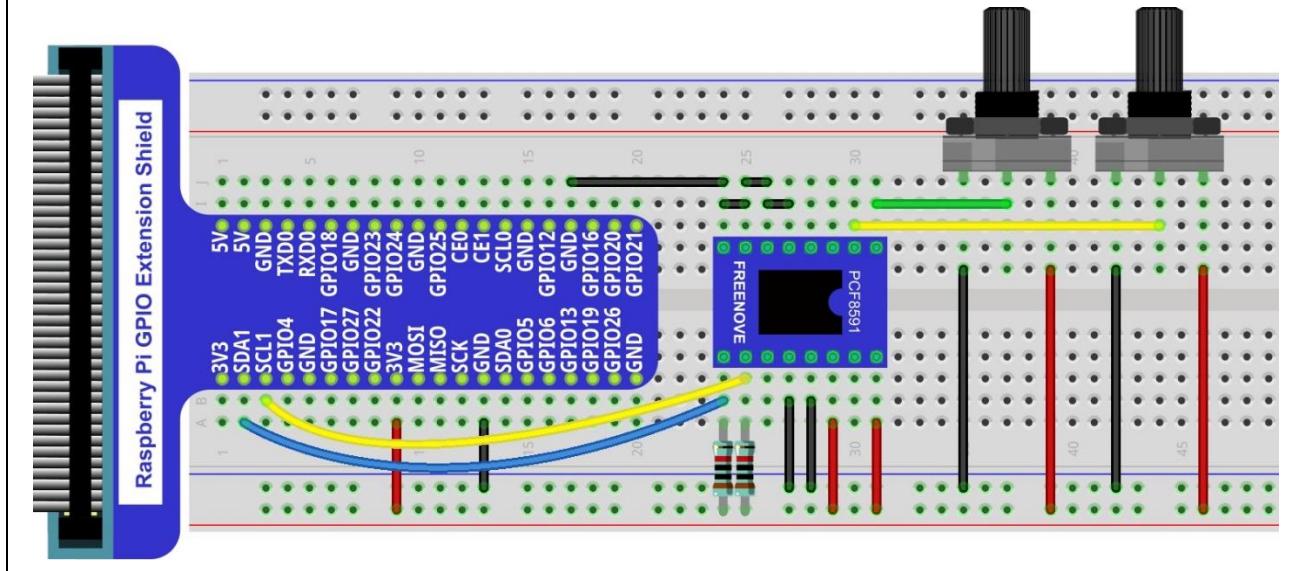


Circuit with ADS7830

Schematic diagram

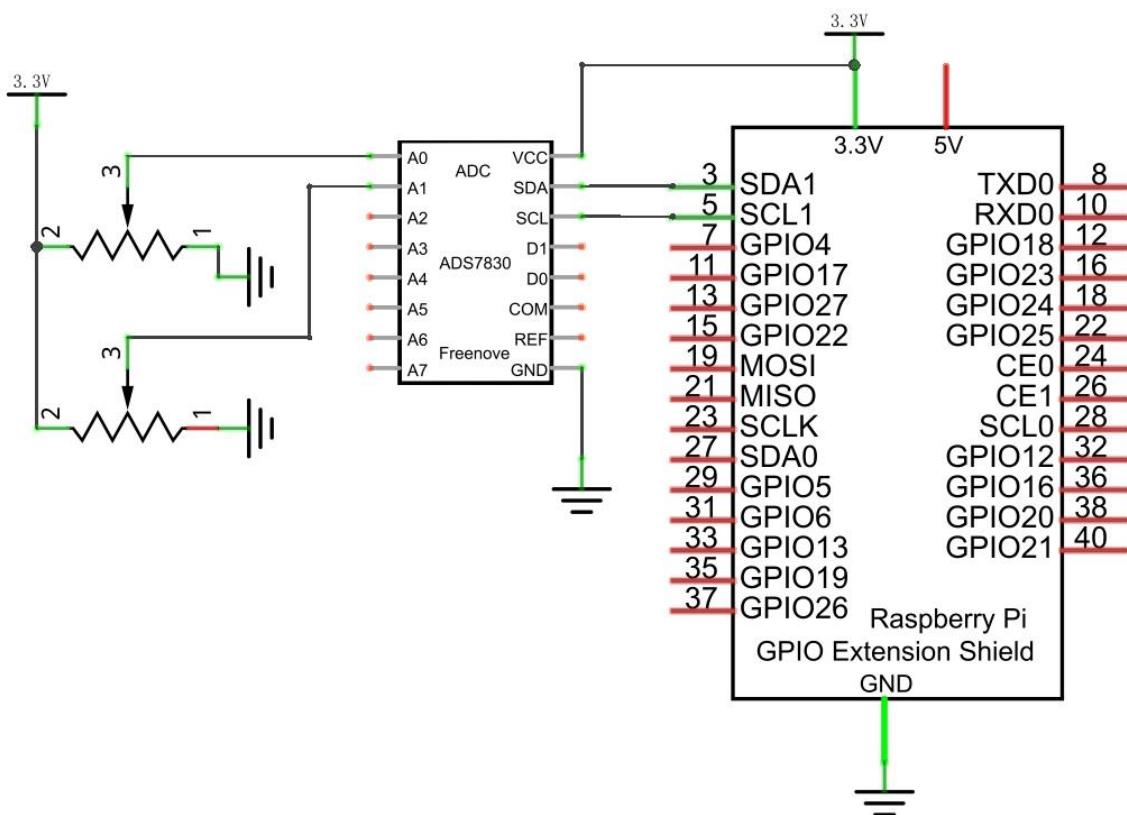

Hardware connection

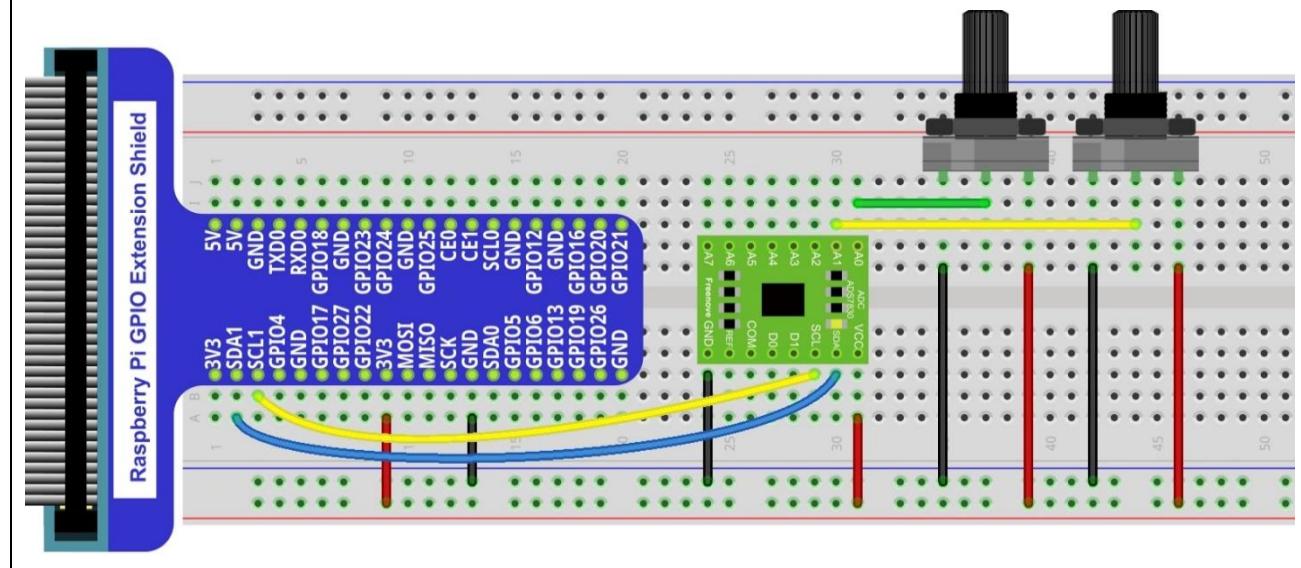

App

App 2.1.1 Ellipse


1. Use Processing to open the file App_02_1_1_Ellipse.

```
processing
```

```
~/Freenove_Kit/Processing/Apps/App_02_1_1_Ellipse/App_02_1_1_Ellipse.pde
```

2. Click on "RUN" to run the code.

After the program is executed, Display Window displays as below. Rotating potentiometer can change the shape and size of the ellipse.

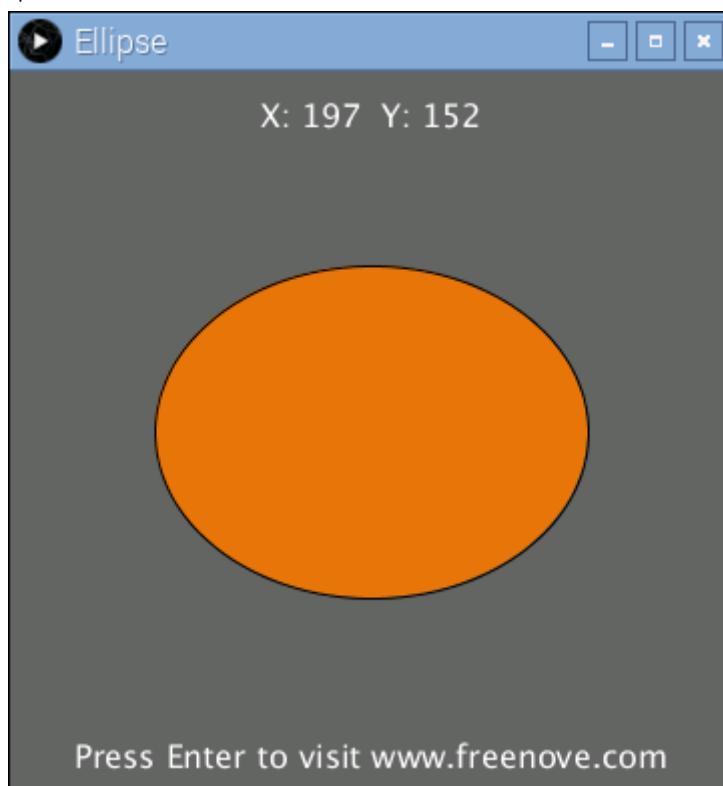




App 3 Pong Game

In this chapter, we will play a game, Pong Game.

App 3.1 Pong Game


Now, let's create and experience our own game.

Component List

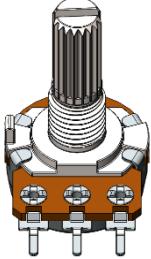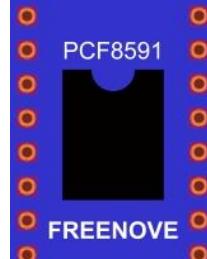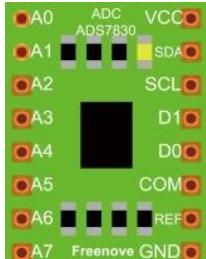
Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Jumper M/M 
Rotary potentiometer x2 	ADC module x1  or  Resistor 10kΩ x2 

Circuit with PCF8591

Schematic diagram

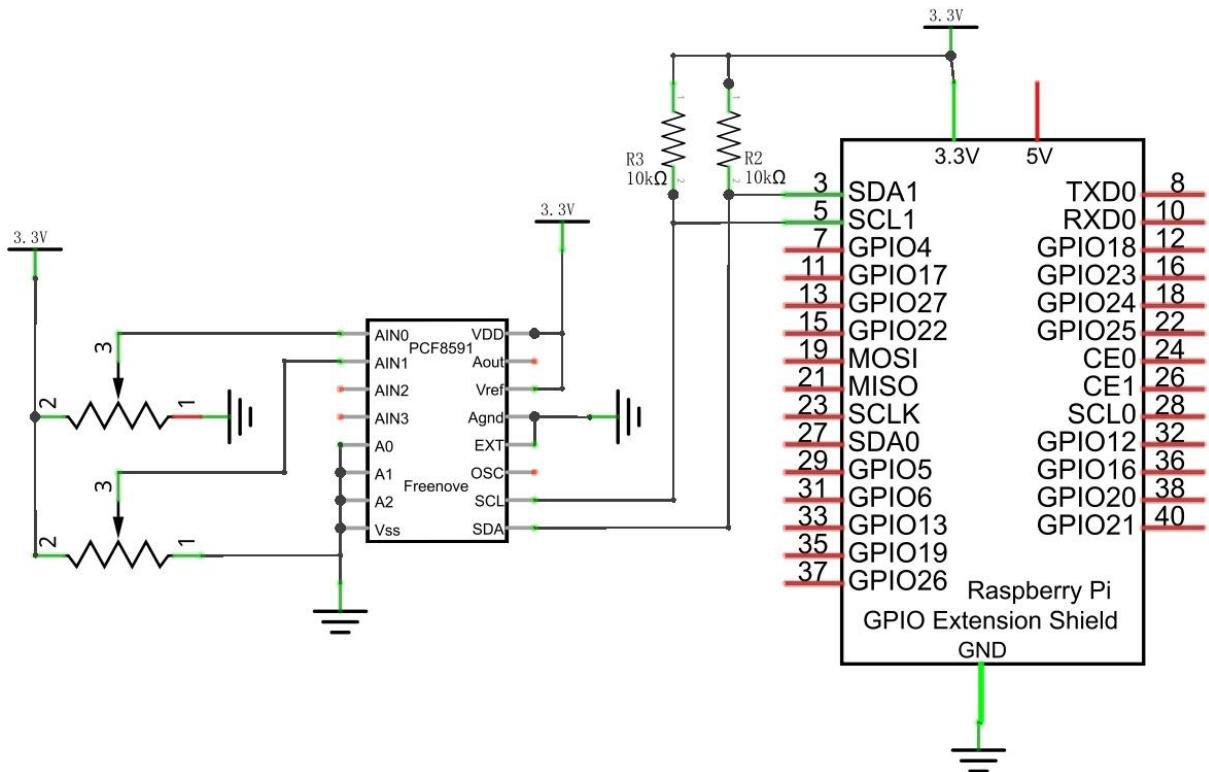


Hardware connection

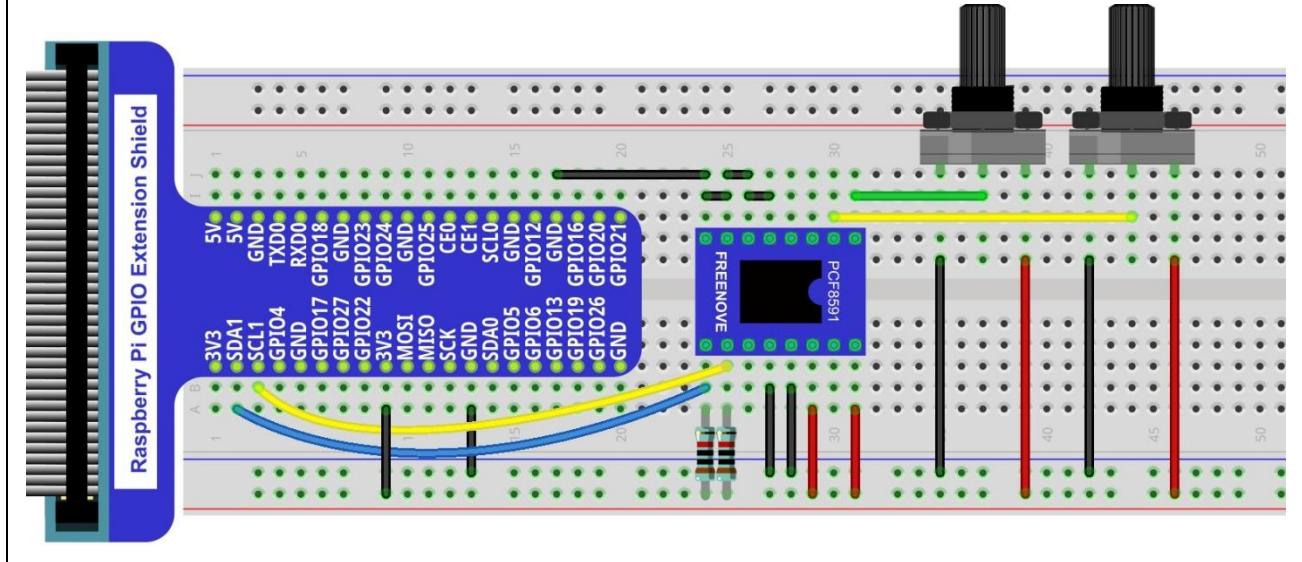


Circuit with ADS7830

Schematic diagram

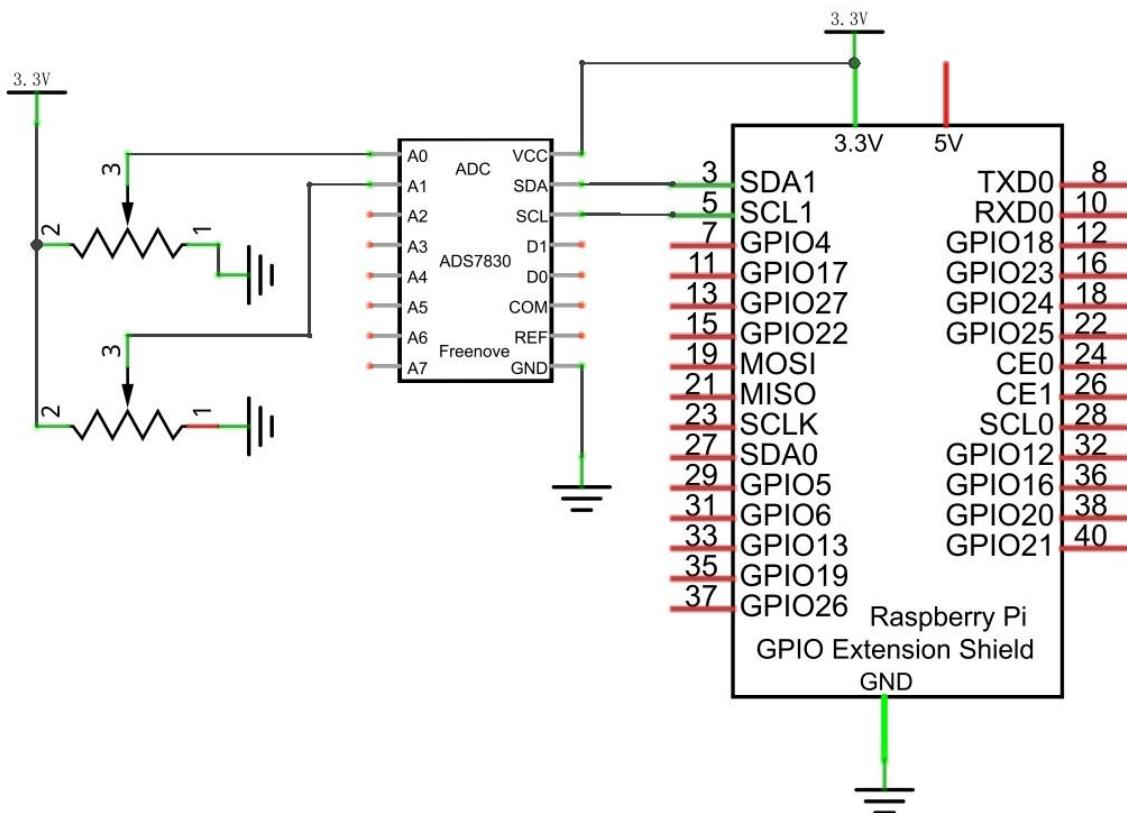

Hardware connection

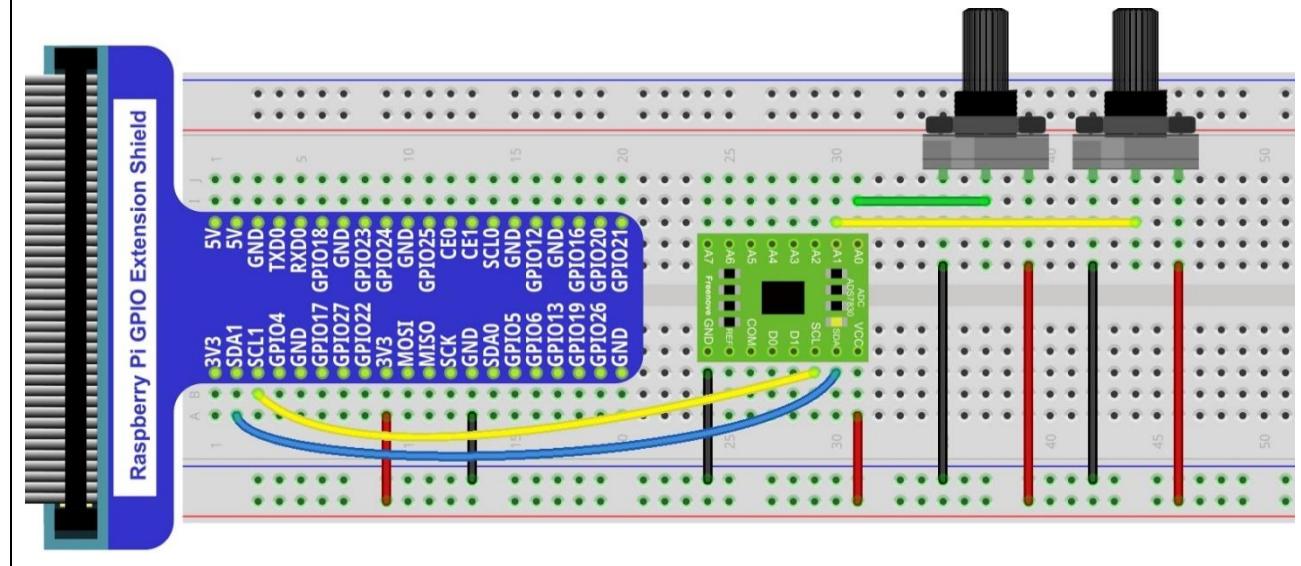

App

App 3.1.1 PongGame

1. Use Processing to open the file App_03_1_1_PongGame.

```
processing  
~/Freenove_Kit/Processing/Apps/App_03_1_1_PongGame/App_03_1_1_PongGame.pde
```

2. Click on "RUN" to run the code.

After the program is executed, Display Window displays as below.



Pressing the space bar keyboard can start the game. Then you can try to turn the potentiometer to control the movement of paddle:



Use potentiometer to control the movement of paddle to turn back the ball. The rules are the same as the classic Pong game:



The game will be over when one side gets three points. Pressing the space can restart the game:



You can restart the game by pressing the space bar at any time during the game.

App 4 Snake Game

In this chapter, we will play a classic game, snake.

App 4.1 Snake Game


Now, let's create and experience our own game.

Component List


Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Resistor 10KΩ x4	Push button x4
Jumper M/M x12		

Circuit

Schematic diagram

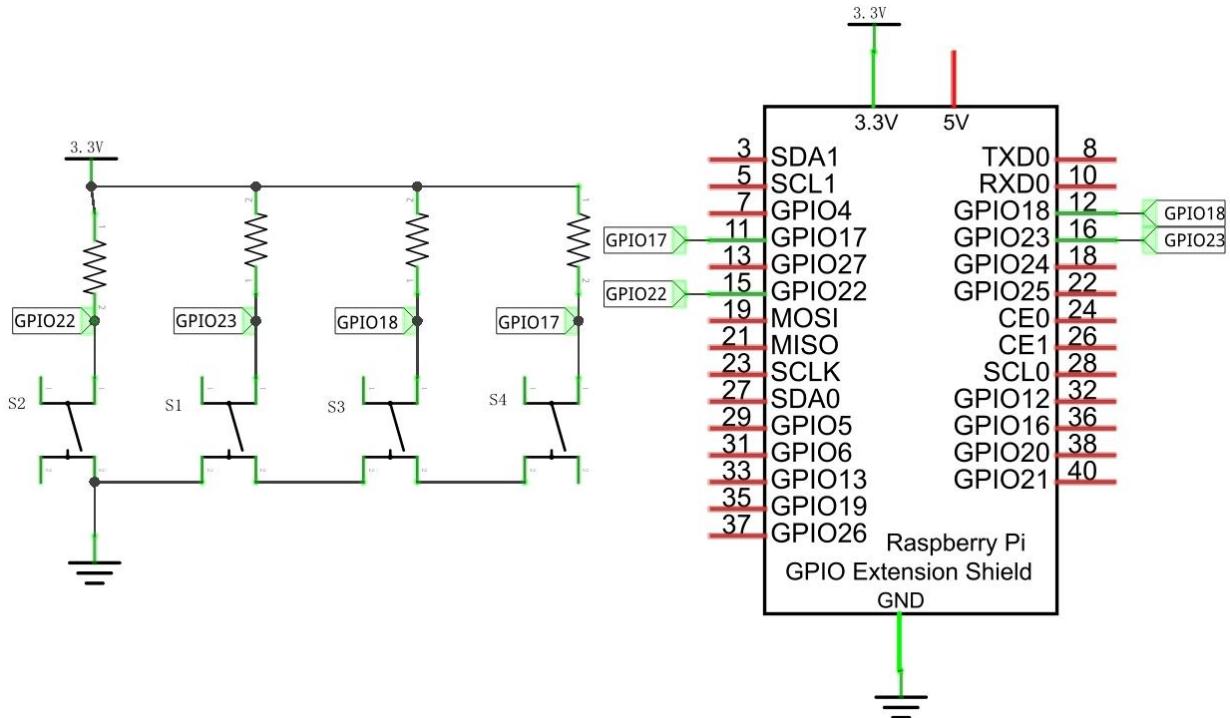

Hardware connection

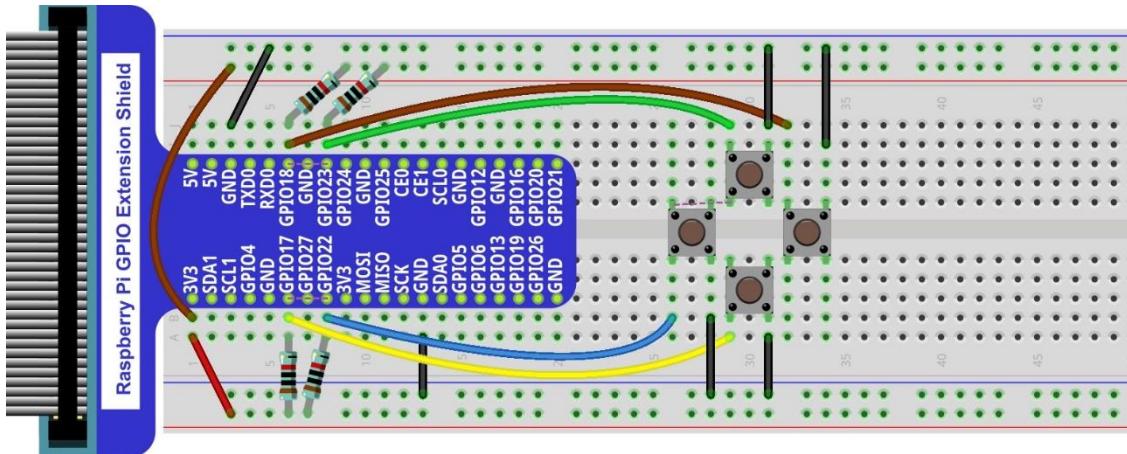

App


App 4.1.1 SnakeGame

1. Use Processing to open the file App_04_1_1_SnakeGame.


```
processing  
~/Freenove_Kit/Processing/Apps/App_04_1_1_SnakeGame/App_04_1_1_SnakeGame.pde
```

2. Click on "RUN" to run the code.


After the program is executed, Display Window displays as below.

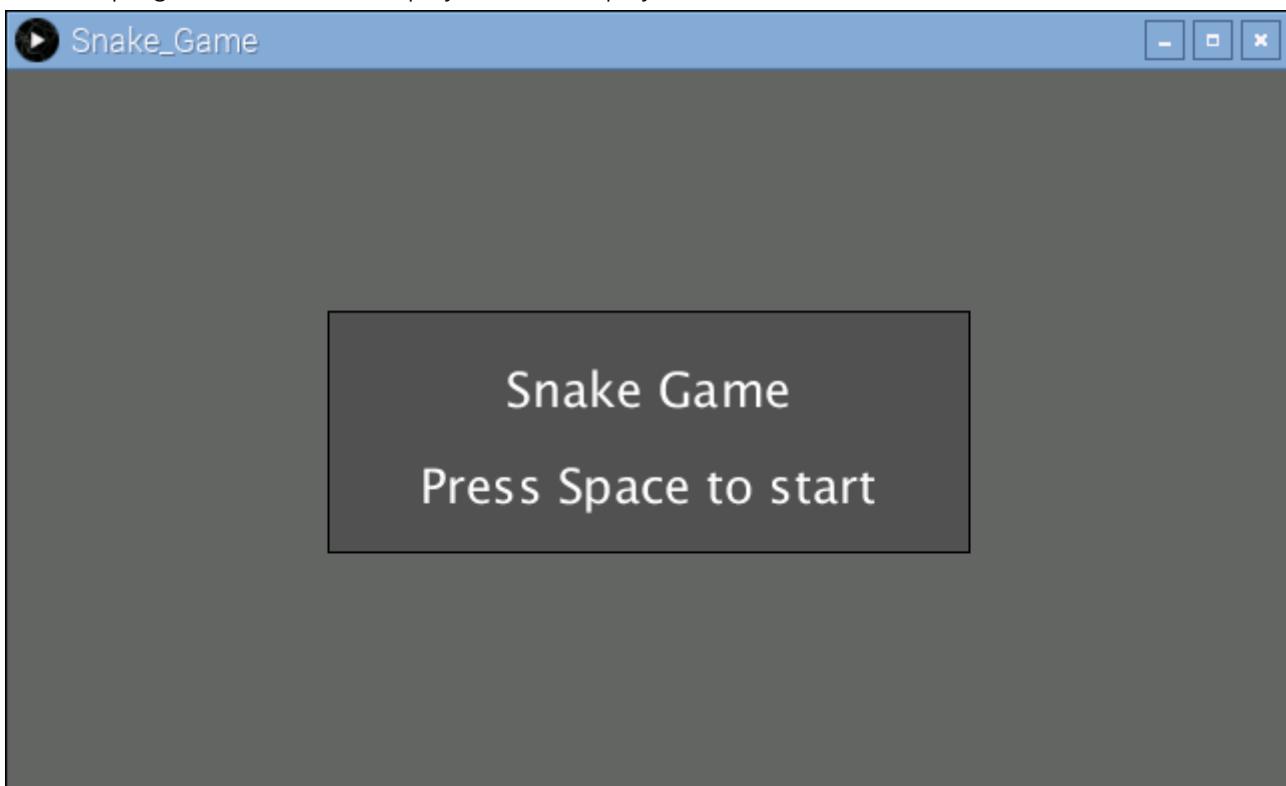


Pressing the space can start the game:

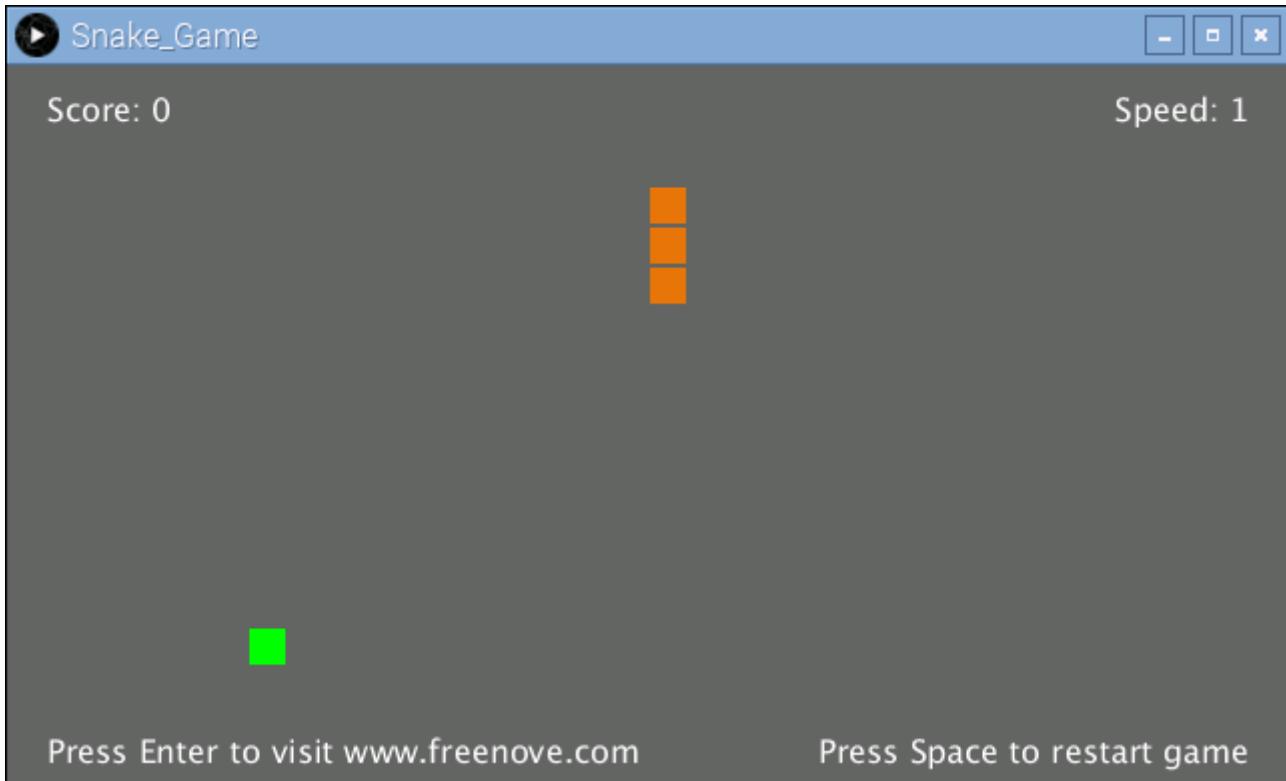

You can control the movement direction of the snake through the four buttons in circuit or four arrow keys on the keyboard. The rules are the same as the classic Snake game:

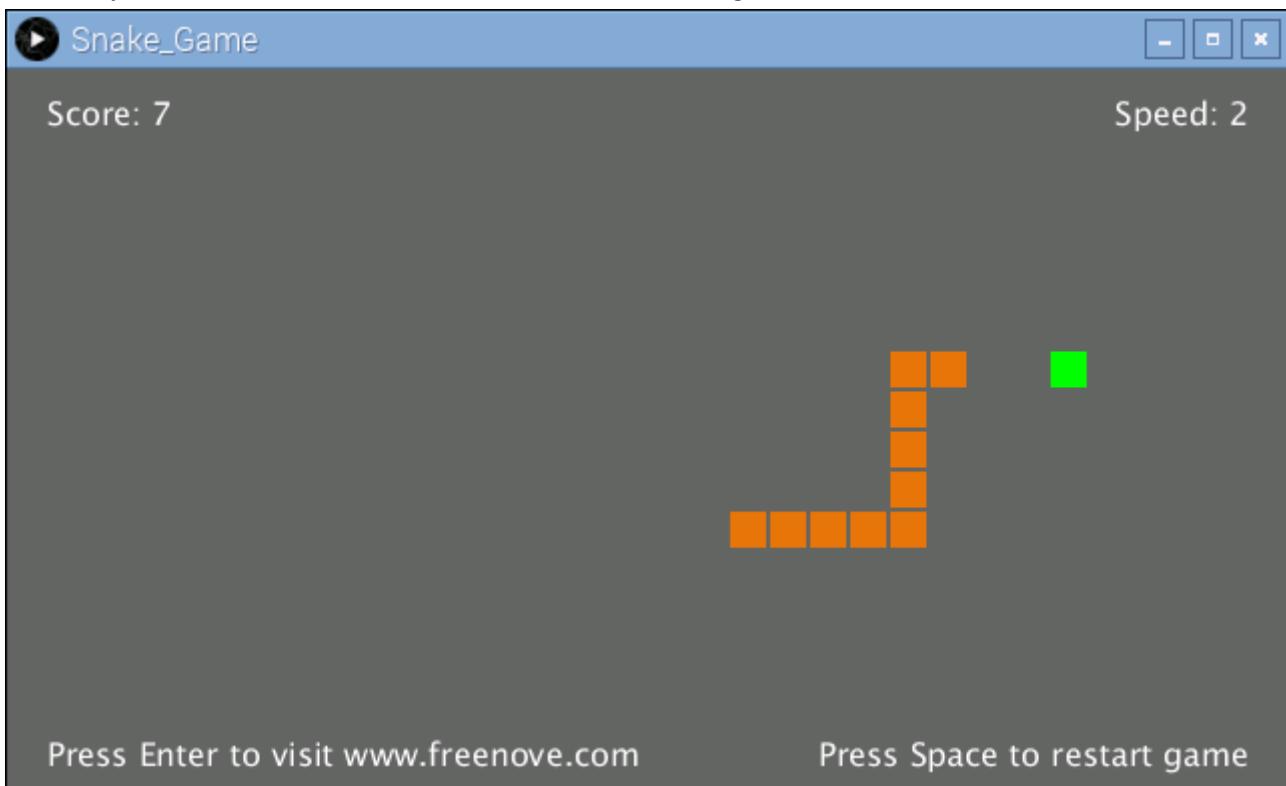

When game is over, pressing the space can restart the game:

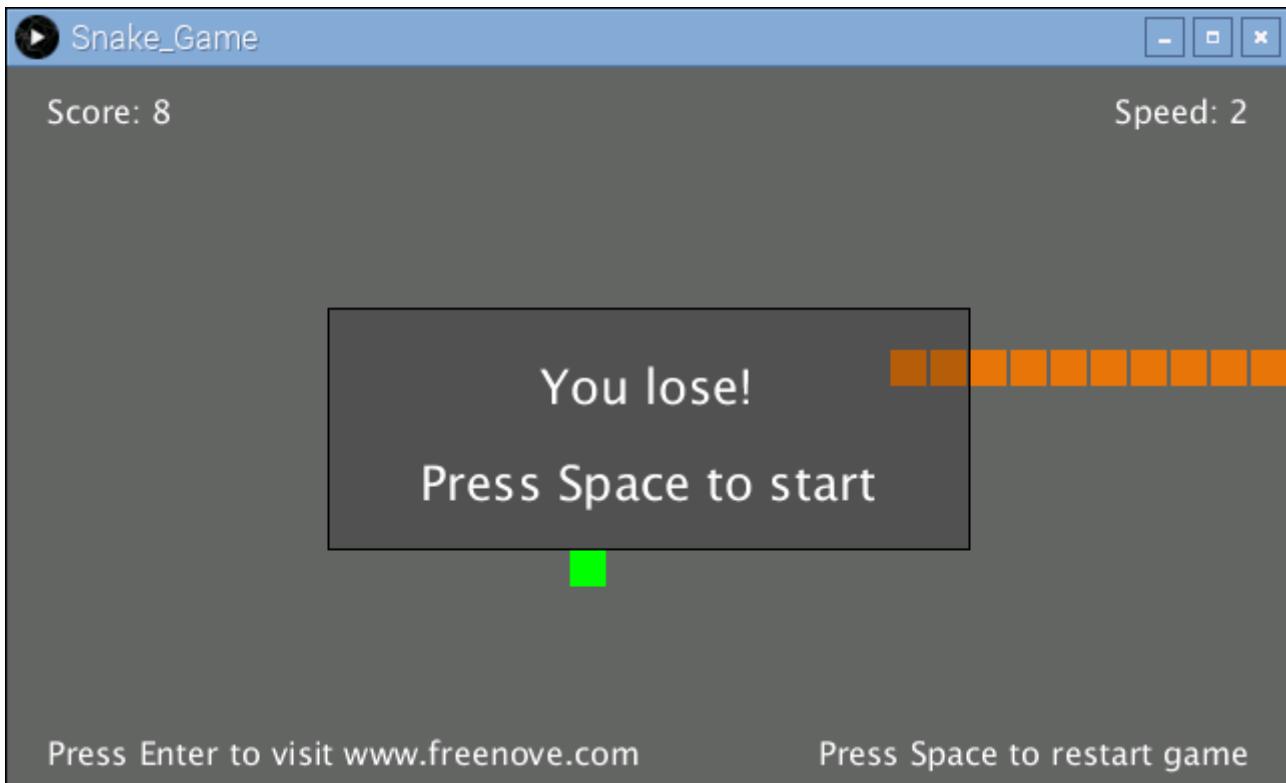

You can restart the game by pressing the space bar at any time during the game.

App 5 Tetris Game

In this chapter, we will play a game, tetris game.

App 5.1 Tetris Game


Now, let's create and experience our own game.

Component List


Raspberry Pi x1 GPIO Extension Board & Wire x1 BreadBoard x1	Resistor 10KΩ x4	Push button x4
Jumper M/M x12		

Circuit

Schematic diagram

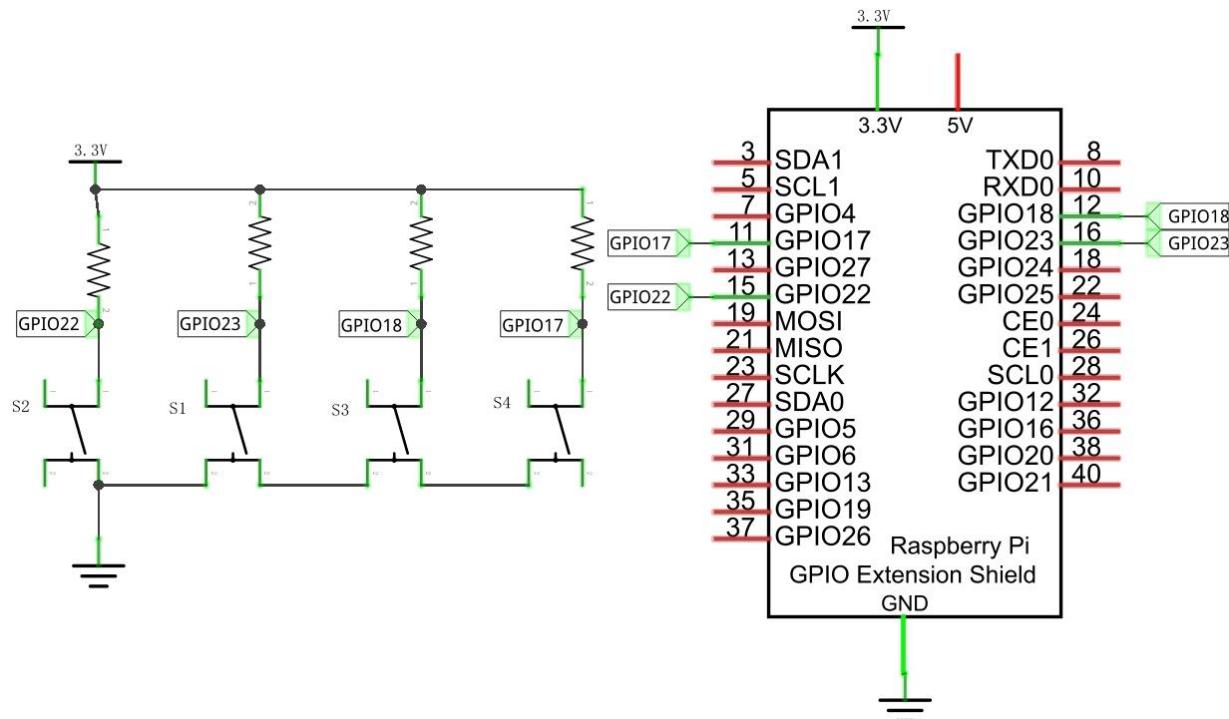

Hardware connection

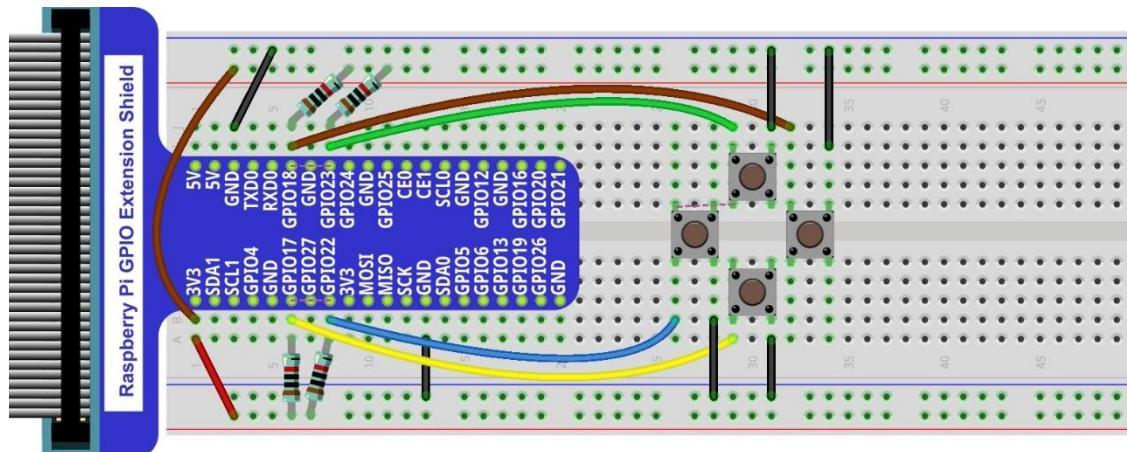



App

App 5.1.1 TetrisGame



1. Use Processing to open the file App_05_1_1_TetrisGame.

```
processing
```



```
~/Freenove_Kit/Processing/Apps/App_05_1_1_TetrisGame/App_05_1_1_TetrisGame.pde
```

2. Click on "RUN" to run the code.



After the program is executed, Display Window displays as below.

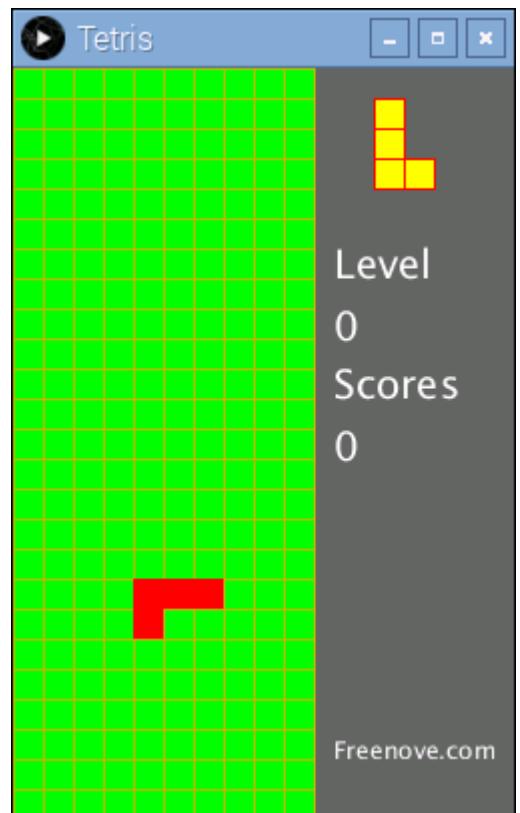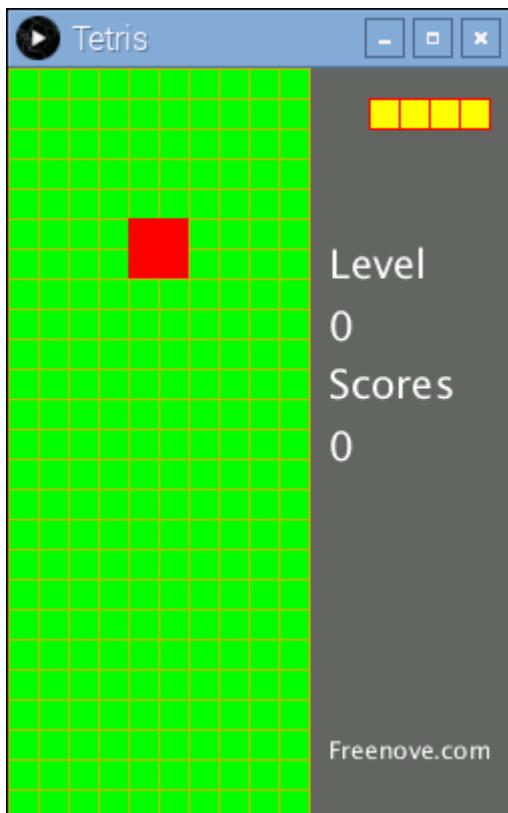

The left and right button in the circuit can control the moving of the falling block to left or right. And the button below can accelerate falling of the block. The button above is used for rotating of the block. Four direction keys on keyboard can also be used to play the game.

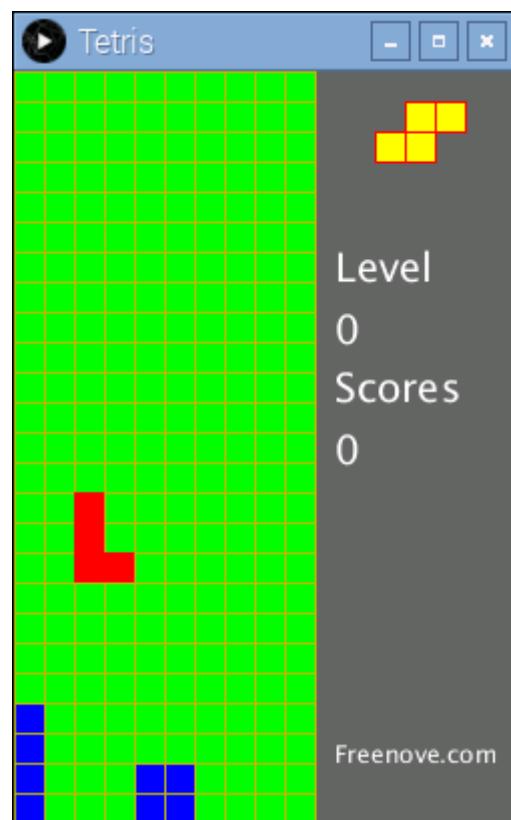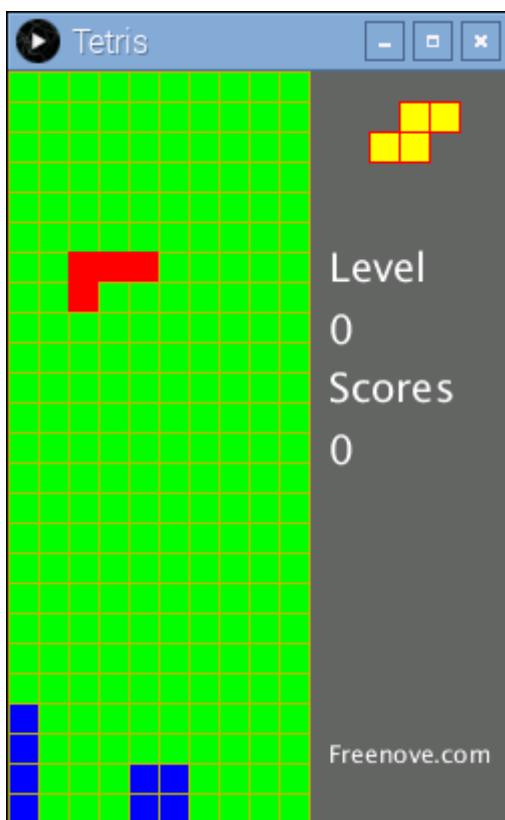


In the process of game, pressing the space bar on the keyboard can pause the game. The right side of the Display Window shows the next upcoming block, the current game speed and the current score. The more lines you eliminate once, the higher the scores. If you eliminate one line once, you will get 10 points. If you eliminate 4 lines once, you will get 70 points.

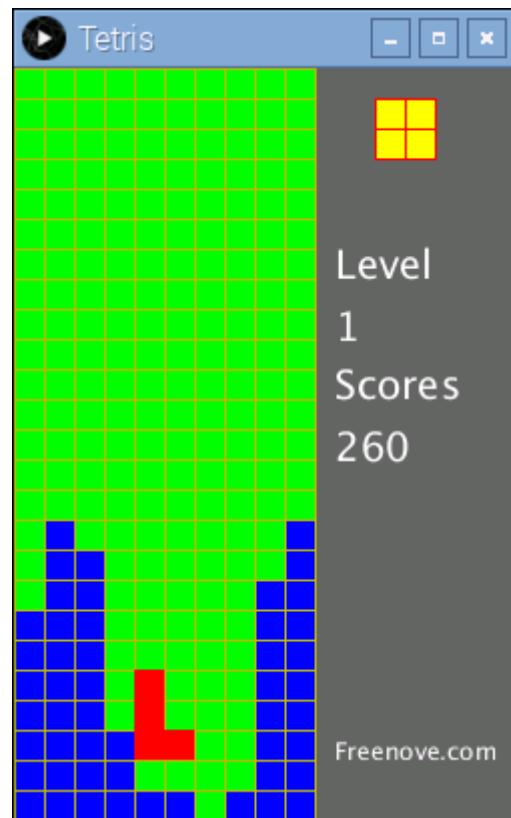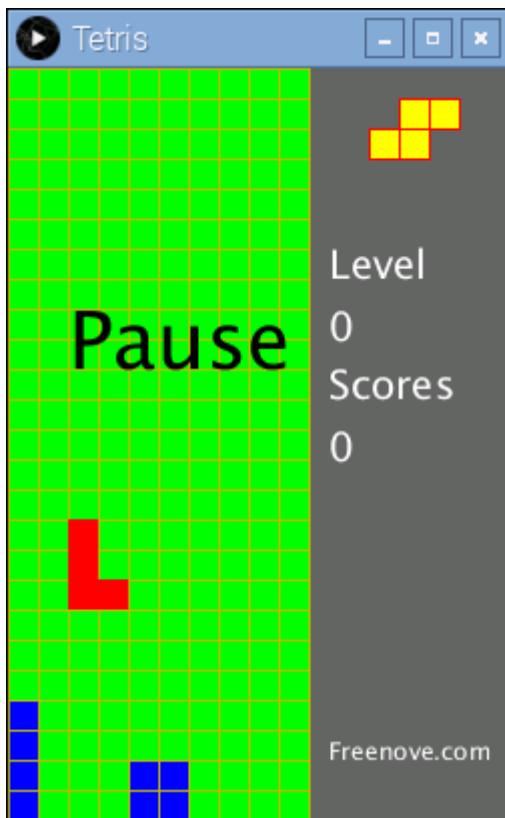



When the blocks are beyond the screen, the game is over. After the game is over, press the space bar to start a new game.

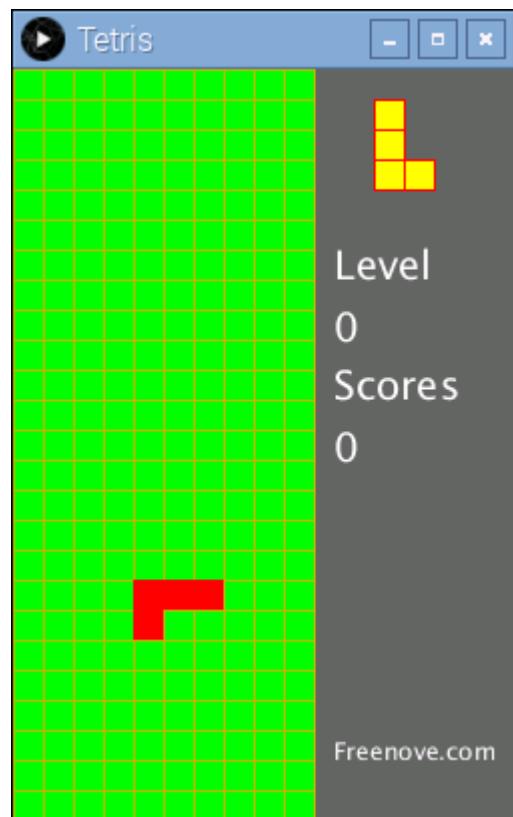

What's next?

Thanks for your reading.

This tutorial is all over here. If you find any mistakes, missions or you have other ideas and questions about contents of this tutorial or the kit and ect, please feel free to contact us, and we will check and correct it as soon as possible.

If you want to learn more about Arduino, Raspberry Pi, smart cars, robots and orther interesting products in science and technology, please continue to focus on our website. We will continue to launch cost-effective, innovative and exciting products.

Thank you again for choosing Freenove products.