


Self-Driving Car Research Studio

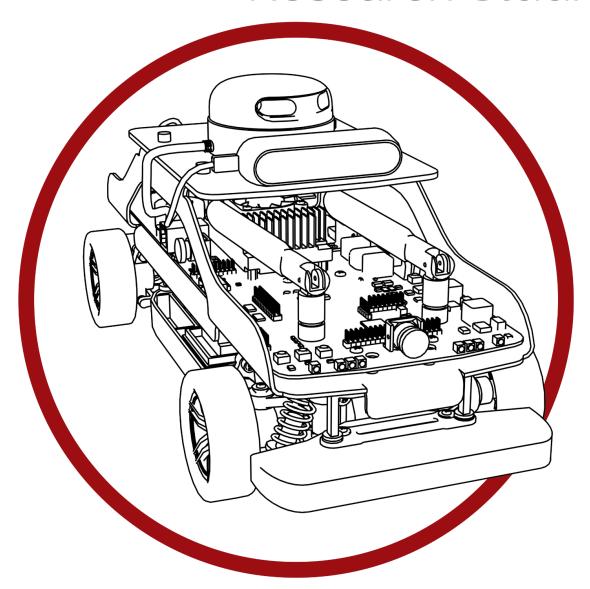

LIDAR Point Cloud - Simulink

Table of Contents

I. System Description	
II. Running the example	
III. Details	

I. System Description

In this example, we will capture LIDAR data from the RP LIDAR A2 on the QCar platform, send the data to a polar plot, and generate a point cloud map. The process is shown in Figure 1.

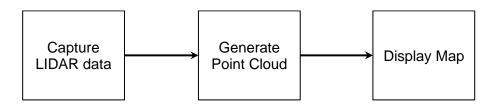


Figure 1. Component diagram

In addition, a timing module will be monitoring the entire application's performance. The Simulink implementation is displayed in Figure 2 below.

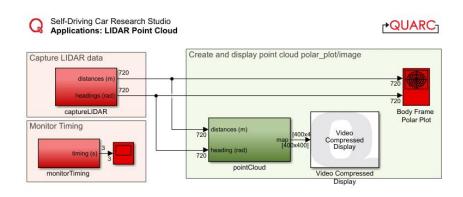


Figure 2. Simulink implementation of Lidar Point Cloud

II. Running the example

Check the user guide **IV - Software - Simulink** for details on deploying Simulink models to the QCar as applications.

As your room size may vary, change the maximum Distance (m) parameter within the pointCloud subsystem accordingly, up to a maximum of 4m (corresponding to an 8 x 8 m room). Figure 3 shows the typical output expected when running this example.



Figure 3. Point cloud map generated in a room.

III. Details

1. Capturing LIDAR data


The RP LIDAR A2 reads data in a clockwise manner. starting from a position opposite to the data cable attached to it. On the QCar platform, this corresponds to the +y axis. To correct this, the



captureLIDAR subsystem corrects the order of the data to start at the front and orient counterclockwise to follow standard convention in the bodyFrameAdjustmentOnCapture function.

2. <u>Saturating the distances data meaningfully</u>

To limit the scope of the data to a range, the distances data is dynamically saturated using the **maximumDistance** parameter. The findXYContour function then converts the distance/heading data pairs to X Y pairs. However, we would like the XY points corresponding to the **maximumDistance** to not show up within the point cloud itself, as they simply correspond to a maximum range and not physical obstacles. To do so, the

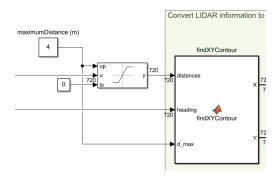

findXYContour also drops data points that are equal to the maximumDistance parameter. contourToPointCloud

3. Generating the point cloud

This function first decays the existing map to 90%, thereby slowly erasing older data. The **X Y** data points in meters are converted to pixel scale **pX** and **pY** using a **gain** of 50 px/m for a map of size **dim** up to 400 pixels wide and tall (or 8m x 8m). Check out the documentation of MATLAB's subzind for 0.9 information on how the (row, col) pairs in (pX, pY) are converted to indices where the point cloud map will be set to 1. Adjust the **decay** parameter to change the rate of update of

the map. Note that you can do this online while the application is deployed.

4. Performance considerations

To improve performance, we only create a blank map on the first call by the use of persistent MATLAB variables. The variable map_internal holds its value at any given iteration into the next call. At the end of the function, the mapOut is updated and then displayed.