# **Models of Discrete-Time Systems**

# **Scope and Background Reading**

This we will explore digital systems and learn more about the z-transfer function model.


The material in this presentation and notes is based on Chapter 9 (Starting at Section 9.7) of <u>Steven T. Karris, Signals and Systems: with Matlab Computation and Simulink Modelling, 5th Edition.</u>
(<a href="http://site.ebrary.com/lib/swansea/docDetail.action?docID=10547416">http://site.ebrary.com/lib/swansea/docDetail.action?docID=10547416</a>) from the **Required Reading List**. I have skipped the section on digital state-space models.

# **Agenda**

- · Discrete Time Systems
- Transfer Functions in the Z-Domain
- · Modelling digital systems in Matlab/Simulink
- Continuous System Equivalents
- Example: Digital Butterworth Filter

# **Discrete Time Systems**


In the lecture that introduced the z-transform we talked about the representation of a discrete-time (DT) system by the model shown below:

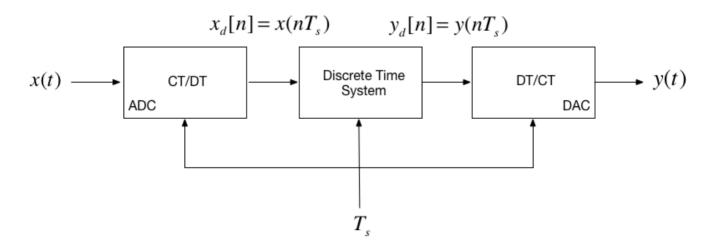

In this session, we want to explore the contents of the central block.

## **DT System as a Sequence Processor**

- As noted in the previous slide, the discrete time system (DTS) 'takes as an input the sequence  $x_d[n]$  which in a physical signal would be obtained by sampling the continuous time signal x(t) using an analogue to digital converter (ADC).
- It produces another sequence  $y_d[n]$  by *processing* the input sequence in some way.
- The output sequence is converted into an analogue signal y(t) by a digital to analogue converter (DAC).

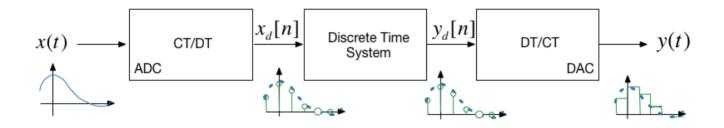

#### What is the nature of the DTS?

- The discrete time system (DTS) is a block that converts a sequence  $x_d[n]$  into another sequence  $y_d[n]$
- The transformation will be a difference equation h[n]
- By analogy with CT systems, h[n] is the impulse response of the DTS, and y[n] can be obtained by *convolving* h[n] with  $x_d[n]$  so:

$$y_d[n] = h[n] * x_d[n]$$

• Taking the z-transform of h[n] we get H(z), and from the transform properties, convolution of the signal  $x_d[n]$  by system h[n] will be *multiplication* of the z-transforms:

$$Y_d(z) = H(z)X_d(z)$$

• So, what does h[n] and therefore H(z) look like?

## **Transfer Functions in the z-Domain**

Let us assume that the sequence transformation is a difference equation of the form<sup>2</sup>:

$$y[n] + a_1 y[n-1] + a_2 y[n-2] + \dots + a_k y[n-k]$$
  
=  $b_0 x[n] + b_1 u[n-1] + b_2 u[n-2] + \dots + b_k u[n-k]$ 

### Take Z-Transform of both sides

From the z-transform properties

$$f[n-m] \Leftrightarrow z^{-m}F(z)$$

so....

$$Y(z) + a_1 z^{-1} Y(z) + a_2 z^{-2} Y(z) + \dots + a_k z^{-k} Y(z) = \dots$$

$$b_0 U(z) + b_1 z^{-1} U(z) + b_2 z^{-2} U(z) + \dots + b_k z^{-k} U(z)$$

#### **Gather terms**

$$(1 + a_1 z^{-1} + a_2 z^{-2} + \cdots a_k z^{-k}) Y(z) =$$

$$(b_0 + b_1 z^{-1} + b_2 z^{-2} + \cdots b_k z^{-k}) U(z)$$

from which ...

$$Y(z) = \left(\frac{b_0 + b_1 z^{-1} + b_2 z^{-2} + \dots b_k z^{-k}}{1 + a_1 z^{-1} + a_2 z^{-2} + \dots a_k z^{-k}}\right) U(z)$$

#### **Define transfer function**

We define the discrete time transfer function H(z) := Y(z)/U(z) so...

$$H(z) = \frac{Y(z)}{U(z)} = \frac{b_0 + b_1 z^{-1} + b_2 z^{-2} + \dots b_k z^{-k}}{1 + a_1 z^{-1} + a_2 z^{-2} + \dots a_k z^{-k}}$$

... or more conventionally3:

$$H(z) = \frac{b_0 z^k + b_1 z^{k-1} + b_2 z^{k-2} + \dots + b_{k-1} z + b_k}{z^k + a_1 z^{k-1} + a_2 z^{k-2} + \dots + a_{k-1} z + a_k}$$

## DT impulse response

The discrete-time impulse reponse h[n] is the response of the DT system to the input  $x[n] = \delta[n]$ 

Last week we showed that  $\mathcal{Z}\left\{\delta[n]\right\}$  was defined by the transform pair  $\delta[n]\Leftrightarrow 1$ 

so

$$h[n] = \mathcal{Z}^{-1} \{H(z).1\} = \mathcal{Z}^{-1} \{H(z)\}$$

## Example 5

Karris Example 9.10:

The difference equation describing the input-output relationship of a DT system with zero initial conditions, is:

$$y[n] - 0.5y[n-1] + 0.125y[n-2] = x[n] + x[n-1]$$

Compute:

- 1. The transfer function H(z)
- 2. The DT impulse response h[n]
- 3. The response y[n] when the input x[n] is the DT unit step  $u_0[n]$

5.1. 7	Γhe	tran	sfer	fun	ction
--------	-----	------	------	-----	-------

$$H(z) = \frac{Y(z)}{U(z)} = \dots?$$

# 5.2. The DT impulse response


Start with:


$$\frac{H(z)}{z} = \frac{z - 1}{z^2 + 0.5z + 0.125}$$



## **Matlab Solution**

See <u>dtm\_ex1\_2.m (https://github.com/cpjobling/EG-247-Resources/blob/master/week9/matlab/dtm\_ex1\_2.m)</u>:

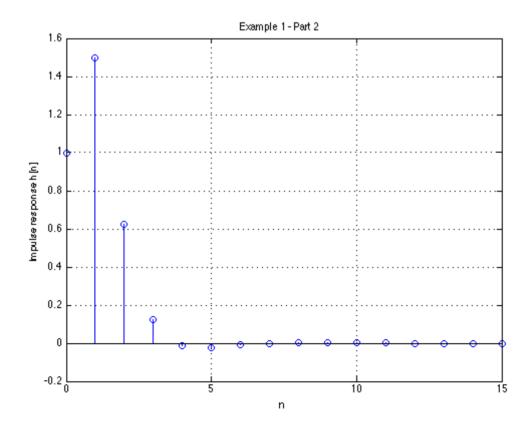

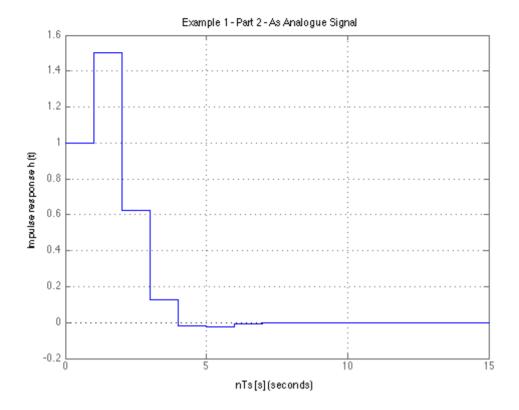

# 5.3. The DT step response

$$Y(z) = H(z)X(z)$$

$$u_0[n] \Leftrightarrow \frac{z}{z-1}$$


$$Y(z) = H(z)U_0(z) = \frac{z^2 + z}{z^2 + 0.5z + 0.125} \cdot \frac{z}{z - 1}$$
$$= \frac{z(z^2 + z)}{(z^2 + 0.5z + 0.125)(z - 1)}$$

$$\frac{Y(z)}{z} = \frac{z^2 + z}{(z^2 + 0.5z + 0.125)(z - 1)}$$



## **Matlab Solution**

See <u>dtm\_ex1\_3.m (https://github.com/cpjobling/EG-247-Resources/blob/master/week9/matlab/dtm\_ex1\_3.m)</u>:

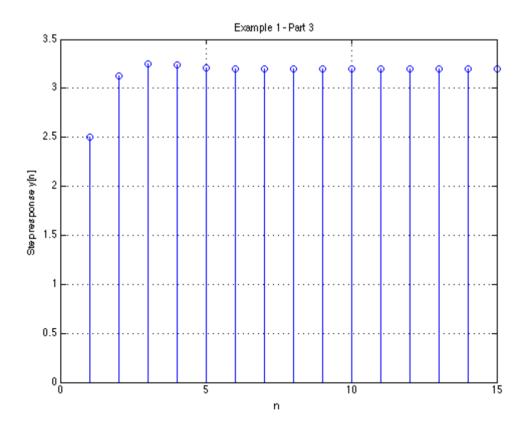


# Modelling DT systems in Matlab and Simulink

### Matlab


Code extracted from <u>dtm\_ex1\_3.m (https://github.com/cpjobling/EG-247-Resources/blob/master/week9/matlab/dtm\_ex1\_3.m)</u>:


```
Ts = 1;
z = tf('z', Ts)
Hz = (z^2 + z)/(z^2 - 0.5 * z + 0.125)
step(Hz)
grid
title('Example 1 - Part 3 - As Analogue Signal')
xlabel('nTs [s]')
ylabel('Step response y(t)')
axis([0,15,0,3.5])
```

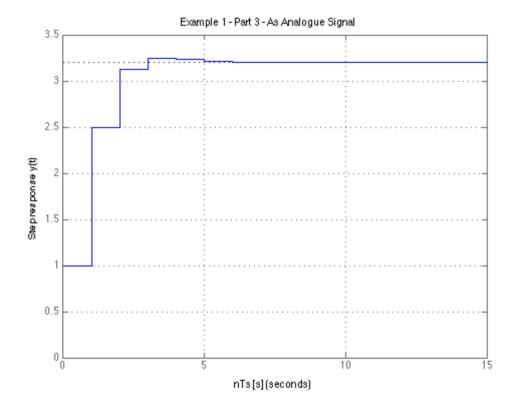

### **Simulink Model**

See dtm.slx (https://github.com/cpjobling/EG-247-Resources/blob/master/week9/matlab/dtm.slx):

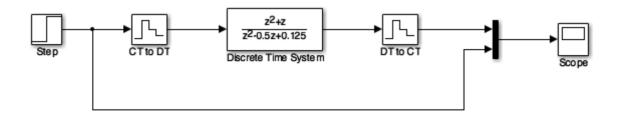

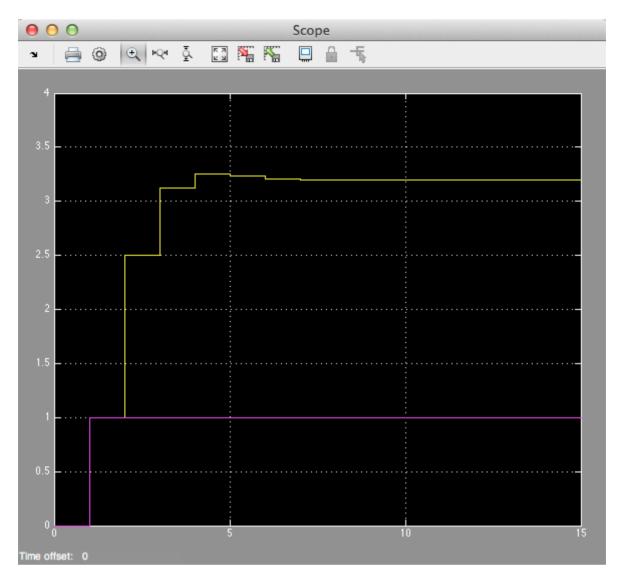

# **Converting Continuous Time Systems to Discrete Time Systems**

- In analogue electronics, to implement a filter we would need to resort to op-amp circuits with resistors, capacitors and inductors acting as energy dissipation, storage and release devices.
- In modern digital electronics, it is often more convenient to take the original transfer function H(s) and produce an equivalent H(z).
- We can then determine a difference equation that will respresent h[n] and implement this as computer algorithm.
- Simple storage of past values in memory becomes the repository of past state rather than the integrators and derivative circuits that are needed in the analogue world.
- To achieve this, all we need is to be able to do is to sample and process the signals quickly enough to avoid violating Nyquist-Shannon's sampling theorem.

## **Continuous System Equivalents**

- · There is no digital system that uniquely represents a continuous system
- This is because as we are sampling, we only have knowledge of signals being processed at the sampling instants, and need to *reconstruct* the inter-sample behaviour.
- In practice, only a small number of transormations are used.
- The derivation of these is beyond the scope of this module, but we'll mention the ones that Matlab provides in a function called c2d

#### Matlab c2d function

This is what the help function says:

```
>> help c2d
SYSD = c2d(SYSC,TS,METHOD) computes a discrete-time model SYSD with
    sampling time TS that approximates the continuous-time model SYSC.
    The string METHOD selects the discretization method among the followin
g:
       'zoh'
                   Zero-order hold on the inputs
       'foh'
                   Linear interpolation of inputs
                   Impulse-invariant discretization
       'impulse'
       'tustin'
                   Bilinear (Tustin) approximation.
       'matched'
                   Matched pole-zero method (for SISO systems only).
    The default is 'zoh' when METHOD is omitted. The sampling time TS shou
ld
   be specified in the time units of SYSC (see "TimeUnit" property).
```

# Example 6

- Design a 2nd-order butterworth anti-aliasing filter with transfer function H(s) for use in sampling music.
- The cut-off frequency  $\omega_c=20$  kHz and the filter should have an attenuation of at least -80 dB in the stop band.
- Choose a suitable sampling frequency for the audio signal and give the transfer function H(z) and an algorithm to implement h[n]

#### Solution

See digi butter.m (https://github.com/cpjobling/EG-247-

Resources/blob/master/week9/matlab/digi\_butter.m):

$$\omega_c = 2\pi f_c = 2 \times \pi \times 20 \times 10^3 = 125.6637 \times 10^3 \text{ rad/s}$$

From the lecture on filters, we know the 2nd-order butterworth filter has transfer function:

$$H(s) = \frac{Y(s)}{U(s)} = \frac{\omega_c^2}{s^2 + \omega_c \sqrt{2} s + \omega_c^2}$$


Substituting for  $\omega_c = 125.6637 \times 10^3$  this is ...?

$$H(s) = \frac{15.79 \times 10^9}{s^2 + 177.7 \times 10^3 s + 15.79 \times 10^9}$$

## **Bode plot**

Matlab:

```
wc = 2*pi*20e3;
Hs = tf(wc^2,[1 wc*sqrt(2), wc^2]);
bode(Hs,{1e4,1e8})
grid
```

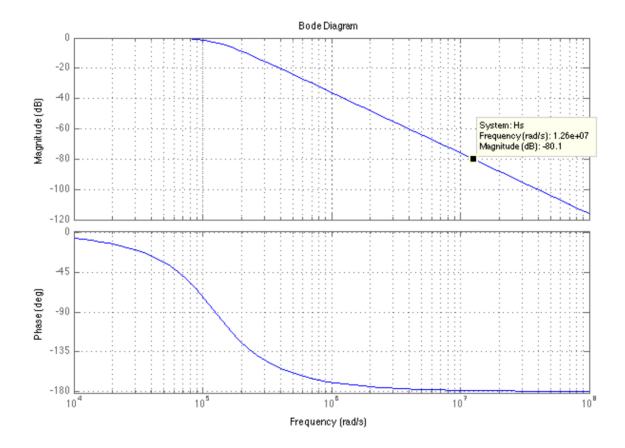

# **Sampling Frequency**

From the bode diagram, the frequency at which  $|H(j\omega)|$  is -80 dB is approx  $12.6\times10^6$  rad/s.

To avoid aliasing, we should choose a sampling frequency twice this = ?

So sampling frequency  $\omega_s = 2 \times 12.6 \times 10^6 = 25.2 \times 10^6$  rad/s.

Sampling frequency in  $Hz f_s = ?$ 

$$f_s = \omega_s/(2\pi) = 25.2 \times 10^6/(2 \times \pi) = 40.1 \text{ Mhz}$$

Sampling time  $T_s = ?$ 

$$T_s = 1/f_s \approx 0.25 \ \mu s$$

# **Digital Butterworth**

```
>> Ts = 0.25e-6;

>> Hz = c2d(Hs, Ts) % zero-order-hold equivalent


Hz =

0.0004836 z + 0.0004765

-----z^2 - 1.956 z + 0.9567
```

Sample time: 2.4933e-07 seconds Discrete-time transfer function.

# Step response

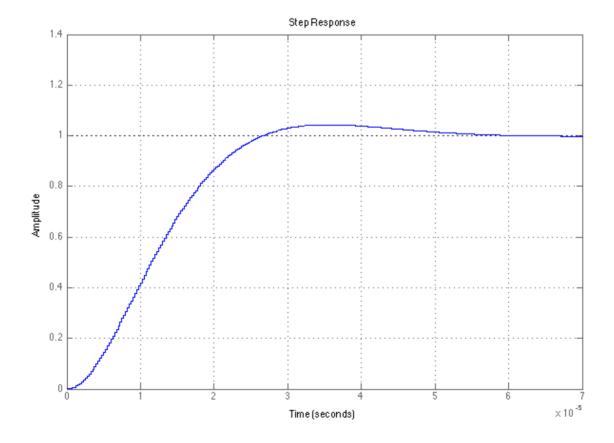

## **Algorithm**

From previous result:

$$H(z) = \frac{Y(z)}{U(z)} = \frac{486.6 \times 10^{-6} z + 476.5 \times 10^{-6}}{z^2 - 1.956z + 0.9567}$$

Dividing top and bottom by  $z^2$  ...

$$H(z) = \frac{Y(z)}{U(z)} = \frac{486.6 \times 10^{-6} z^{-1} + 476.5 \times 10^{-6} z^{-2}}{1 - 1.956 z^{-1} + 0.9567 z^{-2}}$$

expanding out ...

$$Y(z) - 1.956z^{-1}Y(z) + 0.9567z^{-2}Y(z) =$$

$$486.6 \times 10^{-6}z^{-1}U(z) + 476.5 \times 10^{-6}z^{-2}U(z)$$

Inverse z-transform gives ...

## Algorithm ... continued

$$y[n] - 1.956y[n-1] + 0.9567y[n-2] =$$

$$486.6 \times 10^{-6}u[n-1] + 476.5 \times 10^{-6}u[n-2]$$

in algorithmic form (compute y[n] from past values of u and y) ...

$$y[n] = 1.956y[n-1] - 0.9567y[n-2] + 486.6 \times 10^{-6}u[n-1] + \dots$$
  
 $476.5 \times 10^{-6}u[n-2]$ 

Now convert to code

#### Convert to code

To implement:

$$y[n] = 1.956y[n-1] - 0.9567y[n-2] + 486.6 \times 10^{-6}u[n-1] + 476.5 \times 10^{-6}u[n-2]$$

```
/* Initialize */
ynm1 = 0; ynm2 = 0; unm1 = 0; unm2 = 0;
while (true) {
    un = read_adc;
    yn = 1.956*ynm1 - 0.9567*ynm2 + 486.6e-6*unm1 + 476.5e-6*unm2;
    write_dac(yn);
    /* store past values */
    ynm2 = ynm1; ynm1 = yn;
    unm2 = unm1; unm1 = un;
}
```

#### **Comments**

PC soundcards can sample audio at 44.1 kHz so this implies that the anti-aliasing filter is much sharper than this one as  $f_s/2 = 22.05$  kHz.

You might wish to find out what order butterworth filter would be needed to have  $f_c=20~{\rm kHz}$  and  $f_{\rm stop}$  of 22.05 kHz.

# **Summary**

- · Discrete Time Systems
- Transfer Functions in the Z-Domain
- · Modelling digital systems in Matlab/Simulink
- · Continuous System Equivalents
- Example: Digital Butterworth Filter

# **Solutions to Example 5**

#### Solution to 5.1.

The transfer function is

$$H(z) = \frac{Y(z)}{X(z)} = \frac{z^2 + z}{z^2 - 0.5z + 0.125}$$

## Solution to 5.2.

The DT impulse response:

$$h[n] = \left(\frac{\sqrt{2}}{4}\right)^n \left(\cos\left(\frac{n\pi}{4}\right) + 5\sin\left(\frac{n\pi}{4}\right)\right)$$

#### Solution to 5.3.

Step response:

$$y[n] = \left(3.2 - \left(\frac{\sqrt{2}}{4}\right)^n \left(2.2\cos\left(\frac{n\pi}{4}\right) + 0.6\sin\left(\frac{n\pi}{4}\right)\right)\right) u_0[n]$$