MSE160 Notes

QiLin Xue

January 13, 2021

Contents

1	Introduction		
	1.1	Types of Material	1
	1.2	Elastic Behaviour	1
	1.3	Simple Model for Bonding in solids	2
		Getting a stress-strain curve	
	1.5	Poisson's Ratio and Shear	3

1 Introduction

1.1 Types of Material

- There are three classes of material (though not all materials fall under these categories):
 - Metals
 - Ceramics
 - Polymers
- Metals (e.g. Fe, Cr, Cu, Zn, Al) are held together with mellatic bonds and is described by bond theory.
- Ceramics (e.g. poreclain, concrete) are held together with *ionic* bonds and are *brittle*. A lot of them are metal oxides.
- Polymer (Teflon®, Gore-tex®, polyethylene) tend to be from covalent bonds

Warning: The word plastic actually describes a material property, and not a material type. There are plastics that are not polymers.

• Examples of materials that do not fall under this classification scheme include wood, skin, superconductors, and more.

1.2 Elastic Behaviour

- Hooke's law tells us that $F = -k\Delta x$, where Δx is the displacement from equilibrium.
- Engineering stress is defined as $\sigma = \frac{F}{A_0}$ where A_0 is the *initial* (unloaded) cross-sectional area.

Warning: Due to material properties, the cross sectional area of a spring can change as it elongates or compresses, so the engineering stress only refers to the initial cross sectyional area. The *true stress* refers to the force divided by the real area.

MSE160 QiLin Xue

• Engineering strain is defined as $\varepsilon = \frac{\Delta \ell}{\ell_0}$ and the two are related via the Young's Modulus:

$$\sigma = E\varepsilon \tag{1}$$

• There are two possible definitions for elastic deformation. When viewing it from a macroscopic perspective:

Definition: Definition 1: During elastic deformation the sample dimensions return to their original dimensions upon unloading.

but it is also possible to view it from a microscopic perspective:

Definition: During elastic deformation atoms return to their original positions upon unloading.

1.3 Simple Model for Bonding in solids


• A crudge (but quite accurate) model is to assume nearby atoms in a solid are connected by springs. (This is actually Einstein's model of solid, except he modeled the interactions as quantum harmonic oscillators)

Idea: A more realistic model would be using the Lennard-Jones potential, which gives the force between two atoms as:

$$V = -\frac{a_1}{r^{13}} + \frac{a_2}{r^7} \tag{2}$$

and is graphically represented below (here, $a_1 = 5$ and $a_2 = 3$ for illustration purposes only)

Lennard Jones Force

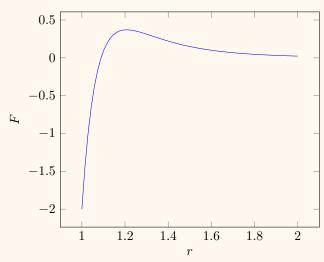

When the two atoms are close to each other, the force scales roughly linearly with displacement, which is exactly the description of Hooke's Law.

• Specifically, the Young's Modulus can be recovered by defining it as:


$$E \propto \frac{dF}{dr}\Big|_{r=r_0} \tag{3}$$

where r_0 is the equilibrium distance and is only dependent on the material. Permanently deforming a metal will not change its Young's Modulus.

1.4 Getting a stress-strain curve

• The tensile specimen is in a **dogbone** shape as illustrated below:

MSE160 QiLin Xue

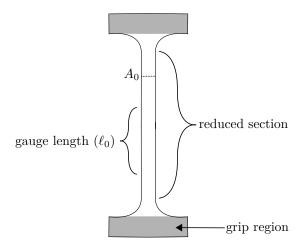

1.5 Poisson's Ratio and Shear

• When a material deforms, it does not deform in only one direction. The **poisson's ratio** ν relates the strain in all three directions:

$$\nu = -\frac{\varepsilon_R}{\varepsilon_Z} = -\frac{\varepsilon_x}{\varepsilon_z} = -\frac{\varepsilon_y}{\varepsilon_z} \tag{4}$$

for a cylindrically symmetrical material.

• Shear stress is defined as

$$\tau = \frac{F}{A_0} \tag{5}$$

and shear strain is defined as:

$$\gamma = \frac{\Delta \ell}{\ell_0} \tag{6}$$

 \bullet Similarly, shear stress and strain is related via the shear modulus G:

$$\tau = G\gamma \tag{7}$$

• The Young's modulus and the shear modulus is related via the poisson ratio:

$$E = 2G(1+\nu) \tag{8}$$