

Prerequisites

Required Information [*needed for final activation of hardware - see last page]

- Name of asset* (ex: Propane Truck #20)
- Detailed information about the asset* (year, make, model, VIN, license plate, etc.)
- State, area, organization, or group the asset belongs to (ex: North Region, MN tankers, etc.)
- ESN of each device to be installed* (ESN is found on the back of each unit with a barcode)
- Current odometer reading
- Type of diagnostics connector, if possible (6 pin, 9 pin square flange, 9 pin round threaded, J1962, Type II, etc.)

Required Equipment









Tablet



In-Cab **Readiness Kit** (booklet, stickers, DOT reference card)



Diagnostics Y



VPod2 Cable

(if ordered)



Accessory

Harness



LMU to Cradle



Cable

- (5) #8 Self-tapping Screw 3/4 inch
- (5) M4 Screw 12mm
- (5) M4 Screw 8mm
- (5) M4 Steel Nut
- (11) M4 Star Lock Washer
- (2) M4 Tamper Resistant **Button Head HEX** Screw 16MM

** Diagnostics Y Cables will vary depending on make, model, year of vehicle. The cable pictured may not be the exact cable shipped.

Hardware Pack

(supplied harware is optional and some may not need to be used)

Required Tools

- Drill and assorted drill bits (ex. to mount cradle)
- Slotted, Philips, and/or Torx bits (you may need tamper resistant Torx bits for tablet screws)
- Panel removal tool or plastic pry bar (to remove dash panel(s) as needed)
- Small socket set
- Zip Ties (to hold cabling in place)





Before You Begin


TURN TO THE LAST PAGE - WRITE DOWN THE REQUIRED INFORMATION!!!

- Decide where the hardware components will be located. If necessary remove any dash panels with removal tool.
- Device should be secured within reach of the diagnostic cable to be installed.
- Must be protected from moisture, excessive dust/dirt, heat (away from heater vents) and unobtrusive to driver operation or field of view.
- Routing of the cable between the factory diagnostic port and the telematics device should not cause excessive bending/kinking or be located in areas where vibration may jeopardize the integrity of the hardware.
- Cabling must not impede function of any rotating or moving parts (ex. Steering mechanisms, wiper mechanisms, or brake pedal)
- Ensure that the mounting location has enough integrity to accommodate the additional weight and vibration of the device.

LMU Cable to Accessory Harness

STEP ONE

Attach the LMU to Cradle cable to the Accessory Harness. The 1x6 pin plug attaches to Aux 2 port on the accessory harness. The 2x3 pin plug from the cable attaches to the 2x3 plug on the harness that is labled "Driver ID"

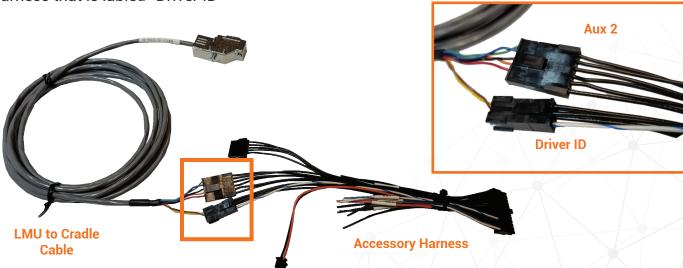



Accessory Harness to LMU

STEP TWO

Plug the 24 Pin connector into the back of the telematics device.



STEP THREE

Plug the Data Connector from the LMU to Cradle Cable in the the Data port at the base of the cradle.





Connect to Asset Diagnostic Cable

Diagnostic Y cables will vary depending on make, model, year of vehicle. The cable pictured may not be the exact cable shipped. Be sure to verify that the diagnostic Y cable that you are installing is the correct cable for this asset.



STEP ONE

Remove the vehicles's factory diagnostic cable from its factory mount.

STEP TWO

Connect the factory cable to the female diagnostic connector of the diagnostic Y cable (rotate clockwise until it "clicks")



STEP THREE

Replace the factory connector with the male diagnostic connector of the diagnostic Y cable.




JBus style factory diagnostics port



Connect Diagnostic Cable to Telematics Device

STEP FOUR

Run the 16 pin Molex connector to the location of the telematics device.

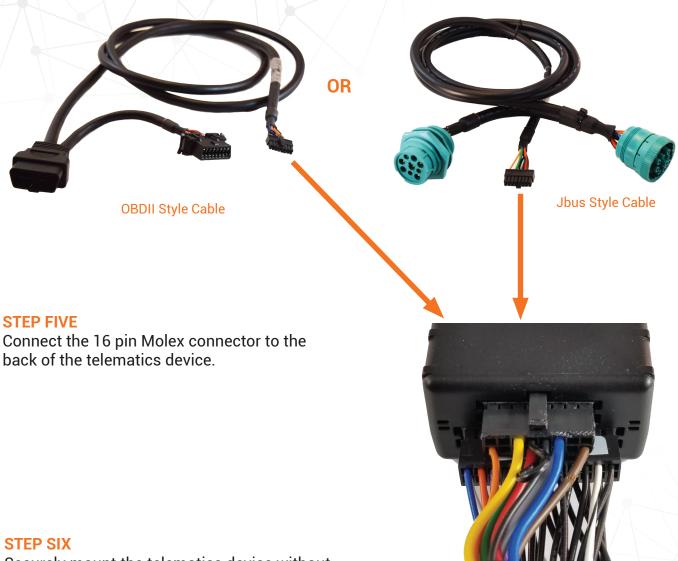

Securely mount the telematics device without metal obstruction between device and the sky if mounting inside the dash area. (Label side faces the sky.)

LMU



Testing / Confirmation Steps



Place the ELD Instruction Booklet inside the vehicle (required by law). If required, adhere the ELD Sticker on the driver side of the vehicle near the driver's door. The final test step requires the asset to be outside with a clear view of the sky.

- Start the asset's engine and let it run.
- LED indicator lights will blink then turn solid. (Green/GPS & Orange/Comm)
- If the lights continue to blink, reconfirm all connections.



Once the lights are solid, call your Pedigree Technologies Installation Support representative to confirm and finalize the installation **before** replacing any of the dash panels you may have removed during installation.

NOTE: ELD indicator light on the cradle will blink red when engine is running. (The light will not stop blinking until the tablet is docked and connected.)

Install Confirmation: 701-499-0022

You will be prompted for the following information during the set up process

- Device ESN
- Name of Asset (ex. Service Truck 51)
- Year, make, and model
- VIN #
- License plate #
- Mileage

Hours