

# **Prerequisites**

# **Required Information** [\*needed for final activation of hardware - see last page]

- Name of asset\* (ex: Propane Truck #20)
- Detailed information about the asset\* (year, make, model, VIN, license plate, etc.)
- State, area, organization, or group the asset belongs to (ex: North Region, MN tankers, etc.)
- ESN of each device to be installed\* (ESN is found on the back of each unit with a barcode)
- · Current odometer reading and engine hours
- Type of diagnostic connector, if possible (6 pin, 9 pin square flange, 9 pin round threaded, J1962, Type II, etc.)

## **Required Equipment**



**LMU** 



OBDII Cable (if ordered)

**OR** 



### Diagnostic Y Cable\*\*

\*\* Diagnostic Y Cables will vary depending on make, model, year of vehicle. The cable pictured may not be the exact cable shipped.

# **Required Tools**

- · Drill and assorted drill bits
- Slotted, Philips, and/or Torx bits (you may need tamper resistant Torx bits)
- Panel removal tool or plastic pry bar (to remove dash panel(s) as needed)
- Small socket set
- Zip Ties (to hold cabling in place)

**PedigreeTechnologies.com** | Support: (701)-499-0022





# Before You Begin

# TURN TO THE LAST PAGE - WRITE DOWN THE REQUIRED INFORMATION!!!

- Decide where the hardware components will be located. If necessary remove any dash panels with removal tool.
- Device should be secured within reach of the diagnostic cable to be installed.
- Must be protected from moisture, excessive dust/dirt, heat (away from heater vents) and unobtrusive to driver operation or field of view.
- Routing of the cable between the factory diagnostic port and the telematics device does not cause excessive bending/kinking or areas where vibration may jeopardize the integrity of the hardware.
- Cabling must not impede function of any rotating or moving parts (ex. Steering mechanisms, wiper mechanisms, or brake pedal)
- Ensure that the mounting location has enough integrity to accommodate the additional weight and vibration of the device.



# Connect to Asset Diagnostic Cable

Diagnostic Y cables will vary depending on make, model, year of vehicle. The cable pictured may not be the exact cable shipped. Be sure to verify that the diagnostic Y cable that you are installing is the correct cable for this asset.



### **STEP ONE**

Remove the vehicles's factory diagnostic cable from its factory mount.

### **STEP TWO**

Connect the factory cable to the female diagnostic connector of the diagnostic Y cable (rotate clockwise until it "clicks")



### STEP THREE

Replace the factory connector with the male diagnostic connector of the diagnostic Y cable.



JBus style factory diagnostics port


PedigreeTechnologies.com | Support: (701)-499-0022



# **Connect Diagnostic Cable to Telematics Device**

### STEP FOUR

Run the 16 pin Molex connector to the location of the telematics device.

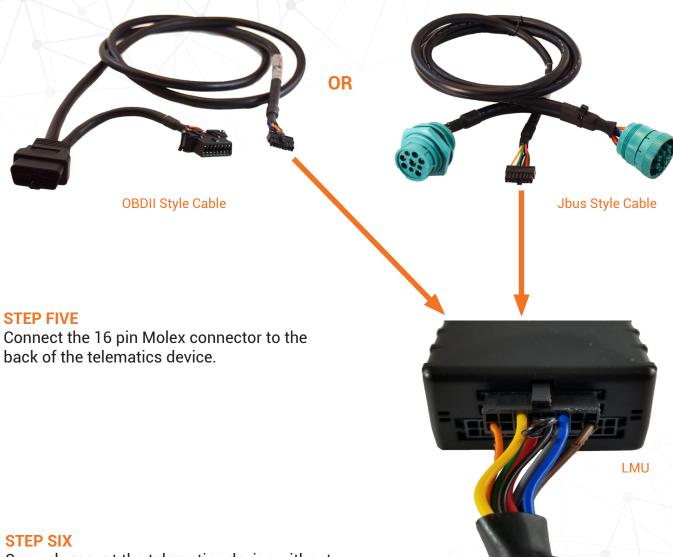

Securely mount the telematics device without metal obstruction between device and the sky if mounting inside the dash area. (Label side faces the sky.)

PedigreeTechnologies.com | Support: (701)-499-0022



# **Testing / Confirmation Steps**

- Start the asset's engine and let it run.
- LED indicator lights will blink then turn solid. (Green/GPS & Orange/Comm)
- If the lights continue to blink, reconfirm all connections.



Call Pedigree Technologies support to confirm installation **before** replacing any of the dash panels you may have removed during cable installation.

# Install Confirmation: 701-499-0022 You will be prompted for the following information during the set up process Device ESN Name of Asset (ex. Service Truck 51) Year, make, and model VIN # License plate # Mileage Hours