CONSTRUCTION INSTRUCTIONS: LED PLANT SHELF

Materials (note: most materials can be found in the boxes on our shelf)

- 1 PVC pipe section, unmodified
- 2 PVC pipe sections with front cut into a U shape
- 6 warm white LEDs (8mm diameter)
- 6 220 ohm resistors
- 1 IR range sensor
- 1 Arduino Uno
- 1 9V battery
- 1 battery cover/port
- Dense paperboard
- Wire in yellow, white, black, and red

Equipment

- Hand drill
- Clamp
- Wire cutters
- Wire strippers
- Hot glue gun
- X-acto knife
- Dry erase marker
- Large flat file
- Triangular needle file
- Soldering iron (with solder)
- Hacksaw
- Deburring tool
- Scrap wire (optional/maybe helpful to apply hot glue)
- Electrical tape (optional/makes things tidier)


Steps

• Such solder much solder

- O Cut wire:
 - 6 pieces of yellow wire and 6 pieces of white, each about 10" long.
 - 8 pieces of black wire about 3" long.
 - 1 piece of yellow wire and 1 piece of red wire, each about 3" long.
 - Strip the last ¼-inch or so of all wires.
- Solder a yellow wire to the positive (longer) terminal of each LED and a white wire to the negative terminal.
- o Solder a 220 ohm resistor to the end of each yellow wire.
- Solder a black wire piece to the other end of each resistor. You'll have 2 black wires left over.

- Construct the solder spider:
 - The point of the spider is to connect all of the white ground wires together so they can use just one wire to connect to the Arduino.
 - Solder the white wires together, with three pointing left and three pointing right.
 - Solder the remaining black wire to the huge solder blob in the middle.




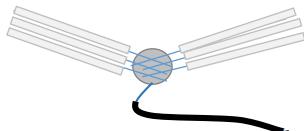

Solder the small red wire to the red wire on the IR sensor, yellow to yellow, and black to black.

Prepare the plant pots

- Make dry-erase marker marks on the pots where you will want to cut/drill:
 - 2 drill marks in the middle of the back of the unmodified PVC pipe (for wires).
 - 1 slot in the bottom center of the front of the unmodified PVC pipe (for IR sensor).
 - 3 drill marks in each U-shaped PVC pipe: one on each side, then one offset near the middle. The mark in the middle should be offset to the outside; see picture/video to make this make sense. (for LEDs)
- Drill 5/16" holes on each of the 3 marks in each u-shaped PVC pipe. It may be useful to drill a 3/16" pilot hole.
- Drill 7/16" or larger holes in the back of the unmodified pipe. You may need several pilot holes.
- Clean up edges of holes with deburring tool.
- Use needle file to make two notches in each of the 7/16" holes.
- Use hacksaw to cut sides of slot and chip away at center of slot.
- Finish slot using file(s).
- Prepare top/base:
 - Draw two circles with the circumference of the INNER circumference of the PVC pipe on the paperboard.
 - Cut circles out using x-acto knife.
 - Cut notches in paperboard circles for finger handle, IR sensor, and wall mounting screw.

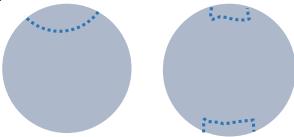

- Use a few dots of hot glue on the bottom inside of the unmodified PVC pipe to attach
 the bottom paperboard circle (with the square holes). Scrap wire can be used as a hot
 glue applicator.
- Use a lot of hot glue on the sides of the PVC pipes to attach the three sections together.

Arduino time

- Load FadeThreeLEDs code (in repo) onto the Arduino.
- Once it's disconnected from computer, plug the round end of the battery cap into the power supply port on the Arduino.

• Finish this shelf

- O Place LEDs:
 - Put the spider in the center pipe and send the LEDs through the large holes to the back of the shelf.
 - Wedge one LED into each circular hole on the side PVC pipe pots.
 - Use a dot or two of hot glue on the back of each LED to hold it in place.
- Place IR sensor:
 - Place IR sensor, looking out, in the slot in the center pipe pot.
 - Hot glue sensor carefully in place.
- o Finish wiring:
 - Connect spider-ground wire to digital ground pin.
 - Connect yellow LED wires to digital pins 10, 11, 12, 3, 5, and 6.
 - Connect yellow IR sensor wire to analog pin A1.
 - Connect red IR sensor wire to 5v pin.
 - Connect black IR sensor wire to analog ground pin.
 - Tidy up all wires and tape as necessary.
- Plug 9v battery into battery cap and test system.
- CONGRATULATIONS YOU ARE DONE