# **Okuma America Corporation**

THINC-API Release Notes for Lathe

Document No.: \$5015-008-29

THINC-API	Version:	S5015-008-29
Release Notes For Lathe	Date: 02/2	6/2019

# **Revision History**

Date	Version	Description	Author
5/21/2007	S5015-008-00	Public release for Lathe THINC-API version 1.0.0.0	LHuynh
6/04/2007	S5015-008-01	Public release for Lathe THINC-API version 1.1.0.0	Lhuynh
08/15/2007	S5015-008-02	Public release for Lathe THINC-API version 1.2.0.0	Lhuynh
2/22/2008	S5015-008-03	Public Release 1.6.0.0 for Lathe THINC-API	Lhuynh
4/11/2008	S5015-008-04	Public Release 1.6.0.0 for Lathe THINC-API	Lhuynh
06/27/2008	S5015-008-05	Public Release 1.6.3.0 for Lathe THINC-API	Lhuynh
07/25/2008	S5015-008-06	Public Release 1.6.4.0 for Lathe THINC-API	Lhuynh
10/27/2008	S5015-008-07	Public Release 1.7.0.0 for Lathe THINC-API	Lhuynh
12/18/2008	S5015-008-08	Public Release 1.8.0.0 for Lathe THINC-API	Lhuynh
04/30/2009	S5015-008-09	Public Release 1.9.1.0 for Lathe THINC-API	Lhuynh
10/12/2009	S5015-008-10	Public Release 1.10.0.0 for Lathe THINC-API	Lhuynh
04/28/2010	S5015-008-11	Public Release 1.11.0.0 for Lathe THINC-API	Lhuynh
09/14/2010	S5015-008-12	Public Release 1.11.1.0 for Lathe THINC-API	Lhuynh
01/04/2011	S5015-008-13	Public Release 1.12.0.0 for Lathe THINC-API	Lhuynh
02/02/2011	S5015-008-14	Public Release 1.12.1.0 for Lathe THINC-API	Lhuynh
11/14/2011	S5015-008-15	Beta Release 1.14.0.0 for Lathe THINC-API	Lhuynh
01/15/2012	S5015-008-16	Beta Release 1.14.1.0 for Lathe THINC-API	Lhuynh
09/21/2012	S5015-008-17	Beta Release 1.14.2.0 for Lathe THINC-API	Lhuynh
12/04/2012	S5015-008-18	Public Release 1.15.0.0 for Lathe THINC-API	Lhuynh

THINC-API Release notes	©Okuma America Corporation,	Page 2 of 10
	2019	

THINC-API	Version:	S5015-008-29
Release Notes For Lathe	Date: 02/26	5/2019

03/06/2013	S5015-008-19	Beta Release 1.15.1.0 for Lathe THINC-API	Lhuynh
03/18/2013	S5015-008-20	Beta Release 1.15.2.0 for Lathe THINC-API	Lhuynh
09/25/2013	S5015-008-21	Public Release 1.16.0.0 for Lathe THINC-API	Lhuynh
01/15/2014	S5015-008-22	Public Release 1.17.0.0 for Lathe THINC-API	Lhuynh
04/01/2014	S5015-008-23	Public Release 1.17.1.0 for Lathe THINC-API	Lhuynh
10/08/2014	S5015-008-24	Public Release 1.17.2.0 for Lathe THINC-API	Lhuynh
10/18/2015	S5015-008-25	Public Release 1.18.0.0 for Lathe THINC-API	Lhuynh
10/18/2016	S5015-008-26	Public Release 1.19.0.0 for Lathe THINC-API	Lhuynh
12/07/2017	S5015-008-27	Public Release 1.20.0.0 for Lathe THINC-API	Lhuynh
06/14/2018	S5015-008-28	Public Release 1.21.1.0 for Lathe THINC-API	Lhuynh
02/26/2019	S5015-008-29	Public release 1.22.0.0 for Lathe THINC-API	Lhuynh

THINC-API	Version:	S5015-008-29
Release Notes For Lathe	Date: 02/26	5/2019

# **Table of Contents**

1.	Introduction	5
	1.1 Disclaimer of Warranty	5
	1.2 Purpose	5
	1.3 Scope	5
	1.4 Definitions, Acronyms, and Abbreviations	5
	1.5 References	5
2.	About This Release	5
3.	Features	8
	3.1 Command API	8
	3.2 DATA-API	8
4.	Known Bugs and Limitations	9
	4.1 Defect	9
	4.1.1 General Defect	9
	4.1.2 Firebird Database Log File	9
	4.1.3 Data-API	9
	4.2 Defects Fixed in this Release	10
	4.2.1 DATA-API	10

THINC-API Release notes	©Okuma America Corporation,	Page 4 of 10
	2019	

THINC-API	Version:	S5015-008-29
Release Notes For Lathe	Date: 02/26	5/2019

## **Release Notes for Lathe**

#### 1. Introduction

### 1.1 Disclaimer of Warranty

Okuma America Corporation makes no representations or warranties, either expressed or implied, by or with respect to anything in this document, and shall not be liable for any implied warranties of merchantability or fitness for a particular purpose or for any indirect, special or consequential damages.

Copyright © 2019, Okuma America Corporation. All rights reserved.

GOVERNMENT RIGHTS LEGEND: Use, duplication or disclosure by the U.S. Government is subject to restrictions set forth in the applicable Okuma America Corporation license agreement and as provided in DFARS 227.7202-1(a) and 227.7202-3(a) (1995), DFARS 252.227-7013(c)(1)(ii) (Oct 1988), FAR 12.212(a) (1995), FAR 52.227-19, or FAR 52.227-14, as applicable.

"Okuma America Corporation" and Okuma America Corporation's products are trademarks of Okuma America Corporation. References to other companies and their products use trademarks owned by the respective companies and are for reference purpose only.

#### 1.2 Purpose

The purpose of the *Release Notes* document is to communicate major new features and changes in this release of the THINC-API for Lathe libraries. It also documents known problems and workarounds.

#### 1.3 Scope

This document describes the Public release version 1.22.0.0 of THINC-API for Lathe.

## 1.4 Definitions, Acronyms, and Abbreviations

GAC - Global Assembly Cache Windows folder located in 'C:\WINDOWS\assembly'

#### 1.5 References

None.

## 2. About This Release

All applications compiled with Beta Release from version 1.15.X.X must be compiled with Public Release version 1.17.0.0 or higher when it is available.

In current version of THINC-API, some of the existing functions related to ATC, Tool, TailStock, and Chuck Data from DATA-API or Command API might not function correctly on OSP-P300S (SLP) and OSP-P300L control.


Please refer to the help file for detail usage and compatibility information of each function. This version requires latest OSP system disk.

From this release and forward, THINC API libraries will check dependency libraries during installation. THINC API will fail to install if version of dependency OCJ libraries cannot support current version of THINC API.

From this release and forward, API Notifier will delay the checking of API for an approximately of 1 minutes or so after NC is running. API Notifier service does use Windows Performance Counters service. As a result, API Notifier will not run correctly if Windows Performance Counters service is not enable. During the installation of THINC-API, Windows Performance Counters will be reset to 0 in the Windows system registry as shown below:

THINC-API Release notes	©Okuma America Corporation,	Page 5 of 10
	2019	

THINC-API	Version:	S5015-008-29
Release Notes For Lathe	Date: 02/26	5/2019

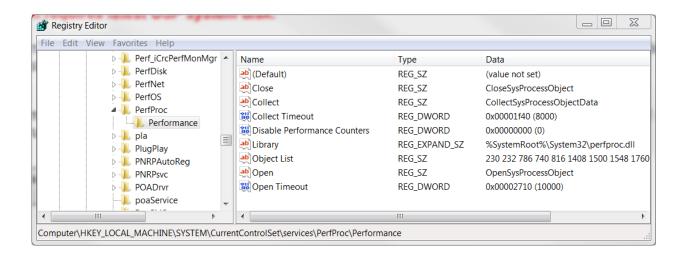

#### Libraries included in this release for Lathe are compiled with .NET Framework 4.0:

Version of Okuma.CLDATAPI.dll in this release is 3.2.0.0

Version of Okuma.CLCMDAPI.dll in this release is 3.2.0.0

Version of APINotifierService.exe in this release is 1.22.0.0

Version of APINotifierStatus.exe in this release is 1.3.0.0

Version of Okuma.Flexnet.Net4.dll in this release is 1.0.0.0

Version of Okuma. Apilog 2.dll in this release is 1.2.0.0

This release requires OCJ custom API version 003W on target machine. THINC-API will verify the existing of OCJ custom API version before performing the installation.

The PLC system package listed in the table per control type is also required.

OSP	PLCS package
P100II/P200	From 110A to 110C
P200AType1	From 120A to 130A
P200A Type2/P300	From 201B to 201G, or 300A and over

Important: All applications designed with THINC-API libraries must use THINC-API version 1.21.1.0 or higher to be able to run on Microsoft Windows 10.

### The following functions of Okuma.CLDATAPI.dll library will not be available in OSP-P100ll control machines:

Classes	Interfaces
CMachine	OnOffStateEnum GetNCStatus(NCStatusEnum enNCStatus)
CMachine	CCurrentAlarm* GetCurrentAlarm()
CIO	OnOffStateEnum GetUserTasklOVariable(IOTypeEnum enIO, Int32 intIndex);

THINC-API Release notes	©Okuma America Corporation,	Page 6 of 10
	2019	

THINC-API	Version:	S5015-008-29
Release Notes For Lathe	Date: 02/26	5/2019

CIO	void SetUserTaskOutputVariable(Int32 intIndex, OnOffStateEnum enValue);
CIO	OnOffStateEnum GetProtectedUserTaskOutputVariable(Int32 intIndex);
CIO	void SetProtectedUserTaskOutputVariable(Int32 intIndex, OnOffStateEnum enValue);

## The following functions of Okuma.CLCMDAPI.dll library will not be available in OSP-P100II control machines:

Classes	Interfaces
CATC	Sub RegisterToolPot(ByVal intPotNo As Integer, ByVal intToolNo As Integer, ByVal enSettingToolKind As SettingToolKindEnum, ByVal enSettingToolSize As SettingToolSizeEnum, ByVal enReturnMagazine As ReturnMagazineEnum)
CATC	Sub SetNextTool(ByVal_intToolNo_As Integer, ByVal enSettingToolKind_As SettingToolKindEnum, ByVal enSettingToolSize As SettingToolSizeEnum, ByVal enReturnMagazine As ReturnMagazineEnum)
CATC	Sub SetToollnStation(ByVal intToolNo As Integer, ByVal enSettingToolKind As SettingToolKindEnum, ByVal enSettingToolSize As SettingToolSizeEnum, ByVal enReturnMagazine As ReturnMagazineEnum, ByVal enTurretStation As TurretStationEnum)
CATC	Sub UnRegisterToolPot(ByVal intPotNo As Integer)
CProgram	CancelMainProgram()
CProgram	SelectMainProgramRSide(ByVal strMainProgramFileName As String, Optional ByVal strSubProgramFileName As String = "", Optional ByVal strSystemSubtituteProgramFileName As String = "", Optional ByVal strProgramName As String = "")
CProgram	SelectMainProgramLSide(ByVal strMainProgramFileName As String, Optional ByVal strSubProgramFileName As String = "", Optional ByVal strSystemSubtituteProgramFileName As String = "", Optional ByVal strProgramName As String = "")
CTools	CalcualteToolOffset(ByVal_intToolNo_As Integer, ByVal enAxisIndex_As OffsetAxisIndexEnum, ByVal enSubSystem As SubSystemEnum, ByVal dblValue As Double)
CTools	AddConstantToolOffset(ByVal_intOffsetNo As Integer, ByVal enAxisIndex As OffsetAxisIndexEnum, ByVal enSubSystem As SubSystemEnum, ByVal enCuttingPosition As CuttingPositionEnum)
CTools	AddConstantNoseRadiusCompensation(ByVal_intOffsetNo_As Integer, ByVal enAxisIndex As OffsetAxisIndex2Enum, ByVal enSubSystem As SubSystemEnum, ByVal enCuttingPosition As CuttingPositionEnum)
CTools	AddConstantToolWear(ByVal intOffsetNo As Integer, ByVal enAxisIndex As OffsetAxisIndex2Enum, ByVal enSubSystem As SubSystemEnum, ByVal enCuttingPosition As CuttingPositionEnum)
CTools	SubtractConstantToolOffset(ByVal_intOffsetNo_As Integer, ByVal_enAxisIndex As OffsetAxisIndexEnum, ByVal_enSubSystem As SubSystemEnum, ByVal_enCuttingPosition As CuttingPositionEnum)
CTools	SubtractConstantNoseRadiusCompensation(ByVal_intOffsetNo_As Integer, ByVal_enAxisIndex As OffsetAxisIndex2Enum, ByVal enSubSystem As SubSystemEnum, ByVal enCuttingPosition As CuttingPositionEnum)
CTools	SubtractConstantToolWear(ByVal intOffsetNo As Integer, ByVal enAxisIndex As OffsetAxisIndex2Enum, ByVal enSubSystem As SubSystemEnum, ByVal enCuttingPosition As CuttingPositionEnum)
CProgram	SelectScheduleProgramLSide(ByVal strScheduleProgramFileName As String)
CProgram	SelectScheduleProgramRSide(ByVal strScheduleProgramFileName As String)
CMachine	Public Sub SetUserAlarm(ByVal enAlarm As UserAlarmEnum, Optional ByVal

THINC-API Release notes	©Okuma America Corporation,	Page 7 of 10
	2019	

THINC-API	Version:	S5015-008-29
Release Notes For Lathe	Date: 02/26	5/2019

	strAlarmMessage As String = "", Optional ByVal enUserAlarmSubSystem As UserAlarmSubSystemEnum = 0)
CMachine	Public Sub ClearUserAlarmD(ByVal_enUserAlarmSubSystem_As UserAlarmSubSystemEnum)

Note: User Alarm will require OKUMA.Lathe.UserAlarm license feature in order to function on OSP-P200 or newer controls if machine can support.

## 3. Features

Please refer to the help file for detail information of each function.

## 3.1 Command API

States	Controls	Classes	Interfaces	
NEW	P300L P300S	CATC	Public Sub ToolDataInput (intToolNo As Integer, strFolderPath As String, blnOverwrite As Boolean)	
NEW	P300L P300S	CATC	Public Sub ToolDataOutput (intToolNo As Integer, strFolderPath As String, blnOverwrite As Boolean)	

## 3.2 DATA-API

States	Controls	Classes	Interfaces
CHANGE	P200L P300L P300S	CIO	Public Function GetUserTaskIOVariable (enIO As IOTypeEnum, intIndex As Integer) As OnOffStateEnum
CHANGE	P200L P300L P300S	CIO	Public Function GetProtectedUserTaskOutputVariable (intIndex As Integer) As OnOffStateEnum
CHANGE	P200L P300L P300S	CIO	Public Sub GetProtectedUserTaskOutputVariable (intIndex As Integer, enValue As OnOffStateEnum)
CHANGE	P200L P300L P300S	CIO	Public Sub SetUserTaskOutputVariable ( intIndex As Integer, enValue As OnOffStateEnum)

THINC-API Release notes	©Okuma America Corporation,	Page 8 of 10
	2019	

THINC-API	Version:	S5015-008-29
Release Notes For Lathe	Date: 02/26	/2019

NEW	P300S	CTOOLS	Public Function GetToolPositionComment (intToolNo As Integer, enEdgeNo As ToolEdgeEnum, enToolCuttingPosition As ToolCuttingPositionEnum) As String
-----	-------	--------	---

## 4. Known Bugs and Limitations

This section identifies known problems in this release and describes any work-arounds.

#### 4.1 Defect

#### 4.1.1 General Defect

DATA-API library, Okuma.CLDATAPI.dll, cannot create directly under ASP.NET web application.

Solution/Work-arounds: Create and initialize DATA-API in a separate thread. All function calls must be called from objects created inside separated thread mentioned above.

DATA-API library can only support applications designed with single-threaded apartment of COM threading model. The underlying library, LDATAPI.dll, cannot be loaded during call to CMachine.Init function when an MTAThread attribute is applied to the application.

Solution/Work-arounds: None

### 4.1.2 Firebird Database Log File

THINC-API libraries compiled with .NET Framework 1.1 use Firebird Database engine. The log file created by Firebird database engine can be corrupted, unexpectedly.

Solution/Work-arounds: A bat file is created during the installation of THINC-API and will be executed every time Windows is first started to replace the existing log.fdb located in "D:\Program files\Okuma\LoggingService" to prevent file corruption.

New THINC-API libraries that compiled with .NET Framework 4.0 will use SQLite database for its logging service. All applications should use new version THINC-API if possible to prevent using Firebird database and to be compatible with Windows 10.

#### 4.1.3 Data-API

## 4.1.3.1 MacMan.COperationHistory class

#### Function:

```
Int32 COperation* GetOperationHistory(Int32 intIndex);
ArrayList* GetOperationHistory(Int32 intFromIndex, Int32 intToIndex);
Int32 GetMaxCount();
Int32 GetCount();
```

Symptom: Failed to get correct data for Subsystem L and R side if MacMan screen is different than current setting of subsystem. It always gets the data from current MacMan screen.

THINC-API Release notes	©Okuma America Corporation,	Page 9 of 10
	2019	

THINC-API	Version:	S5015-008-29
Release Notes For Lathe	Date: 02/26	5/2019

Solution/Work around: None

#### 4.1.3.2 CAxis class

Function:

Double GetActualPositionProgramCoord( AxisIndex1Enum enAxisIndex); Double GetTargetPosition (AxisIndex1Enum enAxisIndex);

Symptom: The Z-axis position for sub system NC-AL and NC-AR does not return data correctly. It is based on the current selection of spindle in NC panel or command program G140/G141.

Solution/Work around: None

#### 4.2 Defects Fixed in this Release

#### 4.2.1 DATA-API

Symptom: All functions that can support data unit in metric or inch will not add decimal value correctly when the decimal value is 0.0001 or 0.00001 inches.

### 4.2.1.1 CATC class

Symptom: Cannot support ATC having more than 200 pots.

The following functions are fixed to support ATC magazine having more than 200 pots or Extended ATC magazine spec PLC3(72,7) ON:

```
Public Function GetToolNo(intPotNo As Integer) As Integer
Public Function GetToolKind (intPotNo As Integer) As ToolKindEnum
Public Function IsReservedPot (intPotNo As Integer) As Boolean
Public Function GetNextTool As ToolProperty
Public Function GetToolInStation (enTurretStation As TurretStationEnum) As ToolProperty
Public Function GetToolSize (intPotNo As Integer) As ToolSizeEnum
```

#### 4.2.1.2 CTool class

```
Public Sub SetToolNumberInGroup3 (
  intGroupNo As Integer,
  intToolNo As Integer,
  enEdgeNo As ToolEdgeEnum
)
```

Symptom: The function will not set the select group correctly when multi-edges tool spec is 12 or 4.

THINC-API Release notes	©Okuma America Corporation,	Page 10 of 10
	2019	