## COMSM1302 Overview of Computer Architecture

Lecture 11

Computer architecture concepts




### In the previous lecture

- Our instruction set.
- Instruction cycle.
- An example of assembly code.
- Assembly programming problem.




### In this lecture



- At the end of this lecture:
  - Von Neumann and Harvard architectures.
  - CISC and RISC architectures.
  - Turing machines.



# Our CPU and computer architecture designs

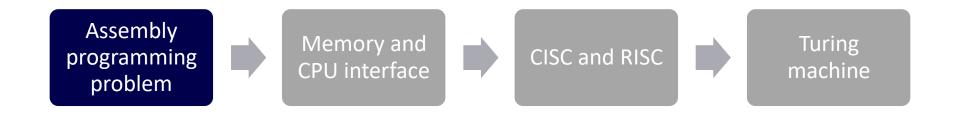



### Assembly programming problem

 Write an assembly code using our ISA to calculate the difference between two two-digit numbers x and y.

- 1. After executing this program, the "A" register should contain the value (x y).
- 2. Your program should calculate correct answer for inputs that satisfy the following conditions:
  - $0 \le x y \le 15$ ,  $0 \le x \le 99$ ,  $0 \le y \le 99$ , and the ones and tens of x are greater or equal to the ones and tens of y, respectively.



### Store inputs in memory – 3/3

- Let x = 95 and y = 81
- $x_0 = 0101$ ,  $x_1 = 1001$ ,  $y_0 = 0001$ , and  $y_1 = 1000$
- Now we can store these values in the memory and they can be accessed by our CPU.

Address	value
0xC	0x05
0xD	0x09
0xE	0x01
0xF	0x08



#### **Plan**

- 1. Some examples.
- 2. Store input data in the memory.
- 3. Discuss and analysis the problem.
- 4. Express the algorithm of our code as a flowchart.
- 5. Translate the over code operations to assembly instructions.
- 6. Sort out any memory issues.



### Problem discussion – 1/3

- Let x = 95 and y = 81
- $x_0 = 5$ ,  $x_1 = 9$ ,  $y_0 = 1$ , and  $y_1 = 8$
- $x = x_0 + x_1 * 10$
- $y = y_0 + y_1 * 10$
- $x y = x_0 y_0 + (x_1 y_1) * 10$

But we do not have multiplication instruction!



### Problem discussion – 2/3

- We know  $x y \le 15$ 
  - $-0 \le x_0 y_0 \le 9$
  - $-0 \le x_1 y_1 \le 1$ , So  $(x_1 y_1)$  can be either 0 or 1.

• 
$$x - y = x_0 - y_0 + (x_1 - y_1) * 10$$

• 
$$x - y = \begin{cases} x_0 - y_0 + 1 * 10 & if(x_1 - y_1) = 1 \\ x_0 - y_0 + 0 * 10 & if(x_1 - y_1) = 0 \end{cases}$$



### Problem discussion – 3/3


• 
$$x - y = \begin{cases} x_0 - y_0 + 1 * 10 & if(x_1 - y_1) = 1 \\ x_0 - y_0 + 0 * 10 & if(x_1 - y_1) = 0 \end{cases}$$

• 
$$x - y = \begin{cases} x_0 - y_0 + 10 & if(x_1 - y_1) = 1 \\ x_0 - y_0 + 0 & if(x_1 - y_1) = 0 \end{cases}$$

 We have managed to change the multiplication to comparison, but we also do not have comparison instruction!




### Problem algorithm

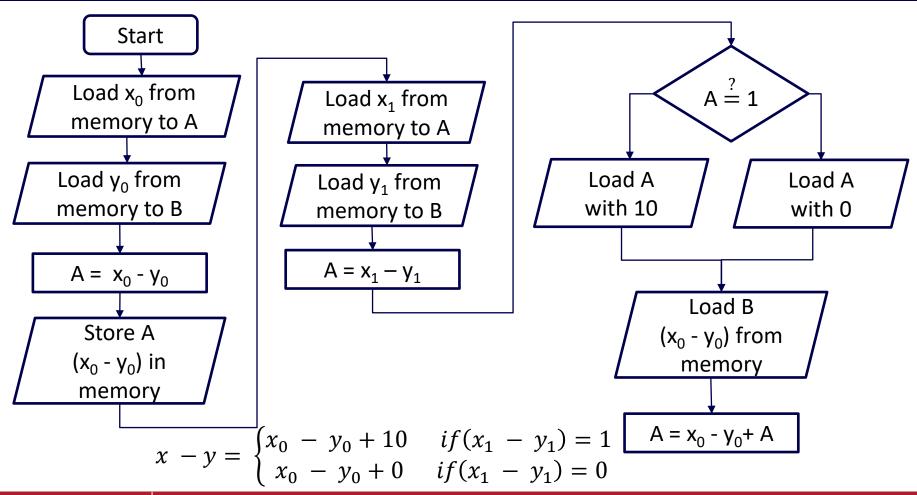



### If - else statement

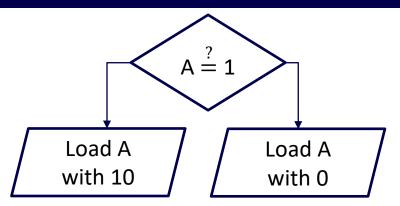


- $if(x_1 y_1) = 0 \text{ load A with 0}$
- $if(x_1 y_1) = 1 \text{ load A with } 10$
- After calc  $(x_1 y_1)$ , A will have 0 or 1.

	1.021	$\int 0xA$	$if (x_1 - y_1) = 0$
•	A+0XA -	0xB	$if (x_1 - y_1) = 0$ $if (x_1 - y_1) = 1$

Load A with [A + 0xA]: LDAI 0xA.

Address	value
0xA	0x00
0хВ	0x0A
0xC	0x01
0xD	0x09
0xE	0x05
0xF	0x08

## Problem algorithm with instructions

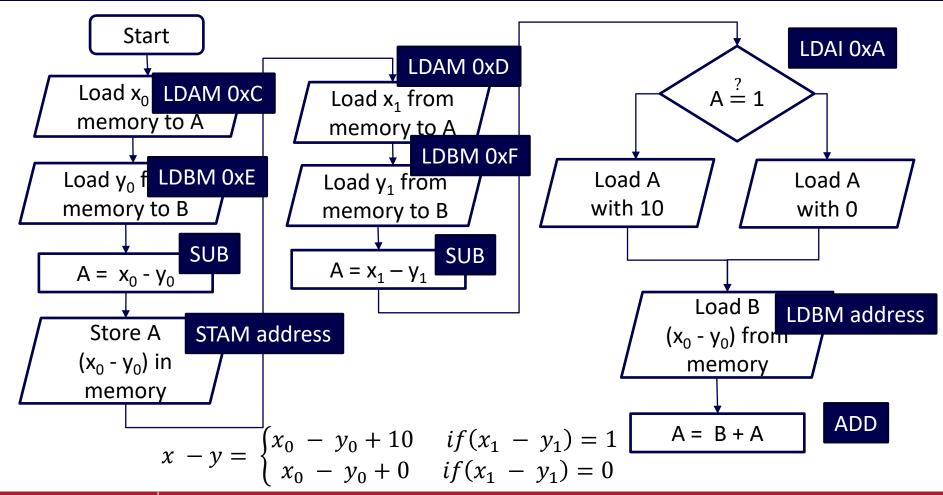

### Problem assembly code

Add	Machine code	Current PC	Opcode	Operand	Next PC	Mnemonic	А	В
0x0		0x0				LDAM 0xC		
0x1						LDBM 0xE		
0x2						SUB		
0x3						STAM Addr		
0x4						LDAM 0xD		
0x5						LDBM 0xF		
0x6						SUB		
0x7						LDAI 0xA		
0x8						LDBM Addr		
0x9						ADD		

### ★ Store temp value – 1/3

Add	Machine code	Currer	nt PC	Opcode	Operand	d	Next PC	Mnemonic	А	В
0x0		0x0						LDAM 0xC		
0x1			Addr	ess val	ue			LDBM 0xE		
0x2			0xA	0x0	00			SUB		
0x3			0xB	0x0	)A			STAM Addr		
0x4			0xC	OxC OxC				LDAM 0xD		
0x5			0xD	0x0	)9			LDBM 0xF		
0x6			0xE	0x(	01			SUB		
0x7			0xF	0x(				LDAI 0xA		
0x8								LDBM Addr		
0x9								ADD		

### ✓ Store temp value – 2/3

Add	Machine code	Current PC		Opcode	Operand	Next Po	Mnemonic	А	В
0x0		0x0					LDAM 0xC		
0x1			Addr	ess val	ue		LDBM 0xE		
0x2	0110 XXXX		0x0 0x0		00		SUB		
0x3	0100 Addr	(	OxB OxC		)A		STAM Addr		
0x4			OxC OxC		)5		LDAM 0xD		
0x5			0xD 0x0		)9		LDBM 0xF		
0x6			0xE 0x0		)1		SUB		
0x7		-	0xF 0x0				LDAI 0xA		
0x8							LDBM Addr		
0x9							ADD		


### ✓ Store temp value – 3/3

Add	Machine code	Curren	t PC	Opcode	Operand	t	Next PC	Mnemonic	А	В
0x0		0x0						LDAM 0xC		
0x1			Addr	ess val	ue			LDBM 0xE		
0x2	0110 0000		0xA	0x0	00			SUB		
0x3	0100 1010		0xB					STAM 0xA		
0x4			0xC	0x0	05			LDAM 0xD		
0x5			0xD	0x0	09			LDBM 0xF		
0x6			0xE					SUB		
0x7			0xF					LDAI 0x2		
0x8			O/Al					LDBM 0xA		
0x9								ADD		

## Diff between two two-digit numbers

Add	Machine code	Curren	nt PC	Opcode	Operand	t	Next PC	Mnemonic	А	В
0x0		0x0						LDAM 0xC		
0x1			Addr	ess val	ue			LDBM 0xE		
0x2	0110 0000		0xA	0x0	00			SUB		
0x3	0100 1010		0xB					STAM 0xA		
0x4			0xC	0x0	05			LDAM 0xD		
0x5			0xD	0x0	09			LDBM 0xF		
0x6			0xE	0xE 0x01				SUB		
0x7			0xF					LDAI 0x2		
0x8								LDBM 0xA		
0x9								ADD		

# Our CPU and computer architecture designs

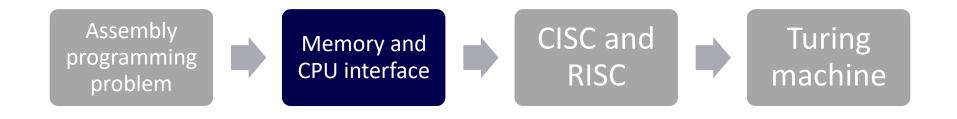




#### Von Neumann Architecture




John von Neumann

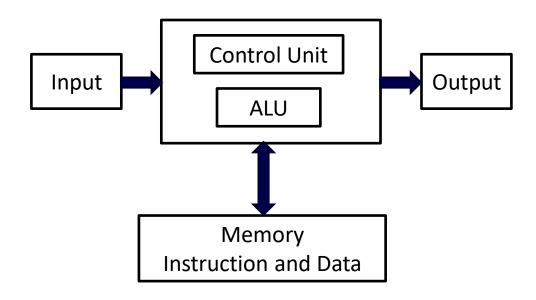

**Von Neumann Architecture or Princeton Architecture** 

### Harvard Architecture

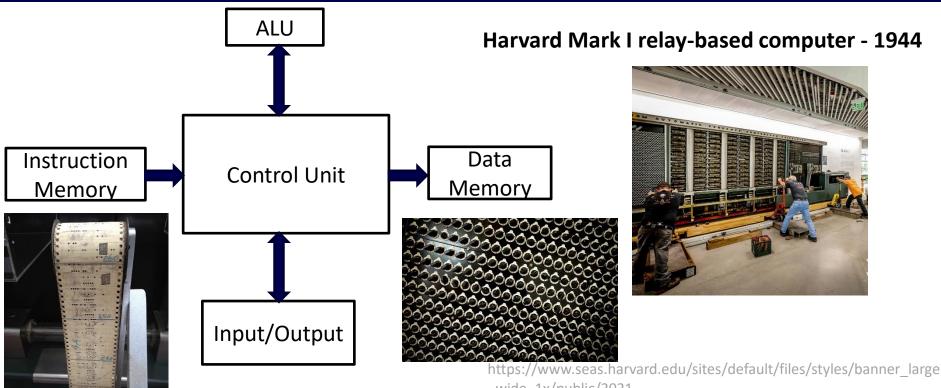

https://upload.wikimedia.org/wikipedia/commons/thumb/f/fa/Harvar d Mark I program tape.agr.jpg/800px-Harvard\_Mark\_I\_program\_tape.agr.jpg

**Harvard Architecture** 

wide 1x/public/2021-

07/070621 Mark 1 SEC 5163.jpg?itok=DFGb3F0v

https://www.seas.harvard.edu/sites/default/files/styles/banner large wide 1x/public/2021-

07/070621 Mark 1 SEC 5173.jpg?itok=93nZxp4u




## Compare Harvard and Von Neumann architectures

- In Harvard architecture:
  - Instruction's length does not have to match data width.
  - 2. Different busses for data and instructions.
  - Instruction can be fetched, and data can be read or written at the same time.
  - 4. They cannot change their own instructions.



# CPU and computer architecture designs.



#### CISC and RISC

In CISC (Complex Instruction Set Computer)
one instruction can execute a whole sequence
of hardware operations.

 In RISC (Reduced Instruction Set Computer), one instruction perform one hardware operation.





 CISC aims to simplify the compilation of highlevel programming languages.

- 1. A large number of instructions.
- 2. Some instructions perform specialized tasks.
- 3. Variable length instructions.
- 4. Instructions that manipulate operands in memory.






 RISC attempts to reduce the execution time by simplifying the instruction sets.

- 1. Relatively few instructions.
- 2. Memory access limited to load and store.
- 3. All operations are done within the registers.
- 4. Fixed-length, easily decoded instructions.



# Our CPU and computer architecture designs






### Alan Turing

- Alan Turing was an English mathematician, computer scientist and logician.
- His work is widely acknowledged as foundational research of computer science
- Turing machine (1936).







### Turing machine - 1/15

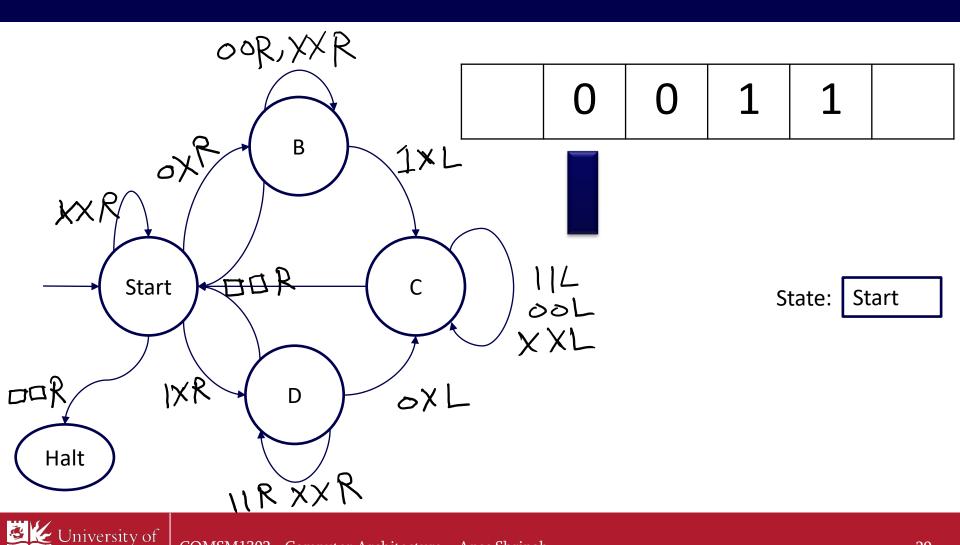


### Turing machine - 2/15

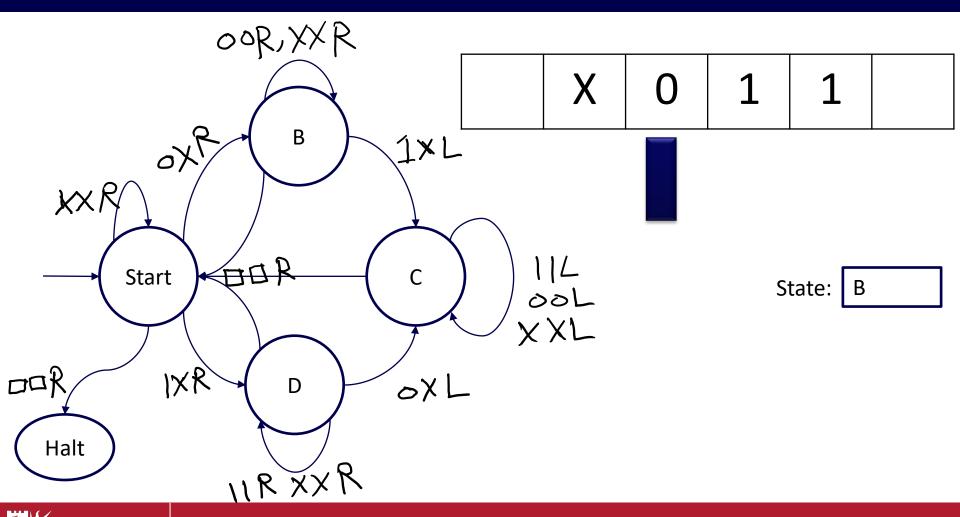


### Turing machine - 3/15

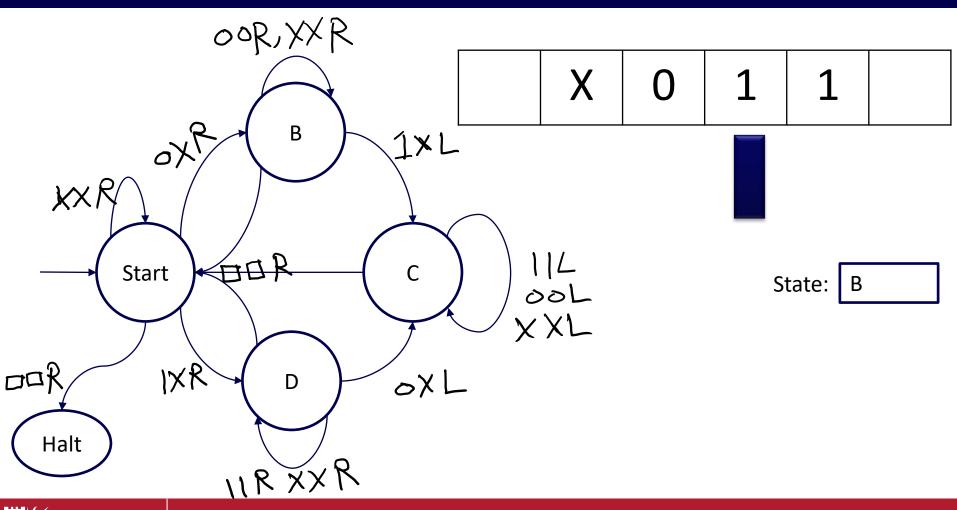


### Turing machine - 4/15

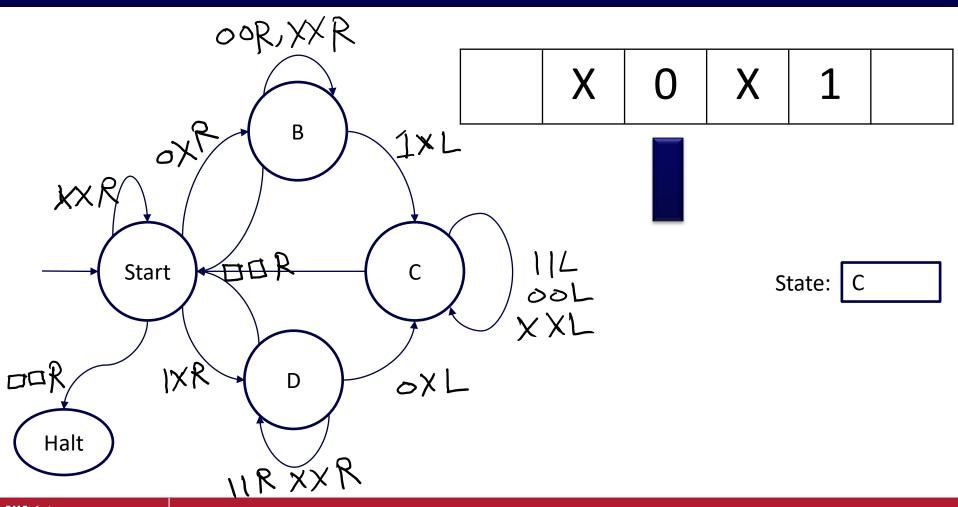


### Turing machine - 5/15

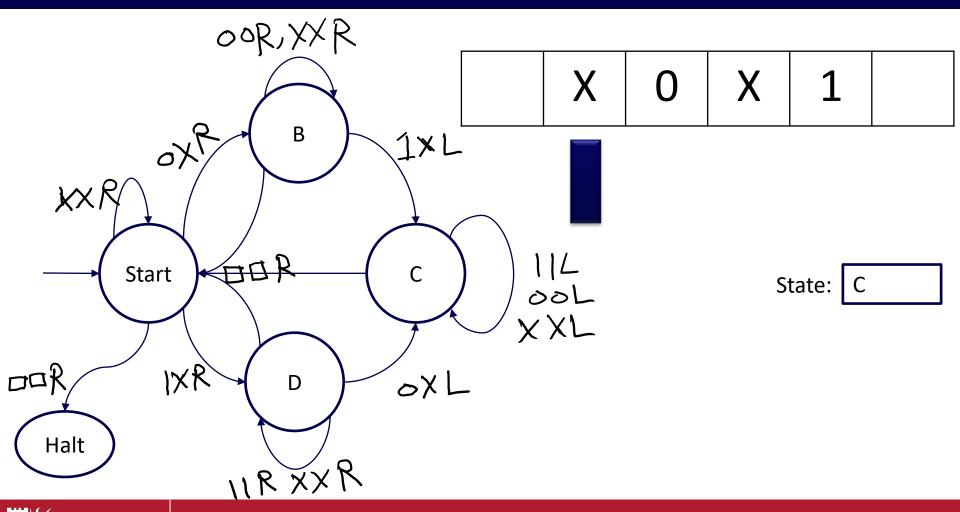


### Turing machine - 6/15

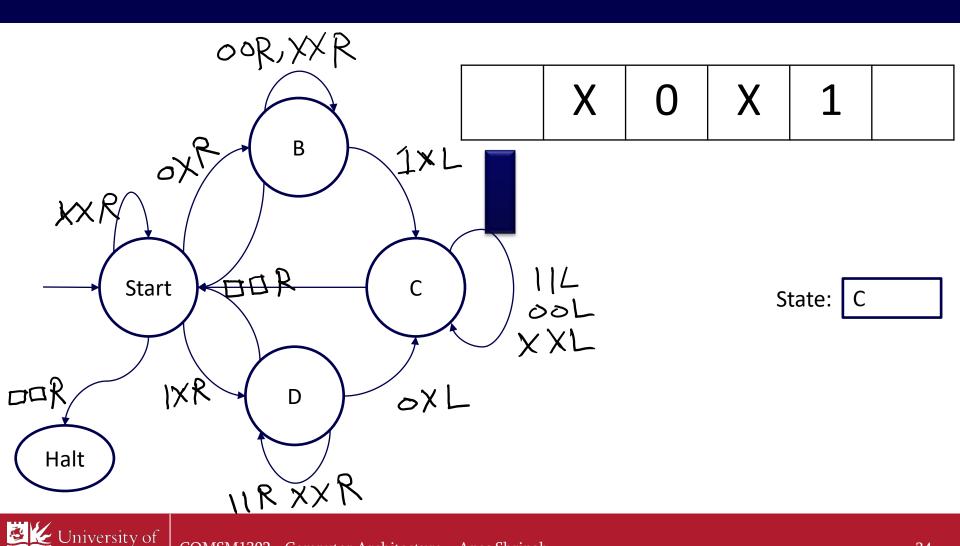


### Turing machine - 7/15

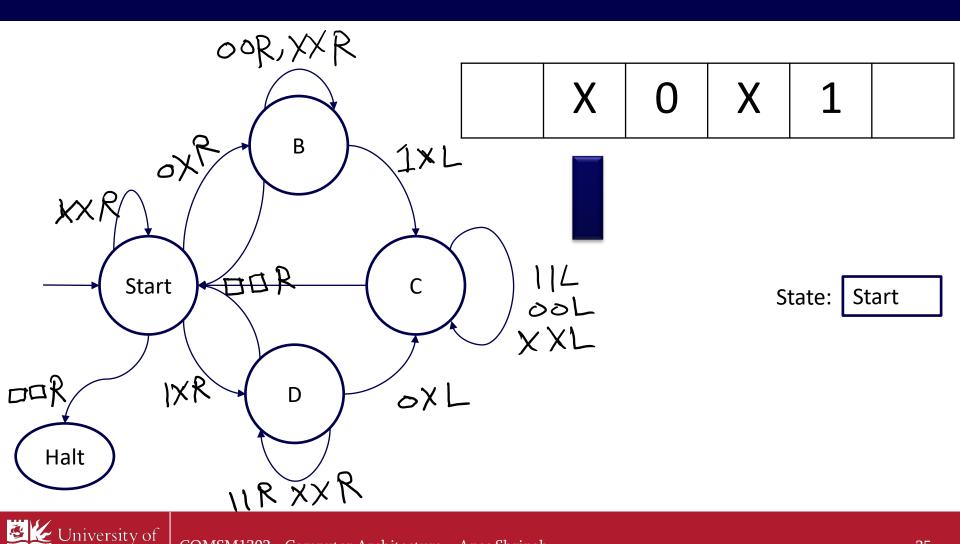


### Turing machine - 8/15

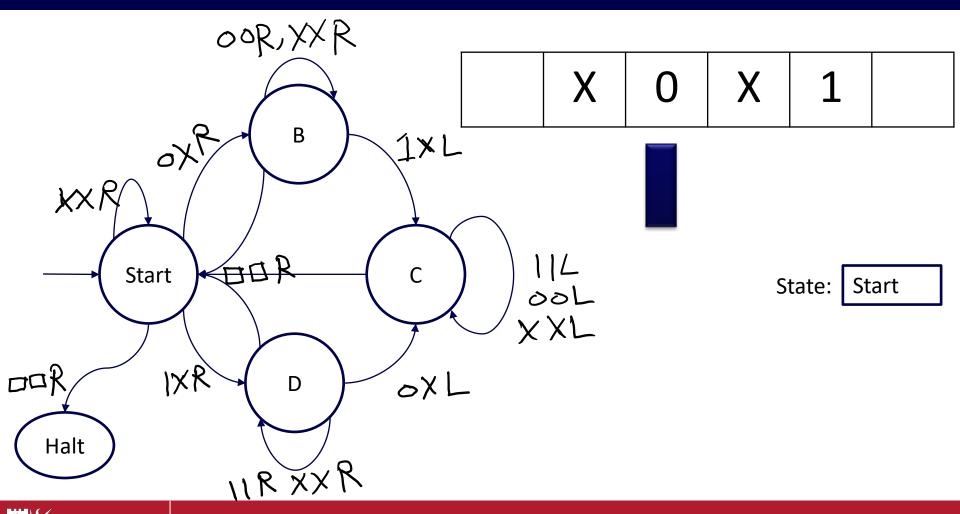


### Turing machine - 9/15

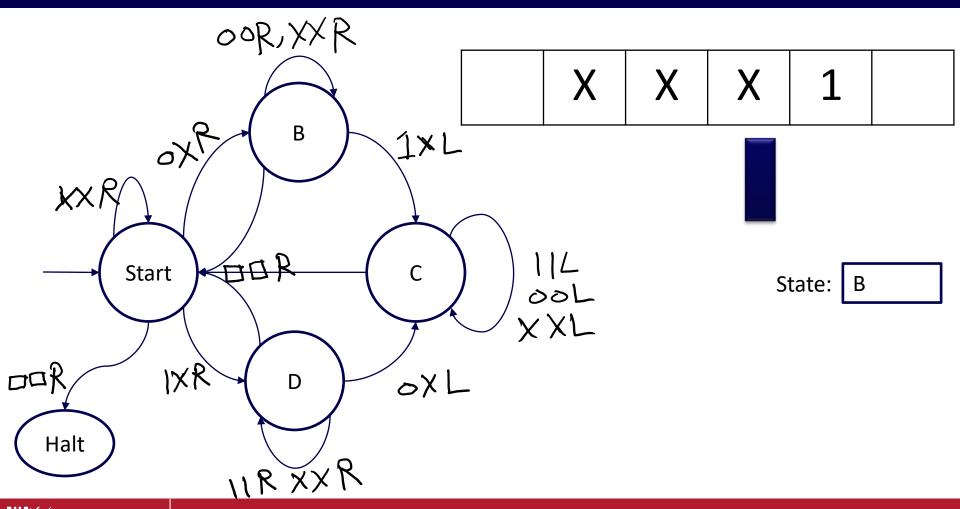


### Turing machine - 10/15

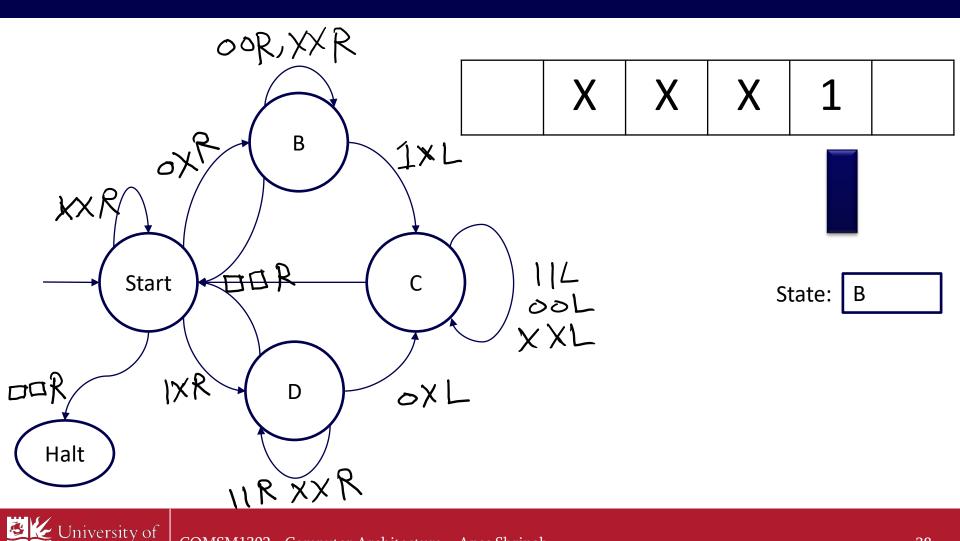


### Turing machine - 11/15

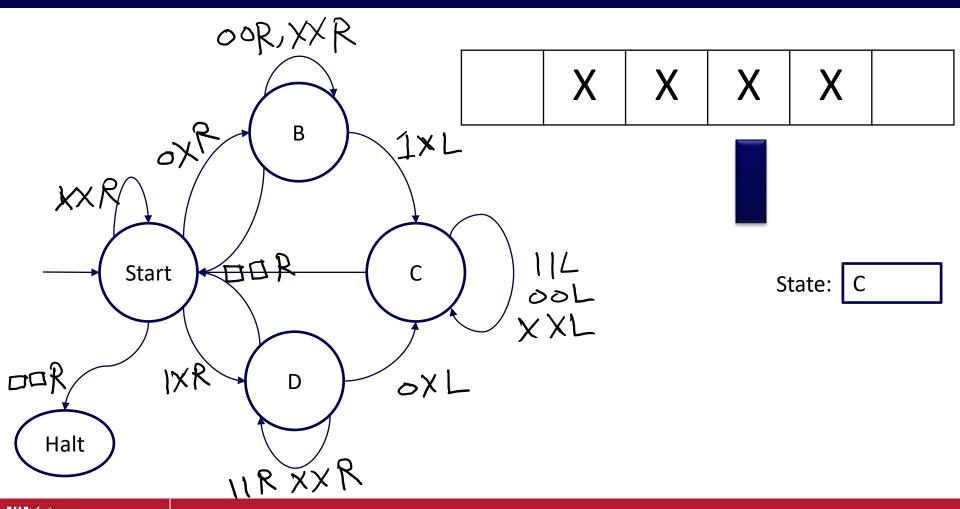

### Turing machine - 12/15

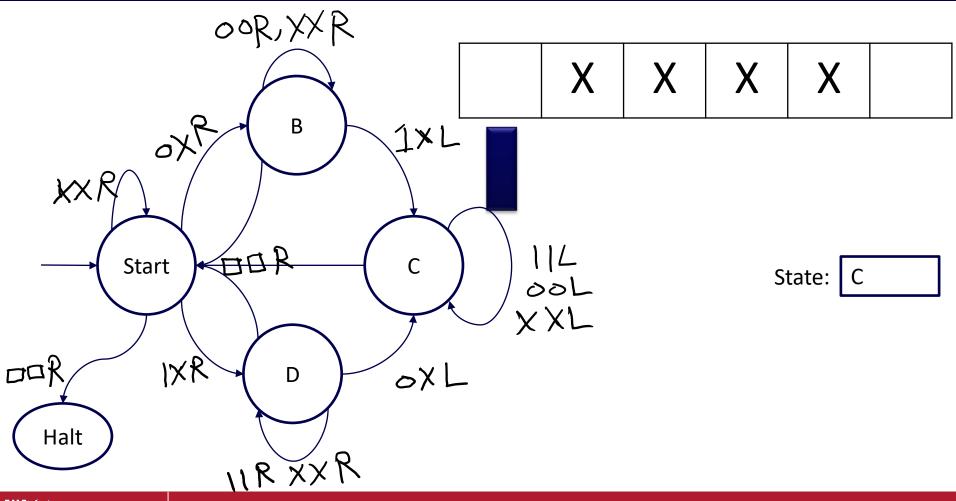


### Turing machine - 13/15

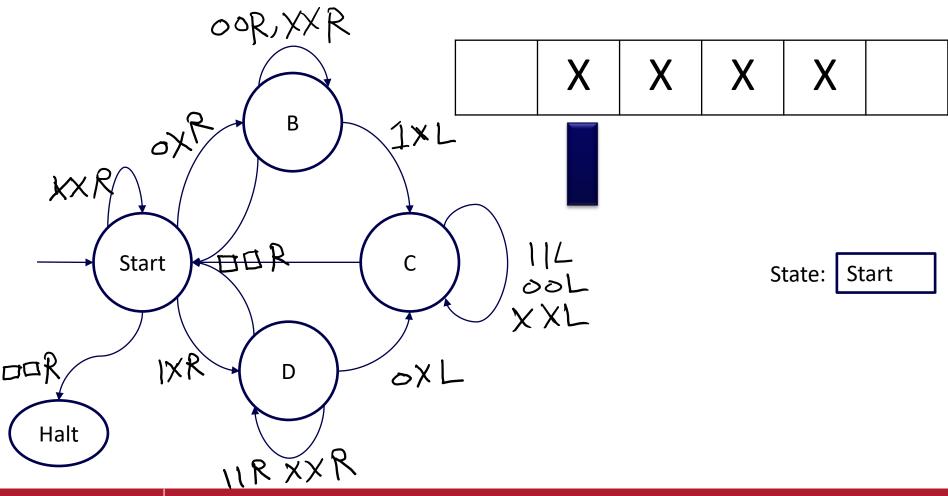




### Turing machine - 14/15

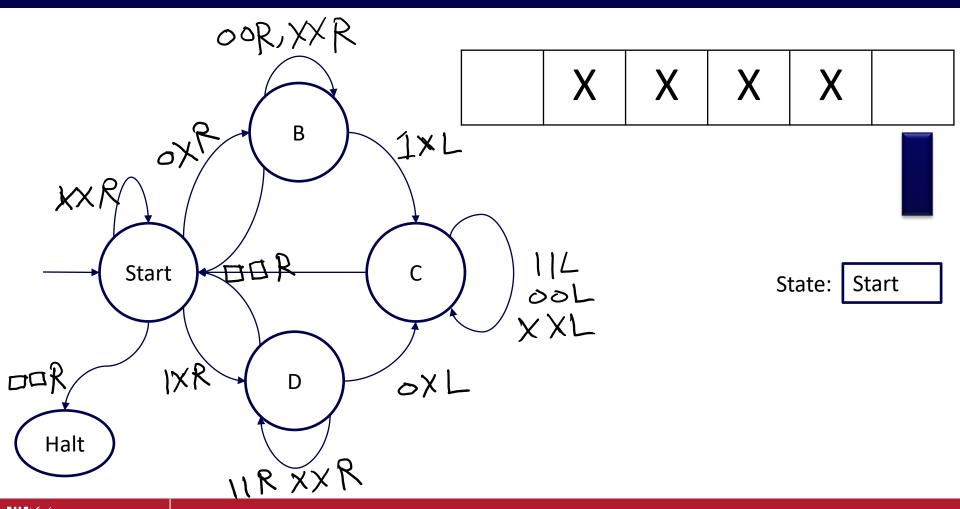

### Turing machine - 15/15

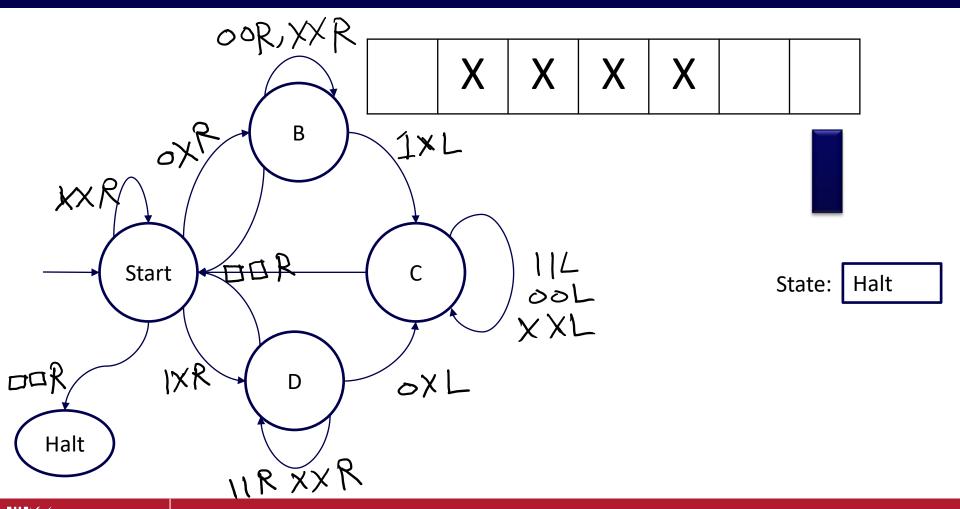



- Wrote an assembly code.
- Von Neumann and Harvard architectures.
- CISC and RISC.
- Turing machine.

