
Dreamcast cable assembly

- 1. If recycling a cable from a broken controller, or if using an extension cable, cut the cable 10-40cm from the plug.
- 2. Strip 3-5 cm of the outer insulation sleeving from the cable
- 3. Isolate the inner wires from the cable and strip 5mm from each wire
- 4. Crimp each wire with a female Dupont crimp in line with the crimping guide




Crimping

- 1. Place the wire in a female Dupont crimp
- 2. Fold the pull relief around the wire

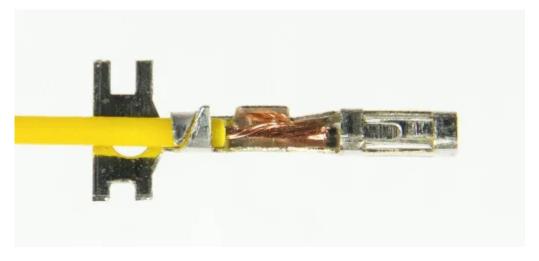

- 3. Use a crimping tool to shrink the connector around the wire ends
- 4. Slide the connector housing onto the crimp until it mounts, making sure the orientation is correct

Dreamcast 1 Player connection diagram

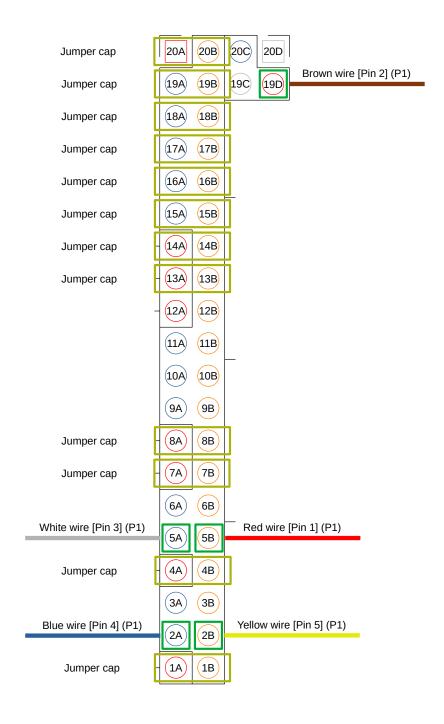

Dreamcast 1 Player connection guide

- 1. Place the jumper caps on rows 1, 4, 7, 8, 13, 14, 15, 16, 17, 18, 19, 20
- 2. Connect the blue wire [Pin 4] to pin 2A
- 3. Connect the yellow wire [Pin 5] to pin 5B
- 4. Connect the red wire [Pin 1] to pin 5B
- 5. Connect the white wire [Pin 3] to pin 5A
- 6. Connect the brown wire [Pin 2] to pin 19D
- 7. Connections should now resemble the diagram