

Document No. E2B-94-1115

Type1DX Antenna Design Guide

April, 2019




Measurement Board









XY plane

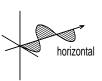




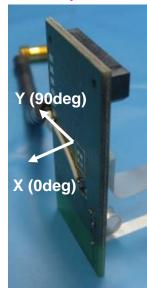

YZ plane

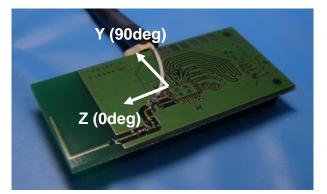


ZX plane

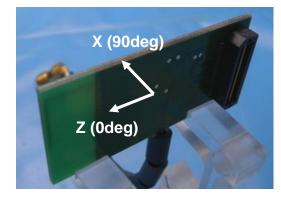



Antenna Performance



							[dBi]	[dB]
LINEAR		XY-plane		YZ-plane		ZX-plane		Total
POLARIZATION		hor.	ver.	hor.	ver.	hor.	ver.	Efficiency
2400 MHz	MAX.	-7.9	0.0	0.3	-21.4	-0.4	-7.1	
	AVE.	-12.3	-1.5	-3.6	-26.0	-4.5	-9.1	-2.4
2442 MHz	MAX.	-7.5	0.3	0.6	-18.8	-0.4	-6.8	
	AVE.	-12.0	-1.4	-3.4	-24.5	-4.3	-8.9	-2.3
2484 MHz	MAX.	-7.1	0.4	0.5	-18.3	0.1	-6.4	
	AVE.	-11.5	-1.3	-3.6	-23.5	-4.1	-8.7	-2.2

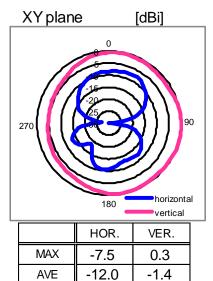

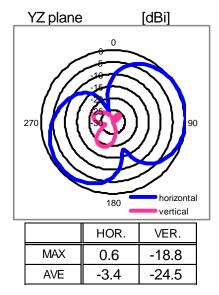

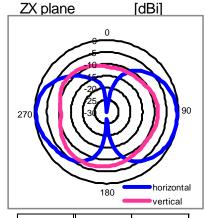


	HOR.	VER.		
MAX	-0.4	-6.8		
AVE	-4.3	-8.9		

Antenna Type: Monopole (pattern antenna)

Antenna Gain: 0.6dBi (peak)

Layout Guide for Good Antenna Performance



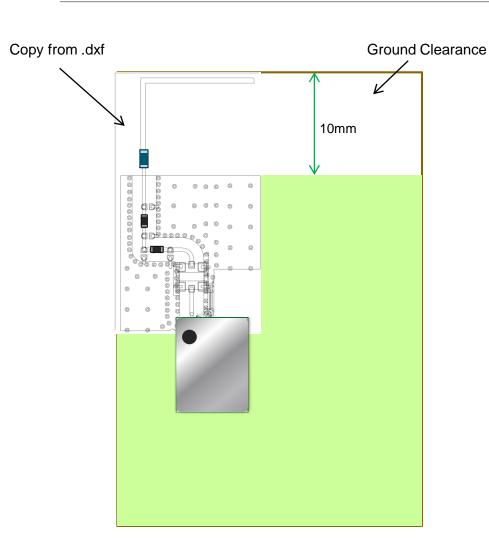


- Place the antenna on top-left corner.
- Keep GND clearance all long the top edge.
- Place metal stuff as far as possible.
- Place two pi-network for matching and attenuating.
 - Put 0ohm in series and no load in parallel on the initial design.
 - Put appropriate value of C/L/R depends on actual performance.

Please follow Installation Manual.

Antenna Design



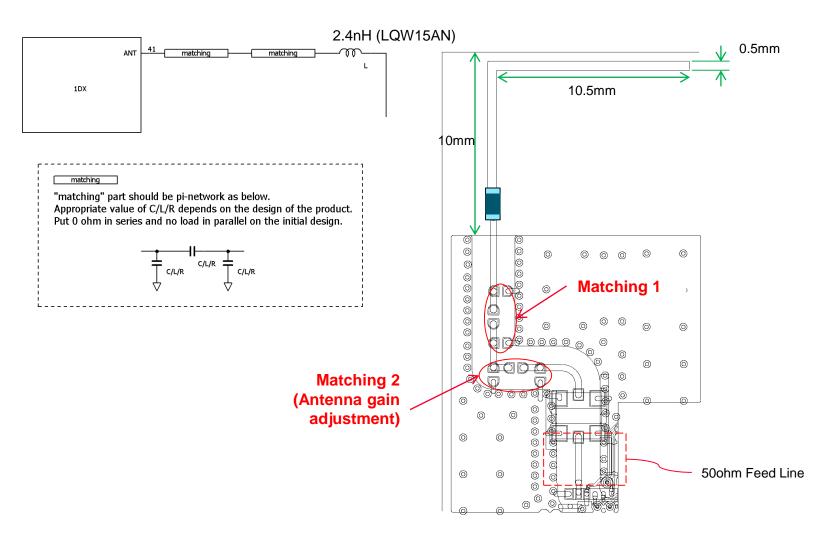

Please follow "type1dx_antenna_p2ml4452-1.dxf"