
ildaGen

By Gitle Mikkelsen / Grix / GrixM / gitlem@gmail.com BitLasers.com

ILDA frame creation tool.

User Interface

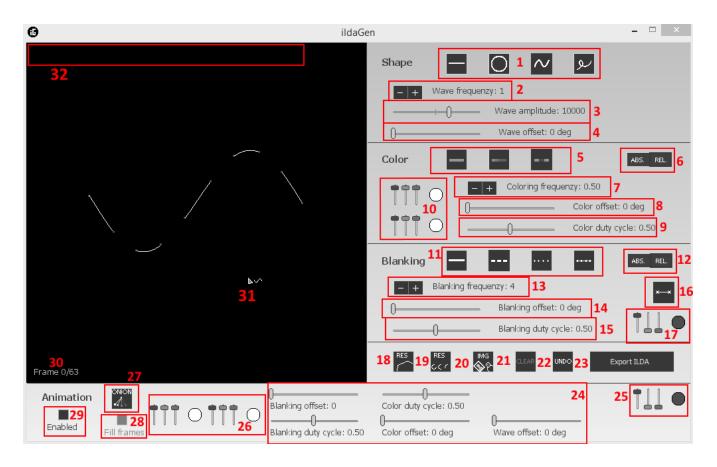

Some of these sliders and selectors may not appear to you, this is because they are only visible when the relevant drawing mode is selected. For example, the wave settings are only visible if you have selected the wave drawing tool. Here is a brief explanation of all numbered items on the screen:

1) This is the drawing tools selector. As of v0.9.1 you can choose between a line tool, circle tool, wave tool and free drawing. Click the buttons to select them.

- 2) The + and button lets you increase or decrease the wave frequency.
- 3) The slider lets you adjust the wave amplitude (height). Negative values are possible, and inverts the wave.
- 4) This slider lets you adjust the offset of the wave, from 0 (no offset) to 360 (one full period offset)
- 5) This is the color tools selector. As of v0.9.1 you can choose between one solid color, two-color gradient, and two-color alternating (dashed)
- 6) This lets you switch between absolute and relative interval length when using the dashed og gradientcolor tool. When relative is selected, the number of intervals per drawn element is constant, and when absolute is selected, the length of the interval is constant.
- 7) This lets you choose the frequency (number of intervals per element) of the dashed or gradient coloring. When relative mode is selected (see 6), this is switched with a slider that lets you adjust the length of the intervals.
- 8) Here you can change the offset of the dashed or gradient coloring, from 0 (no offset) to 360 (one full period offset)
- 9) Here you can change the duty cycle (ratio of color 1 to color 2) of the dashed coloring. The higher the duty cycle, the shorter the intervals of color 2.
- 10) These are the color selectors. The top selector is for color 1, and the bottom is for color 2. When solid coloring mode is selected, only the selector for color 1 is visible. The selectors have three sliders each, for red, green and blue. They are blended additively, like laser light, so for example red at max, green at max and blue at zero creates the color yellow.
- 11) These are the blanking tools. As of now you can choose between no blanking, dashed blanking (intervals), dotted blanking and no blanking but with dots added periodically.
- 12) Similar to 6), this lets you choose between absolute and relative blanking interval lengths.
- 13) Similar to 7), this lets you adjust the frequency or length of the blanking intervals.
- 14) Similar to 8), this lets you adjust the blanking offset.
- 15) Similar to 9), this lets you adjust the blanking duty cycle.
- 16) This toggled dotted ends, meaning that a dot is placed at the start and end of blanking intervals.

- 17) This color selector lets you choose the color of the dots at the end of blanking intervals, as explained in 16), or the colors of the dots in the "no blanking but with periodic dots" blanking mode.
- 18) This button lets you select the resolution (detail level) of the points in the ilda frame. The lower number the smoother the curves and color fading becomes, but the file size increases and program performance drops. At the standard value of 512, points are about 4 pixels on the screen apart.
- 19) This button lets you select the number of frames in the animation. The higher the number, the smoother the animation will be, but you may want to adjust it to the framerate of the show you are creating times the desired length in time of the frame.
- 20) This buttons lets you load a PNG image from your computer to get superimposed on the screen, allowing you to trace the outlines when drawing the frame. Clicking it a second time will disable the image.
- 21) This button discards your work and clears all elements in every frame. Not undoable, so be careful.
- 22) This button lets you undo your last action. You can also press Ctrl+Z. As of now only drawing an element and clicking the buttons in 20) or 19) counts as undoable actions.
- 23) This button exports your work into an ILDA file. If you have not yet entered a registration serial code, it will ask you for one. You must remember to end the name of the file in ".ild", or the program creates a file with no extension and you need to rename it to be able to open it with other programs.
- 24) These sliders are the end-of-animation equivalents of some of the sliders explained above. They let you animate their values. If you for example set the main "blanking offset" slider to 0 degrees, and the second "blanking offset" slider in this area to 360 degrees, the element will be animated, starting with a blanking offset of 0, and transitioning to 360 over the course of the animation.
- 25) Same as 24), except with the dotted ends color.
- 26) Same as 24), except with the color 1 and color 2 selectors, from left to right respectively.
- 27) This button toggles onion skinning. It superimposes the two previous frames over the current one, to let you manually draw animated frames easier.

- 28) This checkbox toggles filling all the frames with the current element. If this is selected, an element, even if animation is disabled, will be copied to all the frames rather than just the active one. Also, this decides whether the last frame will be copied to the rest when using button 19) to extend the number of frames.
- 29) This checkbox enables or disables animation. If this is unchecked, the elements you place will be unchanging in all frames.
- 30) This shows you which frame you are viewing, and the total number of frames. Use your arrow keys to cycle between them.
- 31) This is your mouse cursor. Click, drag and release in the black area to place an element.
- 32) In this corner you will see tooltips when hovering your mouse over the different items/tools on screen.

List of keyboard controls

Mouse Select drawing tool and draw

Left/Right Arrow Cycle between frames

Shift Force straight lines/angles when drawing

Alt Snap mouse to ending position of last element for chaining

Hold CTRL to change the snapping to the starting

position of last element

Space Snap mouse to starting position of last element

Show symmetry/alignment guidelines of elements

Mouse wheel Adjust some setting depending on the drawing shape selected

Hold CTRL while using mouse wheel to adjust a

different setting

Ctrl+Z Undo

S Snap to grid