# HERA Monitor and Control Subsystem Definition

### HERA Team

March 28, 2020

### 1 Introduction

HERA is an international experiment to detect and characterize the Epoch of Reionization (EOR). The telescope is located at the South African SKA site in the Karoo Astronomy Reserve. This note summarizes Monitor and Control (M&C) subsystem for HERA.

Monitor and Control has two main tasks: configuration management and real time metadata logging. Configuration management involves tracking all the physical parts of the telescope and how they are all connected. Real time metadata logging tracks the performance, settings and communications of the subsystems.

The M&C system is built around a database with a well documented table schema and a python software layer to provide a simple developer framework. It also includes various online daemons for monitoring things, and both a front end web-based user interface and a command-line interface to support analysis code.

Software is contained in the repository https://github.com/HERA-Team/hera\_mc.

The organization of this document is as follows: the high-level M&C requirements and the design specifications are in laid out in section 2, the configuration management is described in section 3, the database tables are detailed in section 4 and future plans are sketched out in section 5.

# 2 Requirements and Specifications

#### 2.1 Requirements

These were developed and established in early 2016 in discussions among the subsystem leads.

- 1. Ability to fully reconstruct the historical state of the system.
- 2. All interactions between subsystems must go through or be logged by M&C.
  - a. Both subsystems in an interaction are responsible for logging communications to M&C.
  - b. Subsystems in an interaction are responsible for logging communications to M&C.
- 3. Operational metadata (e.g. temperatures, correlator bit occupancies) must be logged to M&C.
- 4. High availability (M&C must not limit uptime of telescope).
- 5. M&C is a provider of information about observations to end-users and must be available to them

### 2.2 Design Specification

These were developed and established in 2016 based on the requirements.

- 1. SQL database
  - a. DB Design principle: every logical sub group has a group of tables. One adds tables to do more things. E.g. different versions of subsystems add new tables. Operations reference which tables they use.
  - b. This document (and appendices) will contain all table definitions.

- c. Use careful dB design to avoid duplicated data, make table links/data relationships clear, use many-to-one and many-to-many links.
- d. Transactions must be used to ensure DB integrity.
- e. Must be mirrored in some fashion to observer locations.
- 2. At least one SW interface layer will be provided.
  - a. It's not required to interact with M&C.
  - b. Must support relational db (i.e. multiple column primary and foreign keys) and transactions.

#### 3. Hardware

- a. LOM capabilities
- b. Multi-teraByte mirrored disk RAID
- c. Backup machine available on site

# 3 Configuration Management

The HERA array/part configuration management database is a set of five tables within the larger hera\_mc database, which is maintained on-site in the Karoo. The tables are detailed in the Appendix, but they are:

psql table	in python file	with class name
geo_location	hera_mc/geo_location.py	GeoLocation
$station\_type$	hera_mc/geo_location.py	StationType
parts	hera_mc/cm_part_connect.py	Parts
part_info	hera_mc/cm_part_connect.py	PartInfo
connections	hera_mc/cm_part_connect.py	Connections
${ m cm\_version}$	hera_mc/cm_transfer.py	CMVersion
apriori_antenna	hera_mc/cm_part_connect.py	AprioriAntenna

The databases are structured primarily around *parts* and *connections*. *Parts* are meant to be single items that, in theory at least, are a thing that can be replaced as a unit. *Connections* define *ports* on a given part and connect two ports together. By convention, HERA part numbers (hpn) are all upper case and ports are all lower case.

All parts and connections are timed in that they have a start and stop time of operation. If stop is None, then it is active (it is given a date in the relatively far future). There are currently two special parts (one at each end of the signal chain) that are "geo\_located" parts and have entries in the geo\_location table: **station** and **node**.

Parts are hooked together via connections of their ports, as defined in the connection table. For the supporting code, architecture dependent parameters are set in the cm\_sysdef module.

To capture antenna status, an *a priori* antenna status table has been defined to facilitate a work flow to incorporate new antennas into the array and capture and known recalcitrant antennas. The table provides an enumerated status for each antenna station.

## 3.1 Operation Workflow

The work flow in this context relates to antenna migration between one of the *a priori* status states above. It is handled by the operations team, which will review the situation on a roughly monthly cadence. The enumerated states are:

- dish\_maintenance: dish is either not completed or being repaired
- dish\_ok: dish is ready for use
- RF\_maintenance: receiver system is either not installed or being repaired
- RF\_ok: receiver system ready for use

- digital\_maintenance: digital system is either not installed or being repaired
- digital\_ok: digital system is ready for use
- calibration\_maintenance: calibration has not been conducted or current
- calibration\_ok: ready to use in analysis
- calibration\_triage: an issue is being worked on

### 3.2 Hookup Connections

Hookup connections are those that uniquely map the signal chain from the antenna to the node, including the specific correlator input. These are the connections used to generate the correlator hookup. The signal chain hookup for HERA is given below and shown in Fig. 1, shown in black. The list below describes the hookup connections.

- Station: geo\_located position. See prefixes in table station\_type (e.g. HH for herahex)
- Antenna: This is also the correlator number which now matches station number.  $A\{\#\}$
- Feed: element feed (Vivaldi). FDV{#}
- **FEM**: front-end module. **FEM**{#}
- Node bulkhead plate: bulkhead plate on node. NBP{#}
- PAM: post-amp module in node. PAM{#}
- SNAP: digitizer/channelizer in node. SNP{#}
- Node: field-deployed node as a part N{#}
- Node: geo\_located position for node as a station ND{#}

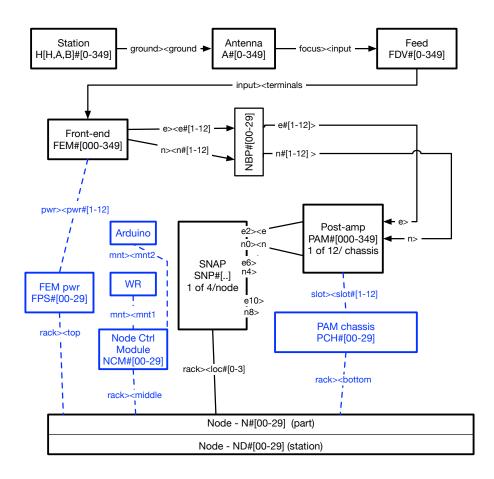


Figure 1: Block diagram of hookup. The line labels indicate the port names/connections. Black solid lines are the signal chain.

### 3.3 Package Modules

This section provides a high-level overview of the python configuration management package modules within hera\_mc that are called from scripts or used in interactive sessions.

${\tt geo\_location.py}$	Defines station_type and geo_location. Provides update utility for				
	geo_location. Contains is_in_geo_location and is_in_connections.				
geo_handling.py	Contains myriad defs that handle various geo functionalities.				
cm_partconnect.py	Defines parts_paper, part_info, and connections. Provides update utilities				
	for parts_paper and connections. Containsget_part_revisions.				
cm_table_info.py	Has mapping and order of tables and classes for initialization.				
cm_handling.py	Defines the Handling class to handle various configuration management func-				
	tionalities.				
$cm_active.py$	Contains modules that load parts/connections active for given date.				
cm_transfer.py	Contains myriad defs that help package and initialize the cm tables.				
cm_revisions.py	Contains myriad defs that deal with finding revision numbers etc.				
cm_hookup.py	Defines the Hookup class to help determine and show the full part hookup.				
$cm_{-}dossier.py$	Contains classes for the part/connection cm information.				
$ m cm\_utils.py$	Contains various defs called by other modules.				
$ m cm\_redis\_corr.py$	Modules to get/read relevant cm info from/into redis.				
${ m cm\_sysutils.py}$	Various system-wide modules				
$ m cm\_sysdef$	Architecture dependent definitions.				

### 3.4 Scripts

This section provides a high-level overview of the high-level scripts: geo.py, dossier.py and hookup.py.

#### 3.4.1 Geographical Information: geo.py fg\_action --arguments

Has various plotting/printing options for station information. fg\_action is the "foreground action", that is the locations that will get printed and shown on top if plotting. See geo.py -h for options. Available foregrounds are (note you need the first letter only):

- a[ctive]: those antennas that are shown as fully hooked up through the correlator
- i[nstalled]: those antennas whose structure is installed
- p[osition] <csv-list>: specified antennas in csv-list (e.g. HH1,HH4)
- c[ofa]: the center-of-the-array
- s[ince]: antennas installed since date/time supplied in arguments
- n[one]: no foreground, will just show the background (or nothing if not plotting)

### 3.4.2 Part/Connection Information: dossier.py view --arguments

Has various printing options for part information (part info, connections, hookup, types, etc). The available views are (first letter only needed): parts, connections, notes, revisions. See dossier.py -h for options.

### 3.4.3 Cascaded Connection Information: hookup.py --arguments

Displays the signal chain hookup information. See hookup.py -h for options.

# 4 Table Definitions

4.1	Observ	rations		6
	4.1.1	hera_obs		6
4.2	Comm	on tables		6
	4.2.1	server_status (template)		6
	4.2.2	subsystem_errors		6
	4.2.3	daemon_status		7
4.3		ables		7
	4.3.1	rtp_server_status		7
	4.3.2	rtp_status		7
	4.3.3	rtp_process_events		7
	4.3.4	rtp_process_record		7
	4.3.5	rtp_task_resource_record		8
4.4		an Tables		8
4.4	4.4.1	lib_server_status		8
	4.4.1 $4.4.2$			
		lib_status		8
	4.4.3	lib_raid_status		8
	4.4.4	lib_raid_errors		9
	4.4.5	lib_remote_status		9
	4.4.6	lib_files		9
4.5		ator Tables		9
	4.5.1	correlator_config_file		9
	4.5.2	correlator_config_status		9
	4.5.3	correlator_control_state		10
	4.5.4	correlator_control_command		10
	4.5.5	correlator_take_data_arguments	 	10
	4.5.6	correlator_config_command	 	10
	4.5.7	correlator_software_versions	 	11
	4.5.8	snap_config_version		11
	4.5.9	snap_status		11
	4.5.10	antenna_status		12
	4.5.11	node_sensor		$12^{-1}$
		node_power_status		12
		node_power_command		13
		roach_temperature (deprecated)		13
4.6		fo Tables		13
4.0	4.6.1	metric_list		13
	4.6.2	ant_metrics		13
		array_metrics		
4 7				
4.7		fo Tables		14
4.0	4.7.1	weather_data		14
4.8	_	uration Management Tables		14
	4.8.1	geo_location		14
	4.8.2	station_type		15
	4.8.3	parts		15
	4.8.4	part_info		15
	4.8.5	connections		15
	4.8.6	apriori_antenna		16
	4.8.7	cm_version		16

The formatting of the tables is as follows:

- Bold font = primary key
- $Italics = foreign_key$ .
- $\bullet$  \* = NotNull entries

### 4.1 Observations

### 4.1.1 hera\_obs

This is the primary observation definition table. It is written to by the correlator.

Column	Type	Description
obsid	long integer	start time in floor(GPS) seconds. GPS start adjusted to be within
		1 second of LST to lock observations to LST for the night
starttime	double	start time in gps seconds. The start time to full accuracy of the
		beginning of integration of first visibility
stoptime	double	stop time in gps seconds. The stop time to full accuracy of the
		end of integration of last visibility
jd_start	double	start time in JD. Calculated from starttime, provides a quick way
		to filter on JD times.
lst_start_hr	double	decimal hours from start of sidereal day. Calculated from start-
		time, provides a quick search for matching LSTs

### 4.2 Common tables

### 4.2.1 server\_status (template)

Common table structure for server status info. Note: There is no table named server\_status. This is the structure used for several subsystem tables named <subsystem>\_server\_status.

Column	Type	Description
hostname	string	name of server
$mc\_time$	long	time report received by M&C in floor(gps seconds)
ip_address	string	IP address of server (how should we handle multiples?)
mc_system_timediff	float	difference between M&C time and time report sent by server in
		seconds
num_cores	integer	number of cores on server
cpu_load_pct	float	CPU load percent = total load / num_cores, 5 min average
uptime_days	float	server uptime in days
memory_used_pct	float	percent of memory used, 5 min average
memory_size_gb	float	amount of memory on server in GB
disk_space_pct	float	percent of disk used
disk_size_gb	float	amount of disk space on server in GB
$network\_bandwidth\_mps$	float	Network bandwidth in MB/s, 5 min average. Can be null

### 4.2.2 subsystem\_errors

Subsystem errors/issues

Column	Type	Description
id	long	auto-incrementing error id
time	long	error report time in floor(gps seconds)
subsystem	string	name subsystem with error (e.g. 'librarian', 'rtp')
mc_time	long	time report received by M&C in floor(gps seconds)
severity	int	integer indicating severity level, 1 is most severe
log	text	TBD on format, either a message or a file with the log

### 4.2.3 daemon\_status

Status of M&C daemons that monitor various subsystems.

Column	Type	Description
name	string	daemon name
hostname	string	hostname where daemon is running (the same daemon can run on
		multiple hosts)
jd	integer	Julian Date. This allows for some history without keeping all
		history.
time	long	most recent status report time in floor(gps seconds)
status	string	most recent daemon status. One of 'good' or 'errored'

### 4.3 RTP Tables

### ${\bf 4.3.1} \quad {\bf rtp\_server\_status}$

RTP version of the server\_status table, see 4.2.1.

### 4.3.2 rtp\_status

 ${\bf High\ level\ RTP\ status}$ 

Column	Type	Description
time	long	status time in floor(gps seconds)
status	string	status string, options TBD (might become an enum)
event_min_elapsed	float	minutes elapsed since last event
num_processes	integer	Number of processes running
restart_hours_elapsed	float	hours elapsed since last restart

### ${\bf 4.3.3} \quad {\bf rtp\_process\_events}$

RTP Processing events (per obsid)

Column	Type	Description
time	long	event time in floor(gps seconds)
obsid	long integer	observation identifier, foreign key into hera_obs table
event	string	one of: queued, started, finished, error

### 4.3.4 rtp\_process\_record

RTP record of processed obsids (entry added when processing finished)

Column	Type	Description
time	long	record time in floor(gps seconds)
obsid	long integer	observation identifier, foreign key into hera_obs table
pipeline_list	text	concatenated list of tasks
git_version	string	git version of RTP code
git_hash	string	git hash of RTP code

### ${\bf 4.3.5} \quad {\bf rtp\_task\_resource\_record}$

RTP record of start and stop times for a task (e.g., omnical) for an obsid, as well as CPU and memory used (if available)

column	type	description
obsid	long integer	observation identifier, foreign key into hera_obs table
task_name	string	name of specific task (e.g., OMNICAL)
start_time	long	start time of task in floor(gps seconds)
stop_time	long	stop time of task in floor(gps seconds)
max_mem	float	maximum memory, in MB, consumed by the task; nullable column
avg_cpu_load	float	average CPU load, in number of CPUs, for task (e.g., 2.00 means
		2 CPUs used); nullable column

### 4.4 Librarian Tables

### 4.4.1 lib\_server\_status

Librarian version of the server\_status table, see 4.2.1.

#### 4.4.2 lib\_status

High level Librarian status

Column	Type	Description
time	long	status time in floor(gps seconds)
num_files	long	total number of files in librarian
data_volume_gb	float	total data volume in gigabytes
free_space_gb	float	available space in gigabytes
upload_min_elapsed	float	minutes elapsed since last file upload
num_processes	integer	number of running background tasks
git_version	string	git version of Librarian code
git_hash	string	git hash of Librarian code

### 4.4.3 lib\_raid\_status

RAID controller status

Column	Type	Description
time	long	status time in floor(gps seconds)
hostname	string	name of RAID server
num_disks	int	number of disks in RAID server
info	text	TBD – various info from megaraid controller, may be several
		columns

#### 4.4.4 lib\_raid\_errors

RAID controller errors/issues

Column	Type	Description
id	long	auto-incrementing error id
time	long	error report time in floor(gps seconds)
hostname	string	name of RAID server with error
disk	string	name of disk with error
log	text	TBD on format, either a message or a file with the log

#### 4.4.5 lib\_remote\_status

Network bandwidth/health to all remote librarians

Column	Type	Description
time	long	status time in floor(gps seconds)
$remote\_name$	string	name of remote librarian
ping_time	float	ping time in seconds
num_file_uploads	int	number of files uploaded in last 15 minutes
bandwidth_mps	float	bandwidth to remote in Mb/s, 15 minute average

#### 4.4.6 lib\_files

File creation log

Column	Type	Description
filename	string	name of file created
obsid	long integer	observation identifier, foreign key into hera_obs table. Can be null.
time	long	file creation time in floor(gps seconds)
size_gb	float	file size in gigabytes

### 4.5 Correlator Tables

The correlator tables are not all defined yet. Notes on future plans are in section 5.1.

### ${\bf 4.5.1} \quad {\bf correlator\_config\_file}$

List of correlator config files, which specify detailed correlator settings. All files in this table are in the Librarian.

Column	Type	Description
config_hash	string	unique hash for the config
filename	string	name of the config file in the Librarian

### 4.5.2 correlator\_config\_status

Config status of the correlator, i.e. which config file is being used by the correlator.

Column	Type	Description
time	long	time of the config status in floor(gps seconds)
$config\_hash$	string	hash for the config in use, foreign key into correlator_config_file table.

#### 4.5.3 correlator\_control\_state

State of control knobs in correlator.

Column	Type	Description
time	long	time of the control state in floor(gps seconds)
state_type	string	type of control state, one of: 'taking_data', 'phase_switching', 'noise_diode'.
state	boolean	indicator of whether the state_type is true or false

#### 4.5.4 correlator\_control\_command

Commands issued to the correlator. If the command is 'take\_data' or 'update\_config', there will be a matching row in the 'correlator\_take\_data\_arguments' table or the 'correlator\_config\_command' table respectively with the values of the parameters in those commands.

Column	Type	Description
time	long	time the command was sent in floor(gps seconds)
command	string	command sent, one of: 'take_data', 'stop_taking_data',
		'phase_switching_on', 'phase_switching_off', 'noise_diode_on',
		'noise_diode_off', 'update_config'.

#### 4.5.5 correlator\_take\_data\_arguments

Records the arguments passed to the correlator 'take\_data' command.

Column	Type	Description
time	long	time the command was sent in floor(gps seconds), foreign key into
		correlator_control_command table
command	string	command sent, always 'take_data', foreign key into correla-
		tor_control_command table.
starttime_sec	long	time to start taking data in floor(gps seconds)
starttime_ms	integer	milliseconds to add to starttime_sec to set correlator start time
duration	float	duration to take data for in seconds. After this time, the correlator
		will stop recording
acclen_spectra	integer	accumulation length in spectra
integration_time	float	accumulation length in seconds, converted from acclen_spectra
		(the conversion is non-trivial and depends on the correlator set-
		tings)
tag	string	tag which will end up in data files as a header entry, one of:
		'engineering', 'science'.

### ${\bf 4.5.6 \quad correlator\_config\_command}$

Records the config passed to the correlator 'update\_config' command.

Column	Type	Description
time	long	time the command was sent in floor(gps seconds), foreign key into
		correlator_control_command table
command	string	command sent, always 'update_config', foreign key into correla-
		tor_control_command table.
$config\_hash$	string	hash for the config to use, foreign key into correlator_config_file
		table.

### 4.5.7 correlator\_software\_versions

Software version numbers for correlator software packages and scripts.

Column	Type	Description
time	long	time of the version report in floor(gps seconds)
package	string	name of the correlator software module or \package\:\script\ for daemonized processes (e.g. 'hera_corr_cm', 'udpSender:hera_node_keep_alive.py').
version	string	version string for this package or script

### 4.5.8 snap\_config\_version

 ${\bf SNAP}$  initialization configuration and software versions.

Column	Type	Description
$\mathbf{init\_time}$	long	time when the SNAPs were last initialized with the
		'hera_snap_feng_init.py' script in floor(gps seconds)
version	string	version string for the hera_corr_f package
init_args	string	arguments passed to the initialization script at runtime
config_hash	string	unique hash for the config, foreign key into correlator_config_file
		table

### 4.5.9 snap\_status

SNAP status information (reported via the correlator redis DB).

Column	Type	Description
time	long	status time in floor(gps seconds)
hostname	string	SNAP hostname
serial_number	string	SNAP serial number
node	int	node number (derived from config. management tables using
		SNAP serial number)
snap_loc_num	int	snap location number within the node (derived from config. man-
		agement tables using SNAP serial number)
psu_alert	bool	true if SNAP PSU (aka PMB) controllers have issued an alert,
		false otherwise.
pps_count	long	number of PPS pulses received since last programming cycle
fpga_temp	float	reported temperature of FPGA in degrees C
uptime_cycles	long	multiples of $500 \cdot 10^6$ ADC clocks since last programming cycle
last_programmed_time	long	last time this FPGA was programmed in floor(gps seconds)

#### 4.5.10 antenna\_status

Antenna status information from the SNAP (reported via the correlator redis DB).

Column	Type	Description
time	long	status time in floor(gps seconds)
antenna_number	int	antenna number
snap_hostname	string	SNAP hostname
snap_channel_number	int	SNAP ADC channel number (0-7) to which this antenna is con-
		nected.
adc_mean	float	mean ADC value, in ADC units (raw ADC integer values between
		-128 and +127). Typically $\sim$ -0.5.
adc_rms	float	RMS ADC value, in ADC units (raw ADC integer values between
		-128 and +127). Should be $\sim 10$ -20.
adc_power	float	mean ADC power, in ADC units squared (raw ADC integer values
		between $-128$ and $+127$ , squared). Since mean should be close to
		zero, this should just be adc_rms <sup>2</sup> .
pam_atten	int	PAM attenuation setting for this antenna, in dB
pam_power	int	PAM power sensor reading for this antenna, in dBm
psu_alert	bool	true if SNAP PSU (aka PMB) controllers have issued an alert,
		false otherwise.
eq_coeffs	string	digital EQ coefficients for this antenna, used for keeping the bit
		occupancy in the correct range. list of floats (one per freq. chan-
		nel) represented as a string. Note this these are not divided out
		anywhere in the DSP chain (!).

### 4.5.11 node\_sensor

Node temperature and humidity sensor readings

Column	Type	Description
time	long	measurement time in floor(gps seconds)
node	int	integer identifying the node
top_sensor_temp	float	temperature of top sensor reported by node in degrees C
middle_sensor_temp	float	temperature of middle sensor reported by node in degrees C
bottom_sensor_temp	float	temperature of bottom sensor reported by node in degrees C
humidity_sensor_temp	float	temperature of humidity sensor reported by node in degrees C
humidity	float	percent humidity measurement reported by node

### $\bf 4.5.12 \quad node\_power\_status$

Power status for SNAPs, FEMs and PAMs (monitored by nodes)

Column	Type	Description
time	long	measurement time in floor(gps seconds)
node	int	integer identifying the node
snap_relay_powered	bool	power status of the snap relay, True = powered
$snap0\_powered$	bool	power status of the SNAP 0 board, True = powered
snap1_powered	bool	power status of the SNAP 1 board, True = powered
snap2_powered	bool	power status of the SNAP 2 board, True = powered
snap3_powered	bool	power status of the SNAP 3 board, True = powered
fem_powered	bool	power status of the FEM, True = powered
pam_powered	bool	power status of the PAM, True = powered

#### 4.5.13 node\_power\_command

Commands issued to change the power status for SNAPs, FEMs and PAMs (via the nodes).

Column	Type	Description
time	long	time the command was sent in floor(gps seconds)
node	int	integer identifying the node commanded
part	string	part commanded, one of 'snap_relay', 'snap0', 'snap1', 'snap2',
		'snap3', 'pam', 'fem'.
command	string	command sent, 'on' or 'off'.

### 4.5.14 roach\_temperature (deprecated)

Roach (correlator fpga board) temperatures (deprecated 8/2018)

Column	Type	Description
time	long	measurement time in floor(gps seconds)
roach	string	name of roach (correlator fpga board)
ambient_temp	float	ambient temperature reported by the roach in degrees C
inlet_temp	float	inlet temperature reported by the roach in degrees C
oulet_temp	float	oulet temperature reported by the roach in degrees C
fpga_temp	float	fpga temperature reported by the roach in degrees C
ppc_temp	float	ppc temperature reported by the roach in degrees C

### 4.6 QA Info Tables

The QA tables are not all defined yet. Notes on future plans are in section 5.2.

### 4.6.1 metric\_list

List and descriptions of metrics used in antenna or array metrics.

Column	Type	Description
metric	string	name of metric
desc	string	description of metric

#### 4.6.2 ant\_metrics

Antenna metrics, by polarization and obsid. These are metrics, generally generated by hera\_qm, which are keyed to individual antennas. For example, hera\_qm.ant\_metrics will flag individual antennas as bad.

Column	Type	Description
obsid	long integer	observation identifier, foreign key into hera_obs table.
ant	integer	antenna number $(\geq 0)$
pol	string	polarization, 'x' or 'y'
metric	string	name of metric, foreign key into metric_list table.
mc_time	long integer	time report received by M&C in floor(gps seconds)
val	double	value of metric

#### 4.6.3 array\_metrics

Array metrics, by obsid. These are metrics, generally generated by hera\_qm, which are keyed to the overall array. For example, hera\_qm.firstcal\_metrics generates an overall decision whether the firstcal solutions were "good".

Column	Type	Description
obsid	long integer	observation identifier, foreign key into hera_obs table.
metric	string	name of metric, foreign key into metric_list table.
mc_time	long integer	time report received by M&C in floor(gps seconds)
val	double	value of metric

#### 4.7 Site Info Tables

The Site Info tables are not all defined yet.. Notes on future plans are in section 5.3.

#### 4.7.1 weather\_data

Weather data from KAT sensors

Column	Type	Description
time	long	status time in floor(gps seconds)
variable	string	name of weather variable (e.g. wind_speed, wind_direction, tem-
		perature)
value	float	value of the variable at this time

### 4.8 Configuration Management Tables

As described in section 3, there are five tables in the configuration management section of the database: (1) geo\_location, (2) station\_meta, (3) parts\_paper, (4) part\_info, (5) connections. The following tables summarize them with the following key:

#### 4.8.1 geo\_location

Column	Type	Description
station_name*	character	Name of position - never changes
	varying(64)	
$station\_type\_name*$	character	Type of station
	varying(64)	
datum	character	UTM datum
	varying(64)	
tile	character	UTM tile
	varying(64)	
northing	double preci-	UTM coordinate
	sion	
easting	double preci-	UTM coordinate
	sion	
elevation	double preci-	Elevation
	sion	
created_gpstime*	BigInt	GPS second of creation.

# 4.8.2 station\_type

Column	Type	Description
$station\_type\_name^*$	character	Station type name
	varying(64)	
prefix*	character	1-2 letter prefix for part station_name
	varying(64)	
description	character	Short description
	varying(64)	
plot_marker	character	Type of matplotlib marker
	varying(64)	

# **4.8.3** parts

Column	Type	Description
$hpn^*$	character	HERA part number
	varying(64)	
$hpn\_rev^*$	character	HPN revision letter (A-Z)
	varying(32)	
hptype*	character	HPN part type category
	varying(64)	
manufacturer_number	character	Unique serial number for each part
	varying(64)	
start_gpstime*	BigInt	GPS second when part/rev is activated.
stop_gpstime	BigInt	GPS second when part/rev is de-activated

# 4.8.4 part\_info

Column	Type	Description
$hpn^*$	character	HERA part number
	varying(64)	
$hpn\_rev^*$	character	HPN revision letter (A-Z)
	varying(32)	
posting_gpstime*	BigInt	GPS second information was posted
comment*	character	Comment
	vary-	
	ing(1024)	
library_file	character	Librarian filename (how to get it there?)
	varying(256)	

### 4.8.5 connections

Column	Type	Description
$upstream\_part^*$	character	Hera part number of upstream connection
	varying(64)	
$up\_part\_rev^*$	character	Hera part revision of upstream connection
	varying(32)	
$upstream\_output\_port^*$	character	Output port on upstream part
	varying(64)	
$downstream\_part^*$	character	Hera part number of downstream connection
	varying(64)	
$down\_part\_rev^*$	character	Hera part revision of downstream connection
	varying(32)	
downstream_input_port	character	Input port on downstream part
	varying(64)	
$start\_gpstime^*$	BigInt	GPS second when connection started
stop_gpstime	BigInt	GPS second when connection ended

#### 4.8.6 apriori\_antenna

Column	Type	Description
antenna*	text	antenna for which status holds
${ m start\_gpstime}^*$	BigInt	GPS second when status change becomes valid
stop_gpstime	BigInt	GPS second at end of status. None for last
status*	text	status enum message, one of 'passed_checks', 'needs_checking',
		'known_bad', 'not_connected'

#### 4.8.7 cm\_version

Column	Type	Description
${f update\_time^*}$	BigInt	GPS second when version set
git_hash*	character	git hash number for version
	varying(64)	

### 5 Future Plans

### 5.1 Correlator Table plans

The correlator tables are not all defined yet, the following are notes about suggestions and plans for correlator tables. Most of the correlator data will be recorded in a Redis database (a rolling log, ephemeral), that info needs to be grabbed and put in M&Ctables.

corr\_server\_status: Correlator version of the server\_status table, see 4.2.1, not yet implemented.

- 1. correlator on/off? \*\*this is a control\*\*
- 2. Bit statistics (overflows, ADC clipping, bit statistics after bit selects)
- 3. correlator network stats (dropped packets)
- 4. Firmware git hash
- 5. Fengine status
- 6. Xengine status (might be covered in corr\_server\_status)
- 7. Walsh on/off \*\*this is a control\*\* (correlator propagates to node)

- 8. Noise diode \*\*this is a control\*\* (correlator propagates to node)
- 9. correlator config (walsh patterns; scaling functions for FFT, bit selection)
- 10. Test mode outputs (results not control) very notional
  - a. Fengine sync test
  - b. Xengine test
  - c. Do at beginning and end of night.
  - d. Analog tests
    - 1. Noise diode status
    - 2. Temperature (i2c device)
    - 3. Walsh switching (on/off control. Make sure bit pattern is known and put into data set.)
- 11. SNAP information: all info reported through the correlator
  - a. Feed status
  - b. PAM status
- 12. Node information (from Arduino) (Dave, Jack, Zara, Matt Dexter (mdexter@berkeley.edu), Nima) All node info will be reported through the correlator.
  - a. Clock status info syncing
  - b. Temperatures (outside + inside, feed?)
  - c. Node M&Csoftware git hash

#### 5.1.1 Correlator interfaces complete:

These are done:

- 1. M&Cinformation the correlator needs to get and write into files
  - a. Antenna positions
- 2. New info added to correlator files (recorded in hera\_obs table)
  - a. obsid
  - b. duration
- 3. Node information (from Arduino) (Dave, Jack, Zara, Matt Dexter (mdexter@berkeley.edu), Nima) All node info will be reported through the correlator.
  - a. SNAP power states
  - b. Temperatures in nodes
  - c. Power PAM, FEM status (binary)

#### 5.2 QA Future Plans

These are some suggestions for the future, things we might like to see.

- 1. RTP/online systems
  - a. RFI statistics/info (this might be in ant\_metrics and array\_metrics now)
  - b. Calibration statistics (this might be in ant\_metrics and array\_metrics now)
  - c. LST repeatability
  - d. TBD other things that come up
- 2. Offline codes (Major work on how to implement this!! Not on the critical path):
  - a. TBD from offline analysis codes

## 5.3 Site Info Future Plans

The following are suggestions for the future, things we might like to see.

- 1. site power
- 2. network status

# 5.4 Other Future Ideas

- 1. Basic ionospheric monitoring
- 2. RFI monitoring