

# A Layout Control System for Model Railroads

Helmut Fieres December 4, 2024

# Contents

1	Intr	oduction	1
	1.1	Elements of a Layout Control System	2
	1.2	Standards, Components and Compatibility	3
	1.3	This Book	3
	1.4	The Chapters	4
	1.5	A final note	5
2	Gen	eral Concepts	7
	2.1	Layout Control Bus	7
	2.2	Hardware Module	8
	2.3	Nodes	8
	2.4	Ports	9
	2.5	Attributes	9
	2.6	Events	9
	2.7	DCC Subsystem	10
	2.8	Analog Subsystem	11
	2.9	Configuration Mode	11
	2.10	Operation Mode	12
	2.11	Summary	12
3	Mes	sage Formats	15
	3.1	LCS Message Format	16
	3.2	General Management	16
	3.3	Node and Port Management	17
	3.4	Event Management	18
	3.5	DCC Track Management	18
	3.6	DCC Locomotive Decoder Management	19
	3.7	DCC Accessory Decoder Management	20
	3.8	RailCom DCC Packet management	20
	3.9	Raw DCC Packet Management	21
	3.10	DCC errors and status	21
	3 11	Analog Engines	22

### CONTENTS

	3.12	Summary	22
4	Mes	sage Protocols	23
	4.1	Node startup	23
	4.2	Switching between Modes	24
	4.3	Setting a new Node Id	24
	4.4	Node Ping	25
	4.5	Node and Port Reset	25
	4.6	Node and Port Access	25
	4.7	Layout Event management	26
	4.8	General LCS Bus Management	27
	4.9	DCC Track Management	28
	4.10	Locomotive Session Management	28
	4.11	Locomotive Configuration Management	30
	4.12	Configuration Management using RailCom	30
	4.13	DCC Accessory Decoder Management	31
	4.14	Sending DCC packets	31
	4.15	Summary	32
${f A}$	Test	SS S	33
	A.1	Schematics	33
			33
		•	33
		•	34
	A.2	•	35
			35
			35
	A.3	v	35
	A.4		36
			36
			~ ~

# 1 Introduction

Model railroading. A fascinating hobby with many different facets. While some hobbyist would just like to watch trains running, others dive deeper into parts of their hobby. Some build a realistic scenery and model a certain time era with realistic operations. Others build locos and rolling equipment from scratch. Yet others enjoy the basic benchwork building, electrical aspects of wiring and control. They all have in common that they truly enjoy their hobby.

This little book is about the hardware and software of a layout control system for controlling a model railroad layout. Controlling a layout is as old as the hobby itself. I remember my first model railroad. A small circle with one turnout, a little steam engine and three cars. Everything was reachable by hand, a single transformer supplied the current to the locomotive. As more turnouts were added, the arm was not long enough any more, simple switches, electrical turnouts and some control wires came to the rescue. Over time one locomotive did not stay alone, others joined. Unfortunately, being analog engines, they could only be controlled by electric current to the track. The layout was thus divided into electrical sections. And so on and so on. Before you know it, quite some cabling and simple electrical gear was necessary.

Nearly four decades ago, locomotives, turnouts, signals and other devices on the layout became digital. With growing sophistication, miniaturization and the requirement to model operations closer and closer to the real railroad, layout control became a hobby in itself. Today, locomotives are running computers on wheels far more capable than computers that used to fill entire rooms. Not to mention the pricing. Turnout control and track occupancy detection all fed into a digital control system, allowing for very realistic operations.

The demands for a layout control system can be divided into three areas. The first area is of course **running** locomotives. This is what it should be all about, right? Many locomotives need to be controlled simultaneously. Also, locomotives need to be grouped into consists for large trains, such as for example a long freight train with four diesel engines and fifty boxcars. Next are the two areas **observe** and **act**. Track occupancy detection is a key requirement for running multiple locomotives and knowing where they are. But also, knowing which way a turnout is set, the current consumption of a track section are good examples for layout observation. Following observation is to act on the information gathered. Setting turnouts and signals or enabling a track section are good examples for acting on an observation.

Running, observing an acting requires some form of **configurations** and **operations** What used to be a single transformer, some cabling and switches has turned into computer controlled layout with many devices and one or more bus systems. Sophisticated layouts need a way to configure the locomotives, devices and manage operations of layouts. Enter the world of digital control and computers.

After several decades, there is today a rich set of product offerings and standards available. There are many vendors offering hardware and software components as well as entire systems. Unfortunately they are often not compatible with each other. Further-

more, engaged open software communities took on to build do it yourself systems more or less compatible with vendors in one or the other way. There is a lively community of hardware and software designers building hardware and software layout control systems more or less from scratch or combined using existing industry products.

# 1.1 Elements of a Layout Control System

Before diving into concept and implementation details, let's first outline what is needed and what the resulting key requirements are. Above all, our layout control system should be capable to simultaneously run locomotives and manage all devices, such as turnouts and signals, on the layout. The system should be easy to expand as new ideas and requirements surface that need to be integrated without major incompatibilities to what was already built.

Having said that, we would need at least a **base station**. This central component is the heart of most systems. A base station needs to be able to manage the running locomotives and to produce the DCC signals for the track where the running locomotive is. There are two main DCC signals to generate. One for the main track or track sections and one for the programming track. This is the track where a locomotive decoder can be configured. A base station could also be the place to keep a dictionary of all known locomotives and their characteristics. In addition to interfaces to issues commands for the running locomotives, there also need to be a way to configure the rolling stock.

Complementing the base station is the **booster** or **block controller** component that produce the electrical current for a track section. The booster should also monitor the current consumption to detect electrical shortages. Boosters comes in several ranges from providing the current for the smaller model scales as well as the larger model scales which can draw quite a few amps. There could be many boosters, one for each track section. The base station provides the signals for all of them.

The **cab handheld** is the controlling device for a locomotive. Once a session is established, the control knobs and buttons are used to run the locomotive. Depending on the engine model, one could imagine a range of handhelds from rather simple handhelds just offering a speed dial and a few buttons up to a sophisticated handheld that mimics for example a diesel engine cab throttle stand.

With these three elements in place and a communication method between them, we are in business to run engines. Let's look at the communication method. Between the components, called nodes, there needs to be a **communication bus** that transmits the commands between them. While the bus technology itself is not necessarily fixed, the messaging model implemented on top is. The bus itself has no master, any node can communicate with any other node by broadcasting a message, observed by all other nodes. Events that are broadcasted between the nodes play a central role. Any node can produce events, any node can consume events. Base station, boosters and handhelds are just nodes on this bus.

But layouts still need more. There are **signals**, **turnouts** and **track detectors** as well as **LEDs**, **switches**, **buttons** and a whole lot more things to imagine. They all need to be connected to the common messaging bus. The layout control system needs to provide not only the hardware interfaces and core firmware for the various device types

to connect, it needs to also provide a great flexibility to configure the interaction between them. Pushing for example a button on a control field should result in a turnout being set, or even a set of turnouts to guide a train through a freight-yard and so on.

Especially on larger layouts, **configuration** becomes quite an undertaking. The **configuration model** should therefore be easy and intuitive to understand. The elements to configure should all follow the same operation principles and be extensible for specific functions. A computer is required for configuration. Once configured however, the computer is not required for operations. The capacity, i.e. the number of locomotives, signals, turnouts and other devices managed should be in the thousands.

Configuration as well as operations should be possible through sending the defined messages as well as a simple ASCII commands send to the base station which in turn generates the messages to broadcast via the common bus. A computer with a graphical UI would connect via the USB serial interface using the text commands.

# 1.2 Standards, Components and Compatibility

The DCC family of standards is the overall guiding standard. The layout system assumes the usage of DCC locomotive decoder equipped running gear and DCC stationary decoder accessories. Beyond this set of standards, it is not a requirement to be compatible with other model railroad electronic products and communication protocols. This does however not preclude gateways to interact in one form or another with such systems. Am example is to connect to a LocoNet system via a gateway node. Right now, this is not in scope for our first layout system.

All of the project should be well documented. One part of documentation is this book, the other part is the thoroughly commented LCS core library and all software components built on top. Each lesson learned, each decision taken, each tradeoff made is noted, and should help to understand the design approach taken. Imagine a fast forward of a couple of years. Without proper documentation it will be hard to remember how the whole system works and how it can be maintained and enhanced.

With respect to the components used, it uses as much as possible off the shelf electronic parts, such as readily available microcontrollers and their software stack as well as electronic parts in SMD and non-SMD form, for building parts of the system. The concepts should not restrict the development to build it all from scratch. It should however also be possible to use more integrated elements, such as a controller board and perhaps some matching shields, to also build a hardware module.

#### 1.3 This Book

This book will describe my version of a layout control system with hardware and software designed from the ground up. The big question is why build one yourself. Why yet another one? There is after all no shortage on such systems readily available. And there are great communities out there already underway. The key reason for doing it yourself is that it is simply fun and you learn a lot about standards, electronics and programming

by building a system that you truly understanding from the ground up. To say it with the words of Richard Feynman

"What I cannot create, I do not understand. – Richard Feynman"

Although it takes certainly longer to build such a system from the ground up, you still get to play with the railroad eventually. And even after years, you will have a lay out control system properly documented and easy to support and enhance further. Not convinced? Well, at least this book should be interesting and give some ideas and references how to go after building such a system.

## 1.4 The Chapters

The book is organized into several parts and chapters. The first chapters describe the underlying concepts of the layout control system. Hardware modules, nodes, ports and events and their interaction are outlined. Next, the set of message that are transmitted between the components and the message protocol flow illustrate how the whole system interacts. With the concepts in place, the software library available to the node firmware programmer is explained along with example code snippets. After this section, we all have a good idea how the system configuration and operation works. The section is rounded up with a set of concrete programming examples.

Perhaps the most important part of a layout control system is the management of locomotives and track power. After all, we want to run engines and play. Our system is using the DCC standard for running locomotives and consequently DCC signals need to be generated for configuring and operating an engine. A base station module will manage the locomotive sessions, generating the respective DCC packets to transmit to the track. Layouts may consist of a number of track sections for which a hardware module is needed to manage the track power and monitor the power consumption. Finally, decoders can communicate back and track power modules need to be able to detect this communication. Two chapters will describe these two parts in great detail.

The next big part of the book starts with the hardware design of modules. First the overall outline of a hardware module and our approach to module design is discussed. Building a hardware module will rest on common building blocks such as a CAN bus interface, a microcontroller core, H-Bridges for DCC track signal generation and so on. Using a modular approach the section will describe the building blocks developed so far. It is the idea to combine them for the purpose of the hardware module.

With the concepts, the messages and protocol, the software library and the hardware building blocks in place, we are ready to actually build the necessary hardware modules. The most important module is the base station. Next are boosters, block controllers, handhelds, sensor and actor modules, and so on. Finally, there are also utility components such as monitoring the DCC packets on the track, that are described in the later chapters. Each major module is devoted a chapter that describes the hardware building blocks used, additional hardware perhaps needed, and the firmware developed on top of the core library specifically for the module. Finally, there are several appendices with reference information and further links and other information.

#### 1.5 A final note

A final note. "Truly from the ground up" does not mean to really build it all yourself. As said, there are standards to follow and not every piece of hardware needs to be built from individual parts. There are many DCC decoders available for locomotives, let's not overdo it and just use them. There are also quite powerful controller boards along with great software libraries for the micro controllers, such as the CAN bus library for the AtMega Controller family, already available. There is no need to dive into all these details.

The design allows for building your own hardware just using of the shelf electronic components or start a little more integrated by using a controller board and other break-out boards. The book will however describe modules from the ground up and not use controller boards or shields. This way the principles are easier to see. The appendix section provides further information and links on how to build a system with some of the shelf parts instead of building it all yourself. With the concepts and software explained, it should not be a big issue to build your own mix of hardware and software.

I have added most of the source files in the appendix for direct reference. They can also be found also on GitHub. (Note: still to do...) Every building block schematic shown was used and tested in one component or another. However, sometimes the book may not exactly match the material found on the web or be slightly different until the next revision is completed. Still, looking at portions of the source in the text explain quite well what it will do. As said, it is the documentation that hopefully in a couple of years from now still tells you what was done so you can adapt and build upon it. And troubleshoot.


The book hopefully also helps anybody new to the whole subject with good background and starting pointers to build such a system. I also have looked at other peoples great work, which helped a lot. What I however also found is that often there are rather few comments or explanations in the source and you have to partially reverse engineer what was actually build for understanding how things work. For those who simply want to use an end product, just fine. There is nothing wrong with this approach. For those who want to truly understand, it offers nevertheless little help. I hope to close some of these gaps with a well documented layout system and its inner workings.

In the end, as with any hobby, the journey is the goal. The reward in this undertaking is to learn about the digital control of model railroads from running a simple engine to a highly automated layout with one set of software and easy to build and use hardware components. Furthermore, it is to learn about how to build a track signaling system that manages analog and digital engines at the same time. So, enjoy.

# CHAPTER 1. INTRODUCTION

# 2 General Concepts

At a higher level, the layout control system consists of components and a communication scheme. This chapter will define the key concepts of a layout system. At the heart of the layout control system is a common communication bus to which all modules connect. The others key elements are node, events, ports and attributes. Let's define these items first and then talk about how they interact. The following figure depicts the high level view of a layout control system.

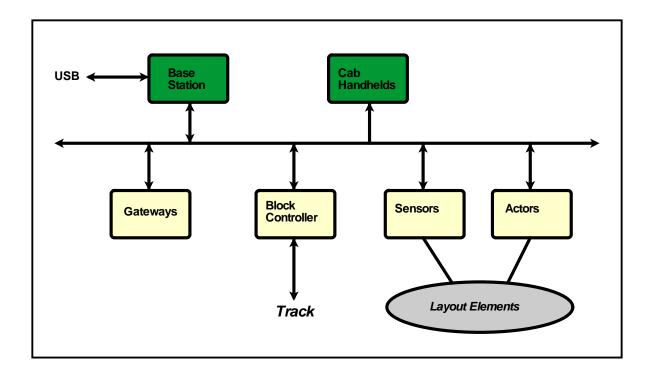

# 2.1 Layout Control Bus

The layout control bus is the backbone of the entire system. The current implementation is using the industry standard CAN bus. All hardware modules connect to this bus and communicate via messages. All messages are broadcasted and received by all other hardware modules on the bus. The classic CAN bus standard limits the message size to 8 bytes and this is therefore the maximum message size chosen for the LCS bus. The CAN bus also has a hardware module limit of about 110 modules for bandwidth reasons. But even for a large layout this should be sufficient. And for really large layouts, another bus system or a system with CAN bus routers, could be envisioned. The software should therefore be designed to manage thousands of connected modules. While the CAN bus technology could be exchanged, the message format and size defined as well as the broadcasting paradigm are fixed in the overall design and will not change.

#### 2.2 Hardware Module

Everything connected to the LCS bus is a **hardware module**, which is the physical entity connected to the bus. Typically it is a micro controller with the bus interface and hardware designed for the specific purpose. For example, a CAN bus interface, an AtMega Controller, and digital output drivers could form a hardware module to control railroad turnouts and signals. Base stations, handhelds and gateways are further examples of a hardware module. Hardware modules are expected to be physically located near their use and thus spread throughout the layout. Some hardware modules could be at locations that cannot be reached easily. So all interaction for configuration and operations needs to be possible through the messages on the bus. Nevertheless, putting local controls on a hardware module should not be prohibited.

A hardware module consists of a controller part and a node specific part. The controller part is the **main controller**, which consists of the controller chip, a non-volatile memory to retain any data across power down, a CAN bus interface and interfaces to the node specific hardware. The node specific hardware is called the **node extension**. Conceptually, both parts can be one monolithic implementation on one PCB board, but also two separate units connected by the extension connector. The are defined connectors between the boards. The hardware chapter will go into more detail on the board layouts and hardware design options.

#### 2.3 Nodes

A hardware module is the physical implementation. A **node** is the software entity running in the firmware of the hardware module. Nodes are the processing elements for the layout. Conceptually, a hardware module can host more than one node. The current implementation however supports only one node on a given hardware module. A node is uniquely identified through the **node identifier**. There are two ways to set a nodeId. The first is to have central component to assign these numbers on request. The second method sets the number manually. Although a producer consumer scheme would not need a nodeId, there are many operations that are easier to configure when explicitly talking to a particular node. Both nodes and event identifiers are just numbers with no further classification scheme. A configuration system is expected to provide a classification grouping of nodes and event number ranges if needed.

A node also has a **node type**, to identify what the node is capable of. Examples of nodes types are the base station, a booster, a switch module, a signal control module, and so on. While the node number is determined at startup time and can change, the node type is set via the module firmware. As the node type describes what the hardware module can do the type cannot change unless the module changes. Once the node has an assigned node number, configuration tools can configure the node via configuration messages to set the respective node variables.

A node needs to be configured and remember its configuration. For this purpose, each node contains a **node map** that keeps all the information about the node, such as the number of ports, the node unique Id and so on. There is also a small set of user definable attributes to set data in a node map specific to the node. The data is stored

in non-volatile memory space and on power up the node map is used to configure the node. If the module is a new module, or a module previously used in another layout, or the firmware version requires a new data layout of the node map, there is a mechanism to assign a new node number and initialize the node map with default values.

### 2.4 Ports

A node has a set of receiving targets, called ports. Ports connect the hardware world to the software world, and are the connection endpoints for events and actions. For example, a turnout digital signal output could be represented to the software as a port on a node. The node registers its interest in the event that target the signal. An event sent to the node and port combination then triggers a callback to the node firmware to handle the incoming events. Although a node can broadcast an event anytime by just sending the corresponding message, the event to send is typically associated with an outbound port for configuration purposes. In addition to the event immediate processing, the event handling can be associated with a timer delay value. On event reception the timer value will delay the event callback invocation or broadcast.

A node has a **port map** that contains one entry for each defined port. **port map entries** describe the configuration attributes and state of the port such as the port type. There is also a small set of user definable attributes to set data in a port map entry specific to the port. These attributes can be used by the firmware programmer to store port specific data items such as a hardware pin or a limit value in the port map.

#### 2.5 Attributes

Node attributes and port attributes are conceptually similar to the CV resources in a DCC decoder. Many decoders, including the DCC subsystem decoders, feature a set of variables that can be queried or set. The LCS layout system implements a slightly different scheme based on items. In contrast to a purely decoder variable scheme an item can also just represent just an action such as setting an output signal. Items are passed parameter data to further qualify the item. Items are just numbers assigned. The range of item numbers is divided into a reserved section for the layout system itself, and a user defined range that allows for a great flexibility to implement the functions on a particular node and port. The meaning of user defined items is entirely up to the firmware programmer. If it is desired to have a variables, a combination of items and attributes can provide the traditional scheme as well. In addition, there are node local variables, called attributes, available to the firmware programmer for storing data items.

#### 2.6 Events

The LCS message bus, hardware module, node and ports describe layout and are statically configured. For nodes to interact, **events** and their configuration is necessary. An event is a message that a node will broadcast via the bus. Every other node on this bus will receive the event and if interested act on the event. The sender is the producer, the

receiver is the consumer. Many producers can produce the same event, many consumers can act on the same event. The **event Id**, a 16 bit number, is unique across the layout and assigned by a configuration tool during the configuration process. Other than being unique, there is no special meaning, the number is arbitrary. There are in total 65536 events available.

In addition to the event Id, an event message contains the node Id of the sender. While most events will be an ON/OFF event, events can also have additional data. For example an overload event sent by a booster node, could send the actual current consumption value in the event message. A consumer node registers its interest in an event by being configured to react to this event on a specific port. The node maintains an **event map**, which contains one entry for each event id / port id combination. For the eventing system to work, the nodeID is not required. Any port on any node can react to an event, any node can broadcast an event.

To connect producers to consumers, both parties need to be told what to do with a defined event. A producer node outbound port needs to be told what event to send for a given sensor observation. For example, a simple front panel push button needs to be told what event to send when pushed. Likewise, a consumer node inbound port needs to be told what events it is interested in and what the port should do when this event is received. Both meet through the event number used. While an inbound port can be configured to listen to many event Ids, an outbound port will exactly broadcast one eventId.

Any port on any node can react to an event, any node can broadcast an event. Still, addressing a node and port combination explicitly is required for two reasons. The first is of course the configuration of the node and port attributes. Configuration data needs to go directly to the specified node and port. The second reason is for directly accessing a resource on the layout. For example, directly setting a turnout connected to one node. While this could also be implemented with associated an event to send when operating a turnout, it has shown beneficial and easier to configure also directly access such a resource through a dedicated node/port address.

### 2.7 DCC Subsystem

The node, ports and events are the foundation for building a layout system based on the producer / consumer scheme. The scheme will be used heavily for implementing turnout control, signals, signal blocks and so on. In addition, there is the management of the mobile equipment, i.e. locomotives. The DCC subsystem is the other big part of our layout control system. In a sense it is another bus represented by the track sections.

LCS messages for DCC commands are broadcasted from controlling devices. For example, a handheld broadcasts a speed setting DCC command. In a layout there is one base station node which is responsible to produce the DCC signals for the track. The DCC signals are part of the physical LCS bus. While a base station design could directly supply the signal current to the track, larger layouts will typically have one or more boosters. They take the DCC signal from the LCS bus lines and generate the DCC signal current for their track section. All LCS messages for DCC operations are broadcasting messages, all nodes can send them, all nodes can receive them. Handhelds,

base station and boosters are thus just nodes on the LCS bus. Only the base station will however generate the DCC signal.

The DCC standard defines mobile and stationary decoders. The DCC signal could also be used to control for example a set of turnouts via a stationary decoder. The LCS DCC message set contains messages for addressing a stationary decoder. Since the commands for stationary equipment are just DCC commands, they will be transmitted via the track as well and take away bandwidth on the track. A layout will therefore more likely use the LCS bus for implementing the management of stationary equipment. Besides, the producer / consumer model allows for a much greater flexibility when building larger and partially automated layouts.

## 2.8 Analog Subsystem

The layout control system is primarily a digital control system. There are however layout use cases where there are many analog locomotives that would represent a significant investment when converting to DCC or that cannot easily be equipped with a DCC decoder. In a DCC subsystem the decoder is in the locomotive and many locomotives can run therefore on the same track. In an analog system, the locomotive has no capabilities and therefore the track needs to be divided into sections that can be controlled individually. One locomotive per section is the condition. In a sense the decoder becomes part of the track section. The layout control system offers support for building such a track section subsystem. Often the sections are combined into blocks and build the foundation for a block signaling system. Note that the rest of the layout control system is of course digital. What is typically the booster to support a section of track, is the block controller for an analog layout. We will see in the later chapters that booster and block controller are very similar and design a block controller to accommodate both use cases.

# 2.9 Configuration Mode

Before operations the nodes, ports and events need to be configured. Once a node has an assigned valid nodeld, the node configuration is the process of configuring a node global information, the event map information and the finally the port information. The information is backed by non-volatile storage, such that there is a consistent state upon node power up. During operations, these value can of course change, but are always reset to the initial value upon startup.

The primary process of configuration is inventing events numbers and assigning them producers and consumers. The process follows the general "if this then that" principle. On the producer side the configuration process assigns a port to an event, i.e. the push of a button to an event to send. If this button is pushed then send that event. On the consumer side the configuration process is to assign the event to a port. If this event is received then execute that port action.

After the node is up and running with a valid node Id, there are event configuration messages than can be send to the node to set the event mapping table with this information. The event map table is the mapping between the event and the port associated.

Events are thus configured by "teaching" the target node what port to inform about an occurring event.

# 2.10 Operation Mode

Besides the basic producer/consumer model with the event messages as communication mechanism, there are several LCS control and info messages used for managing the overall layout with signals turnouts and so on as well as the physical track and the running equipment. In a layout, the track typically consist of one or more sections, each managed by a booster or block controller node. Track sections are monitored for their power consumption to detect short circuits. Back communication channels such as RailCom are handled by the booster node and provide information about the running equipment. Stationary equipment such as turnouts and signals as well as detectors, such as track occupancy detectors or turnout setting detectors are monitored and controlled through LCS messages and the event system. Conceptually any node can send and receive such event, info or control messages. Some nodes, however have a special role.

For example, the key module for layout operations is the **base station**. The base station, a node itself, is primarily responsible for managing the active locomotives on the layout. When a control handheld wants to run a locomotive, a cab session for that locomotive is established by the base station. Within the session, the locomotive speed, direction and functions are controlled through the cab handheld sending the respective messages. The base station is responsible for generating the DCC packets that are sent by the booster or block controller power module to the actual track sections. Booster and block controller module are - you guessed it - node themselves.

Finally, there are LCS nodes that represent cab handhelds to control a locomotive or consists, layout panel connectors, gateways to other layout protocols, sensors and actors to implement for example turnout control, signaling, section occupancy detections and many more. All these components share the common LCS bus and use ports and events to implement the capabilities for operating a layout.

In a layout with many track sections the **block controller** is a special node that will manage a block on the layout. Like all other nodes, a block controller itself is a node that can react to events and is controller and monitored by LCS messages. There will be several chapters devoted to this topic later.

### 2.11 Summary

This chapter introduced the basic concepts of the layout control system described in this book. It follows very few overall guiding principles. Above all, there is the clear separation of what needs to be available for operating the mobile equipments, i.e. locomotives, and the stationary layout elements. Controlling mobile decoders are left to the DCC subsystem, all other communication takes place via the LCS bus, which is the bus to which all of the hardware modules connect. Hardware modules host the nodes. Currently, a hardware module hosts exactly one node. A node can contains one or many ports, which are the endpoints for the event system. There is a set of user allocated attributes available

#### CHAPTER 2. GENERAL CONCEPTS

to node and ports. Node, port and attribute data are backed by non-volatile memory, so that a restart will use defined initial values. Nodes and their ports are also directly addressable, which is needed for configuration purposes and the directly addressable components model. Using the producer / consumer paradigm, sensors generate events and interested actors just act on them. The configuration process is simply to assign the same event to the producer node and consumer node / port id when they should work together.

The communication bus should rest on a reliable bus with a sufficient bandwidth. Although the CAN bus is used in the initial implementation, it is just one option and other technologies can be considered. In all cases however, the message format should be available for a variety of bus technologies. Our messages are therefore short, up to eight data bytes. This causes on the one hand some complexity for data items larger than a few bytes on the other hand no messages blocks the bus for a longer period. The bus technology is expected to reliably deliver a message but does not ensure its processing. This must be ensured through a request reply message scheme built on top.

# CHAPTER 2. GENERAL CONCEPTS

# 3 Message Formats

Before diving into the actual design of the software and hardware components, let us first have a look at the message data formats as they flow on the layout control bus. It is the foundation of the layout control subsystem. This chapter will provide the overview on the available messages and give a short introduction to what they do. Later chapters build on it and explain how the messages are used for designing LCS node functions.

All nodes communicate via the layout control bus by broadcasting messages. Every node can send a message, and every node receives the message broadcasted. There is no central master.

a picture to show a node sending

Since all nodes receive all messages, a node needs to decide whether to react to a message or not. General management and emergency type messages are handled by all nodes. A reply to a specific request will only be handled by the requesting node. The layout control system defines a fairly large set of messages, which can be grouped into several categories:

- General management
- Node and Port management
- Event management
- DCC Track management
- DCC Locomotive Decoder management
- DCC Accessory Decoder management
- RailCom DCC Packet management
- Raw DCC Packet management

The current implementation is using the CAN bus, which ensures by definition that a message is correctly transmitted. However, it does not guarantee that the receiver actually processed the message. For critical messages, a request-reply scheme is implemented on top. Also, to address possible bus congestion, a priority scheme for messages is implemented to ensure that each message has a chance for being transmitted.

## 3.1 LCS Message Format

A message is a data packet of up to 8 bytes. The first byte represents the operation code. It encodes the length of the entire packet and opcode number. The first 3 bits represent the length of the message, the remaining 5 bits represent the opCode. For a given message length, there are 32 possible opcode numbers. The last opcode number in each group, 0x1F, is reserved for possible extensions of the opcode number range. The remaining bytes are the data bytes, and there can be zero to seven bytes.

The message format is independent of the underlying transport method. If the bus technology were replaced, the payload would still be the same. For example, an Ethernet gateway could send those messages via the UDP protocol. The messages often contain 16-bit values. They are stored in two bytes, the most significant byte first and labeled "xxx-H" in the message descriptions to come. The message format shown in the tables of this chapter just presents the opCode mnemonic. The actual value can be found in the core library include file.

The byte fields names in an LCS message are explained in greater detail when we discuss the runtime library. For this chapter, the term npId-x will refer to node/port identifier, the term sId to a locomotive session. The remaining message field names, such as UID or spDir are fairly self-explaining.

# 3.2 General Management

The general management message group contains commands for dealing with the layout system itself. The reset command (RESET) directs all hardware modules, a node, or a port on a node to perform a reset. The entire bus itself can be turned on and off (BUS-ON, BUS-OFF), enabling or suppressing the message flow. Once the bus is off, all nodes wait for the bus to be turned on again. Finally, there are messages for pinging a node (PING) and request acknowledgement (ACK/ERR).

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
RESET	npId-H	npId-L	flags				
BUS-ON							
BUS-OFF							
SYS-TIME	arg1	arg2	arg3	arg4			
LCS-INFO	arg1	arg2	arg3	arg4			
PING	npId-H	npId-L					
ACK	npId-H	npId-L					
ERR	npId-H	npId-L	code	arg1	arg2		

Table 3.1: General Management

#### Additional Notes

• Do we need a message for a central system time concept?

- Do we need a message for a message that describes the global LCS capabilities?
- Do we need an emergency stop message that every node can emit?

# 3.3 Node and Port Management

When a hardware module is powered on, the first task is to establish the node Id in order to broadcast and receive messages. The (REQ-NID) and (REP-ID) messages are the messages used to implement the protocol for establishing the nodeId. More on this in the chapter on message protocols. A virgin node has the hardware module-specific node type and a node Id of NIL also be set directly through the (SET-NID) command. This is typically done by a configuration tool.

Table 3.2:	Node	and Port	Management

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
REQ-NID	nId-H	nId-L	nUID-4	nUID-3	nUID-2	nUID-1	flags
REP-NID	nId-H	nId-L	nUID-4	nUID-3	nUID-2	nUID-1	flags
SET-NID	nId-H	nId-L	nUID-4	nUID-3	nUID-2	nUID-1	flags
NCOL	nId-H	nId-L	nUID-4	nUID-3	nUID-2	nUID-1	

All nodes monitor the message flow to detect a potential node collision. This could be for example the case when a node from one layout is installed in another layout. When a node detects a collision, it will broadcast the (NCOL) message and enter a halt state. Manual interaction is required. A node can be restarted with the (RES-NODE) command, given that it still reacts to messages on the bus. All ports on the node will also be initialized. In addition a specific port on a node can be initialized. The hardware module replies with an (ACK) message for a successful node Id and completes the node Id allocation process. As the messages hows, node and port ID are combined. LCS can accommodate up to 4095 nodes, each of which can host up to 15 ports. A Node ID 0 is the NIL node. Depending on the context, a port Id of zero refers all ports on the node or just the node itself.

The query node (NODE-GET) and node reply messages (NODE-REP) are available to obtain attribute data from the node or port. The (NODE-SET) allows to set attributes for a node or port for the targeted node. Items are numbers assigned to a data location or an activity. There are reserved items such as getting the number of ports, or setting an LED. In addition, the firmware programmer can also define items with node specific meaning. The firmware programmer defined items are accessible via the (NODE-REQ) and (NODE-REP) messages.

Nodes do not react to attribute and user defined request messages when in operations mode. To configure a node, the node needs to be put into configuration mode. The (OPS) and (CFG) commands are used to put a node into configuration mode or operation mode. Not all messages are supported in operations mode and vice versa. For example, to set a new nodeId, the node first needs to be put in configuration mode. During configuration mode, no operational messages are processed.

Table 3.3: Node and Port Management

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
NODE-GET	npId-H	npId-L	item	arg1-H	arg1-L	arg2-H	arg2-L
NODE-PUT	npId-H	npId-L	item	val1-H	val1-L	val2-H	val2-L
NODE-REQ	npId-H	npId-L	item	arg1-H	arg1-L	arg2-H	arg2-L
NODE-REP	npId-H	npId-L	item	arg1-H	arg1-L	arg2-H	arg2-L

Table 3.4: Node and Port Management

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
	npId-H	1 *					
CFG	npId-H	npId-L					

# 3.4 Event Management

The event management group contains the messages to configure the node event map and messages to broadcast an event and messages to read out event data. The (SET-NODE) with the item value to set and remove an event map entry from the event map is used to manage the event map. An inbound port can register for many events to listen to, and an outbound port will have exactly one event to broadcast. Ports and Events are numbered from 1 onward. When configuring, the portId NIL has a special meaning in that it refers to all portIds on the node.

Table 3.5: Event Management

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
EVT-ON EVT-OFF EVT	npId-H		evId-H	evId-L	arg-H	arg-L	

# 3.5 DCC Track Management

Model railroads run on tracks. Imagine that. While on a smaller layout, there is just the track, the track on a larger layout is typically divided into several sections, each controlled by a track node (centralized node or decentralized port). The system allows to report back the track sections status (in terms of occupied, free, and detecting the number of engines currently present). These messages allow the control of turnouts and monitoring of sections' status.

Table 3.6: DCC Track Management

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
TON TOF	npId-H npId-H	npId-L npId-L					

# 3.6 DCC Locomotive Decoder Management

Locomotive management comprises the set of messages that the base station uses to control the running equipment. To control a locomotive, a session needs to be established (REQ-LOC). This command is typically sent by a cab handheld and handled by the base station. The base station allocates a session and replies with the (REP-LOC) message that contains the initial settings for the locomotive speed and direction. (REL-LOC) closes a previously allocated session. The base station answers with the (REP-LOC) message. The data for an existing DCC session can requested with the (QRY-LOC) command. Data about a locomotive in a consist is obtained with the (QRY-LCON) command. In both cases the base station answers with the (REP-LOC) message.

Table 3.7: DCC Locomotive Decoder Management

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
REQ-LOC	adr-H	adr-L	flags				
REP-LOC	sId	adr-H	adr-L	spDir	fn1	fn2	fn3
REL-LOC	sId						
QRY-LOC	sId						
QRY-LCON	conId	index					

Once the locomotive session is established, the (SET-LSPD), (SET-LMOD), (SET-LFON), (SET-LOF) and (SET-FGRP) are the commands sent by a cab handheld and executed by the base station to control the locomotive speed, direction and functions. (SET-LCON) deals with the locomotive consist management and (KEEP) is sent periodically to indicate that the session is still alive. The locomotive session management is explained in more detail in a later chapter when we talk about the base station.

Locomotive decoders contain configuration variables too. They are called CV variables. The base station node supports the decoder CV programming on a dedicated track with the (REQ-CVS), (REP-CVS) and (SET-CVS) messages. The (SET-CVM) message supports setting a CV while the engine is on the main track. (DCC-ERR) is returned when an invalid operation is detected.

The SET-CVM command allows to write to a decoder CV while the decoder is on the main track. Without the RailCom channel, CVs can be set but there is not way to validate that the operation was successful.

Data2 Data3 Opcode Data1 Data4 Data5 Data6 Data7 SET-LSPD  $\operatorname{sId}$ spDir SET-LMOD  $\operatorname{sId}$ flags SET-LFON  $\operatorname{sId}$ fNum SET-LFOF  $\operatorname{sId}$ fNum SET-FGRP sIdfGrp data SET-LCON  $\operatorname{sId}$ conId flags KEEP  $\operatorname{sId}$ 

Table 3.8: DCC Locomotive Decoder Management

Table 3.9: DCC Locomotive Decoder Management

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
SET-LSPD	sId	cv-H	cv-L	mode	val		
REQ-CVS	cv-H	cv-L	mode	val			
REP-CVS	cv-H	cv-L	val				
SET-CVS	cv-H	cv-L	mode	val			

# 3.7 DCC Accessory Decoder Management

Besides locomotives, the DCC standards defines stationary decoders, called accessories. An example is a decoder for setting a turnout or signal. There is a basic and an extended format. The (SET-BACC) and (SET-EACC) command will send the DCC packets for stationary decoders. Similar to the mobile decoders, there are POM / XPOM messages to access the stationary decoder via RailCom capabilities.

Table 3.10: DCC Accessory Decoder Management

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
SET-BACC SET-EACC							

These commands are there for completeness of the DCC control interfaces. There could be devices that are connected via the DCC track that we need to support. However, in a layout control system the setting of turnouts, signals and other accessory devices are more likely handled via the layout control bus messages and not via DCC packets to the track. This way, there is more bandwidth for locomotive decoder DCC packets.

### 3.8 RailCom DCC Packet management

With the introduction of the RailCom communication channel, the decoder can also send data back to a base station. The DCC POM and XPOM packets can now not only

write data but also read out decoder data via the RailCom back channel. The following messages allow to send the POM / XPOM DCC packets and get their RailCom based replies.

<u> </u>							
Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
SET-MPOM	sId	ctrl	arg1	arg2	arg3	arg4	
REQ-MPOM	sId	ctrl	arg1	arg2	arg3	arg4	
REP-MPOM	sId	ctrl	arg1	arg2	arg3	arg4	
SET-APOM	adr-H	adr-L	ctrl	arg1	arg2	arg3	arg4
REQ-APOM	adr-H	adr-L	ctrl	arg1	arg2	arg3	arg4
REP-APOM	adr-H	adr-L	ctrl	arg1	arg2	arg3	arg4

Table 3.11: RailCom DCC Packet management

The XPOM messages are DCC messages that are larger than what a CAN bus packet can hold. With the introduction of DCC-A such a packet can hold up to 15 bytes. The LCS messages therefore are sent in chunks with a frame sequence number and it is the responsibility of the receiving node to combine the chunks to the larger DCC packet.

## 3.9 Raw DCC Packet Management

The base station allows to send raw DCC packets to the track. The (SEND-DCC3), (SEND-DCC4), (SEND-DCC5) and (SEND-DCC6) are the messages to send these packets. Any node can broadcast such a message, the base station is the target for these messages and will just send them without further checking. So you better put the DCC standard document under your pillow.

	10010	,,, <u>,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,</u>	DCC 1	COLICO TVIC	211105	0	
Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
SEND-DCC3	arg1	arg2	arg3				
SEND-DCC4	arg1	arg2	arg3	arg4			
SEND-DCC5	arg1	arg2	arg3	arg4	arg5		
SEND-DCC6	arg1	arg2	arg3	arg4	arg5	arg6	

Table 3.12: RRaw DCC Packet Management

The above messages can send a packet with up to six bytes. With the evolving DCC standard, larger messages have been defined. The XPOM DCC messages are a good example. To send such a large DCC packet, it is decomposed into up to four LCS messages. The base station will assemble the DCC packet and then send it.

#### 3.10 DCC errors and status

Some DCC commands return an acknowledgment or an error for the outcome of a DCC subsystem request. The (DCC-ACK) and (DCC-ERR) messages are defined for this purpose.

Table 3.13: RRaw DCC Packet Management

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
SEND-DCCM	ctrl	arg1	arg2	arg3	arg4		

Table 3.14: RRaw DCC Packet Management

Opcode	Data1	Data2	Data3	Data4	Data5	Data6	Data7
DCC-ACK							
DCC-ERR	code	arg1	arg2				

# 3.11 Analog Engines

The messages defined for the DCC locomotive session management as outlined above are also used for the analog engines. An analog engine will just like its digital counterpart have an allocated locomotive session and the speed/dir command is supported. All other commands will of course not be applicable. The speed/dir command will be sent out on the bus and whoever is in control of the track section where the analog engine is supposed to be, will manage that locomotive. In the following chapters we will answer the question of how exactly multiple analog engines can run on a layout.

# 3.12 Summary

The layout system is a system of nodes that talk to each other. At the heart are consequently messages. The message format is built upon an 8-byte message format that is suitable for the industry standard CAN bus. Although there are many other standards and communication protocols, the CAN bus is a widely used bus. Since all data is encoded in the message, there is no reason to select another communication media. But right now, it is CAN.

# 4 Message Protocols

This chapter will present how the messages presented in the previous chapter are used to form the protocols for layout configuration and operations. We begin with node management and port management. Next, the event system is described. Finally, the DCC locomotive and track management related commands and messages round up this chapter. The protocols are described as a set of high level messages flow from requestor to receiver and back.

### 4.1 Node startup

Node startup includes all the software steps to initialize local data structures, hardware components and whatever else the hardware module requires. To the layout system, the node needs to be uniquely identified across the layout. A configuration software will use the nodeId to manage the node. The (REQ-NID) and (REP-NID) messages are used to establish the nodeId on node startup. On startup the current nodeId stored in the module non-volatile memory is broadcasted. The (REQ-NID) message also contains the node UID. This unique identifier is created when the node is first initialized and all non-volatile data structures are built. The UID will not change until the node is explicitly re-initialized again.

After sending the (REQ-NID) message the node awaits the reply (REP-NID). The reply typically comes from a base station node or configuration software. In fact, any node can take on the role of assigning nodelds. But a layout can only have one such node in charge of assigning nodelds. The reply message contains the UID and the nodeld assigned. For a brand new module, this is will the node nodeld from now on.

Table 4.1: Node startup

node	base Station
REQ-NID (nodeId, nodeUID) ->	<pre>&lt;- REP-NID (nodeId, nodeUID) or timeout</pre>

The nodeUID plays an important role to detect nodeId conflicts. If there are two modules with the same nodeId, the nodeUID is still different. A requesting node will check the (REP-NID) answer, comparing the nodeUID in the message to its own nodeUID. If the UID matches, the nodeId in the message will be the nodeId to set. Note that it can be the one already used, or a new nodeId. If the UIDs do not match, we have two nodes assigned the same nodeId. Both nodes will enter the collision and await manual resolution.

The above nodeId setup scheme requires the presence of a central node, such a base station, to validate and assign node identifiers. In addition, the nodeId can also be

assigned by the firmware programmer and passed to the library setup routine. Once assigned, the node is accessible and the node number can be changed anytime later with the (SET-NID) command. All nodes are always able to detect a nodeId conflict. If two or more nodes have the same nodeId, each node will send an (NCOL) message and go into halted state, repeating the collision message. Manual intervention is required to resolve the conflict through explicitly assigning a new nodeId.

# 4.2 Switching between Modes

After node startup, a node normally enters the operation state. During configuration, certain commands are available and conversely some operational commands are disabled. A node is put into the respective mode with the (CFG) and (OPS) message command.

Table 4.2: Switching between Configuration and Operations mode

base Station	target node				
CFG/OPS	->				
	<- ACK/ERR ( nodeId ) or timeout				

# 4.3 Setting a new Node Id

A configuration tool can also set the node Id to a new value. This can only be done when the node is configuration mode. The following sequence of messages shows how the node is temporarily put into configuration mode for setting a new node Id.

Table 4.3: Switching between Configuration and Operations mode

Base Station	Node	
CFG ( nodeId )	-> node enters config mode	
	<- ACK/ERR ( nodeId ) or timeout	
SET-NID ( nodeId, nodeUID ) ->		
	<- ACK/ERR ( nodeId ) or timeout	ı
OPS ( nodeId )	-> node enters operations mode	
	<- ACK/ERR ( nodeId ) or timeout	

It is important to note that the assignment of a node Id through a configuration tool will not result in a potential node Id conflict resolution or detection. This is the responsibility of the configuration tool when using this command. The node Id, once assigned on one way or another, is the handle to address the node. There is of course an interest to not change these numbers every time a new hardware module is added to the layout.

## 4.4 Node Ping

Any node can ping any other node. The target node responds with an (ACK) message. If the nodeId is NIL, all nodes are requested to send an acknowledge (ACK). This command can be used to enumerate which nodes are out there. However, the receiver has to be able to handle the flood of (ACK) messages coming in.

Table 4.4: Node ping

requesting node	target node
PING	->
	<- ACK ( nodeId ) or timeout

#### 4.5 Node and Port Reset

A node or individual port can be restarted. This command can be used in configuration as well as operations mode. The node or will perform a restart and initialize its state from the non-volatile memory. A port ID of zero will reset the node and all the ports on the node.

Table 4.5: Node and Port Reset

requesting node	target node
RES-NODE (npId, flags)	-> node or port is restarted
	<- ACK ( nodeId ) or timeout

#### 4.6 Node and Port Access

A node can interact with any other node on the layout. The same is true for the ports on a node. Any port can be directly addressed. Node/port attributes and functions are addressed via items. The are reserved item numbers such as software version, nodeld, canId and configuration flags. Also, node or port attributes have an assigned item number range. Finally, there are reserved item numbers available for the firmware programmer.

The query node message specifies the target node and port attribute to retrieve from there. The reply node message will return the requested data.

A node can also modify a node/port attribute at another node. Obviously, not all attributes can be modified. For example, one cannot change the nodeId on the fly or change the software version of the node firmware. The (SET-NODE) command is used to modify the attributes that can be modified for nodes and ports. To indicate success, the target node replies by echoing the command sent.

Table 4.6: Node and Port Access

requesting node	target node
QRY-NODE ( npId, item )	->
	<- REP-NODE ( npId, item, arg1, arg2 ) or timeout if successful else (ERR)

Table 4.7: Node and Port Access

requesting node		target node
SET-NODE ( npId, item, val1, val2 )	->	
	<-	ACK/ERR ( npId ) or timeout

Some item numbers refer to functions rather than attributes. In addition, all firmware programmer defined items are functions. The (REQ-NODE) message is used to send such a request, the (REP-NODE) is the reply message.

Table 4.8: Node and Port Access

requesting node		target node
REQ-NODE ( npId, item, arg1, arg2	->	
)		
	<-	REP-NODE ( npId, item, arg1, arg2
		) if successful, else ACK/ERR ( npId
		) or timeout

# 4.7 Layout Event management

Events play a key role in the layout control system. Nodes fire events and register their interest in events. Configuring events involves a couple of steps. The first step is to allocate a unique event Id. The number does not really matter other than it is unique for the entire layout. A good idea would be to have a scheme that partitions the event ID range, so events can be be tracked and better managed. Consumer configuration is accomplished by adding entries to the event map. The target node needs to be told which port is interested in which event. A port can be interested in many events, an event can be assigned to many ports. Each combination will result in one event map entry. The (SET-NODE) command is used with the respective item number and item data.

An entry can be removed with the remove an event map entry item in the (SET-NODE) message. Specifying a NIL portId in the messages, indicates that all eventId / portId combinations need to be processed. Adding an event with a NIL portID will result in

Table 4.9: Layout Event management

requesting node		target node
SET-NODE ( npId, item, arg1, arg2 )	->	
	<-	REP-NODE ( npId, item, arg1, arg2 ) if successful, else ACK/ERR ( npId ) or timeout

adding the eventID to all ports, and removing an event with a NIL portID will result in removing all eventId / portID combinations with that eventId.

Producers are configured by assigning an eventId to broadcast for this event. The logic when to send is entirely up to the firmware implementation of the producer.

Table 4.10: Layout Event management

requesting node		interested node
EVT-ON ( npId, item, eventId ) EVT-OFF ( npId, item, eventId )		receives an "ON" event receives an "OFF" event
EVT ( npId, item, eventId, val )	->	receives an event with an argument

Even a small layout can already feature dozens of events. Event management is therefore best handled by a configuration tool, which will allocate an event number and use the defined LCS messages for setting the event map and port map entry variables on a target node.

# 4.8 General LCS Bus Management

General bus management messages are message such as (RESET), (BUS-ON), (BUS-OFF) and messages for acknowledgement of a request. While any node use the acknowledgement messages (ACK) and (NACK), resetting the system or turning the bus on and off are typically commands issued by the base station node. Here is an example for turning off the message communication. All nodes will enter a wait state for the bus to come up again.

Table 4.11: General LCS Bus Management

requesting node		any node
BUS-ON ( npId, item, eventId )	->	nodes stop using the bus and wait for the (BUS-ON) command
BUS-OFF ( npId, item, eventId )	->	nodes start using the bus again

## 4.9 DCC Track Management

DCC track management messages are commands sent by the base station such as turning the track power on or off. Any node can request such an operation by issuing the (TON) or (TOF) command.

Table 4.12: DCC Track Management

requesting node		any node
TON ( npId )	->	nodes or an individual node/port for a track section execute the TON com- mand
TOF ( npId )	->	nodes or an individual node/port for a track section execute the TOF com- mand

Another command is the emergency stop (ESTP). It follows the same logic. Any node can issue an emergency stop of all running equipment or an individual locomotive session. The base station, detecting such a request, issues the actual DCC emergency stop command.

Table 4.13: DCC Track Management

requesting node		any node
ESTP(npId)	->	all engines on a node / port for a track section will enter emergency stop mode

In addition, LCS nodes that actually manage the track will have a set of node/port attributes for current consumptions, limits, and so on. They are accessed via the node info and control messages.

# 4.10 Locomotive Session Management

Locomotive session management is concerned with running locomotives on the layout. The standard supported is the DCC standard. Locomotive session commands are translated by the base station to DCC commands and send to the tracks. To run locomotives, the base station node and the handheld nodes, or any other nodes issuing these commands, work together. First a session for the locomotive needs to be established.

When receiving a REQ-LOC message, the base station will allocate a session for locomotive with the loco DCC address. There are flags to indicate whether this should be a new session to establish or whether to take over an existing session. This way, a handheld can be disconnected and connected again, or another handheld can take over

Table 4.14: Locomotive Session Management

sending node	bae station node
REQ-LOC ( locoAdr, flags )	->
	<- REP-LOC ( sessionId, locoAdr, spDir, fn1, fn2, fn3 )

the locomotive or even share the same locomotive. Using the (REP-LOC) message, the base station will supply the handheld with locomotive address, type, speed, direction and initial function settings. Now, the locomotive is ready to be controlled.

Table 4.15: Locomotive Session Management

sending node		base station node
SET-LSPD( sId, spDir )	->	sends DCC packet to adjust speed and direction
SET-LMOD( sId, flags )	->	sends DCC packet to set session options
SET-LFON( sId, fNum )	->	sends DCC packet to set function Id value ON
SET-LFOF( sId, fNum )	->	sends DCC packet to set function Id value OFF
SET-FGRP( sId, sId, fGroup, data )	->	receives DCC packet to set the function group data
KEEP( sId )	->	base station keeps the session alive

The base station will receive these commands and generate the respective DCC packets according to the DCC standard. As explained a bit more in the base station chapter, the base station will run through the session list and for each locomotive produce the DCC packets. Periodically, it needs to receive a (KEEP) message for the session in order to keep it alive. The handheld is required to send such a message or any other control message every 4 seconds.

Locomotives can run in consists. A freight train with a couple of locomotive at the front is very typical for American railroading. The base station supports the linking of several locomotives together into a consist, which is then managed just like a single loco session. The (SET-LCON) message allows to configure such consist.

Table 4.16: Locomotive Session Management

sending node		base station node
SET-LCON( sId, conId, flags )	->	send DCC packet to manage the consist

To build a consist, a consist session will be allocated. This is the same process as opening a session for a single locomotive using a short locomotive address. Next, each locomotive, previously already represented through a session, is added to the consist session. The flags define whether the locomotive is the head, the tail or in the middle. We also need to specify whether the is forward or backward facing within the consist.

# 4.11 Locomotive Configuration Management

Locomotives need to be configured as well. Modern decoders feature a myriad of options to set. Each decoder has a set of configuration variables, CV, to store information such as loco address, engine characteristics, sound options and so on. The configuration is accomplished either by sending DCC packets on a dedicated programming track or on the main track using with optional RailCom support. The base station will generate the DCC configuration packets for the programming track using the (SET-CVS), (REQ-CVS), (REP-CVS) commands. Each command uses a session Id, the CV Id, the mode and value to get and set. Two methods, accessing a byte or a single bit are supported. The decoder answers trough a fluctuation in the power consumption to give a yes or no answer, according to the DCC standard. The base station has a detector for the answer.

Table 4.17: Locomotive Session Management

sending node	base station node
SET-CVS( cvId, mode, val )	-> validate session, send a DCC packet to set the CV value in a decoder on the prog track
REQ-CVS( cvId, mode, val )	<ul> <li>validate session, send a DCC packet to request the CV value in the the decoder on the prog track</li> <li>REP-CVS( cvId, val ) if successful or ( ERR )</li> </ul>

Programming on the main track is accomplished with the (SET-CVM) message. As there are more than one locomotive on the main track, programming commands can be send, but the answer cannot be received via a change in power consumption. One alternative for programming on the main track ( POM, XPOM ) is to use the RailCom communication standard. The base station and booster or block controller are required to generate a signal cutout period in the DCC bit stream, which can be used by the locomotive decoders to send a datagram answer back. There is a separate section explaining this in more detail.

# 4.12 Configuration Management using RailCom

Instead of configuring engines and stationary decoders on the programming track, i.e. a separate track or just a cable to the decoder, configuring these devices on the main track

Table 4.18: Locomotive Session Management

sending node	base station node
SET-CVM( cvId, mode, val )	<ul> <li>validate session, send a DCC packet to set the CV value in a decoder on the main track</li> <li>if not successful DCC-ERR</li> </ul>

would be a great asset to have. A key prerequisite for this to work is the support of receiving RailCom datagrams from the decoder.

??? \*\*note\*\* to be defined... we would need LCS messages to support this capability... ??? one message could be the channel one message of a RC detector...

# 4.13 DCC Accessory Decoder Management

The DCC stationary decoders are controlled with the (SET-BACC) and (SET-EACC) commands. A configuration/management tool and handhelds are typically the nodes that would issues these commands to the base station for generating the DCC packets. The following sequence shows how to send a command to the basic decoder.

Table 4.19: DCC Accessory Decoder Management

sending node		base station node
SET-BACC( accAdr, flags )	->	validate decoder address, send the DCC packet to the accessory decoder
	<-	if not successful DCC-ERR

Since the layout control system uses the LCS bus for accessing accessories, these messages are just intended for completeness and perhaps on a small layout they are used for controlling a few stationary decoders. It is also an option to use a two wire cabling to all decoders to mimic a DCC track and send the packets for the decoders. On a larger layout however, the layout control system bus and the node/event scheme would rather be used.

# 4.14 Sending DCC packets

The base station is the hardware module that receives the LCS messages for configuring and running locomotives. The primary task is to produce DCC signals to send out to the track. In addition to controlling locomotives, the base station can also just send out raw DCC packets.

Table 4.20: Sending DCC packets

sending node		base station node
SEND-DCC3( arg1, arg2, arg3 )	->	puts a 3 byte DCC packets on the track, just as is
SEND-DCC4( arg1, arg2, arg3, arg4)	->	puts a 4 byte DCC packets on the track, just as is
SEND-DCC5( arg1, arg2, arg3, arg4, arg5 )	->	puts a 5 byte DCC packets on the track, just as is
SEND-DCC6( arg1, arg2, arg3, arg4, arg5, arg6 )	->	puts a 6 byte DCC packets on the track, just as is

Sending a large DCC packet will use the \*\*SEND-DCCM\*\* message. The "ctrl" byte defines which part of the message is send. The base station will assemble the pieces and then issue the DCC packet.

Table 4.21: Sending DCC packets

sending node	base station node
SEND-DCCM( )	-> puts a 3 byte DCC packets on the track, just as is

Again, as the DCC packets are sent out without further checking you better know the packet format by heart. Perhaps put the NMRA DCC specification under your pillow.

# 4.15 Summary


This chapter introduced the general message flow for the layout control bus functions. By now you should have a good idea how the system will work from a message flow between the nodes perspective. Most of the messages dealing with nodes, ports and events follow a request reply scheme using the nodeId as the target address. The DCC messages and protocols implicitly refer to nodes that implement base station and handheld functions. The base station is the only node that actually produces DCC packets to be sent to the track. However, any node implementing DCC functions can act on these messages. All message functions as well as functions to configure and manage nodes, ports and events are available for the firmware programmer through the \*\*LCS Runtime Library\*\*. The next chapter will now concentrate on the library concepts and functions.

# A Tests


# A.1 Schematics

float barrier command to ensure that text stays close to the picture but no text from after the picture.


# A.1.1 part 1

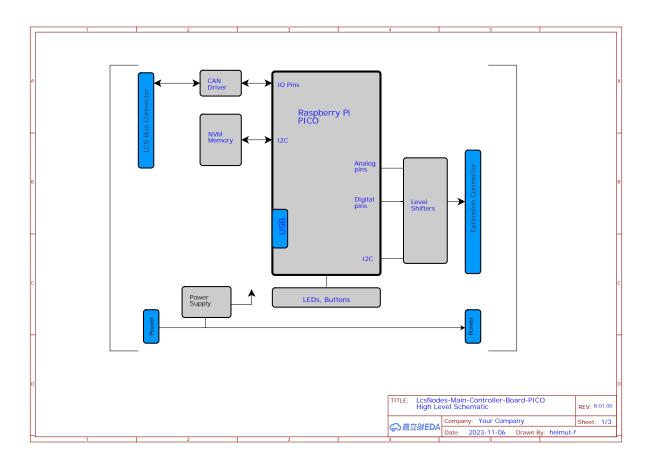

# A.1.2 part 2

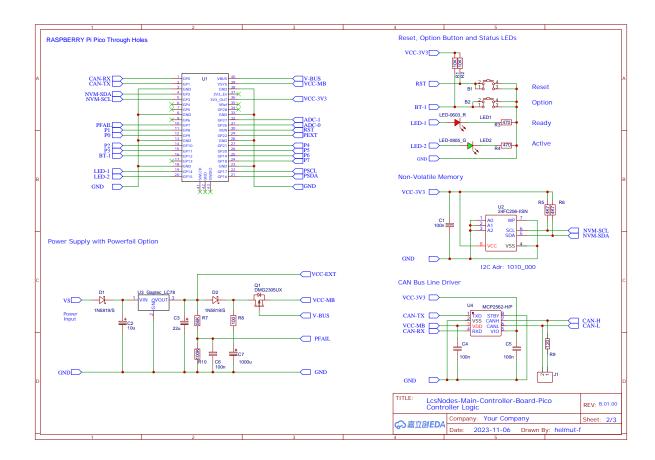

A.1.3 part 3

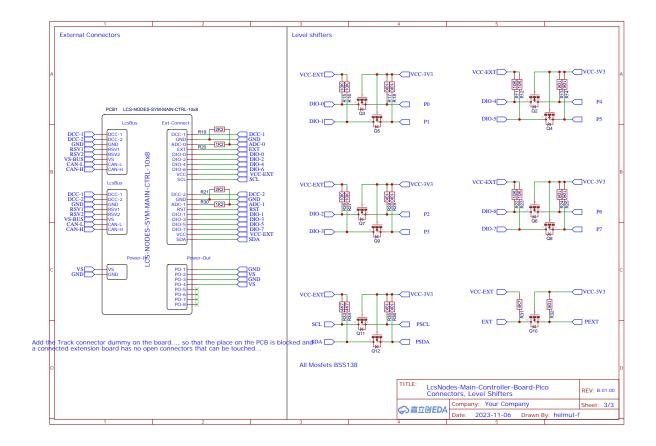


# A.2 Lists

### A.2.1 A simple list

- First bullet point
- Second bullet point
- Third bullet point


# A.2.2 An instruction word layout

A little test for an instruction word layout ... will be a bit fiddling work ...

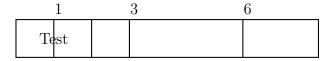

### A.3 Protocol boxes

A bit cumbersome and we would need to have text at defined locations. Perhaps keep the simple table in the protocol chapter.

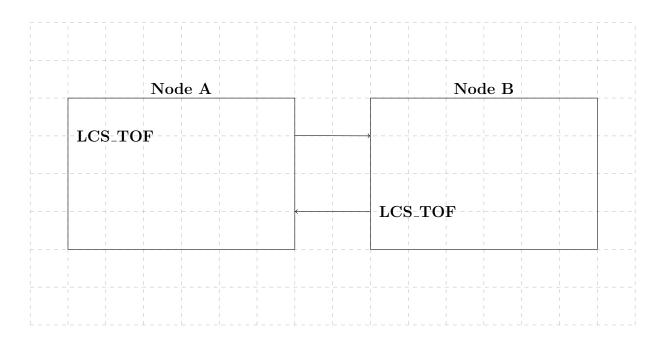

# A.4 Split rectangle

We would need the split rectangle for the runtime area maps....

Hugo
Berta
Carla

# A.5 test a simple diagram

Not too hard, however still need to understand the coordinate system.

Also, arrows are too small.

