
Date Submitted: 10/29/19

Task 01:

In this task, I am to receive and transmit the recorded temperature using the internal temperature sensor and then display it on the terminal. As seen below. Youtube Link:

https://www.youtube.com/watch?v=WAmjE39dgeM

Modified Schematic (if applicable):

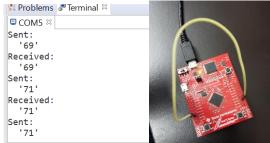

Modified Code:

```
// Insert code here
#include <stdbool.h>
#include <stdint.h>
#include "inc/hw_memmap.h"
#include "driverlib/gpio.h"
#include "driverlib/pin_map.h"
#include "driverlib/ssi.h"
#include "driverlib/sysctl.h"
#include "driverlib/uart.h"
#include "utils/uartstdio.h"
#include "driverlib/adc.h"
#include "driverlib/debug.h"
#define NUM_SSI_DATA
                          1
//
// This function sets up UART0 to be used for a console to display information
// as the example is running.
void InitConsole(void)
   // Enable GPIO port A which is used for UARTO pins.
   SysCtlPeripheralEnable(SYSCTL PERIPH GPIOA);
   // Configure the pin muxing for UARTO functions on port AO and A1.
   // This step is not necessary if your part does not support pin muxing.
   GPIOPinConfigure(GPIO PA0 U0RX);
   GPIOPinConfigure(GPIO_PA1_U0TX);
```

```
// Enable UARTO so that we can configure the clock.
   SysCtlPeripheralEnable(SYSCTL PERIPH UART0);
   // Use the internal 16MHz oscillator as the UART clock source.
   UARTClockSourceSet(UART0 BASE, UART CLOCK PIOSC);
   // Select the alternate (UART) function for these pins.
   GPIOPinTypeUART(GPIO PORTA BASE, GPIO PIN 0 | GPIO PIN 1);
   // Initialize the UARTfor console I/O.
   UARTStdioConfig(0, 115200, 16000000);
}
//
// Configure SSIO in master Freescale (SPI) mode. This example will send out
// 3 bytes of data, then wait for 3 bytes of data to come in. This will all be
// done using the polling method.
int main(void)
   uint32 t pui32DataTx[NUM SSI DATA];
   uint32 t pui32DataRx[NUM SSI DATA];
   uint32 t ui32Index;
   SysCtlClockSet(SYSCTL_SYSDIV_1 | SYSCTL_USE_OSC | SYSCTL_OSC_MAIN
|SYSCTL XTAL 16MHZ);
   // Set up the serial console to use for displaying messages. This is
   // just for this example program and is not needed for SSI operation.
   InitConsole();
   // The SSIO peripheral must be enabled for use.
   SysCtlPeripheralEnable(SYSCTL PERIPH SSI0);
   // The SSIO peripheral is on Port A and pins 2,3,4 and 5.
   SysCtlPeripheralEnable(SYSCTL_PERIPH_GPIOA);
   // This function/s configures the pin muxing on port A pins 2,3,4 and 5
   GPIOPinConfigure(GPIO PA2 SSI0CLK);
   GPIOPinConfigure(GPIO PA3 SSI0FSS);
   GPIOPinConfigure(GPIO PA4 SSIØRX);
   GPIOPinConfigure(GPIO_PA5_SSI0TX);
   // Configure the GPIO settings for the SSI pins. This function also gives
   // control of these pins to the SSI hardware. Consult the data sheet to
   // see which functions are allocated per pin.
   // The pins are assigned as follows:
   //
          PA5 -SSI0Tx
   //
          PA4 -SSI0Rx
   //
          PA3 -SSI0Fss
          PA2 -SSI0CLK
   //
   GPIOPinTypeSSI(GPIO PORTA BASE, GPIO PIN 5 | GPIO PIN 4 | GPIO PIN 3
GPIO PIN 2);
```

```
// Configure and enable the SSI port for SPI master mode. Use SSIO,
    //system clock supply, idle clock level low and active low clock in
    // freescale SPI mode, master mode, 1MHz SSI frequency, and 8-bit data.
    // For SPI mode, you can set the polarity of the SSI clock when the SSI
    // unit is idle. You can also configure what clock edge you want to
    // capture data on. Please reference the datasheet for more information on
    // the different SPI modes.
    SSIConfigSetExpClk(SSI0 BASE, SysCtlClockGet(),
SSI_FRF_MOTO_MODE_0,SSI_MODE_MASTER, 1000000, 8);
    // Enable the SSI0 module.
    SSIEnable(SSI0_BASE);
    //Variables for Temperature
    uint32_t ui32ADC0Value[4];
    volatile uint32 t ui32TempAvg;
    volatile uint32_t ui32TempValueC;
    volatile uint32_t ui32TempValueF;
    //Set system clock
    SysCtlClockSet(SYSCTL_SYSDIV_5|SYSCTL_USE_PLL|SYSCTL_OSC_MAIN|SYSCTL_XTAL_16MHZ);
    //Enable ADC
    SysCtlPeripheralEnable(SYSCTL_PERIPH_ADC0);
    //Configure all four steps of ADC sequencer
    ADCSequenceConfigure(ADC0 BASE, 1, ADC TRIGGER PROCESSOR, 0);
    ADCSequenceStepConfigure(ADC0_BASE, 1, 0, ADC_CTL_TS);
    ADCSequenceStepConfigure(ADC0_BASE, 1, 1, ADC_CTL_TS);
    ADCSequenceStepConfigure(ADC0_BASE, 1, 2, ADC_CTL_TS);
    //Configure interrupt flag = ADC CTL IE
    //Tell ADC logic that this is the last conversion on sequencer
    ADCSequenceStepConfigure(ADC0_BASE,1,3,ADC_CTL_TS|ADC_CTL_IE|ADC_CTL_END);
    //Enable ADC sequencer 1
    ADCSequenceEnable(ADC0_BASE, 1);
    while(1)
    {
        //clear interrupt flag
        ADCIntClear(ADC0 BASE, 1);
        //trigger ADC conversion with software
        ADCProcessorTrigger(ADC0_BASE, 1);
        //wait for conversion
        while(!ADCIntStatus(ADC0 BASE, 1, false))
        {
        }
        //get data from a buffer in memory
        ADCSequenceDataGet(ADC0_BASE, 1, ui32ADC0Value);
        //temperature calculations
```

```
ui32TempAvg = (ui32ADC0Value[0] + ui32ADC0Value[1] + ui32ADC0Value[2] +
ui32ADC0Value[3] + 2)/4;
        ui32TempValueC = (1475 - ((2475 * ui32TempAvg)) / 4096)/10;
        ui32TempValueF = ((ui32TempValueC * 9) + 160) / 5;
        // The "non-blocking" function checks if there is any data in the receive
        // FIFO and does not "hang" if there isn't.
        while(SSIDataGetNonBlocking(SSI0_BASE, &pui32DataRx[0]))
        }
        // Initialize the data to send.
        pui32DataTx[0] = ui32TempValueF;
        SysCtlDelay( (SysCtlClockGet()/(3*1000))*1000 );
        // Display indication that the SSI is transmitting data.
        UARTprintf("\nSent:\n ");
        // Send 3 bytes of data.
        for(ui32Index = 0; ui32Index < NUM SSI DATA; ui32Index++)</pre>
            // Display the data that SSI is transferring.
            UARTprintf("'%u' ", pui32DataTx[ui32Index]);
            // Send the data using the "blocking" put function. This function
            // will wait until there is room in the send FIFO before returning.
            // This allows you to assure that all the data you send makes it into
            // the send FIFO.
            SSIDataPut(SSI0_BASE, pui32DataTx[ui32Index]);
        }
        // Wait until SSIO is done transferring all the data in the transmit FIFO.
        while(SSIBusy(SSI0_BASE))
        SysCtlDelay( (SysCtlClockGet()/(3*1000))*1000 );
        // Display indication that the SSI is receiving data.
        UARTprintf("\nReceived:\n ");
        // Receive 3 bytes of data.
        for(ui32Index = 0; ui32Index < NUM SSI DATA; ui32Index++)</pre>
            // Receive the data using the "blocking" Get function. This function
            // will wait until there is data in the receive FIFO before returning.
            SSIDataGet(SSI0 BASE, &pui32DataRx[ui32Index]);
            // Since we are using 8-bit data, mask off the MSB.
            pui32DataRx[ui32Index] &= 0x00FF;
            // Display the data that SSIO received.
            UARTprintf("'%u' ", pui32DataRx[ui32Index]);
        }
    }
    // Return no errors
    return(0);
```

}


Task 02:

In this task, I interfaced with the WS2818B 1x8 RGB LED strip with the TIVAC using SPI interface. It will light up R, G, B, RG, RB, GB, RGB.

Youtube Link:

https://www.youtube.com/watch?v=V0ovQtnTGk4

Modified Schematic (if applicable):

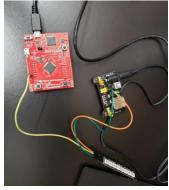

Modified Code:

```
#include <stdbool.h>
#include <stdint.h>
#include "inc/hw_memmap.h"
#include "inc/hw_types.h"
#include "driverlib/gpio.h"
#include "driverlib/pin_map.h"
#include "driverlib/ssi.h"
#include "driverlib/sysctl.h"
#include "driverlib/uart.h"
#include "utils/uartstdio.h"
#include "driverlib/adc.h"
#include "driverlib/debug.h"
#define NUM_LEDS 8
uint8 t frame buffer[NUM LEDS*3];
void send_data(uint8_t* data, uint8_t num_leds);
void fill_frame_buffer(uint8_t r, uint8_t g, uint8_t b, uint32_t num_leds);
static volatile uint32_t ssi_lut[] = {
    0b100100100,
    0b110100100,
    0b100110100,
    0b110110100,
    0b100100110,
    0b110100110,
    0b100110110,
    0b110110110
};
```

```
int main(void) {
    FPULazyStackingEnable();
    // 80MHz
    SysCtlClockSet(SYSCTL_SYSDIV_2_5 | SYSCTL_USE_PLL | SYSCTL_XTAL_16MHZ |
                       SYSCTL_OSC_MAIN);
    //initialize SPI
    SysCtlPeripheralEnable(SYSCTL PERIPH GPIOA);
    SysCtlDelay(50000);
    SysCtlPeripheralEnable(SYSCTL_PERIPH_SSI0);
    SysCtlDelay(50000);
    GPIOPinConfigure(GPIO_PA5_SSI0TX);
    GPIOPinConfigure(GPIO_PA2_SSI0CLK);
    GPIOPinConfigure(GPIO PA4 SSI0RX);
    GPIOPinConfigure(GPIO_PA3_SSI0FSS);
    GPIOPinTypeSSI(GPIO_PORTA_BASE, GPIO_PIN_5);
    GPIOPinTypeSSI(GPIO PORTA BASE, GPIO PIN 2);
    GPIOPinTypeSSI(GPIO_PORTA_BASE, GPIO_PIN_4);
    GPIOPinTypeSSI(GPIO PORTA BASE, GPIO PIN 3);
    //20 MHz data rate
    SSIConfigSetExpClk(SSI0 BASE, 80000000, SSI FRF MOTO MODE 0, SSI MODE MASTER,
2400000, 9);
    SSIEnable(SSI0_BASE);
    while(1)
    {
        // Red
        fill_frame_buffer(255, 0, 0, NUM_LEDS);
        send_data(frame_buffer, NUM_LEDS);
        SysCtlDelay(SysCtlClockGet()/5);
        // Green
        fill_frame_buffer(0, 255, 0, NUM_LEDS);
        send data(frame buffer, NUM LEDS);
        SysCtlDelay(SysCtlClockGet()/5);
        // Blue
        fill_frame_buffer(0, 0, 255, NUM_LEDS);
        send data(frame buffer, NUM LEDS);
        SysCtlDelay(SysCtlClockGet()/5);
        fill_frame_buffer(255, 255, 0, NUM_LEDS);
        send data(frame buffer, NUM LEDS);
        SysCtlDelay(SysCtlClockGet()/5);
        // RB
        fill frame buffer(255, 0, 255, NUM LEDS);
        send_data(frame_buffer, NUM_LEDS);
```

```
SysCtlDelay(SysCtlClockGet()/5);
        // GB
        fill frame_buffer(0, 255, 255, NUM_LEDS);
        send_data(frame_buffer, NUM_LEDS);
        SysCtlDelay(SysCtlClockGet()/5);
        // RGB
        fill_frame_buffer(255, 255, 255, NUM_LEDS);
        send_data(frame_buffer, NUM_LEDS);
        SysCtlDelay(SysCtlClockGet()/5);
    }
}
void send_data(uint8_t* data, uint8_t num_leds)
{
    uint32_t i, j, curr_lut_index, curr_rgb;
    for(i = 0; i < (num_leds*3); i = i + 3) {</pre>
        curr_rgb = (((uint32_t)data[i + 2]) << 16) | (((uint32_t)data[i + 1]) << 8) |</pre>
data[i];
        for(j = 0; j < 24; j = j + 3) {
            curr lut index = ((curr rgb>>j) & 0b111);
            SSIDataPut(SSI0_BASE, ssi_lut[curr_lut_index]);
        }
    }
    SysCtlDelay(50000); // delay 50us
}
void fill_frame_buffer(uint8_t r, uint8_t g, uint8_t b, uint32_t num_leds)
    uint32_t i;
    uint8_t* frame_buffer_index = frame_buffer;
    for(i = 0; i < num_leds; i++) {</pre>
        *(frame_buffer_index++) = g;
        *(frame_buffer_index++) = r;
        *(frame_buffer_index++) = b;
    }
}
```