
# PicoBoy User Guide

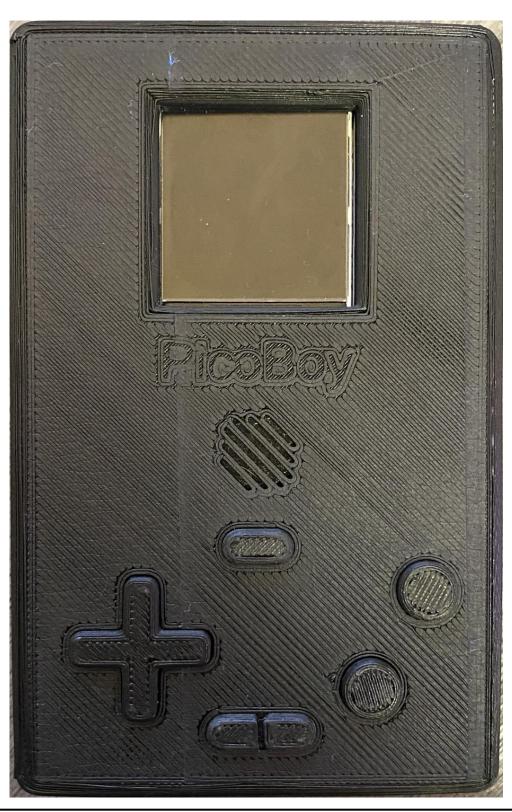


Created by HalloSpaceBoy

Discord

**GitHub** 

## Button Layout

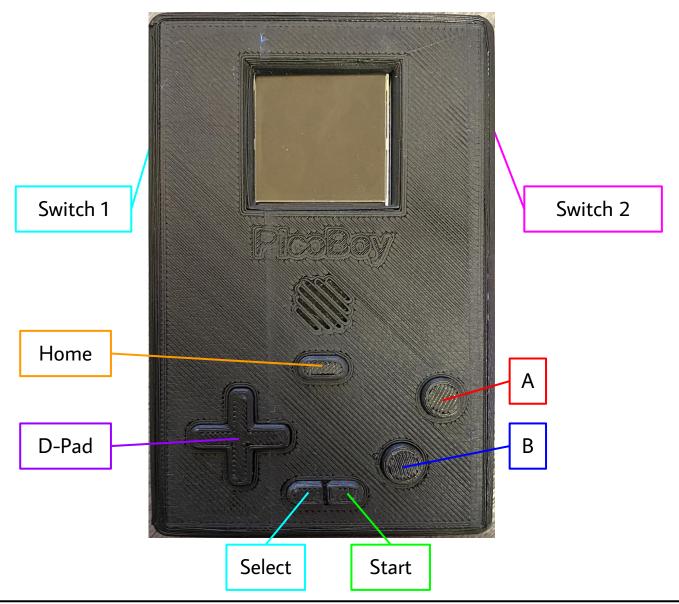

#### Button Functions

- A Action button used for different functions on a game-by-game basis
- **B** Action button used for different functions on a game-by-game basis
- **Select** Generally used for selection/pausing in game
- **Start** Generally used for selection/pausing in game
- **D-Pad** Generally used for movement in game
- **Switch 1** Depending on your wiring it can be used for muting the audio or to turn the console on/off
- **Switch 2** Depending on your wiring it can be used for muting the audio or to turn the console on/off

## How to Navigate the Main Menu

When you power on your PicoBoy, you will be greeted by the home menu. The home menu displays the games currently on the console in alphabetical order.



You can see the game you have selected by the cover art and game title:



You can see which game you have selected by the counter at the bottom:



Main Menu Button Assignments:

A - Start selected game

**Start** - Start selected game

Left - Move to the game on the left

Right - Move to the game on the right

Down+Select+B - Enter data transfer mode

## The Settings Menu

At the very end of the home screen is the settings menu. You can press A to enter the settings menu just as you would a regular game.




# How to Navigate the Settings Menu

This opens a menu that lets you change the brightness

This make your PicoBoy enter data upload mode

This exits the settings menu

The setting that is currently selected is filled in, the rest are empty rectangles.

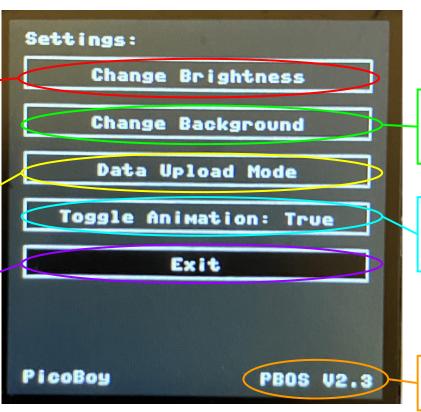

This opens a menu that lets you change the background color

This toggles the animated transition between games

This shows the current version of PBOS

# How to Connect to The Console

1: Before you even open the PicoBoy Communication Software, you need to enter data transfer mode on your PicoBoy. You can do this by pressing Down+Select+B or navigating to settings and choosing "Data Upload Mode":

**2**: Once the console enters data transfer mode, connect it to your computer. Open the PicoBoy
Communication Software

**4**: After that, click "Connect", If you get an error saying "Port not found" or "Port busy or nonexistent", make sure no other programs are connected to your PicoBoy.

**6**: If the "Connect" button changes to say "Disconnect", you did it! You can now interface with your PicoBoy.



If you are really having trouble, ask a question on the <u>discord</u>.

**3**: Click the dropdown list labeled "Select Port", choose the option that says "USB Serial Device". If an option like that does not show up, try replugging your console and click "Refresh Ports"

**5**: If the program begins to freeze, you may be having connection issues. Unplug, replug, and try these steps again to remedy this.

You can disconnect your PicoBoy by pressing "Disconnect"

## How to Update The Console

1: Before you update your PicoBoy, you need to connect to it. Refer to the section on connecting to your console to do this.

**3**: Click the "Update Console" button. If an error pops up saying "Port busy or nonexistent", check the connection to your PicoBoy.

**5**: Once you click "OK", a file window should appear. Select the update file you downloaded. Make sure that it is a ".pbu" file. If you get an error about reading the file, make sure you have selected a ".pbu" file and that it is not corrupted.

DO NOT UNDER ANY CIRCUMSTANCE INTERRUPT THE UPDATING OF THE PICOBOY IN ANY WAY! If you are really having trouble, ask a question on the <u>discord</u>.

2: Download the latest update from the GitHub here. It will have the file extension ".pbu" This is the file that your PicoBoy will use to update.

**4**: When you click the button, an alert will appear warning you of disconnecting your console while it updates. Please keep in mind that your console may corrupt if interrupted. Click "OK".

**6**: A loading bar and file counter should appear. Wait for all of the files to upload (about 30-60 seconds). If it freezes for longer than 2 minutes, refer to the section on repairing a corrupted PicoBoy.

Assuming all has gone well, your PicoBoy should have an updated operating system!

## How to Add a Game to The Console

1: Before you add a game to your PicoBoy, you need to connect to it. Refer to the section on connecting to your console to do this.

**3**: Once you click "Add Game", a file window should appear. Select the game you wish to add. Make sure that it is a ".pbg" file.

**5**: If the status bar freezes for longer than 30 seconds, disconnect the console and try again. If it happens a second time, your game file may be corrupted.

7: If you get an error saying "An error has occurred while reading/writing data to the device", it means that you may have accidentally disconnected your console. After reconnecting, delete the partially added game.

If you are really having trouble, ask a question on the <u>discord</u>.

2: Now that you are connected, click the "Add Game" button. If an error pops up saying "Port busy or nonexistent", check the connection to your PicoBoy.

**4**: A loading bar and file counter should appear. Wait for all of the files to upload (about 30-60 seconds).

**6**: If you get an error saying "An error has occurred while reading file", it means the game you have selected may be corrupt or improperly formatted.

When the program says your game has uploaded, you did it! You now have a new game on your PicoBoy.

#### How to Delete a Game From The Console

1: Before you delete a game from your PicoBoy, you need to connect to it. Refer to the section on connecting to your console to do this.

**3**: If it says "No Games" click "Refresh Games". If "No Games" still shows up, there are no games on your console.

**5**: Click "Delete Game", a window should appear. To delete the game, click "OK". To cancel, click "Cancel"

7: If you get an error saying "Port busy or nonexistent", try reconnecting your PicoBoy.

If you are really having trouble, ask a question on the <u>discord</u>.

**2**: Now that you are connected, navigate to the dropdown menu labeled "Choose Game" and click it.

**4**: Choose a game from that list by clicking it. (This doesn't delete the game immediately, it only selects it.)

**6**: After a short period of time, you should get a message saying "Game successfully deleted from memory".

If all has gone well, the game you have selected has been deleted!

# How to Download a Game's Scores

1: Before you download scores from your PicoBoy, you need to connect to it. Refer to the section on connecting to your console to do this.

**3**: If it says "No Games" click "Refresh Games". If "No Games" still shows up, there are no games on your console.

**5**: Click "Download Scores". If you get an error message saying "Scores file nonexistent", it means the game you have selected has no scores.

7: If you get an error saying "Port busy or nonexistent", try reconnecting your PicoBoy.

If you are really having trouble, ask a question on the <u>discord</u>.

2: Now that you are connected, navigate to the dropdown menu labeled "Choose Game" and click it.

**4**: Choose a game from that list by clicking it.

**6**: After a short period of time, you should get a message saying "Scores saved to current folder".

If all has gone well, the game you have your high scores saved to your computer.

#### How to Format the Console

WARNING: Formatting your PicoBoy will erase ALL DATA! Do not do this unless strictly necessary!

1: Before you format your PicoBoy, you must first connect to it. Refer to the section on connecting your console to do this.

**3**: If you get an error message saying "Port busy or nonexistent", try reconnecting your console.

DO NOT UNDER ANY CIRCUMSTANCE INTERRUPT THE FORMATTING OF THE PICOBOY IN ANY WAY!

Assuming all has gone well, your PicoBoy should have a squeaky clean operating system!

If you are really having trouble, ask a question on the <u>discord</u>.

**2**: Now that you are connected, click the "Format" button. Click "OK" to continue or "Cancel" to cancel.

**4**: After clicking the button, the software should pause for about 3 seconds. A loading bar should appear. Wait for all of the loading bars to complete.

**5**: If you receive an error or the loading bar freezes for longer than 2 minutes, refer to the section on fixing a corrupted PicoBoy.

# How to Fix a Corrupted PicoBoy

This section is only for those who have corrupted their PicoBoy. Don't do this if you have not corrupted your PicoBoy.

1: Download 2 files, the flash nuker and the latest micropython firmware from these links: Firmware Flash Nuker

**3**: Drag the flash nuker file onto the USB drive, it will eject itself. Wait 5 seconds and do not unplug your PicoBoy.

**5**: Drag the firmware file onto the USB drive, it will eject itself. Wait 5 seconds and do not unplug your PicoBoy.

**7**: Refer to the steps on formatting your PicoBoy to reformat the operating system.

If you are really having trouble, ask a question on the <u>discord</u>.

**2**: Plug the PicoBoy into your computer while holding the Pi Pico's "BOOTSEL" button. A USB drive will appear.

**4**: Unplug the PicoBoy from your computer and plug it back in while holding the "BOOTSEL" button. A USB drive will appear.

**6**: Plug your PicoBoy back into your computer. (Do not hold the "BOOTSEL" button this time)

Assuming all has gone well, your PicoBoy be reformatted and working!