CH₃

CH₃

3.1 Introduction

Torsion

Torque

Shaft

3.2 Torsional Deformation of a Circular Bar

Pure Torsion

Angle of Twist

Shear Strain at the Outer Surface

Shear Strain within the bar

Circular Tube

3.3 Circular Bars of Linearly Elastic Materials

the Torsion Formula

Solid Shaft

Tubular Shaft


Angle of Twist


Torsional Stiffness and Torsional Flexibility

3.1 Introduction


Torsion

the twisting of a straight bar when it is loaded by moment (or torque) that tends to produce rotation about the longitudinal axis of the bar

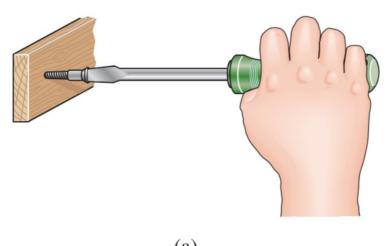

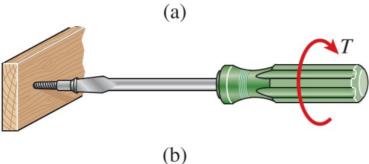

a moment that twists/deforms a member about its longitudinal axis

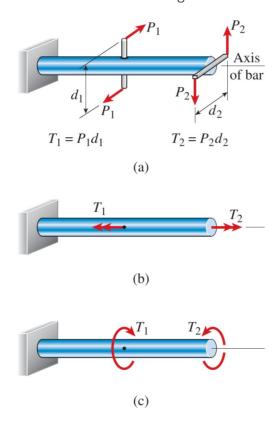

Shaft

cylindrical members that are subjected to torques and transmit power through rotation


3.2 Torsional Deformation of a Circular Bar

Pure Torsion


the bar is in pure torsion when every cross section of the bar is identical and subjected to the same internal torque T

Angle of Twist

under the action of the torque \it{T} , the right-hand end will rotate (with respect to the left-handed) through a small angle $\it{\phi}$

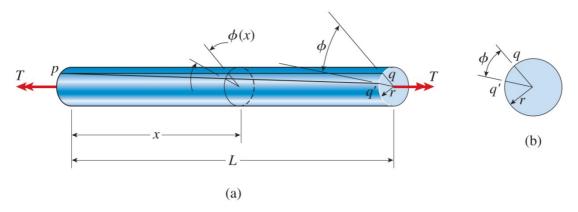

Shear Strain at the Outer Surface

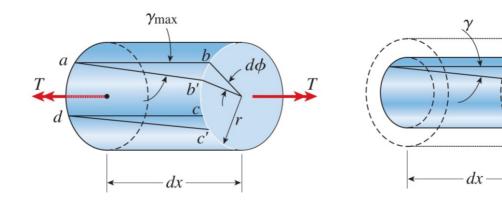

$$\gamma_{max} = rac{bb'}{ab}$$
 $\Rightarrow \quad \gamma_{max} = rac{r d\phi}{dx}$

denote the symbol $\boldsymbol{\theta}$ as the **rate of twist**

$$\theta = \frac{\mathrm{d}\phi}{\mathrm{d}x}$$


$$\Rightarrow \quad \gamma_{max} = r heta$$

for pure torsion only, we can obtain that

$$\gamma_{max} = rac{r\phi}{L}$$


Shear Strain within the bar

$$\gamma =
ho heta = rac{
ho}{r} \gamma_{max}$$

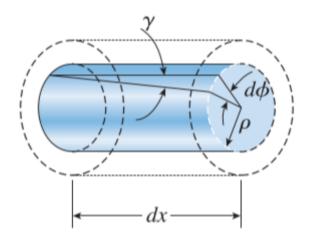

Circular Tube


$$\gamma_{max} = rac{r_2 \phi}{L} \qquad \gamma_{min} = rac{r_1}{r_2} \gamma_{max} = rac{r_2 \phi}{L}$$

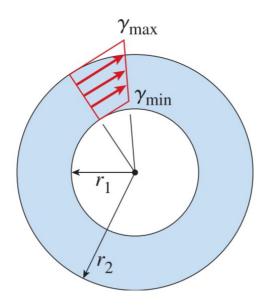

3.3 Circular Bars of Linearly Elastic Materials

the shear stresses acting on a cross-sectional plane are accompanied by shear stresses of the same magnitude acting on longitudinal planes.

the Torsion Formula

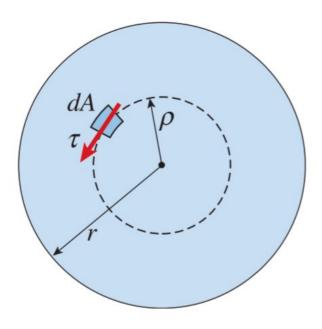

$$\mathrm{d}M = au
ho\mathrm{d}A = rac{ au_{max}}{r}
ho^2\mathrm{d}A$$

the resultant moment is the summation over the entire cross-sectional area

$$T = \int_A \mathrm{d}M = rac{ au_{max}}{r} \int_A
ho^2 \mathrm{d}A$$

in which

$$I_P = \int_A
ho^2 \mathrm{d}A$$

is the **polar moment of inertia** of the circular cross section

The shear stress at distance ρ from the center of the bar is

$$au_{max} = rac{Tr}{I_P} \qquad au = rac{T
ho}{I_P} ag{torsion formula}$$

Solid Shaft

$$\mathrm{d}A=2\pi\rho\mathrm{d}\rho$$

$$I_P=rac{\pi}{32}d^4$$

Tubular Shaft

$$I_P = rac{\pi}{32}(d_0^4 - d_i^4)$$

Angle of Twist

according to Hooke's Law in shear

$$au = G \gamma = G
ho heta = rac{
ho}{r} au_{max}$$

using the torsion formula

$$G
ho heta = rac{
ho}{r} rac{Tr}{I_P}$$
 $\Rightarrow heta = \sum rac{TL}{GI_P} = rac{\mathrm{d}\phi}{\mathrm{d}x}$

for a bar in **pure torsion**, the total angle of the twist ϕ , equal to the rate of twist time the length of the bar

$$\phi = \frac{TL}{GI_P} = \int_0^L \frac{T(x) dx}{GI_P(x)}$$

Torsional Stiffness and Torsional Flexibility

$$k_T = rac{GI_P}{L} \qquad f_T = rac{L}{GI_P}$$