Preface

Scope

This document describes what to download from github, namely the required software and example files. You do not need Android Studio nor build any apk file. It further explains how to install everything up to the point of starting the emulator. Once that works you do not need this document any longer. For help on actually using the emulator see the other documents as listed in the Readme on Github. For beginners the next document is the "Introduction to the emulator".

Tested system settings

- Windows10, 64 bit
- python 3.7, 3.8, 3.10
- AAPS versions for logfile: oref1 & SMB for 2.3 3.1.0.3
- AAPS versions for determine basal: oref1 & SMB for 2.5 3.1.0.3

I know other users installed it successfully on MAC or Linux.

Prepare Installation

Download the Github repo (https://github.com/ga-zelle/AAPS-Emulator) as a zip archive. The next steps depend on where you want the emulator to run.

Installation On Windows10

Before you start is a good idea to now think about how you organise your input and output data on your PC. You may want to create virtual drives¹ to avoid very long filepath names whenever you need to provide those filenames. There are 3 groups of files involved, each with their own drive:

- S: Holds the software for the emulator itself
- L: holds your study topics with subfolders per project like "L:\tutorials\"
- Z: holds your zipped logfiles; may be grouped in subfolders by month like "Z:\2023-01\"

Extract the zip-archive downloaded from Github to a folder containing

- "determine_basal.py" into "S:" as the emulation of the original java version
- "emulator GUI.py" into "S:" which manages the user input in an interactive window
- create a shortcut on your desktop to point to this GUI file.
- "emulator batch.py" into "S:" which alternatively manages the user input in a DOS window
- "emulator core.py" into "S:" the main programme which manages the whole process
- "<variant_label>.vdf" into "L:" which contains the definition of the settings you want to change

To get python if you do not have it yet on your PC the best option is to download its installer from https://realpython.com/installing-python/#how-to-install-python-on-windows. When the installer starts select user specific options rather than standard configuration. In the dialogue that follows select

- add python to the system variable for PATH
- select to also download and install "pip"

After the python installation is completed you need to download the matplotlib library. This is done in a DOS window by entering "pip install matplotlib" on the command line.

The last action to make python fit for this project is to define a system variable PYTHONUTF8=1 to allow use of special characters from the UTF-8 character set like the Greek Δ for labelling next- Δ .

Verify the emulator starts

Start by clicking on the shortcut created on the desktop during the installation process. This opens a DOS window. The DOS window should remain empty but may be error messages will show up and I recommend to check for those before quitting the GUI. I tried to catch such messages in the code for display in the form itself but you never know.

After opening that DOS window another window opens which contains a form itself to manage the whole process. The size of the window may be adjusted so longer filenames are displayed without scrolling. In general, boxes with white background are used to enter text, mostly filenames. Boxes with rounded corners and grey background are command buttons to start certain actions:

- Browse will start the standard file selection dialogue to find the respective file
- Edit loads that file into your standard Editor (as long as your system has assigned a standard app for that file type)
- Show similar to "Edit" apart from the result PDF where it uses your standard PDF viewer


The process goes from top to bottom and from left to right but of course you can jump to wherever. First, you select the working folder, i.e. the one containing your variant definition file and later the result files.

¹ See appendix V how to create a virtual drive

² See appendix S how to define a system variable

Installation on the AAPS phone

• From the play store download and install qpthon3 ("QPython 3L – Python for Android" by QpythonLab). In some countries like USA it is not available in the play store but can be downloaded from https://github.com/qpython-android/qpython3/releases/tag/3x-v3.0.0



- This should create a folder ",qpython" at the top level
- Go to its subfolder "scripts3"
- From the Github archive downloaded above extract the following 3 script files (i.e. the python programmes) to this subfolder
 - ,,determine basal.py"
 - o "emulator batch.py"
 - o "emulator core.py"
- "<variant_label>.vdf", the vdf-file is the same as on Windows and is copied to the folder containing the AAPS logfiles.
- "<your configuration>.config" is also located in the logfile folder and contains infornation that does not change often. The software folder in the repo contains "emulator_std.config" as an example to get you going.

Verify the emulator starts on the AAPS phone

On the phone press the "QPython3L" button created during installation. There, press Programs, select "emulator_batch.py" and finally select "Run".

After some Android12 update the previously used GUI dialogues no longer worked and I had to create a keyboard based version similar to the typical telephone dialogues "for option X dial 2". The top part of those screens lists the available options to select from where one of them has a label " (default)" appended, meaning it is the current selection. The bottom part lists the steps to take once your intended option is selected and labelled as default. Those steps typically are Next, Test and Exit.


The first dialogue is used to select the language for the speech synthesis.

Select "Test" to listen to a sample speech synthesis.


Select "Next" to proceed.



The next dialogue is for selecting your variant definition file. Use a "noChange" version or the one that comes with the examples. All vdf-files found in the logfile folder will be listed.

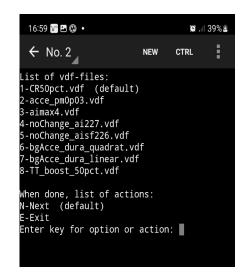

The next dialogue is used to select your favourite configuration file.

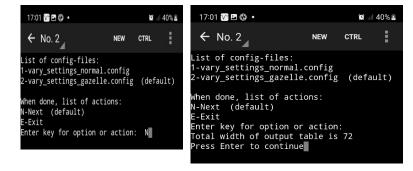

After you activate the selection you get a message of how many columns the selected tabular output will occupy. This is a convenient time to rotate the phone to landscape to see longer filenames nicely displayed and to prepare for the result table display.

Press ENTER-key to proceed.

Now you should see a screen like this:

```
13:29 • () () (
                                                                                                         2 ... 54%

← No. 2


                                                                                             TAKE WAKELOCK
                                                                             NEW
                                                                                     CTRL
      UTC
                                   -ISF factors-----
                                                                                         insulin Req
                                                                                                         ---SMB---
                                                                          -ISFs-
Ш
              bg
125
                                    bg
1.15
                                                                    orig
97.3
                                                                                          orig
                                                delta
     time
                     auto
                            acce
                                                         dura
                                                                           prof
                                                                                  emul
                                                                                                  emul
                                                                                                               emul
                                                         1.11
                      1.0
                            0.84
                                                                             95
                                                                                  98.1
                                                                                                                   0
              127
                      1.0
                            0.88
                                           1.02
                                                         1.16
                                                                    88.9
                                                                             95
                                                                                  92.9
                            0.91
0.91
                                           1.02
                                                                             95
                                                                                  85.4
                                                                                          0.02
                                                                                                   0.0
              128
                      1.0
                                    1.16
                                                         1.22
                                                                    81.8
                                                                                                                   0
                                                                                  85.2
                      1.0
                                           1.02
                                                         1.22
                                                                             95
                                                                                          0.05
              128
                                    1.16
                                                                    81.8
                                                                                                  0.02
                                                                                                             0
                                                                                                                   0
                                                                             95
95
                                    1.17
                                                                                                                   0
              129
                      1.0
                            0.94
                                           1.02
                                                         1.28
                                                                    75.7
                                                                                  78.6
                                                                                           0.12
                                                                                                   0.1
                                                                                                          0.1
                                                                                  75.9
                                                                                                                   0
              129
                        0
                            0.94
                                           1.01
                                                         1.34
                                                                    73.1
                                                                                           0.04
                                                                                                  0.01
              128
                                                                              95
                                                                                  77.3
                      1.0
                            0.88
                                                                              95
                                                                                  74.3
                                                                                                                   0
                      1.0
                            0.88
                                                                    74.4
                                                                                                             0
              126
                                                                                              0
                                                                             95
                            0.77
                                                                                                            0
                      1.0
                                                                                  81.9
                                                                                              0
                                                                                                                   0
              121
                                                                      82
                                                                                                     0
                                    1.16
                                                                             95
                                                                                                   0.0
              121
                      1.0
                            1.03
                                                                                  61.3
                                                                                                             0
                                                                                                                   0
                                                                             95
              121
                                                                                  59.4
                                                                                                  0.17
                                                                                  57.6
55.8
                            1.07
                                                                    57.7
56
                                                                             95
              123
                      1.0
                                           1.02
                                                                                           0.28
                                                                                                  0.28
                                                                                                          0.2
                                                                                                                0.2
        18Z
                                                         1.65
                                                                             95
                                                                                                  0.07
                                                                                                            0
                      1.0
                                    1.15
                                                                                          0.07
              123
                                           1.01
     11:247
                                                                                                                   0
              120
                            0.72
                                                                    75.5
    11:29Z
                      1.0
    Variant "TT_boost_50pct"
    waiting 300 sec for next loop at 13:34
```

If so, congratulations! You are done with setting up your phone for the emulator. Next you can read the "Introduction to the AAPS emulator" for first steps on how to use it.


Status: 21-Jun-2023 @ 14:11

Appendix S How to define a new system variable


You can search the web for tips. Here is an example instruction set taken from https://geekflare.com/system-environment-variables-in-windows/

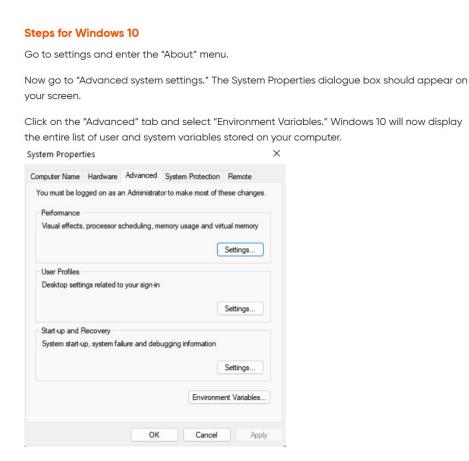

Click on "Environment Variables" to get:

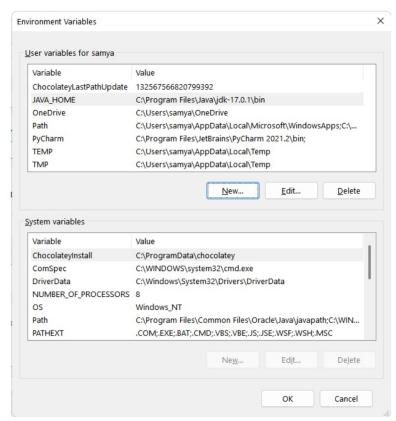

Click "New..." underneath the System variables. A form opens where you enter PYTHONUTF8 as name and 1 as value.

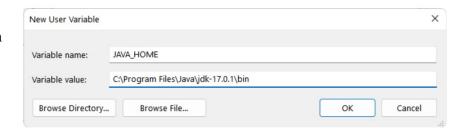

Click "OK" a few times to finish the assignment and close the forms.

Appendix V: How to create a virtual drive

