
A 4 BIT CPU DESIGN USING LOGISM

The Design Specifications of the CPU

- 4 bit CPU
- RISC Micro-controller Architecture
- 8 general purpose Registers
 - \circ R_0 through R_7 each with a 4 bit size
- 3 bus architecture A, B, and C(in which the ALU, registers, the program counters, Instruction Register and Decoder Blocks would be around.)
- 4 Instructions:
 - MovImd, #number, R_D

 - \circ OR, $R_{A_{\text{A}}}$ $R_{B_{\text{A}}}$ R_{D} :- $R_{A_{\text{A}}}$ | | R_{B} => R_{D}
- Program Memory 256 X 16

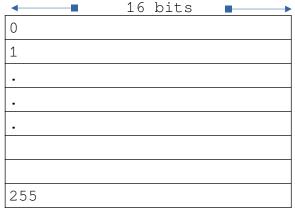


- One Instruction Requires one word(Every Location Stores a 16 bit number, in which the instruction requires one word of 16 bit which has to be stored in every address.)
- Word Addressable Memory(so it is 2 bytes/16 bits addressable)

Machine coding Instructions

The 15th and 14th bits represent the opcode

- 0 0 for ADD
- 0 1 for AND
- 1 0 for OR , and
- 1 1 for MovImd

for example the following table represents the machine code for the MovImd instruction



The rest of the bits from bit 7 to 13 are null with inputs of 0000, which we will not be using for the time being. Bits 0 ,1, and 2 are reserved to represent the Registers Each register holds a number of 4 bits width from 0000 through 1111


3 bits means $2^3 = 8$ binary combinations

	TED MEATED Z O DITT
RD	Binary representation
R0	000
R1	001
R2	010
R3	011
R4	100
R5	101
R6	110
R7	111


We will use a hexadecimal code for the numbers

BINAR Y	111 1	111	110	110	101	101	100	100	011	011	010	010 0	001	001	000	000
HEXAD ECIMA L	F	E	D	С	В	A	9	8	7		5	4	3	2	1	0

Example1: - MovImd #4, R4




 ${\bf But}$ we have to divide the above table in the example in to groups of 4 bits and represent each one with a hexadecimal code format



So ${\it c024}$ represents moving the number 4 to the 4th Register, R4.

Data manipulation Instructions

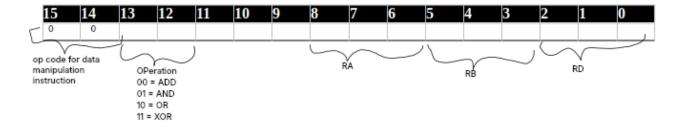


The data manipulation instructions are the instructions that will be represented with the 16 bits, after which they are groped in to groups of four and changed to a hexadecimal code format from left right.


The three bits from namely 9, 10, and 11 are null bits that are extra and we will not use.

The 15 and 14 bits being 0 0 indicates a data manipulation instruction and the 13 and 12 bits specify what type of data manipulation instruction the ALU will be performing.

Example2:- ADD , R4, R2, R7 or $R4 + R2 \Rightarrow R7$

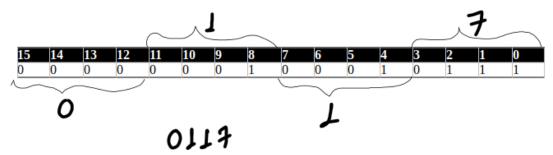

so ${\it 0117}$ in ${\it hexadecimal}$ represents adding R4 and R2 and Storing the result in R7

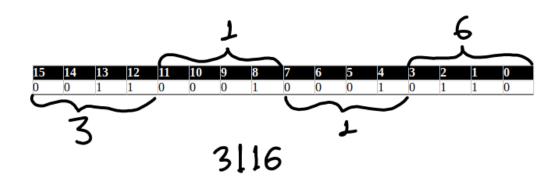

Example 3:- XOR R4, R2, R7

Store in the program Memory every instruction is one clock cycle so 4 clock cycles will be enough to finish the execution of the whole program.

ALP code		MLP code
Mov #4, R4	0	c024
Mov #5, R2	1	c02A
ADD , R4, R2, R7	2	0117
XOR R4, R2, R7	3	3116
	•	•
	•	•
	•	•
	255	