Professional Readiness for Innovation, Employability and Entrepreneurship

Smart Farmer -IoT Enabled Smart Farming Application ASSIGNMENT – 4

NAME: Bharadwajaa B

Write Code and connections in wokwi for ultrasonic sensor. Whatever distance is less than 100 cm send "Alert" to ibm cloud and display in devicerecent events.

Solution:


```
//Pins
const int TRIG_PIN = 7 ;const int ECHO_PIN = 8;
//Anything over 400 cm (23200 us pulse) is "out of range" const unsigned int
MAX DIST = 23200;
 void setup() {
// The Trigger pin will tell the sensor to range find
Pin Mode(TRIG_PIN, OUTPUT);
digital Write(TRIG PIN, LOW);
 //Set Echo pin as input to measure the duration of
 //pulses coming back from the distance sensor
 pinMode(ECHO_PIN, INPUT );
 // We'll use the serial monitor to view the sensor output
 Serial.begin(9600);
void loop()
unsigned long t1;
```

```
unsigned long t2;
 unsigned long
 pulse_width;float cm;
 float inches;
 // Hold the trigger pin high for at least 10 us
 digitalWrite(TRIG_PIN, HIGH);
 delayMicroseconds(10);
 digitalWrite(TRIG PIN, LOW);
// Wait for pulse on echo pin
 while (digitalRead( ECHO_PIN )==0 );
 // Measure how long the echo pin was held high (pulse width)
 // Note: the micros() counter will overflow after-70
 mint1= micros ();
while (digitalRead(ECHO_PIN) == 1);t2= micros ();
pulse_width = t2-t1;
// Calculate distance in centimeters and inches. The constants
//are found in the datasheet, and calculated from the assumed speed
// of sound in air at sea level (- 340m/s)
cm=pulse_Width / 58;
inches = pulse width/148.0;
```


```
// Print out results
if (pulse_width >MAX _ DIST
){Serial.println("Out of
range");
} else {
Serial.println("********************************);
Serial.print("The Measured Distance in cm: ");
Serial.println(cm);
if( cm < 100 ){
   //while(true){
   Serial.println("Alert!!");
   //}
}
}
//wait at least 1000ms before next
measurementDelay(1000);
}
```

OUTPUT:


When object is not near to the ultrasonic sensor

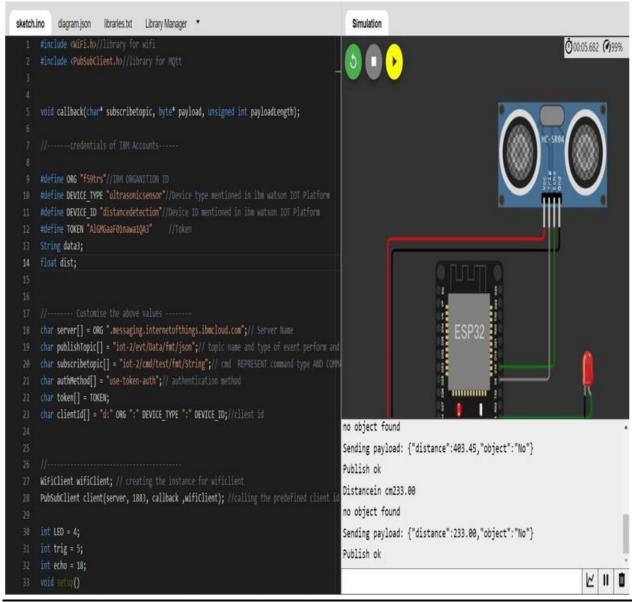

Data sent to the IBM cloud device when the object is far

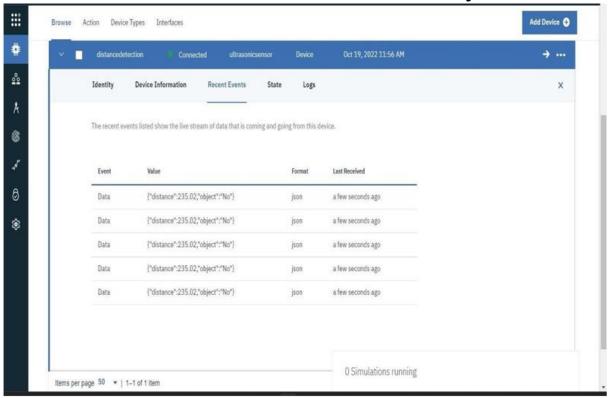

When object is nearer to the ultrasonic sensor

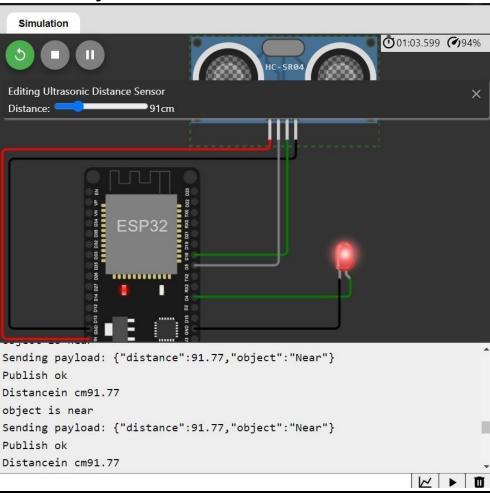

Data sent to the IBM cloud device when the object is near

