# **Assignment 4**

## wokwi for the ultrasonic sensor.

Assignment Date	29 OCT 2022
Student Name	Bhuvaneshwari G
Student Roll Num	210619106007
Maximum Marks	2 Marks

## **QUESTION 1**

#include"WiFi.h"

Write code and connections in wokwi for ultrasonic sensor. Whenever distance is less than 100 cms send "alert" to ibm cloud and display in device recent events. Upload document with wokwi share link and image of ibm cloud

### Code:

```
#include"WiFiclient.h"

#define DEVICE_TYPE"ESP32_controller"

#define DEVICE_ID"Assignment_4"

#define TOKEN"&S?LQdLRzh3n2gkyDt" char

server[]=ORG".meassaging.internertofthings.ibmcloud.com"; char

pubTopic1[]="iot-2/evt/status1/fmt/json"; char

authMethod[]="use-token-auth"; char token[]=TOKEN; char

clientId[]="d:" ORG ":" DEVICE_TYPE ":" DEVICE_ID; long

now; wificlient wificlient; pubsubclient client(server, 1883,


NULL, wificlient);


#define echoPin 2 // attach pin D2 Arduino to pin Echo of HC-SR04


#define trigPin 3 //attach pin D3 Arduino to pin Trig of HC-SR04
```


```
// defines variables long duration; // variable for the duration
of sound wave travel int distance; // variable for the distance
measurement
void setup() { pinMode(trigPin, OUTPUT); // Sets the trigPin
as an OUTPUT pinMode(echoPin, INPUT); // Sets the echoPin
as an INPUT
 Serial.begin(9600); // // Serial Communication is starting with 9600 of baudrate speed
 Serial.println("Ultrasonic Sensor HC-SR04 Test"); // print some text in Serial Monitor
 Serial.println("with Arduino UNO R3");
} void loop()
 // Clears the trigPin condition
digitalWrite(trigPin, LOW);
delayMicroseconds(2);
 // Sets the trigPin HIGH (ACTIVE) for 10 microseconds
digitalWrite(trigPin, HIGH); delayMicroseconds(10);
digitalWrite(trigPin, LOW);
 // Reads the echoPin, returns the sound wave travel time in microseconds duration
= pulseIn(echoPin, HIGH); // Calculating the distance distance = duration * 0.034
/ 2; // Speed of sound wave divided by 2 (go and back)
 // Displays the distance on the Serial Monitor
 Serial.print("Distance: ");
 Serial.print(distance); Serial.println(" cm"); delay(500);
if(distance<=100) { string payload
="{\"d\":{\"Name\":\"" DEVICE_ID"\""; payload +=
```

```
",\"Distance\":"; payload += distance; payload +=
"}}";
   Serial.print("sending payload: ")
Seerial.println(payload); if (client.publish(pubTopic1,
   (char*) payload.c_str()))
   {
       Serial.print("***ALERT***");
   }
}
```

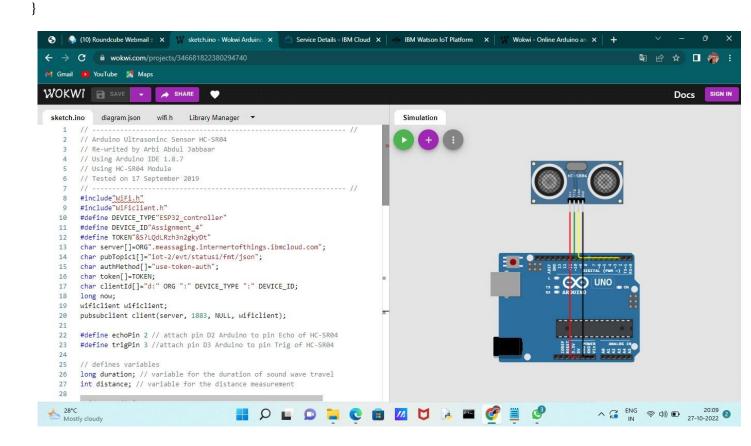

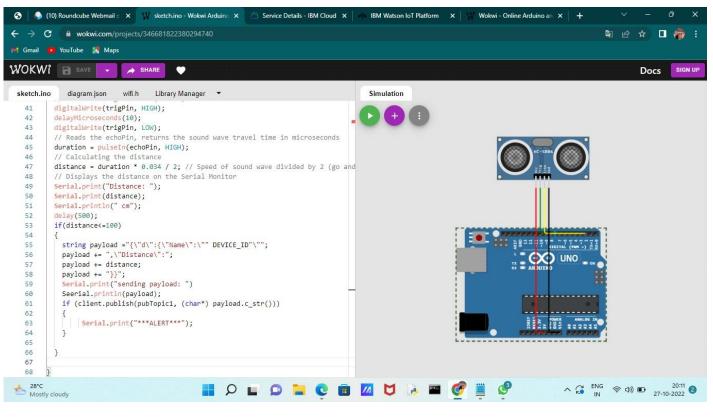

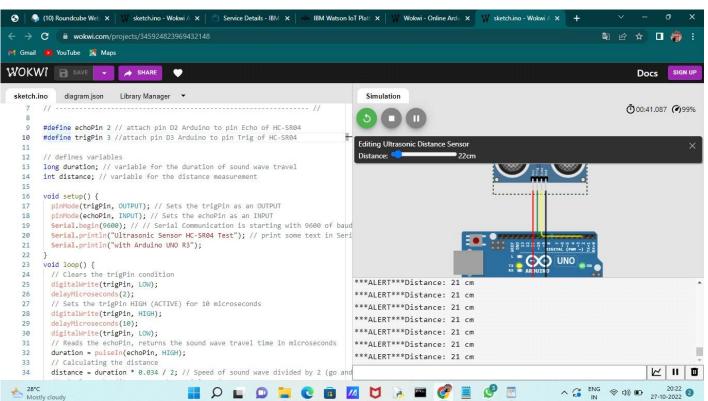

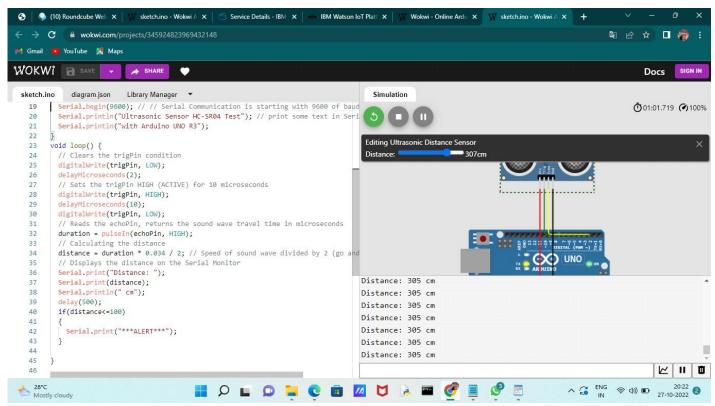

### **OUTPUT:**

Distance: 305 cm

Distance: 40 cm

\*\*\*ALERT\*\*\*Distance: 40 cm