

OV9281 Mono Sensor UVC Module UVC Series Global Shutter Camera Module

# U20CAM-9281M



Normally We will update our development Mannual here

Date	Revision	Change Details
2023/10/17	1.0	First Released

# MM

#### U20CAM-9281M

Wiki: wiki.inno-maker.com

Github: https://github.com/INNO-MAKER

OV9281 Mono Sensor UVC Module UVC Series Global Shutter Camera Module

#### 1 General

## 1.1 Description

U20CAM-9281M is InnoMaker UVC Series Module with 1MP 1/4" monochrome global shutter OV9281 image sensor,low distortion USB 2.0 camera. Feature with external hardware trigger and stobe function. Shoot high-speed moving objects in crisp sharp images. Avoid the rolling artifacts to get a much more accurate complete picture than the rolling shutter cameras. Reserved external trigger ports, support trigger via external signal.)

#### 1.2 Features

- U20CAM-9281M is a 1.3M global shutter UVC camera module by mono sensor ov9281;
- Compatible with USB2.0,USB3.0 plug and play for Windows,Linux,Mac Os devices;
- Support hardware external trigger mode and live streaming mode;
- Easily wire external trigger pins and strobe pins by 2.0mm pin headers;
- Featured with wide angle fixed M12 LEN FOV Up to 148 degree;

## 1.3 Specification

Model Name	U20CAM-9281M		
Dimension	32mmx32mm		
Sensor	Monochrome global shutter OV9281		
Pixel Size	3μm*3μm		
Resolution	1MP 1280H x 800V		
Output Format	MJPG/YUY2		
Len	FOV148° (H) M12 18mm Len Seat No IR filter, sensitive to IR		
Input Voltage	Power:5V Current:86mA 0.42W		
Shutter Mode	Global Shutter		
Image Color	Monochrome		
USB Interface	Vendor: 1.25mm-5P ZZ-MS, Shouhan		
Auto	White Balance (Manual Option) ,Exposure (Manual Option)		
Parameters			
Controllable	Brightness, Contrast, Hue, Saturation, Sharpness, Gamma, White		
Parameters	Balance,Backlight Comp,Gain,Exposure,PowerLine Frequency,Low Light		
	Compensation		
Support OS	Windows, Linux, Mac Os with UVC Drivers Devices		
Cable Length	1M		

Support: support@inno-maker.com
Bulk Price: sales@inno-maker.com




OV9281 Mono Sensor UVC Module UVC Series Global Shutter Camera Module

<b>External Trigger</b>	Support. Use UVC Parameters "Focus"
Working Operating Temp: -20°C-70°C, Humidity:80-85%	
Conditions	

#### 1.4 Resolution Frame Rate

Output Resolution And Frame Rate					
Output Format	Resolution	Frame rate (FPS)	Maximum		
MJPG	1280x800	10,15,30,120	1280x800@120fps		
	1280x720(720p)	10,15,20,30,60,120	640x360@210fps		
	800x600	10,15,20,30,60,120			
	640x360( <mark>360p)</mark>	10,15,20,30,60,120,210			
	640x400	10,15,20,30,60,120,210			
	640x480	10,15,20,30,60,120			
	320x240	10,15,20,30,60,120,210			
	320x200	120,60,30			
YUY2	1280x800	10	1280x800@10fps		
	1280x720(720p)	10	320x240@60fps		
	800x600	10			
	640x360(360p)	10			
	640x400	10,15,20,30			
	640x480	10,15,20,30			
	320x240	10,15,20,30,60			
	320x200	10,15,20,30,60			






OV9281 Mono Sensor UVC Module UVC Series Global Shutter Camera Module

# 2 Hardware

#### 2.1 Module Size

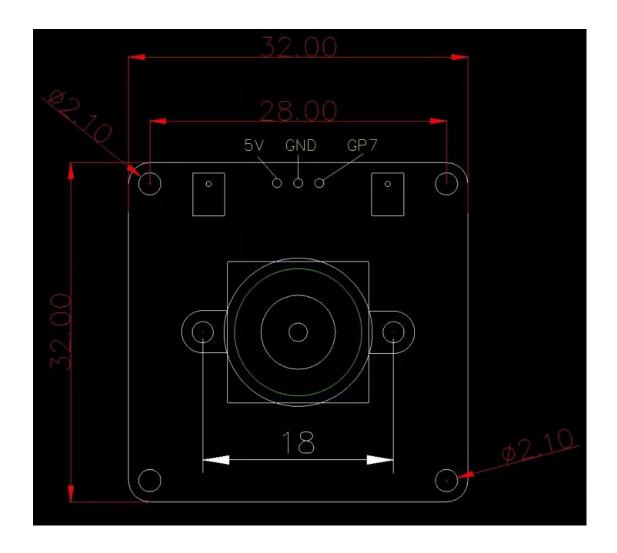


Support: support@inno-maker.com Bulk Price: sales@inno-maker.com Wiki: wiki.inno-maker.com Github: https://github.com/INNO-MAKER



OV9281 Mono Sensor UVC Module **UVC Series Global Shutter Camera Module** 

#### 2.2 Camera LEN

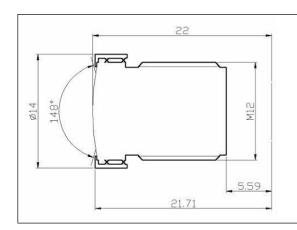


- Interface: M12
- Field of view Fov(D) = 148Degree
- Focal Length 2.8 mm
- Focal Distance Adjustable
- TV DISTORTION <-17%
- F(N) /Aperture 2.2
- Len Seat: 18mm

## 2.3 External Trigger Signal



PINS	Description			
FSIN +	IN + 3.3v-5v External Trigger Input			
FSIN - External Ground GND				
Reference Circuit				

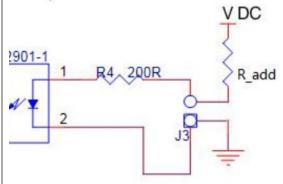

For example, VDC = 12V, Vf = 1.25V

The calculations done here are based on 12VDC. Please do follow these calculations for other voltages like 24VDC.

Let's take the current through IR LED If = 20mA.

Voltage drop across the IR LED = 1.25V

The value of Resistor R<sub>1</sub> =  $(V_{cc}-V_f)/I_f$  = (12-1.25)/0.02 = 537.5  $\Omega$  Wattage of resistor R<sub>1</sub> >  $I_f$ <sup>2</sup> \* R<sub>1</sub> = 0.02<sup>2</sup>\*537.5 = 0.215W

Wattage of the resistor R<sub>1</sub> selected should be greater than 0.215W.

And there is a resistor on board(R4 =  $200\Omega$ ), So the R\_add = R1 - R4 =  $537.5 - 200 = 337.5\Omega$ 


Support: support@inno-maker.com Wiki: wiki.inno-maker.com Bulk Price: sales@inno-maker.com Github: https://github.com/INNO-MAKER




OV9281 Mono Sensor UVC Module UVC Series Global Shutter Camera Module

## 2.4 STROBE Signal





#### Reference Circuit

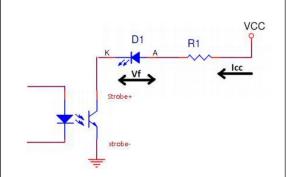

On-board TLP281 optocoupler isolation, Notice the max collector current is 50mA.

#### **Output Specifications**

	Parameter	Test Condition	Value			J.
S. No			Min	Тур	Max	Unit
1	Driver Voltage (VCC)			12	24	V
2	Drive current (Icc)			10	50	mA
3	Collector Emitter Breakdown Voltage				80	٧
4	Collector Emitter Saturation Voltage	Icc = 1 mA		0.1	0.2	٧
5	Power Dissipation				150	mW

1	-	0000 00000 00 0000 00	2000	2000000	2000
Collector-Emitter Saturation Voltage	V <sub>CE(sat)</sub>	$I_F = 10 \text{mA}, I_C = 1 \text{mA}$	0.1	0.2	V

So If the current required to drive the Flash LED is no more than 50mA

The value of series resistor: R1 = ( VCC- Vf - VCE ) / If

VCC: system Voltage

Vf: Forward voltage of Flash LED for current Icc VCE: Collection Emitter voltage, typical:0.1V


If the current required to drive the flash exceeds 50mA, then it is required to drive it with the help of LED driver circuit, and LED driver circuit can be controlled by using the strobe output pin.

Support: support@inno-maker.com Wiki: wiki.inno-maker.com
Bulk Price: sales@inno-maker.com Github: https://github.com/INNO-MAKER



OV9281 Mono Sensor UVC Module UVC Series Global Shutter Camera Module

#### 2.5 USB Connector

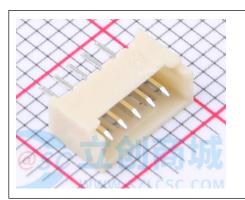

Vendor: **SHOU HAN(首韩)** Name:1.25mm-5P ZZ-MS




1	5V	5V Power
2	DM	USB 2.0 Data-
3	DP	USB 2.0 Data+
4	GND	Ground
5	GND	Ground

# 3 External Trigger Model

The external trigger mode is to accepts the external input signal to trigger the image output. When the rising edge of the external trigger signal coming, it can output an image. Therefore, it is very suitable for capturing high-speed moving objects. In addition, the sensor enables the sleep state will greatly reduce the power consumption.

## 3.1 Enable Trigger Model


We set UVC Parameters "Focus" as the trigger Model Enable options.




Support: support@inno-maker.com Bulk Price: sales@inno-maker.com Wiki: wiki.inno-maker.com Github: https://github.com/INNO-MAKER



OV9281 Mono Sensor UVC Module UVC Series Global Shutter Camera Module

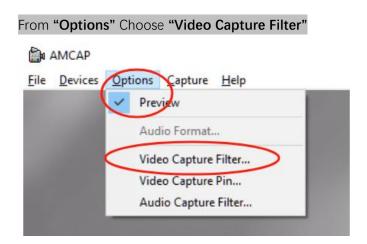


#### From "Camera Control" Find "Focus", uncheck to enable it.

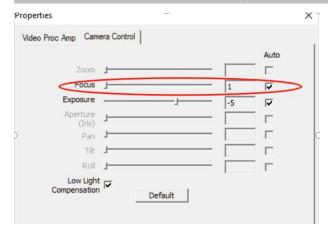

You can see the preview stop and enter

## 3.2 Adjust exposure Manually


This is necessary for fast move object.

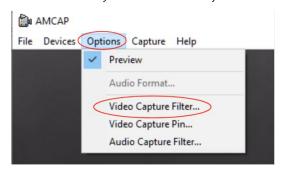

There is a switch behind the Exposure slider in the Camera Control. Select it to start manual exposure mode.




OV9281 Mono Sensor UVC Module UVC Series Global Shutter Camera Module

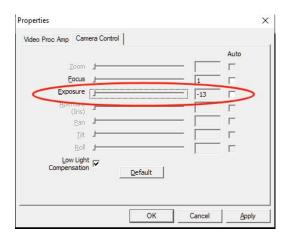

# 3.2 Hardware Connection And Script

Our sample use for raspberry pi, more information please refer to chapter 2.3, We use Raspberry PI GPIO 23 generate 3.3V pulse signal. Connect Raspberry PI GPIO23 to FSIN+, GND To FSIN-, Run command to start sudo ./gpio-sysfs

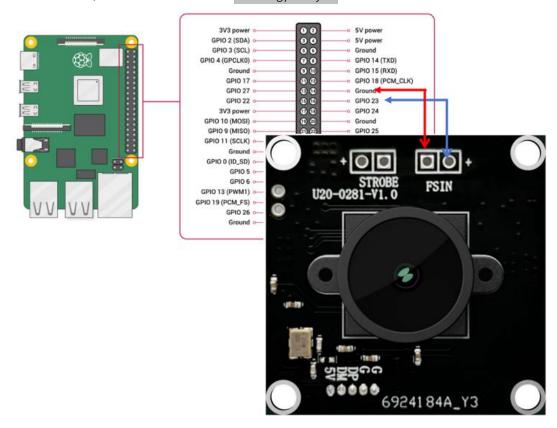



OV9281 Mono Sensor UVC Module UVC Series Global Shutter Camera Module

#### 3.2 Strobe Connection

When the image is output, a flash signal output from S can drive flash to enhance exposure. The stroboscopic signal of the sensor can set the light point or time parameter. However, it can only output a fixed strobe signal because of a fixed UVC Camera configuration.

