

User Manual for v5

J. Camilo Gómez C.

August 27, 2019

Contents

1	Bac	kground	4
	1.1	About the RTOS	4
		1.1.1 Hardware compatibility	4
		1.1.2 Coding standard and naming convention	4
		1.1.3 Memory usage	5
	1.2	Timing approach	6
	1.3	Setting up the kernel qSchedulerSetup	6
	1.4	Tasks	7
		1.4.1 The idle task	9
		1.4.2 Adding tasks to the scheme : qSchedulerAdd	9
		1.4.3 Event-triggered tasks	0
		1.4.4 Removing a task: qSchedulerRemoveTask	.1
	1.5	Running the OS scheduler qSchedulerRun	.1
		1.5.1 Releasing the scheduler: qSchedulerRelease	2
	1.6	States and scheduling rules	2
	1.7	Getting started	.3
	1.8	Recommended programming pattern	4
	1.9	Critical sections	6
	1.10	Task management APIs in run-time	7
	1.11	Demonstrative examples	9
		1.11.1 A simple scheduling	9
		1.11.2 Using the task argument	20
	1.12	Configuration macros	23
2	Eve	nts 2	4
	2.1	Time elapsed	24
	2.2		25
		v	26
		2.2.1.1 Simple notifications:	26
			27



		2.2.2	Spread a notification
		2.2.3	Queues
	2.3	Retrie	ving the event data
	2.4	Implei	mentation guidelines
		2.4.1	Sending notifications
		2.4.2	Creating a queue: qQueueCreate
		2.4.3	Performing queue operations
		2.4.4	Attach a queue to a task
		2.4.5	A queue example
		2.4.6	Other queue APIs
3	Mo	$_{ m dules}$	39
	3.1	STime	ers
		3.1.1	Usign a STimer
	3.2	Finite	State Machines (FSM)
		3.2.1	Setting up a state machine: qStateMachine_Init
		3.2.2	Running a state machine: qStateMachine_Run 44
		3.2.3	Changing states and retrieving FSM data
		3.2.4	Adding a state machine as a task: qSchedulerAdd_StateMachineTask . 45
		3.2.5	A demonstrative example
		3.2.6	Changing the FSM attributes in run-time 48
	3.3	Co-Ro	utines
		3.3.1	Coding a Co-Routine
		3.3.2	Blocking calls
		3.3.3	Positional jumps
		3.3.4	Semaphores
	3.4		ommand Line Interface
		3.4.1	The parser
		3.4.2	Supported syntax
		3.4.3	Setting up an AT parser instance for the CLI
		3.4.4	Subscribing commands to the parser
		3.4.5	Writing a command callback
		3.4.6	Handling the input
		3.4.7	Running the parser
		3.4.8	Retrieving arguments inside a command-callback 61
	3.5		ry Management
		3.5.1	Principle of operation
		3.5.2	Memory pools
	3.6		and debugging
		3.6.1	Viewing variables
		3.6.2	Viewing a memory block
		3.6.3	Usage





4	Util	Utility APIs						
	4.1	Byte sized buffers						
	4.2	Input groups for edge-checking						
	4.3	Generic lists						
	4.4	Response handler						
	4.5	Miscellaneous						
	4.6	Additional macros						



1 Background

1.1 About the RTOS

QuarkTS its a simple non-preemptive real-time OS with a quasi-static scheduler for embedded multi-tasking applications. Its simplified kernel uses a cooperative round-robin scheme with a linked chain approach and a queue to provide true FIFO priority-scheduling.

The most significant feature of the OS tasks, its that they are NOT preemptable. Once a task starts its execution, it owns the CPU in base level (non-interrupt) until it returns. In other words, except when the CPU is servicing an event in interrupt-level, the CPU will be executing the task until returns, then, the control back to the task-scheduler. This has however, significant benefits: you don't need to worry about concurrency inside the callback method, since only one callback method runs at a time and could not be interrupted. All resources are yours for that period of time, no one can switch the value of variables (except interrupt functions of course...). It is a stable and predictable environment and it helps a lot with writing stable code.

Apart from this basic capabilities, it has a small memory footprint that make it suitable for tiny embedded μ Controlled systems.

1.1.1 Hardware compatibility

QuarkTS has no direct hardware dependencies, so it is portable to many platforms and C compilers. The following cores has been powered with QuarkTS successfully:

- ARM cores(ATMEL, STM32, LPC, Kinetis, Nordic and others)
- 8Bit AVR, 8051, PIC (16F and 18F)
- HCS12, ColdFire, MSP430
- PIC (PIC24, dsPIC, 32MX, 32MZ)

1.1.2 Coding standard and naming convention

- All the QuarkTS implementation follow the C99 standard.
- The core source files try to conform most of the MISRA C 2004 coding standard guidelines, allowing the OS to be used in safe-critical embedded systems. Certain deviations are allowed and are listed below with their respective justification:
 - (MISRA C 2004 rule 11.5): A cast shall not be performed that removes any const or volatile qualification from the type addressed by the pointer.
 - ${\it Justification}$: Used to perform data hiding and access to private members of some data structures.
 - (MISRA C 2004 rule 17.4): Array indexing shall only be applied to objects defined as an array type.

Justification: When handling the FIFO priority queues, the memory block provided by the application writer is accessed through a pointer variable, pointing to the beginning of this memory block. The item access are performed through array indexing to provide a fast and simple implementation. Of course, the indexes are programmatically checked to avoid an illegal memory access outside the boundaries of the provided stack.



- (MISRA C 2004 rule 17.4): pointer arithmetic should not be used Justification: When handling queues, the source code manipulates memory addresses to move the head and tail pointers. This inevitably requires some pointer arithmetic, however, when used, results are programatically checked for correctness.
- In line with MISRA guides, unqualified standard char and char * types are only permitted to hold ASCII characters and strings respectively.
- In line with MISRA guides and for portability between platforms, we use the stdint.h with typedefs that indicate size and signedness in place of the basic types.
- The _t suffix its used to denote a type definition (i.e qBool_t, qTask_t, qSize_t, ...).
- Functions, macros, enum values and data-types are prefixed q. (i.e. qFunction, qEnumValue, QCONSTANT, qType_t, ...)
- Other than the pre-fix, most macros used for constants are written in all upper case.
- Almost all functions returns a boolean value of type qBool_t, where a qTrue 1u value indicates a successful procedure and qFalse 0u, the failure of the procedure.

1.1.3 Memory usage

As a quasi-static scheduler is implemented here, dynamic memory allocation is not required and the assignment of tasks must be done before program execution begins. The kernel is designed to allow unlimited tasks and kernel objects (STimers, FSMs, queues, etc), but of course, the whole application will be constrained by the memory specifications of the embedded system.

The kernel's memory footprint can be scaled down to contain only the features required for your application, typically 2.5 KBytes of code space and less than 1 KByte of data space.

OS Memory Footprint (Measured in a 32bit MCU)			
Functionality	Size(bytes)		
Kernel, scheduler and task management	2637		
A task node (qTask_t)	52		
Finite State-Machines(FSM) handling and related APIs	314		
A FSM object (qsm_t)	37		
STimers handling and related APIs	258		
A STimer object (qSTimer_t)	9		
qQueues handling and related APIS	544		
A qQueue object (qQueue_t)	20		
Memory management	407		
A memory pool (qMemoryPool_t)	28		
The AT Command Parser	1724		
An AT-Parser instance (qATParser_t)	60		
An AT command object (qATCommand_t)	16		
Remaining utilities	2980		



Although the kernel does not use dynamically-allocated resources internally, the application writer can create any object dynamically using the heap implementation provided by the memory management module described in section 3.5.

1.2 Timing approach

The kernel implements a Time-Triggered Architecture (TTA)[1], in which the tasks are triggered by comparing the corresponding task-time with a reference clock. The reference clock must be real-time and follow a monotonic behavior. Usually all embedded systems can provide this kind of reference with a constant tick generated by a periodic background hardware-timer, typically, at 1Khz (1mS tick).

For this, the kernel allows you to select the reference clock source among this two scenarios:

- When tick already provided: The reference is supplied by the Hardware Abstraction Layer (HAL) of the device. Is the simplest scenario and it occurs when the framework or SDK of the embedded system includes a HAL-API that obtains the time elapsed since the system starts, usually in milliseconds and taking a 32-bit counter variable.
- When the tick is not provided: The application writer should use bare-metal code to configure the device and feed the reference clock manually. Here, a hardware timer should raise an interrupt periodically. After the *Interrupt Service Routine* (ISR) has been implemented using the platform dependent code, the qClock_SysTick() API must be called inside. It is recommended that the reserved ISR should only be used by QuarkTS.

1.3 Setting up the kernel qSchedulerSetup

This function should be your first call to the QuarkTS API. qSchedulerSetup() prepares the kernel instance, set the reference clock, define the Idle-Task callback and allocates the stack for the internal queue.

Parameters

- TickProvider: The function that provides the tick value. If the user application uses the qClock_SysTick() from the ISR, this parameter can be NULL.

 Note: Function should take void and return a 32bit unsigned integer.

 This argument must have this prototype: uint32_t TickProviderFcn(void)
- ISRTick: This parameter specifies the ISR background timer period in seconds (floating-point format).



- IDLE_Callback: Callback function for the idle task. If not used, pass NULL as argument.
- QueueSize: Size of the priority queue. This argument should be an integer number greater than zero.

This call is mandatory and must be called once in the application main thread before any kind of interaction with the OS.

Usage example:

Scenario 1: When tick is already provided

```
#include "QuarkTS.h"
#include "HAL.h"

#define TIMER_TICK   0.001   /* 1ms */

void main(void){
    HAL_Init();
    qSchedulerSetup(HAL_GetTick, TIMER_TICK, IdleTask_Callback, 10);

    /*
    TODO: add Tasks to the scheduler scheme and run the scheduler
    */
}
```

Scenario 2: When the tick is not provided

1.4 Tasks

A task is a node concept that links together:

• Program code performing specific task activities (callback function)



- Execution interval (time)
- Number of execution (iterations)
- Event-based data

Tasks can perform certain functions, which could require periodic or one-time execution, update of specific variables or waiting for specific events. Tasks also could be controlling specific hardware or be triggered by hardware interrupts.

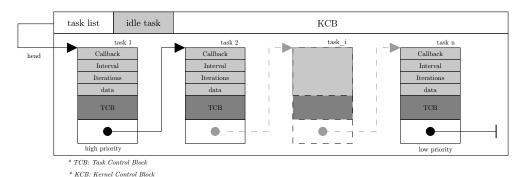


Figure 1: Tasks scheme

For execution purposes, the tasks are linked into execution chains (see figure 1), which are processed by the scheduler in priority order. Each task performs its activities via a callback function and each of them are responsible for supporting cooperative multitasking by being "good neighbors", i.e., running their callback methods quickly in a non-blocking way and releasing control back to scheduler as soon as possible (returning).

Every task node, must be defined using the qTask_t data-type and the callback is defined as a function that returns void and takes a qEvent_t data structure as its only parameter (This input argument can be used later to get event information, see section 2.3).

```
qTask_t UserTask;
void UserTask_Callback(qEvent_t eventdata){
    /*
    TODO : Task code
    */
}
```

Note: All tasks in QuarkTS must ensure their completion to return the CPU control back to the scheduler, otherwise, the scheduler will hold the execution-state for that task, preventing the activation of other tasks.



1.4.1 The idle task

Its a special task loaded by the OS scheduler when there is nothing else to do (no task in the whole scheme has reached the ready state). The idle task is already hard-coded into the scheduler, ensuring that at least, one task that is able to run. Aditionally, the scheduler setup this task with the lowest possible priority to ensure that does not use any CPU time if there are higher priority application tasks able to run.

The idle task don't perform any active functions, but the user can decide if it should perform some activities defining a callback function for it. This could be done at the beginning of the kernel setup (as seen in section 1.3 with qSchedulerSetup()) or in run-time with qSchedulerSetIdleTask().

```
void qSchedulerSetIdleTask(qTaskFcn_t Callback)
```

Of course, the callback must follow the same function prototype for tasks.

To disable the idle-task activities, a NULL should be passed as argument.

1.4.2 Adding tasks to the scheme: qSchedulerAdd

After setting up the kernel with qSchedulerSetup(), the user can proceed to deploy the multitasking application by adding tasks. If the task node and their respective callback is already defined, the task can be added to the scheme using qSchedulerAdd_Task(). This API can schedule a task to run every Time seconds, nExecutions times and executing CallbackFcn method on every pass.

Parameters

- Task: A pointer to the task node.
- CallbackFcn : A pointer to a void callback method with a qEvent_t parameter as input argument..
- Priority: The priority value. [0(min) 255(max)]
- Time: Execution interval defined in seconds (floating-point format). For immediate execution use the qTimeImmediate definition.
- nexecutions: Number of task executions (Integer value). For indefinite execution use qPeriodic or the qIndefinite definition.



- InitialState: Specifies the initial state of the task (qEnabled or qDisabled).
- arg Represents the task argument. This argument must be passed by reference and cast to (void *).

Caveats

- 1. A task with Time argument defined in qTimeImmediate, will always get the qReady state in every scheduling cycle, as consequence, the idle task will never gets dispatched.
- 2. Tasks do not remember the number of iteration set initially by the nexecutions argument. After the iterations are done, internal iteration counter decreases until reach the zero. If another set of iterations is needed, user should set the number of iterations again and resume the task explicitly.
- 3. Tasks which performed all their iterations, put their own state to qDisabled. Asynchronous triggers do not affect the iteration counter.
- 4. The arg parameter can be used as storage pointer, so, for multiple data, create a structure with the required members and pass a pointer to that structure.

Invoking qSchedulerAdd_Task() is the most generic way to adding tasks to the scheme, supporting a mixture of time-triggered and event-triggered tasks, however, additional simplified API functions are also provided to add specific purpose tasks:

- Event-triggered only tasks → qSchedulerAdd_EventTask()
- State-machine tasks \rightarrow qSchedulerAdd_StateMachineTask(). See section 3.2.4.
- AT-Command parser tasks → qSchedulerAdd_ATParserTask(). See section 3.4.7.

1.4.3 Event-triggered tasks

An event-triggered task reacts asynchronously to the occurrence of events in the system, such as external interrupts or changes in the available resources.

The API qSchedulerAdd_EventTask() is intended to add this kind of tasks, keeping it in a qSuspended state. Only asynchronous events followed by their priority value dictates when a task can change to the qRunninq state.

As seen above, arguments related to timing and iterations parameters are dispensed and the only required arguments becomes minimal, just needing: CallbackFcn , Priority and the related task arguments arg.



1.4.4 Removing a task: qSchedulerRemoveTask

As expected, the API removes the task from he scheduling scheme. This means the task node will be disconnected from the kernel chain, preventing additional overhead provided by the scheduler when it does checks over it and course, preventing from running.

qBool_t qSchedulerRemoveTask(qTask_t *Task)

Caveats:

Task nodes are variables like any other. They allow your application code to reference a task, but there is no link back the other way and the kernel doesn't know anything about the variables, where the variable is allocated (stack, global, static, etc.) or how many copies of the variable you have made, or even if the variable still exists. So the qschedulerRemoveTask() API cannot automatically free the resources allocated by the variable. If the task node has been dynamically allocated, the application writer its responsible to free the memory block after a removal call.

1.5 Running the OS scheduler qSchedulerRun

After preparing the multitasking environment for your application, a call to qSchedulerRun() is required to execute the whole scheme. This function is responsible to run the following OS main components:

- The Scheduler: Select the tasks to be submitted into the system and decide with of them are able to run.
- The Dispatcher: When the scheduler completes its job of selecting ready tasks, it is the dispatcher which takes that task to the running state. This procedure gives a task control over the CPU after it has been selected by the scheduler. This involves the following:
 - Preparing the resources before the task execution
 - Execute the task activities (via the callback function)
 - Releasing the resources after the task execution

The states involved in the interaction between the scheduler and dispatcher are described in the section that follows.

Note: After calling qSchedulerRun(), the OS scheduler will now be running, and the following line should never be reached, however, the user can optionally release it explicitly with qSchedulerRelease() API function.



1.5.1 Releasing the scheduler: qSchedulerRelease

This functionality must be enabled from the Q_ALLOW_SCHEDULER_RELEASE macro. This API stop the kernel scheduling. In consequence, the main thread will continue after the qSchedulerRun() call.

Although producing this action is not a typical desired behavior in any application, it can be used to handle a critical exception.

When used, the release will take place after the current scheduling cycle finish. The kernel can optionally include a release callback function that can be configured to get called if the scheduler is released. Defining the release callback, will help to take actions over the exception that caused the release action. To enable this functionality, the qSchedulerSetReleaseCallback() API should be used.

void qSchedulerSetReleaseCallback(qTaskFcn_t Callback)

When a scheduler release is performed, resources are not freed after this call. After released, the application can invoke the qSchedulerRun() again to resume the scheduling activities.

1.6 States and scheduling rules

Task states are classified into the four below:

- qWaiting: The task cannot run because the conditions for running are not in place. In other words, the task is waiting for the conditions for its execution to be met.
- **qReady**: The task has completed preparations for running, but cannot run because a task with higher precedence is running.
- qRunning: The task is currently being executed.
- **qSuspended**: The task doesn't take part on what is going on. Normally this state is taken after the *qRunning* state or when the task don't reach the *qReady* state.

Except for the idle task, a task exists in one of this states. As the real-time embedded system runs, each task moves from one state to another, according to the logic of a simple finite state machine (FSM). Figure 2 illustrates the typical flowchart used by QuarkTS to handle task's states, with brief descriptions of state transitions, additionally you may also notice the interaction between the scheduler and the dispatcher.

The OS assumes that none of the task does a block anywhere during the *qRunning* state. Based in the *round-robin* fashion, each ready task runs in turn only from the linked list or the priority-queue, here, the priority parameter set its position in the list statically and in the queue in a dynamic way.

Task precedence is used as the task scheduling rule and precedence among tasks is determined based on the priority of each task. If there are multiple tasks able to run,



the one with the highest precedence goes to qRunning state. In determining precedence among tasks, of those tasks having different priority levels, that with the highest priority has the highest precedence. Among tasks having the same priority, the one that entered to the scheduling scheme first has the highest precedence.

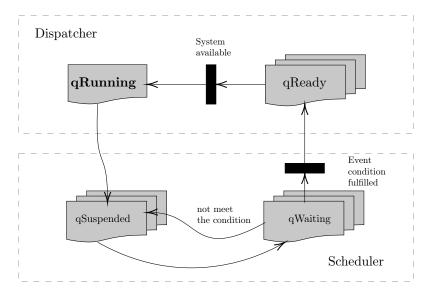


Figure 2: Task states

The scheduler also has an order of precedence for events, in this way, if events of different nature converge to a single task, these will be served in the following order:

- 1. Queued notifications (higher precedence)
- 2. Time elapsed
- 3. Events from an attached queue
 - (a) Is full
 - (b) Element count
 - (c) Receiver
 - (d) Is empty
- 4. Simple notifications (lower precedence)

All the listed events are later detailed in section 2.

1.7 Getting started

Unpack the source files and copy it into your project folder. Then include the header file QuarkTS.h and setup the instance of the kernel using the qSchedulerSetup() inside the main thread. Additional configuration to the target compiler may be required to add the path



to the directory of header files . The code bellow shows a common initialization in the main source file.

File: main.c

```
#include "QuarkTS.h"
#define TIMER_TICK   0.001    /* 1ms */

void main(void){
    /*start of hardware specific code*/
    HardwareSetup();
    Configure_Periodic_Timer_Interrupt_1ms();
    /*end of hardware specific code*/
    qSchedulerSetup(NULL, TIMER_TICK, IdleTask_Callback, 10);
    /*
    TODO: add Tasks to the scheduler scheme and run the scheduler
    */
}
```

In the above code, the following considerations should be taken

- The function qSchedulerSetup() must be called before any interaction with the scheduler.
- The procedure HardwareSetup() should be a function with all the hardware instructions needed to initialize the target system.
- The procedure Configure_Periodic_Timer_Interrupt_1ms() should be a function with all the hardware instructions needed to initialize and run a timer with an overflow tick of one millisecond.

Task can be later added to the scheduling scheme by simply calling qSchedulerAdd_Task() or any of the other available APIs for specific purpose tasks.

1.8 Recommended programming pattern

A multitasking design pattern demands a better proyect organization. To have this attribute in your solution, code the tasks in a separate source file. A simple implementation example is presented below.

To make the tasks handling available in other contexts, nodes should be globals (see the extern qualifier in MyAppTasks.h header file). Avoid implementing functionalities in a component that are not related to each other. Put any other components and globals resources in a separated source file, for example (ScreenDriver.h/ScreenDriver.c), (Globals.h/Globals.c). These simple design tip, will allow you to have a better principle of abstraction and will maximize the cohesion of the solution, improving the code readability and maintenance.

File: MyAppTasks.h

```
#ifndef MYAPPTASK_H
#define MYAPPTASK_H

#include "Globals.h"
```



File: MyAppTasks.c

```
#include "MyAppTasks.h"
qTask_t CommunicationTask, HardwareCheckTask,
        CheckUserEventsTask, SignalAnalisysTask;
void CommunicationTask_Callback(qEvent_t e){
    TODO: Communication Task code
void HardwareCheckTask_Callback(qEvent_t e){
    TODO: Hardware Check Task code
    */
void CheckUserEventsTask_Callback(qEvent_t e){
    TODO: Check User Events Task code
}
void SignalAnalisysTask_Callback(qEvent_t e){
    TODO: Signal Analisys Task code
/*this task doesnt need an Identifier*/
void IdleTask_Callback(qEvent_t e){
    TODO: Idle Task code
    */
}
```

File: main.c



```
void main(void){
    /*start of hardware specific code*/
    HardwareSetup();
    Configure_Periodic_Timer_Interrupt_10ms();
    /*end of hardware specific code*/
    qSchedulerSetup(NULL, 0.01, IdleTask_Callback, 10);
    {\tt qSchedulerAdd\_Task(HardwareCheckTask\,,\;HardwareCheckTask\_Callback\,,}
                       120, 0.25, qPeriodic, qEnabled, NULL);
    qScheduler \verb|Add_Task| (Signal Analisys Task|, Signal Analisys Task_Callback|,
                        qHigh_Priority, 0.1, 200, qEnabled, NULL);
    {\tt qSchedulerAdd\_EventTask(CheckEventsTask,\ CheckEventsTask\_Callback,\ }
                        qMedium_Priority, NULL);
    qSchedulerAdd\_Task(CommunicationTask, CommunicationTask\_Callback,
                       qHigh_Priority, qTimeInmediate, qPeriodic,
                       qEnabled, NULL);
    qSchedulerRun();
    for(;;){}
```

1.9 Critical sections

Since kernel is non-preemptive, the only critical section that must be handled are the shared resources accessed from the ISR context. Perhaps, the most obvious way of achieving mutual exclusion is to allow the kernel to disable interrupts before it enters its critical section and then, enable interrupts after it leaves its critical section.

By disabling interrupts, the CPU will be unable to change the current context. This guarantees that the current running job can use a shared resource without another context accessing it. But, disabling interrupts, is a major undertaking. At best, the system will not be able to service interrupts for the time the current job is doing in its critical section, however, in QuarkTS, this critical sections are handled quickly as possible.

Since the kernel is hardware-independent, the application writer should provide the necessary piece of code to enable and disable interrupts.

For this, the qCritical_SetInterruptsED() API should be used. In this way, communication between ISR and tasks using queued notifications or data queues become safely.

Parameters:

- Restorer: The function with hardware specific code that enables or restores interrupts.
- Disabler: The function with hardware specific code that disables interrupts.

In some systems, disabling the global IRQ are not enough, as they don't save/restore state of interrupt, so here, the uint32_t argument and return value in both functions (Disabler and Restorer) becomes relevant, because they can be used by the application writer to save and restore the current interrupt configuration. So, when a critical section



is performed, the Disabler, in addition to disable the interrupts, return the current configuration to be retained by the kernel, later when the critical section finish, this retained value are passed to Restorer to bring back the saved configuration.

1.10 Task management APIs in run-time

Most of the scheduling parameters regarding task execution, can be changed at run-time. The following APIs are intended for this purpose.

```
void qTaskSetTime(qTask_t *Task, qTime_t Value)
```

Set/Change the task execution interval.

Parameters:

- Task: A pointer to the task node.
- Value: Execution interval defined in seconds (floating-point format). For immediate execution use qTimeImmediate.

```
void qTaskSetIterations(qTask_t *Task, qIteration_t Value)
```

Set/Change the number of task iterations.

Parameters:

- Task: A pointer to the task node.
- Value: Number of task executions (integer value). For indefinite execution user qPeriodic or qIndefinite. Tasks do not remember the number of iteration set initially.

```
void qTaskSetPriority(qTask_t *Task, qPriority_t Value)
```

Set/Change the task priority value.

Parameters:

- Task: A pointer to the task node.
- Value: Priority value. [O(min) 255(max)].

```
\verb|void qTaskSetCallback(qTask_t *Task, qTaskFcn_t CallbackFcn)| \\
```

Set/Change the task callback function.



Parameters:

- Task : A pointer to the task node.
- Callback: A pointer to a void callback method with a qEvent_t parameter as input argument.

```
void qTaskSetState(qTask_t *Task, const qState_t State)
void qTaskResume(qTask_t *Task)
void qTaskSuspend(qTask_t *Task)
```

Set the task state (enabled or disabled). .

Parameters:

- Task : A pointer to the task node.
- State: qEnabled Or qDisabled

```
void qTaskSetData(qTask_t *Task, void* UserData)
```

Set the task data.

Parameters:

- Task: A pointer to the task node.
- UserData: A pointer to the associated data.

```
void qTaskClearTimeElapsed(qTask_t *Task)
```

Clear the elapsed time of the task. Restart the internal task tick.

Parameters:

• Task: A pointer to the task node.

```
uint32_t qTaskGetCycles(const qTask_t *Task)
```

Retrieve the number of task activation's.

Parameters:

• Task: A pointer to the task node.



Return value:

A uint32_t value containing the number of task activations.

```
qBool_t qTaskIsEnabled(const qTask_t *Task)
```

Retrieve the enabled/disabled state.

Parameters:

• Task: A pointer to the task node.

Return value:

qTrue if the task in on enabled state, otherwise returns qFalse.

```
qTask_t* qTaskSelf(void)
```

Get current running task handle.

Return value:

A pointer to the current running task. NULL when the scheduler it's in a busy state or when idle-task is running.

1.11 Demonstrative examples

1.11.1 A simple scheduling

This example demonstrates a simple environment setup for multiple tasks. Initially only tasks 1 and 2 are enabled. Task1 runs every 2 seconds 10 times and then stops. Task2 runs every 3 seconds indefinitely. Task1 enables Task3 at its first run. Task3 run every 5 seconds. Task1 disables Task3 on its last iteration and changed Task2 to run every 1/2 seconds. At the end Task2 is the only task running every 1/2 seconds.



```
if(e->FirstIteration){
        qTaskResume(&Task3);
    if(e->LastIteration){
        qTaskSuspend(&Task3);
        qTaskSetTime(&Task2, 0.5);
void Task2_Callback(qEvent_t e){
   puts("Task2");
void Task3_Callback(qEvent_t e){
    puts("Task3");
int main(void) {
    HardwareSetup(); /*hardware initialization function*/
    /*function to fire an interrupt at 1ms - timer tick*/
    Configure_Periodic_Timer0_Interrupt_1ms();
    qSchedulerSetup(NULL, TIMER_TICK, NULL, 10);
    qSchedulerAdd_Task(&Task1, Task1_Callback, 50, 2.0, 10,
                      qEnabled, NULL);
    qSchedulerAdd_Task(&Task2, Task2_Callback, 50, 3.0, qPeriodic,
                      qEnabled, NULL);
    qSchedulerAdd_Task(&Task2, Task3_Callback, 50, 5.0, qPeriodic,
                      qDisabled, NULL);
    qSchedulerRun();
    return 0;
```

1.11.2 Using the task argument

As seen in section 1.4.2, tasks can accept a parameter of type pointer to void (void*). This parameter could be used for multiple applications, including storage, task identification , duplication removal and others. The following example shows the usage of this argument to avoid the callback duplication among task with the same behavior.

Consider a scenario where you have to build a digital controller for many physical variables, for example a PID controller for temperature, humidity and light. The PID algorithm will be the same for all variables. The only difference will be the variable input, the controlled output action and the PID gains. In this case each of the tasks, will utilize the same callback methods. The only difference will be the I/O parameters (specific for each PID controller).

Let's define a PID data structure with the I/O variables and gains.

```
typedef struct{
    float yt; /*Measured variable (Controller Input)*/
```



```
float ut; /*Controlled variable (Controller Output)*/
    float ie; /*Accumulated error*/
    float pe; /*Previous error*/
    float dt; /*Controller Time Step*/
    float sp; /*Set-Point*/
    float Kc, Ki, Kd; /*PID Gains*/
}PID_Params_t;
PID_Params_t TemperatureControl = {
   0,0,0,0, /*Initial IO state of yt and ut*/
   1.5, /*time step*/
   28.5, /*Set-Point*/
   0.89, 0.122, 0.001 /*Kc, Ki, Kd*/
PID_Params_t HumidityControl= {
   0,0,0,0, /*Initial IO state of yt and ut*/
   1, /*time step*/
   60.0, /*Set-Point*/
   2.5, 0.2354, 0.0015 /*Kc, Ki, Kd*/
};
PID_Params_t LightControl= {
   0,0,0,0, /*Initial IO state of yt and ut*/
   0.5, /*time step*/
   45.0, /*Set-Point*/
   5.36, 0.0891, 0.0 /*Kc, Ki, Kd*/
};
```

A task will be added to the scheme to collect the sensor data and apply the respective control output.

```
qSchedulerAdd_Task(&IO_TASK, IO_TASK_Callback, qMedium_Priority,
0.1, qPeriodic, qEnabled, "iotask");
```

```
void IO_TASK_Callback(qEvent_t e){
    TemperatureControl.yt = SampleTemperatureSensor();
    HumidityControl.yt = SampleHumiditySensor();
    LightControl.yt = SampleLightSensor();
    WriteTemperatureActuatorValue( TemperatureControl.ut );
    WriteHumidityActuatorValue( HumidityControl.ut );
    WriteLightActuatorValue( LightControl.ut );
}
```

Then, three different tasks are created to apply the respective PID controller. Note that these tasks refer to the same callback methods and we assign pointers to the respective variables.



```
qHigh_Priority, LightControl.dt,
qPeriodic, qEnabled, &LightControl);
```

```
void PIDControl_Callback(qEvent_t e){
    float Error, derivative;
    Obtain the reference to the specific PID controller
    usign the TaskData field of the qEvent structure
    PID_Params_t *Controller = (PID_Params_t *)e->TaskData;
    /*Compute the error*/
    Error = Controller->sp - Controller->yt;
    /* Compute \ the \ accumulated \ error \ using \ backward \ integral \ approximation*/
    Controller ->ie += Error*Controller ->dt;
    /*update and compute the derivative term*/
    derivative = (Error - Controller->pe)/Controller->dt;
    /*update the previous error*/
    Controller->pe = Error;
    /*compute the pid control law*/
    Controller->ut = Controller->Kc*Error +
                      Controller->Ki*Controller->ie +
                      Controller ->Kd*derivative;
}
```



1.12 Configuration macros

Some OS features can be customized using a set of macros located on the header file qconfig.h. Here is the default configuration, followed by an explanation of each macro:

Q_SETUP_TIME_CANONICAL	Default: O(disabled). If enabled, the kernel assumes the timing base to 1mS(1KHz). So all time specifications for tasks and STimers must be set in milliseconds(mS). Can be used to remove the floating-point operations when dealing with time. In some systems, can reduce the memory usage.
Q_SETUP_TICK_IN_HERTZ	Default: O(disabled). If enabled, the timing base will be taken as frequency(Hz) instead of period(S) by qSchedulerSetup() (In some systems, can reduce the memory usage).
Q_BYTE_SIZED_BUFFERS	Default: 1(enabled). Used to enable or disable the usage of Byte-sized buffers.
Q_MEMORY_MANAGER	Default: 1(enabled). Used to enable or disable the memory management module.
Q_BYTE_ALIGNMENT	Default: 8. Used by the memory management module to perform the byte-alignment.
Q_DEFAULT_HEAP_SIZE	Default: 2048. The total amount of heap size for the default memory pool.
Q_FSM	Default: 1(enabled). Used to enable or disable the Finite State Machine (FSM) extension.
Q_QUEUES	Default: 1(enabled). Used to enable or disable the queues APIs for communication to tasks.
Q_PRIORITY_QUEUE	Default: 1(enabled). Used to enable or disable the kernel priority queue for notifications.
Q_AUTO_CHAINREARRANGE	Default: 1(enabled). If enabled, the kernel perform a new scheduling chain when task's priorities change in run-time.
Q_TRACE_VARIABLES	Default: 1(enabled). Used to enable or disable debug and trace macros.
Q_DEBUGTRACE_BUFSIZE	Default: 36. The buffer size for debug and trace macros.
Q_DEBUGTRACE_FULL	Default: 1(enabled). Used to enable of disable the extended output of trace macros.
Q_ATCOMMAND_PARSER	Default: 1(enabled). Used to enable or disable the CLI AT parser module.
Q_TASK_COUNT_CYCLES	Default: 1(enabled). Used to enable or disable the cycle count in tasks.
Q_MAX_FTOA_PRECISION	Default: 10. The default precision used to perform float to ASCII conversions.
Q_ATOF_FULL	Default: O(disabled). Used to enable or disable the scientific notation in ASCII to float conversions.
Q_LISTS	Default: 1(enabled). Used to enable or disable the generic lists APIs.
Q_ALLOW_SCHEDULER_RELEASE	Default: O(disabled). Used to enable or disable the scheduler release functionality.



2 Events

2.1 Time elapsed

Running tasks at pre-determined rates is desirable in many situations, like sensory data acquisition, low-level servoing, control loops, action planning and system monitoring. As seen in section 1.4.2, you can schedule tasks at any interval your design demands, at least, if the time specification is lower than the scheduler tick. When an application consists of several periodic tasks with individual timing constraints, a few points must be taken:

- When the time interval of a certain task has elapsed, the scheduler triggers an event (byTimeElapsed) that put the task in a qReady state (see figure 3).
- If a task has a finite number iterations, the scheduler will disable the task when the number of iterations reaches the programmed value.
- Tasks always have an inherent time-lag that can be noticed even more, when the programmed time-interval is too low (see figure 3). In a real-time context, it is important to reduce this time-lag or jitter, to an acceptable level for the application.

QuarkTS can generally meet a time deadline if you use lightweight code in the callbacks and there is a reduced pool of pending tasks, so it can be considered a soft real-time scheduler, however it cannot meet a deadline deterministically like a hard real-time OS.



Figure 3: Inherit time lag

- The most significant delay times are produced inside the callbacks. As mentioned before, use short efficient callback methods written for cooperative scheduling.
- If two tasks have the same time-interval, the scheduler executes first, the task with the highest priority value (see figure 4).



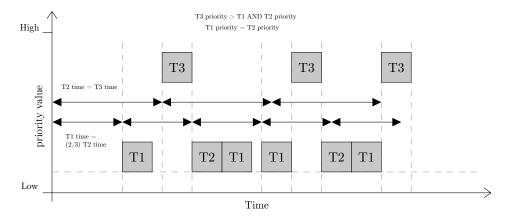


Figure 4: Priority scheduling example with three (3) tasks attached triggered by timeelapsed events

2.2 Asynchronous events and inter-task communication

Applications existing in heavy environments require tasks and ISR interacting to each other, forcing the application to implement some event model. Here, we understand events, as any identifiable occurrence that has significance for the embedded system. As such, events include changes in hardware, user-generated actions and system-generated events.

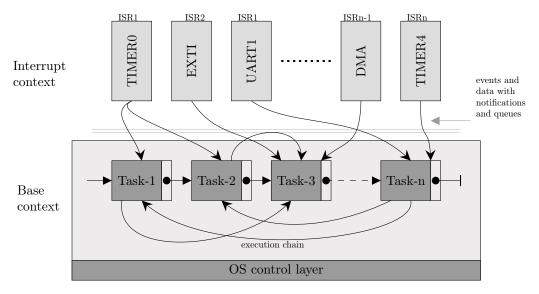


Figure 5: Heavy cooperative environment

As shown in figure 5, two main scenarios are presented, ISR-to-task and task-to-task interaction. When using interrupts to catch external events, it is expected to be handled with fast and lightweight code to reduce the variable ISR overhead introduced by the



code itself. If too much overhead is used inside an ISR, the system will tend to lose future events. In some specific situations, the best approach, is to synchronize the ISR with a task to leave the heavy job in the base-level instead the interrupt-level.

The other scenario is when a task is performing a specific job and another task must be awaken to perform some activities when the other task finish.

Both scenarios requires some ways in which tasks can communicate with each other. For this, the OS does not impose any specific event processing strategy to the application designer, but does provide features that allow the chosen strategy to be implemented in a simple and maintainable way. From the OS perspective, this features are just sources of asynchronous events with specific triggers and related data.

The OS API provides the following features for task communication:

2.2.1 Notifications

The notifications allow tasks interact with other tasks and to synchronize with ISRs without the need of intermediate variables or separate communication objects. By using notifications, a task or ISR can launch another task sending an event and related data to the receiving task. This is depicted in figure 6.

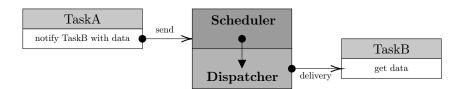


Figure 6: A notification used to send an event directly from one task to another

2.2.1.1 Simple notifications: Each task node has a 8-bit notification value which is initialised to zero when task is added to the scheme. The qTaskSendNotification() API is used to send an event directly updating the receiving task's notification value increasing it by one. As long the scheduler sees a non-zero value, task will be changed to a qReady state and eventually, the dispatcher will launch the task according to the execution chain. After served, the notification value are later decreased.

```
qBool_t qTaskSendNotification(qTask_t *Task, void* EventData)
```

Parameters

- Task: The pointer of the task node to which the notification is being sent
- EventData : Specific event user-data.



Return value:

qTrue if the notification has been sent, or qFalse if the notification value reach their max value

Sending simple notifications using qTaskSendNotification() is interrupt-safe, however, this only catch one event per task because the API overwrites the associated data.

2.2.1.2 Queued notifications: If the application notifies multiple events to the same task, queued notifications is the right solution instead using simple notifications.

Here, the qTaskQueueNotification() take advantage of the scheduler FIFO priority-queue. This kind of queue, is somewhat similar to a standard queue, with an important distinction: when a notification is sent, the task is added to the queue with the corresponding priority level, and will be later removed from the queue with the highest priority task first [2]. That is, the tasks are (conceptually) stored in the queue in priority order instead of insertion order. If two tasks with the same priority are notified, they are served in the FIFO form according to their order inside the queue. Figure 7 illustrates this behavior.



Figure 7: Priority-queue behavior

The scheduler always checks the queue state, being this event the one with more precedence among the others. If the queue has elements, the scheduler algorithm will extract the data and the corresponding task will be launched with the trigger flag set in by Notification Queued.

```
void qTaskQueueNotification(qTask_t *Task, void* EventData)
```

Parameters

• Task: The pointer of the task node to which the notification is being sent



• EventData: Specific event user-data.

Return value:

qTrue if the notification has been inserted in the queue, or qFalse if an error occurred or the queue exceeds the size.

Among all the provided events, queued notifications has the higher precedence.

Figure 8, shows a cooperative environment with five tasks. Initially, the scheduler activates Task-E, then, this task enqueues data to Task-A and Task-B respectively using the qTaskQueueNotification() function. In the next scheduler cycle, the scheduler realizes that the priority-queue is not empty, generating an activation over the task located at the beginning of the queue. In this case, Task-A will be launched and its respective data will be extracted from the queue. However, Task-A also enqueues data to Task-C and Task-D. As mentioned previously, this is a priority-queue, so the scheduler makes a new reordering. In this context, the next queue extraction will be for Task-D, Task-C, and Task-B sequentially.

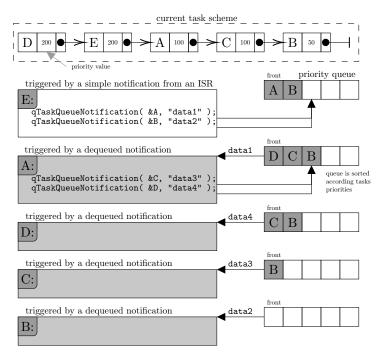


Figure 8: Priority-queue example

Any queue extraction involves an activation to the receiving task. The extracted data will be available inside the <code>qEvent_t</code> structure.



2.2.2 Spread a notification

In some systems, we need the ability to broadcast an event to all tasks. This is often referred to as a *barrier*. This means that a group of tasks should stop activities at some point and cannot proceed until another task or ISR raise a specific event. For this kind of implementations, the qSchedulerSpreadNotification() can be used.

```
qBool_t qSchedulerSpreadNotification(void *eventdata,
qTaskNotifyMode_t mode)
```

Parameters

- eventdata: Specific event user-data.
- mode: The method used to spread the event: Q_NOTIFY_SIMPLE or Q_NOTIFY_QUEUED

Return value:

qTrue if the event could be spread in all tasks. Otherwise qFalse.

This function spread a notification event among all the tasks in the scheduling scheme, so, for tasks that are not part of the barrier, just discard the notification.

2.2.3 Queues

A queue its a linear data structure with simple operations based on the FIFO (First In First Out) principle. Is capable to hold a finite number of fixed-size data items. The maximum number of items that a queue can hold is called its *length*. Both the length and the size of each data item are set when the queue is created.

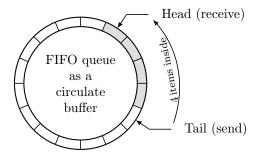


Figure 9: qQueues conceptual representation

As showed in figure 9, the last position is connected back to the first position to make a circle. It is also called *ring-buffer* or *circular-queue*.



In general, this kind of data structure is used to serialize data between tasks, allowing some elasticity in time. In many cases, the queue is used as a data buffer in interrupt service routines. This buffer will collect the data so at some later time, another task can fetch the data for further processing. This use case is the single "task to task" buffering case. There is also another applications for queues as serialize many data streams into one receiving streams (multiple tasks to a single task) or vice-versa (single task to multiple tasks) The usage of this data structure is detailed in section 2.4.2.

The OS uses the queue by copy method. Queuing by copy is considered to be simultaneously more powerful and simpler to use than queuing by reference.

Queuing by copy does not prevent the queue from also being used to queue by reference. For example, when the size of the data being queued makes it impractical to copy the data into the queue, then a pointer to the data can be copied into the queue instead.

2.3 Retrieving the event data

As you can read in the previous sections, tasks can be triggered from multiple event sources (time-elapsed, notifications and queues). This can lead to several situations that must be handled by the application writer from the task context, for example:

- What is the event source that triggers the task execution?
- How to get the event associated data?
- What is the task execution status?

The OS provides a simple approach for this, a data structure with all the regarding information of the task execution. This structure is already defined in the callback function, and is filled by the kernel dispatcher, so the application writer only needs to read the fields inside.

This data structure is defined as:

```
typedef struct{
    qTrigger_t Trigger;
    void *TaskData;
    void *EventData;
    qBool_t FirstCall, FirstIteration, LastIteration;
}qEvent_t;
```

Every field of the structure are described as follows

- Trigger: The flag that indicates the event source that triggers the task execution. This flag can only have eight(8) possible values:
 - byTimeElapsed: When the time specified for the task elapsed.
 - byNotificationQueued: When there is a queued notification in the FIFO priority queue. For this trigger, the dispatcher performs a dequeue operation automatically. A pointer to the extracted event-data will be available in the EventData field.



- byNotificationSimple: When the execution chain does, according to a requirement of asynchronous notification event prompted by qSendEvent. A pointer to the dequeued data will be available in the EventData field.
- byQueueReceiver: When there are elements available in the attached queue, the scheduler makes a data dequeue(auto-receive) from the front. A pointer to the received data will be will be available in the EventData field.
- byQueueFul1: When the attached queue is full. A pointer to the queue will be available in the EventData field.
- byQueueCount: When the element-count of the attached queue reaches the specified value. A pointer to the queue will be available in the EventData field.
- byQueueEmpty: When the attached queue is empty. A pointer to the queue will be available in the EventData field.
- byNoReadyTasks : Only when the idle task is triggered
- TaskData: The storage pointer. Tasks can store a pointer to specific variable, structure or array, which represents specific user data for a particular task. This may be needed if you plan to use the same callback method for multiple tasks.
- EventData: Associated data of the event. Specific data will reside here according to the event source. This field will only have a NULL value when the trigger is by Time Elapsed or by Priority.
- FirstCall: This flag indicates that a task is running for the first time. Can be used for data initialization purposes.
- FirstIteration: Indicates whether current pass is the first iteration of the task. This flag will be only set when time-elapsed events occurs and the iteration counter has been parameterized.
- LastIteration: Indicates whether current pass is the last iteration of the task. This flag will be only set when time-elapsed events occurs and the iteration counter has been parameterized.

Asynchronous events never change the task iteration counter, consequently, it has no effect on related fields, FirstIteration and LastIteration.

2.4 Implementation guidelines

2.4.1 Sending notifications

The kernel handle all the notifications by itself (simple or queueded), so intermediate objects aren't needed. Just calling qTaskSendNotification() or qTaskQueueNotification() is enough to send notifications. After the task callback is invoked, the notification is cleared by the dispatcher. Here the application writer must read the respective fields of the event-data structure to check the received notification.



The next example show a ISR to task communication. Two interrupts send notifications to a single task with specific event data. The receiver task (taskA) after a further processing, send an event to taskB to handle the event generated by the transmitter (taskA).

```
#include <stdio.h>
#include <stdlib.h>
#include <string.h>
#include "HAL.h" /*hardware dependent code*/
#include "QuarkTS.h"
qTask_t taskA, taskB;
void taskA_Callback(qEvent_t e);
void taskB_Callback(qEvent_t e);
const char *app_events[] = {
                          "Timer1seg",
                          "ButtonRisingEdge",
                          "ButtonFallingEdge",
                          "3Count_ButtonPush"
                          };
/*-----/
void interrupt Timer1Second_ISR(void){
   qTaskSendNotification(&taskA, NULL);
   HAL_ClearInterruptFlags(HAL_TMR_ISR); /*hardware dependent code*/
void interrupt ExternalInput_ISR(void){
   if( HAL_GetInputEdge() == RISING_EDGE ) { /*hardware dependent code*/
       qTaskQueueNotification(&taskA, app_events[1]);
   }
   else{
       qTaskQueueNotification(&taskA, app_events[2]);
   HAL_ClearInterruptFlags(HAL_EXT_ISR); /*hardware dependent code*/
void taskA_Callback(qEvent_t e){
   static int press_counter = 0;
   switch(e->Trigger){ /*check the source of the event*/
       case byNotificationSimple:
           * Do something here to process the timer event
           */
           break;
       case byNotificationQueued:
           /*here, we only care the Falling Edge events*/
           if( strcmp( e->EventData, "ButtonFallingEdge" )==0 ){
               press_counter++; /*count the button press*/
               if ( press_counter == 3){ /*after 3 presses*/
                  /*send the notification of 3 presses to taskB*/
                  qTaskSendNotification(taskB, app_events[3]);
                  press_counter = 0;
           }
           break;
```



```
default:
            break;
}
void taskB_Callback(qEvent_t e){
    if( byNotificationSimple == e->Trigger){
         * we can do more here, but this is just an example,
         * so, this task will only print out the received
         * notification event.
        qDebugMessage( e->EventData );
}
int main(void){
    HAL_Setup_MCU(); /*hardware dependent code*/
    qSetDebugFcn( HAL_OutPutChar );
    /* setup the scheduler to handle up to 10 queued notifications*/
    qSchedulerSetup(HAL_GetTick,0.001 NULL, 10);
    qSchedulerAdd_EventTask(&taskA, taskA_Callback, qLowest_Priority, NULL)
    qSchedulerAdd_EventTask(&taskB, taskB_Callback, qLowest_Priority, NULL)
    qSchedulerRun();
```

2.4.2 Creating a queue: qQueueCreate

A queue must be explicitly created before it can be used.

This objects are referenced by handles, which are variables of type qQueue_t. The qQueueCreate() API function creates a queue and initialize the instance.

The required RAM for the queue data should be provided by the application writer and could be statically allocated at compile time or in run-time using the memory management module.

```
qBool_t qQueueCreate(qQueue_t *obj, void* DataArea,
qSize_t ItemSize, qSize_t ItemsCount)
```

Parameters

- obj : A pointer to the queue object
- DataArea: Must point to a data block or array of data that is at least large enough to hold the maximum number of items that can be in the queue at any one time
- ElementSize: Size of one element in the data block
- ElementCount: The maximum number of items the queue can hold at any one time.



2.4.3 Performing queue operations

```
qBool_t qQueueSendToBack(qQueue_t *obj, void *ItemToQueue)
```

```
qBool_t qQueueSendToFront(qQueue_t *obj, void *ItemToQueue)
```

As might be expected, qQueueSendToBack() is used to send data to the back (tail) of a queue, and qQueueSendToFront() is used to send data to the front (head) of a queue. qQueueSend() is equivalent to, and exactly the same as, qQueueSendToBack().

Parameters

- obj : A pointer to the queue object
- ItemToQueue: A pointer to the item that is to be placed on the queue. The size of the items the queue will hold was defined when the queue was created, so this many bytes will be copied from ItemToQueue into the queue storage area.

Return value

qTrue if data was retrieved from the queue, otherwise returns qFalse.

The API qQueueReceive() is used to receive (read) an item from a queue. The item that is received is removed from the queue.

```
qBool_t qQueueReceive(qQueue_t *obj, void *dest)
```

Parameters

- obj : A pointer to the queue object
- ItemToQueue: Pointer to the buffer into which the received item will be copied.

Return value

qTrue if data was retrieved from the queue, otherwise returns qFalse.

2.4.4 Attach a queue to a task

Additional features are provided by the kernel when the queues are attached to tasks; this allows the scheduler to pass specific queue events to it, usually, states of the object itself that needs to be handled, in this case by a task. For this, the following API is provided:

```
qBool_t qTaskAttachQueue(qTask_t *Task, qQueue_t *Queue, const qQueueLinkMode_t Mode, uint8_t arg)
```



Parameters

- obj : A pointer to the task node
- obj : A pointer to the queue object
- Mode: Attach mode. This implies the event that will trigger the task according to one of the following modes:
 - qQUEUE_DEQUEUE: The task will be triggered if there are elements in the queue.
 - qQUEUE_FULL: The task will be triggered if the queue is full.
 - qQUEUE_COUNT: The task will be triggered if the count of elements in the queue reach the specified value.
 - qQUEUE_EMPTY: The task will be triggered if the queue is empty.
- arg: This argument defines if the queue will be attached (qattach) or detached (qdetach) from the task. If the qqueue_count mode is specified, this value will be used to check the element count of the queue. A zero value will act as qdetach action.

For the qQUEUE_DEQUEUE mode, data from front of the queue will be received automatically in every trigger, this involves a data removal after the task is served. During the respective task execution, the EventData field of the qEvent_t structure will be pointing to the extracted data.

For the other modes, the EventData field will point to the queue that triggered the event.

2.4.5 A queue example

This example shows the usage of the QuarkTS queues. The application is the classic producer/consumer example. The producer task puts data into the queue. When the queue reaches a specific item count, the consumer task is triggered to start fetching data from the queue. Here, both tasks are attached to the queue.



```
* space in it, otherwise the task block itself and wait until the queue
 * is empty to resume.
void TSK_Producer_Callback(qEvent_t e) {
   static uint16_t unData = 0;
    unData++;
    /*\mathit{Queue}\ is\ \mathit{empty}\ ,\ \mathit{enable}\ \mathit{the}\ \mathit{producer}\ \mathit{if}\ \mathit{it}\ \mathit{was}\ \mathit{disabled}\, */
    if(e->Trigger == byQueueEmpty){
        qTaskResume(qTaskSelf());
    if (!qQueueSendToBack(&UserQueue, &unData)){    /*send data to the queue*/
        * if the data insertion fails, the queue is full
        * and the task disables itself
     qTaskSuspend(qTaskSelf());
}
/* The consumer task gets one element from the queue.*/
void TSK_Consumer_Callback(qEvent_t e) {
   uint16_t unData;
    qQueue_t *ptrQueue; /*a pointer to the queue that triggers the event*/
    if(e->Trigger == byRBufferCount){
      ptrQueue= (qQueue_t *)e->EventData;
      qQueueReceive(ptrQueue, &unData);
      return:
}
void IdleTask_Callback(qEvent_t e){
   /*nothing to do...*/
/*-----
int main(void) {
    uint8_t BufferMem[16*sizeof(uint16_t)] = {0};
    HardwareSetup(); //hardware specific code
   /* next line is used to setup hardware with specific code to fire
    * interrupts at 1ms - timer tick*/
    Configure_Periodic_Timer0_Interrupt_1ms();
    qQueueCreate(&UserQueue, BufferMem /*Memory block used*/,
                 sizeof(uint16_t) /*element size*/,
                 16 /* element count*/ );
    qSchedulerSetup(NULL, TIMER_TICK, IdleTask_Callback, 10);
    /* Append the producer task with 100mS rate. */
    qSchedulerAdd_Task(&TSK_PRODUCER, TSK_Producer_Callback, 50, 0.1,
                     qPeriodic, qEnabled, "producer");
    /* Append the consumer as an event task. The consumer will
     * wait until an event trigger their execution
    qSchedulerAdd_EventTask(&TSK_CONSUMER, TSK_Consumer_Callback,
                            50, "consumer");
    /* the queue will be attached to the consumer task
     * in qQUEUE\_COUNT mode. This mode sends an event to the consumer
     * task when the queue fills to a level of 4 elements
```



```
qTaskAttachQueue(&TSK_CONSUMER, &UserQueue, qQUEUE_COUNT, 4);
/* the queue will be attached to the producer task in
  * qQUEUE_EMPTY mode. This mode sends an event to the producer
  * task when the queue is empty
  */
qTaskAttachQueue(&TSK_PRODUCER, &UserQueue, qQUEUE_EMPTY, qATTACH);
qSchedulerRun();
return 0;
}
```

2.4.6 Other queue APIs

```
void qQueueReset(qQueue_t *obj)
```

Resets a queue to its original empty state.

Parameters:

• obj : A pointer to the queue object

```
qBool_t qQueueIsEmpty(qQueue_t *obj)
```

Returns the empty status of the queue.

Parameters:

• obj : A pointer to the queue object

Return value:

qTrue if the queue is empty, qFalse if it is not.

```
qSize_t qQueueCount(qQueue_t *obj)
```

Returns the number of items in the queue.

Parameters:

• obj : A pointer to the queue object.

Return value:

The number of elements in the queue.

```
qBool_t qQueueIsFull(qQueue_t *obj)
```

Returns the full status of the queue.



• obj : A pointer to the queue object.

Return value:

qTrue if the queue is full, qFalse if it is not.

```
void* qQueuePeek(qQueue_t *obj)
```

Looks at the data from the front of the queue without removing it.

Parameters:

• obj : A pointer to the queue object.

Return value:

Pointer to the data, or NULL if there is nothing in the queue.

```
qBool_t qQueueRemoveFront(qQueue_t *obj)
```

Remove the data located at the front of the queue.

Parameters:

• obj : A pointer to the queue object.

Return value:

qTrue if data was removed from the queue, otherwise returns qFalse.



3 Modules

3.1 STimers

There are several situations were the application don't need such hard real-time precision for timing actions and we just need that a section of code will execute when at least, some amount of time has elapsed. For this purposes, STimers (Software-Timers) is the right module to use.

The STimers implementation don't access resources from the interrupt context, does not consume any significant processing time unless a timer has actually expired, does not add any processing overhead to the sys-tick interrupt, and does not walk any other data structures. The timer service just take the value of the existing kernel clock source for reference (t_{sys}), allowing timer functionality be added to an application with minimal impact.



Figure 10: STimers operation

As illustrated in figure 10, the time expiration check is roll-over safe by restricting it, to the only calculation that make sense for timestamps, $t_{sys} - X_{T_x}$, that yields a duration namely the amount of time elapsed between the current instant(t_{sys}) and the later instant, specifically, the tick taken at the arming instant with (qSTimerSet()), (X_{t_i}). Thanks to modular arithmetic, both of these are guaranteed to work fine across the clock-source rollover(a 32bit unsigned-counter), at least as long as the delays involved are shorter than 49.7 days.

Features:

- Provides a non-blocking equivalent to delay function.
- Each STimer encapsulate its own expiration (timeout) time.
- Provides elapsed and remaining time APIs.
- As mentioned before, STimers uses the same kernel clock source, this means the time-elapsed calculation use the qSchedulerGetTick() API, therefore, the time resolution has the same value passed when scheduler has being initialized with qSchedulerSetup().



3.1.1 Usign a STimer

A STimer is referenced by handle, a variable of type qSTimer_t and preferably, should be initialized by the QSTIMER_INITIALIZER constant before any usage.

To use them, the code should follow a specific pattern that deals with the states of this object. All related APIs are designed to be non-blocking, this means there are ideal for use in cooperative environments as the one provided by the OS itself. To minimize the implementation, this object is intentionally created to behave like a binary object, this implies that it only handles two states, *Armed* and *Disarmed*.

An *Armed* timer means that is already running with a specified preset value and a *Disarmed* timer, is their opposite, this means it doesn't have a preset value, so consequently, is not running at all.

The arming actions can be performed with qSTimerSet() or qSTimerFreeRun() and disarming with qSTimerDisarm().

A detailed API description are presented below. (For qSTimerDisarm() ignore the Time argument.)

```
qBool_t qSTimerSet(qSTimer_t obj, const qTime_t Time)
```

```
qBool_t qSTimerFreeRun(qSTimer_t obj, const qTime_t Time)
```

```
void qSTimerDisarm(qSTimer_t *obj)
```

Parameters

- obj : A pointer to the STimer object.
- Time: The expiration time(must be specified in seconds).

Here, qSTimerFreeRun() its a more advanced API, it does the check and the arming. If disarmed, it gets armed immediately with the specified time. If armed, the time argument is ignored and the API only checks for expiration. When the time expires, the STimer gets armed immediately taking the specified time.

Return Value

For qSTimerSet() qTrue on success, otherwise, returns qFalse.

For qSTimerFreeRun() returns qTrue when the STimer expires, otherwise, returns qFalse. For a disarmed STimer, also returns qFalse.

None for qSTimerDisarm().

All possible checking actions are also provided for this object, including qSTimerElapsed(), qSTimerRemaining() and qSTimerExpired(), being the last one, the recurrent for most of the common timing applications. Finally, to get the current status of the STimer (check if is Armed or Disarmed) the qSTimerStatus() API should be used.

```
qClock_t qSTimerElapsed(const qSTimer_t *obj)
```



```
qClock_t qSTimerRemaining(const qSTimer_t *obj)

qBool_t qSTimerExpired(const qSTimer_t *obj)
```

```
qBool_t qSTimerStatus(const qSTimer_t *obj)
```

For this APIS, their only argument, its a pointer to the STimer object.

Return Value

For qSTimerElapsed(), qSTimerRemaining() returns the elapsed and remaining time specified in epochs respectively.

For qSTimerExpired(), returns qTrue when STimer expires, otherwise, returns qFalse. For a disarmed STimer, also returns qFalse.

For qSTimerStatus(), returns qTrue when armed, and qFalse for disarmed.

Usage example:

The example bellow, shows a simple usage of this object, it is noteworthy that arming is performed once using the FirstCall flag. This prevents timer gets re-armed every time the task run. After the timer expires, it should be disarmed explicitly.

```
void Example_Task(qEvent_t e){
    static qSTimer_t timeout = QSTIMER_INITIALIZER;
    if(e->FirstCall){
        /*Arming the stimer for 3.5 seg*/
        qSTimerSet(&timeout, 3.5);
}

/*non-blocking delay, true when timeout expires*/
    if(qSTimerExpired(&timeout)){
        /*
        TODO: Code when STimer expires
        */
        qSTimerDisarm(&timeout);
}
else return; /*Yield*/
}
```

3.2 Finite State Machines (FSM)

The state machine is one of the fundamental programming patterns. Designers use this approach frequently for solving complex engineering problems. State machines break down the design into a series of finite steps called "states". Each state performs some narrowly defined actions. Events, on the other hand, are the stimuli which cause the state to move or produce a transition between states.

In QuarkTS, states must be defined as functions taking a qSMData_t object and returning a qSM_Status_t value. An example it's shown in the following code snippet:



```
qSM_Status_t Example_State(qSMData_t m){
    /*
    TODO: State code
    */
    return qSM_EXIT_SUCCESS;
}
```

Here, the return value represents the finish status of the state, allowing only the values listed below.

- qSM_EXIT_SUCCESS(-32768).
- qSM_EXIT_FAILURE(-32767).
- Any other integer value between -32766 and 32767.

Every state machine has the concept of current state (P). This is the state that FSM currently occupies. At any given moment in time, the state machine can be in only a single state. The exit status can be handled with additional sub-states $(S_{(b,s,u,f)})$ established at the moment of the FSM initialization. This workflow between the current state and the sub-states are better showed in the graph below:



Figure 11: Sub-states evaluated after and before the *current* state

Figure 11 shows that this *sub-states* (if enabled) are implicitly linked in the workflow, to every state in the FSM. This *sub-states*, and the way they are called are described below:

- Before Any (S_b) : Performed in every FSM cycle. As its name implies, it is launched before the current state executes.
- Success (S_s) : This sub-state is conditioned to the exit status of the current state. If current state has exited with qSM_EXIT_SUCCESS, this sub-state will be launched after. Can be used to assert the actions of the current state, for example, if a



certain state if controlling an output, the value over it will be written only, if the state has ended correctly.

- Failure (S_f) : Same behavior as the previous one, but instead, is conditioned to the exit value $qSM_EXIT_FAILURE$. Can be used to handle exceptions.
- Unexpected (S_u) : Same behavior as Failure and Success, but instead, is conditioned to an exit value between -32766 and 32767. The applications for this sub-state should be defined by the application writer.

3.2.1 Setting up a state machine: qStateMachine_Init

As any other OS objects, a finite state machine (FSM) must be explicitly initialized before it can be used. FSMs are referenced by handles, which are variables of type qsm_t.

The qStateMachine_Init() API initialize the instance, set the initial state and conditioned sub-states.

Parameters

- obj : A pointer to the FSM object.
- InitState: The first state to be performed. This argument is a pointer to a callback function, returning qSM_Status_t and with a qSMData_t variable as input argument.
- SuccessState: Sub-State performed after a state exits with qsm_exit_success.
- FailureState : Sub-State performed after a state exits with qSM_EXIT_FAILURE.
- UnexpectedState: Sub-State performed after a state exits with any value between -32766 and 32767.

Note: For every sub-state argument, a NULL value will act as a disable action.

Unlike normal states, a sub-state should not return anything, thus, the callback for substates should be written as:

```
void SubState_Example(qSMData_t m){
    /*
    TODO: Sub-State code
    */
}
```



3.2.2 Running a state machine: qStateMachine_Run

This API is used to execute the finite state machine. Only a single cycle is performed invoking the callback of the current active state, and of course, the available sub-states according to figure 11.

```
void qStateMachine_Run(qSM_t *obj, void* Data)
```

Parameters

- obj : a pointer to the FSM object.
- Data: FSM associated data. Also can be used to represents the FSM arguments. All arguments must be passed by reference and cast to (void *). For multiple data, create a structure and pass a pointer to that structure.

3.2.3 Changing states and retrieving FSM data

Both, states and sub-states callbacks takes a qSMData_t object as input argument, that is basically a pointer to the FSM that invoke the state. The usage of this object its underlying to make the FSM move between states and additionally, get extra execution data. The provided fields are:

- NextState: The next state to be performed after the current state finish. The application writer should change this field to another state callback to produce a state transition in the next FSM's cycle.
- PreviousState (read-only): Last state seen in the flow chart.
- LastState (read-only): The last state executed.
- PreviousReturnStatus (read-only): The exit(or return) status of the previous state.
- StateFirstEntry (read-only): A flag that indicates that the state has just entered from another state.
- Data (read-only): State-machine associated data. If the FSM is running as a task, the associated event data can be queried thought this field. (here, a cast to qEvent_t is mandatory)

The developer is free to write and control the state transitions. A state can jump to another by changing the NextState field. There is no way to enforce the state transition rules. Any transition is allowed at any time.

The code snipped bellow, show how this input argument should be used to produce a state transition and obtain additional information:



3.2.4 Adding a state machine as a task: qSchedulerAdd_StateMachineTask

The best FSM running strategy, is delegating it to a task. For this, the provided API should be used. Here, the task doesn't have a specific callback, instead, it will evaluate the active state of FSM, and later, all the other possible states in response to events that mark their own transition. The task will be scheduled to run every Time seconds in qPeriodic mode.

Using this API, the kernel will take care of the FSM by itself, so the usage of qStateMachine_Init() and qStateMachine_Run() can be omitted.

Parameters

- Task: A pointer to the task node.
- Priority: The priority value. [0(min) 255(max)]
- Time: Execution interval defined in seconds (floating-point format). For immediate execution use the qTimeImmediate definition.



- StateMachine: A pointer to Finite State-Machine (FSM) object.
- InitState: The first state to be performed.
- BeforeAnyState : The sub-state called before any current state.
- SuccessState : Sub-State performed after a state exits with qSM_EXIT_SUCCESS.
- FailureState: Sub-State performed after a state exits with qSM_EXIT_FAILURE.
- UnexpectedState : Sub-State performed after a state exits with any value between -32766 and 32767.
- TaskInitState : Specifies the initial state of the task (qEnabled or qDisabled).
- arg Represents the task arguments. All arguments must be passed by reference and cast to (void *).

Note: For every sub-state argument, a NULL value will act as a disable action.

Now that a task is running a dedicated state-machine, the specific task event-info can be obtained in every state callback through the Data field of the qSMData_t argument. Check the example below:

```
qSM_Status_t Example_State(qSMData_t m){
    qEvent_t e = m->Data;
    /* Get the event info of the task that handle this state-machine*/
   if(e->FirstCall){
        TODO: Task initialization
        */
   switch(e->Trigger){
        case byTimeElapsed:
            TODO: Code for this case
        break;
        case byNotificationSimple:
            TODO: Code for this case
        break;
        case byQueueCount:
            TODO: Code for this case
        break;
        default: break;
   }
    TODO: State code
    */
   return qSM_EXIT_SUCCESS;
```



3.2.5 A demonstrative example

In this example, one press of the button turn on the LED, a second push of the button will make the LED blink and if the button is pressed again, the LED will turn off. Also, our system must turn off the LED after a period of inactivity. If the button hasn't been pressed in the last 10 seconds, the LED will turn off.

States (S_i) and transitions (t_i) are described as follows:

• S_1 : LED Off

• S_2 : LED On

• S_3 : LED Blink

• t_1 : Button press (rising edge)

• t_2 : Timeout (10S)

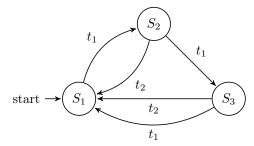


Figure 12: A simple FSM example with three states

To start the implementation, let's define the necessary global variables...

```
qTask_t LED_Task; /*The task node*/
qFSM_t LED_FSM; /*The state-machine handler*/
```

Then, we define our states as the flow-diagram showed in figure 12.



Finnaly we add the task to the scheduling scheme running a dedicated state machine.

Note: Remember that you must setup the scheduler before adding a task to the scheduling scheme.

```
qSchedulerAdd_StateMachineTask(&LED_Task, qHigh_Priority, 0.1, &LED_FSM, State_LED_Off, NULL, NULL, NULL, NULL, qEnabled, NULL);
```

3.2.6 Changing the FSM attributes in run-time

For this, use the API that are detailed below:

```
void qStateMachine_Attribute(qSM_t *obj, qFSM_Attribute_t Flag , qSM_State_t s, qSM_SubState_t subs)
```

- obj : A pointer to the FSM object.
- Flag: Flag: The attribute/action to be taken. Should be one of the following:
 - qsm_restart : Restart the FSM (here, the s argument must correspond to the init-state)
 - qSM_CLEAR_STATE_FIRST_ENTRY_FLAG: clear the entry flag for the current state if the NextState field doesn't change.
 - qsm_failure_state : Set the failure sub-state.
 - qsm_success_state : Set the success sub-state.
 - qSM_UNEXPECTED_STATE : Set the unexpected sub-state.
 - qsm_before_any_state : Set the sub-state executed before any state.
- s: The new value for state (only apply in qSM_RESTART). If not used, pass NULL.
- subs: The new value for sub-state (only apply in qSM_FAILURE_STATE, qSM_SUCCESS_STATE, qSM_UNEXPECTED_STATE and qSM_BEFORE_ANY_STATE. If not used, pass null.



3.3 Co-Routines

As showed in figure 13, a task coded as a Co-Routine, is just a task that allows multiple entry points for suspending and resuming execution at certain locations, this feature can bring benefits by improving the task cooperative scheme and providing a linear code execution for event-driven systems without complex state machines or full multi-threading.

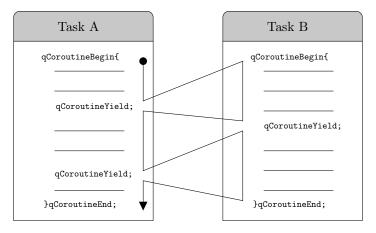


Figure 13: Coroutines in QuarkTS

The QuarkTS implementation uses the Duff's device approach, and is heavily inspired from the Simon Tatham's Co-Routines in C [3] and Adam Dunkels Protothreads [4]. This implementation does, however, impose slightly restrictions that are listed below:

Limitations and Restrictions:

- The stack of a Co-Routine is not maintained when a Co-Routine yields. This means variables allocated on the stack will loose their values. To overcome this, a variable that must maintain its value across a blocking call must be declared as static.
- Another consequence of sharing a stack, is that calls to API functions that could cause the Co-Routine to block, can only be made from the Co-Routine function itself not from within a function called by the Co-Routine .
- The implementation does not permit yielding or blocking calls to be made from within a switch statement.

3.3.1 Coding a Co-Routine

Application writer just need to create the body of the Co-Routine . This means starting a Co-Routine segment with qCoroutineBegin and end with qCoroutineEnd statements . From now on, yields and blocking calls from the Co-Routine scope are allowed.



```
void CoroutineTask_Callback(qEvent_t e){
    qCoroutineBegin{
        if( EventNotComing() ){
            qCoroutineYield;
        }
        DoTheEventProcessing();
    }qCoroutineEnd;
}
```

A qCoroutineYield call return the CPU control back to the scheduler but saving the execution progress. With the next task activation, the Co-Routine will resume the execution after the last qCoroutineYield statement.

All the Co-routine statements had qCoroutine or qCR appended at the beginning of their name.

Co-Routine statements can only be invoked from the scope of the Co-Routine.

3.3.2 Blocking calls

Blocking calls inside a Co-Routine should be made with the provided statements, all of them with a common feature: an implicit yield.

A widely used procedure, its wait for a fixed period of time. For this, the ${\tt qCoroutineDelay}()$ should be used .

```
qCoroutineDelay(qTime_t tDelay)
```

As expected , this statement makes an apparent blocking over the application flow, but to be precisely, a yield is performed until the requested time expires, this allows other tasks to be executed until the blocking call finish. This "yielding until condition meet" behavior its the common pattern among the other blocking statements.

Another common blocking call is qCoroutineWaitUntil():

```
qCoroutineWaitUntil( Condition )
```

This statement takes a Condition argument, a logical expression that will be performed when the coroutine resumes their execution. As mentioned before, this type of statement clearly exposes the expected behavior, yielding until the condition met.

Optionally, the Do-Until structure are also provided to perform a multi-line job before the yield, allowing more complex actions to be performed after the Co-Routine resumes:

```
qCoroutineDo{
    /* Job : a set of instructions*/
}qCoroutineUntil( Condition );
```



Usage example:

```
void Sender_Task(qEvent_t e){
    static STimer_t timeout;
    qCoroutineBegin{
        Send_Packet();
           Wait until an ackowledgement has been received, or until
           the timer expires. If the timer expires, we should send
           the packet again.
        qSTimerSet(&timeout, TIMEOUT_TIME);
        qCoroutineWaitUntil( PacketACK_Received() ||
                             qSTimerExpired(&timeout));
    }qCoroutineEnd;
void Receiver_Task(qEvent_t e){
    qCoroutineBegin{
        /* Wait until a packet has been received */
        qCoroutineWaitUntil(Packet_Received());
        Send_Acknowledgement();
    }qCoroutineEnd;
}
```

3.3.3 Positional jumps

This feature provide positional local jumps, control flow that deviates from the usual Co-Routine call.

The complementary statements qCoroutinePositionGet() and qCoroutinePositionRestore() provide this functionality. The first, saves the Co-Routine state, at some point of their execution, into a CRPos, a variable of type qCRPosition_t, that can be used at some later point of program execution by qCoroutinePositionRestore() to restore the Co-Routine state to that saved by qCoroutinePositionGet() into CRPos. This process can be imagined to be a "jump" back to the point of program execution where qCoroutinePositionGet() saved the Co-Routine environment.

```
qCoroutinePositionGet( CRPos )
```

```
qCoroutinePositionRestore( CRPos )
```

And to resets the CRPos variable to the beginning of the Co-Routine, use:

```
qCoroutinePositionReset( CRPos )
```

3.3.4 Semaphores

This module implements counting semaphores on top of Co-Routines. Semaphores are a synchronization primitive that provide two operations: wait and signal. The wait operation checks the semaphore counter and blocks the Co-Routine if the counter is zero. The signal operation increases the semaphore counter but does not block. If



another Co-Routine has blocked waiting for the semaphore that is signalled, the blocked Co-Routines will become runnable again.

Semaphores are referenced by handles, a variable of type qCoroutineSemaphore_t and must be initialized with qCoroutineSemaphoreInit() before any usage. Here, a value for the counter is required. Internally, semaphores uses an unsigned int to represent the counter, therefore the Value argument should be within range of this data-type.

```
qCoroutineSemaphoreInit( sem, Value )
```

To perform the *wait* operation, the qCoroutineSemaphoreWait() statement should be used. The wait operation causes the Co-routine to block while the counter is zero. When the counter reaches a value larger than zero, the Co-Routine will continue.

```
qCoroutineSemaphoreWait( sem )
```

Finally, qCoroutineSemaphoreSignal() carries out the *signal* operation on the semaphore. This signaling increments the counter inside the semaphore, which eventually will cause waiting Co-routines to continue executing.

```
qCoroutineSemaphoreSignal( sem )
```

Usage example:

The following example shows how to implement the bounded buffer problem using Co-Routines and semaphores. The example uses two tasks: one that produces items and other that consumes items.

Note that there is no need for a mutex to guard the add_to_buffer() and get_from_buffer() functions because of the implicit locking semantics of Co-Routines, so it will never be preempted and will never block except in an explicit qCoroutineSemaphoreWait statement.



```
qCoroutineSemaphoreSignal( &mutex );
        qCoroutineSemaphoreSignal( &empty );
  }qCoroutineEnd;
void ConsumerTask_Callback(qEvent_t e){{
  static int consumed;
  qCoroutineBegin{
      for(consumed = 0; consumed < NUM_ITEMS; ++consumed) {</pre>
        qCoroutineSemaphoreWait(pt, &empty);
        qCoroutineSemaphoreWait(pt, &mutex);
        consume_item(get_from_buffer());
        qCoroutineSemaphoreSignal(pt, &mutex);
        qCoroutineSemaphoreSignal(pt, &full);
  }qCoroutineEnd;
void IdleTask_Callback(qEvent_t e){
    /*nothing to do*/
int main(void){
  HAL_Init();
  qSchedulerSetup( HAL_GetTick, 0.001, IdleTask_Callback, 10);
  qCoroutineSemaphoreInit(&empty, 0);
  qCoroutineSemaphoreInit(&full, BUFSIZE);
  qCoroutineSemaphoreInit(&mutex, 1);
  qSchedulerAdd_Task( &ProducerTask, ProducerTask_Callback,
                       qMedium_Priority, 0.1, qPeriodic, qEnabled,
                      NULL );
  qSchedulerAdd_Task( &ProducerTask, ProducerTask_Callback,
                      qMedium_Priority, 0.1, qPeriodic, qEnabled,
  qSchedulerRun();
```

3.4 AT Command Line Interface

A command-line interface (CLI) is a way to interact directly with the software of an embedded system in the form of text commands and responses. It can be see it as a typed set of commands to produce a result, but here, the commands are typed in real-time by an user through a specific interface, for example UART, USB, LAN, etc.

A CLI is often developed to aid initial driver development and debugging. This CLI may become the interface (or one of the interfaces) used by a sophisticated end-user to interact with the product. Think of typing commands to control a machine, or perhaps for low-level access to the control system as a development tool, tweaking time-constants



and monitoring low-level system performance during testing.

3.4.1 The parser

The provided development API, parse and handle input commands, following a simplified form of the extended AT-commands syntax.

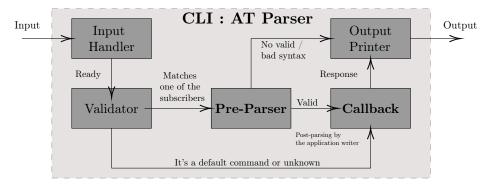


Figure 14: AT parser for a CLI implementation

As seen in figure 14, the parser has a few components described below:

- Input Handler: It is responsible for collecting incoming data from the input in the form of ASCII characters inside a buffer. When this buffer is ready by receiving a EOL(End-Of-Line) byte, notifies the validator to perform the initial checks.
- Validator: Take the input string and perform three checks over it:
 - 1. The input matches one of the subscribed commands.
 - 2. The input matches one of the default commands.
 - 3. The input is unknown
- *Pre-Parser*: Takes the input if the *validator* asserts the first check. It is responsible for syntax validation and classification. Also prepares the input argument for the next component.
- Callback or Post-Parser: If input at the pre-parser its valid, the respective command-callback is invoked. Here, the application writer its free to handle the command execution and the output response.
- Output printer: Takes all the return status of the previous components to print out a response at the output.

Here, *Input* and *Output* should be provided by the application writer, for example, if an UART interface is choosen, the input should take the received bytes from a ISR and the output its a function to print out a single byte.



3.4.2 Supported syntax

This syntax is straightforward and the rules are provided below:

- All command lines must start with AT and end with a EOL character. By default, the parser uses the carriage return character. (We will use <CR> to represent a carriage return character in this document).
- AT commands are case-insensitive
- Only four types of AT commands are allowed:
 - Acting (QATCMDTYPE_ACT): This is the simple type of commands which can be subscribed. Its normally used to execute the action that the command should do. This type dont take arguments of modifiers, for example,

AT+CMD

Read (QATCMDTYPE_READ): This type of commands allows you to read or test a
value already set for the parameter. Only one argument its allowed.

AT+CMD? AT+CMD?PARAM1

- Test (QATCMDTYPE_TEST): These types of commands allow you to get the values which can be set for its parameters. No parameters are allowed here.

AT + CMD = ?

- Parameter Set (QATCMDTYPE_PARA): These types of commands allow n arguments to be passed for setting parameters, for example:

AT + CMD = x, y

If none of the types is given at the input, the command response will be ERROR

- The possible responses that can be output are:
 - **OK**: Indicates the successful execution of the command.
 - ERROR: A generalized message to indicate failure in executing the command.
 - User-defined: A custom output message defined by the application writer.
 - UNKNOWN: The input command its not subscribed.
 - **NOT ALLOWED**: The command syntax is not one of the allowed types.
 - **NONE** : No response.

All responses are followed by a <cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><cr><t

Errors generated during the execution of these AT commands could be due to the following reasons:

- Incorrect syntax/parameters of the AT command
- \bullet Bad parameters or not allowed operations defined by the application writer.

In case of an error, the string ERROR or ERROR: <error_no> are displayed.



3.4.3 Setting up an AT parser instance for the CLI

Before starting the CLI development, an AT parser instance must be defined; a data structure of type qatparser_t. The instance should be initialized using the qatparser_Setup() API.

A detailed description of this function is showed bellow:

Parameters

- Parser: A pointer to the AT Command Parser instance.
- OutputFcn: The basic output-char wrapper function. All the parser responses will be printed-out through this function.
- Input: A memory location to store the parser input (mandatory)
- SizeInput: The size of the memory allocated in Input.
- Output: A memory location to store the parser output. If not used, pass NULL.
- SizeOutput: The size of the memory allocated in Output.
- Identifier: The device identifier string. This string will be printed-out after a call to the AT_DEFAULT_ID_COMMAND.
- OK_Response: The output message when a command callback returns QAT_OK. To use the default, pass NULL.
- ERROR_Response: The output message when a command callback returns QAT_ERROR or any QAT_ERRORCODE(#). To use the default, pass NULL.
- NOTFOUND_Response: The output message when input doesn't match with any of the available commands. To use the default, pass NULL.
- term_EOL The End Of Line string printed out after any of the parser messages. To use the default, pass NULL.

3.4.4 Subscribing commands to the parser

The AT Parser its able to subscribe any number of custom AT commands. For this, the qATParser_CmdSubscribe() API should be used.

This function subscribes the parser to a specific command with an associated callback function, so that next time the required command is sent to the parser input, the callback function will be executed.

The parser only analyze commands that follows the simplified AT-Commands syntax already described in section 3.4.2.



- Parser: A pointer to the AT Command Parser instance.
- Command: A pointer to the AT command object.
- TextCommand: The string (name) of the command we want to subscribe to. Since this service only handles AT commands, this string has to begin by the "at" characters and should be in lower case.
- Callback: The handler of the callback function associated to the command. Prototype: qATResponse_t xCallback(qATParser_t*, qATParser_PreCmd_t*)
- CmdOpt: This flag combines with a bitwise 'OR' ('|') the following information:
 - QATCMDTYPE_PARA: AT+cmd=x,y is allowed. The execution of the callback function also depends on whether the number of argument is valid or not. Information about number of arguments is combined with a bitwise 'OR':
 QATCMDTYPE_PARA | OxXY , where x which defines maximum argument number for incoming command and Y which defines minimum argument number for incoming command.
 - QATCMDTYPE_TEST: AT+cmd=? is allowed.
 - QATCMDTYPE_READ: AT+cmd? is allowed.
 - QATCMDTYPE_ACT: AT+cmd is allowed.

3.4.5 Writing a command callback

The command callback should be coded by the application writter. Here, the following prototype should be used:

```
qATResponse_t CMD_Callback(qATParser_t *parser, qATParser_PreCmd_t *param){
}
```

The callback take two arguments and return a single value. The first argument, its just a pointer to the parser instance where the command its subscribed. From the callback context, can be used to print out extra information as command response.

The second, its the main parameter from the point of view of the application writer, and correspond to a data structure of type <code>qATParser_PreCmd_t</code>. The fields inside, are filled by the Pre-Parser component and gives information about the detected command, like type, number of arguments, and the subsequent string after the command text. This fields are described as follows:



- Command: A pointer to the calling AT Command object.
- Type: The command type.
- StrData: The string data after the command text.
- StrLen: the length of StrData.
- Numargs: Number of arguments, only available if Type = QATCMDTYPE_SET.

The return value (an enum of type qATResponse_t) determines the response showed by the *Output printer* component. The possible allowed values are:

- QAT_OK: as expected, print out the OK string.
- QAT_ERROR: as expected, print out the ERROR string.
- QAT_ERRORCODE(no): Used to indicate an error code. This code is defined by the application writer and should be a value between 1 and 32766. For example, a return value of QAT_ERRORCODE(15), will print out the string ERROR:15.
- QAT_NORESPONSE : No response will be printed out.

A simple example of how the command callback should be coded is showed below:

```
qATResponse_t CMD_Callback(qATParser_t *parser, qATParser_PreCmd_t *param){
  qATResponse_t Response = QAT_NORESPONSE;
  switch(param -> Type){
    case QATCMDTYPE_PARA:
      Response = QAT_OK;
      break;
    case QATCMDTYPE_TEST:
      Response = QAT_OK;
      break;
    case QATCMDTYPE_READ:
        strcpy( parser->Output , "Test");
      Response = QAT_OK;
      break;
    case QATCMDTYPE_ACT:
      Response = QAT_OK;
      break;
    default:
      Response = QAT_ERROR;
      break;
  return Response;
```

3.4.6 Handling the input

Input handling are simplified using the provided APIs. The qATParser_ISRHandler() and qATParser_ISRHandlerBlock() functions are intended to be used from the interrupt context. This avoid any kind of polling implementation and allow the CLI application to be designed using an event-driven pattern.



```
qBool_t qATCommandParser_ISRHandler(qATParser_t *Parser, char c)
```

```
qBool_t qATParser_ISRHandlerBlock(qATParser_t *Parser, char *data,
qSize_t n)
```

Both functions feed the parser input, the first one with a single character and the second with a string. The application writer should call one of this functions from the desired hardware interface, for example, from an UART receive ISR.

Parameters

• Parser: Both APIs take a pointer to the AT parse instance.

for qATCommandParser_ISRHandler:

• c: The incoming byte/char to the input.

for qATParser_ISRHandlerBlock:

- data: The incoming string.
- n: The length of the data argument.

Return Value

qTrue when the parser is ready to process the input, otherwise return qFalse.

If there are no intention to feed the input from the ISR context, the APIs qATParser_Raise or qATParser_Exec can be called at demand from the base context.

```
qBool_t qATParser_Raise(qATParser_t *Parser, const char *cmd)
```

```
qATResponse_t qATParser_Exec(qATParser_t *Parser, const char *cmd)
```

As expected, both functions sends the string to the specified parser. The difference between both APIs is that qatparser_Raise() sends the command through the input, marking it as ready for parsing and acting as the *Input handler* component. The qatparser_Exec(), on the other hand, executes the components of *Pre-parsing* and *Post-parsing* bypassing the other components, including the *Output printer*, so that it must be handled by the application writer.

Parameters:

- Parser: A pointer to the ATParser instance.
- cmd: The command string, including arguments if required.



Return value:

For qATParser_Raise(), qTrue if the command was successfully raised, otherwise returns oFalse.

For qATParser_Exec(), the same value returned by the respective callback function. If the input string doesn't match any of the subscribed commands, returns QAT_NOTFOUND. If the input syntax is not allowed, returns QAT_NOTALLOWED.

Note: All functions involved with the component *Input-handler*, ignores non-graphic characters and cast any uppercase to lowercase.

3.4.7 Running the parser

The parser can be invoked directly using the qATParser_Run() API. Almost all the components that make up the parser are performed by this API, with execption of the *Input Handler*, that should be managed by the application writer itself. However, this only take place, if the input is ready.

```
qBool_t qATParser_Run(qATParser_t *Parser)
```

In this way, the writer of the application must implement the logic that lead this function to be called when the *input-ready* condition is given.

The simple approach for this, is check the return value of any of the input feeders APIs and set a notification variable when they report a ready input. Later in the base context, a polling job should be performed over this notification variable, running the parser when their value is true, then clearing the value after to avoid unnecessary overhead.

The recommended implementation its leave this job be handled by a task instead coding the logic to know when the parser should run the. For this the qSchedulerAdd_ATParserTask() is provided. This API add a task to the scheduling scheme running an AT Command Parser and treated as an event-triggered task. The address of the parser instance will be stored in the TaskData storage-Pointer.

```
qBool_t qSchedulerAdd_ATParserTask(qTask_t *Task, qATParser_t *Parser,
qPriority_t Priority)
```

Parameters

- Task: A pointer to the task node.
- Parser: A pointer to the AT Command Parser.
- Priority: Task priority Value. [0(min) 255(max)]



After invoked, both parser and task are linked together in such a way that when an input-ready condition is given, a notification event is sent to the task launching the parser components. As the task is event-triggered, there is no additional overhead and the writer of the application can assign a priority value to balance the application against other tasks in the scheduling scheme.

3.4.8 Retrieving arguments inside a command-callback

The following APIs should be only invoked from a command-callback context:

```
char* qATParser_GetArgString(qATParser_PreCmd_t *param, int8_t n, char* out)
```

Get the argument parsed as string from the incoming AT command.

Parameters:

- param: A pointer to the pre-parser instance(only available from the AT-Command callback).
- n: The number of the argument.
- out: Array in memory where to store the resulting null-terminated string.

Return value:

Same as out on success, otherwise returns NULL.

Next APIS takes the same arguments:

```
char* qATParser_GetArgPtr(qATParser_PreCmd_t *param, int8_t n)
```

To get the pointer where the desired argument starts.

```
int qATParser_GetArgInt(qATParser_PreCmd_t *param, int8_t n)
```

To get the argument parsed as integer from the incoming AT command.

```
float qATParser_GetArgFlt(qATParser_PreCmd_t *param, int8_t n)
```

To get the argument parsed as float from the incoming AT command.

and

```
uint32_t qATParser_GetArgHex(qATParser_PreCmd_t *param, int8_t n)
```

To get the HEX argument parsed as uint32_t from the incoming AT command.

Parameters:

- param: A pointer to the pre-parser instance (only available from the AT-Command callback).
- n: The number of the argument.



Return value:

For qATParser_GetArgPtr(), a pointer to the desired argument. NULL pointer if the argument is not present.

For qATParser_GetArgInt(), the argument parsed as integer. Same behavior of qAtoI. If argument not found returns 0.

For qATParser_GetArgFlt(), the argument parsed as float. Same behavior of qAtoF. If argument not found returns 0.

For qATParser_GetArgHex(), the HEX argument parsed as uint32_t. Same behavior of qXtoU32. If argument not found returns 0.

3.5 Memory Management

Memory can be allocated using the standard C library malloc() and free() functions, but they may not be suitable in most embedded applications because they are not always available on small microcontrollers or their implementation can be relatively large, taking up valuable code space. Additionally, some implementations can suffer from fragmentation.

To get around this problem, QuarkTS provides their own memory allocation API. When the application requires RAM, instead of calling malloc(), call qMalloc(). When RAM is being freed, instead of calling free(), use qFree(). Both functions has the same prototype as the standard C library counterparts.

3.5.1 Principle of operation

The allocation scheme works by subdividing an static array into smaller blocks. Because the array is statically declared, it will make the application appear to consume a lot of RAM, even before any memory has actually been allocated from the array.

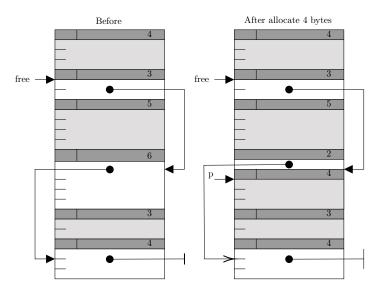


Figure 15: First-Fit allocation policy



The allocation scheme use the *First-Fit* approach (see figure 15). For better reliability, the implementation combines adjacent free blocks into a single larger block, minimizing the risk of fragmentation and making it suitable for applications that repeatedly allocate and free different sized blocks of RAM.

The *default* memory management unit resides in a memory pool object. Also called the *default pool*. The total amount of available heap space in the default memory pool is set by Q_DEFAULT_HEAP_SIZE, which is defined in QuarkTS.h.

To keep track of the memory usage, the qHeapGetFreeSize() API function returns the number of free bytes in the current memory pool at the time the function is called.

```
size_t qHeapGetFreeSize(void)
```

3.5.2 Memory pools

A memory pool is a kernel object that allows memory blocks to be dynamically allocated from a user-designated memory region. Instead typical pools with fixed-size blocks allocation, the pools in QuarkTS can be of any size, thereby user is responsible of selecting the appropriate memory pool to allocate data with the same size.

Besides the *default* pool, that is already defined, any number of additional memory pools can be defined. Like any other kernel object in QuarkTS, memory pools are referenced by handles, a variable of type <code>qMemoryPool_t</code> and should be initialized before any usage with the <code>qMemoryPool_Init()</code> API function.

```
qBool_t qMemoryPool_Init(qMemoryPool_t *mPool, void* Area, size_t size)
```

Parameters

- obj : A pointer to the memory pool instance.
- Area: A pointer to a memory region (uint8_t) statically allocated to act as Heap of the memory pool. The size of this block should match the size argument.
- size: The size of the memory block pointed by Area.

To perform operations in another memory pool, beside the *default* pool, an explicit switch should be performed using <code>qMemoryPool_Select()</code>. Here, a pointer to the target pool should be passed as input argument. From now on, every call to <code>qMalloc()</code>, or <code>qFree()</code> will run over the new selected memory pool. To return to the *default pool*, a new call to <code>qMemoryPool_Select()</code> is required passing <code>NULL</code> as input argument.

```
void qMemoryPool_Select(qMemoryPool_t *mPool)
```



Usage example:

```
#include <stdio.h>
#include <stdlib.h>
#include "QuarkTS.h"
#include "HAL.h"
#include "Core.h"
qTask_t taskA;
qMemoryPool_t another_heap;
void taskA_Callback(qEvent_t e);
void taskA_Callback(qEvent_t e){
    int *xdata = NULL;
    int *ydata = NULL;
    int *xyoper = NULL;
    int n = 20;
    int i;
    xyoper = (int*)qMalloc( n*sizeof(int) );
    xdata = (int*)qMalloc( n*sizeof(int) );
    qMemoryPool_Select( &another_heap ); /*change the memory pool*/
    /*ydata will point to a segment allocated in another pool*/
    ydata = (int*)qMalloc( n*sizeof(int) );
    /*use the memory if could be allocated*/
    if( xdata && ydata && xyoper ){
        for(i=0; i<n; i++){
            xdata[i] = GetXData();
            ydata[i] = GetYData();
            xyoper[i] = xdata[i] * ydata[i];
        UseTheMemmory(xyoper);
    else{
        qTraceMessage("ERROR:ALLOCATION_FAIL");
    qFree( ydata );
    qMemoryPool_Select( NULL ); /*return to the default pool*/
    qFree( xdata );
    qFree( xyoper );
int main(void){
    char area_another_heap[512]={0};
    qSetDebugFcn( OutPutChar );
    /*Create a memory heap*/
    qMemoryPool_Init( &another_heap, area_another_heap, 512);
    qSchedulerSetup(HAL_GetTick, 0.001, IdleTaskCallback, 10);
    qSchedulerAddxTask(&taskA, taskA_Callback, qLowest_Priority,
                       0.1, qPeriodic, qEnabled, &mtxheap);
    qSchedulerRun();
```



3.6 Trace and debugging

QuarkTS include some basic macros to print out debugging messages. Messages can be simple text or the value of variables in specific base-formats. To use the trace macros, an single-char output function must be defined using the qSetDebugFcn() macro.

```
qSetDebugFcn(qPutChar_t fcn)
```

Where fcn, its a pointer to the single-char output function following the prototype:

```
void SingleChar_OutputFcn(void *sp, const char c){
    /*
    TODO : print out the c variable usign the
    selected peripheral.
    */
}
```

The body of this user-defined function, should have hardware-dependant code to print out the c variable through a specific peripheral.

3.6.1 Viewing variables

For viewing or tracing a variable (up to 32 bit data) through debug, one of the following macros are available:

```
qTraceVar(Var, DISP_TYPE_MODE)
qTraceVariable(Var, DISP_TYPE_MODE)
```

```
qDebugVar(Var, DISP_TYPE_MODE)
qDebugVariable(Var, DISP_TYPE_MODE)
```

Parameters:

- Var : The target variable.
- DISP_TYPE_MODE : Visualization mode. It must be one of the following parameters(case sensitive): Bool, Float, Binary, Octal, Decimal, Hexadecimal, UnsignedBinary, UnsignedOctal, UnsignedDecimal, UnsignedHexadecimal.

The only difference between qTrace_ and Debug, is that qTrace_ macros, print out additional information provided by the __FILE__, __LINE__ and __func__ built-in preprocessing macros, mostly available in common C compilers.

3.6.2 Viewing a memory block

For tracing memory from an specified target address, one of the following macros are available:

```
qTraceMem(Pointer, BlockSize)
qTraceMemory(Pointer, BlockSize)
```



- Pointer: The target memory address.
- Size: Number of bytes to be visualized.

Hexadecimal notation its used to format the output of this macros.

3.6.3 Usage

In the example below, an UART output function is coded to act as the printer. Here, the target MCU is an ARM-Cortex M0 with the UART1 as the selected peripheral for this purpose.

```
void putUART1(void *sp, const char c){
   /* hardware specific code */
   UART1_D = c;
   while ( !(UART1_S1 & UART_S1_TC_MASK) ) {} /*wait until is done*/
}
```

As seen above, the function prototype follow the required prototype. Later, in the main thread, a call to the qSetDebugFcn() is used to setup the output-function

```
int main(void){
   qSetDebugFcn(putUART1);
   ...
   ...
}
```

After that, trace macros will be available for use.

```
void IO_TASK_Callback(qEvent_t e){
    static uint32_t Counter = 0;
    float Sample;
    ...
    ...
    qTraceMessage("IO_TASK_running...");
    Counter++;
    qTraceVariable( Counter, UnsignedDecimal );
    Sample = SensorGetSample();
    qTraceVariable( Sample, Float);
    ...
}
```



4 Utility APIs

4.1 Byte sized buffers

Initialize the byte-sized buffer.

Parameters:

- obj : A pointer to the byte-sized buffer object
- buffer : Block of memory or array of data.
- length: The size of buffer (Must be a power of two)

```
qBool_t qBSBuffer_Put(qBSBuffer_t *obj, uint8_t data)
```

Adds an element of data to the byte-sized buffer.

Parameters:

- obj : A pointer to the byte-sized buffer object
- data: The data to be added.

Return value:

qTrue on success, otherwise returns qFalse.

```
qBool_t qBSBuffer_Read(qBSBuffer_t *obj, void *dest, size_t n)
```

Gets n data from the byte-sized buffer and removes them.

Parameters:

- obj : A pointer to the byte-sized buffer object
- dest: The location where the data will be written.

Return value:

qTrue on success, otherwise returns qFalse.

```
qBool_t qBSBuffer_Get(qBSBuffer_t *obj, uint8_t *dest)
```

Gets one data-byte from the front of the byte-sized buffer, and remove it.



- obj : A pointer to the byte-sized buffer object
- dest: The location where the data will be written.

Return value:

qTrue on success, otherwise returns qFalse.

```
uint8_t qBSBuffer_Peek(qBSBuffer_t const *obj)
```

Looks for one byte from the head of the byte-sized buffer without removing it.

Parameters:

• obj : A pointer to the byte-sized buffer object

Return value:

Byte of data, or zero if nothing in the buffer.

```
qBool_t qBSBuffer_Empty(qBSBuffer_t const* obj)
```

Query the empty status of the byte-sized buffer.

Parameters:

• obj : A pointer to the byte-sized buffer object

Return value:

qTrue if the byte-sized buffer is empty, qFalse if it is not.

```
qBool_t qBSBuffer_IsFull(qBSBuffer_t const* obj)
```

Query the full status of the byte-sized buffer.

Parameters:

• obj : A pointer to the byte-sized buffer object

Return value:

qTrue if the byte-sized buffer is full, qFalse if it is not.

```
size_t qBSBuffer_Count(qBSBuffer_t const* obj)
```

Query the number of elements in the byte-sized buffer.



• obj : A pointer to the byte-sized buffer object.

Return value:

Number of elements in the byte-sized buffer.

4.2 Input groups for edge-checking

Initialize an I/O edge-check instance.

Parameters:

- Instance : A pointer to the I/O edge-check object.
- RegisterSize: The specific-core register size: QREG_8BIT, QREG_16BIT or QREG_32BIT(default).
- DebounceTime: The specified time (in epochs) to bypass the bounce of the input nodes.

Return value:

qTrue on success, otherwise returns qFalse.

```
qBool_t qEdgeCheck_InsertNode(qIOEdgeCheck_t *Instance, qIONode_t *Node, void *PortAddress, qBool_t PinNumber)
```

Inserts an I/O node to the edge-check instance.

Parameters:

- Instance: A pointer to the I/O edge-check object.
- Node: A pointer to the input-node object.
- PortAddress: The address of the core PORTx-register to read the levels of the specified PinNumber.
- PinNumber: The specified pin to read from PortAddress.

Return value:

qTrue on success, otherwise returns qFalse.

```
qBool_t qEdgeCheck_Update(qIOEdgeCheck_t *Instance)
```

Update the status of all nodes inside the I/O edge-check instance (non-blocking call).



• Instance : A pointer to the I/O edge-check object.

Return value:

qTrue on success, otherwise returns qFalse.

```
qBool_t qEdgeCheck_GetNodeStatus(qIONode_t *Node)
```

Query the status of the specified input-node.

Parameters:

• Instance: A pointer to the I/O edge-check object.

Return value:

The status of the input node: qTrue, qFalse, qRising, qFalling or qUnknown.

4.3 Generic lists

The provided list implementation uses a generic doubly-linked approach and the data structure are referenced thought objects of type qList_t.

Nodes should be an user-defined data structure of any number of members, however, they must be specially defined to be compatible with the provided APIs. All the user-defined nodes must have the <code>qNode_MinimalFields</code> definition on top of the structure. An example is showed bellow:

```
typedef struct{
    qNode_MinimalFields;
    int a;
    int b;
    float y;
}userdata_t;
```

With this special type definition on all custom data, the application writer can take advantage of this powerful data structure. The following APIs are provided for lists management:

```
void qList_Initialize(qList_t *list)
```

Must be called before a list is used. This initializes all the members of the list object.



• list: Pointer to the list being initialised.

```
qBool_t qList_Insert(qList_t *list, void *node, qListPosition_t position)
```

Insert an item into the list.

Parameters:

- list: Pointer to the list.
- node: A pointer to the node to be inserted.
- position: The position where the node will be inserted. Could be qList_AtFront, qList_AtBack or any other index number where the node will be inserted after.

Note: If the index exceeds the size of the list, the node will be inserted at the back.

Note: If the list is empty, the node will be inserted as the first item.

Return value:

qTrue if the item was successfully added to the list, otherwise returns qFalse.

```
void* qList_Remove(qList_t *list, void *node, qListPosition_t position)
```

Remove an item from the list.

Parameters:

- list: Pointer to the list.
- node: A pointer to the node to be deleted (to ignore pass NULL).
- position: The position of the node that will be deleted. Could be qList_AtFront, qList_AtBack or any other index number.

Note: If the node argument is supplied, the removal will be only effective if the data is member of the list. If ignored or the data is not a member of the list, this function will use the position instead as index for removal.

Note: If the index exceeds the size of the list, the node back will be removed.

Return value:

A pointer to the removed node. NULL if removal can be performed.

```
qBool_t qList_IsMember(qList_t *list, void *node)
```

Check if the node is member of the list.



- list: Pointer to the list.
- node: A pointer to the node.

Return value:

qTrue if the node belongs to the list, qFalse if it is not.

```
void qList_View(qList_t *list, qListVisualizer_t visualizer)
```

List visualization. The application writer should provide the function to print out the corresponding node data.

Parameters:

- list: Pointer to the list.
- visualizer: The function for node data visualization. Should be a function with this prototype: void fcn(void *node)

```
void* qList_GetFront(qList_t *list)
```

Get a pointer to the front item of the list.

Parameters:

• list: Pointer to the list.

Return value:

A pointer to the front node. NULL if the list is empty.

```
void* qList_GetBack(qList_t *list)
```

Get a pointer to the back item of the list.

Parameters:

• list: Pointer to the list.

Return value:

A pointer to the front node. NULL if the list is empty.

```
qBool_t qList_IsEmpty(qList_t *list)
```

Check if the list is empty.



• list: Pointer to the list.

Return value:

qTrue if the list is empty, qFalse if it is not.

```
qSize_t qList_Length(qList_t *list)
```

Get the number of items inside the list.

Parameters:

• list: Pointer to the list.

Return value:

The number of items of the list.

4.4 Response handler

```
void qResponseInitialize(qResponseHandler_t *obj, char *xLocBuff,
qSize_t nMax)
```

Initialize the instance of the response handler object.

Parameters:

- obj : A pointer to the response handler object
- xlocBuff: A pointer to the memory block where the desired response will remain.
- \bullet nMax : The size of memory block pointed by xLocBuff

```
void qResponseReset(qResponseHandler_t *obj)
```

Reset the response handler.

Parameters:

• obj : A pointer to the response handler object

```
qBool_t qResponseReceived(qResponseHandler_t *obj, const char *Pattern, qSize_t n)
```

Non-Blocking Response check.



- obj : A pointer to the response handler object.
- Pattern: The data to be checked in the receiver ISR
- n: The length of the data pointer by Pattern . If Pattern its string, set n to zero(0) to auto-compute the length.

Return value:

qTrue if there is a response acknowledge, otherwise returns qFalse.

Non-Blocking Response check with timeout.

Parameters:

- obj : A pointer to the response handler object.
- Pattern: The data to be checked in the receiver ISR
- n: The length of the data pointer by Pattern . If Pattern its string, set n to zero(0) to auto-compute the length.
- obj : The timeout value in seconds.

Return value:

qTrue if there is a response acknowledge and qTimeoutReached if timeout expires, otherwise returns qFalse.

```
qBool_t qResponseISRHandler(qResponseHandler_t *obj, const char rxchar)
```

ISR receiver for the response handler.

Parameters:

- obj : A pointer to the response handler object.
- rxchar: The byte-data from the receiver.

Return value:

qTrue when the response handler object match the request from qResponseReceived().



4.5 Miscellaneous

```
qTime_t qClock2Time(const qClock_t t)
```

Convert the specified input time(epochs) to time(seconds).

Parameters:

• t: The time in epochs

Return value:

Time t in seconds.

```
qClock_t qTime2Clock(const qTime_t t)
```

Convert the specified input time(seconds) to time(epochs).

Parameters:

• t: The time in seconds

Return value:

Time t in epochs.

```
void qSwapBytes(void *data, size_t n)
```

Invert the endianess for n bytes of the specified memory location.

Parameters:

- data: A pointer to block of data.
- n: Number of bytes to swap.

```
qBool_t qCheckEndianness(void)
```

Check the system endianess.

Return value:

qTrue if little-endian, otherwise returns qFalse.

Wrapper methods to write(qOutputRaw) or read(qInputRaw) n RAW data through fcn.



- fcn: The basic output or input byte function.
- storagep: The storage pointer passed to fcn.
- data: The data to be written or readed.
- n: Number of bytes to be writte or readed.
- AIP: Pass qTrue to auto-increment the storage-pointer.

Wrapper method to write a string through fcn.

Parameters:

- fcn: The basic output byte function.
- storagep: The storage pointer passed to fcn.
- s: The string to be written.
- AIP: Pass qTrue to auto-increment the storage-pointer.

```
void qU32toX(uint32_t value, char *str, int8_t n)
```

Converts an unsigned integer value to a null-terminated string using the 16 base and stores the result in the array given by str parameter. str should be an array long enough to contain any possible value.

Parameters:

- value : Value to be converted to string.
- str: Array in memory where to store the resulting null-terminated string.
- n: The number of chars used to represent the value in str.

```
uint32_t qXtoU32(const char *s)
```

Converts the input string s consisting of hexadecimal digits into an unsigned integer value. The input parameter s should consist exclusively of hexadecimal digits, with optional whitespaces. The string will be processed one character at a time, until the function reaches a character which it doesn't recognize (including a null character).



• s: The hex string to be converted.

Return value:

The numeric value in uint32 t.

```
double qAtoF(const char *s)
```

Parses the C string s, interpreting its content as a floating point number and returns its value as a double. The function first discards as many whitespace characters (as in isspace) as necessary until the first non-whitespace character is found. Then, starting from this character, takes as many characters as possible that are valid following a syntax resembling that of floating point literals, and interprets them as a numerical value. The rest of the string after the last valid character is ignored and has no effect on the behavior of this function.

Parameters:

• s: The string beginning with the representation of a floating-point number.

Return value:

On success, the function returns the converted floating point number as a double value. If no valid conversion could be performed, the function returns zero (0.0).

If the converted value would be out of the range of representable values by a double, it causes undefined behavior.

```
int qAtoI(const char *s)
```

Parses the C-string s interpreting its content as an integral number, which is returned as a value of type int. The function first discards as many whitespace characters (as in isspace) as necessary until the first non-whitespace character is found. Then, starting from this character, takes an optional initial plus or minus sign followed by as many base-10 digits as possible, and interprets them as a numerical value. The string can contain additional characters after those that form the integral number, which are ignored and have no effect on the behavior of this function. If the first sequence of non-whitespace characters in s is not a valid integral number, or if no such sequence exists because either s is empty or it contains only whitespace characters, no conversion is performed and zero is returned.

Parameters:

• s: The string beginning with the representation of a integer number.



Return value:

On success, the function returns the converted integral number as an int value. If the converted value would be out of the range of representable values by an int, it causes undefined behavior.

```
char* qUtoA(uint32_t num, char* str, uint8_t base)
```

Converts an unsigned value to a null-terminated string using the specified base and stores the result in the array given by str parameter. str should be an array long enough to contain any possible value: (sizeof(int)*8+1) for radix=2, i.e. 17 bytes in 16-bits platforms and 33 in 32-bits platforms.

Parameters:

- num: Value to be converted to a string.
- str: Array in memory where to store the resulting null-terminated string.
- base: Numerical base used to represent the value as a string, between 2 and 36, where 10 means decimal base, 16 hexadecimal, 8 octal, and 2 binary.

Return value:

A pointer to the resulting null-terminated string, same as parameter str.

```
char* qItoA(int num, char* str, uint8_t base)
```

Converts an integer value to a null-terminated string using the specified base and stores the result in the array given by str parameter. If base is 10 and value is negative, the resulting string is preceded with a minus sign (-). With any other base, value is always considered unsigned.

str should be an array long enough to contain any possible value: (sizeof(int)*8+1) for radix=2, i.e. 17 bytes in 16-bits platforms and 33 in 32-bits platforms.

Parameters:

- num: Value to be converted to a string.
- str: Array in memory where to store the resulting null-terminated string.
- base: Numerical base used to represent the value as a string, between 2 and 36, where 10 means decimal base, 16 hexadecimal, 8 octal, and 2 binary.

Return value:

A pointer to the resulting null-terminated string, same as parameter str.

```
char* qFtoA(float f, char *str, uint8_t precision)
```

Converts a float value to a formatted string.



- f: Value to be converted to a string.
- str: Array in memory where to store the resulting null-terminated string.
- precision: Desired number of significant fractional digits in the string. (The max allowed precision is MAX_FTOA_PRECISION=10)

Return value:

A pointer to the resulting null-terminated string, same as parameter str.

```
char* qBtoA(qBool_t num, char *str)
```

Converts a boolean value to a null-terminated string. Input is considered true with any value different to zero (0). str should be an array long enough to contain the output

Parameters:

- num: Value to be converted to a string.
- str: Array in memory where to store the resulting null-terminated string.

Return value:

A pointer to the resulting null-terminated string, same as parameter str.

```
qBool_t qIsNan(float f)
```

Determines if the given floating point number f is a not-a-number (NaN) value.

Parameters:

• f : Floating point value(32bits).

Return value:

qTrue if input is NaN, otherwise qFalse.

```
qBool_t qIsInf(float f)
```

Determines if the given floating point number f is positive or negative infinity.

Parameters:

• f : Floating point value(32bits).

Return value:

qTrue is argument has an infinite value, otherwise qFalse.



4.6 Additional macros

qBitsSet(Register, Bits): Sets (writes a 1 to) the bits indicated by the Bits mask in the numeric variable Register.

qBitsClear(Register, Bits): Clears (writes a 0 to) the bits indicated by the Bits mask in the numeric variable Register.

qBitSet(Register, Bit): Sets (writes a 1 to) the n-Bit in the numeric variable Register.

qBitClear(Register, Bit): Clears (writes a 0 to) the n-Bit in the numeric variable Register.

qBitRead(Register, Bit): Reads the n-Bit of the numeric variable Register.

qBitToggle(Register,Bit): Invert the state of the n-Bit in the numeric variable Register.

qBitWrite(Register, Bit, Value): Writes the Value to the n-Bit in the numeric variable Register.

qByteMakeFromBits(b7,b6,b5,b4,b3,b2,b1,b0): Merge the bits from the most significant bit b7 to the least significant bit b0 into a single byte.

qByteHighNibble(Register): Extracts the high-order (leftmost) nibble of a byte.

qByteLowNibble(Register): Extracts the low-order (rightmost) nibble of a byte.

qByteMergeNibbles(H,L): Merge the high(H) and low(L) nibbles into a single byte.

qWordHighByte(Register): Extracts the high-order (leftmost) byte of a word.

qWordLowByte(Register): Extracts the low-order (rightmost) byte of a word.

 ${\tt qWordMergeBytes(H,L): Merge \ the \ high(H) \ and \ low(L) \ bytes \ into \ a \ single \ word.}$

qDWordHighWord(Register): Extracts the high-order (leftmost) word of a Dword.

qDWordLowWord(Register): Extracts the low-order (rightmost) word of a Dword.

qDWordMergeWords(H,L): Merge the high(H) and low(L) words into a single DWord.

qClip(X, Max, Min): Gives X for Min<=X<=Max, Min for X<Min and Max for X>Max.

qClipUpper(X, Max): Gives X for X<=Max and Max for X>Max.

qClipLower(X, Min): Gives X for X>=Min and Min for X<Min.



qIsBetween(X, Low, High): Returns true if the value in X is between Low and High, otherwise returns false.

qMin(a,b): Returns the smaller of a and b.

qMax(a,b): Returns the greater of a and b.

qMins2Time(t): Converts to seconds the time value in t given in minutes.

qHours2Time(t): Converts to seconds the time value in t given in hours.

qDays2Time(t): Converts to seconds the time value in t given in days.

 ${\tt qWeeks2Time(t)}$: Converts to seconds the time value in ${\tt t}$ given in weeks.

References

- [1] M.J. Pont. Patterns for Time-Triggered Embedded Systems. Addison-Wesley. ACM Press, 2001.
- [2] Charles E.; Rivest Ronald L.; Stein Clifford Cormen, Thomas H.; Leiserson. "Section 6.5: Priority queues". Introduction to Algorithms (2nd ed.). MIT Press. McGraw-Hill, 1990.
- [3] Simon Tatham. Coroutines in C. https://www.chiark.greenend.org.uk/~sgtatham/coroutines.html. Accessed: 2010-09-30.
- [4] Adam Dunkels. Protothreads. http://dunkels.com/adam/pt/index.html. Accessed: 2010-09-30.

Index

~ a	10
qATParser_CmdSubscribe, 56	qCritical_SetInterruptsED, 16
qATParser_Exec, 59	qDebugVariable, 65
qATParser_GetArgFlt, 61	qDebugVar, 65
qATParser_GetArgHex, 61	<code>qEdgeCheck_GetNodeStatus, 70</code>
qATParser_GetArgInt, 61	<code>qEdgeCheck_Initialize</code> , 69
<code>qATParser_GetArgPtr</code> , 61	<code>qEdgeCheck_InsertNode</code> , 69
qATParser_GetArgString, 61	<code>qEdgeCheck_Update,</code> 69
qATParser_ISRHandlerBlock, 58	${\tt qEvent_t},\ 30$
qATParser_ISRHandler, 58	qFree, 62
${\tt qATParser_PreCmd_t},57$	qFtoA, 78
qATParser_Raise, 59	${\tt qHeapGetFreeSize},63$
qATParser_Run, 60	${\tt qInputRaw},~75$
qATParser_Setup, 56	qIsInf, 79
qATParser_t, 56	qIsNan, 79
qATResponse_t, 58	qItoA, 78
qAtoF, 77	qList_GetBack, 72
qAtoI, 77	qList_GetFront, 72
qBSBuffer_Count, 68	qList_Initialize, 70
qBSBuffer_Empty, 68	qList_Insert, 71
qBSBuffer_Get, 67	qList_IsEmpty, 72
qBSBuffer_Init, 67	qList_IsMember, 71
qBSBuffer_IsFull, 68	qList_Length, 73
qBSBuffer_Peek, 68	qList_Remove, 71
qBSBuffer_Put, 67	qList_View, 72
qBSBuffer_Read, 67	qList_t, 70
qBtoA, 79	qMalloc, 62
qCRPosition_t, 51	qMemoryPool_Init, 63
qCheckEndianness, 75	qMemoryPool_Select, 63
qClock2Time, 75	qMemoryPool_t, 63
qClock_SysTick, 6	qOutputRaw, 75
qCoroutineBegin, 49	qOutputString, 76
qCoroutineDelay, 50	qQueueCount, 37
qCoroutineDo, 50	qQueueCreate, 33
qCoroutineEnd, 49	qQueueIsEmpty, 37
qCoroutinePositionGet, 51	qQueueIsFull, 37
qCoroutinePositionReset, 51	qQueuePeek, 38
qCoroutinePositionRestore, 51	qQueueReceive, 34
qCoroutineSemaphoreInit, 52	qQueueRemoveFront, 38
qCoroutineSemaphoreSignal, 52	qQueueReset, 37
qCoroutineSemaphoreWait, 52	qQueueSendToBack, 34
qCoroutineSemaphore_t, 52	qQueueSendToFront, 34
qCoroutineUntil, 50	qQueueSend, 34
qCoroutineWaitUntil, 50	qResponseISRHandler, 74
qCoroutineYield, 50	qResponseInitialize, 73
<u>.</u> ,,,,,	1



qResponseReceivedWithTimeout, 74	qSwapBytes, 75
qResponseReceived, 73	qTaskAttachQueue, 34
qResponseReset, 73	qTaskClearTimeElapsed, 18
$qSMData_t$, 44	qTaskGetCycles, 18
$qSM_t, 43$	qTaskIsEnabled, 19
qSTimerDisarm, 40	qTaskQueueNotification, 27
qSTimerElapsed, 40	qTaskResume, 18
qSTimerExpired, 40	qTaskSelf, 19
qSTimerFreeRun, 40	qTaskSendNotification, 26
qSTimerRemaining, 40	qTaskSetCallback, 17
qSTimerSet, 40	qTaskSetData, 18
qSTimerStatus, 40	qTaskSetIterations, 17
qSTimer_t, 40	qTaskSetPriority, 17
qSchedulerAdd_ATParserTask, 60	qTaskSetState, 18
qSchedulerAdd_EventTask, 10	qTaskSetTime, 17
qSchedulerAdd_StateMachineTask, 45	qTaskSpreadNotification, 29
qSchedulerAdd_Task, 9	qTaskSuspend, 18
qSchedulerRelease, 12	qTask_t, 8
qSchedulerRemoveTask, 11	qTime2Clock, 75
qSchedulerRun, 11	qTraceMemory, 65
qSchedulerSetIdleTask, 9	qTraceMem,65
qSchedulerSetReleaseCallback, 12 qSchedulerSetup, 6	qTraceVariable, 65
qSchedulerSetup, 0	qTraceVar, 65
qStateMachine_Attribute, 48	qU32toX, 76
qStateMachine_Init, 43	qUtoA, 78
qStateMachine_Run, 44	qXtoU32, 76
quateriacinine_nuii, 44	qx10032, 10