Data Sheet

Fingerprint Recognition EMBEDDED Module

GT-511C1



2013/04/11 V1.0

www.adh-tech.com.tw sales@adh-tech.com.tw

Contents

1.	Conce	ncept				
2.	Protoc	ol: Packet Structure	6			
	Comm	and Packet (Command)	6			
	Respo	nse Packet (Acknowledge)	6			
	Data P	acket (Data)	7			
3.	Protoc	ol: Commands Summary	8			
4.	Protoc	ol: Error Codes	10			
5.	Protoc	ol: Command Details	12			
	5.1.	Initialization(Open)	12			
	5.2.	Termination(Close)	13			
	5.3.	CMOS LED control(CmosLed)	14			
	5.4.	Changing UART baud rate (ChangeBaudrate)	15			
	5.5.	Get enrolled fingerprint count(GetEnrollCount)	16			
	5.6.	Check enrollment status(CheckEnrolled)	16			
	5.7.	Start an enrollment(EnrollStart)	17			
	5.8.	Make 1 st template for an enrollment(Enroll1)	17			
	5.9.	Make 2 nd template for an enrollment(Enroll2)	18			
	5.10.	Make 3 rd template for an enrollment, merge three				
	templates(Enroll3)					
	5.11.	Check finger pressing status(IsPressFinger)	19			
	5.12.	Delete one fingerprint(DeleteID)	20			
	5.13.	Delete all fingerprints(DeleteAll)	20			
	5.14.	1:1 Verification(Verify)	21			
	5.15.	1:N Identification(Identify)	21			
	5.16.	1:1 Verification of Template(VerifyTemplate)	22			
	5.17.	1:N Identification of Template(IdentifyTemplate)	23			
	5.18.	Capture fingerprint(CaptureFinger)	24			
	5.19.	Make Template(MakeTemplate)	25			
	5.20.	Get fingerprint image(GetImage)	26			
	5.21.	Get raw image(GetRawImage)	27			
	5.22.	Get template(GetTemplate)	27			
	5.23.	Set template(SetTemplate)	28			
	5 24	Start database download obsolete(GetDatabaseStart)	28			

	5.25.	End database download, obsolete(GetDatabaseEnd)	29
	5.26.	Upgrade Firmware(UpgradeFirmware)	30
	5.27.	Upgrade ISO CD Image(UpgradeISOCDImage)	30
	5.28.	Set IAP Mode(SetIAPMode)	30
6.	Protoco	ol: Flowchart, description	31
	6.1	Capture of the fingerprint image	31
	6.2	Identifying and Verifying	31
	6.3	Enrollment	31
7.	PC Der	no	33
8.	Mechanical Dimensions		

1. Concept

This device is one chip module with;

- fingerprint algorithm
- · optical sensor

The major functions are the followings.

- · High-accuracy and high-speed fingerprint identification technology
- Ultra-thin optical sensor
- 1:1 verification, 1:N identification
- · downloading fingerprint image from the device
- Reading & writing fingerprint template(s) from/to the device
- Simple UART & USB communication protocol

Technical Specification

Item	Value	
CPU	ARM Cortex M3 Core (Holtek HT32F2755)	
Sensor	optical Sensor	
Effective area of the Sensor	14 x 12.5(mm)	
Image Size	216 x 240 Pixels	
Resolution	450 dpi	
The maximum number of fingerprints	20 fingerprints	
Matching Mode	1:1, 1:N	
The size of template	506 Bytes (template)	
	UART, default baud rate = 9600bps after power	
Communication interface	on	
	USB Ver1.1, Full speed	
False Acceptance Rate (FAR)	< 0.001%	
False Rejection Rate(FRR)	< 0.1%	
Enrollment time	< 3 sec (3 fingerprints)	
Identification time	< 1.5 sec (20 fingerprints)	
Operating voltage	DC 3.3~6V	
Operating current	< 130mA	

Operating	Temperatur e	-20°C ~ +60°C
environment	Humidity	20% ~ 80%
Storage	Temperatur e	-20°C ~ +60°C
environment	Humidity	10% ~ 80%

2. Protocol: Packet Structure

(Multi-byte item is represented as Little Endian.)

Command Packet (Command)

OFFSET	ITEM	TYPE	DESCRIPTION
0	0x55	BYTE	Command start code1
1	0xAA	BYTE	Command start code2
2	Device ID	WORD	Device ID: default is 0x0001, always fixed
4	Parameter	DWORD	Input parameter
8	Command	WORD	Command code
10	Check Sum	WORD	Check Sum (byte addition) OFFSET[0]++OFFSET[9]=Check Sum

Response Packet (Acknowledge)

OFFSET	ITEM	TYPE	DESCRIPTION
0	0x55	BYTE	Response start code1
1	0xAA	BYTE	Response start code2
2	Device ID	WORD	Device ID: default is 0x0001, always fixed
4	Parameter	DWORD	Response == 0x30: (ACK) Output Parameter
4			Response == 0x31: (NACK) Error code
			0x30: Acknowledge (ACK).
8	Response	WORD	0x31: Non-acknowledge (NACK).
10	Check Sum	WORD	Check Sum (byte addition)
10	Check Sum	WORD	OFFSET[0]++OFFSET[9]=Check Sum

Data Packet (Data)

OFFSET	ITEM	TYPE	DESCRIPTION	
0	0x5A	BYTE	Data start code1	
1	0xA5	BYTE	Data start code2	
2	Device ID	WORD	Device ID: default is 0x0001, always fixed	
4	Data	N BYTES	N bytes Data The size is pre-defined per protocol stage	
4+N Check Sum WORD Check Sum (by		Check Sum (byte addition) OFFSET[0]++OFFSET[4+N-1]=Check Sum		

3. Protocol: Commands Summary

In a command packet Command can be one of below.

Number (HEX)	Alias	Description	
01	Open	Initialization	
02	Close	Termination	
03	UsbInternalCheck	Check if the connected USB device is valid	
04	ChangeBaudrate	Change UART baud rate	
05	SetIAPMode	Enter IAP Mode In this mode, FW Upgrade is available	
12	CmosLed	Control CMOS LED	
20	GetEnrollCount	Get enrolled fingerprint count	
21	CheckEnrolled	Check whether the specified ID is already enrolled	
22	EnrollStart	Start an enrollment	
23	Enroll1	Make 1 st template for an enrollment	
24	Enroll2	Make 2 nd template for an enrollment	
25	Enroll3	Make 3 rd template for an enrollment, merge three templates into one template, save merged template to the database	
26	IsPressFinger	Check if a finger is placed on the sensor	
40	DeleteID	Delete the fingerprint with the specified ID	
41	DeleteAll	Delete all fingerprints from the database	
50	Verify	1:1 Verification of the capture fingerprint image with the specified ID	
51	Identify	1:N Identification of the capture fingerprint image with the database	
52	VerifyTemplate	1:1 Verification of a fingerprint template with the specified ID	
53	IdentifyTemplate	1:N Identification of a fingerprint template with the database	

Number (HEX)		Description	
60	CaptureFinger	Capture a fingerprint image(256x256) from the sensor	
61	MakeTemplate	Make template for transmission	
62	GetImage	Download the captured fingerprint image(256x256)	
63	GetRawlmage	Capture & Download raw fingerprint image(320x240)	
70	GetTemplate	Download the template of the specified ID	
71	SetTemplate	Upload the template of the specified ID	
72	GetDatabaseStart	Start database download, obsolete	
73	GetDatabaseEnd	End database download, obsolete	
80	UpgradeFirmware	Firmware Upgrade	
81	UpgradelSOCDImage	Not supported	
30	Ack	Acknowledge.	
31	Nack	Non-acknowledge.	

4. Protocol: Error Codes


When response packet is Non-acknowledge, *Parameter* represents an error code as below.

NACK Parameter	Value	Description
NACK_TIMEOUT	0x1001	Obsolete, capture timeout
NACK_INVALID_BAUDRATE	0x1002	Obsolete, Invalid serial baud rate
NACK_INVALID_POS	0x1003	The specified ID is not between 0~19
NACK_IS_NOT_USED	0x1004	The specified ID is not used
NACK_IS_ALREADY_USED	0x1005	The specified ID is already used
NACK_COMM_ERR	0x1006	Communication Error
NACK_VERIFY_FAILED	0x1007	1:1 Verification Failure
NACK_IDENTIFY_FAILED	0×1008	1:N Identification Failure
NACK_DB_IS_FULL	0x1009	The database is full
NACK_DB_IS_EMPTY	0x100A	The database is empty
NACK_TURN_ERR	0x100B	Obsolete, Invalid order of the enrollment (The order was not as: EnrollStart -> Enroll1 -> Enroll2 -> Enroll3)
NACK_BAD_FINGER	0×100C	Too bad fingerprint
NACK_ENROLL_FAILED	0x100D	Enrollment Failure
NACK_IS_NOT_SUPPORTED	0x100E	The specified command is not supported
NACK_DEV_ERR	0x100F	Device Error, especially if Crypto-Chip is trouble
NACK_CAPTURE_CANCELED	0x1010	Obsolete, The capturing is canceled
NACK_INVALID_PARAM	0x1011	Invalid parameter
NACK_FINGER_IS_NOT_PRESSE	D 0x1012	Finger is not pressed

		There is duplicated fingerprint (while
Duplicated ID	0 – 19	enrollment or setting template), This
		error describes just duplicated ID

5. Protocol: Command Details


5.1. Initialization(Open)

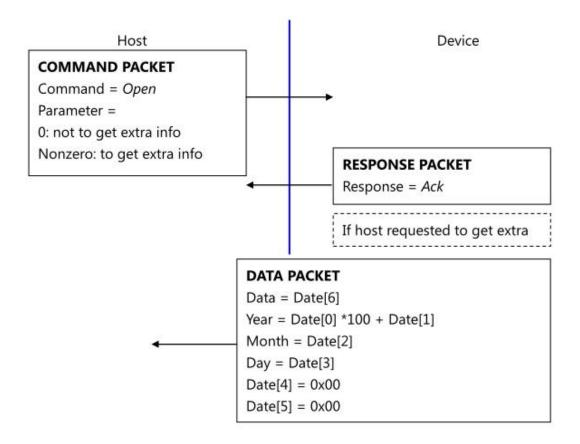

Open command is used to initialize the device; especially it gets device's static info.


Field	Sample	Description
Date[6]	Firmware Version: 20120225	Firmware version

5.2. Termination(Close)

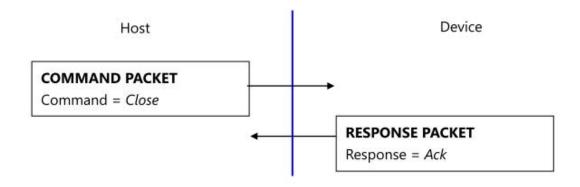


Close command does nothing.

5.3. CMOS LED control(CmosLed)

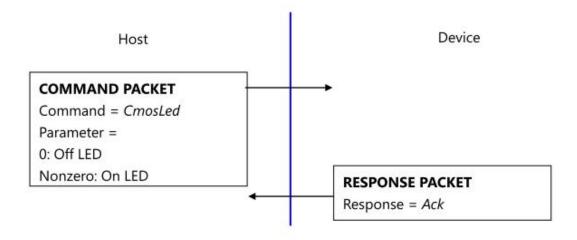

Default state of CMOS (Sensor) LED is OFF state.
(But while booting, LED blinks once, this says the LED is OK.)
Therefore, please issue LED ON command prior to any capture.


5.4. Changing UART baud rate (ChangeBaudrate)

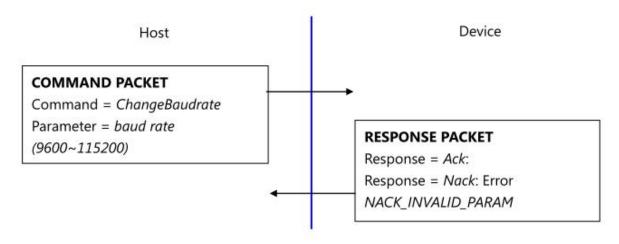


This command changes the UART baud rate at the run-time.

The device initializes its UART baud rate to 9600 bps after power on.


5.5. Get enrolled fingerprint count(GetEnrollCount)

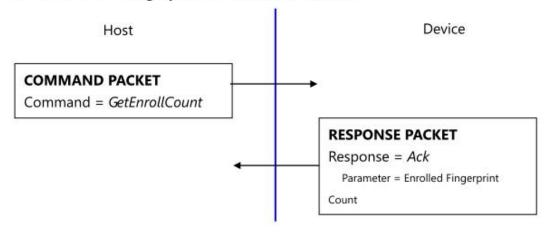


5.6. Check enrollment status(CheckEnrolled)

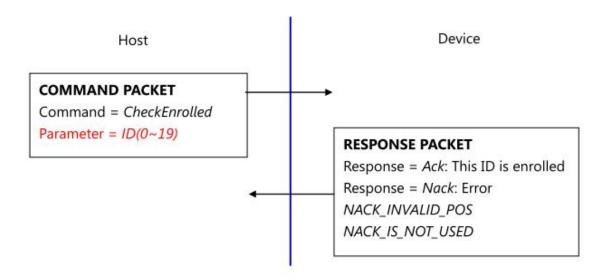


5.7. Start an enrollment(EnrollStart)

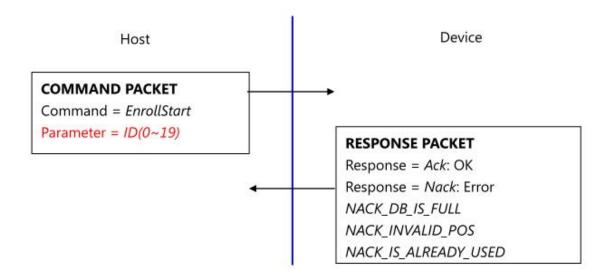


5.8. Make 1st template for an enrollment(Enroll1)

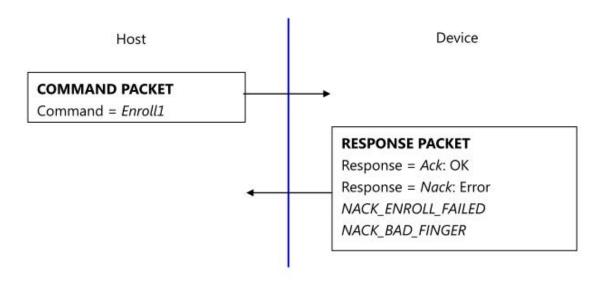

5.9. Make 2nd template for an enrollment(Enroll2)

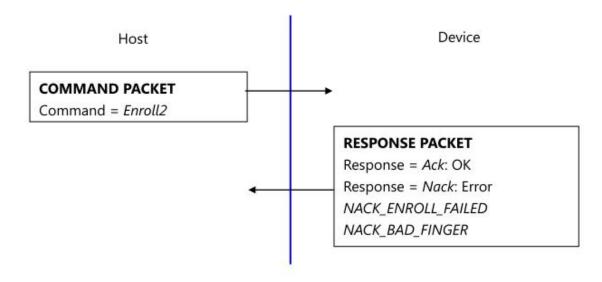


5.10. Make 3rd template for an enrollment, merge three templates(*Enroll3*)

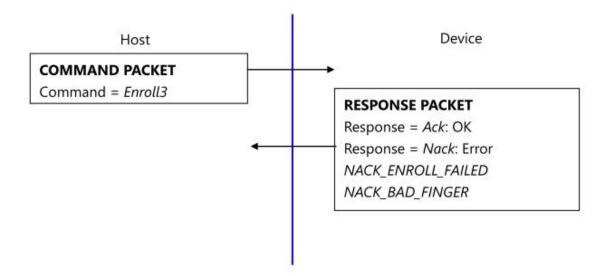


To enroll a fingerprint, the host must issue above 4 commands, later chapter describes how to organize these commands.

5.11. Check finger pressing status(IsPressFinger)

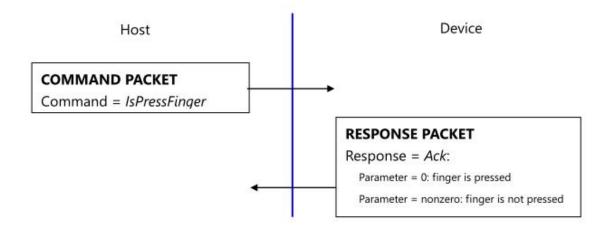


This command is used while enrollment, the host waits to take off the finger per enrollment stage.


5.12. Delete one fingerprint(DeleteID)

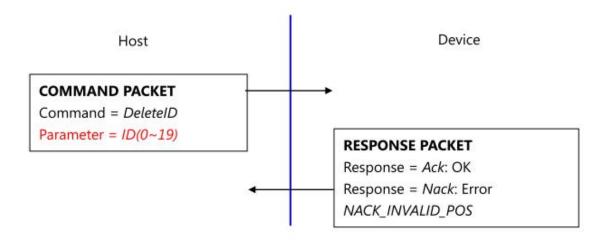


5.13. Delete all fingerprints(DeleteAll)

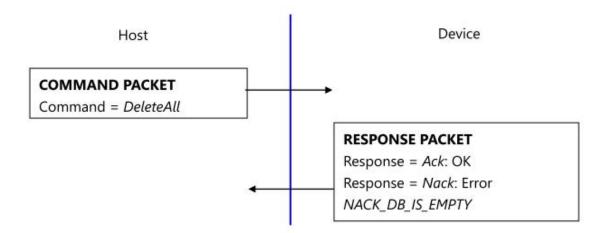


5.14. 1:1 Verification(Verify)

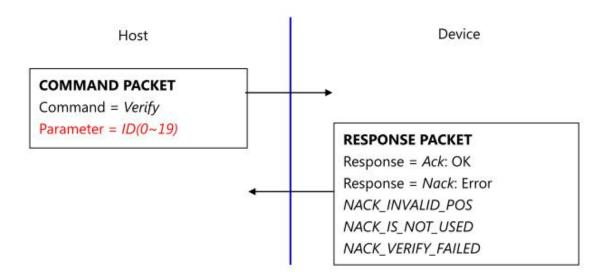


5.15. 1:N Identification(Identify)

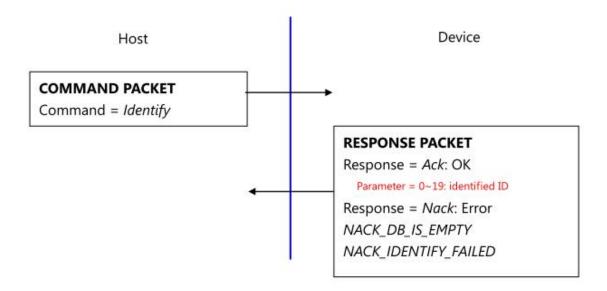


5.16. 1:1 Verification of Template(VerifyTemplate)

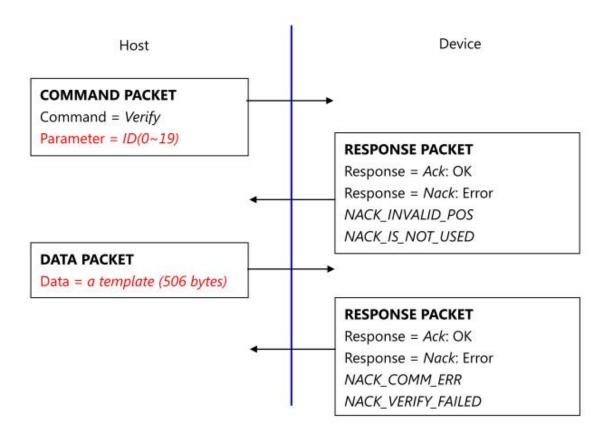

5.17. 1:N Identification of Template(IdentifyTemplate)

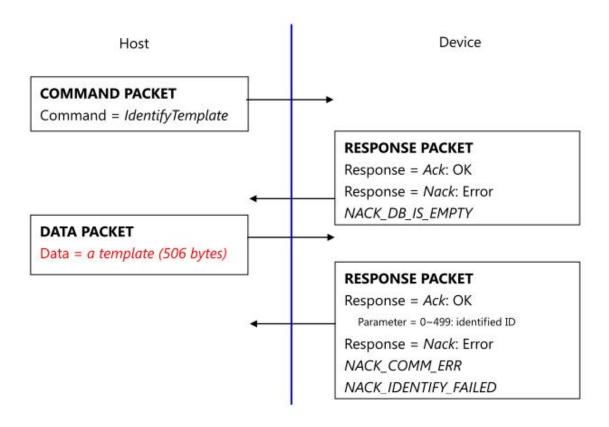

5.18. Capture fingerprint(CaptureFinger)

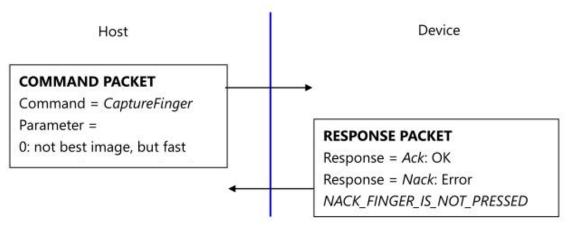


The fingerprint algorithm uses 240x216 image for its input.

This command captures raw image from the sensor and converts it to 216x240 image for the fingerprint algorithm. If the finger is not pressed, this command returns with non-acknowledge.


Please use best image for enrollment to get best enrollment data. Please use not best image for identification (verification) to get fast user sensibility.

5.19. Make Template(MakeTemplate)

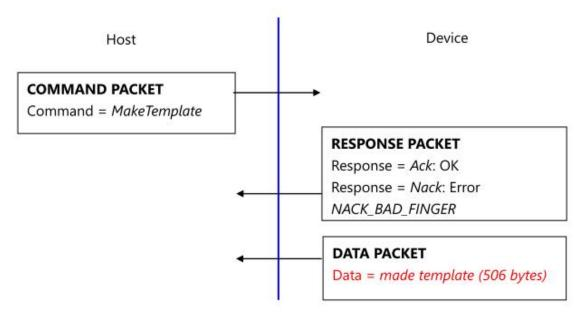


This function makes template for transmission. *CaptureFinger* command should be previously issued. Do not use the template for registration.


5.20. Get fingerprint image(GetImage)

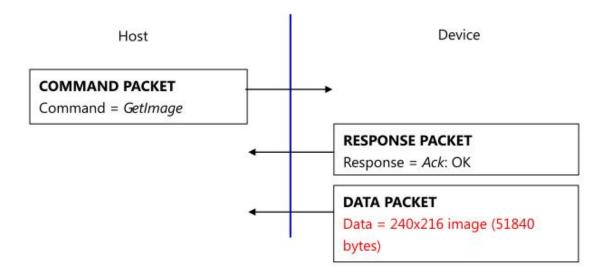


5.21. Get raw image(GetRawImage)

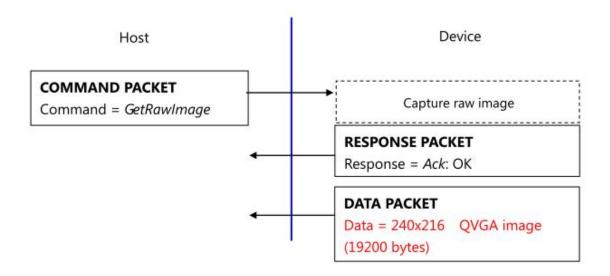


5.22. Get template(GetTemplate)

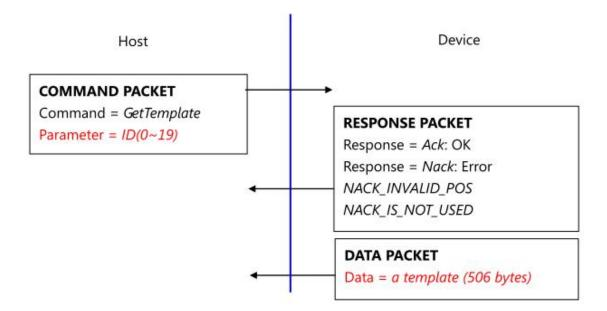

5.23. Set template(SetTemplate)

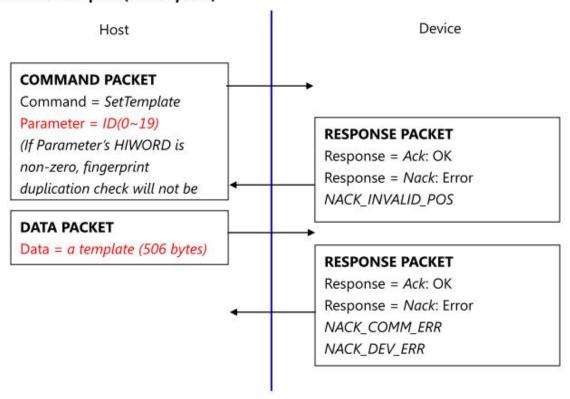


5.24. Start database download, obsolete(GetDatabaseStart)

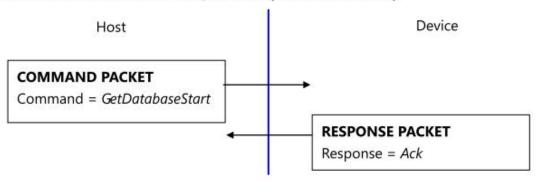

GetDatabaseStart command does nothing. It exists for historical reason; it was used for RS232 communication.

5.25. End database download, obsolete(GetDatabaseEnd)

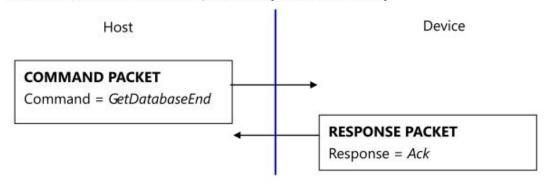

GetDatabaseEnd command does nothing. It exists for historical reason; it was used for RS232 communication.


5.26. Upgrade Firmware(UpgradeFirmware)

Not supported

5.27. Upgrade ISO CD Image(UpgradeISOCDImage)

Not supported

5.28. Set IAP Mode(SetIAPMode)

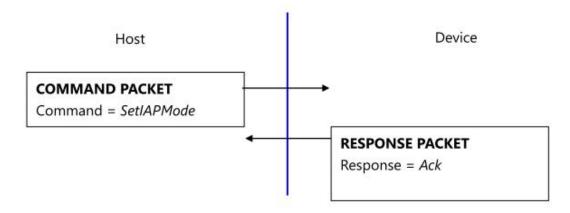

The Device enter in IAP Mode, In this mode, FW upgrade is available.

Protocol: Flowchart, description

6.1 Capture of the fingerprint image

IsPressFinger checks whether a finger placed on the sensor. This function is used especially while enrollment.

CaptureFinger captures a fingerprint image (240x216), if a finger isn't placed on the sensor, it returns with error.

If this function returns with success, the device's internal RAM keeps valid fingerprint image for the subsequent commands. If the host issues other command, the fingerprint image will be used and destroyed.

GetRawImage captures a raw live image (240x216), it doesn't check whether a finger placed on the sensor, this function is used for debug or calibration.

6.2Identifying and Verifying

Identify and *IdentifyTemplate* perform 1: N matching operation. *Verify* and *VerifyTemplate* perform 1: 1 matching operation.

Just before calling of image-related matching functions (*Identify*, *Verify*), the host must call *CaptureFinger*.


6.3 Enrollment

An enrollment flowchart is as below.

- 1. EnrollStart with a (not used) ID
- 2. CaptureFinger
- 3. Enroll1
- 4. Wait to take off the finger using IsPressFinger
- 5. CaptureFinger
- 6. Enroll2
- 7. Wait to take off the finger using IsPressFinger
- 8. CaptureFinger
- 9. Enroll3

7. PC Demo

PC demo program describes how to use the device with its source code.

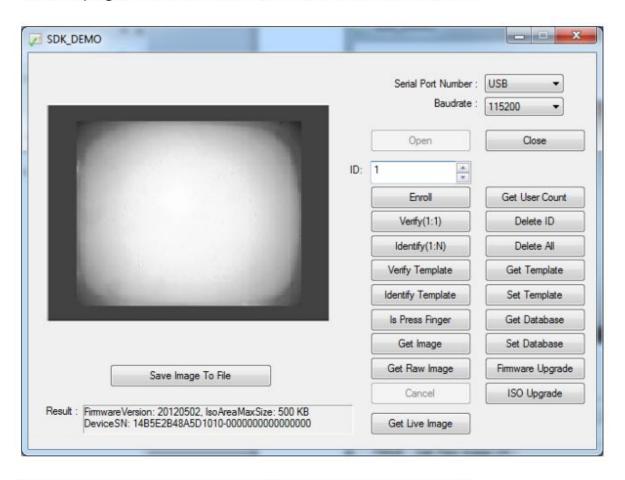

Command Alias	UI item to test it
Open, UsbInternalCheck, ChangeBaudrate	Open
Close	Close
GetEnrollCount	Get User Count

Command Alias	UI item to test it
CheckEnrolled, EnrollStart, Enroll1, Enroll2, Enroll3, IsPressFinger	Enroll ,
	Is Press Finger
DeleteID	Delete ID
DeleteAll	Delete All
Verify	Verify(1:1)
Identify	Identify(1:N)
VerifyTemplate	Verify Template
IdentifyTemplate	Identify Template
CaptureFinger, GetImage	Get Image
GetRawlmage	Get Raw Image
GetTemplate, GetDatabaseStart, GetDatabaseEnd	Get Template ,
	Get Database
SetTemplate	Set Template
	Set Database
UpgradeFirmware	Firmware Upgrade
UpgradelSOCDImage	ISO Image Upgrade

Demo program is supported with its source code.

The project is Microsoft Visual C++ 2005 project. We selected VC6.0 to minimize the size of the executable.

8. Mechanical Dimensions

