Contents

1	Con	tent of the electronics kit	2
2	Reading the pins on our microscontroller		
	2.1	Digital Input / Output	3
		2.1.1 Blink example	3
		2.1.2 Button Example using 'Pullup'	3
	2.2	Analog Input	4
		2.2.1 PWM: Power with modulation	6
3	I2C		7
	3.1	Scanning for I2C devices	7
		Accelerometer (MPU6050)	9

1 Content of the electronics kit

You borrow your kit personally from FlexLab and it must be handed back to FlexLab at the end of the course.

When handing out, please check the contents with this list and let us know if anything is missing. When handing in the kit, we also ask you to check the contents and make us aware if you have lost something or something is defective.

☐ ESP32 Development Board
□ 2 Breadboards (830 Point Solderless and Transparent)
□ 2 Joysticks
□ Potentiometer with cap
☐ GY-521 Accelerometer
☐ Character LCD /w IIC/I2C Serial Interface Adapter
□ 0.91inch OLED LCD Display Module 128x32 I2C
☐ Micro USB Cable
☐ 3 push buttons
□ Piezo Electronic Buzzer Alarm 95DB
☐ Small Toggle Switch Interruptor
☐ Cable Bundle
□ various colored LEDs
□ resistor
□ RGB LED

2 Reading the pins on our microscontroller

2.1 Digital Input / Output

In these first examples, we try to keep things simple and concentrate on controlling a single pin (LED) in the first example and then reading a pin (button) in the next example. In these examples we use digital input / output. Either there is power on the stick or there is not. Later in the next section we try with analog inputs and outputs, such as reading the resistance in a potentiometer or being able to control the brightness of an LED.

2.1.1 Blink example

The Blink example can be described as the "hello world"-script for micro-processors. Pay attention to the first line where we include arduino, this line of code is only necessary because we use platoformIO as our editor. If you search the net for blink or other arduino examples you will often find examples where this line is missing. That is because the arduino IDE add that by itself.

The code will only work if you connect a LED to pin number 15 and GND.

```
#include <Arduino.h>
2
   const int LEDPIN = 15;
3
4
5
   void setup() { pinMode(LEDPIN, OUTPUT); }
6
7
   void loop() {
      digitalWrite(LEDPIN, HIGH);
8
9
     delay(1000);
10
     digitalWrite(LEDPIN, LOW);
     delay(1000);
11
12 }
```

2.1.2 Button Example using 'Pullup'

This example introduces digitalRead() and demonstrate the use og a built in pullup resistor. The reason we use it the pullup resistor is to avoid that the voltage is fluctiating when the button isn't connected to the ground(gnd)

```
1 #include <Arduino.h>
2
3 const int LEDPIN = 15;
```

```
const int BUTTON PIN = 22;
5 int buttonState = 0;
7
   void setup() {
8
     pinMode(LEDPIN, OUTPUT);
9
     pinMode(BUTTON_PIN, INPUT_PULLUP);
10
11
      // Init serial
12
      Serial.begin(9600);
13 }
14
15 void loop() {
     buttonState = digitalRead(BUTTON_PIN);
16
17
     Serial.println(buttonState);
18
19
     if (buttonState == 1) {
20
       // LED OFF
21
       digitalWrite(LEDPIN, LOW);
22
     } else {
23
       // LED ON
24
       digitalWrite(LEDPIN, HIGH);
25
     }
26
   }
```


2.2 Analog Input

in previous examples we work with the digitalread function to check if there was power on a pin or not. But many sensors work differently. They are not just on or off but provide a value that can vary between 0 and 4095 (by default on an ESP32)

We will now look at an example where we read a potentiometer. you can change the setting on the potentiometer and read a changing value in our serial monitor

When you run the sample you should be able to see a changing value being printed in your serial monitor. When you turn the potentiometer, the value should change. Even when you are not touching the potentiometer we must expect the value to change a bit because the voltage always fluctuates a little bit.

It's time to set up your electrical circuit and test the example:

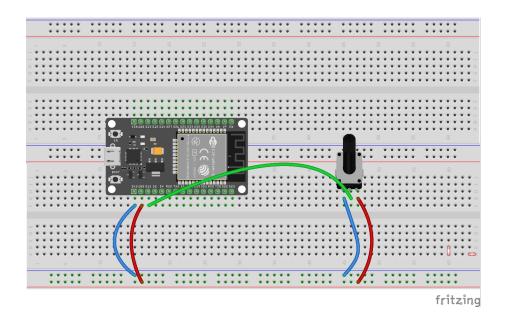

```
1
 2
   #include <Arduino.h>
 3
   const int potentiometerPin = 15;
 4
 5
   void setup() {
 6
     pinMode(potentiometerPin, INPUT);
 7
     Serial.begin(9600);
8
   }
9
   void loop() {
10
11
     int result = analogRead(potentiometerPin);
12
     Serial.println(result);
13
   }
```

programs above show a number between 0 and 4095. the number tells how big the voltage is on the pin we are measuring. Let's change the code a bit so it shows how many volts there are on our pin. we insert a small calculation where we calculate volts based on the ESP32 emitting 3.3v and our range is from 0-4095:

```
1 #include <Arduino.h>
2
3 const int potentiometerPin = 15;
4
5 void setup() {
6  pinMode(potentiometerPin, INPUT);
7  Serial.begin(9600);
8 }
9
10 void loop() {
```


```
int potentiometerValue = analogRead(potentiometerPin);
double voltage = potentiometerValue /4095.0 * 3.3;

Serial.print("voltage is: ");
Serial.println(voltage);
}
```

2.2.1 PWM: Power with modulation

Now we have looked at how to read analog input using the analogRead () function. When we want to control output, a technique called PWM is used. The principle is that we turn the power on and off very quickly. Then the "voltage" is controlled by how long the power is on in relation to how long it is off. You set a duty cycle that determines how much of the time we turn on the power, and frequency which sets the speed for how often we want to "turn on and off" the power.

See example below:

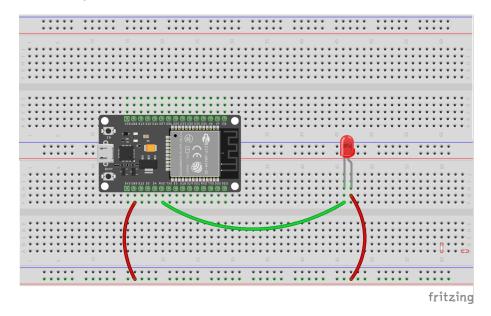


```
8 const int ledChannel = 0; // you have 8 channels (0-7) available
        to choose between
9 const int resolution = 8; \frac{1}{8} bits \frac{0-255}{1}
10
11 void setup(){
     // Set up channel with dutycycle and resolution
12
13
     ledcSetup(ledChannel, freq, resolution);
14
15
     // attach the channel to the GPIO to be controlled
16
     ledcAttachPin(ledPin, ledChannel);
17 }
18
19
   void loop(){
   // increase the LED brightness
20
     for(int dutyCycle = 0; dutyCycle <= 255; dutyCycle++){</pre>
21
        // changing the LED brightness with PWM
22
23
        ledcWrite(ledChannel, dutyCycle);
24
        delay(15); // Hello world
25
     }
26
27
     // decrease the LED brightness
     for(int dutyCycle = 255; dutyCycle >= 0; dutyCycle --){
28
29
        // changing the LED brightness with PMM
30
        ledcWrite(ledChannel, dutyCycle);
31
        delay(15);
32
     }
33 }
```

3 I2C

3.1 Scanning for I2C devices

Before we start I connect our three I2C devices to the ESP32

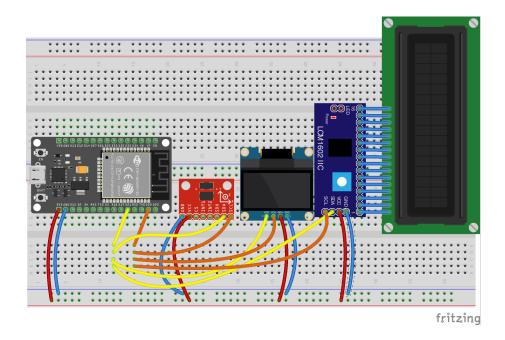

You can use this code to find I2C devices connected to your microson-troller.

```
#include <Arduino.h>
 2
   #include <Wire.h>
 3
 4
   void setup() {
5
      Wire.begin();
 6
      Serial.begin(9600);
 7
      Serial.println("\nl2C\scanner");
 8
   }
9
   void loop() {
10
      byte error, address;
11
12
      int nDevices;
13
      Serial.println("Scanning...");
14
      nDevices = 0;
      for(address = 1; address < 127; address++ ) {</pre>
15
        Wire.beginTransmission(address);
16
17
        error = Wire.endTransmission();
        if (error == 0) {
   Serial.print("I2Codeviceofoundoatoaddressoux");
18
19
          if (address<16) {</pre>
20
21
             Serial.print("0");
22
23
          Serial.println(address, HEX);
24
          nDevices++;
25
        else if (error==4) {
26
```

```
Serial.print("Unknow\squareerror\squareat\squareaddress\square0x");
27
28
           if (address<16) {</pre>
29
             Serial.print("0");
30
31
           Serial.println(address, HEX);
32
         }
33
      if (nDevices == 0) {
34
35
         Serial.println("Nool2Codevicesofound\n");
36
      }
37
      else {
38
         Serial.println("done\n");
39
      delay(5000);
40
41 }
    an accelerometer.
```

In this case I have connected a LCD display, a small OLED display and

```
1
     Scanning . . .
2
     12C device found at address 0x27
3
     I2C device found at address 0x3C
4
     I2C device found at address 0x68
     done
```

3.2 **Accelerometer (MPU6050)**

```
1 #include <Arduino.h>
 2 #include <MPU6050 tockn.h>
 3
   #include <Wire.h>
 5 MPU6050 mpu6050 (Wire);
 6
 7
   void setup() {
 8
      Serial.begin(9600);
9
     Wire.begin();
10
     mpu6050.begin();
     mpu6050.calcGyroOffsets(true);
11
12 }
13
14
   void loop() {
15
     mpu6050.update();
16
     Serial.print("angleX□:□");
17
      Serial.print(mpu6050.getAngleX());
      Serial.print("\tangleY□:□");
18
19
      Serial.print(mpu6050.getAngleY());
20
      Serial.print("\tangleZ□:□");
```

```
21    Serial.println(mpu6050.getAngleZ());
22  }
```