

## Common-EGSE

### Interface Control Document

Rik Huygen

Version 0.1, 21/02/2023

### **Table of Contents**

Changelog	
Colophon	1
Conventions used in this Book	2
1. TODO	3
2. Introduction	
3. Software Interfaces	5
3.1. The Storage Data Interface	5
4. Data Format	8
4.1. The format of the FITS files	
4.2. The format of the HDF5 files	8
4.3. Inspecting HDF5 files with the toolset from the CGSE	8
4.4. The Telemetry (TM) Dictionary 2	1

### Changelog

#### 21/02/2023 — v0.1

- Introduce Changelog, this section
- Added section on the format of the HDF5 files, see Section 4.2
- Added section on inspecting an HDF5 file, see Section 4.3

### Colophon

Copyright © 2022, 2023 by the KU Leuven PLATO CGSE Team

1<sup>st</sup> Edition — February 2023

This manual is written in PyCharm using the AsciiDoc plugin. The PDF Book version is processed with asciidoctor-pdf.

The manual is available as HTML from ivs-kuleuven/github.io. The HTML pages are generated with Hugo which is an OSS static web-pages generator. From this site, you can also download the PDF books.

The source code is available in a GitHub repository at ivs-kuleuven/plato-cgse-doc.

When you find an error or inconsistency or you have some improvements to the text, feel free to raise an issue or create a pull request. Any contribution is greatly appreciated and will be mentioned in the acknowledgement section.

### Conventions used in this Book

We try to be consistent with the following typographical conventions:

#### Italic

Indicates a new term or ...

#### **Constant width**

Used for code listings, as well as within paragraphs to refer to program elements like variable and function names, data type, environment variables (ALL\_CAPS), statements and keywords.

#### Constant width between angle brackets <text>

Indicates text that should be replaced with user-supplied values or by values determined by context. The brackets should thereby be omitted.

When you see a \$ \cdots in code listings, this is a command you need to execute in a terminal (omitting the dollar sign itself). When you see >>> \cdots in code listings, that is a Python expression that you need to execute in a Python REPL (here omitting the three brackets).

### Chapter 1. TODO

- $\hfill \square$  Describe the format of the FITS files containing CCD data
- ☑ Describe the format of the HDF5 files containing SpaceWire data from the N-FEE
- □ Describe the interface to the Storage, i.e. the expected keys for the dictionaries that are passed like prep and item...

### Chapter 2. Introduction

This document describes the software and hardware interfaces for the PLATO Common-EGSE, which is used at CSL and the test houses at IAS, INTA and SRON.

This ICD defines all the connections between the components in the instrument test setup that interface with the Common-EGSE. It defines these interface in terms of hardware, i.e. cables, connectors, electrical properties, and in terms of software, i.e. communication protocols, message buffers, timing, data formats etc.

### **Chapter 3. Software Interfaces**

### 3.1. The Storage Data Interface

The Storage Manager ... TBW

Table 1. Top-level keys that are mandatory or optional in the 'item' argument of the following Storage methods.

key	register	unregister	new_registr ation	read	save	get_filenam es
origin	required	required	required	required	required	required
prep	required		required	required	required	required
persistence_ class	required		required			
persistence_ objects	created <sup>1</sup>	used <sup>2</sup>		used <sup>2</sup>	used <sup>2</sup>	used <sup>2</sup>
persistence_ count <sup>3</sup>	optional					
data					required	
filename <sup>4</sup>	optional					
select				required		

<sup>&</sup>lt;sup>1</sup> — The persistence\_objects key is created during registration and used internally to manage all the persistent objects that are associated to the item.

In the following example you can see how to check the registrations on the Storage Manager and which persistence\_objects are associated with each of the registered items. This particular example is during an observation run and therefore each registered item has a persistent object in the daily folder, and one in the obs folder for the observation 299. It is also clear that the obsid-table.txt is only in the top-level data folder because it was created with the persistence\_count key.

<sup>&</sup>lt;sup>2</sup> — This key which was created during registration is used to perform an action on the persistent objects associated with this item.

<sup>&</sup>lt;sup>3</sup> — When the persistent\_count is provided in the item, the file is treated specially. The file will not be cloned when an observation is started, nor will it be cycled when a new day is started. Basically, the file is created once and not cloned, cycled or closed. An example is the obsidtable.txt which is used by the configuration manager.

<sup>&</sup>lt;sup>4</sup> — When the filename key is present, the file will be created with the given name in the folder provided by the FILE\_STORAGE\_LOCATION field for the Storage manager in the Settings. By default, this is the \$PLATO\_DATA\_STORAGE\_LOCATION environment variable, but that can be changed in the local settings (which is not preferred!).



```
[plato-data@plato-arrakis 20220701]$ sm cs status --full
Storage Manager:
  Status: active
  Hostname: 129.175.66.182
  Monitoring port: 6101
  Commanding port: 6100
  Service port: 6102
  Storage location: /data/IAS
  Registrations: ['SYN-HK', 'SYN', 'obsid', 'CM', 'PM', 'CDAQ9184', 'FOV',
'DAQ6510', 'ZONDA',
    'KSC101', 'PTC10', 'EQ99', 'TCS', 'TCS-HK', 'DAS-PTC10', 'AEU-CRIO', 'AEU-PSU1',
'AEU-PSU2',
    'AEU-PSU3', 'AEU-PSU4', 'AEU-PSU5', 'AEU-PSU6', 'AEU-AWG1', 'AEU-AWG2', 'N-
FEE_SPW', 'DPU',
    'N-FEE-HK', 'FW8SMC4']
Filenames for all registered items:
            -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_SYN-HK.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_SYN-HK_20220701_132613.csv')]
            -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_SYN.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_SYN_20220701_132613.csv')]
            -> [PosixPath('/data/IAS/obsid-table.txt')]
            -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_CM.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_CM_20220701_132613.csv')]
             -> [PosixPath('/data/IAS/daily/20220701/20220701 IAS PM.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_PM_20220701_132613.csv')]
           -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_CDAQ9184.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_CDAQ9184_20220701_132613.csv')]
            -> [PosixPath('/data/IAS/daily/20220701/20220701 IAS FOV.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_FOV_20220701_132613.csv')]
            -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_DAQ6510.csv'),
  DAQ6510
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_DAQ6510_20220701_132613.csv')]
            -> [PosixPath('/data/IAS/daily/20220701/20220701 IAS ZONDA.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_ZONDA_20220701_132613.csv')]
            -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_KSC101.csv'),
PosixPath('/data/IAS/obs/00299 IAS/00299 IAS KSC101 20220701 132613.csv')]
  PTC10
             -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_PTC10.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_PTC10_20220701_132613.csv')]
            -> [PosixPath('/data/IAS/daily/20220701/20220701 IAS EQ99.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_EQ99_20220701_132613.csv')]
             -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_TCS.csv'),
PosixPath('/data/IAS/obs/00299 IAS/00299 IAS TCS 20220701 132613.csv')]
             -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_TCS-HK.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_TCS-HK_20220701_132613.csv')]
  DAS-PTC10 -> [PosixPath('/data/IAS/daily/20220701/20220701 IAS DAS-PTC10.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_DAS-PTC10_20220701_132613.csv')]
  AEU-CRIO -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_AEU-CRIO.csv'),
PosixPath('/data/IAS/obs/00299 IAS/00299 IAS AEU-CRIO 20220701 132613.csv')]
  AEU-PSU1 -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_AEU-PSU1.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_AEU-PSU1_20220701_132613.csv')]
```

```
AEU-PSU2 -> [PosixPath('/data/IAS/daily/20220701/20220701 IAS AEU-PSU2.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_AEU-PSU2_20220701_132613.csv')]
  AEU-PSU3 -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_AEU-PSU3.csv'),
PosixPath('/data/IAS/obs/00299 IAS/00299 IAS AEU-PSU3 20220701 132613.csv')]
           -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_AEU-PSU4.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_AEU-PSU4_20220701_132613.csv')]
            -> [PosixPath('/data/IAS/daily/20220701/20220701 IAS AEU-PSU5.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_AEU-PSU5_20220701_132613.csv')]
  AEU-PSU6 -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_AEU-PSU6.csv'),
PosixPath('/data/IAS/obs/00299 IAS/00299 IAS AEU-PSU6 20220701 132613.csv')]
           -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_AEU-AWG1.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_AEU-AWG1_20220701_132613.csv')]
           -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_AEU-AWG2.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_AEU-AWG2_20220701_132613.csv')]
  N-FEE SPW -> [PosixPath('/data/IAS/daily/20220701/20220701 IAS N-
FEE SPW 01903.hdf5')]
  DPU
             -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_DPU.csv'),
PosixPath('/data/IAS/obs/00299 IAS/00299 IAS DPU 20220701 132613.csv')]
  N-FEE-HK -> [PosixPath('/data/IAS/daily/20220701/20220701_IAS_N-FEE-HK.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_N-FEE-HK_20220701_132613.csv')]
            -> [PosixPath('/data/IAS/daily/20220701/20220701 IAS FW8SMC4.csv'),
PosixPath('/data/IAS/obs/00299_IAS/00299_IAS_FW8SMC4_20220701_132613.csv')]
An observation is registered: IAS_00062_00299
Total disk space: 1.718 TiB
Used disk space: 183.215 GiB (10.41%)
Free disk space: 1.452 TiB (84.50%)
[plato-data@plato-arrakis 20220701]$
```

### 4.1. The format of the FITS files

Chapter 4. Data Format

During the camera tests, the DPU will be configured such that a specific part of the E- and/or F-side of the selected CCDs will be transmitted (in the form of SpW packets) for a specified number of cycles. The following information will be reconstructed from these SpW packets and stored in FITS files:

- transmitted image data of the selected side(s) of the selected CCDs, for all cycles;
- transmitted serial pre-scan data of the selected side(s) of the selected CCDs, for all cycles;
- transmitted serial over-scan data of the selected side(s) of the selected CCDs, for all cycles;
- transmitted parallel over-scan data (if any) of the selected side(s) of the selected CCDs, for all cycles.

While the SpW packets come in, the individual exposures are stored in individual extensions in FITS files that carry "images" in their name. This type of data arrangement is called a "flat structure". When there's a change in crucial parameters, a new FITS file will be constructed (with "cube" in its name), based on the flat-structure FITS file, in which the exposures are aggregated into cubes. The original, flat-structure file will be removed from the system. For analysis, only the FITS files with the cubes will be available, and therefore only the structure of these will be discussed in the section below.

Each of the extensions (apart from the PRIMARY extension) will occur only once and comprise a 3D data array and a header with the metadata that is specific to that extension. The name of an extension will reflect what type of data product it comprises (e.g. image data of the F-side of CCD2, serial pre-scan data of the E-side of CCD3, etc.). The following extensions can be included in the FITS files:

□ descibe the slicing strategy and how this is handled in the commanding

#### 4.1.1. Crucial Parameters

#### 4.1.2. FITS Filenames

#### 4.1.3. Slicing Strategy

### 4.2. The format of the HDF5 files

The HDF5 files contain the raw data that is read out from the camera through the spacewire interface that is connected to the front-end-electronics (FEE).

In contrast to the FITS files, which are organised around the image data, the HDF5 files are organised around the readout sequence and the telemetry that is sent out by the camera. Each

HDF5 file contains exactly one readout sequence, i.e. four frames in external sync mode and one frame for internal sync. The data is not processed, but the raw data packets are saved as an Numpy array of type uint8, all values are unsigned integers of 8 bits, i.e. a byte.

Inspecting the HDF5 files can be done with the h5py module or you can use the CGSE module egse.h5 which provides convenience functions to work with HDF5 files. We normally use the CGSE module to explore the HDF5 files, but will provide equivalent code for inspection with the h5py module where possible.

```
egse.h5

>>> from egse import h5

h5py

>>> import h5py
```

Let's take an example file from IAS taken on 7th February 2023. The file is loaded with the <a href="hb.get\_file">h5.get\_file</a>() function and we can visualize the top level structure as follows:

```
egse.h5
    >>> h5_fd = h5.get_file("20230207_IAS_N-FEE_SPW_06174.hdf5")
    >>> h5.show file(h5 fd)
    [G] 0
    [G] 1
    [G] 2
    [G] 3
    [D] dpu (104 bytes)
    [D] obsid (104 bytes)
    [D] register (2.109 KB)
    [G] versions
    Total size of Group = 159.597 MB
    Total size of attributes: 0 bytes
h5py
    >>> h5_fd = h5py.File("20230207_IAS_N-FEE_SPW_06174.hdf5")
    >>> [x for x in h5 fd]
    ['0', '1', '2', '3', 'dpu', 'obsid', 'register', 'versions']
```

We can see that there are five top-level groups and three datasets. This is data taken in external sync mode, so we have four readouts per cycle. The data from each readout is in the groups 0, 1,



2, and 3. These numbers correspond to the frame number. Each of these groups has the following structure:

```
egse.h5
    >>> h5.show_groups(h5_fd["/0"], max_level=1)
    [G] data
    [D] hk (266 bytes)
    [D] timecode (104 bytes)
    Total size of Group = 39.899 MB
h5py
    >>> [x for x in h5_fd["/0"]]
    ['data', 'hk', 'timecode']
```

The data group contains all the SpaceWire packets that have image data, i.e. normal data packets and overscan packets. The data group also has the following attributes that are used to decode the SpaceWire packets into image data arrays. We will describe the data groups into more detail later in this section.

```
egse.h5
    >>> h5.show_attributes(h5_fd["/0/data"])
    DG_en: 0 (32 bytes)
    ccd_mode_config: 5 (32 bytes)
    ccd_read_en: 1 (32 bytes)
    ccd_readout_order: 228 (32 bytes)
    digitise_en: 1 (32 bytes)
    h_end: 2294 (32 bytes)
    int_sync_period: 2500 (32 bytes)
    n_final_dump: 0 (32 bytes)
    sensor_sel: 3 (32 bytes)
    sync_sel: 0 (32 bytes)
    v_end: 4539 (32 bytes)
    v_start: 0 (32 bytes)
    Total size of attributes: 384 bytes
h5py
    >>> [x for x in h5_fd["/0/data"].attrs]
         'DG_en',
         'ccd_mode_config',
         'ccd_read_en',
```

```
'ccd_readout_order',
  'digitise_en',
  'h_end',
  'int_sync_period',
  'n_final_dump',
  'sensor_sel',
  'sync_sel',
  'v_end',
  'v_start'
]
```

The two datasets in group '/0' contain the timecode and the housekeeping information that is sent on every sync pulse. The timecode dataset contains the timecode itself and the timestamp when this timecode was received by the DPU Processor. Remember the timecode is an integer from 0 to 63. The timecode dataset is an array with one integer element, the timestamp is an attribute of the timecode dataset. The timecode dataset and the timestamp can be visualised as follows.

```
egse.h5

>>> h5.get_data(h5_fd["/0/timecode"])
    array(53)
    >>> h5.get_attribute_value(h5_fd["/0/timecode"], "timestamp")
    '2023-02-07T15:13:10.397+0000'

h5py

>>> h5_fd["/0/timecode"][()]
    53
    >>> h5_fd["/0/timecode"].attrs["timestamp"]
    '2023-02-07T15:13:10.397+0000'
```

The raw content of the hk dataset can be shown as follows. The hk dataset has no attributes currently.

```
egse.h5
    >>> h5.get_data(h5_fd["/0/hk"])
                                5, 130, 24, 29,
                                                         0, 128,
    array([ 80, 240,
                      0, 144,
                                                    0,
                                0, 128,
                                        0, 128,
                                                    0, 127, 255, 127, 255,
             0, 128,
                       0, 128,
           127, 255, 127, 255, 127, 255, 127, 255, 127, 255, 127, 255, 127,
           255, 128, 21,
                           0,
                                0, 128, 88, 128, 87, 128, 88, 128, 88,
                88, 128, 87, 128, 88, 128, 88, 128, 85, 128, 86, 128,
           128,
                 57, 191, 252, 138, 250, 233, 128, 87, 128, 88,
```



```
93, 25, 121, 231, 110, 26, 140, 223,
231,
                                            53, 26, 128,
     64, 186, 7, 68, 251, 124, 58, 236, 10, 181,
191,
     87, 128, 88, 148, 193, 128, 85, 128, 89, 148, 193, 128,
128,
         88, 148, 186, 128, 86, 128, 89, 148, 202, 128,
     87, 128, 85, 128, 89, 128, 90, 0,
                                            53,
                                                 0,
                                                      1,
           0,
29,
      0,
                0,
                     0,
                         0,
                              0,
                                   0,
                                        0,
                                           0,
                                                24], dtype=uint8)
```

#### h5py

```
>>> h5 fd["/0/hk"][()]
array([ 80, 240,
                  0, 144,
                           5, 130, 24, 29,
                                               0,
                                                    0, 128,
                                     0, 128,
        0, 128,
                  0, 128,
                           0, 128,
                                               0, 127, 255, 127, 255,
      127, 255, 127, 255, 127, 255, 127, 255, 127, 255, 127, 255, 127,
      255, 128, 21,
                       0,
                           0, 128, 88, 128, 87, 128, 88, 128, 88,
      128,
            88, 128, 87, 128, 88, 128, 88, 128, 85, 128, 86, 128,
            57, 191, 252, 138, 250, 233, 128, 87, 128,
                                                       88,
            93, 25, 121, 231, 110, 26, 140, 223,
      231,
                                                   53,
                                                        26, 128,
                     7, 68, 251, 124, 58, 236,
      191,
            64, 186,
                                                  10, 181,
            87, 128, 88, 148, 193, 128, 85, 128, 89, 148, 193, 128,
      128,
       88, 128, 88, 148, 186, 128, 86, 128, 89, 148, 202, 128,
      128,
           87, 128, 85, 128, 89, 128, 90,
                                               0, 53,
                                                         0,
       29,
             0,
                  0,
                      0,
                            0,
                                0,
                                     0,
                                          0,
                                               0,
                                                   0,
                                                        24], dtype=uint8)
```

The CGSE provides a module to inspect and work with PLATO SpaceWire packets. The above housekeeping packet can be inspected using the HousekeepingPacket class from the egse.spw package:

```
egse.h5
```

```
>>> from egse.spw import HousekeepingPacket
>>> hk data = h5.get data(h5 fd["/0/hk"])
>>> hk = HousekeepingPacket(hk_data)
>>> print(hk)
print(hk)
HousekeepingPacket:
 Logical Address = 0x50
 Protocol ID = 0xF0
 Length = 144
  Type = mode:FULL_IMAGE_MODE, last_packet:True, CCD side:E, CCD number:0,
Frame number:0, Packet Type:HOUSEKEEPING_DATA
  Frame Counter = 6173
 Sequence Counter = 0
  Data =
b'\x80\x00\x80\x00\x80\x00\x80\x00\x80\x00\x80\x00\x7f\xff\x7f\xff\x7f\xff\x7
f\xff\x7f\xff\x7f\xff\x7f\xff\x80\x15\x00\x00\x80X\x80W\x80X\
x80X\x80X\x80W\x80X\x80X\x80U\x80V\x80V9\xbf\xfc\x8a\xfa\xe9\x80W\x80X\x1a\x9
f\xe7]\x19y\xe7n\x1a\x8c\xdf5\x1a\x80S\xbf@\xba\x07D\xfb|:\xec\n\xb5\x00\x00\
```

 $x80W \times 80X \times 94 \times c1 \times 80Y \times 94 \times c1 \times 80X \times 94 \times ba \times 80Y \times 80$ 

#### h5py

In this case only the retrieving of the hk\_data is different:

```
>>> hk_data = h5_fd["/0/hk"][()]
```

Thus far we have explored the following format of the HDF5 file:

```
h5_file
        — 0
           —— data
             — hk
        timecode
        - 1
        data
         _____ hk
        timecode
        - 2
        —— hk
            — data
        timecode
       — 3
        ——— data
           ---- hk
         timecode
        — dpu
        obsid
        register
        - versions
          format_version
```

We haven't inspected the versions group yet, it currently contains only one dataset, format\_version. This version describes the changes in the HDF5 file with respect to available groups, datasets and attributes. The format version can be accessed as follows.

```
egse.h5

>>> h5.show_attributes(h5_fd["/versions/format_version"])
major_version: 2 (32 bytes)
minor_version: 4 (32 bytes)
Total size of attributes: 64 bytes
```

```
h5py

>>> list(h5_fd["/versions/format_version"].attrs)
['major_version', 'minor_version']
>>> h5_fd["/versions/format_version"].attrs["major_version"]
2
>>> h5_fd["/versions/format_version"].attrs["minor_version"]
4
```

Up to now, the format versions have changed from 2.0 to 2.4 as follows:

```
2.0 - introduced the format_version
2.1 - Added obsid as a dataset to the HDF5 file
2.2 - Multiple commands can now be saved under the same frame number
2.3 - introduced /dpu/num_cycles attribute
2.4 - introduced /dpu/slicing_num_cycles attribute
```

Before we dive into the data groups, let's first inspect the three remaining datasets dpu, obsid and register. The obsid dataset contains the full observation identifier where this HDF5 file belongs to as a bytes object. If the obsid is empty, no observation was running.

```
egse.h5

>>> h5.get_data(h5_fd["/obsid"]).item()
b'IAS_00088_00938'

h5py

>>> h5_fd["/obsid"][()]
b'IAS_00088_00938'
```

The dpu dataset contains DPU Processor specific parameters that are needed to properly process the data. These parameters are available as attributes to this dataset and are mainly used by the FITS generation process.

```
egse.h5

>>> h5.show_attributes(h5_fd["/dpu"])
num_cycles: 10 (32 bytes)
slicing_num_cycles: 0 (32 bytes)
Total size of attributes: 64 bytes
```

```
h5py

>>> list(h5_fd["/dpu"].attrs)
['num_cycles', 'slicing_num_cycles']
>>> h5_fd["/dpu"].attrs["num_cycles"]
10
```

Finally, the register dataset is a Numpy array that is a mirror of the register memory map in the N-FEE at the time of the sync pulse.

```
egse.h5

>>> h5.get_data(h5_fd["/register"])
array([ 17, 187,  0, ...,  0,  0], dtype=uint8)

h5py

>>> h5_fd["/register"][()]
array([ 17, 187,  0, ...,  0,  0,  0], dtype=uint8)
```

The content of the register dataset can be inspected using the RegisterMap class from the CGSE. If you are using a slightly older version of the CGSE, your output might looks different, i.e. not in a nicely formatted table. The content is however the same.

```
>>> import rich
>>> from egse.reg import RegisterMap
>>> reg_data = h5.get_data(h5_fd["/register"])
>>> reg = RegisterMap(name="N-FEE", memory_map=reg_data)
>>> rich.print(reg)
                                                           I
                                                 HEX
Register
                 Parameter
   reg_0_config
                   v_start
                                                   0x0
   reg_0_config
                   v_end
                                                   0x11bb
                 charge_injection_width
   reg_1_config
                                                   0x64
                 charge_injection_gap
                                                   0x64
  reg_1_config
                   parallel_toi_period
  reg_2_config
                                                   0x36b
                   parallel_clk_overlap
   reg_2_config
                                                   0xfa
   reg_2_config
                 ccd_readout_order
                                                   0xe4
  reg_3_config
                 n_final_dump
                                                   0x0
   reg_3_config
                 h end
                                                   0x8f6
   reg_3_config
                 | charge_injection_en
                                                   0x0
```



	,	
reg_3_config	tri_level_clk_en	0x0
reg_3_config	img_clk_dir	0x0
reg_3_config	reg_clk_dir	0x0
reg_4_config	packet_size	0x7d8c
reg_4_config	int_sync_period	0x9c4
reg_5_config	Trap_Pumping_Dwell_counter	0x30d4
reg_5_config	sync_sel	0x0
reg_5_config	sensor_sel	0x3
reg_5_config	digitise_en	0x1
reg_5_config	DG_en	0x0
reg_5_config	ccd_read_en	0x1
reg_5_config	conv_dly	0xf
reg_5_config	High_precision_HK_en	0x0
reg_6_config	ccd1_win_list_ptr	0x0
reg_7_config	ccd1_pktorder_list_ptr	0x0
reg_8_config	ccd1_win_list_length	0x0
reg_8_config	ccd1_win_size_x	0x0
reg_8_config	ccd1_win_size_y	0x0
reg_8_config	reg_8_config_reserved	0x0
reg_9_config	ccd2_win_list_ptr	0x0
reg_9_config	ccd2_whil_tist_ptr	0x0
reg_10_config	ccd2_win_list_length	0x0
	-	0x0
reg_11_config	ccd2_win_size_x	
reg_11_config	ccd2_win_size_y	0x0
reg_11_config	reg_11_config_reserved	0x0
reg_12_config	ccd3_win_list_ptr	0x0
reg_13_config	ccd3_pktorder_list_ptr	0x0
reg_14_config	ccd3_win_list_length	0x0
reg_14_config	ccd3_win_size_x	0x0
reg_14_config	ccd3_win_size_y	0x0
reg_14_config	reg_14_config_reserved	0x0
reg_15_config	ccd4_win_list_ptr	0x0
reg_16_config	ccd4_pktorder_list_ptr	0x0
reg_17_config	ccd4_win_list_length	0x0
reg_17_config	ccd4_win_size_x	0x0
reg_17_config	ccd4_win_size_y	0x0
reg_17_config	reg_17_config_reserved	0x0
reg_18_config	ccd_vod_config	0xeef
reg_18_config	ccd1_vrd_config	0xe65
reg_18_config	ccd2_vrd_config	0x65
reg_19_config	ccd2_vrd_config	0xe
reg_19_config	ccd3_vrd_config	0xe65
reg_19_config	ccd4_vrd_config	0xe65
reg_19_config	ccd_vgd_config	0x9
reg_10_config	ccd_vgd_config	0x5
reg_20_config	ccd_vgg_config	0x19a
reg_20_config	ccd_ig_hi_config	0xfff
reg_20_config	ccd_ig_lo_config	0x111
		: :
reg_21_config	trk_hld_hi	0x4

```
reg_21_config
                 trk hld lo
                                                   0xe
reg_21_config
                 cont_rst_on
                                                   0x0
reg_21_config
                 cont_cdsclp_on
                                                   0x0
                 ccd mode config
                                                   0x5
reg 21 config
reg_21_config
                 cont_rowclp_on
                                                   0x0
reg_21_config
                 reg_21_config_reserved
                                                   0x0
                 clear error flag
                                                   0x1
reg 21 config
                 r_cfg1
reg_22_config
                                                   0x7
reg_22_config
                 r_cfg2
                                                   0xb
reg_22_config
                 cdsclp lo
                                                   0x9
reg_22_config
                 adc_pwrdn_en
                                                   0x1
reg_22_config
                 reg_22_config_reserved_1
                                                   0x0
reg_22_config
                 cdsclp_hi
                                                   0x0
reg_22_config
                 rowclp_hi
                                                   0x0
reg 22 config
                 rowclp lo
                                                   0x2
                 reg_22_config_reserved_2
reg_22_config
                                                   0x0
reg_23_config
                 ccd1_last_Epacket
                                                   0x0
reg_23_config
                 ccd1 last Fpacket
                                                   0x0
reg_23_config
                 ccd2_last_Epacket
                                                   0x0
reg_23_config
                 reg_23_config_reserved
                                                   0x0
reg_24_config
                 ccd2_last_Fpacket
                                                   0x0
reg_24_config
                 ccd3_last_Epacket
                                                   0x0
                 ccd3_last_Fpacket
reg_24_config
                                                   0x0
reg_24_config
                 reg 24 config reserved
                                                   0x0
reg_25_config
                 ccd4_last_Epacket
                                                   0x0
reg_25_config
                 ccd4_last_Fpacket
                                                   0x0
                 Surface Inversion counter
reg 25 config
                                                   0x64
reg_25_config
                 reg_25_config_reserved
                                                   0x0
reg_26_config
                 Readout_pause_counter
                                                   0x7d0
                 Trap Pumping Shuffle counter
reg_26_config
                                                   0x3e8
```

The last group to inspect is the data group which is part of each of the readout groups. The data group contains all the SpaceWire packets that contain the CCD image data. The packets contain the serial prescan, serial overscan, the actual image data and the parallel overscan (if present). From the attributes of the dpu dataset we learned that h\_end=2294, v\_start=0 and v\_end=4539. The h\_end attribute defines what is in the row data. The value h\_end=2294 means 25 pixels of serial prescan, 2255 pixels of image data, and 15 pixels of serial overscan data. Each packet in the data group is a Numpy array of type uint8, but the actual pixel data is a 16bit integer. The header of a SpW data packet is 10 bytes, so from this information we can calculate that there are 7 lines contained in each packet of length 32140. We also have data packets of 9190 bytes which contain only two rows of data.

```
>>> (32140-10)/2/2295
7.0
>>> (9190-10)/2/2295
```

```
2.0
```

We requested 4540 rows ( $v_{end} - v_{start} + 1$ ) which is a full CCD of 4510 rows + 30 rows parallel overscan data. Image data and overscan data are sent in separate packets, so we have 644 + 1 packets of image data and 4 + 1 packets of parallel overscan data.


```
>>> 644*7 + 1*2  # 644 packets of 32140 bytes + 1 packet of 9190 bytes
4510
>>> 4*7 + 1*2  # 4 packets of 32140 bytes + 1 packet of 9190 bytes
30
```

This gives us a total of 650 packets for one side of the CCD, but since we requested both sides of the CCD (see sensor\_sel=3 in the dpu attributes or the register dataset above), we end up with a total of 1300 packets (datasets) in each of the data groups in /0, /1, /2, and /3.

```
>>> len(h5_fd["/0/data"])
1300
```


# 4.3. Inspecting HDF5 files with the toolset from the CGSE

So far, we have been inspecting the HDF5 files using code entered in the Python REPL. The Common-EGSE however also provides a nice GUI to visualise all groups, datasets and attributes from the PLATO HDF5 files. If you were involved in camera testing, you have probably seen the DPU Image Display GUI that in real-time updates the image data and other metadata received from the camera. The life data is constructed from the SpaceWire data packets on-the-fly, not from an HDF5 file. An example of a measurement at CSL during alignment is given in the screenshot below.

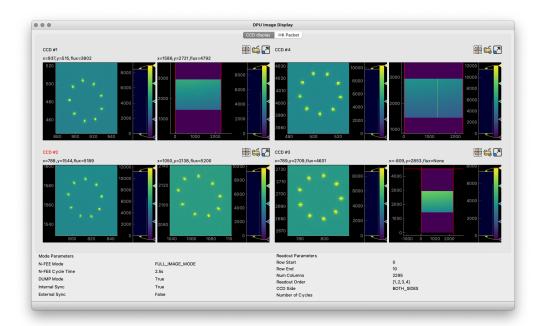


The same visualisation is provided by the stand-alone application hdf5\_ui that can be started from the terminal. This N-FEE Data Inspector GUI re-uses parts of the code from the DPU Image Display GUI, only the data that is shown is now read from an HDF5 file. Let's explore the functionality provided by the HDF5 GUI using a dataset that was taken at CSL during Short Functional Tests (SFT), i.e. data taken with the N-FEE simulator instead of the real instrument. When the GUI starts up, select the dataset '3' which will show the simulated image data as in the screenshot below.

\$ hdf5\_ui 20221222\_CSL1\_N-FEE\_SPW\_00433.hdf5

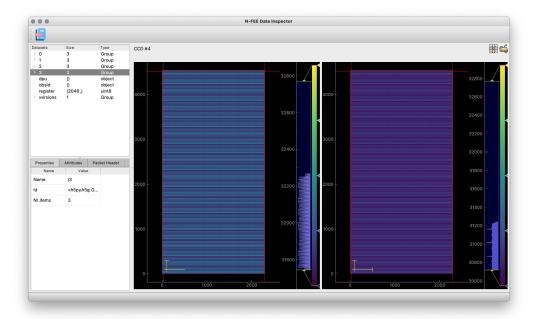

Now you can start navigating through the data by clicking and unfolding items in the upper-left panel. The screenshots below show typically some of the actions you can do and what type of data is presented.




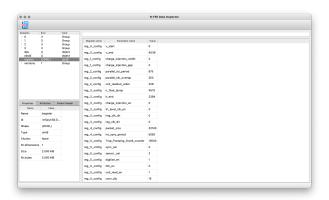




Screenshot 1 – Inspecting the Register Map

Screenshot 2 – The Housekeeping Packet

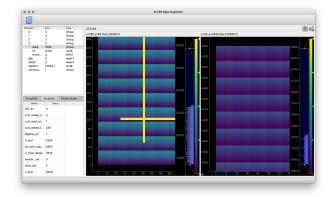

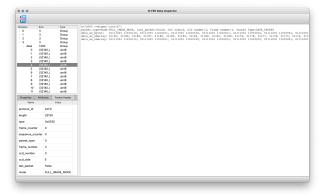

*Screenshot 3 – Image zoom and data attributes* 

Screenshot 4 – Inspection of individual data packets

**Screenshot 1** shows the Register Map for this cycle. There is only one Register Map per HDF5 file. The register map is the status at the time the timecode is sent for the first readout frame. Commanding is possible at the end of any readout, but the changes are only activated in the FPGA on a long pulse of 400ms. That is when also the register map is stored in the HDF5 file. There are two register parameters<sup>[1]</sup> that are updated on every pulse, long and short pulse. Those parameters are sensor\_sel and ccd\_readout\_order and because of this more regular update possibility these parameters are also available as attributes in each of the data groups. So, in principle, the CCD side can be changed at every readout, and this will be recorded in the sensor\_sel attribute to the data group. Above the register map table, you can see an empty text field. In this field you can type a string pattern to filter the parameters shown in the table. The string pattern shall be a simple string or a regular expression and it will match either the register name or the parameter name. For example, to list only parameters for register '3' enter 'reg\_3\_config' in this search field, to see all windowing size parameters you can enter something like win.\*size.

Screenshot 2 shows the view of the housekeeping packet for that readout frame. The housekeeping packet is sent for each sync pulse (long and short) right after the timecode. So, you will find a hk dataset for each of the readout frames. The housekeeping view currently only shows the data as raw values, no conversion to engineering values like voltages or temperatures is done at this stage.

**Screenshot 3** shows a combination of information. The images are zoomed in to show (1) that we have 25 serial prescan pixels, these are the pixels before the red line in the left part of the screenshot (F-side), and (2) we have 30 parallel overscan pixels, above the red horizontal line in the right part of the screenshot (E-side). We can now also clearly see that we have image pattern data (XXXX add reference here). The cross that is visible in the image data is put there by the N-FEE simulator to ease the validation of the image coordinates and pixel positions. Clicking the '3' group in the tree view will show the image data, if you expand the entry by clicking the small handle before the '3', you can then click the data group. This will not change the image display, but will update the details panel in the lower-left part of the screenshot. Select 'attributes' to see the specific parameters attached to this 'data' group.

In **Screenshot 4** I have further expanded the data group and the tree view now shows the individual SpaceWire data packets. If you click on one of them, the content of the packet is printed in different formats and also the header is printed in a human readable format. The parameter 'w' is the number of pixels in the data part of the SpW packet. As said above, we have 7 rows per packet  $\rightarrow$  16065 / 7 = 2295, which is the number op pixels per row. This view is mainly there for debugging and can change in the future.

#### **TBW**

- ☐ How can we inspect the content of the data packets → DataPackets class
- □ Explain when we have a commands group and what it contains
- □ What is the relation between the number of HDF5 files and the num\_cycles value?
- ☑ How to visualize the HDF5 files with the GUI hdf5 ui
- ☐ Which scripts do we have to inspect and check HDF5 files?

### 4.4. The Telemetry (TM) Dictionary

The tm-dicionary.csv file (further referred to as the "telemetry  $^{\text{TM}}$  dictionary") provides an overview of all housekeeping (HK) and metrics parameters in the EGSE system. It is used:

- By the get\_housekeeping function (in egse.hk) to know in which file the values of the requested
  HK parameter should be looked for;
- To create a translation table to convert in the get\_housekeeping function of the device protocols — the original names from the device itself to the EGSE-conform name (see further);
- For the HK that should be included in the synoptics: to create a translation table to convert the original device-specific (but EGSE-conform) names to the corresponding synoptical name in the Synoptics Manager (in egse.synoptics).

#### 4.4.1. The File's Content

For each device we need to add all HK parameters to the TM dictionary. For each of these parameters you need to add one line with the following information (in the designated columns):



Column name	Expected content
TM source	Arbitrary (but clear) name for the device. Ideally this name is short but clear enough for outsiders to understand what the device/process is for.
Storage mnemonic	Storage mnemonic of the device. This will show up in the filename of the device HK file and can be found in the settings file (settings.yaml) in the block for that specific device/process.
CAM EGSE mnemonic	EGSE-conform parameter name (see next Sect.) for the parameter. Note that the same name should be used for the HK parameter and the corresponding metrics.
Original name in EGSE	In the <code>get_housekeeping</code> method of the device protocols, it is - in some cases (e.g. for the N-FEE HK) - possible that you have a dictionary with all/most of the required HK parameters, but with a non-EGSE-conform name. The latter should go in this column.
Name of corresponding timestamp	In the device HK files, one of the columns holds the timestamp for the considered HK parameter. The name of that timestamp column should go in this column of the TM dictionary.
Origin of synoptics at CSL	Should only be filled for the entries in the TM dictionary for the Synoptics Manager. This is the original EGSE-conform name of the synoptical parameter in the CSL-specific HK file comprising this HK parameter. Leave empty for all other devices!
Origin of synoptics at SRON	Should only be filled for the entries in the TM dictionary for the Synoptics Manager. This is the original EGSE-conform name of the synoptical parameter in the SRON-specific HK file comprising this HK parameter. Leave empty for all other devices!
Origin of synoptics at IAS	Should only be filled for the entries in the TM dictionary for the Synoptics Manager. This is the original EGSE-conform name of the synoptical parameter in the IAS-specific HK file comprising this HK parameter. Leave empty for all other devices!
Origin of synoptics at INTA	Should only be filled for the entries in the TM dictionary for the Synoptics Manager. This is the original EGSE-conform name of the synoptical parameter in the INTA-specific HK file comprising this HK parameter. Leave empty for all other devices!
Description	Short description of what the parameter represents.
MON screen	Name of the Grafana dashboard in which the parameter can be inspected.
unit cal1	Unit in which the parameter is expressed. Try to be consistent in the use of the names (e.g. Volts, Ampère, Seconds, Degrees, DegCelsius, etc.).
offset b cal1	For raw parameters that can be calibrated with a linear relationship, this column holds the offset b in the relation calibrated = a * raw + b.

Column name	Expected content
slope a cal1	For raw parameters that can be calibrated with a linear relationship, this column holds the slope a in the relation calibrated = a * raw + b.
calibration function	Not used at the moment. Can be left emtpy.
MAX nonops	Maximum non-operational value. Should be expressed in the same unit as the parameter itself.
MIN nonops	Minimum non-operational value. Should be expressed in the same unit as the parameter itself.
MAX ops	Maximum operational value. Should be expressed in the same unit as the parameter itself.
MIN ops	Minimum operational value. Should be expressed in the same unit as the parameter itself.
Comment	Any additional comment about the parameter that is interesting enough to be mentioned but not interesting enough for it to be included in the description of the parameter.

Since the TM dictionary grows longer and longer, the included devices/processes are ordered as follows (so it is easier to find back the telemetry parameters that apply to your TH):

- Devices/processes that all test houses have in common: AEU, N-FEE, TCS, Synoptics Manager, etc.
- Devices that are CSL-specific;
- Devices that are SRON-specific;
- Devices that are IAS-specific;
- Devices that are INTA-specific.

#### 4.4.2. EGSE-Conform Parameter Names

The correct (i.e. EGSE-conform) naming of the telemetry should be taken care of in the get\_housekeeping method of the device protocols.

#### **Common Parameters**

A limited set of devices/processes is shared by (almost) all test houses. Their telemetry should have the following prefix:

Device/process	Prefix
Configuration Manager	CM_
AEU (Ancillary Electrical Unit)	GAEU_
N-FEE (Normal Front-End Electronics)	NFEE_

Device/process	Prefix
TCS (Thermal Control System)	GTCS_
FOV (source position)	FOV_
Synoptics Manager	GSYN_

#### **TH-Specific Parameters**

Some devices are used in only one or two test houses. Their telemetry should have TH-specific prefix:

тн	Prefix
CSL	GCSL_
CSL1	GCSL1_
CSL2	GCSL2_
SRON	GSRON_
IAS	GIAS_
INTA	GINTA_

#### 4.4.3. Synoptics

The Synoptics Manager groups a pre-defined set of HK values in a single file. It's not the original EGSE-conform names that are use in the synoptics, but names with the prefix GSYN\_. The following information is comprised in the synoptics:

- Acquired by common devices/processes:
- Calibrated temperatures from the N-FEE;
- Calibrated temperatures from the TCS;
- Source position (commanded + actual).
- Acquired by TH-specific devices:
- Calibrated temperatures from the TH DAQs;
- Information about the OGSE (intensity, lamp and laser status, shutter status, measured power).

For the first type of telemetry parameters, their original EGSE-conform name should be put into the column CAM EGSE mnemonic, as they are not TH-specific.

The second type of telemetry parameters is measured with TH-specific devices. The original TH-specific EGSE-conform name should go in the column Origin of synoptics at ....

PLATO-KUL-PL-ICD-0002 KU Leuven

#### 4.4.4. Translation Tables

The translation tables that were mentioned in the introduction, can be created by the read conversion dict function in egse.hk. It takes the following input parameters:

- storage\_mnemonic: Storage mnemonic of the device/process generating the HK;
- use\_site: Boolean indicating whether you want the translation table for the TH-specific telemetry rather than the common telemetry (False by default).

To apply the actual translation, you can use the convert\_hk\_names function from egse.hk, which takes the following input parameters:

- original\_hk: HK dictionary with the original names;
- conversion\_dict: Conversion table you got as output from the read\_conversion\_dict function.

#### 4.4.5. Sending HK to Synoptics

When you want to include HK of your devices, you need to take the following actions:

- Make sure that the TM dictionary is complete (as described above);
- In the device protocol:
  - At initialisation: establish a connection with the Synoptics Manager: self.synoptics = SynopticsManagerProxy()
  - In get housekeeping (both take the dictionary with HK as input):
    - For TH-specific HK: self.synoptics.store\_th\_synoptics(hk\_for\_synoptics);
    - For common HK: self.synoptics.store\_common\_synoptics(hk\_for\_synoptics).

Please, do not introduce new synoptics without further discussion!

<sup>[1]</sup> There are actually more register parameters that are updated on every sync pulse, but those are all windowing parameters that are not used in camera testing.