Round Spiral

Table of Contents

Parameters	1
Code	1
Geometry	2

 $X = round_spiral(N,r0,d,phi0,RES,x0,y0,z0,phix,phiy,phiz,view)$

This function generates a flat circular spiral - PCB Inductor geometry to be used as a coil. The coil will be generated with center in (0,0,0) in XY plane. It can be moved using the x0,..,phix... parameters

Parameters


- @param N Number of Turns
- @param r0 External radius of the coil
- @param d Distane bewtween turns
- @param **phi0** Angle at which the turns start
- @param **RES** Number of nodes of the Geometry (Discretization)
- @param x0 Center position X
- @param y0 Center position Y
- @param **z0** Center position Z
- @param phix Turn respect X axis
- @param phiy Turn respect Y axis
- @param phiz Turn respect Z axis
- @param view Optional parameter, if true generates figure with geometry
- @retval X Geometry nodes

Code

```
function X =
  round_spiral(N,r0,d,phi0,RES,x0,y0,z0,phix,phiy,phiz,view)
  Rx=[1,0,0;0,cos(phix),-sin(phix);0,sin(phix),cos(phix)];
  Ry=[cos(phiy),0,sin(phiy);0,1,0;-sin(phiy),0,cos(phiy)];
  Rz=[cos(phiz),-sin(phiz),0;sin(phiz),cos(phiz),0;0,0,1];
  omega =.010;
  u = d/(2*pi);
  t = linspace(0,2*pi*N/omega,RES);
  X=ones(3,size(t,2));
```

```
phi = omega*t+phi0;
r = r0 - u * phi ;
X(1,:) = r .* cos(phi);
X(2,:) = r .* sin(phi);
X(3,:) = zeros(1,size(t,2));
for i=1:size(t,2)
 X(:,i)=transpose(Rx*[X(1,i);X(2,i);X(3,i)]);
 X(:,i)=transpose(Ry*[X(1,i);X(2,i);X(3,i)]);
 X(:,i)=transpose(Rz*[X(1,i);X(2,i);X(3,i)]);
 X(:,i)=X(:,i)+[x0;y0;z0];
 end
if nargin>11
 if view
  plot3(X(1,:),X(2,:),X(3,:))
  grid on
  xlabel('X')
  ylabel('Y')
  zlabel('Z')
  title('Round Spiral');
 end
 end
end
```

Geometry

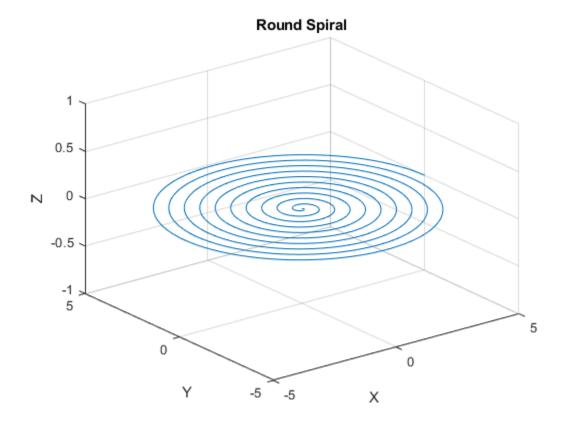

Round Spiral
Published with MATLAB® R2018b